

Safety and Maintenance

While using the phone, please observe the following points

- Before use please read the instruction manual carefully.
- Do not power on the phone when use of the phone is prohibited or it may cause interruption or danger.
- Please keep your phone off when you are on a plane. If functions that will automatically power on your phone, such as alarm clock or calendar, are setup, please check and cancel the configuration before boarding the plane.
- While using the phone, please keep away from heat sources and high voltage environments, such as electric appliances or electric cooking devices. Please use the phone under normal temperature. Using it in temperatures above 55°C or below -10°C may damage the phone.
- Pay attention to fire prevention. Make sure to power off the phone while you are near flammable materials, such as gas-filling stations and fuel storage.

- Do not hold the phone in your hand while driving. Do not put the phone above the air bag or within reach of the airbag so as to prevent damage when the airbag is inflated.
- Original battery, charger and accessories should be used.
- Phone may interfere with nearby electronic devices; therefore keep it away from electronic devices such as radio, PC, pacemaker and hearing aid, etc. Do not place the phone near credit cards or magnetic fields. Please power off your phone in hospital and other special places according to specific regulations there.
- Keep the phone away from mechanic vibration or shaking. Do not hit the screen of your phone with sharp tools.
- If plastic cover or case is used for the phone, surface coating may be damaged.
- Do not disassemble the phone without professional help.

- Do not use benzene, thinner or alcohol to clean the cover of your phone. Keep your phone away from corrosive chemicals such as detergent. Use a clean and soft cloth instead and wipe gently.
- Prevent your phone from insulation or places with excessive smoke or dust.
- Your phone is not water-proof, so please keep it dry. Do not use it in a damp environment, such as a bathroom. Keep it away from rain and moisture.
- When you are to pull the charger away from your phone or cut off the power supply of the charger, please hold the connector tightly and then pull out. Do not drag the power cable.
- Do not rely on your phone as the only communication device for emergency, such as medical rescue.
- Keep the phone out of reach of children so as to avoid danger.

While using battery, please observe following points

- Before use, please read instructions for use, as well as the label on the surface of battery.
- Please charge the battery in a cool and well-ventilated room. Otherwise, high environment temperature may lead to overheating, smoking, burning, distortion or even explosion of the battery.
- There are special protection circuits and devices inside the battery, so do not open the battery; otherwise it may lead to short circuit or electrolyte leak. If electrolytes enter the eyes, there is danger of blindness. In such case, immediately wash eyes with clean water (Do not to rub the eyes with hands) and then immediately go to hospital for treatment.
- Do not squeeze the battery. Keep it away from mechanical vibration and shaking. Do not short connect the battery, for this may damage the battery and components connected to it. A short circuit may be caused by coin or clip directly connecting the anode and

cathode of the battery, so do not put the battery together with metal objects.

- Please keep the metal contact points and battery clean.
- Do not use a damaged or depleted battery.
- The battery should be replaced when it cannot meet the requirements for performance. Battery can be charged hundreds of times before it should be replaced. Battery belongs to consumables. Though it can be charged hundreds of times, its quantity of electric charge may decrease gradually. When service time (talk time and standby time) is found to have decreased, the battery shall be replaced.
- Prevent battery's exposure to the sun or places with excessive smoke or dust. Do not use it in damp environments, such as a bathroom. The battery is not waterproof; so keep it away from rain and moisture.
- Do not put the battery in places that are too hot or too cold. Temperatures above 55°C or below -10°C may affect performance of the battery.

- Do not put the battery in fire so as to avoid explosion.
- Do not put the battery in water so as to avoid short circuit inside, resulting in battery overheat, smoking, distortion, damage or even explosion.
- Treat battery according to local regulations (for example, recycling). Do not treat battery as domestic garbage so as to avoid explosion and pollution.
- Special charger should be used to charge this battery, and charging time should not exceed 12 hours.
- Keep battery out of reach of children to avoid danger.
- Do not place the battery in fire; follow local laws and ordinances in disposing used battery.

Using other types of battery, charger and accessories may violate the certification or warranty terms of equipment and may result in danger.

While using battery charger, please following points:

- Before use, please read instructions first, as well as labels on the surface of the charger.


- Do not disassemble or modify the charger or use it when power cable is damaged; otherwise there will be electric shock or fire, or the charger may be damaged.
- Do not touch the charger with wet hands. If the charger contacts water or other liquids, immediately cut off the power supply.
- Do not short connect the charger and keep it away from mechanical vibration or shaking and direct sunshine. Do not use it in damp environments, such as a bathroom. The battery charger is not waterproof; so keep it away from rain and moisture.
- Do not use the charger near electric appliances such as a TV set or radio.
- When pulling out the plug, hold the charger instead of dragging the power cable so as to avoid damage to the power cable.
- Keep the charger out of reach from children so as to avoid danger.

1. Your Phone

1.1 Appearance



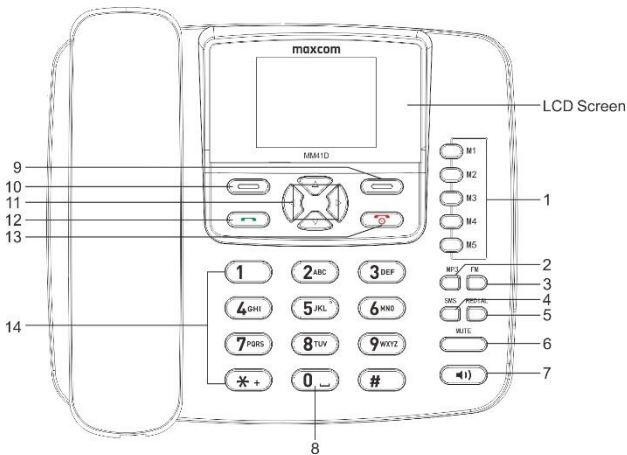

1.2 Key description



	LCD	
1	M1~M5	Press to dial the Preset number if set OK.Family number.
2	MP3	Shortcut to access the Music menu in idle screen.





3	FM	Shortcut to access the FM menu in idle screen.
4	SMS	Shortcut to access the sms menu in idle screen.
5	Redial	In standby mode, press to enter Call log menu. And can redial the last number.
6	MUTE	When the call is connected, select it to switch to MUTE mode.
7	Speaker Key	Activate hands-free operation(speaker icon).
8	0 key	Space key
9	DEL/BACK KEY	In any menu you can go back to the last menu. Press to delete the characters you've entered. In standby status, press to enter the Contacts menu.
10	MENU/OK KEY	Press to go into the main menu in idle screen Press it to access the submenu.








11	UP KEY	You can scroll the cursor with the UP key; Shortcut to calendar menu in idle screen.
	DOWN KEY	You can scroll the cursor with the DOWN key; Shortcut to access the settings menu in idle screen.
	LEFT KEY	Turn down the volume during conversation, Shortcut to access the FM menu in idle screen.
	RIGHT KEY	Turn up the volume during conversation or playing music and FM Shortcut to access the calculators menu in idle screen.
12	Dial key 	To make a phone call, input the phone number and press Dial key. Shortcut to access the outgoing menu in idle screen.

13	Power on or off/ END Key 	Press and hold about of 3 seconds to power the phone on/off; Press the end key to end the phone call or go back to the idle screen.
14	0~9 Numeric Keys	To input numbers and characters; In idle screen, press * to enter *; In editing screen, press * to enter the special symbol mode. In idle screen, press # to enter #; In editing screen, press # to switch the input method.

1.3 State icons

<Icons on the screen: >

	Network signal
	You can use the 4G network services.
	New SMS received.
	Missed call.

	Calling
	Activated silent mode.
	Hotspot signal
	Hotspot signal
	The signal of WLAN
E	Network Identification(registered)
	Bluetooth
	Battery life.

1.4 Screen background light

Background light can illuminate the screen. When you power on your phone, the background light will turn on for a certain period. If no key is pressed within the period, the background light will turn off automatically so as to save battery.

To setup background light brightness:

[Menu]→[Settings]→[Display]→[Brightness]

1.5 Adjust the volume

During a call

Press [Right Key] to increase the volume.

Press [Left Key] to decrease the volume.

During MP3 playing

Press [up Key] to increase the volume.

Press [down Key] to decrease the volume.


During FM playing

Press [Right Key] to increase the Increase frequency band.


Press [Left Key] to decrease the Increase frequency band.

2. Instructions before Use

2.1 Connectors on the Phone

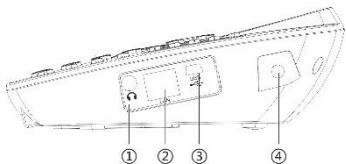

- 1.Headset
- 2.RJ45
- 3.USB mini head
4. Antenna Connector

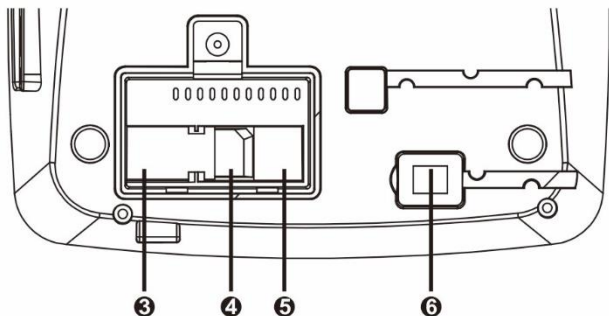

- 5.Battery Jack
- 6.SIM card Slot
- 7.SD card slot
- 8.RJ9 handset cord Jack

2.2 Assemble the antenna



2.3.Charging the battery by adapter

When the battery is fixed to the phone , put Mini USB cable to AC-Adapter Jack.

During charging, screen shows the battery charging icon, when the battery is full, the charging icon will stop rolling.

2.4.Install SIM card

Always switch the phone off before removing or inserting SIM card.

Open the bottom cover of the battery. Remove the battery; slide the SIM card into the SIM card slot. Make sure that the contact area of the card is facing down, and the beveled corner matches with the SIM card slot. Put in the battery and install the bottom cover.

3. Operation

3.1 Power on

The device can work on both single battery mode and single charger mode.

1. Press and hold [Power key] button until boot screen appears.
2. If there is a prompt for PIN code, please input your PIN code and then press [OK] key.

After power on, if SIM card inserted is valid, your phone will automatically search for an available network; if not, it will prompt: Insert SIM or Invalid SIM.

3.1.1 PIN code

PIN code is used to prevent illegal use of user's SIM card. If your phone has enabled PIN code protection, there will be prompt for entering the PIN code. If wrong the PIN code is entered for three times, the SIM card will be automatically locked. You have to enter PUK code in order to unlock it. PIN code is related to SIM card instead of the phone and is provided by your network service operator.

3.1.2 PUK code

PUK code, referring to personal unlock code, is used to unlock a SIM card that is locked because of the wrong input of PIN code. If the wrong input of PUK code exceeds ten attempts, the SIM card will lose efficacy. PUK code is provided by network service operator. Please contact with the operator for the default PIN and PUK.

3.2 Power off

To power off, please hold [Power key] until power off screen appears.

4. Basic Function

4.1 Dial Phone

4.1.1 In standby state, press the number keys to enter the phone number and then press [Send key] to call.

4.1.2 Press [DEL/BACK key] to clear the last digit or hold it to clear all.If the phone number being dialed can be recognized by the phone book, the name of the contact person will be displayed on the dialing screen.

4.1.3 Press [Power key] to end a call.

4.2 Quick dial from contacts list

4.2.1 In standby state, press [DEL/BACK key] to enter the phonebook.

4.2.2 Slide the scroll bar to choose a contact you want to dial .

4.2.3 Press [Send key] to dial out.

4.3 Quick dial from Outcall number list

4.3.1 In standby state, press [Send key] to enter [Outcall number] list.

4.3.2 Slide the scroll bar to select the person you want to call or the number you want to dial.

4.3.3 Press [Send key] to dial out the number.

4.4 Answer incoming call

When there is an incoming call, incoming call interface will be displayed together with a special ringtone.

4.4.1 Press [Send key] to answer calls.

4.4.2 Press [Power key] directly to reject the incoming call.

If the phone number of a caller can be recognized, the number will be displayed on the incoming call screen.

If information about the number is stored in contacts, the caller's name will also be displayed.

If a caller hides his/her number or the network bans call indication, the incoming call is displayed as *****.

4.5 Terminate call

When there is an incoming call, press [Power key] to reject the call.

During the call, press [Power key] to terminate current call.

4.6 Making emergency calls

As long as you are within coverage of network, you can make emergency calls even you have not registered to the local network or do not have SIM/UIM card. Enter local emergency number and then press [Send key] to make an emergency call.

4.6.1 Make international long-distance call

Before an international phone number can be dialed, press [*] key until “+” sign appears. “+” sign tells the network you are making an international call.

Input country code, area code and phone number. Press [Send key] to call.

Note:Some networks do not allow “+” for dialing international numbers, you can use 00 instead of “+”

4.7 Talk options

Key operations as below in the process of call:

The phone provides some talk control functions in the process of call.

During the call, press [DEL/BACK key] to back to Home status.

During the call, press [Left soft key] to enter [Options] menu to access the talk control functions.

Hold/Resume talk state

If network supports, you can hold current call.

During the call, press [Left soft key] and select [Hold] in the [Options] menu.

To activate held talk, Press [Left soft key] and select [Unhold] in the [Options] menu.

Dial second number

During a call you can dial another number.

Press [Left soft key] and select [Add call] to dial second call,

When the second number is put through, the first call will be held automatically.

Answering a second incoming call

Please make sure the network supports the call waiting function and the status has been set to Enabled.

If there is a second incoming call in the process of the first call, you'll hear the "Beep" tone and the screen will prompt.

Press [Left soft key] to answer the second incoming call. When the second call is put through, the first call will be switched to held state.

Press [Power key] to terminate the second call.

Select current phone number

When the second call is answered, press [Send key] to swap between the current call and the held call, and press [Left soft key] to [Options] menu:

Swap: to hold current call and activate the held call

Merge: Add held call to conference call.

End call: Terminate current call.

End Merge: Terminate conference call.

Note: Not all networks provide the multi-party service.

Menu Functions

You can press [Left soft key] in standby state to enter the main menu. Press [DEL/BACK key] or [Power key] to return to standby mode.

5.Messaging

In standby state, enter [Menu]→[Messaging] menu.

Write Message

In the edit mode, you can edit SMS content and add recipient.

When editing SMS, press the [Left soft key] to enter [options] menu, as listed below:

Select: choose and view message.

New message: edit new message and Send the message to people.

Settings: in this mode ,you can general settings and SIM Card Settings

Delete thread:Delete information

Cell broadcasts: Receiving Broadcast Information from Cells

Messages in SIM: Insert template message.

Message Setting

You can set the function for Text message, for example: Delivery report, SMS Validity, Manage SIM card messages, Save SMS On SIM, SMS Service Center, Delivery report, Multimedia Message Validity and so on.

Delivery report: Request a delivery report for each message you send

Manage SIM card messages: Manage messages stored on your SIM card.

Auto-retrieve: Automatically retrieve messages.

Roaming auto-retrieve: Automatically retrieve messages while roaming

Remark: This machine can send / receive MMS.

6. Contacts

In standby state, enter [Menu]→[Contacts] menu.

Move the cursor to input box for search the contact record quickly, you can input the character or number to search from the records list, and the matched records will list on the LCD。

Press [Left soft key] to enter [Options] menu, with the following options: Add contact, contacts to display, Import/Export, Batch delete, SIM capacity, Phone Capacity

Add contact : Create a new contact record. Store the contact to phone or SIM card.

Contacts to display: you can choose display ALL contacts, phone or SIM card.

Import/Export: import/Export contacts form internal/external storage.

Batch delete: Delete all contacts.

7. History

In standby state, enter [Menu]→[History] menu.

7.1 All

In standby state, enter [Menu]→[History]→ [All] menu. All call log will be list. And select one record, you can do some operations as below:

Select: make a call to the current number.

Add to blacklist: Add the current number to blacklist.

Clear call log: Clear all records.

7.2 Missed Call:

Press [right key] to view missed calls list.

7.3 Outgoing:

Press [right key] to view dialed calls list.

7.4 Incoming Calls:

Press [right key] to view received calls list.

8.Extra

In standby state, enter [Menu]→[Extra] menu. You have a choice here for Calendar, Calculator, Call fire wall ,Clock, SIM Toolkit, Sound Recorder

8.1 Calendar

In standby state, enter [Menu]→[Extra] menu. The following are the functions.

Today: Move the cursor to the current data in the calendar interface.

Select Date: Move the cursor to the special data in the calendar interface.

8.2 Calculator

In standby state, enter [Menu]→ [Extra]→[Calculator] menu.

Key operations:

[UP key]: Press for Addition;

[Down key]: Press for Subtraction;

[Left key]: Press for Division;

[Right key]: Press for Multiplication;

[Menu/ok key]: Equal to "=", press to display the calculation result.

[DEL/BACK key]: Press to clear contents that have been entered.

[*]: press to enter “-”.

9.Music

In standby state, enter [Menu]→[Music] menu, and also you can press [MP3] key to enter the music menu directly. All media files will be list on the LCD when the phone enter music menu, and you can select one to play. Some operations as below will be done in the music player interface:

Pause: Pause the player.

Set as ringtone: Use the current music as ringtone.

Shuffle: Set it as on or off.

Repeat Songs: Set it as off, repeat all, or repeat current song.

Delete: Delete the current song from music library.

Quit: Exit from Music library.

10.FM Radio

In standby state, enter [Menu]→FM Radio and also you can press [FM] key to enter the FM menu directly..The following are the options:

Radio List: Channel the new FM from the list.

Turn Off: Exit the FM player.

11.Settings

In standby state, enter [Menu]→[Settings] menu. The following are the settings:

11.1 Sound

In the state,you can setting Volume,Call ringtone,Default notification ,Tap sounds,Screen lock sound

Sound Volumes: You can adjust Ringtone、 Notifications、 Media volume、 and Alarm volumes.

Call Ringtone: Customize the ringtone.

Screen lock sound:you can choose open or close.

11.2 Display You can set below items.

Brightness: Adjust the LCD display brightness

Sleep : we can set the time of screen timeout ,as 15 seconds,30 seconds and so on.

11.3 Call settings

In the state ,you can enter check your SIM card function,you can setting voice mail , Fixed dialing numbers,Call forwarding ,Call barring settings, Additional settings.

Voice call: You can set voice mail, call forwarding, call barring and so on.

Voice mail: Select the voice mail service operator and the voice number.

Call forwarding: Divert the incoming calls to other phone number. This function requests network's support. Please contact your operator for details.

Call barring settings: Use the menu to set the call barring. It contains All outgoing calls, Cancel all, Change

barring password. This function requests network's support. Please contact your operator for details.

Additional settings: You can set Caller ID and call waiting function.

Also you can choose [General Settings], Setting ID dial list, Call recording, Fade-in ringer and SpeedDial.

IP dial list: Add IP Phone number, Then select the IP dialing from the left-click menu of the dialing interface.

Call recording : Turn on /Off automatic recording .

Fade-in ringer: When enabled, incoming call ringer volume will be turned up.

Speed dial: We can set nine groups speed dial number, When we press 2 number key, after 3 seconds, the second group's number will be automatically allocated.

Family : Set the number for [M1~M5] key

11.4 VOLTE

VOLTE is based on IMS's voice business, it is active.

11.5 Wi-fi

In standby state, enter [Menu]→[Setting] →[Wi-Fi]menu, you can do some operations as follow:

Off: close the Wifi function.

Connect to network: Connect to the select network.

Scan: Scan the available WLAN network, and update the network list.

11.6 Bluetooth

In standby state, enter [Menu]→[Setting] →[Bluetooth] menu, you can turn on bluetooth device, and also you turn off bluetooth and search for new device to connect.

11.7 Data usage

You can check data usage of SIM card and Wi-Fi.

11.8 Security

Set up SIM card lock: You can set PIN lock to On or Off and change PIN. The default PIN code is provided by your SIM operator.

Screen lock: Set the screen lock and password.

11.9 Date and Time

Set time zone, time/date, date format and time format

11.10 Language:

Set the phone language.

11.11 Schedule on/off

Set schedule power on or power off.

11.12 Storage

device storage in internal storage or in SD card.

11.13 Memory Cleanup

Cleaning up system garbage, Release memory space.

11.14 Reset

Restore the phone setting to factory data status.

11.15 About phone

Display some phone information, such as Model number, Android version, Baseband version and so on.

More

Tethering&Portable hotspot

1)**USB Tethering:** USB network sharing technology, when the phone connects to the computer via the USB

cable, the computer can be connected to the Internet via the mobile network of the mobile phone. We can select Internet protocol version IPV4 or IPV6.

2)Portable Wi-Fi hotspot: Set the phone as Hotspot.

[Menu]→[Settings] -[More]→portable Wi-fi

Hotspot→Select→Set up wifi hotspot→option

→NetworkSSID& Password.

PS:in the set up interface,you also can check the number of Connected Users.

12.2 Mobile networks

You can set Data roaming,Preferred Network type ,Enhanced 4G LTE mode, VOLTE ,Access point names and Network operators.

13. Headset

You can use the headset to answer the phone or listen to MP3 / FM.

14 . RJ45 port

You can use the RJ45 port connect the computer to the Internet

FAQ

If any problems are encountered while using the phone, please refer to the FAQ's below. If the problems still exists, please contact the manufacturer or service provider.

"Enter PIN code" appears on the screen

Enter valid PIN code of your SIM card. Please contact your operator immediately if you do not know the code.

"Enter PUK code" appears on the screen

Your SIM card will be locked if you enter wrong PIN code for three times. To unlock your SIM card, you have to enter PUK code. Please contact your operator for details.

"Insert SIM card" appears on the screen

Make sure SIM card is correctly installed. Check if SIM card works properly. It may have defects or faults. If so, please contact your operator for details.

“Not in service area. Network failure.” is displayed

Check signal intensity indicator. If there is no signal, you may be in the basement or network blind area in a building. Please move to another location to receive signal. If in your situation you are not covered by a network, please contact your operator for details.

Poor sound quality, echo or noise makes communication difficult.

Hang-up your phone and dial again. Your network may connect the phone to a line with better communication quality.

Standby time declines

Signal at your location is weak, making the phone search for signal for a long time. When you don't want to answer any calls, please turn off your phone's power for a time being to help preserve battery life. It is also possible that the battery has been used for a long time and is approaching its life-span. In this case, please replace the battery.

Phone fails to boot

Check battery volume or charge the battery. The battery is probably uncharged. Please charge your phone until the battery is restored, then try to power it on again.

Cannot send short message

Please check the SMSC address if the correct number has been set. Perhaps you have not opened the SMS service; Recipient of short message is invalid.

Can't charge

There are three possibilities:

Charger of your phone does not work properly. You can contact the nearest service provider or dealer;

Ambient temperature is not appropriate. Please change charging environment;

Poor contact. Please check the plug of your charger.

Cannot add entries into phonebook

Phonebook is full. You will have to delete other entries to free up space.

Cannot select some functions

The service is not available or the location network does not support this service. Please contact your operator for details.

maxcom

Producer and Distributor

MAXCOM S.A.

ul. Towarowa 23a

43-100 Tychy, POLAND

tel. +48 32 327 70 89

www.maxcom.pl

office@maxcom.pl

