Warning Signs **About This Guide Unboxing Check Before Installation** What's in the Anker SOLIX Solarbank 2 E1600 Pro Box **Optional Accessories Overview Product Overview Button Controls** LED Guide **Installing Your Solarbank** Select an Installation Site What You Need Installation **Electrical Connections Connecting Cables** Turn On the Solarbank **Using the App** Download the App Account Registration **Initialization Setting Network Configuration** Add Home Devices (Optional) **Firmware Update Power Mode Setting Initialization Energy Plan Setting** FAQ

Specifications

Warning Signs

A	This sign signifies the presence of high voltage danger and risk of electric shock.
	To prevent electric shock or personal injury, refrain from touching or using the inverter until 3 minutes have lapsed since its shutdown or disconnection.
ĺĺÌ	Refer to the operation instructions.

About This Guide

This guide shows the primary system for the whole-home photovoltaic energy cycle, with Anker SOLIX Solarbank 2 E1600 Pro installed as the main service equipment. This guide describes Anker SOLIX Solarbank 2 E1600 Pro in terms of unboxing, product overview, installation, electrical connections, button and light explanation, customer service, and safety guidelines.

One Anker SOLIX Solarbank 2 E1600 Pro can support up to five Anker SOLIX BP1600 Expansion Battery modules.

· Anker SOLIX Solarbank 2 E1600 Pro can be used with Anker SOLIX Smart Meter.

Unboxing

Check Before Installation

Check the Outer Packaging


Before unpacking the equipment, check the outer packaging for damage, such as holes and cracks, and review the equipment model number. If any damage is found or the model is not what you requested, do not unpack the equipment and contact Anker customer service as soon as possible.

Check Deliverables

After unpacking the equipment, check that the deliverables are intact and complete, and free from any obvious damage. If any item is missing or damaged, contact Anker customer service.

What's in the Anker SOLIX Solarbank 2 E1600 Pro Box

Model: A17C1

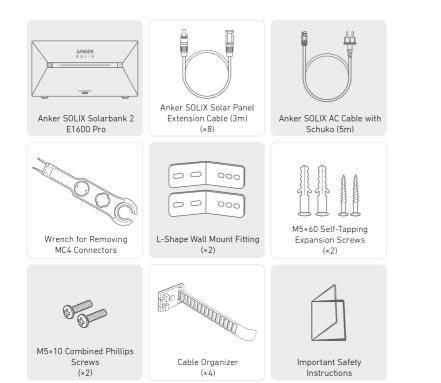

Optional Accessories

 $\dot{\heartsuit}$ The following accessories must be ordered separately.


Anker SOLIX BP1600 Expansion Battery (Optional)

Model: A17C13Z1-85




Anker SOLIX Smart Meter (Optional)

Model: A17X7

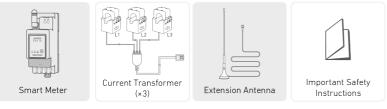

Overview

Product Overview

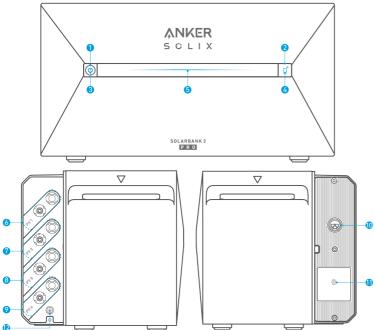

Power Button
 IoT Button

- ③ Power Status LED
- ④ IoT Status LED
- ⑤ Working Status LED
- 6 MC4 Ports for PV Input 1
- O MC4 Ports for PV Input 2
- 8 MC4 Ports for PV Input 3
- Input 4
 Input 4
- 10 Grid-Tied Terminal
- 1) Backup Terminal

0 Ground Screw Hole (Protective earthing conductor wire should be at least 26.6mm²)

Button Controls

Button	Action	Function
	Press for 4 seconds	Turn on Solarbank
S O L I X	Press for 2 seconds	Turn off Solarbank
	Press once when powered on	Check current battery level
	Press once	Enable Internet connection
	Press for 2 seconds	Disable Internet connection
	Press for 7 seconds	Reset Bluetooth and Wi–Fi
	Simultaneously press for 9 seconds	Reset Solarbank

LED Guide

Light Bar	Description	Status
	The center LED lights up toward both sides.	Powered on
	The lights on both sides fade toward the center.	Powered off
	The LED lights up toward both sides, and then cycle again.	Recharging
100% © C C C C C C C C C C C C C C C C C C	The light bar changes according to battery level.	Battery level
	The light runs from right to left.	Upgrading OTA
	The power button light flashes red.	Malfunction / Warning

Installing Your Solarbank

Select an Installation Site

- **Environment Requirements**
- \cdot Do not place the modules near an area exposed to direct sunlight, fire, or explosive materials.
- \cdot Ensure the site is protected from potential hazards such as floods.
- \cdot The maximum operating altitude is 4,000 m (13,123 ft).

Measure the Distance

- Reserve sufficient space for heat dissipation and safety isolation.
- 1. Select the appropriate installation space according to the equipment configuration to be installed.

Anker SOLIX Solarbank 2 E1600 Pro		Andre Transition of the second				
Expansion Battery Module	0	×1	×2	×З	×4	×5
Energy	1600Wh	3200Wh	4800Wh	6400Wh	8000Wh	9600Wh

2. Equipment Dimensions Figure:

Figure: Anker SOLIX Solarbank 2 E1600 Pro



Figure: Anker SOLIX BP1600 Expansion Battery



What You Need




V Note: The following components are not included in this package. Please make sure they are ready before installation and electrical connection.




Installation

The steps below describe the installation of one Solarbank 2 E1600 Pro and two Expansion Batteries as an example. 1. Place one expansion battery on the floor 30mm from the wall.

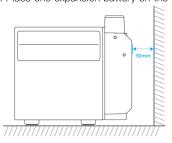


2. Use a Phillips screwdriver to pry open the rubber plug at the bottom of Solarbank and expansion batteries.

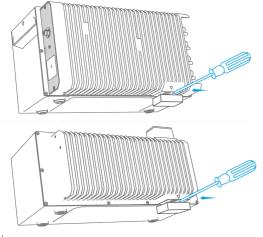


V Note: When installing the bottom battery pack or only one Solarbank, please do not remove the bottom rubber plug to avoid water damage to the equipment.


3. Stack expansion batteries in sequence with Solarbank at the top by inserting the two corresponding ports into each other.

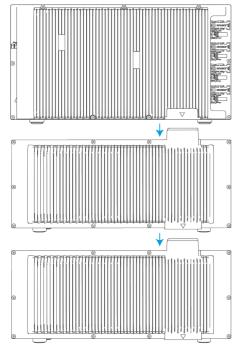


4. Pre-fasten the L-Shape Wall Mount Fitting to both sides of the first expanion battery under Solarbank using M5×10 combined Phillips screws.

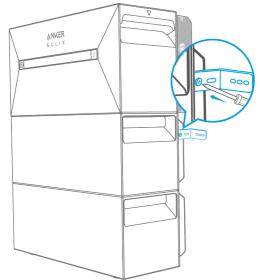


5. Mark the position of drilling holes on both sides and use a drill with a φ 8 drill bit and a depth of 60mm.

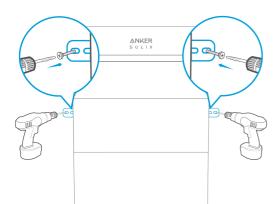

6. Use a hammer to tap the plastic sleeve of the $M5 \times 60$ self-tapping expansion screw into the hole, and then use a Phillips screwdriver to fasten the $M5 \times 60$ self-tapping screw against the L-Shape Wall Mount Fitting.

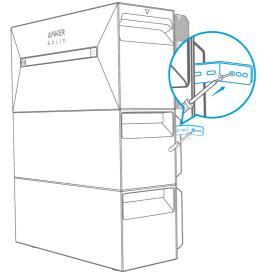


7. Use a Phillips screwdriver to fasten the M5×10 combination Phillips screws against the L–Shape Wall Mount Fitting; then secure the interlocking bracket to the expansion battery using the M5×10 combined Phillips screws to complete the installation.

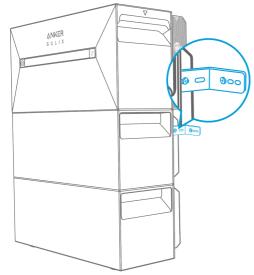

∛ Note:

• The grid connection must be connected to a socket with grounding, otherwise there is a risk of electric shock. Alternatively, the casing should be grounded. The grounding point is shown below.

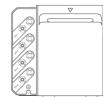


• This product includes a double isolation transformer, which meets safety requirements without array ground insulation resistance measurement and array residual current detection.


Electrical Connections

Connecting Cables


The steps below describe the installation of one Solarbank 2 E1600 Pro with four solar panels as an example.

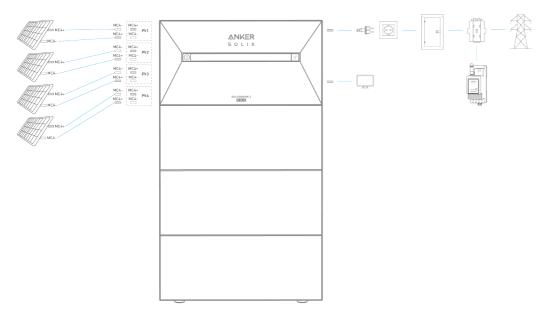


1. Connect Solarbank to a home outlet using the included AC Cable with Schuko plug (5m).

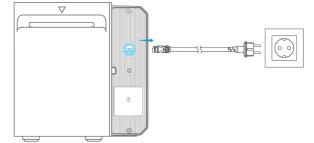

2. Find the MC4 ports of your solar panels.

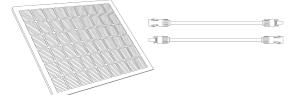


3. Connect each set of PV modules to each set of PV input ports in Solarbank using the included Anker SOLIX Solar Panel Extension Cable (3m).

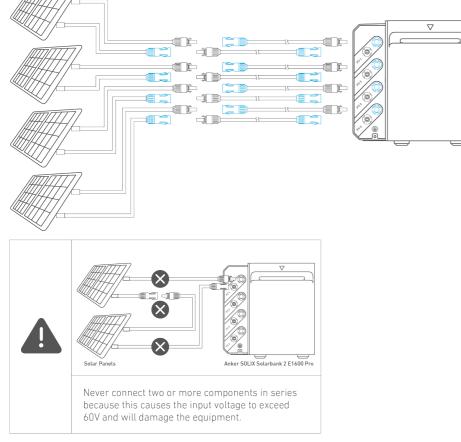


Turn On the Solarbank


1. The first use requires the connection of a solar panel and a home outlet.

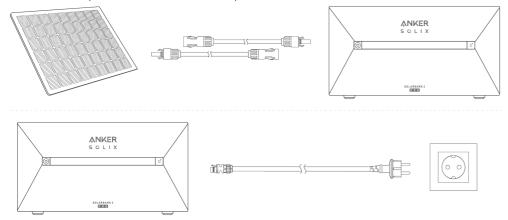

2. When you use it at night, you can press and hold the power button on the solarbank for 4 seconds to turn it on, which will enable network pairing. Please complete the network paring with the app within 30 minutes. If the network paring is not completed within 30 minutes, the Solarbank will automatically turn off.

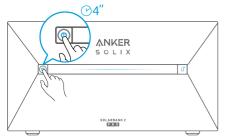

3. If you want to turn it off, please use the wrench to remove the solar panel extension cables on the device side and press the power button for 2 seconds.

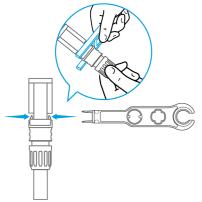

Using the App

Download the App

Search "Anker" and download the App via App Store or Google Play. Or scan QR code below to go to the corresponding application store.



Account Registration Region Selection When the app is launched, you will head to the login page.

Please be reminded that the country region MUST match where you live. An incorrect country region may cause the device connection to fail.

Country Selection

9:41	ul 🗢 🔳	9:41	all
	USA 📎	<	Choose Region
Welcome to Anker			our data privacy and security, your rmation will only be stored on a serv
		the devices i	t your actual region. You cannot acce f you choose a new region which is m the previous one.
		Q Ger	many
		USA (Curre	ent)
		Germany	
Log In			
Forget Password ?	Sign Up		

Sign Up / Sign In

You can login via Anker account, Amazon, or Apple ID.

If you do not have an Anker account, you can tap [Sign Up] to register an account:


Please prepare an email for the registration process. Passwords must contain 8–20 characters using uppercase and lowercase letters, numbers, and symbols.

Initialization Setting

Network Configuration

Before configuring, please ensure the network connection is working well with a strong Wi–Fi signal. Do not place the device far away from the router.

Step 1	CAT	If Solarbank is powered off, press the left button on the device for 4 seconds to turn it on.
Step 2	ANKER 5 0 L I X	 Press the right button on the device, enable Wi–Fi mode. When the IoT light flashes, the device is in Configuration mode. If the device has configured Wi–Fi and you wish to reset it, you may hold the IoT button for 7 seconds.
Step 3	941 Image: Control of the state of the state and devices Add Device Add Device Image: Control of the state of the sta	1. Keep the devices on. 2. Tap [+] or [Add Device] at the top right corner of Devices page.
Step 4	9:41	The Anker app will automatically search for your Solarbank. Once the device is found, it will appear on the list. • Please make sure your phone's Bluetooth is on, and the Anker app is authorized to access Bluetooth and Wi–Fi. • If you wish to manually search for the device, you can tap [Balcony Solar System] in the "Add devices manually" row.

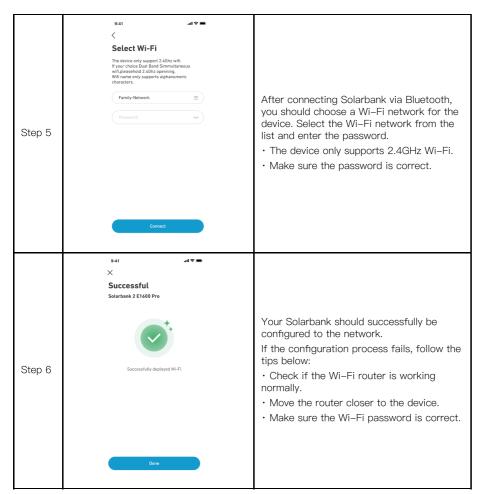


Add Home Devices (Optional)

If you have purchased Anker SOLIX Smart Meter, please scan the QR code below for more details.




Anker SOLIX Smart Meter can be added to the home system by following the process below. If you do not need to add any devices, you can skip the process by clicking [Skip].

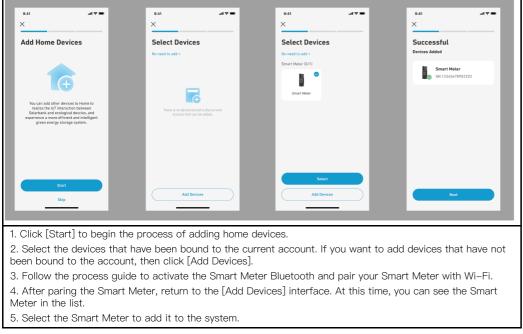

Firmware Update

Make sure all your devices have configured Wi-Fi and have a stable network connection.

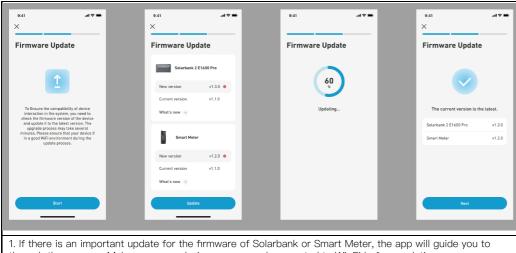

through the process. Make sure your devices are on and connected to Wi-Fi before updating.

2. If no update is required, you can skip this step.

* Note: Updates can take a few minutes. Please be patient. If the update fails, check if your devices are activated and connected to Wi-Fi.

Power Mode Setting Initialization

9:41	9:41	9:41	9:41
Power mode setting initialization	Create System	Electricity Scene Select Scene Mode	Home System Initialization Configuration Complete
Control of the second s	My Solarbank Home	 All-Caraumpting Anamous these and photosolitatic energy Contractive goover and photosolitatic	Souther the second seco
•	a system for the previously a the system's energy plan wit		Bent


Custom Mode: You can set up a schedule for Solarbank to discharge a fixed amount of power into your
home load at different time periods, and the extra energy will be stored in Solarbank.


*Note: Self-Consumption mode is only available when the Smart Meter is added to the system.

Energy Plan Setting About Energy Plan

In the Solarbank 2 E1600 Pro system, you can set up a charging and discharging plan. Solarbank will output the necessary amount of power to household loads at different time periods through the preset plan, and extra energy can be stored in Solarbank for reuse during the peak period of electricity consumption. This helps maximize use of solar energy.

Once you have configured the Smart Meter, you can also select Self-Consumption mode. The meter will intelligently manage Solarbank's discharging and energy storage in real time by obtaining only the amount of electricity required by household loads, not wasting solar energy.

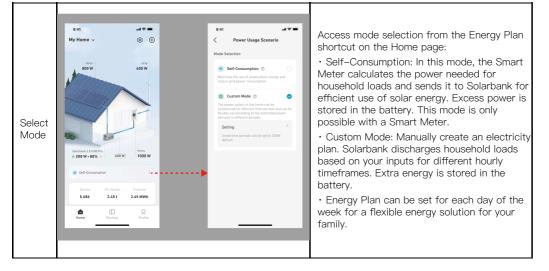

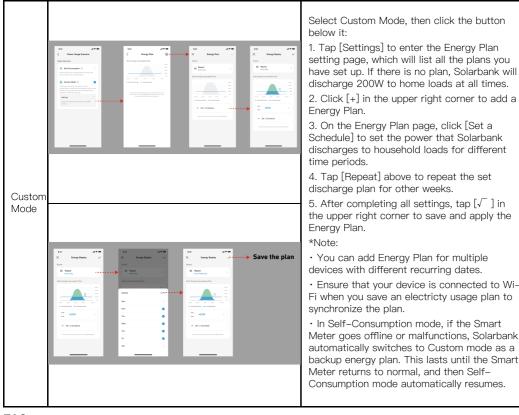


FAQ

1. Q: What precautions should I take before installing/adding expansion batteries?

A: When installing/adding expansion batteries, it is necessary to power off and shut down the system to protect yourself and the machine. Performing this operation while powered on is not covered under warranty. Please follow the steps below for proper installation:

- a. Disconnect Solarbank and the solar panels.
- b. Press the on/off button for 2 seconds to turn off the power.
- c. After turning off Solarbank, install the expansion batteries to Solarbank.
- d. Connect solar panels for normal use.
- 2. Q: Are there any other precautions that need to be taken when installing and using the product?
- A: Ensure that the AC outlet is properly grounded.
- 3. Q: Can the photovoltaic panels be connected in series?

A: No. Never connect two or more components in series because this causes the input voltage to exceed 60V and will damage the equipment.

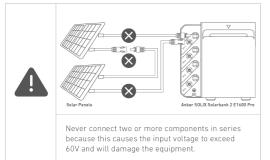

Specifications

Specifications are subject to change without notice.

Model		A17C1	
Rated Capacity		100Ah/1600Wh	
Rechargeable Li-Ion Battery		LifePO4	
Wireless Connection		Bluetooth, 2.4G Hz Wi–Fi	
	Max PV Input Voltage	60VDC	
	Max PV Input Current	16ADC (per channel)	
	Max Isc PV	20ADC	
PV Terminal	Max MPPT input power	2400W	
	Operation Voltage Range	16-60VDC	
	Number of MPPT	4	
	Max Inverter Backfeed Current	0	
On–Grid Terminal	AC Output Output	800W	
	AC Rated Power	220/230/240VAC, 50/60Hz	
Max AC Output Current		3.5AAC, 230VAC	
	Power Factor	1 (-0.8~+0.8)	
	Max Output Fault Current	11A	

	Max Output Overcurrent Protection	11A
	Inrush Current	23.6A
	Battery Rated Voltage	16VDC
	Max Charge Current	75ADC
	Max Discharge Current	75ADC
Battery Terminal	Rated Power	800W
	Max Charging Power	2000W(Add–On Battery)
	Max Discharging Power	1000W
	Expandable Battery Quantity	5
	Max Expandable Capacity	9600Wh
	Max AC Output Power	1000W
	Max AC Apparent Power	1000VA
Backup Terminal	AC Output	4.4AAC(max), 230VAC, 50/60Hz
	Max Output Fault Current	11A
	Max Output Overcurrent Protection	11A
	Power Factor	1 (-0.8~+0.8)
	Charging Temperature Range	–20°C~55°C
	Discharging Temperature Range	–20°C~55°C
	Self-Heating	Yes, activated below 0°C
	Relative Humidity	5%–95%
	Maximum Altitude Rating	Below 4000m
	Ingress Protection	IP65
General Parameters	Environmental Category	Outdoor Use
	Wet Location Classification	Wet Location
	Pollution Degree	PD3 (External)
		PD2 (Internal)
	Overvoltage Category	OVCII (DC), OVCIII (AC)
	Protective Class	Class I
	Warranty	10 Years
	Overvoltage Protection	Yes
	Overcurrent Protection	Yes
Protection	Short Circuit Protection	Yes
Trotootion	Temperature Protection	Yes
	Overcharging Protection	Yes
	Over-Discharge Protection	Yes
Dimensions and	Dimensions	460 × 249 × 254mm
Weight	Net Weight	21.8kg