



- 1- Webcam Status LED
- 2- Webcam with Windows Hello facial recognition
- 3- Microphone
- 4- LCD Screen
- 5- Balanced / Enthusiast / Overboost Switch
- 6- Power Button
- 7- Power/Battery/Caps Lock Status LED
- 8- Keyboard
- 9- Touchpad / Click pad
- 10- Touchpad Status LED / Touchpad Toggle*


* Tapping twice on top-left corner enables or disables the touchpad. Tapping twice on the top-right corner disables the right half of the touchpad. Each corner's LED shines white if the respective part is disabled.

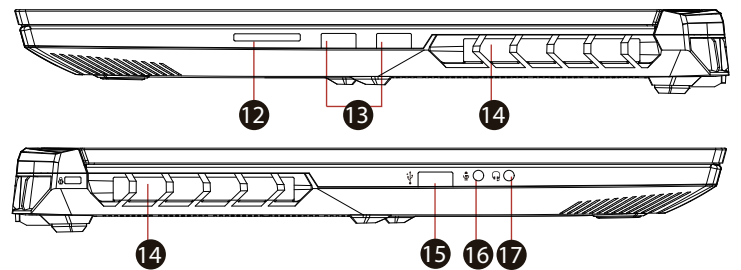

- 12- Card Reader
- 13- USB-A Ports
- 14- Ventilation
- 15- USB-A Port
- 16- Microphone Jack
- 17- Headset Jack

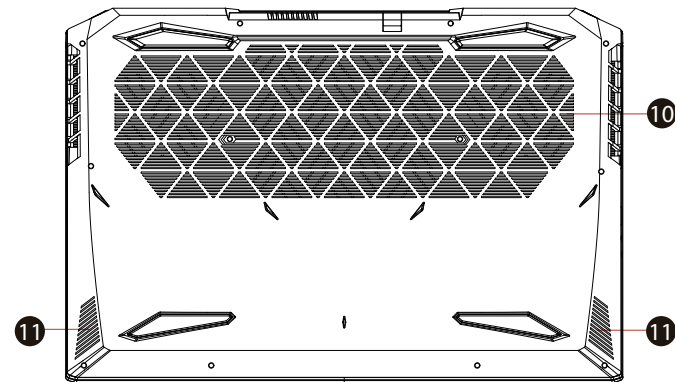

- 10- Ventilation
- 11- Speakers

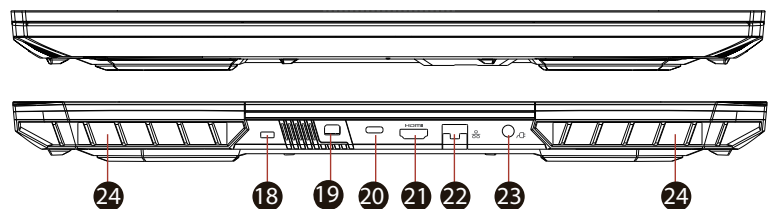

- 18- Kensington® Lock Port
- 19- Mini-DisplayPort
- 20- USB-C Port
- 21- HDMI Port
- 22- Network/LAN Port
- 23- Power Input
- 24- Ventilation

Starting

* Please note: The AC adapter included with your PC was specifically designed and approved for your model. Utilization of an after-market may damage either the notebook or other devices connected to it. If damage is determined to have been caused by utilization of an unauthorized power supply, it will not be protected under warranty.

