


MENSA MAINS 3WAY ROLLER KIT UK



MCB RCD

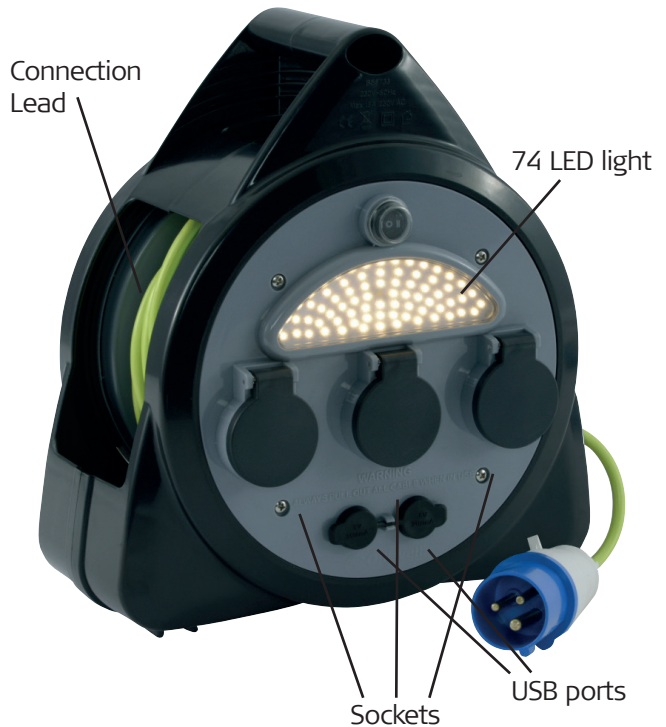

Connection Lead

74 LED light

Sockets

USB ports

Instructions – Please retain for future use

Place the unit in a safe and dry position and fully unwind the cable.

DO NOT USE THE UNIT UNDER ANY CIRCUMSTANCES WITHOUT FULLY UNWINDING THE CABLE.

Plug the unit into a mains supply (if necessary use UK or Continental Conversion leads available from your dealer).

Open the transparent window on the unit and move all the switches (MCB & RCD) to the "I" position (on position). The four 13A sockets should now be live. As a safety check, press the button marked "TEST". The RCD should trip out (from "I" to "0"). If this does not occur disconnect the unit and consult your dealer or a qualified electrician. If the red warning light illuminates, upon connection, this indicates that the polarity is incorrect (the live and neutral of the supply is reversed). Disconnect the unit and correct the polarity before reconnecting. Your unit is not faulty.

Please note that a campsite may demand different specifications on electrical products


WARNING

- Do not connect or disconnect the unit with wet hands and do not disconnect by pulling on the connection cable, always pull on the plug.
- Use the appliance only in the described manner.
- Do not use or discontinue use if the appliance is damaged, especially the lead and enclosure.
Do not immerse the appliance in any liquids.
Do not leave or use the appliance near sources of heat or in direct sunlight.
- Do not use the unit under any circumstances without the cable being fully unwound.
- Do not use the connection lead as a handle to carry the unit.

MENSA MAINS 3WAY ROLLER KIT



MCB RCD

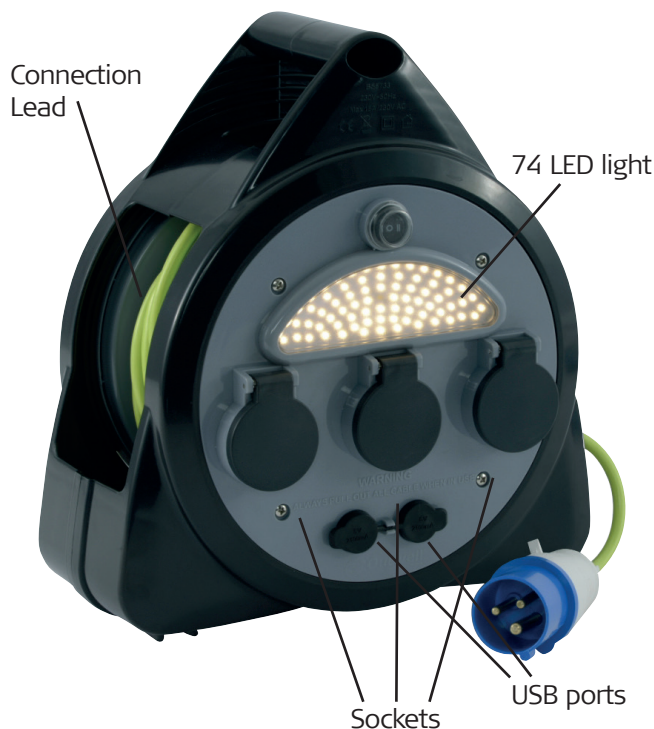

Connection Lead

74 LED light

Sockets

USB ports

Instructions – Please retain for future use

Place the unit in a safe and dry position and fully unwind the cable.

DO NOT USE THE UNIT UNDER ANY CIRCUMSTANCES WITHOUT FULLY UNWINDING THE CABLE.

Plug the unit into a mains supply (if necessary use UK or Continental Conversion leads available from your dealer).

Please note that a campsite may demand different specifications on electrical products

WARNING

- Do not connect or disconnect the unit with wet hands and do not disconnect by pulling on the connection cable, always pull on the plug.
- Use the appliance only in the described manner.
- Do not use or discontinue use if the appliance is damaged, especially the lead and enclosure.
- Do not immerse the appliance in any liquids.
- Do not leave or use the appliance near sources of heat or in direct sunlight.
- Do not use the unit under any circumstances without the cable being fully unwound.
- Do not use the connection lead as a handle to carry the unit.

