 


# YASHICA

## Mini Digital Camera

### User Manual

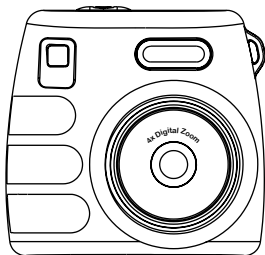

## Contents

|                          |       |            |
|--------------------------|-------|------------|
| Getting Started          | ————— | P. 4       |
| Product Overview         | ————— | P. 5 - 7   |
| Operational Instructions | ————— | P. 9       |
| Display Preview          | ————— | P. 10 - 12 |
| Menu Settings            | ————— | P. 13 - 15 |
| Troubleshooting          | ————— | P. 16      |
| Specifications           | ————— | P. 17      |
| Warranty Policy          | ————— | P. 18 - 19 |

## Getting Started

Please read the manual carefully before use to ensure appropriate use of product functions.

 
Please keep this manual for future inquiries.



What is in the YASHICA Mini Digital Camera?

1. YASHICA Mini Digital Camera
2. User Manual
3. Type-C Charging Cable
4. Lens Cover
5. Hand Strap
6. Keychain
7. Stickers

## Product Overview

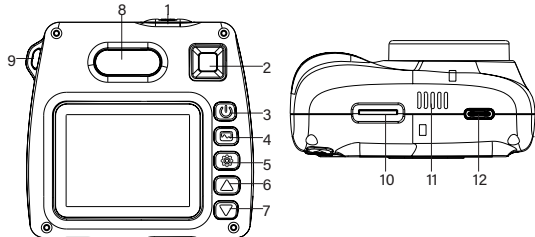

1. Taking photo/OK confirmation button
2. Viewfinder
3. Power button/Return button
4. Switching between primary and selfie lens/Right button
5. Photo and Video mode button/Left button

6. Up button
7. Down button
8. Selfie lens
9. Handstrap Hook
10. TF/MicroSD Card Slot
11. Speaker
12. Type-C USB Port

## Quick Start Guide

| Buttons                                                                                                                                             | Function                                                                                                                                                           |
|-----------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Taking photo/<br>OK confirmation<br>button<br>                     | Photo Mode: Take a photo<br>Video Mode: Start and end a video<br>OK confirmation: In setting/confirming a function                                                 |
| Power button/<br>Return button<br>                                 | Long Press (About 2 seconds): Turning on and off the camera<br>Short Press: Return to the homepage setting                                                         |
| Right button/<br>Switching<br>between front<br>and selfie lens<br> | Right button: In homepage setting<br>Switching between front and selfie lens<br>Remarks: You cannot switch between front and selfie lens once you start recording. |

| Buttons                                                                                            | Function                                                                                                                                                                                                                                                                                                                                         |
|----------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Left button<br> | Left button: In homepage setting<br><b>Photo Mode:</b><br>One Press: 5-second timer setting<br>Two Presses: Cancel the 5-second timer setting<br><b>Video Mode:</b><br>One Press: Slow motion<br>Two Presses: Time-lapse<br>Three Presses: No setting (Normal)<br>Remarks: You cannot switch to slow-motion/time-lapse once you start recording. |
| Up button<br>   | Photo and Video mode: Going to the next filter<br>Long Press: Zooming in (Only in photo mode)                                                                                                                                                                                                                                                    |
| Down button<br> | Photo and Video mode: Going back to the previous filter<br>Long Press: Zooming out (Only in photo mode)                                                                                                                                                                                                                                          |

# Operational Instructions

## First time using YASHICA Mini Digital Camera

### 1. Inserting the TF/MicroSD Card

- Insert the TF/MicroSD Card into the TF/MicroSDCard Slot. When the card is locked, you will hear a "click" sound.

Remarks: Make sure the device is turned off.

Important: Format the TF/MicroSD Card for use

- Format the TF/MicroSD Card in the camera. Select Setting on the homepage and go to the Format function, select OK to confirm.
- If there is any existing data in the TF/MicroSD card, please back up the data before formatting.

### 2. Charging YASHICA Mini Digital Camera

- Connect the Charging Cable to the USB Type-C Port.
- The screen will show the battery being charged. Make sure the camera is charged with the provided Type-C USB charging cable.
- You can also charge the camera with a portable charger with the provided cable, and use the camera when being charged.

### 3. Attaching the hand strap

 
- You can attach the provided hand strap to the hook.

### 4. Lens cover

- You can remove the lens cover to capture every moment. When you remove the cover, make sure you put it in a safe place
- Remarks: Take off the lens cover to take photos.


# Display Preview

## Homepage Setting

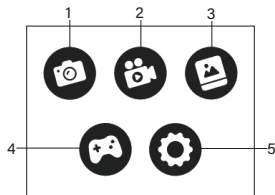

- 1. Photo Mode
- 2. Video Mode
- 3. Gallery/Playback
- 4. Games
- 5. Setting


## Photo Mode

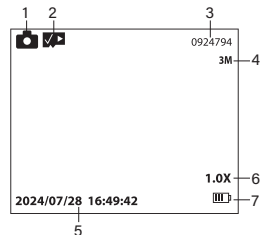 

- 1. Photo Mode
- 2. TF/MicroSD Card Inserted
- 3. Available Photos
- 4. Photo Resolution
- 5. Date and Time
- 6. Digital Zoom
- 7. Battery level

Remarks: If there is no TF/MicroSD card inserted, the internal storage can hold up to 20 photos

## Video Mode

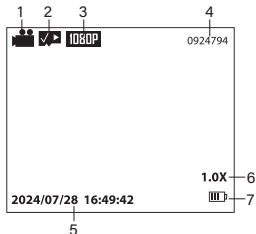 

- 1. Video Mode
- 2. TF/MicroSD Card Inserted
- 3. Video Resolution
- 4. Available video recording time
- 5. Date and Time
- 6. Digital Zoom
- 7. Battery level

## Menu Setting

| Function            | Introduction                                                                                                                                                                                                                                                          |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Image Quality       | You can set photo resolution to:<br>8MP/5MP/3MP/2MP/1MP.<br>The default setting is 3MP.                                                                                                                                                                               |
| Timer               | You can set a timer to:<br>3 seconds/ 5 seconds/ 10 seconds/ OFF.<br>The default setting is OFF.                                                                                                                                                                      |
| Video Quality       | You can set video resolution to:<br>VGA/720P/1080P.<br>The default setting is 1080P.                                                                                                                                                                                  |
| Continuous Shooting | Continuous shooting refers to the maximum duration for which the camera can continuously take photos in burst mode before needing to pause or save the videos. You can set the duration to:<br>3 minutes/ 5 minutes/ 10 minutes.<br>The default setting is 3 minutes. |
| LED Light           | The LED light assists as additional illumination. The default setting is ON. This means the LED light will be on for every photo.                                                                                                                                     |

| Function          | Introduction                                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Date Stamp        | You can set the date stamp to be on or off.<br>The default setting is ON.                                                                                                                                                                                                                                                                                                                                                 |
| Language          | The camera supports up to 14 languages including:<br>- English                      - Arabic                      - Dutch<br>- Simplified Chinese   - Turkish                      - Thai<br>- Traditional Chinese   - French                      - Italian<br>- Japanese                      - German                      - Spanish<br>- Korean                      - Portuguese<br>The default language is English. |
| Screen Brightness | There are 8 levels of brightness.<br>The default setting is in Level 8.<br>Level 0 is the darkest, while level 8 is the brightest.                                                                                                                                                                                                                                                                                        |
| Auto Power Off    | There are 3 options: OFF/ 1 minute / 3 minutes.<br>The default setting is in 3 minutes.                                                                                                                                                                                                                                                                                                                                   |
| Screen Protection | The automatic screen protection time can be set to OFF/ 1 minute/3 minutes.<br>The default setting is 3 minutes.                                                                                                                                                                                                                                                                                                          |
| Button sound      | The button sound level is from level 0 to 8, Level 0 being silent and Level 8 being the loudest.<br>The default setting is at Level 8.                                                                                                                                                                                                                                                                                    |

| Function          | Introduction                                                                                                                                      |
|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| Format            | Format all photos and videos, recordings and other documents in the TF/MicroSD card. Press OK to confirm formatting.                              |
| Date/Time Setting | Press the OK button to move to the next setting, from year to month, and so on, and return to the Menu Setting.<br>Format: YYYY/MM/DD<br>HH:MM:SS |
| Reset System      | Reset system to Original Factory Setting by selecting OK.                                                                                         |
| Version           | This is a system message to indicate the current version of the product.                                                                          |

## Troubleshooting

| Error/Issue                  | Solution                                                                                                                                                                                                                                                                                                                                                   |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Low Battery                  | Charge the camera with the provided Type-C charging cable.                                                                                                                                                                                                                                                                                                 |
| No TF/MicroSD Card Inserted  | There is no TF/MicroSD included in the packaging. Please insert a TF/MicroSD card.                                                                                                                                                                                                                                                                         |
| Unformatted TF/ MicroSD Card | Back up the photos and videos from the TF/MicroSD Card to your computer or other storage medium. Format the TF/MicroSD Card from the Format function or from your computer.                                                                                                                                                                                |
| Unrecognised TF/MicroSD Card | Reinsert the TF/MicroSD Card                                                                                                                                                                                                                                                                                                                               |
| Micro SD Card is full.       | Check the Micro SD card, safely eject the memory card from the camera. Please ensure the camera is turned off before removal to avoid damage.<br><b>Transfer Files:</b> Connect the memory card to a computer or compatible device using a card reader. Alternatively, you can use a USB cable to transfer files directly from the camera to the computer. |

## Specifications

|                               |                                                       |
|-------------------------------|-------------------------------------------------------|
| Product name:                 | YASHICA Mini Digital Camera                           |
| Video Resolution:             | 1080P /720P / VGA                                     |
| Image Resolution:             | 3MP up to 8MP                                         |
| Shooting Distance:            | 10cm to ∞                                             |
| External Memory Card:         | Support TF/MicroSD card up to 32GB                    |
| Photo Format:                 | JPG                                                   |
| Video Format:                 | AVI                                                   |
| Digital Zoom:                 | 4X                                                    |
| USB Port:                     | Type-C USB                                            |
| Display:                      | 2" Screen                                             |
| Battery:                      | Built-in Rechargeable Li-Ion Battery                  |
| Battery Capacity:             | 400mAh                                                |
| Language Support:             | 14 languages                                          |
| Focal Length:                 | f=7.36mm                                              |
| Aperture:                     | F/3.2                                                 |
| Operating System Requirements | Windows 7, Windows 8, Windows 10, Windows 11, Mac10.2 |
| Net weight                    | 113g (With battery)                                   |
| Net weight                    | 96g (No battery)                                      |
| Packaging size                | 113*90*80mm                                           |

## Warranty Policy

If you are experiencing a problem with a YASHICA purchase, please kindly read the information below to understand and determine if the issue is covered under YASHICA warranty.

1. YASHICA products are guaranteed against manufacturing defects one (1) year from the original date of purchase. YASHICA's sole obligation in the event of defects during the said period is to repair or replace the defective part or product with a comparable part at YASHICA's discretion. Please keep the receipt or invoice of your purchase.
2. The warranty card and original purchase receipt must be emailed to YASHICA at [cs@yashica.com](mailto:cs@yashica.com) and/or present to the YASHICA authorized service facility before any repairs can be made under warranty.
3. All costs, including but not limited to transportation, mail and incidental charges, in relation to repair work are at user's expenses.
4. Warranty does not apply to any of the followings:
  - 4.1 Damages arising from normal wear and tear; cosmetic damages including scratches or dents;
  - 4.2 Damages caused by misuse, abuse, mishandling, misplacement, or alteration of the product or any usages that contradict with the instructions stated in the User Manual;
  - 4.3 Products that have been disassembled, repaired or modified by person(s) other than YASHICA authorized service facility;
  - 4.4 Losses and damages arising from accidents or natural calamities;
  - 4.5 Damage caused as a result of improper transportation or packing/packaging when returning the product
5. If it is determined that the product is not covered under warranty, you will be required to confirm the quotation provided and pay for the repair. Once the payment is made, YASHICA will arrange for relevant repair/replacement.

6. If it is determined that the warranty covers the product's fault, such as manufacturing defect covered by the warranty, YASHICA will repair/replace your unit at no charge/free of charge. At YASHICA's discretion, YASHICA will cover shipping costs. Communication will be carried out via email at [cs@yashica.com](mailto:cs@yashica.com)

7. We reserve the right to modify these terms without prior notice.

For any enquiries, please feel free to email to [cs@yashica.com](mailto:cs@yashica.com)

Address: Room 403, Floor 4, Shiu Fat Industrial Building, 139-141 Wai Yip Street, Kwun Tong, Kowloon, Hong Kong

YASHICA products are guaranteed against manufacturing defects one (1) year from the original date of purchase. YASHICA's sole obligation in the event of defects during the said period is to repair or replace the defective part or product with a comparable part at YASHICA's discretion. Damage resulting from use, accident, or normal wear and tear is not covered by this or any warranty. YASHICA assumes no liability for any accident, injury, death, loss, or other claim related to or resulting from using this product. In no event YASHICA is liable for incidental or consequential damages relating to or resulting from using YASHICA products or any of their parts. Returns or replacement of parts and products may be subjected to shipping, handling, replacement and restocking fees.

If you have further questions or comments, please contact our customer support team - at [cs@yashica.com](mailto:cs@yashica.com).

**YASHICA**.com