 
 
DCSS 🛛 🛞 Bluetooth Wireless Portable Bluetooth Speaker



Thanks for your purchase of DOSS product! 🙂 Like it?







Introduction

reject a call.

3.Volume/Track controls:

+: Long press: Next track

Package content

Portable Bluetooth speaker

fullest.

🕓 1-833-275-3677 Mon-Fri 9AM-5PM PDT (USA only)

For updates, promotions, and exprience sharing join our customer community.

```
f @dossav
  @dossfans
@dossdirect
```

www.dossaudio.com

Micro USB charging cable 4. Line in port 5. Charging indicator 6. Charging port 7. TF card port Φ3.5mm auxiliary cable User manual Product overview Status indicator Rapidly flashing blue Paring mode Steady blue Paired Steady green Micro SD card mode Steady red Line in mode Mode indicator 2 Charging indicator Steady green Fully charged 1.Power button: Long press " () "to turn the speaker on and off. 2.Mode indicator & Play/Pause & hand set. • In Bluetooth mode, press " DGss " to Play/Pause your tune. Long press to disconnect from your device. Having problem of connection? \bullet In Bluetooth mode, press " $|_{\mbox{DGSS}}$ " to answer or end a call. Long press to

Short press: Volume up

Thanks for purchasing DOSS E-go $~\mathbb{I}~$ IPX6 waterproof portable Bluetooth


speaker. We advise you to read and follow the instructions in order to be

able to correctly set up the DOSS E-go $\, \mathbb{I} \,$ and enjoy all of its features to the




• Forget the speaker on your device's Bluetooth list. • Make sure that your device is within 1 meter from the speaker. Repeat the paring steps. • Still has a problem? Please contact DOSS customer service -: Long press: Previous track Short press: Volume down our customer support for assistance.




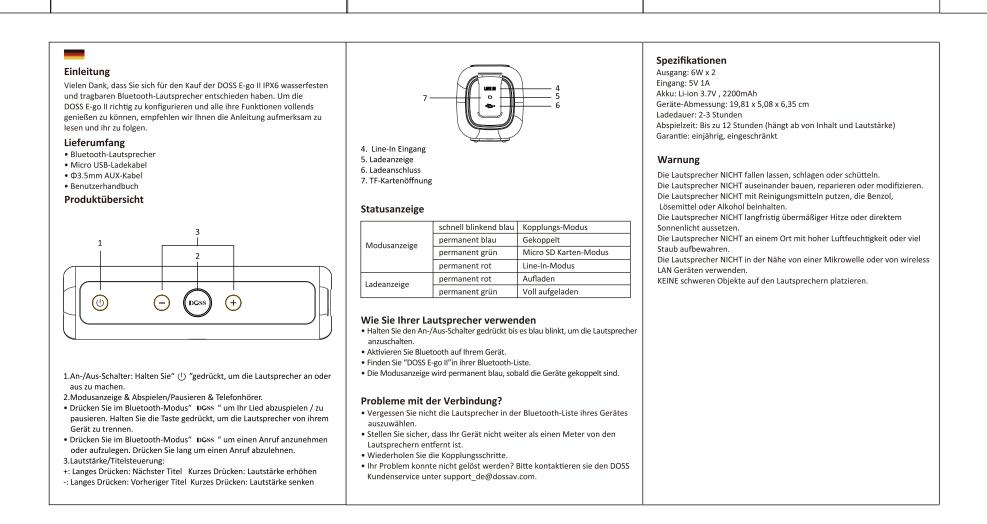

Specifications Output: 6W x 2 Input: 5V 1A Battery: Li-ion 3.7V , 2200mAh Unit dimension: 7.8 x 2 x 2.5 inch Charging time: 2-3 hours Play time: Up to 12 hours (varies by volume level and content) Warranty: One-year limited

Warning Do NOT drop, hit or shake the device. Do NOT disassemble, repair or modify the speake.r Do NOT use cleaning products that contain benzene, solvents or alcohol. Do NOT expose the speaker to excessive heat or direct sunlight for prolonged periods of time. Do NOT store the device in a place with high humidity or dust. Do NOT place heavy objects on top of the speaker. Do NOT use the speaker near a microwave oven or wireless LAN products.

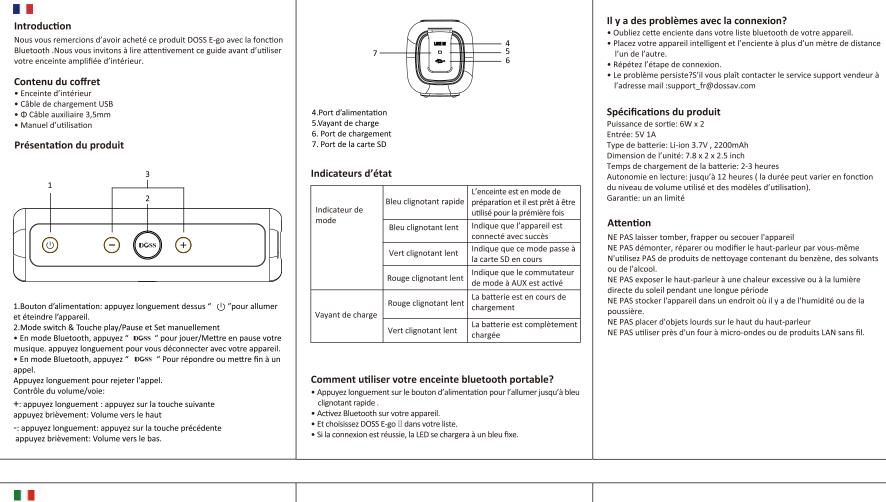

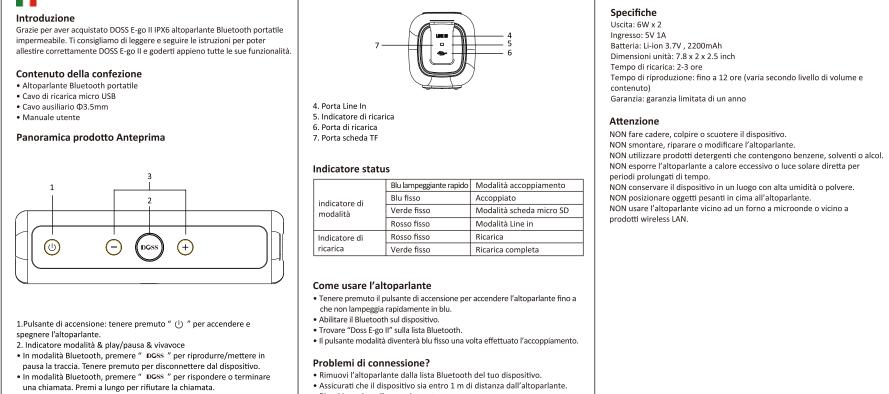

• Hai ancora un problema? Per favore contatta il servizio clienti DOSS all'

Ripeti i passi per l'accoppiamento.



3. Controlli volume/traccia:

