

材质：105g铜版纸+正反单色印刷+风琴折

JOYROOM Product introduction The portable power bank is equipped with two input ports and three output ports. It provides fast charging for phones, tablets, e-readers, watches, game consoles, and more. It features a large digital display, the PD3.0, QC3.0, Samsung AFC, and Huawei SCP, FCP PE fast-charging protocols for the supported. The built-in smart chip provides multiple protection for the product and your device, including over-charge protection, over-discharge protection, over-voltage protection and over-temperature protection etc. LED digital display Type-C input/output USB-A2 output Micro input Power button USB-A1 output User Manual EN PL CN	Packing List Power Bank Charging cable User Manual/ Warranty Card Operation instructions 1. Turn on: Press the power button once to turn on the power bank. 2. Sleep mode: In turned on status, if no device is connected to the power bank, it will enter sleep mode automatically in 30s or you can press the power button twice to have it enter sleep mode. 3. Recharge the power bank Use the USB/ Type-C/Micro charging cable to connect the Type-C/ Micro input of the power bank with the charger. The digital display starts to show current power when the Type-C/ Micro input of the power bank with the charger. If the LED display does not light up, it means the recharging failed, please check the connection of charging cable. 4. Discharge the power bank ① Charging mobile phones or other digital devices Use the original charging cable of your digital device to connect it to the Type-C or USB/2 port of the power bank, after connecting successfully, the power bank will be activated to charge your device and the power capacity of power bank will be displayed. ② Fast charging supported devices When using this product to fast charge a digital device that	meets the fast charging protocols for the first time, the power bank will be activated with the connecting of device in 1-2 seconds. Notes: When using the power bank to charge a digital device, a lightning symbol will be displayed in 1-2s, which means it enters fast charging mode. When using the power bank to charge two devices simultaneously, its fast charging function will be turned off automatically to protect your devices, and it only supports normal 5V = 3A charging. Fast charging will be activated only when the fast charging protocol of the device is compatible with that of the power bank. Otherwise, normal 5V = 3A charging will be provided. ③ Discharge display The displayed digits will decrease with the discharging process. Please recharge the product in time when the power is less than 10%. Recharging the power bank: When the power bank is connected to a compatible charging cable, its LED display will light up and show the current power percentage, which means recharging started. If the LED display does not light up, it means the recharging failed, please check the connection of charging cable. Using environment Using ambient temperature: 0°C to 25°C, non-tropical area Storage ambient temperature: 0°C to 40°C	Warm reminders 1. Please fully charge the power bank when using it for the first time. 2. Please pull out the charging cable in time after fully charged to protect your energy loss. 3. Please use suitable cables and accessories to make the power bank product normally. 4. Do not drop, impact, disassemble the product or try to repair it by yourself. 5. Do not store the product in a wet place or immerse it in water. 6. Do not expose or store the product near a heat source or flammable materials. 7. Do not leave this product in the car. The high temperature of sunlight will damage the product. 8. Please keep it out of the reach of children to avoid improper use. 9. Do not put any foreign object into the USB/Type-C input/output/ports of the product to avoid short circuit or damage. 10. Please charge the power bank fully at least once every four months to prolong its service life. 11. Please stop using the product in case of swelling, leakage, deformation of battery and other abnormalities. 12. Do not disassemble the product by yourself. Any shortened service life or damage caused by improper use or storage of the product by customers will not be borne by our company. 13. Avoid using chargers with excessive output current or load. This device is marked in accordance with the WEEE directive and with the electronic symbol of a crossed-out waste container. Such marking informs that this equipment, after its period of use, cannot be placed together with other waste from the household. The user is obliged to hand it over to waste electrical and electronic equipment collectors. Collection leaders, including local collection points, shops and municipal units create an appropriate system for returning this equipment.	Proper handling of waste electrical and electronic equipment helps to avoid hazards to human health, natural environmental consequences resulting from the presence of hazardous ingredients, i.e. substances, mixtures and components, as well as improper storage and processing of such equipment. After-sale service regulations: 1. Consulting service: Please read the User Manual carefully before using the product and keep it for future use. 2. Replacement service: The company undertakes that if there is product failure within 7 days from the date of purchase that is not caused by human error, the customer can choose between replacement and repair freely if the appearance is in good condition, it will be repaired and the product, its accessories and packaging are complete and in good condition. The customer can ask the local authorized dealer to deal with it. 3. Warranty service: In case of product failure within the warranty period that is not caused by human error, free warranty service will be provided within one year. In case of product failure caused by human error, we will charge for relevant repairing. 4. Charged repairing service: In case of product failure within one to three years from the date of purchase, charged repairing service will be provided. Users need to pay for the components, transportation and labor costs. 5. Warranty exceptions (you need to pay for relevant service): ① Expired the warranty period. ② There's alteration on the Warranty Card, or the serial number is inconsistent with the product itself. ③ Product damage caused by accidents or human error (e.g.: customer falls to use, maintain and store the product according to the User Manual, incorrect installation, improper power supply, water intrusion, etc.) ④ Failure to provide Warranty Card and valid invoice (except that you can prove that the product is within the warranty period). ⑤ Product damage caused by force majeure, such as earthquake, fire disaster, flood, thunderstrike, etc. ⑥ Product damage caused by disassembling, repairing or refitting the product without authorization.	Informacje o produkcie Ten przenośny powerbank jest wyposażony w dwa złącza wejściowe i trzy złącza wyjściowe. Umożliwia szybkie ładowanie telefonów, tabletów, czytników e-booków, zegarków, konsoli do gier i innych urządzeń. Jest wyposażony w duży wyświetlacz cyfrowy. Urządzenie obsługuje protokoły szybkiego ładowania PD3.0, QC3.0, Samsung AFC, Huawei SCP, FCP PE. Wyposażony jest w inteligentny chroni produkt! Twoje urządzenia między innymi przed nadmierным nadładowaniem, nadmiernym rozładowaniem, przepięciem i przegrzaniem. Wyświetlacz cyfrowy LED Wejście/ Wyjście typu C Wyjście USB-A2 Micro Wejście Lista zawartości opakowania Power Bank Kabel do ładowania User Manual/ Warranty Card Instrukcja obsługi 1. Włączanie: Naciśnij przycisk zasilania raz, aby włączyć powerbank. 2. Tryb uśpienia: Jeśli po włączeniu do powerbanku nie zostanie podłączone żadne urządzenie, automatycznie przejdzie ono do trybu uśpienia w ciągu 30 sek. Eventualnie możesz dwukrotnie naciśnąć przycisk zasilania, aby włączyć tryb uśpienia. 3. Ładowanie powerbanku: Kablem do ładowania z USB na typ C / Micro połącz wejście typu C / Micro powerbank z ładowarką. Na wyświetlaczu cyfrowym zobaczysz obecny zapas mocy, który będzie zwiększał się podczas ładowania. Po pełnym naładowaniu na wyświetlaczu wyświetlona zostanie wartość „100”. 4. Rozładunek powerbank ① Ładowanie telefonów komórkowych lub innych urządzeń cyfrowych Po podłączeniu powerbanku do zgodnego kabla do ładowania podświetlony zostanie wyświetlacz LED i wyświetlona zostanie bieżąca moc wyrażona w procentach. Świadczy to o rozpoczęciu ładowania. Jeśli wyświetlacz LED nie zostanie podświetlony, ładowanie nie zostanie rozpoczęte. Upewnij się, że kabel do ładowania został prawidłowo podłączony. ② Podłącz oryginalny kabel do ładowania urządzenia cyfrowego do złącza typu C lub USB 12 powerbanku. Po połączeniu powerbank zostanie aktywowany i zacznie ładować urządzenie, a na ekranie wyświetlona zostanie pojemność powerbanku. ③ Urządzenia z obsługą szybkiego ładowania Gdy po raz pierwszy wykorzystasz ten produkt do szybkiego ładowania urządzenia cyfrowego zgodnego z protokołami	szybkiego ładowania, powerbank zostanie aktywowany w 1-2 sek od podłączenia urządzenia. Uwagi: Gdy przy użyciu powerbanku ładujesz urządzenie cyfrowe, po 1-2 sek. zostanie wyświetlony symbol ładowania świadczący o przejściu do trybu szybkiego ładowania. Gdy przy użyciu powerbanku ładujesz dwa urządzenia jednocześnie, funkcja szybkiego ładowania zostanie automatycznie wyłączona, aby chronić urządzenia, a aktywowanie zostanie standardowe ładowanie 5 V 3 A. Szybkie ładowanie zostanie aktywowane, o ile protokoły szybkiego ładowania urządzenia jest zgodny z protokołem power banku. W przeciwnym wypadku rozpocznie się standardowe ładowanie 5 V 3 A. ③ Wyświetlacz wyładowywania Im bardziej rozładowane urządzenie, tym mniejsza wyświetlana wartość. Należadł produktu, gdy poziom naładowania baterii spadnie poniżej 10%. Ładowanie powerbanku: Po podłączeniu powerbanku do zgodnego kabla do ładowania podświetlony zostanie wyświetlacz LED i wyświetlona zostanie bieżąca moc wyrażona w procentach. Świadczy to o rozpoczęciu ładowania. Jeśli wyświetlacz LED nie zostanie podświetlony, ładowanie nie zostanie rozpoczęte. Upewnij się, że kabel do ładowania został prawidłowo podłączony. Środowisko użytkowania Temperatura pracy 0°C do 25°C, obszar nietropikalny Temperatura przechowywania 0°C do 40°C
---	--	--	--	---	---	---

[illegible]