



CONGRATULATIONS, WARRIOR!

You're now the proud owner of the ROCCAT™ KONE PURE CAMO CHARGE – Core Performance Gaming Mouse. With legendary Kone blood pumping through its veins, the Kone Pure Camo Charge delivers a powerful Next Gen combo of core essentials every skirmisher needs to rack up victory after victory. It's powered by a killer performance package loaded with the latest Pro-Optic (R4) optical sensor and a mighty 32-bit Turbo Core V2 72MHz ARM MCU processor – all working in perfect harmony to deliver unrivaled battle performance. Add to that a wealth of ergonomic features designed for long-play comfort and a suite of the world's most advanced gaming software for max customization and it's easy to see why the Pure Camo Charge is good enough to be called a Kone.

Pro-Optic Sensor (R4)

 
The Pro-Optic (R4) sensor with DPI adjustable up to 5000dpi offers superb tracking, transmitting even the fastest of mouse movements with no lag, for incredible precision and gaming control. With a 1000Hz polling rate and optical scanning, accurate up to 20G acceleration, the sensor reacts precisely to your mouse pad, further improving tracking. The DCU (Distance Control Unit) lets you adjust lift-off distance, maximizing your command capabilities.

Easy-Shift[+]™ & ROCCAT™ Driver

The Kone Pure Camo Charge features world famous Easy-Shift[+]™ technology, which lets you set two functions for each mouse button and the scroll wheel – giving you the power to pack a massive amount of quickly-accessible control into a clean, uncluttered space. And the included ROCCAT™ Driver software lets you easily program and fine tune a multitude of settings – and gives you sound feedback with most changes – so you can game exactly how you like.

16.8 Million-Color Lighting System

The Kone Pure Camo Charge is more than just a gaming mouse: It's a fully-customizable atmosphere booster that adds to the mood of every gaming session. That's because it boasts a large rear ROCCAT™ logo that you can illuminate in your choice of 16.8 million vibrant colors. You can even program the logo to “breathe” or rotate in your choice of shades – eye-catching effects that enhance your gaming experience and look excellent with your other ROCCAT™ gear.

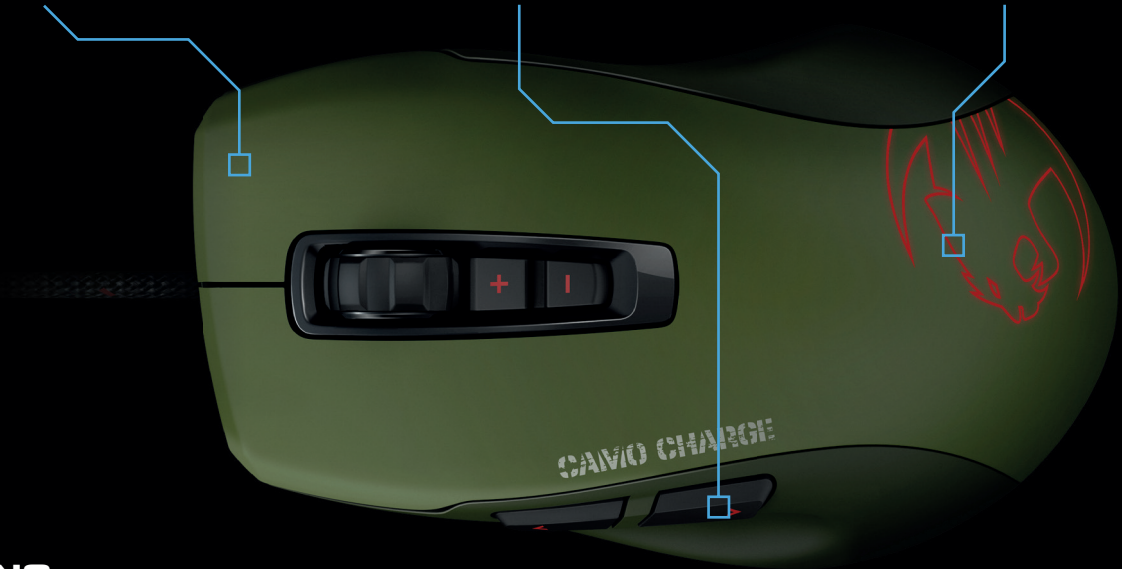

SPECIFICATIONS

PACKAGE CONTAINS

- ROCCAT™ Kone Pure Camo Charge Core Performance Gaming Mouse
- Quick-Installation Guide

SYSTEM REQUIREMENTS

- Windows® XP, Vista® 32/64 bit, Windows® 7 32/64 bit, Windows® 8/Windows® 8 Pro
- USB 2.0 Port
- Internet connection (for driver installation)

TECH SPECS

- Pro-Optic Sensor (R4) with up to 5000dpi
- 1000Hz polling rate
- 1ms response time
- 30G acceleration
- 130ips
- 16-bit data channel
- 72MHz Turbo Core V2 32-bit Arm based MCU
- 576kB on-board memory
- Adjustable angle snapping
- Adjustable lift-off distance
- 1.8m Braided USB cable



QUICK-INSTALLATION GUIDE

IMPORTANT DOCUMENT

ROCCAT GmbH
Otto von Bahrenpark, Paul-Dessau-Str. 3G, 22761 Hamburg, Germany
© 2014 ROCCAT GmbH. All rights reserved. Any product names mentioned in this manual may be trademarks or registered trademarks and are the property of their respective owners. Information contained herein is subject to change without notice. ROCCAT GmbH shall not be made liable for any errors that may appear in this manual. This publication or parts of it may not be reproduced without the express consent of the publisher.



PLEASE USE YOUR PRODUCT'S SERIAL NUMBER
(LOCATED ON THE BOTTOM LABEL) FOR
REGISTRATION. SIGN IN AT:
WWW.ROCCAT.ORG/REGISTER

WWW.ROCCAT.ORG/SUPPORT

Our support team is ready to help with any technical questions.
Just send an e-mail to support@roccat.org. Or visit our website at:

Should you need assistance ...

A

DEFAULT BUTTON ASSIGNMENT
(no driver installed)

1

= Left mouse button

2

= Right mouse button

3

= Middle mouse button &
universal scroll

4

= Page forward (Browser)

5

= Easy-Shift[+]™ button

6

= Mouse wheel up

7

 
= Mouse wheel down

8

= DPI up

9

= DPI down

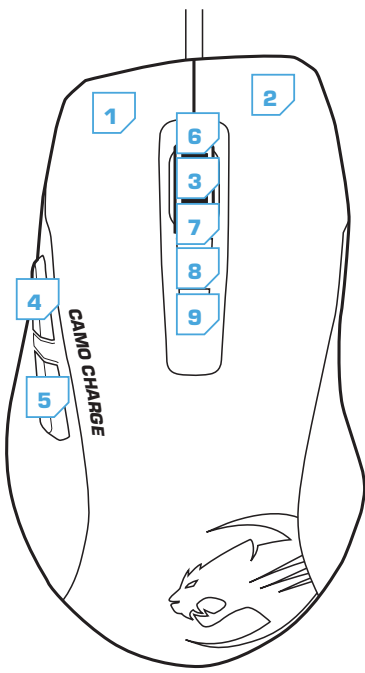

ROCCAT™ EASY-SHIFT[+]™ TECHNOLOGY

GREATLY INCREASE YOUR MOUSE FUNCTIONS

Ingenious Easy-Shift[+]™ technology lets you assign two functions to each of your mouse buttons and the scroll wheel – putting a huge amount of easily-wielded power right at your fingertips. The Kone Pure Camo Charge's Easy-Shift[+]™ button works just like the shift key on a keyboard. Simply hold it down and simultaneously press one of the other mouse buttons – or the scroll wheel (including up and down) – and you execute a second function. This incredibly handy feature increases the number of available functions from 9 to 16.

GET EVEN MORE MACRO MIGHT

Easy-Shift[+]™ also lets you control powerful driver functions right from your mouse – giving you quick control over things like your multimedia options. For example, you can launch your media player, switch music tracks and adjust volume – all with the simple press of a mouse button or scroll of your mouse wheel. With the Kone Pure Camo Charge, flawless ergonomics and maximum functionality coexist in perfect harmony.



Use the **Easy-Shift[+]™** button (#5) to access 2nd level functions on all other mouse buttons and wheel.

This way you can **duplicate** the number of buttons by assigning **two functions** to each one.

Easy-Shift[+]™ WoW:

5 + 1 = Mount up

5 + 2 = Dismount

5 + 3 = Autorun

5 + 4 = Use trinket

5 + 6 = Your macro #1

5 + 7 = Your macro #2

5 + 8 = Pet attack

5 + 9 = Pet follow

Easy-Shift[+]™ CS:

5 + 1 = Throw HE

5 + 2 = Throw flash

5 + 3 = Throw smoke

5 + 4 = Show scores

5 + 6 = Buy CT equipment

5 + 7 = Buy T equipment

5 + 8 = Primary weapon

5 + 9 = Secondary weapon

Easy-Shift[+]™ Multimedia:

5 + 1 = Play or pause

5 + 2 = Stop playback

5 + 3 = Mute volume

5 + 4 = Switch to full screen & back

5 + 6 = Play the previous item

5 + 7 = Play the next item

5 + 8 = Volume up

5 + 9 = Volume down

Easy-Shift[+]™ Browser:

5 + 1 = Page back

5 + 2 = Page forward

5 + 3 = New tab

5 + 4 = New window

5 + 6 = Switch to previous tab

5 + 7 = Switch to next tab

5 + 8 = Volume up

5 + 9 = Volume down

B

DEFAULT BUTTON ASSIGNMENT: EASY-SHIFT[+]™
(no driver installed)

5 + 1 = Page back (Browser)

5 + 2 = Page forward (Browser)

5 + 3 = Mute volume

5 + 4 = Page back (Browser)

 
5 + 5 = Disabled

5 + 6 = Volume up

5 + 7 = Volume down

5 + 8 = Previous track

5 + 9 = Next track

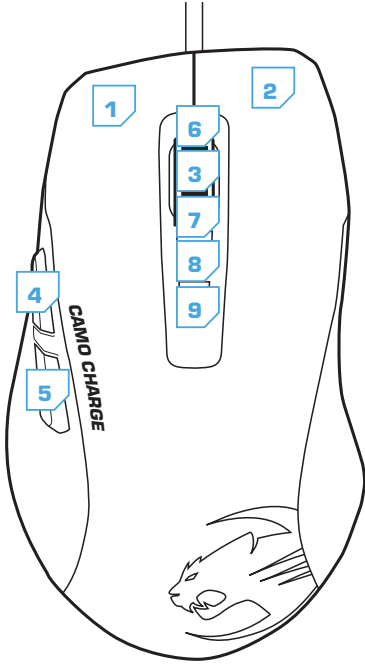

DE

ANLEITUNG

1. Verbinde den USB-Stecker der ROCCAT™ Kone Pure Camo Charge mit einer freien USB-Schnittstelle.

2. Starte deinen Computer und stelle eine Verbindung mit dem Internet her.

3. Gebe in die Adresszeile deines Webbrowsers die folgende URL ein „www.roccat.org/support“ und drücke Enter.

4. Klicke in der linken Navigationsleiste auf den Punkt „ROCCAT™ Kone Pure Military“. Lade dir auf der sich öffnenden Seite die neueste Treiber-Software herunter.

5. Starte die Treiber-Installation und folge bitte den weiteren Anweisungen auf dem Bildschirm.

DK

INSTRUKTIONER

1. Forbind ROCCAT™ Kone Pure Camo Charge's USB-stik med et ledigt USB-interface.

2. Start din computer og forbind den med Internettet.

3. Indtast følgende URL i adresselinjen af din webbrowser „www.roccat.org/support“ og tryk så Enter.

4. Klik i venstre navigationslinje på punkt „ROCCAT™ Kone Pure Military“. Fra den åbnede side overfører du den nyeste driversoftware.

5. Start driver-installationen og følg anvisningerne på billedskærmen.

EN

INSTRUCTIONS

1. Plug the USB connector on your ROCCAT™ Kone Pure Camo Charge into any free USB port.

2. Boot your computer and connect to the internet.

3. Enter 'www.roccat.org/support' in your browser and hit the return key.

4. In the navigation bar on the left, go to 'ROCCAT™ Kone Pure Military'. Download the latest driver from the web page that opens.

5. Start the driver installation process and follow the on-screen instructions.

ES

INSTRUCCIONES

1. Enchufa el conector USB del ROCCAT™ Kone Pure Camo Charge a un puerto libre USB.

2. Inicia tu ordenador y establece la conexión de Internet.

3. Escribe en tu navegador Web la siguiente URL: www.roccat.org/support y pulsa Enter.

4. En la barra izquierda de navegación haz clic en el punto "ROCCAT™ Kone Pure Military". En la página que se abre a continuación descarga el software de controlador más actualizado.

5. Inicia la instalación del controlador y sigue las instrucciones que aparecen en pantalla.

FI

OHJEET

1. Liitä ROCCAT™ Kone Pure Camo Charge:n USB-pistoke vapaaseen USB-liitäntään.

2. Käynnistä tietokoneesi ja luo Internet-yhteys.

3. Kirjoita verkkoselaimesi osoiteriville seuraava URL-osoite „www.roccat.org/support“ ja paina Enter.

4. Napsauta vasemmassa navigaatiopalkissa kohtaa „ROCCAT™ Kone Pure Military“. Lataa avautuvalla sivulla uusin ajuriohjelmisto.

5. Käynnistä ajurin asennus ja noudata näytöllä näkyviä lisäohjeita.

FR

INSTRUCTIONS

1. Relie la fiche USB de la souris ROCCAT™ Kone Pure Camo Charge à une prise USB libre.

2. Démarre ton ordinateur et connecte-toi à Internet.

3. Entre dans la barre d'adresse de ton navigateur l'URL « www.roccat.org/support » et appuie sur Enter.

4. Clique dans le menu de navigation de gauche sur « ROCCAT™ Kone Pure Military ». Télécharge la dernière version du pilote sur la page qui s'ouvre alors.

5. Lance l'installation du pilote et suis les instructions qui s'affichent à l'écran.

PL

INSTRUKCJA

1. Podłącz wtyk USB ROCCAT™ Kone Pure Camo Charge do wolnego złącza USB.

2. Uruchom komputer i nawiąż połączenie z Internetem.

3. W wierszu adresowym przeglądarki wpisz adres URL „www.roccat.org/support“ i naciśnij Enter.

4. W lewym pasku nawigacji kliknij punkt „ROCCAT™ Kone Pure Military“. Z nowo otwartej strony pobierz najnowsze sterowniki.

5. Rozpocznij instalację sterowników i postępuj zgodnie z instrukcjami na ekranie.

RU

ИНСТРУКЦИИ

1. Соедини USB-штекер ROCCAT™ Kone Pure Camo Charge со свободным USB-портом.

2. Запусти компьютер и выйди в интернет.

3. Введи в адресной строке браузера адрес „www.roccat.org/support“ и нажми Enter.

4. Нажми на левой навигационной панели пункт „ROCCAT™ Kone Pure Military“. Загрузи с открывшейся страницы самые последние драйвера.

5. Запусти инсталляцию драйвера и следуй дальнейшим указаниям на экране.

SE

INSTRUKTIONER

1. Sätt ROCCAT™ Kone Pure Camo Charge USB-kontakt i en ledig USB-port.

2. Starta datorn och koppla upp dig på Internet.

3. Skriv in följande URL i adressfältet på din webbläsare: www.roccat.org/support. Tryck på Enter.

4. Klicka på ROCCAT™ Kone Pure Military i det vänstra navigationsfältet. Ladda ner den senaste programvaran med drivrutin på den sida som öppnas.

5. Starta installationen av drivrutin och följ anvisningarna på skärmen.

TR

TALIMATLAR

1. ROCCAT™ Kone Pure Camo Charge USB fişini boş bir USB girişine tak.

2. Bilgisayarı başlat ve internete bağlan.

3. Web tarayıcının adres satırına "www.roccat.org/support" URL adresini gir ve Enter tuşuna bas.

4. Sol navigasyon çubuğundaki "ROCCAT™ Kone Pure Military" üzerine tıkla. Açılan sayfadan en yeni sürücü yazılımını indir.

5. Sürücü kurulumunu başlat ve ekrandaki diğer talimatları takip et.