



Maintenance and Service Guide

HP 200 G2a/200 G2i 14 inch Notebook PC

SUMMARY

This guide provides maintenance information about such topics as spare parts, removal and replacement of parts, security, and backing up.

Legal information

© Copyright 2026 HP Development Company, L.P.

AMD is a trademark of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Intel, Core, and Iris are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. USB Type-C, USB-C, and the USB 10 Gbps port logo are registered trademarks of USB Implementers Forum. DisplayPort and the DisplayPort logo are trademarks owned by the Video Electronics Standards Association (VESA) in the United States and other countries. Wi-Fi is a registered trademarks of Wi-Fi Alliance.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: February 2026

Document Part Number: P75219-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows is automatically updated, which is always enabled. High-speed internet and Microsoft account required. ISP fees may apply and additional requirements may apply over time for updates. See <http://www.windows.com>. **If your product ships with Windows in S Mode:** Windows in S Mode works exclusively with apps from the Microsoft Store within Windows. Certain default settings, features, and apps cannot be changed. Some accessories and apps that are compatible with Windows may not work (including some antivirus, PDF writers, driver utilities, and accessibility apps), and performance may vary, even if you switch out of S Mode. If you switch to Windows, you cannot switch back to S Mode. Learn more at [Windows.com/SmodeFAQ](https://www.windows.com/SmodeFAQ).

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Manuals**.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice

Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.

 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the mobile computer, do not place the mobile computer directly on your lap or obstruct the computer air vents. Use the mobile computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer; or a soft surface, such as pillows, rugs, or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows, rugs or clothing, during operation. The computer and AC adapter provided by HP comply with the user-accessible surface temperature limits defined by applicable safety standards.

Important notice about Customer Self-Repair parts

Your computer includes Customer Self-Repair parts and parts that should be accessed only by an authorized service provider.



IMPORTANT: See [Removal and replacement procedures for Customer Self-Repair parts on page 32](#) for details.

Accessing parts described in [Removal and replacement procedures for authorized service provider parts on page 41](#) can damage the computer or void your warranty.

Table of contents

1 Product description.....	1
2 Getting to know your computer	6
Right side	6
Left side.....	7
Display	9
Low blue light mode (select products only)	9
Wake-on-voice (select products only).....	9
Keyboard area.....	10
Touchpad settings and components	10
Touchpad settings.....	10
Adjusting touchpad settings	10
Turning on the touchpad	10
Touchpad components	11
Lights	11
Button and fingerprint reader	13
Special keys	14
Bottom	15
Labels	16
3 Illustrated parts catalog	17
Computer major components	17
Display assembly subcomponents	20
Miscellaneous parts	22
4 Removal and replacement procedures preliminary requirements	24
Tools required.....	24
Service considerations	24
Plastic parts.....	24
Cables and connectors.....	24
Drive handling.....	24
Electrostatic discharge information.....	25
Generating static electricity	25
Preventing electrostatic damage to equipment	26
Personal grounding methods and equipment	26
Grounding the work area	27
Recommended materials and equipment.....	27
Cleaning your computer	28
Enabling HP Easy Clean (select products only).....	28
Removing dirt and debris from your computer	28
Cleaning your computer with a disinfectant	29

Caring for wood veneer (select products only).....	30
Packaging and transporting guidelines.....	30
Accessing support information	30
5 Removal and replacement procedures for Customer Self-Repair parts.....	32
Component replacement procedures.....	32
Preparation for disassembly.....	32
Bottom cover	32
Battery	35
Removing and reinstalling the same battery	35
Installing a new battery	36
6 Removal and replacement procedures for authorized service provider parts.....	41
Component replacement procedures.....	41
Preparation for disassembly.....	41
Solid-state drive	41
Memory modules.....	42
WLAN module.....	44
Speakers	45
Touchpad.....	46
Fingerprint reader (select products only).....	48
Fan.....	50
Display assembly	51
System board	56
Heat sink.....	59
USB board	60
Keyboard with top cover	61
7 Backing up, restoring, and recovering.....	63
Backing up information and creating recovery media.....	63
Using Windows tools for backing up.....	63
Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive (select products only)	63
Restoring and recovering your system	63
Creating a system restore	64
Restoring and recovery methods.....	64
Recovering using the HP Recovery USB flash drive	64
Changing the computer boot order	65
Using HP Sure Recover (select products only).....	65
8 Computer Setup (BIOS), TPM, and HP Sure Start	66
Using Computer Setup	66
Navigating and selecting in Computer Setup	66
Restoring factory settings in Computer Setup	66
Updating the BIOS	67
Determining the BIOS version	67
Preparing for a BIOS update.....	67
Downloading a BIOS update	68
Installing a BIOS update.....	68

Changing the boot order using the f9 prompt	69
9 Using HP PC Hardware Diagnostics	70
Using HP PC Hardware Diagnostics Windows (select products only).....	70
Using an HP PC Hardware Diagnostics Windows hardware failure ID code.....	70
Accessing HP PC Hardware Diagnostics Windows.....	70
Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant (select products only).....	70
Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)	71
Downloading HP PC Hardware Diagnostics Windows.....	71
Downloading the latest HP PC Hardware Diagnostics Windows version from HP	71
Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store.....	71
Downloading HP Hardware Diagnostics Windows by product name or number (select products only).....	72
Installing HP PC Hardware Diagnostics Windows	72
Using HP PC Hardware Diagnostics UEFI.....	72
Using an HP PC Hardware Diagnostics UEFI hardware failure ID code	72
Starting HP PC Hardware Diagnostics UEFI.....	72
Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only)	73
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive	73
Downloading the latest HP PC Hardware Diagnostics UEFI version	74
Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only).....	74
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only).....	74
Downloading Remote HP PC Hardware Diagnostics UEFI	74
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version.....	74
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number.....	75
Customizing Remote HP PC Hardware Diagnostics UEFI settings.....	75
10 Specifications.....	76
Computer specifications.....	76
Display specifications.....	76
Solid-state drive specifications	77
11 Statement of memory volatility.....	79
Current BIOS steps.....	79
Nonvolatile memory usage	81
Questions and answers	82
Using HP Sure Start (select products only).....	83
12 Power cord set requirements.....	84
Requirements for all countries	84
Requirements for specific countries and regions.....	84
13 Swelling or deformation of notebook battery.....	87
Swollen notebook batteries	87

Swollen battery is not a safety issue.....	87
Discontinue using a swollen battery	87
Replace a swollen battery	87
Minimize battery swelling.....	87
Adaptive Battery Optimizer (consumer notebooks).....	88
HP Battery Health Manager (commercial notebooks).....	88
14 Recycling.....	89
Index	90

1 Product description

This table provides detailed product information.



NOTE: For the latest specifications related to your computer, go to <http://www.hp.com/support> and follow the instructions to find your product. Select **Specifications & Accessories**, select **Product information**, and then select the specifications link.

Table 1-1 Product components and their descriptions

Category	Description
Product Name	HP 200 G2a 14 inch Notebook PC
	HP 200 G2i 14 inch Notebook PC
Processors	AMD® processors
	AMD Athlon™ Gold 20 processor
	AMD Athlon Silver 10 processor
	AMD Ryzen 3 processor
	AMD Ryzen 5 processor
	AMD Ryzen 7 processor
	AMD Ryzen AI 5 processor
	AMD Ryzen AI 7 processor
	APU AMD Ryzen 3 processor
	Intel® Core™ processors
	Intel Core i3 N355 processor
	Intel Core 5 processor
	Intel Core 9 processor
	Intel Core i5 processor
	Intel Core i7 processor
	Intel Core Ultra 5 processor
	Intel Core Ultra 7 processor
	Intel Core Ultra 9 processor
	Intel N150 processor
	Intel N250 processor
Graphics	Internal graphics
	AMD Radeon 760 M
	AMD Radeon 780 M

Table 1-1 Product components and their descriptions (continued)

Category	Description
	AMD Radeon Integrated Graphics
	Intel Graphics
	Intel Iris® Xe Graphics
	Intel UHD Graphics
	Intel Arc 130T Graphics
	Intel Arc 140T Graphics
Display	14 inch, (1920 × 1200), Widescreen Ultra Extended Graphics Array (WUXGA), antiglare, Low Blue Light, 300 nits, Without Panel
	14 inch, (2240x1400), anti-glare, LED, ultrawide viewing angle (UWVA), 300 nits
	14 inch, (1920 × 1200), ultrawide viewing angle (UWVA), Bright View, OLED, Low Blue Light, 300 nits
Memory	Memory is not accessible or upgradeable.
	DDR5-5600 dual-channel support
	Double data rate (DDR)
	Supports the following configurations:
	• 8 GB
	• 16 GB
	• 24 GB
	• 32 GB
Primary storage	M.2 2280 solid-state drive (SSD), PCIe-4 × 4 nonvolatile memory express (NVMe)
	• 256 GB
	• 512 GB
	• 1 TB
Audio	Dual speakers
	Speakers
Video	Dual Array Microphone FHD camera - indicator LED, USB 2.0, fixed focus, HDR support, BSI sensor, f2.0, 80° NFOV
	Dual Array Microphone FHD camera - indicator LED, USB 2.0, fixed focus, HD support, BSI sensor, Infrared
WLAN	MediaTek Terra MT7920 M.2 2230 Wi-Fi® 6 (2×2)
	Realtek Cass 8852BE-VT Wi-Fi® 6 (2×2) and Bluetooth® 5.4
	Realtek Chivas 8922AE-VS Wi-Fi 7 (2×2) and Bluetooth 6.0
Ports	Audio-out (headphone)/audio-in (microphone) combo jack
	RJ45 Ethernet slot
	HDMI v2.1 (1 port), supports up to 4K @ 60 Hz

Table 1-1 Product components and their descriptions (continued)

Category	Description
	USB 3.2 Gen 1 Type-A ports (2), support: • Data transfer • Power Delivery (PD) charging • DisplayPort™ 1.4 alt mode (up to 4K @ 60 Hz) • HDMI 2.1 out (up to 4K @ 60 Hz) via adapter • HP Sleep & Charge
	USB 3.2 Gen 2 Type-C ports (2), support: • Data transfer • Power Delivery (PD) charging • DisplayPort 1.4 alt mode (up to 4K @ 60 Hz) • HDMI 2.1 out (up to 4K @ 60 Hz) via adapter • HP Sleep & Charge
	M.2 2230 slot (Key E) for WLAN module
	M.2 slot for SSD storage
Keyboard/pointing devices	Darker meteor silver opaque clickpad with image sensor and backlit number pad
	Darker meteor silver opaque clickpad with image sensor and not backlit number pad
	Iron gray clickpad with image sensor and backlit number pad
	Iron gray clickpad with image sensor and not backlit number pad. Spill resistant.
	Meteor silver clickpad with image sensor and backlit number pad. Spill resistant.
	Meteor silver clickpad with image sensor and not backlit number pad. Spill resistant.
Power	Batteries
	3 cell 41 Whr 3.75 Ah
	3 cell 60 Whr 5.14 Ah
	Long life
	Fast charge
	HP Smart AC adapter (4.5 mm, non-power correction factor [nPFC]) (select products only)
	100 W
	65 W
	45 W
	Power cord
	C5 1.0 M Sticker/plug adapter
	C5 1.0 M Sticker Conventional Red Straight
	Non-Standard Black Straight High Frequency Duckhead only.

Table 1-1 Product components and their descriptions (continued)

Category	Description
Security	Microphone mute (on/off key on keyboard)
	Fingerprint reader (select products only)
	Camera privacy cover
	Trusted Platform Module (TPM) 2.0
Operating system	Windows® 11 Pro 64
	Windows 11 Pro 64 Chinese Market
	Windows 11 Pro 64 Copilot+ Premium
	Windows 11 Pro 64 Copilot+ Standard
	Windows 11 Pro 64 High-End
	Windows 11 Pro 64 High-End Chinese Market
	Windows 11 Pro 64 Value
	Windows 11 Pro 64 Value Chinese Market
	Windows 11 Home 64
	Windows 11 Home 64 Advanced
	Windows 11 Home 64 Advanced Single Language
	Windows 11 Home 64 Chinese Market CPPP
	Windows 11 Home 64 Copilot+ Premium
	Windows 11 Home 64 Copilot+ Premium Chinese Market CPPP
	Windows 11 Home 64 Copilot+ Premium Single Language Africa Market PPP
	Windows 11 Home 64 Copilot+ Premium Single Language APAC EM PPP
	Windows 11 Home 64 Copilot+ Premium Single Language India Market PPP
	Windows 11 Home 64 Copilot+ Premium Single Language Indonesia Market PPP
	Windows 11 Home 64 Copilot+ Standard
	Windows 11 Home 64 Copilot+ Standard Chinese Market CPPP
	Windows 11 Home 64 Copilot+ Standard Single Language Africa Market PPP
	Windows 11 Home 64 Copilot+ Standard Single Language APAC EM PPP
	Windows 11 Home 64 Copilot+ Standard Single Language India Market PPP
	Windows 11 Home 64 Copilot+ Standard Single Language Indonesia Market PPP
	Windows 11 Home 64 Entry
	Windows 11 Home 64 Entry Single Language
	Windows 11 Home 64 High-End Chinese Market CPPP
	Windows 11 Home 64 Plus
	Windows 11 Home 64 Plus Single Language
	Windows 11 Home 64 Plus Single Language Africa Market PPP

Table 1-1 Product components and their descriptions (continued)

Category	Description
	Windows 11 Home 64 Plus Single Language APAC EM PPP
	Windows 11 Home 64 Plus Single Language India Market PPP
	Windows 11 Home 64 Plus Single Language Indonesia Market PPP
	Windows 11 Home 64 Single Language
	Windows 11 Home 64 Single Language Africa Market PPP
	Windows 11 Home 64 Single Language APAC EM PPP
	Windows 11 Home 64 Single Language Entry Africa Market PPP
	Windows 11 Home 64 Single Language Entry APAC EM PPP
	Windows 11 Home 64 Single Language Entry India Market PPP
	Windows 11 Home 64 Single Language Entry Indonesia Market PPP
	Windows 11 Home 64 Single Language India Market PPP
	Windows 11 Home 64 Single Language Indonesia Market PPP
	Windows 11 Home 64 Single Language Value Africa Market PPP
	Windows 11 Home 64 Single Language Value APAC EM PPP
	Windows 11 Home 64 Single Language Value India Market PPP
	Windows 11 Home 64 Single Language Value Indonesia Market PPP
	Windows 11 Home 64 Value
	Windows 11 Home 64 Value Single Language
	Windows 11 Home S 64
	Windows 11 Home S 64 Advanced
	Windows 11 Home S 64 Entry
	Windows 11 Home S 64 Plus
	Windows 11 Home S 64 Value
	FreeDOS 3.0
Serviceability	AC adapter
	Bottom cover
	Battery

2 Getting to know your computer

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

Right side

Use this illustration and table to identify the components on the right side of the computer.



NOTE: See the illustration that most closely matches your computer.



Table 2-1 Right-side components and their descriptions (select products only)

	Component	Description
(1)	Audio-out (headphone)/Audio-in (microphone) combo jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i>. To access this guide: ■ Select the Search icon in the taskbar, type HP Documentation in the search box, and then select HP Documentation. NOTE: When a device is connected to the jack, the computer speakers are disabled.
(2)	USB port	Connects a USB device, provides data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in sleep mode. NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.



Table 2-2 Right-side components and their descriptions (select products only)

	Component	Description
(1)	Audio-out (headphone)/Audio-in (microphone) combo jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. This jack does not support optional standalone microphones. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i>. To access this guide: Select the Search icon in the taskbar, type HP Documentation in the search box, and then select HP Documentation. NOTE: When a device is connected to the jack, the computer speakers are disabled.
(2)	USB port	Connects a USB device, provides data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in sleep mode. NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.
(3)	RJ-45 (network) jack/status lights	Connects a network cable. - White: The network is connected. - Amber: Activity is occurring on the network.
(4)	Security cable slot	Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it might not prevent the computer from being mishandled or stolen.

Left side

Use this illustration and table to identify the components on the left side of the computer.

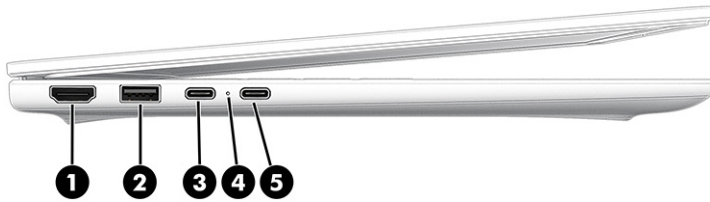


Table 2-3 Left-side components and their descriptions

	Component	Description
(1)	HDMI port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High-Definition Multimedia Interface (HDMI) device.
(2)	USB port	Connects a USB device, provides data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in sleep mode. NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.
(3)	USB Type-C® 10 Gbps port	Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off. NOTE: Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device. - and - Connects a display device that has a USB Type-C connector, providing DisplayPort output.
(4)	AC adapter and battery light	- White: The AC adapter is connected and the battery is fully charged. - Blinking amber: The AC adapter is disconnected and the battery has reached a low battery level. - Amber: The AC adapter is connected and the battery is charging. - Off: The battery is not charging.
(5)	USB Type-C 10 Gbps port	Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off. NOTE: Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device. - and - Connects a display device that has a USB Type-C connector, providing DisplayPort output.

Display

The computer display can include essential components such as speakers, antennas, cameras, and microphones.

Low blue light mode (select products only)

Your computer display is shipped from the factory in low blue light mode for improved eye comfort and safety. Also, blue light mode automatically adjusts blue light emissions when you are using the computer at night or for reading.

Wake-on-voice (select products only)

Use the wake-on-voice feature to bring the computer out of the sleep state quickly.

To access the wake-on-voice settings, follow these steps:

1. Select the **Search** icon in the taskbar, type *XiaoWei* in the search box, and then select **XiaoWei**.
2. When the tool opens, scan the QR code with your mobile device, which takes you to the settings page, where you can select your wake-on-voice features.
3. Follow the on-screen instructions.



NOTE: Allow the XiaoWei app to continue running on the computer.

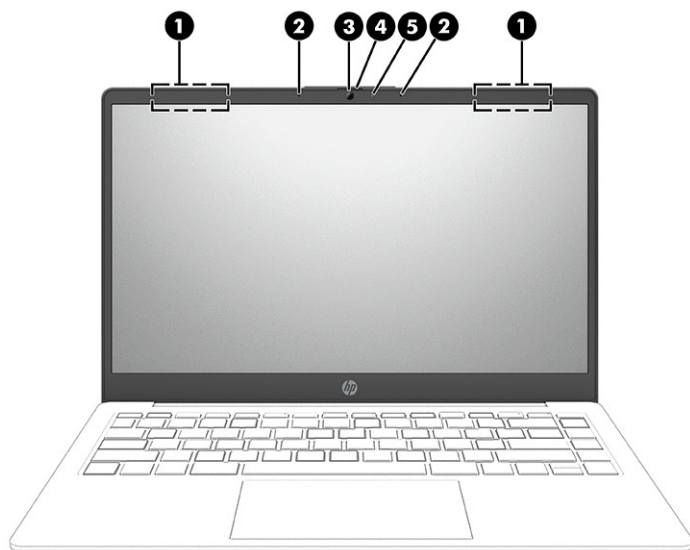


Table 2-4 Display components and their descriptions

	Component	Description
(1)	WLAN antennas* (2)	Send and receive wireless signals to communicate with wireless local area networks (WLANs).
(2)	Internal microphones (2)	Record sound.

Table 2-4 Display components and their descriptions (continued)

	Component	Description
(3)	Camera	Allows you to video chat, record video, and record still images. Some cameras also allow a facial recognition logon to Windows, instead of a password logon. NOTE: Camera functions vary depending on the camera hardware and software installed on your product.
(4)	Camera privacy cover	By default, the camera lens is uncovered, but you can slide the camera privacy cover to block the camera's view. To use the camera, slide the camera privacy cover in the opposite direction to reveal the lens.
(5)	Camera light	On: The camera is in use.

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

- Select the **Search** icon in the taskbar, type `HP Documentation` in the search box, and then select **HP Documentation**.

Keyboard area

Keyboards can vary by language.



NOTE: The keyboard area, including the function keys and (select products only) power key, is disabled in stand, tent, and tablet modes. To enable the keyboard, including the power key, change to the clamshell mode.

Touchpad settings and components

Learn the touchpad settings and components.

Touchpad settings

Learn how to adjust touchpad settings.

Adjusting touchpad settings

Use these steps to adjust touchpad settings and gestures.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press **enter**.
2. Choose a setting.

Turning on the touchpad

Follow these steps to turn on the touchpad.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press `enter`.
 2. Using an external mouse, click the **touchpad** button.
- If you are not using an external mouse, press the `Tab` key repeatedly until the pointer rests on the **touchpad** button. Then press the `spacebar` to select the button.

Touchpad components

Use this illustration and table to identify the touchpad components.

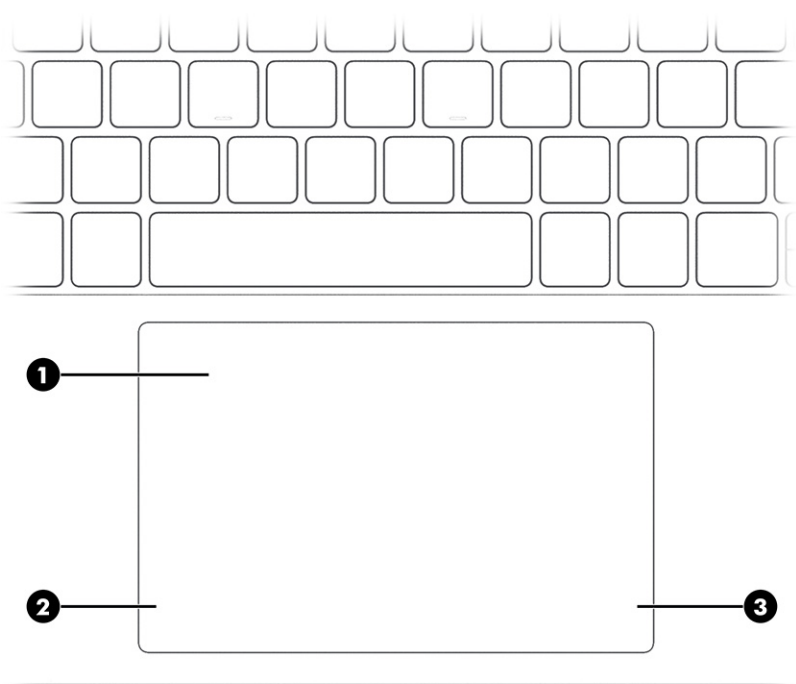


Table 2-5 Touchpad components and their descriptions

Component		Description
(1)	Touchpad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2)	Left touchpad button	Functions like the left button on an external mouse.
(3)	Right touchpad button	Functions like the right button on an external mouse.

Lights

Use this illustration and table to identify the lights on the computer.


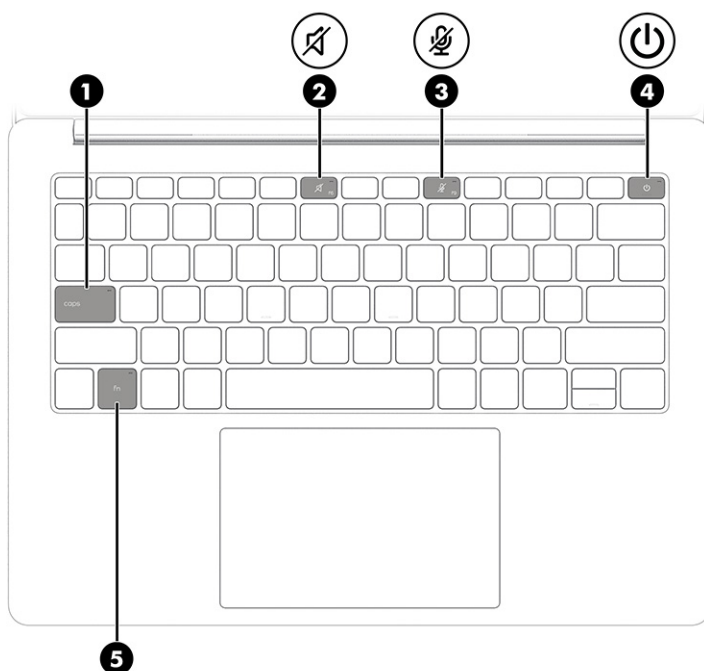


Table 2-6 Lights and their descriptions

	Component	Description
(1)	Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(2)	 Mute light	- On: Computer sound is off. - Off: Computer sound is on.
(3)	 Microphone mute light	- On: Microphone is off. - Off: Microphone is on.
(4)	 Power light	- On: The computer is on. - Blinking (select products only): The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unnecessary components. - Off: Depending on your computer model, the computer is off, in Hibernation, or in Sleep. Hibernation is the power-saving state that uses the least amount of power.
(5)	Fn lock light	- On: FN Lock is enabled. - Off: FN Lock is disabled. NOTE: On some products, FN Lock is assigned as the secondary function of the left Shift key. To enable FN Lock, press fn + left Shift. Repeat the same key combination again to disable FN Lock.

Button and fingerprint reader

Identify the computer button and fingerprint reader.

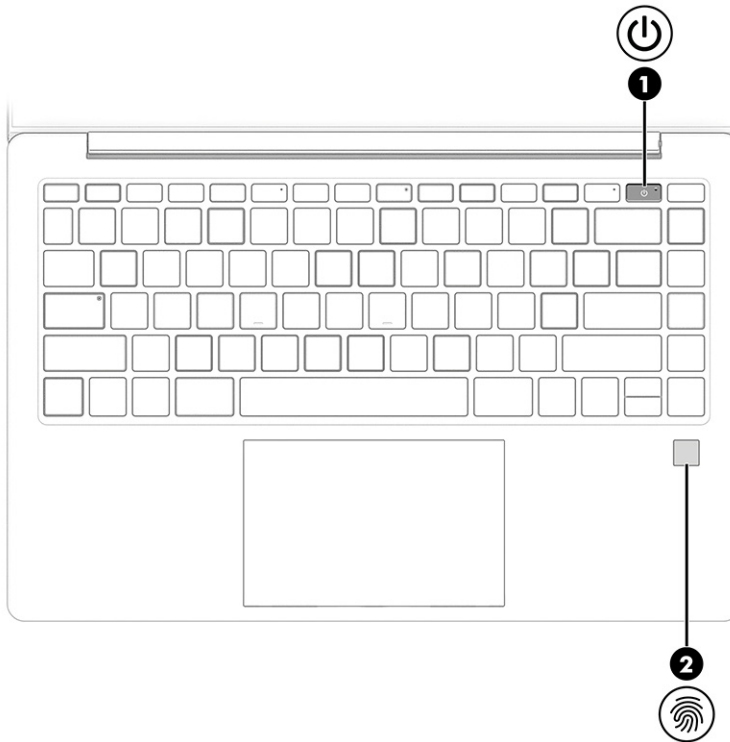

Fingerprint readers, which enable a fingerprint logon, can be located on the touchpad, on a side panel of the computer, or on the top cover below the keyboard.



IMPORTANT: To verify that your computer supports fingerprint reader sign-in, select the **Search** icon in the taskbar, type `Sign-in options` in the search box and press [enter](#). If **Fingerprint recognition** is not listed as an option, then your computer does not include a fingerprint reader.

Table 2-7 Button and fingerprint reader and their descriptions

	Component	Description
(1)	 Power button	• When the computer is off, press the button briefly to turn on the computer. • When the computer is on, press the button briefly to initiate sleep. • When the computer is in the sleep state, press the button briefly to exit sleep (select products only). • When the computer is in hibernation, press the button briefly to exit hibernation. IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information. If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button down for at least 10 seconds to turn off the computer. To learn more about your power and sleep settings: ■ Right-click the Power icon , and then select Power and sleep settings.
(2)	 Fingerprint reader (select products only)	Allows a fingerprint logon to Windows, instead of a password logon. ■ Touch your finger to the fingerprint reader. IMPORTANT: To prevent fingerprint logon issues, make sure when you register your fingerprint that all sides of your finger are registered by the fingerprint reader.

Special keys

Identify the special keys.

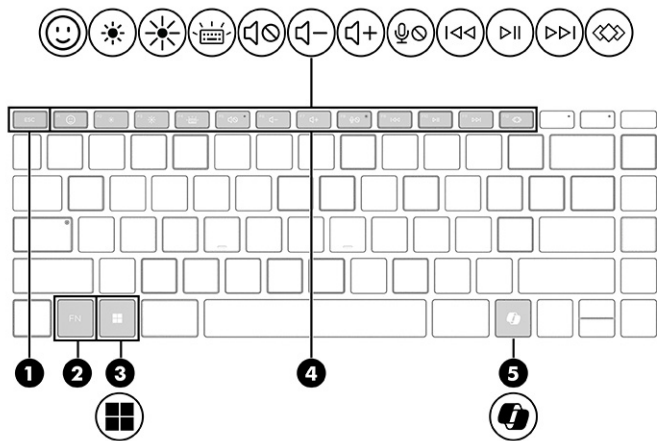


Table 2-8 Special keys and their descriptions

	Component	Description
(1)	esc key	Displays system information when pressed in combination with the fn key.
(2)	fn key	Executes specific functions when pressed in combination with another key.
(3)	 Windows key	Opens the Start menu. NOTE: Pressing the Windows key again will close the Start menu.
(4)	Action keys	Execute frequently used system functions as defined by the icon symbols on f1 through f12 function keys.
(5)	 Windows Copilot key	Opens Windows Copilot (select products only). NOTE: Copilot in Windows (select products only) requires Windows 11. Some features require a neural processing unit (NPU). The timing of feature delivery and availability varies by market and device. You must have a Microsoft account to use the Copilot feature. When the Copilot feature is not available, pressing the Copilot key opens the Bing search engine. See http://aka.ms/WindowsAIFeatures .

Bottom

Identify the bottom components.

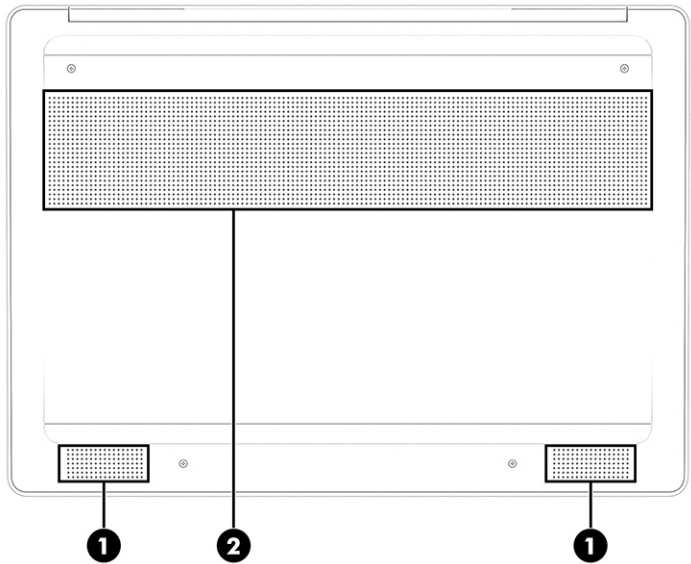


Table 2-9 Bottom components and their descriptions

	Component	Description
(1)	Speakers (2)	Produce sound.

Table 2-9 Bottom components and their descriptions (continued)

	Component	Description
(2)	Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels

The labels affixed to the computer provide information that you might need when you troubleshoot system problems or travel internationally with the computer. Labels can be in paper form or imprinted on the product.

 **IMPORTANT:** Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- Service label—Provides important information to identify your computer. When contacting support, you might be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

Your service label will resemble the following example.

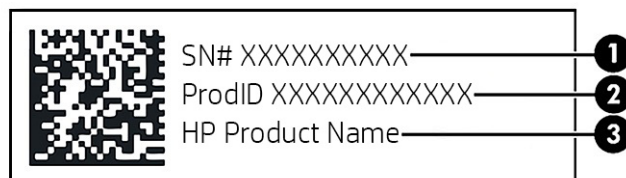


Table 2-10 Service label components

	Component
(1)	Serial number
(2)	Product ID
(3)	HP product name and model number

- Regulatory labels—Provide regulatory information about the computer.
- Wireless certification labels—Provide information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.

3 Illustrated parts catalog

Use this chapter to determine the spare parts that are available for the computer.

Computer major components

To identify the computer major components, use this illustration and table.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com/>, select your country or region, and then follow the on-screen instructions.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

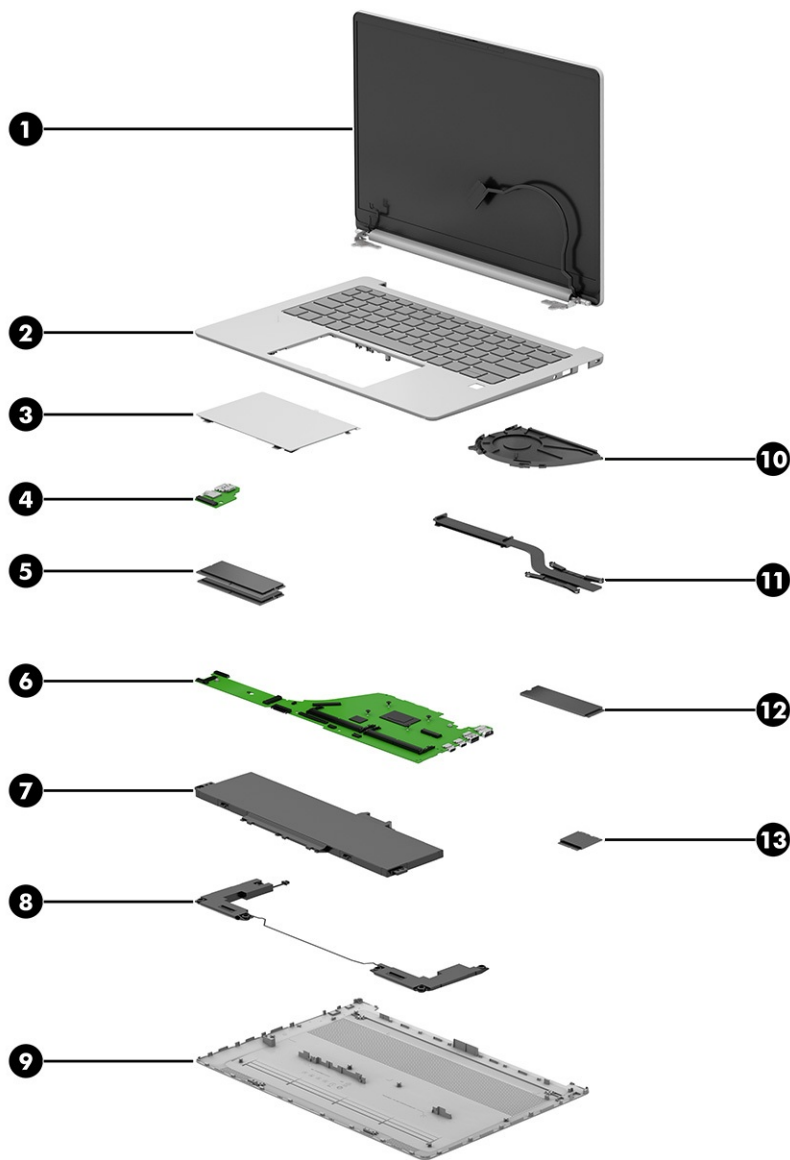


Table 3-1 Computer major component descriptions and part numbers

Item	Component	Spare part number
(1)	Display assembly NOTE: Display assemblies are offered as spare parts only at subcomponent level.	not available as a spare part
(2)	Top cover/keyboard NOTE: For a detailed list of country codes, see [Xref Error! Target does not exist.].	
	Darker meteor silver with darker meteor silver touchpad, backlit	P92155-001
	Darker meteor silver with darker meteor silver touchpad, backlit, fingerprint reader	P92156-001
	Iron gray with iron gray touchpad, backlit	P92157-001
	Darker meteor silver with iron gray touchpad, backlit	P92158-001

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
	Darker meteor silver with iron gray touchpad, backlit, fingerprint reader	P92159-001
(3)	Touchpad	
	Iron gray	P90298-001
	Darker meteor silver	P90299-001
(4)	USB audio board	P90296-001
(5)	Memory module (DDR5-5600)	
	8 GB	N37792-005
	16 GB	N58365-001
	16 GB (non-Micron [nM])	N77399-001
	24 GB	P55196-001
	32 GB	N50075-001
	32 GB (nM)	N77400-001
(6)	System board for use in models with an Intel processor	
	Intel Core Ultra5 225H 16 GB	Q12149-601
	Intel Core Ultra5 225H 16 GB (PRC)	Q12150-601
	Intel Core Ultra5 225H 32 GB	Q12151-601
	Intel Core Ultra5 225H 32 GB (PRC)	Q12152-601
	Intel Core Ultra5 225U, no vPro	Q12153-601
	Intel Core Ultra5 235U vPro	Q12154-601
	Intel Core Ultra7 255H 16 GB	Q12155-601
	Intel Core Ultra7 255H 16 GB (PRC)	Q12156-601
	Intel Core Ultra7 255H 32 GB	Q12157-601
	Intel Core Ultra7 255H 32 GB (PRC)	Q12158-601
	Intel Core Ultra7 255U, no vPro	Q12159-601
	PH U3 Kit 200 14 G2Ri	Q14368-601
	PH U5 KT 200 14 G2Ri	Q14369-601
	PH U5RM 200 14 G2Ri	Q14370-601
	PH U7 KT 200 14 G2Ri	Q14371-601
(7)	Battery	
	3 cell 41 Whr 3.75 Ah	N21969-001
	3 cell 60 Whr 5.14 Ah	P53583-001
(8)	Speakers	P80880-001
(9)	Bottom cover	
	Iron gray, plastic, 20 W	P93152-001

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
	Darker meteor silver, plastic, 20 W	P93153-001
	Darker meteor silver, plastic, 40 W	P93154-001
(10)	Fan	
	15W	P80878-001
(11)	Heat sink	
	15W RPLU	P80875-001
	15W WCL	Q10320-001
(12)	SSD	
	256 GB PCIe 4x4 2280 NVMe M.2 VAL	N77391-001
	512 GB PCIe 4x4 2280 NVMe M.2	N45476-001
	512 GB PCIe 4x4 2280 NVMe M.2 VAL nM	N77392-001
	256 GB PCIe 4x4 2280 NVMe M.2 NMIC	N77394-001
	1 TB 2280 PCIe 4x4 2280 NVMe VAL nM	P90303-001
(13)	WLAN module	
	MediaTek 7920 M.2 2230 Wi-Fi 6 Bluetooth 5.4	P06350-005
	Realtek Cass RTL 8852BE-VT and Bluetooth 5.4	P44408-005

Display assembly subcomponents

Use this illustration and table to identify the display assembly subcomponents.

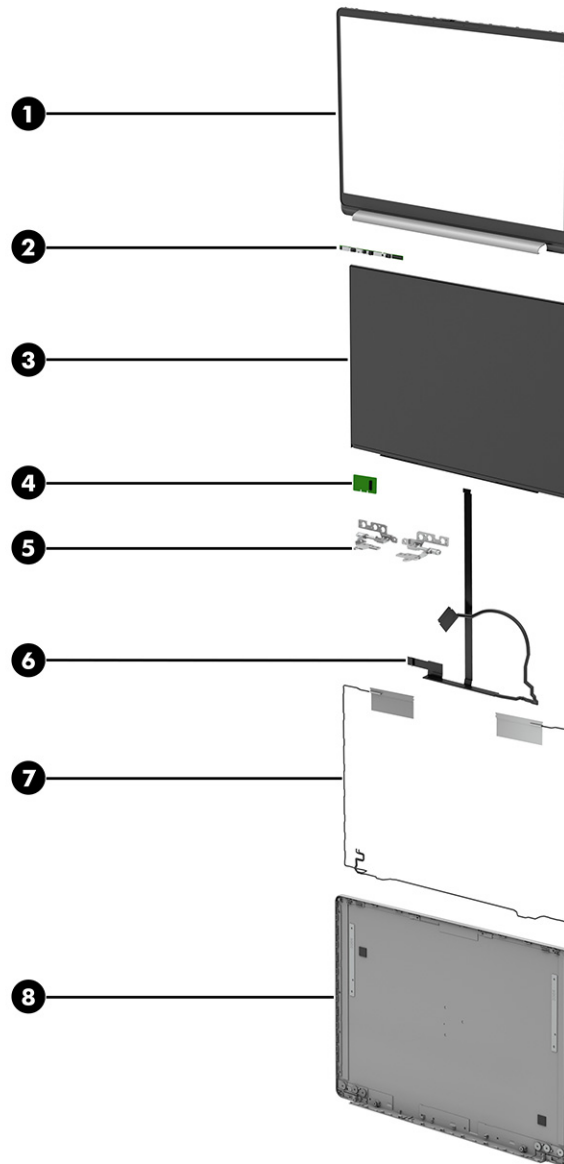


Table 3-2 Display component descriptions and part numbers

Item	Component	Spare part number
(1)	Display bezel	
	NOTE: Display bezel adhesive is available as spare part numnber N44094-001	
	Iron grey, non IR	P90292-001
	Darker meteor silver, non IR	P90293-001
	Darker meteor silver, IR	P90295-001
(2)	Camera module (includes rubber piece)	
	Dual Array Microphone FHD camera - indicator LED, USB 2.0, fixed focus, HDR support, BSI sensor, f2.0, 78° NFOV	Q02080-001

Table 3-2 Display component descriptions and part numbers (continued)

Item	Component	Spare part number
	Dual Array Microphone FHD camera - indicator LED, USB 2.0, fixed focus, HD support, BSI sensor, Infrared	Q02081-001
(3)	Display panel NOTE: Display panel adhesive is available as spare part number N44094-001.	
	14 inch, (1920x1200), widescreen ultra extended graphics array (WUXGA), brightview, low blue light, 300 nits	P92369-001
	14 inch, (2240 × 1400), ultra wide viewing angle (UWVA), antiglare, low blue light, 300 nits, sRGB 100 FHD IR	P92370-001
	14 inch, (2240 × 1400), ultra wide viewing angle (UWVA), brightview, OLED, 300 nits	P92371-001
(4)	OLED printed circuit assembly (included in the OLED panel kit)	P93157-001
(5)	Display hinges (includes left and right hinges)	
	Hinge - plastic	P99575-001
	Hinge - aluminum	P99576-001
(6)	Display/camera cable	P90300-001
(7)	WLAN antenna kit (includes antenna cables and transceivers)	P90302-001
(8)	Display back cover	
	Iron grey, plastic, FHD	P90286-001
	Darker meteor silver, plastic, FHD	P90287-001
	Iron grey, plastic, QHD	P90288-001
	Darker meteor silver, plastic, QHD	P90289-001
	Darker meteor silver, aluminum, FHD	P90290-001
	Darker meteor silver, aluminum, QHD	P90291-001

Miscellaneous parts

To identify the miscellaneous parts, use this table.

Table 3-3 Miscellaneous part descriptions and part numbers

Component	Spare part number
AC adapters	
100 W, USB Type-C, PD NPFC 3P	N57045-001
45 W, USB Type-C, straight, standard	P38778-001
65 W, USB Type-C, straight, standard	P38779-001
100W, USB Type-C, slim, straight, CN	P55546-001
65 W, USB Type-C, GaN, wall mount, fixed, 2 2 prong, 2P, 2.0 M	P58629-001
65 W, USB Type-C, GaN, wall mount, flexible, 2 prong, 2P, 2.0 M	P58630-001

Table 3-3 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
100 W, USB Type-C, GaN, wall mount, fixed, 2 prong, 2P, 2.0 M	P58631-001
100 W, USB Type-C, GaN, wall mount, flexible, 2 prong, 2P, 2.0 M	P58632-001
65 W, USB Type-C, GaN, wall mount, 2P, 2.0 M	P68491-001
Screw Kit	N36330-001
Power cord (C5, 1.0 m [3.3 ft], conventional with sticker)	
For use in Argentina	L19357-001
For use in Australia	L19358-001
For use in Denmark	L19360-001
For use in Europe	L19361-001
For use in India	L19363-001
For use in Italy	L19364-001
For use in Japan	L19365-001
For use in South Korea	L19366-001
For use in North America	L19367-001
For use in the People's Republic of China (PRC)	L19368-001
For use in South America	L19369-001
For use in Switzerland	L19370-001
For use in Thailand	L19371-001
For use in Taiwan	L19372-001
For use in the United Kingdom	L19373-001
For use in Thailand (bundle)	M85418-001
Power cord (Duckhead, non-standard, straight, high-frequency)	
For use in Europe	P57782-001
For use in the United Kingdom	P57783-001
For use in Australia	P57784-001
For use in South Korea	P57785-001
For use in Thailand	P57786-001
For use in the PRC	P57787-001
For use in Argentina	P57788-001
For use in India	P57790-001

4 Removal and replacement procedures preliminary requirements

Use this information to properly prepare to disassemble and reassemble the computer.

Tools required

You need the following tools to complete the removal and replacement procedures.

- Tweezers
- Nonconductive, nonmarking pry tool
- Magnetic Phillips P1 screwdriver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



NOTE: As you remove each subassembly from the computer, place the subassembly and all accompanying screws away from the work area to prevent damage.

Plastic parts

Using excessive force during disassembly and reassembly can damage plastic parts.

Cables and connectors

Handle cables with extreme care to avoid damage.



IMPORTANT: When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed so that they cannot be caught or snagged as you remove or replace parts. Handle flex cables with extreme care; these cables tear easily.

Drive handling

Note the following guidelines when handling drives.



IMPORTANT: Drives are fragile components. Handle them with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

- Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in hibernation or sleep mode, turn the computer on, and then shut it down through the operating system.

- Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.
 - Before removing an optical drive, be sure that a disc is not in the drive, and be sure that the optical drive tray is closed.
 - Handle drives on surfaces covered with at least 2.54 cm (1 inch) of shock-proof foam.
 - Avoid dropping drives from any height onto any surface.
 - After removing a hard drive or an optical drive, place it in a static-proof bag.
 - Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.
 - Avoid exposing a drive to temperature extremes or liquids.
 - If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging, and label the package "FRAGILE."
-

Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.



IMPORTANT: To prevent damage to the device when you remove or install internal components, observe these precautions:

- Keep components in their electrostatic-safe containers until you are ready to install them.
 - Before touching an electronic component, discharge static electricity by using the guidelines described in [Personal grounding methods and equipment on page 26](#).
 - Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
 - If you remove a component, place it in an electrostatic-safe container.
-

Generating static electricity

Follow these static electricity guidelines.

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

Table 4-1 Static electricity occurrence based on activity and humidity

Event	55% relative humidity	40% relative humidity	10% relative humidity
Walking across carpet	7500 V	15,000 V	35,000 V
Walking across vinyl floor	3000 V	5000 V	12,000 V
Motions of bench worker	400 V	800 V	6000 V
Removing dual in-line packages (DIPs) from plastic tube	400 V	700 V	2000 V
Removing DIPs from vinyl tray	2000 V	4000 V	11,500 V
Removing DIPs from polystyrene foam	3500 V	5000 V	14,500 V
Removing bubble pack from PCB (printed circuit board)	7000 V	20,000 V	26,500 V
Packing PCBs in foam-lined box	5000 V	11,000 V	21,000 V



NOTE: Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.



NOTE: As little as 700 V of static electricity can degrade a product.

Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity.

The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components:

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.
- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

Personal grounding methods and equipment

Using certain equipment can prevent static electricity damage to electronic components.

- **Wrist straps** are flexible straps with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snug against bare skin. Verify that the ground cord is connected and fits snugly into the banana plug connector on the grounding mat or workstation.
- You can use **heel straps, toe straps, and boot straps** at standing workstations. These straps are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance between the operator and ground.

Table 4-2 Static shielding protection levels

Method	Voltage
Antistatic plastic	1500
Carbon-loaded plastic	7500
Metalized laminate	15,000

Grounding the work area

To prevent static damage at the work area, follow these precautions.

- Cover the work surface with approved static-dissipative material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- Avoid contact with pins, leads, or circuitry.

Recommended materials and equipment

HP recommends certain materials and equipment to prevent static electricity.

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of $1\text{ M}\Omega \pm 10\%$ resistance
- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing $1\text{ M}\Omega \pm 10\%$ resistance
- Material handling packages
- Conductive plastic bags

- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes

Cleaning your computer

Cleaning your computer regularly removes dirt and debris so that your device continues to operate at its best. Use the following information to safely clean the external surfaces of your computer.

Enabling HP Easy Clean (select products only)

HP Easy Clean helps you to avoid accidental input while you clean the computer surfaces. This software disables devices such as the keyboard, touch screen, and touchpad for a preset amount of time so that you can clean all computer surfaces.

1. Start HP Easy Clean in one of the following ways:
 - Select the **Start** menu, and then select **HP Easy Clean**.
 - Select the **HP Easy Clean** icon in the taskbar.
 - Select **Start**, and then select the **HP Easy Clean** tile.
2. Now that your device is disabled for a short period, see [Removing dirt and debris from your computer on page 28](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 29](#) for guidelines to help prevent the spread of harmful bacteria and viruses.

Removing dirt and debris from your computer

Here are the recommended steps to clean dirt and debris from your computer.

For computers with wood veneer, see [Caring for wood veneer \(select products only\) on page 30](#).

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.

 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with water. The cloth should be moist, but not dripping wet.

 **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.

 **IMPORTANT:** Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

See [Cleaning your computer with a disinfectant on page 29](#) for recommended steps to clean the high-touch, external surfaces on your computer to help prevent the spread of harmful bacteria and viruses.

Cleaning your computer with a disinfectant

The World Health Organization (WHO) recommends cleaning surfaces, followed by disinfection, as a best practice for preventing the spread of viral respiratory illnesses and harmful bacteria.

After cleaning the external surfaces of your computer using the steps in [Removing dirt and debris from your computer on page 28](#), [Caring for wood veneer \(select products only\) on page 30](#), or both, you might also choose to clean the surfaces with a disinfectant. A disinfectant that is within HP's cleaning guidelines is an alcohol solution consisting of 70% isopropyl alcohol and 30% water. This solution is also known as rubbing alcohol and is sold in most stores.

Follow these steps when disinfecting high-touch, external surfaces on your computer:

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.

 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with a mixture of 70% isopropyl alcohol and 30% water. The cloth should be moist, but not dripping wet.

 **CAUTION:** Do not use any of the following chemicals or any solutions that contain them, including spray-based surface cleaners: bleach, peroxides (including hydrogen peroxide), acetone, ammonia, ethyl alcohol, methylene chloride, or any petroleum-based materials, such as gasoline, paint thinner, benzene, or toluene.

 **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.

 **IMPORTANT:** Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

Caring for wood veneer (select products only)

Your product might feature high-quality wood veneer. As with all natural wood products, proper care is important for best results over the life of the product. Because of the nature of natural wood, you might see unique variations in the grain pattern or subtle variations in color, which are normal.

- Clean the wood with a dry, static-free microfiber cloth or chamois.
- Avoid cleaning products containing substances such as ammonia, methylene chloride, acetone, turpentine, or other petroleum-based solvents.
- Do not expose the wood to sun or moisture for long periods of time.
- If the wood becomes wet, dry it by dabbing with an absorbent, lint-free cloth.
- Avoid contact with any substance that might dye or discolor the wood.
- Avoid contact with sharp objects or rough surfaces that might scratch the wood.

See [Removing dirt and debris from your computer on page 28](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 29](#) for sanitizing guidelines to help prevent the spread of harmful bacteria and viruses.

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment.

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Accessing support information

Use this information to find the HP support that you need.

Table 4-3 Support information locations

Service consideration	Path to access information
Records of reported failure incidents stored on the computer	Windows®: Pre-operating system failures are logged in the BIOS Event Log. To view the BIOS Event Log: 1. Press the power button. 2. Immediately and repeatedly press esc when the power button light turns white. NOTE: If you do not press esc at the appropriate time, you must restart the computer and again repeatedly press esc when the power button light turns white to access the utility. 3. Press f10 to enter the BIOS setup. 4. Complete one of these tasks: • (On commercial products) Under the Main tab, select BIOS event log, and then select View BIOS Event Log. • (On consumer products) Under the Main tab, select System Log. Post-operating system failures are logged in the Event Viewer. 1. Turn on the computer and allow the operating system to open. 2. Select the search icon  in the taskbar. 3. Type <code>Event Viewer</code>, and then press enter. 4. Select the log from the left panel. Details display in the right panel. ChromeOS™: 1. Go to support.google.com/chrome. 2. Search <code>collect Chrome device logs</code>.
Technical bulletins and alerts	To find technical bulletins, alerts, guides, and whitepapers: 1. Go to www.hp.com/support. 2. Follow the instructions to find your product. 3. Select Bulletins and Alerts to view technical bulletins.
Repair professionals	To locate repair professionals: 1. Go to www.hp.com. 2. Select Authorized service providers. 3. Select your location.
Component and diagnosis information, failure detection, and required action	To locate diagnosis information and actions: 1. Go to http://www.hp.com/go/techcenter/pcdiags. 2. Select the issue you want to diagnose.

5 Removal and replacement procedures for Customer Self-Repair parts

This chapter provides removal and replacement procedures for Customer Self-Repair parts.



NOTE: The Customer Self-Repair program is not available in all locations. Installing a part that is not supported by the Customer Self-Repair program can void your warranty. Check your warranty to determine whether Customer Self-Repair is supported in your location.



NOTE: The [HP Support YouTube Channel](#) (in English) has videos that provide step-by-step removal and replacement instructions for many common parts and models.

Component replacement procedures

Use these procedures to remove and replace computer components.



NOTE: Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.



NOTE: HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com/>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

Use these procedures to remove and replace computer components.

For initial safety procedures, see [Removal and replacement procedures preliminary requirements on page 24](#).

1. Turn off the computer. If you are unsure whether the computer is off or in hibernation or sleep mode, turn the computer on, and then shut it down through the operating system.
2. Disconnect power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Bottom cover

Use these procedures and illustrations to remove the bottom cover.

Table 5-1 Bottom cover description and part number


Description	Spare part number
Iron gray, plastic, 20 W	P93152-001
Darker meteor silver, plastic, 20 W	P93153-001
Darker meteor silver, plastic, 40 W	P93154-001

Before removing the bottom cover, prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).


Remove the bottom cover:

1. Remove the two Phillips M2.0 × 4.0 screws that secure the bottom cover to the computer.
2. Remove the two Phillips M2.0 × 4.0 captive screws.

 **NOTE:** The bottom cover includes two captive (not removable) screws that causes the cover to pop up when you loosen the screw. **After the cover pops up, do not continue to loosen the captive screws.**

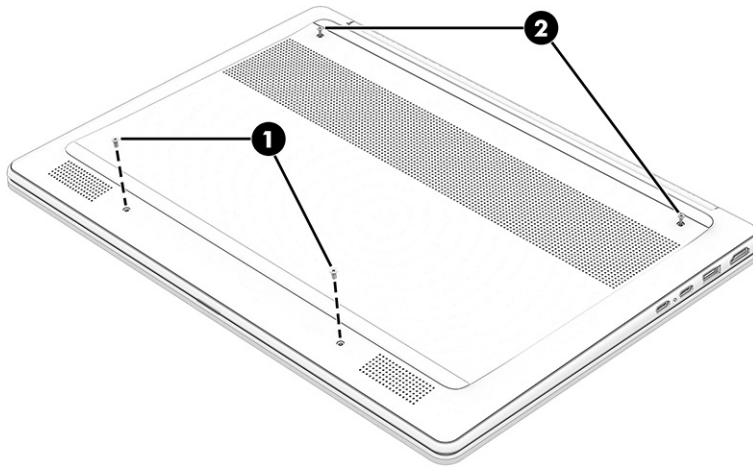

3. Use a nonmarking, nonconductive tool (1) to release the edges of the bottom cover from the computer.
4. Slide the bottom cover to the side (2), and then remove the bottom cover (3) from the computer.

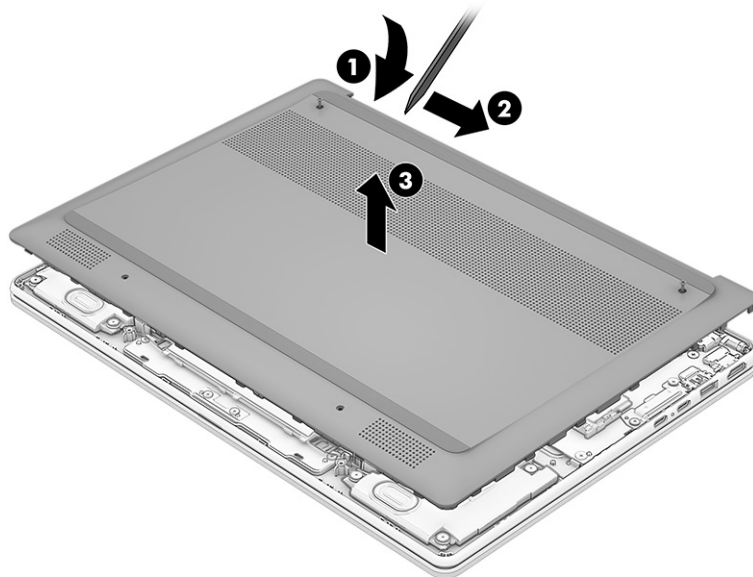

Reverse the removal procedure to replace the bottom cover.

 
When replacing the bottom cover:

- Remove the Feature Byte label from the inside of the old bottom cover and place it on the inside of the new bottom cover.
- Remove the service tag label from the inside of the old bottom cover and place it on the outside of the new bottom cover.

Be sure to keep these labels with the computer, as the label is required for any future repairs.

Service tag and Feature Byte labels


 **NOTE:** Label appearance might vary.

 HP Long Model Name ProdID AA123AV SNR CNU1234567 Warranty tytydy	← Service Tag label →	 HP Fortis Flip G11 11 ProdID BDPG4ESABN SNR SC050482R Warranty tytydy
Build ID: XXXXXXXXXXXXX21BYTES Build  Feature Byte: XXXXXXXXXX111122222AAAAAAAAAXX XXXXXXXXXX111122222AAAAAAAAAXX XXXXXXXXXX111122222AAAAAAAAAXX XXXXXXXXXX111122222AAAAAAAAAXX  Keyboard Type:	← Feature Byte label →	Feature Byte: 4765075717MT7W7m9A8u8C2apq4ue6V9W eMaxPguk8mEmVn7nVngpDpLuprpgnKxZ.Ti  Keyboard Type:0 Host Based Mac Address: See Label on System Board


New bottom cover label locations

Inside of bottom cover (place Feature Byte label here)

 **NOTE:** Bottom cover appearance might vary.

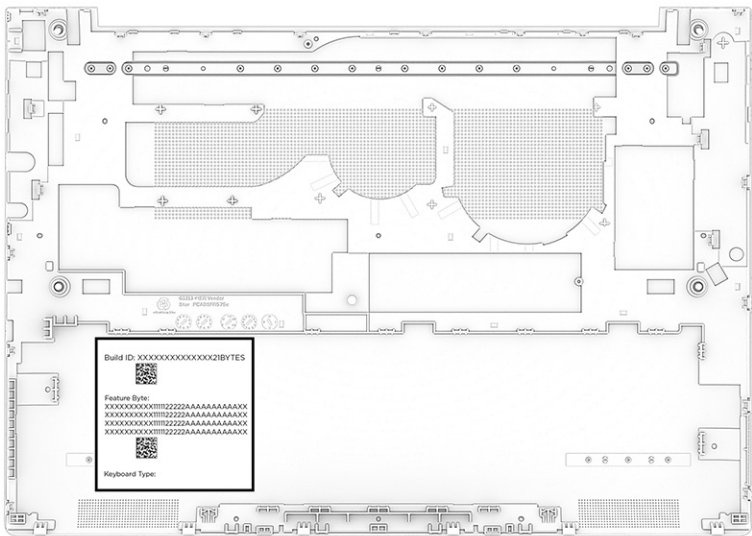

Outside of bottom cover (place service tag label here)

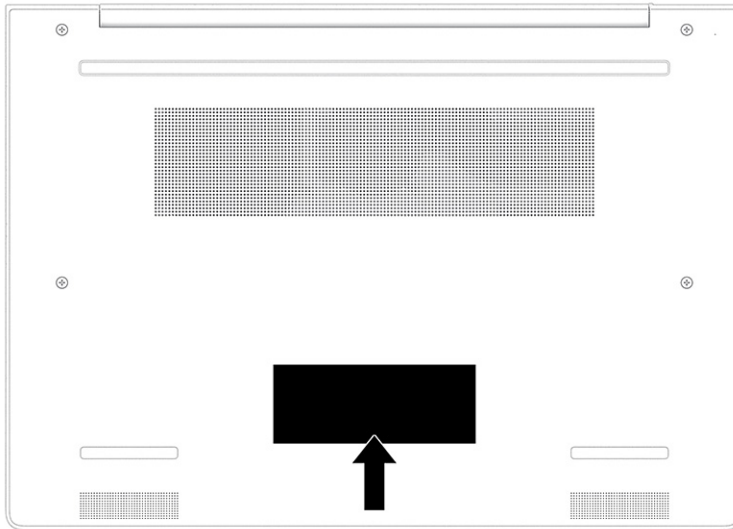

Battery

The battery removal procedure differs depending on whether you are removing and replacing the existing battery or installing a new battery. To install a new battery, you must use a revive kit.

- To remove and replace the existing battery, see [Removing and reinstalling the same battery on page 35](#).
- To install a new battery, see [Installing a new battery on page 36](#).

Removing and reinstalling the same battery

Use this procedure and illustration to remove the battery.

⚠ WARNING! To avoid personal injury and damage to the product:

- Do *not* puncture, twist, or crack the battery.
- Do *not* cause an external puncture or rupture to the battery, which can cause a short inside the battery that can result in battery thermal runaway.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* compress or squeeze the battery case with tools or heavy objects stacked on top of the case. These actions can apply undue force on the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

For additional battery information, see the *Regulatory, Safety, and Environmental Notices*. To access this guide, select the **Search** icon in the taskbar, type `HP Documentation` in the search box, and then select **HP Documentation**.

Before removing the battery, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).

⚠ WARNING! To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

📋 IMPORTANT: Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

Remove the battery:

1. Disconnect the battery cable from the system board, and then remove the five Phillips M2.0 × 4.0 screws (1) that secure the battery to the computer.
2. Remove the battery from the computer (2).

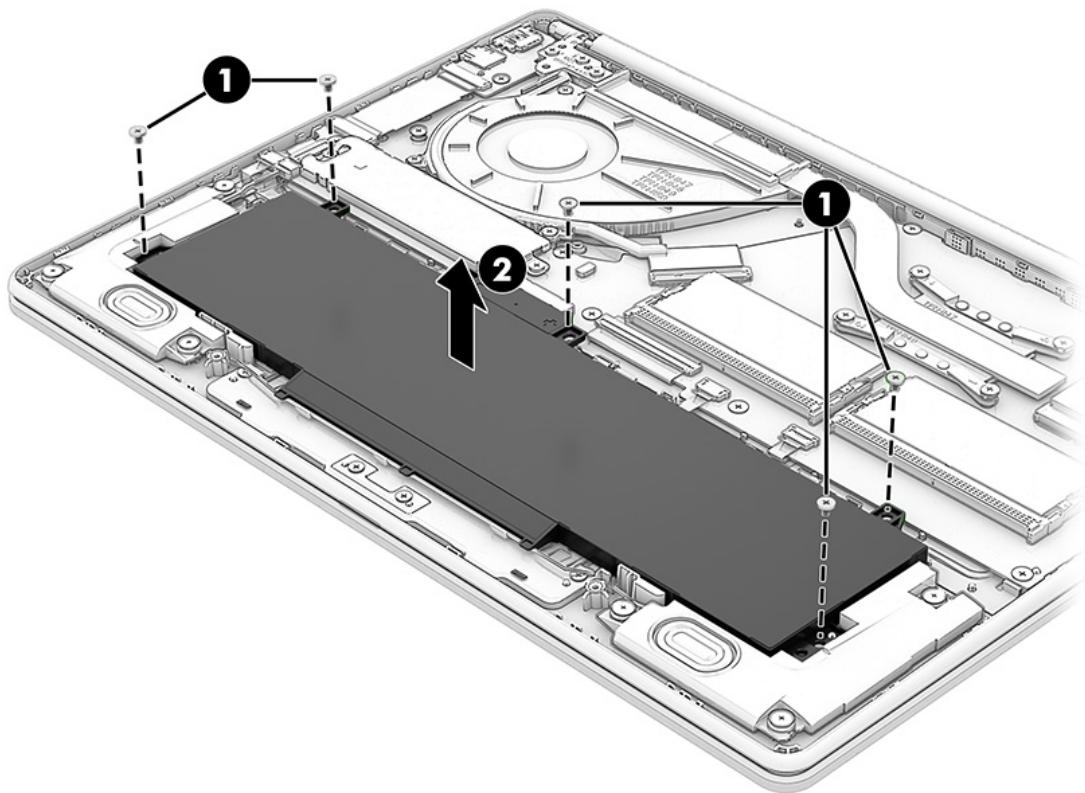

Reverse this procedure to install the battery.

📋 NOTE: When reinstalling the battery, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.

Installing a new battery

Use these procedures and illustrations to replace the battery. You must use a revive kit to remove the old battery and install a new one. The revive kit includes an empty containment tray and a containment tray with a battery preinstalled.

Table 5-2 Battery description and part number

Description	Spare part number
Battery (3 cell, 60 Whr)	P53583-001

Before starting this replacement procedure:

- Ensure other individuals are sufficiently clear of your workspace.
- Ensure your workspace is clear of any flammable material such as paper or oils.
- Locate the nearest ABC dry chemical fire-extinguisher for use in an emergency.

 **WARNING!** This procedure requires removing the battery or disconnecting the battery cable. Use care to avoid bending, twisting, or puncturing the battery regardless of its condition. Failure to follow this replacement guide or to use HP recommended tools might damage the system and/or cause a safety hazard.

- Do *not* remove the battery from the containment tray.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

Should a part become stuck or difficult to remove when opening a unit where a swollen battery is suspected, or if the battery becomes stuck in the unit, stop, and contact HP Support for assistance. Do not try to remove a battery by force.

 **NOTE:** Screw locations, latch locations, and internal components might vary.

Before removing the battery, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).

 **WARNING!** To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

 **IMPORTANT:** Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.


Remove the battery:

1. To remove the battery using the revive kit:


- a. Open the empty battery containment tray.




- b. Remove the paper backing layer from the adhesive on the tray.

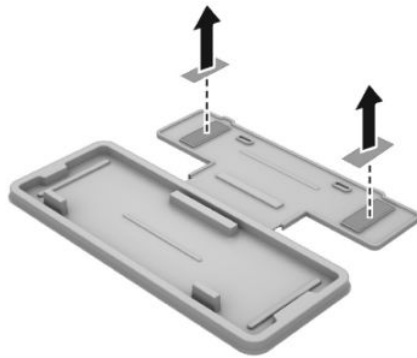


- c. Turn the tray **(1)** over so that the adhesive is facing down.
- d. Place the tray **(2)** centered on the battery.
- e. Press down on the indentations on the tray **(3)** to adhere it to the battery.

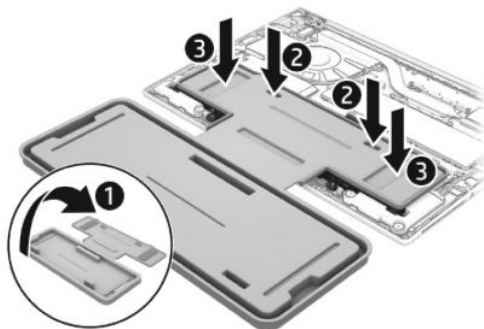

- f. Remove the Phillips screws **(1)** that secure the battery to the computer. Screw locations might vary.
- g. Lift the top of the tray **(2)** to remove the battery from the computer.

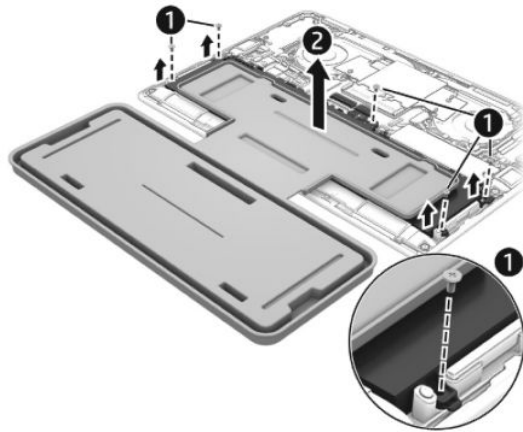


- h. Rotate the battery up and over into the cavity of the containment tray.

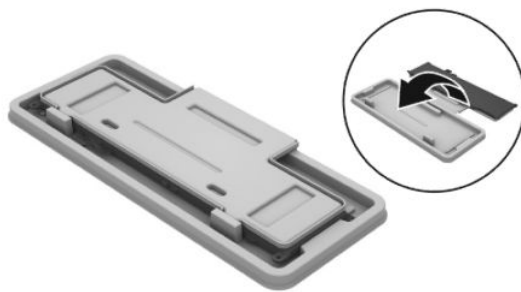


 **NOTE:** Please recycle responsibly. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

- 2. To install the battery using the revive kit:
 - a. Open the containment tray that includes the new battery.
 - b. Turn the tray **(1)** over so the battery is facing downward, and then insert the battery **(2)** into the computer. Adhesive secures the battery to the tray.

 **NOTE:** To avoid damage when inserting the battery into the computer, be sure that the power connector on the battery lines up and successfully mates with the connector on the system board.

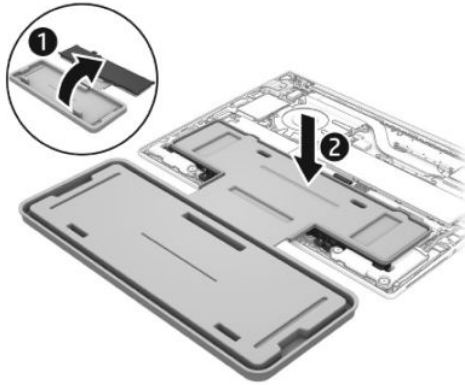

- c. Install the screws (1) to secure the battery. Screw locations might vary.
- d. Lift the containment tray (2) off the battery,

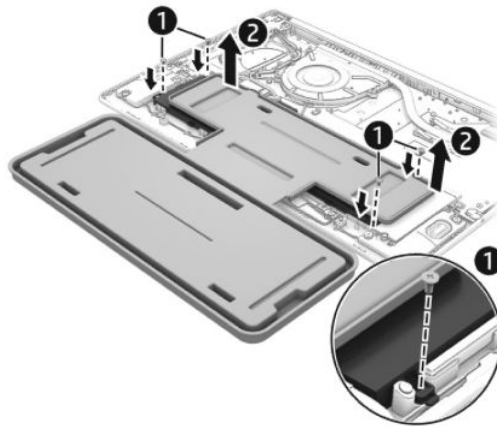

NOTE: When replacing the battery, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.

6 Removal and replacement procedures for authorized service provider parts

This chapter provides removal and replacement procedures for authorized service provider parts.

-  **IMPORTANT:** Only an authorized service provider should access the components described in this chapter. Accessing these parts can damage the computer or void the warranty.
-  **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.
-  **NOTE:** The [HP Support YouTube Channel](#) (in English) has videos that provide step-by-step removal and replacement instructions for many common parts and models.

Component replacement procedures

Use the procedures described in this section to remove and replace computer components.

-  **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com/>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

Use these procedures to remove and replace computer components.

For initial safety procedures, see [Removal and replacement procedures preliminary requirements on page 24](#).

1. Turn off the computer. If you are unsure whether the computer is off or in hibernation or sleep mode, turn the computer on, and then shut it down through the operating system.
2. Disconnect power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Solid-state drive

Use this procedure and illustration to remove the SSD.

Table 6-1 SSD descriptions and part numbers

Description	Spare part number
256 GB 2280, PCIe 4x4 NVMe Val nM	N77391-005
512 GB 2280, PCIe 4x4 NVMe Val nM	N77392-005
1 TB 2280, PCIe 4x4 NVMe Val nM	N77394-005

Table 6-1 SSD descriptions and part numbers (continued)


Description	Spare part number
256 GB Gen 3 2280, PCIe NVMe Val	P90856-005

Before removing the SSD, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Remove the battery (see [Battery on page 35](#)).

Remove the SSD:

1. Remove the Phillips M2.0 × 2.5 screw **(1)** that secures the drive to the computer.
2. Pull the drive **(2)** away from the socket to remove it.

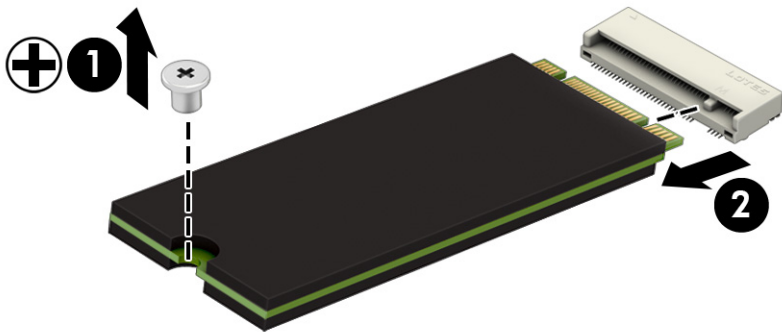

Reverse this procedure to install the SSD.



NOTE: SSDs are designed with a notch to prevent incorrect insertion.

Memory modules

To remove the memory modules, use this procedure and illustration.

Table 6-2 Memory module descriptions and part numbers

Description	Spare part number
Memory module (DDR5-5600)	
32 GB (for use worldwide)	N77398-005
24 GB (for use worldwide)	N77399-005
16 GB (for use worldwide)	N77400-005

Table 6-2 Memory module descriptions and part numbers (continued)

Description	Spare part number
8 GB (for use worldwide)	P55196-005


Before removing a memory module, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 35](#)).

If you are replacing a memory module, remove the existing memory module:

- Spread the two retention clips outward **(1)** until the memory module tilts up at a 45° angle, and then remove the module **(2)**. Use the same procedure to remove all memory modules.

 **IMPORTANT:** To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

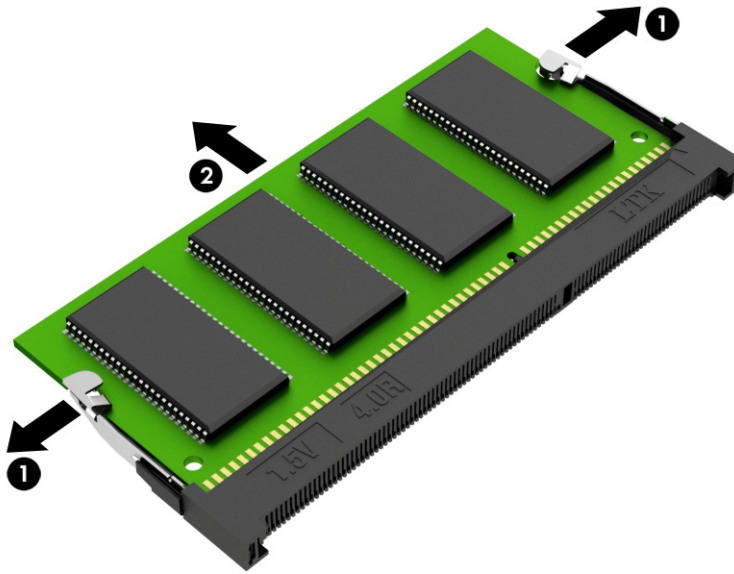


To protect a memory module after removal, place it in an electrostatic-safe container.

To install a memory module:

1. Align the notched edge of the module with the tab in the slot **(1)**, and then press the module into the slot at an angle until it is seated **(2)**.

2. Press down on the module until the side retention clips snap into place (3).

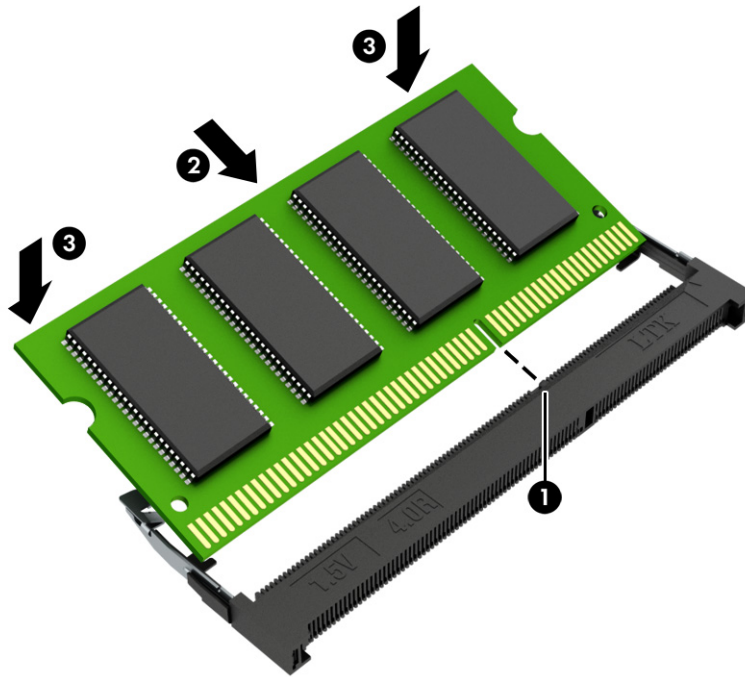

WLAN module

Use this procedure and illustration to install the WLAN module.

Table 6-3 WLAN module descriptions and part numbers

Description	Spare part number
Realtek Cass RTL 8852BE-VT and Bluetooth 5.4	P06350-005
MediaTek MT7920 M.2 2230 Wi-Fi 6 and Bluetooth 5.4	P17386-005
Realtek Chivas 8922AE-VS M.2 2230 Wi-Fi 7 and Bluetooth 6.0	P44408-005

 **IMPORTANT:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Remove the battery (see [Battery on page 35](#)).

Remove the WLAN module:


1. Carefully disconnect the two antenna cables (1) from the module.

2. Remove the Phillips M2.0 × 2.5 screw (2), and then remove the WLAN module (3).

 **NOTE:** Models have either one or two WLAN antennas. On models with two antennas, the #1 white WLAN antenna cable connects to the WLAN module #1 Main terminal. The #2 black WLAN antenna cable connects to the WLAN module #1 Aux terminal.

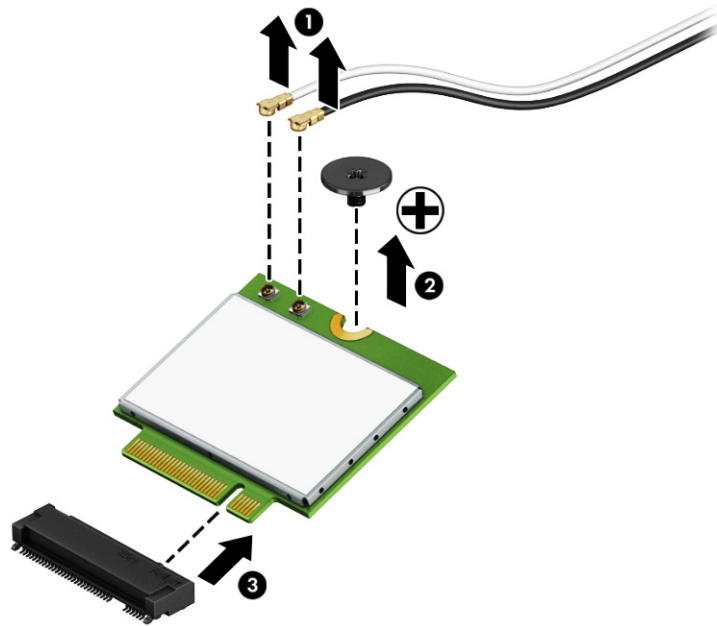

3. If the WLAN antenna is not connected to the terminal on the WLAN module, install a protective sleeve on the antenna connector, as shown in the following illustration.

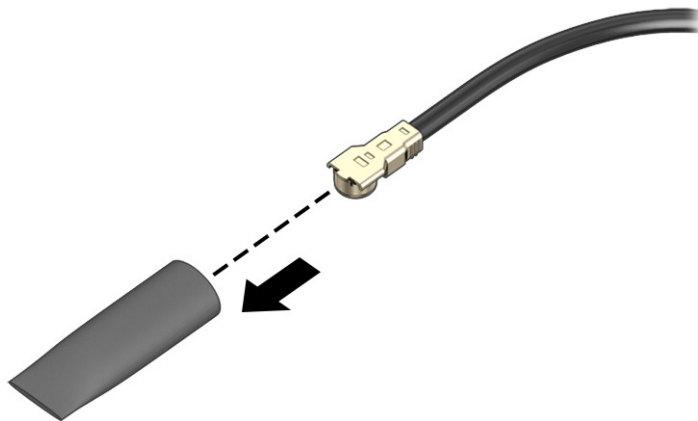

Reverse this procedure to install the WLAN module.

Speakers

Use this procedure and illustration to remove the speakers.

Table 6-4 Speaker description and part number


Description	Spare part number
Speaker Kit	P80880-001

Before removing the speakers, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Remove the battery (see [Battery on page 35](#)).

Remove the speakers:

1. Disconnect the speaker cable (1).
2. Remove cable from routing path along the bottom of computer (2).
3. Remove the six Phillips M2.0 × 4.0 screws (3) that secure each speaker to the computer.
4. Remove the speakers (4) from the computer.

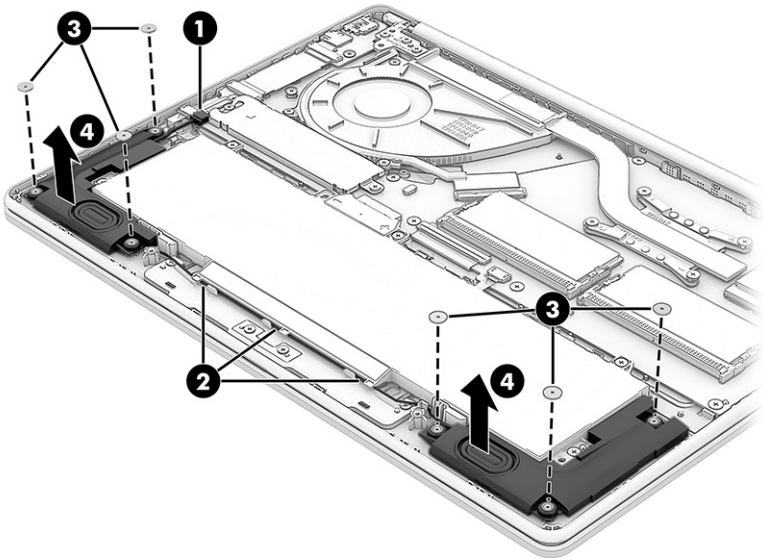

Reverse this procedure to install the speakers.

Touchpad

Use this procedure and illustration to remove the touchpad.

Table 6-5 Touchpad description and part number


Description	Spare part number
Iron gray	P90298-001
Darker meteor silver	P90299-001

Before removing the touchpad, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Remove the battery (see [Battery on page 35](#)).


Remove the touchpad:

1. Remove the four Phillips M2.0 × 3.0 screws **(1)** that secure the touchpad bracket to the computer.
2. Remove the touchpad bracket from the computer **(2)**.

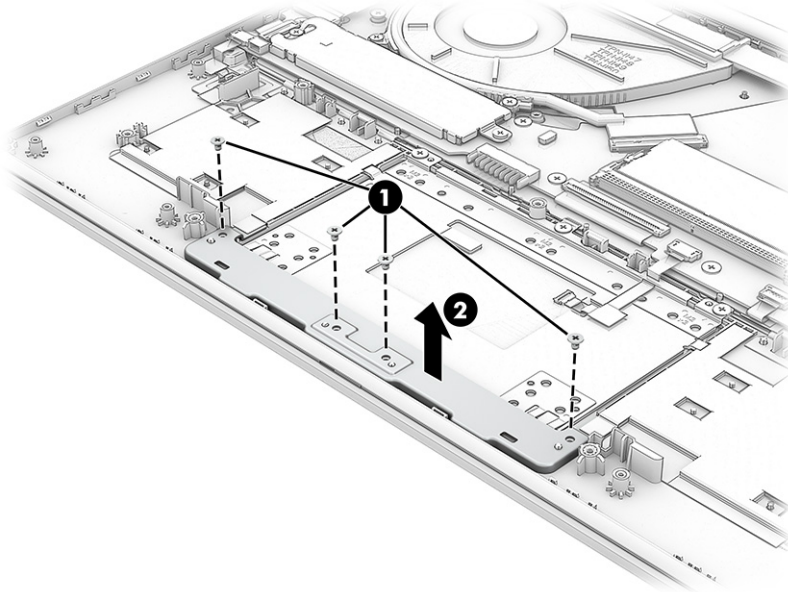

3. Disconnect the cable from the ZIF connector **(1)** on the touchpad.
4. Remove the three Phillips M2.0 × 3.0 screws **(2)** that secure the touchpad to the computer.

5. Remove the touchpad (3) from the computer.

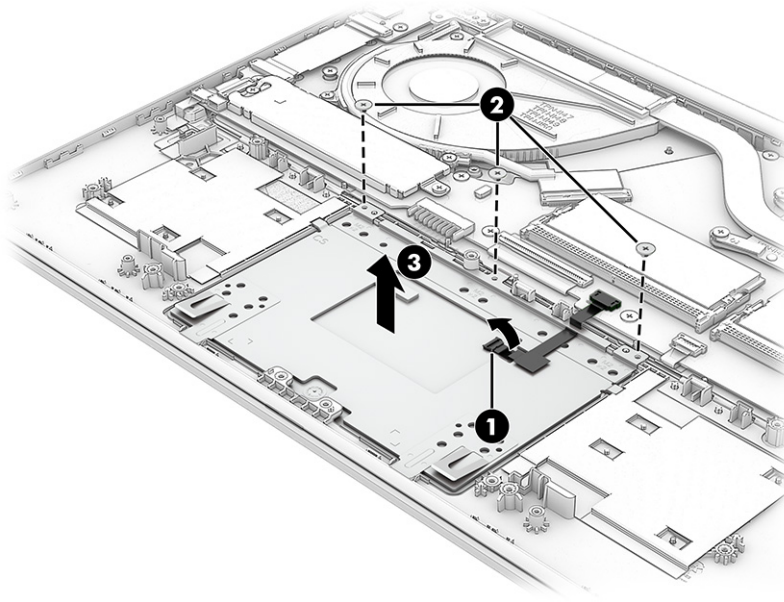

Reverse this procedure to install the touchpad.

Fingerprint reader (select products only)

To remove the fingerprint reader, use this procedure and illustration.

Table 6-6 Fingerprint reader description and part number

Description	Spare part number
Fingerprint reader	P90297-001


Before removing the fingerprint reader, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 35](#)).
4. Remove the right speaker (see [Speakers on page 45](#)).


Remove the fingerprint reader:

1. Disconnect the cable from the ZIF connector on the fingerprint reader (1).

2. Remove the Phillips M2.0 × 3.5 screw **(2)** from the fingerprint reader bracket, and then remove the bracket **(3)**.

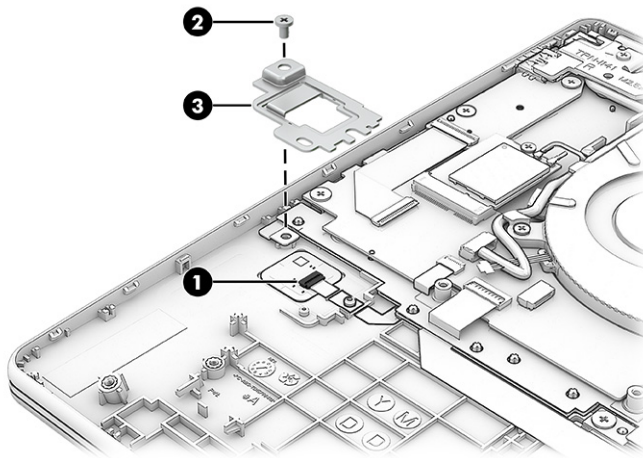


3. Remove the fingerprint reader from the computer. The fingerprint reader is secured with double-sided tape.

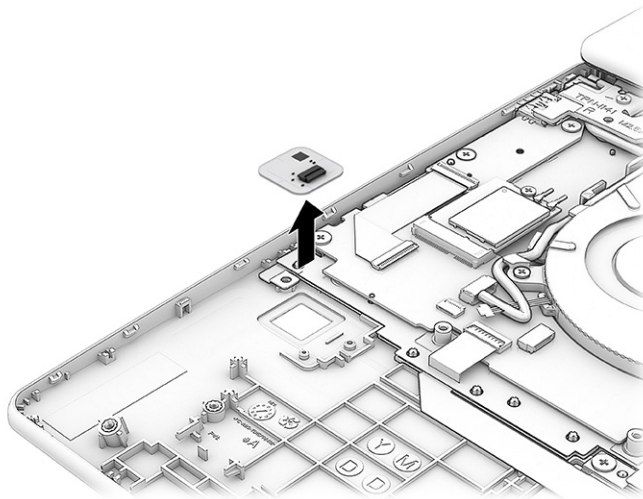

To install the fingerprint reader, reverse this procedure.

When replacing the fingerprint reader bracket, insert it into the tab on the computer chassis at an angle **(1)**, press it down into place **(2)**, and then install the screw **(3)**.

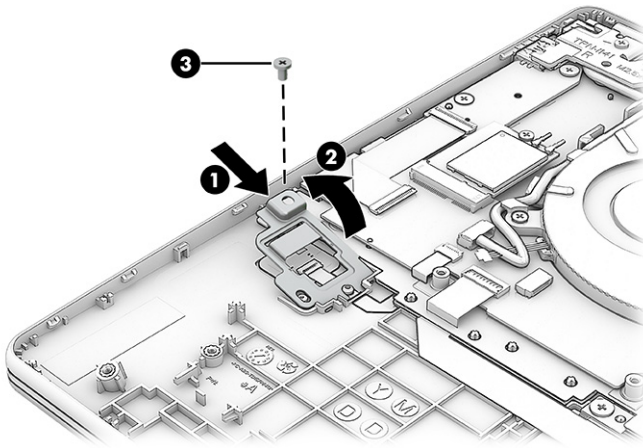

Fan

Use this procedure and illustration to remove the fan.

Table 6-7 Fan description and part number

Description	Spare part number
Fan, 40W	P80879-001
Fan, 15 W	P80878-001
Fan, 9W	P80877-001


Before removing the fan, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Remove the battery (see [Battery on page 35](#)).

Remove the fan assembly:

1. Disconnect the fan cable (**1**) from the system board.

2. Remove the three Phillips M2.0 × 5.0 screws (2) that secure the fan to the computer, and then remove the fan (3) from the computer.

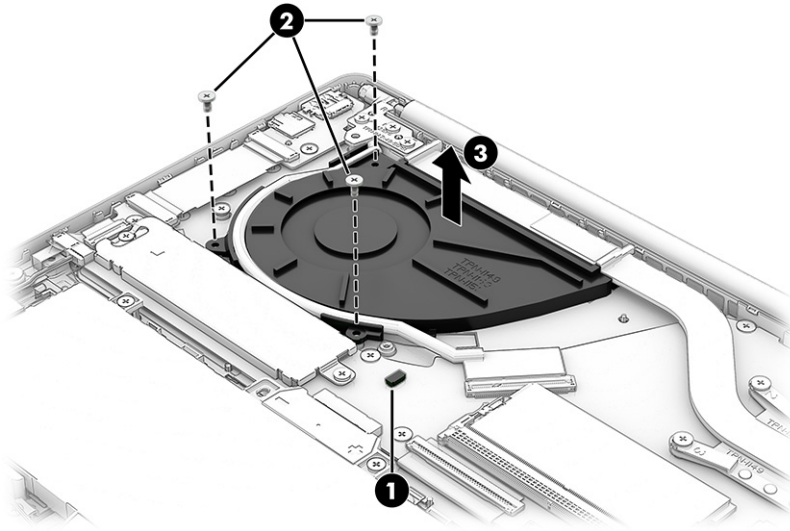

Reverse this procedure to install the fan.

Display assembly

Use these procedures and illustrations to remove and disassemble the display assembly.


Full hinge-up displays are not available as spare parts. Spare parts for displays are available only at the subcomponent level.

Before removing the display panel, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Remove the battery (see [Battery on page 35](#)).

Remove the display assembly:


1. Disconnect the display cable (1), and then disconnect the antenna cables from the WLAN module (2). Remove the display cable from the fan area.

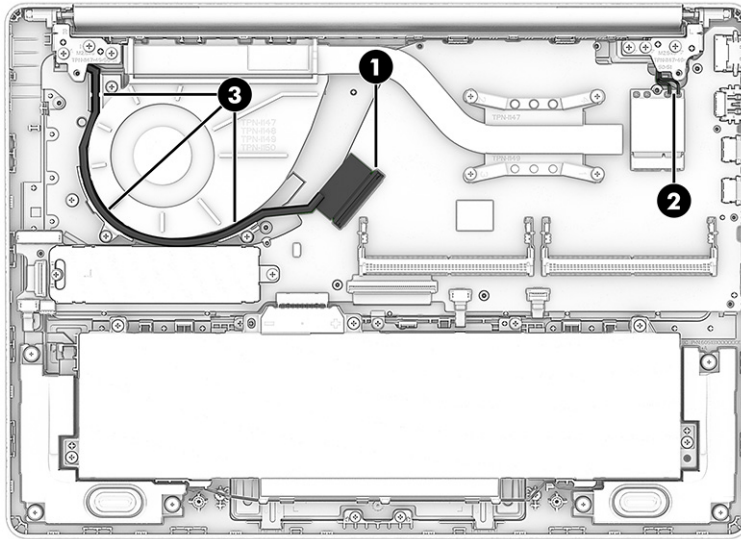

2. Rotate the display upward to open the hinges, and then remove the six Phillips M2.5 × 5.0 screws that secure the display assembly to the computer.

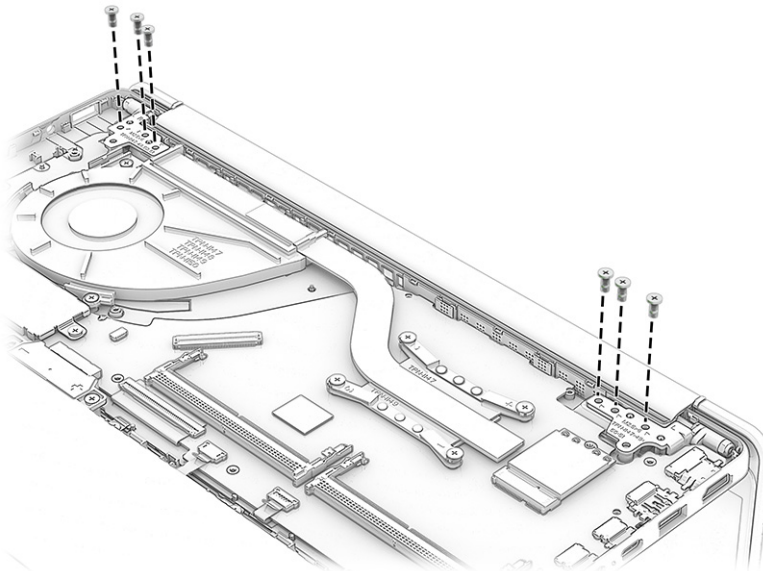


3. Rotate the display panel, and then separate the display panel from the computer.

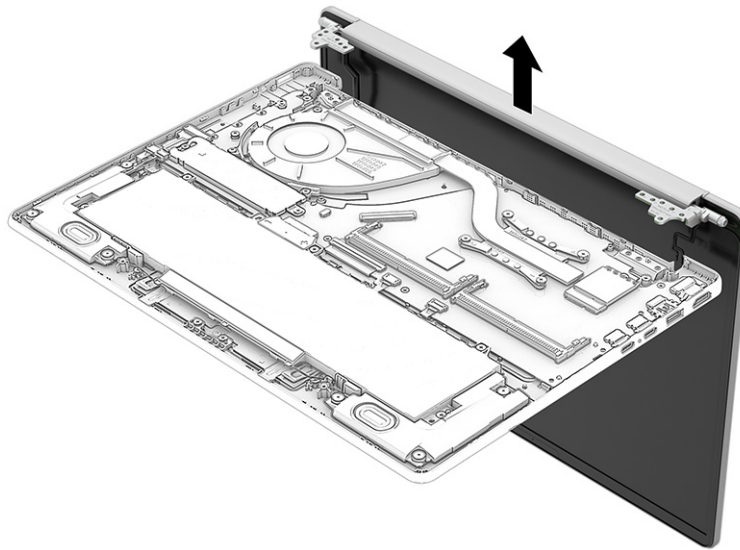

4. To replace display assembly subcomponents:
 - a. Flex the top **(1)** and the inside edges of the left and right sides **(2)** of the bezel to release it.
 - b. Slide a flat tool **(3)** across the inside of the bottom of the bezel **(4)** to release it, and then remove the bezel **(5)** from the display.

 **NOTE:** To avoid damaging the panel, do not use a tool to release the inside of the bezel. You can use a tool only when you insert it from the outside of the top, left, and right sides of the bezel. Use your fingers to lift up on the bezel. Avoid pressing down on the panel during removal.


The bezel is available as spare part numbers P90292-001 (iron gray), P90293-001 (darker meteor silver), and P90295-001 (darker meteor silver IR model).

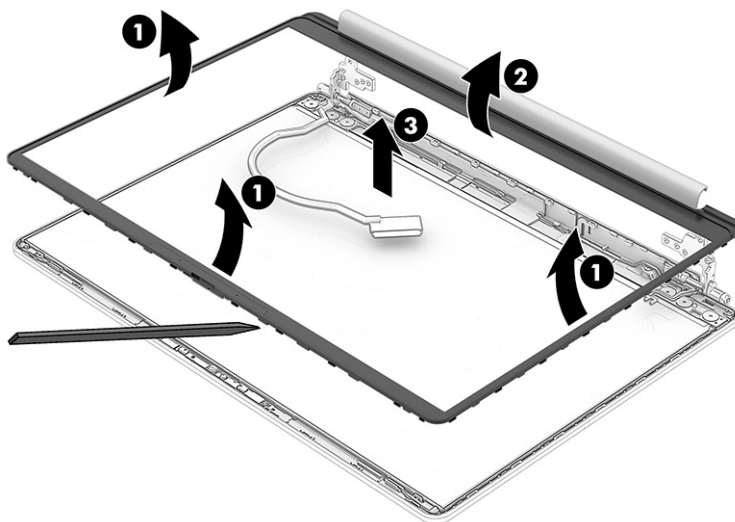

5. To remove the hinges from the display enclosure:

- a. Remove the three Phillips broadhead M2.0 × 2.0 screws **(1)** from each hinge.
- b. Remove the two Phillips M2.5 × 5.0 screws **(2)** from the edge.
- c. Remove the hinges **(3)** from the display.

The display hinges are available as spare part numbers P99575-001 (plastic) and P99576-001 (aluminum).

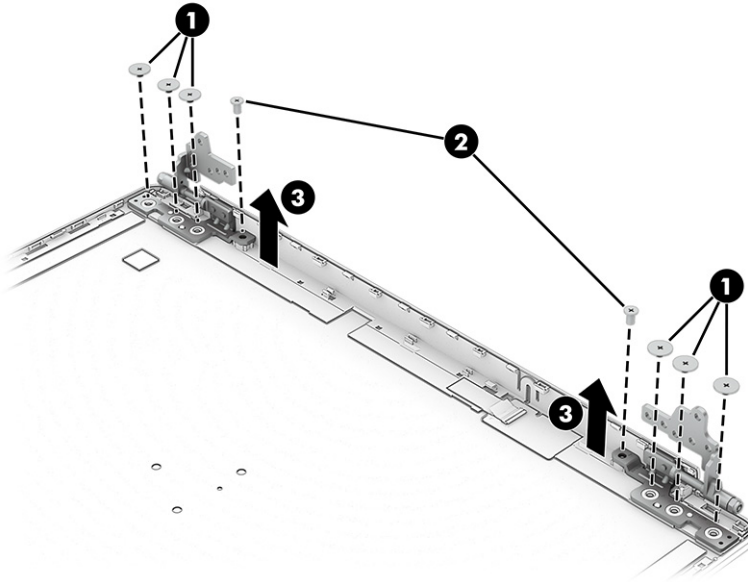

6. To remove the display panel:
 - a. The display panel is secured to the display enclosure with tape that is installed under the left and right sides of the panel. To remove the panel, use tweezers to grasp the end of the tape **(1)**.
 - b. Disconnect the OLED cable **(2)**.
 - c. Tilt and lift out the display. Remove the cover tape **(3)**.
 - d. Lift the retainer bar **(4)**.




NOTE: Be sure that the pull tabs on the adhesive strips are visible before replacing the cover.

Display panels are available as the following spare part numbers:

P92369-001: 14 inch, (1920x1200), widescreen ultra extended graphics array (WUXGA), brightview, low blue light, 300 nits.

P92370-001: 14 inch, (2240 × 1400), ultra wide viewing angle (UWVA), antiglare, low blue light, 300 nits, sRGB 100 FHD IR.


P92371-001: 14 inch, (2240 × 1400), ultra wide viewing angle (UWVA), brightview, OLED, 300 nits.

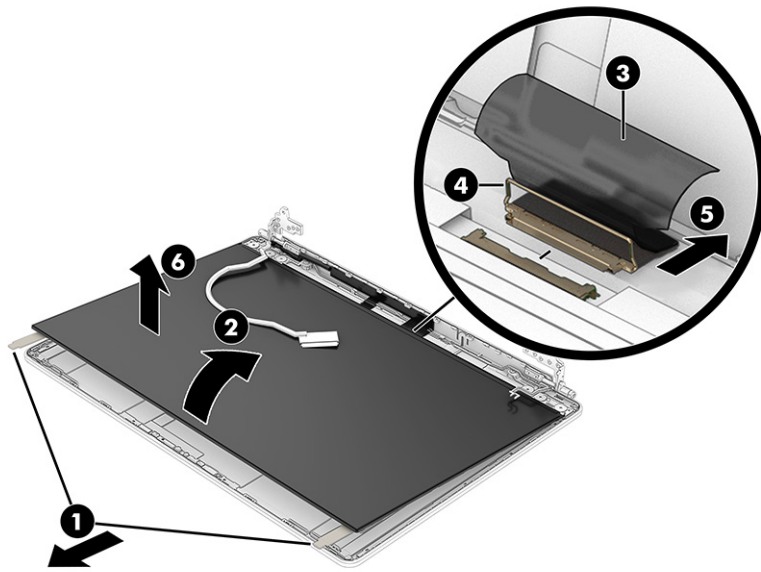


 **NOTE:** When replacing the touch control board or display panel, be sure to update the touch firmware, available on the [HP product support](#) page.

7. To remove the camera module:


- Lift up evenly across the module (1) and peel the module up from the display back cover, and then disconnect the cable from the reverse ZIF connector (2) on the module. Remove the module (3).

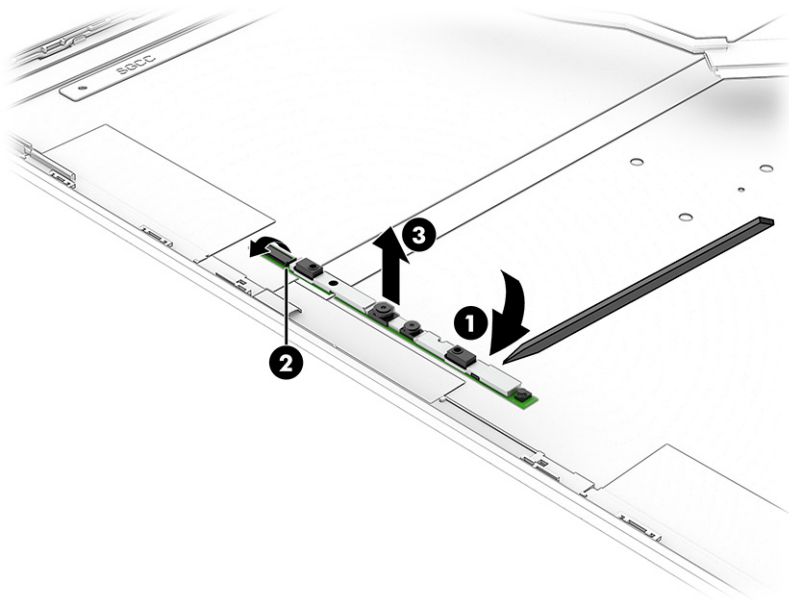

8. To remove the display/camera cable, peel the cable **(1)** off the inside of the display back cover, remove the cable from the clips **(2)** at the bottom of the display back cover, and then remove the cable **(3)**.

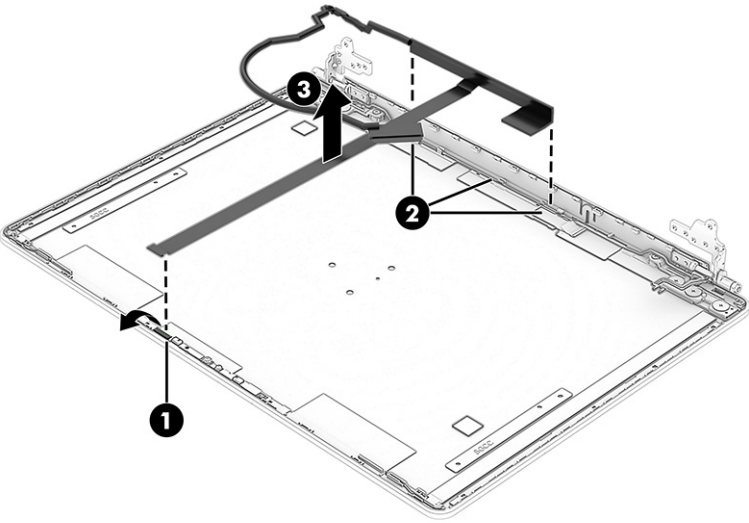

9. To remove the antenna cables, peel the antennas **(1)** off the inside of the display back cover, remove the cables from the clips **(2)** at the bottom of the cover, and then remove the antennas and cables **(3)**.

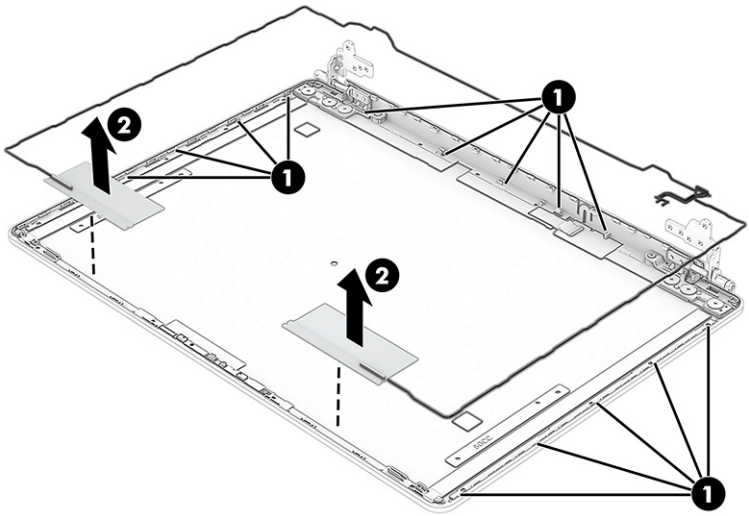

Reverse this procedure to reassemble and replace the display assembly.

System board

Use these procedures and illustrations to remove the system board.

Table 6-8 System board descriptions and part numbers

Description	Spare part number
System board for use in models with an AMD processor	

Table 6-8 System board descriptions and part numbers (continued)

Description	Spare part number
AMD Athlon Silver 10 processor 8GB	P92356-601
AMD Athlon Gold 20 processor 8 GB	P92357-601
AMD Ryzen 3 30 processor 16 GB	P92358-601
AMD Ryzen 3 30 processor 8 GB	P92359-601
AMD Ryzen 5 40 processor 16 GB	P92360-601
AMD Ryzen 5 40 processor 8 GB	P92361-601
AMD Ryzen 3 210 processor	P92362-601
AMD Ryzen 5 220 processor	P92363-601
AMD Ryzen 7 250 processor	P92364-601
AMD Ryzen 7 H 255 processor 16 GB	P92365-601
AMD Ryzen 7 H 255 processor 16 GB (PRC)	P92366-601
AMD Ryzen 7 H 255 processor 32 GB	P92367-601
AMD Ryzen 7 H 255 processor 32 GB (PRC)	P92368-601
System board for use in models with an Intel processor	
Intel N150 processor 8GB	P84373-601
Intel N250 processor 8GB	P84374-601
Intel Core 3 N355 8 GB	P84375-601
Intel N150 processor 8 GB with 128 GB UFS memory	P84376-601
Intel Core 3 N355 processor 8GB with 128 GB UFS memory	P84377-601
Intel Core 3 100 U processor	P84378-601
Intel Core 5 120U processor	P84379-601
Intel Core 5 220U processor	P84380-601
Intel Core 7 150U processor	P84381-601
Intel Core 5 220H processor 16 GB	P84382-601
Intel Core 5 220H processor 16 GB (PRC)	P84383-601
Intel Core 5 220H processor 32 GB	P84384-601
Intel Core 5 220H processor 32 GB (PRC)	P84385-601
Intel Core 7 240H processor 16 GB	P84386-601
Intel Core 7 240H processor 16 GB (PRC)	P84387-601
Intel Core 7 240H processor 16 GB	P84388-601
Intel Core 7 240H processor 16 GB	P84389-601

Before removing the system board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).


2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Remove the battery (see [Battery on page 35](#)).

When you replace the system board, be sure to remove the following components (as applicable) from the defective system board and install them on the replacement system board:


- Memory modules (see [Memory module on page 42](#)).
- WLAN module (see [WLAN module on page 44](#)).
- Heat sink (see [Heat sink on page 59](#)).

Remove the system board:

1. Disconnect the following cables from the system board:
 - WLAN cable (ZIF) **(1)**
 - Fans cable **(2)**
 - USB boards cable (ZIF) **(3)**
 - Power bracket cable **(4)**
 - Audio cable (ZIF) **(5)**
 - Memory cable **(6)**
 - Callout board cables (ZIF) **(7)**

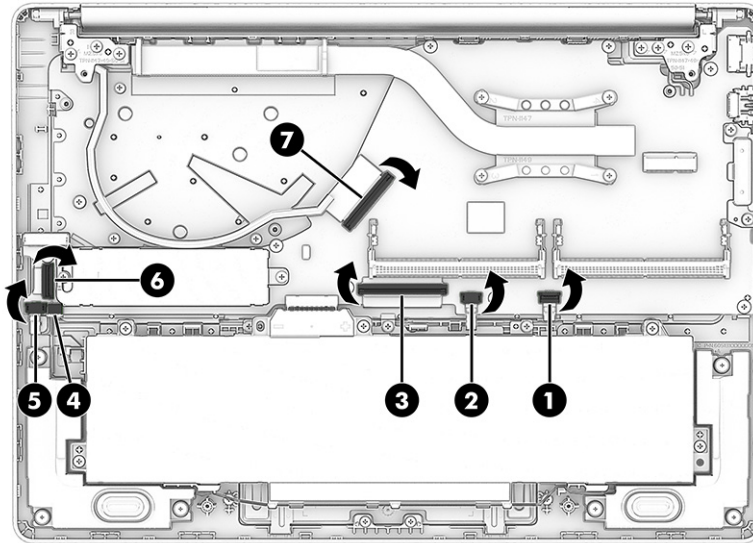

2. Remove the ten Phillips M2.0 × 5.0 screws **(1)** that secure the system board to the computer, and then remove the USB bracket **(2)**.

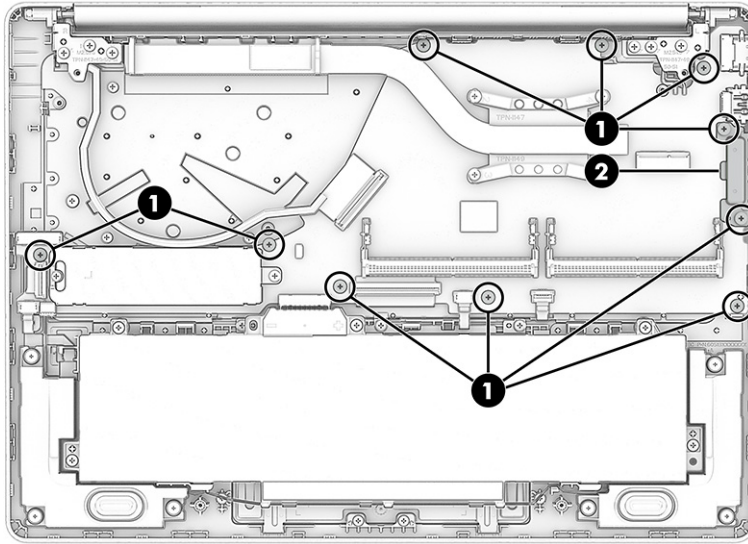

Reverse this procedure to install the system board.

Heat sink

Use these procedures and illustrations to remove the heat sink.

Table 6-9 Heat sink descriptions and part numbers

Description	Spare part number
9W	P80874-001
RPLU 15W	P80875-001
40W	P80876-001
TWL 15W	P84303-001
UMA 15W	P81304-001
UMA 40W	P81305-001


Before removing the heat sink, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Remove the battery (see [Battery on page 35](#)).


Remove the heat sink:

1. In the order indicated on the heat sink, remove the four Phillips M2.0 × 4.0 screws **(1)** that secure the heat sink to the computer.

2. Remove the heat sink (2) from the computer.

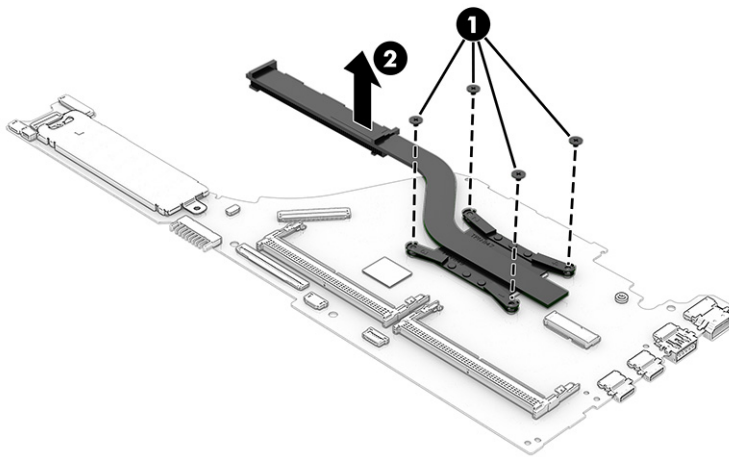

3. Thoroughly clean and replace the gray thermal paste on the heat sink each time it is removed. Each time the heat sink is removed, thoroughly clean and replace the gray thermal grease from the surface of the heat sink (1) and system board (2).

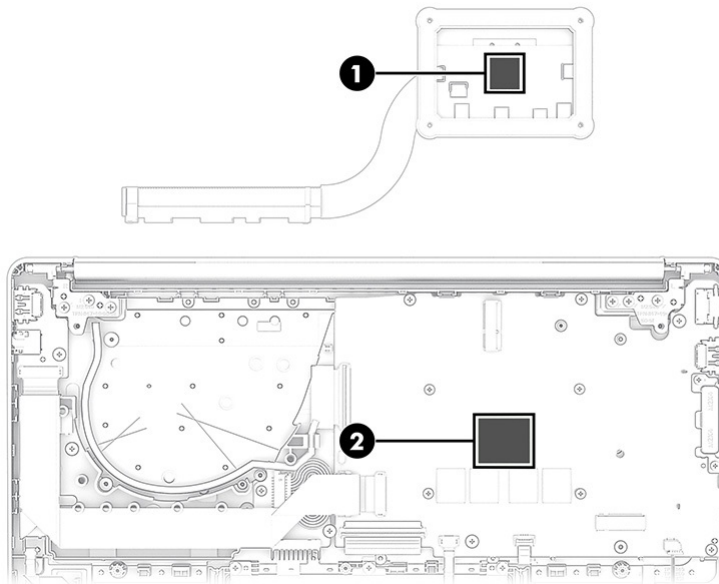

Reverse this procedure to install the heat sink.

USB board

Use this procedure and illustration to remove the USB board.

Table 6-10 USB board description and part number


Description	Spare part number
USB audio board w/ cable	P90296-001

Before removing the USB board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Remove the battery (see [Battery on page 35](#)).

Remove the USB board:

1. Disconnect the cable from the system board ZIF connector (1).
2. Remove the Phillips M2.0 × 3.0 screw (2) that secures the board to the computer.
3. Remove the board (3) from the computer.

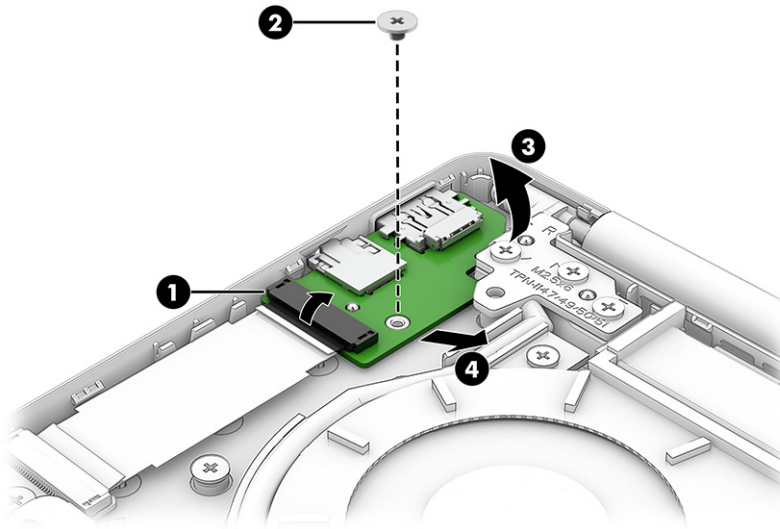

Reverse this procedure to install the USB board.

Keyboard with top cover

The top cover with keyboard remains after removing all other spare parts from the computer. In this section, the first table provides the main spare part numbers for the top cover with keyboards. The second table provides the country codes.

Table 6-11 Top cover with keyboard descriptions and part numbers

Description	Spare part number
Darker meteor silver with darker meteor silver touchpad, backlit	P92155-001
Darker meteor silver with darker meteor silver touchpad, backlit, fingerprint reader	P92156-001
Iron gray with iron gray touchpad, backlit	P92157-001
Darker meteor silver with iron gray touchpad, backlit	P92158-001
Darker meteor silver with iron gray touchpad, backlit, fingerprint reader	P92159-001

Table 6-12 Spare part country codes

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Belgium	-A41	Iceland	-DD1	Saudi Arabia	-171
Brazil	-201	India	-D61	Slovenia	-BA1
Bulgaria	-261	Israel	-BB1	South Korea	-AD1
Chile	-161	Italy	-061	Spain	-071
Czech Republic/Slovakia	-FL1	Japan	-291	Switzerland	-BG1
Denmark, Finland, and Norway	-DH1	Kazakhstan	-DF1	Taiwan	-AB1
French Canada	-DB1	The Netherlands	-B31	Thailand	-281
France	-051	Northern Africa	-FP1	Turkey	-141
Germany	-041	Portugal	-131	Ukraine	-BD1
Greece	-151	Romania	-271	United Kingdom	-031
Hungary	-211	Russia	-251	United States	-001

7 Backing up, restoring, and recovering

You can use Windows tools or HP software to back up your information, create a restore point, reset your computer, create recovery media, or restore your computer to its factory state. Performing these standard procedures can return your computer to a working state faster.

 **IMPORTANT:** If you are performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Backing up information and creating recovery media

These methods of creating recovery media and backups are available on select products only.

Using Windows tools for backing up

HP recommends that you back up your information immediately after initial setup. You can do this task either using Windows Backup locally with an external USB flash drive or using online tools.

 **NOTE:** If computer storage is 32 GB or less, Microsoft System Restore is disabled by default.

Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive (select products only)

You can use the HP Cloud Recovery Download Tool to create an HP Recovery bootable USB flash drive.

For details:

- Go to <http://www.hp.com>, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have and follow the on-screen instructions.

 **NOTE:** In select countries, if you cannot create the HP Recovery USB flash drive yourself, contact support. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

 **IMPORTANT:** HP recommends that you follow the [Restoring and recovery methods on page 64](#) to restore your computer before you obtain and use the HP USB flash drive. Using a recent backup can return your machine to a working state sooner than using the HP USB flash drive. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Restoring and recovering your system

You have several tools available to recover your system both within and outside of Windows if the desktop cannot load.

HP recommends that you attempt to restore your system using the [Restoring and recovery methods on page 64](#).

Creating a system restore

System Restore is available in Windows. The System Restore software can automatically or manually create restore points, or snapshots, of the system files and settings on the computer at a particular point.

When you use System Restore, it returns your computer to its state at the time you made the restore point. Your personal files and documents should not be affected.

Restoring and recovery methods

After you run the first method, test to see whether the issue still exists before you proceed to the next method, which might now be unnecessary.

1. Run a Microsoft System Restore.
2. Run Reset this PC.



NOTE: The options **Remove everything** and then **Fully clean the drive** can take several hours to complete and leave no information on your computer. It is the safest way to reset your computer before you recycle it.

3. Recover using the HP Recovery USB flash drive. For more information, see [Recovering using the HP Recovery USB flash drive on page 64](#).

For more information about the first two methods, see the Get Help app:

- Select the **Start** button, select **All apps**, select the **Get Help** app, and then enter the task you want to perform.



NOTE: You must be connected to the internet to access the Get Help app.

Recovering using the HP Recovery USB flash drive

You can use the HP Recovery USB flash drive to recover the operating system and drivers that were installed at the factory. On select products, you can create recovery media on a bootable USB flash drive using the HP Cloud Recovery Download Tool.

For details, see [Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive \(select products only\) on page 63](#).



NOTE: In select countries, if you cannot create the HP Recovery USB flash drive yourself, contact support. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

To recover your system:

- Insert the HP Recovery USB flash drive, and then restart the computer.



NOTE: HP recommends that you follow the [Restoring and recovery methods on page 64](#) to restore your computer before you obtain and use the HP USB flash drive. Using a recent backup can return your machine to a working state sooner than using the HP USB flash drive. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Changing the computer boot order

If your computer does not restart using the HP Recovery USB flash drive, you can change the computer boot order, which is the order of devices listed in BIOS for startup information.



IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

To change the boot order:

1. Insert the HP Recovery USB flash drive.
2. Access the system **Startup** menu.
 - For computers or tablets with keyboards attached, turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.
 - For tablets without keyboards, turn on or restart the tablet, and then quickly press and hold one of the following buttons:
 - Volume up
 - Volume down

Then select **f9**.
3. Select the USB flash drive to boot from, and then follow the on-screen instructions.

Using HP Sure Recover (select products only)

Select computer models are configured with HP Sure Recover, a PC operating system (OS) recovery solution built into the hardware and software. HP Sure Recover can fully restore the HP OS image without installed recovery software.

Using HP Sure Recover, an administrator or user can restore the system and install:

- Latest version of the OS
- Platform-specific device drivers
- Software applications, in the case of a custom image

To access the latest documentation for HP Sure Recover, go to <http://www.hp.com/support>. Follow the on-screen instructions to find your product and locate your documentation.

8 Computer Setup (BIOS), TPM, and HP Sure Start

HP provides several tools to help set up and protect your computer.

Using Computer Setup

Computer Setup, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as hard drives, display, keyboard, mouse, and printer). Computer Setup includes settings for types of devices installed, the startup sequence of the computer, and amount of system and extended memory.



NOTE: Use extreme care when making changes in Computer Setup. Errors can prevent the computer from operating properly.

To start Computer Setup, turn on or restart the computer, and when the HP logo appears, press **F10** to enter Computer Setup.

Navigating and selecting in Computer Setup

You can navigate and select in Computer Setup using one or more methods.

- To select a menu or a menu item, use the **Tab** key and the keyboard arrow keys and then press **Enter**, or use a pointing device to select the item.
- To scroll up and down, select the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key on the keyboard.
- To close open dialog boxes and return to the main Computer Setup screen, press **Esc**, and then follow the on-screen instructions.

To exit Computer Setup, choose one of the following methods:

- To exit Computer Setup menus without saving your changes, select **Main**, select **Ignore Changes and Exit**, and then select **Yes**.



NOTE: If you are using arrow keys to highlight your choice, you must then press **Enter**.

- To save your changes and exit Computer Setup menus, select **Main**, select **Save Changes and Exit**, and then select **Yes**.



NOTE: If you are using arrow keys to highlight your choice, you must then press **Enter**.

Your changes go into effect when the computer restarts.

Restoring factory settings in Computer Setup

To return all settings in Computer Setup to the values that were set at the factory, follow these steps.



NOTE: Restoring defaults will not change the hard drive mode.

1. Start Computer Setup. See [Using Computer Setup on page 66](#).
2. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

 **NOTE:** On select products, the selections might display **Restore Defaults** instead of **Apply Factory Defaults and Exit**.

Your changes go into effect when the computer restarts.

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

Updating the BIOS

Updated versions of the BIOS might be available on the HP website. Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named Readme.txt, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Computer Setup (BIOS), first determine the BIOS version on your computer.

If you are already in Windows, you can access BIOS version information (also known as *ROM date* and *System BIOS*) by pressing **fn+esc** (select products only). Or you can use Computer Setup.

1. Start Computer Setup. See [Using Computer Setup on page 66](#).
2. Select **Main**, and then select **System Information**.
3. To exit Computer Setup menus without saving your changes, select **Main**, select **Ignore Changes and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

To check for later BIOS versions, see [Preparing for a BIOS update on page 67](#).

Preparing for a BIOS update

Be sure to follow all prerequisites before downloading and installing a BIOS update.

 **IMPORTANT:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to the following types of reliable external power:

- The HP AC adapter provided with the computer (select products only)
 - A replacement AC adapter provided by HP
 - An AC adapter with the power rating specified on the product label
-

Do not download or install a BIOS update while the computer is operating under these circumstances:

- Running on battery power

- Docked in an optional docking device
- Connected to an optional docking power source

During the download and installation, follow these instructions:

- Do not disconnect power on the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.

Downloading a BIOS update

After you review the prerequisites, you can check for and download BIOS updates.

1. Perform one of these tasks:
 - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
 - Select the question mark icon (select products only) in the taskbar.
2. Select **Updates**, and then select **Check for updates and messages**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You might need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.



NOTE: If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

Installing a BIOS update

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete. If no instructions are displayed, follow these steps.

1. Select the **Search** icon in the taskbar, type `file` in the search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.



NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Changing the boot order using the f9 prompt

To dynamically choose a boot device for the current startup sequence, follow these steps.

1. Access the Boot Device Options menu:
 - Turn on or restart the computer, and when the HP logo appears, press **f9** to enter the Boot Device Options menu.
2. Select a boot device, press **enter**, and then follow the on-screen instructions.

9 Using HP PC Hardware Diagnostics

You can use the HP PC Hardware Diagnostics utility to determine whether your computer hardware is running properly. The three versions are HP PC Hardware Diagnostics Windows, HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface), and (for select products only) Remote HP PC Hardware Diagnostics UEFI, a firmware feature.

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 71](#).

Using an HP PC Hardware Diagnostics Windows hardware failure ID code

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit failure ID code is generated for select component tests. For interactive tests, such as keyboard, mouse, or audio and video palette, you must perform troubleshooting steps before you can receive a failure ID.

You have several options after you receive a failure ID:

- Select **Next** to open the Event Automation Service (EAS) page, where you can log the case.
- Scan the QR code with your mobile device, which takes you to the EAS page, where you can log the case.
- Select the box next to the 24-digit failure ID to copy your failure code and send it to support.

Accessing HP PC Hardware Diagnostics Windows

After HP PC Hardware Diagnostics Windows is installed, you can access it from HP Support Assistant or the Start menu.

Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Support Assistant.

1. Complete one of the following tasks:
 - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
 - Select the question mark icon in the taskbar.

2. Select **Fixes & Diagnostics**.
3. Select **Run hardware diagnostics**, and then select **Launch**.
4. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from the Start menu.

1. Select the **Start** button, and then select **All apps**.
2. Select **HP PC Hardware Diagnostics Windows**.
3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Downloading HP PC Hardware Diagnostics Windows

The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only. You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version from HP

To download HP PC Hardware Diagnostics Windows from HP, follow these steps.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Diagnose PC Hardware issues in Windows**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store

You can download the HP PC Hardware Diagnostics Windows from the Microsoft Store.

1. Select the Microsoft Store app on your desktop or select the **Search** icon in the taskbar, and then type `Microsoft Store` in the search box.
2. Type `HP PC Hardware Diagnostics Windows` in the **Microsoft Store** search box.
3. Follow the on-screen directions.

The tool downloads to the selected location.

Downloading HP PC Hardware Diagnostics Windows by product name or number (select products only)

You can download HP PC Hardware Diagnostics Windows by product name or number.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.

The tool downloads to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

HP PC Hardware Diagnostics Unified Extensible Firmware Interface (UEFI) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.



NOTE: For some products, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 73](#).

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

Using an HP PC Hardware Diagnostics UEFI hardware failure ID code

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit failure ID code is generated.

For assistance in solving the problem, complete one of these tasks:

- Select **Contact HP**, accept the HP privacy disclaimer, and then use a mobile device to scan the failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your failure ID and product number automatically filled in. Follow the on-screen instructions.
- Contact support, and provide the failure ID code.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow this procedure.

1. Turn on or restart the computer, and quickly press **esc**.

2. Press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive



NOTE: To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 74](#).

- b. Hard drive
- c. BIOS

3. When the diagnostic tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only)

This section describes how to start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software.



NOTE: You must disable Fast Boot to access HP PC Hardware Diagnostics UEFI from the HP System Information application.

To disable Fast Boot:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Boot Options**.
3. Clear **Fast Boot**.
4. Select **Save Changes and Exit**, and then select **Yes**.

To start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software, follow this procedure:

1. From the **Start** menu, open the HP System Information Application or press **fn+esc**.
2. In HP System Information screen, select **Run System Diagnostics**, select **Yes** to run the application, and then select **Restart**.



IMPORTANT: To prevent loss of data, save your work in all open apps before restarting your computer.



NOTE: When the restart is complete, the computer opens the HP PC Hardware Diagnostics UEFI Application. Proceed with the troubleshooting tests.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in some situations.

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.

- The hard drive is damaged.



NOTE: The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive, follow these steps.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Diagnose PC Hardware Issues outside of the OS**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

You can download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then run the diagnostics on your computer, and it might upload results to a preconfigured server.

For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, select **Diagnose Other Potential Issues**, scroll down to **Remote PC Hardware Diagnostics UEFI**, and then select **Learn More**.

Downloading Remote HP PC Hardware Diagnostics UEFI

Remote HP PC Hardware Diagnostics UEFI is also available as a SoftPaq that you can download to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

You can download the latest Remote HP PC Hardware Diagnostics UEFI version to a USB flash drive.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.

2. Select **Diagnose PC Hardware Issues outside of the OS**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

You can download Remote HP PC Hardware Diagnostics UEFI by product name or number.



NOTE: For some products, you might have to download the software by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform several customizations.

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics UEFI**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage, such as a hard drive or USB flash drive, to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **F10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.
3. Make your customization selections.
4. Select **Main**, then select **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

10 Specifications

This chapter provides specifications for your computer system.

Computer specifications

This section provides specifications for your computer. When you travel with your computer, the computer dimensions and weights, as well as input power ratings and operating specifications, provide helpful information.

Table 10-1 Computer specifications

	Metric	U.S.
Dimensions		
Width	314.5 mm	12.4 in
Depth	226.0 mm	8.9 in
Height (front to back)	17.95 mm	0.7 in
Weight		
	Starts from 1.4 kg	3.1 lb
Input power		
Operating voltage and current	20 V DC @ 2.25 A - 45 W	
	20 V DC @ 3.25 A - 65 W	
	20 V DC @ 5 A - 100 W	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft



NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.

Display specifications

This section provides specifications for your display.

Table 10-2 Display specifications

	Metric	U.S.
Active diagonal size	39.6 cm	15.6 in
Resolution	1920 × 1080 (FHD)	
	3840 × 2160 (UHD)	
Surface treatment	Antiglare (FHD, UHD panels)	
	Brightview (OLED panel)	
Brightness	250 nits (FHD, 45% NTSC panel)	
	300 nits (FHD, 72% NTSC/100% sRGB panels)	
	400 nits (UHD panel)	
Viewing angle	UWVA	
Backlight	WLED	
	AMOLED	
Display panel interface	eDP	

Solid-state drive specifications

This section provides specifications for your SSDs.

Table 10-3 SSD specifications

	256 GB*	256 GB OPAL2*	512 GB*	512 GB TLC*	1 TB/2 TB*
Dimensions					
Height	2.3 mm	2.3 mm	2.3 mm	2.3 mm	2.3 mm
Length	80 mm	80 mm	80 mm	80 mm	80 mm
Width	22 mm	22 mm	22 mm	22 mm	22 mm
Weight	< 10 g	< 10 g	< 10 g	< 10 g	< 10 g
Interface type	PCIe	PCIe	PCIe	PCIe	PCIe
Ready time, maximum (to not busy)	1.0 ms	1.0 ms	< 1.0 ms	< 1.0 ms	1.0 ms
Access times, logical	0.1 ms	0.1 ms	0.1 ms	0.1 ms	0.1 ms
Transfer rate					
Sequential read	Up to 3100 MBps	Up to 3100 MBps	Up to 3500 MBps	Up to 6450 MBps	Up to 6400 MBps
Random read	Up to 300,000 IOPs	Up to 300,000 IOPs	Up to 300,000 IOPs	Up to 300,000 IOPs	Up to 300,000 IOPs
Sequential write	Up to 1200 MBps	Up to 1200 MBps	Up to 1600 MBps	Up to 3500 MBps	Up to 5000 MBps
Random write	Up to 100,000 IOPs	Up to 100,000 IOPs	Up to 100,000 IOPs	Up to 100,000 IOPs	Up to 100,000 IOPs

Table 10-3 SSD specifications (continued)

	256 GB*	256 GB OPAL2*	512 GB*	512 GB TLC*	1 TB/2 TB*
Total logical sectors	500,118,192	1,000,215,216	1,000,215,216	1,000,215,216	1 TB: 2,000,409,264 2 TB: 4,000,797,360
Operating temperature	0°C to 70°C (32°F to 158°F)	0°C to 70°C (32°F to 158°F)	0°C to 70°C (32°F to 158°F)	0°C to 70°C (32°F to 158°F)	0°C to 70°C (32°F to 158°F)

*Actual accessible capacity is less. Actual drive specifications might differ slightly.



NOTE: Certain restrictions and exclusions apply. Contact support for details.

11 Statement of memory volatility

For general information regarding nonvolatile memory in HP business computers, and to restore nonvolatile memory that can contain personal data after the system has been turned off and the hard drive has been removed, use these instructions.

HP business computer products that use Intel®-based or AMD®-based system boards contain volatile DDR memory. The amount of nonvolatile memory present in the system depends upon the system configuration. Intel-based and AMD-based system boards contain nonvolatile memory subcomponents as originally shipped from HP, with the following assumptions:

- No subsequent modifications were made to the system.
- No applications, features, or functionality were added to or installed on the system.

Following system shutdown and removal of all power sources from an HP business computer system, personal data can remain on volatile system memory (DIMMs) for a finite period of time and also remains in nonvolatile memory. Use the following steps to remove personal data from the computer, including the nonvolatile memory found in Intel-based and AMD-based system boards.



NOTE: If your tablet has a keyboard base, connect to the keyboard base before beginning steps in this chapter.

Current BIOS steps

Use these instructions to restore nonvolatile memory.

1. Follow these steps to restore the nonvolatile memory that can contain personal data. Restoring or reprogramming nonvolatile memory that does not store personal data is neither necessary nor recommended.
 - a. Turn on or restart the computer, and then quickly press **esc**.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- b. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes** to load defaults. The computer restarts.
- c. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- d. Select the **Security** menu, select **Restore Security Settings to Factory Defaults**, and then select **Yes** to restore security level defaults. The computer restarts.
- e. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- f. If an asset or ownership tag is set, select the **Security** menu and scroll down to the **Utilities** menu. Select **System IDs**, and then select **Asset Tracking Number**. Clear the tag, and then make the selection to return to the prior menu.
- g. If a DriveLock password is set, select the **Security** menu, and scroll down to **Hard Drive Utilities** under the **Utilities** menu. Select **Hard Drive Utilities**, select **DriveLock**, and then clear the check box for **DriveLock password on restart**. Select **OK** to proceed.
- h. Select the **Main** menu, and then select **Reset BIOS Security to factory default**. Select **Yes** at the warning message. The computer restarts.
- i. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- j. Select the **Main** menu, select **Apply Factory Defaults and Exit**, select **Yes** to save changes and exit, and then select **Shutdown**.
 - k. Restart the system. If the system has a TPM, fingerprint reader, or both, one or two prompts will appear—one to clear the TPM and the other to Reset Fingerprint Sensor. Press or tap **f1** to accept or **f2** to reject.
 - l. Remove all power and system batteries for at least 24 hours.
2. Complete one of the following tasks:
- Remove and retain the storage drive.
 - Clear the drive contents by using a third-party utility designed to erase data from an SSD.
 - Clear the contents of the drive by using the following BIOS Setup Secure Erase command option steps:



NOTE: If you clear data using Secure Erase, you cannot recover it.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select the **Security** menu and scroll down to the **esc** menu.
- c. Select **Hard Drive Utilities**.
- d. Finish by completing one of these tasks:
 - Under **Utilities**, select **Secure Erase**, select the hard drive storing the data you want to clear, and then follow the on-screen instructions to continue.
 - Clear the contents of the drive using the following Disk Sanitizer commands steps:
 - i. Turn on or restart the computer, and then quickly press **esc**.
 - ii. Select the **Security** menu and scroll down to the **Utilities** menu.
 - iii. Select **Hard Drive Utilities**.

- iv. Under **Utilities**, select **Disk Sanitizer**, select the hard drive with the data that you want to clear, and then follow the on-screen instructions to continue.



NOTE: The amount of time it takes for Disk Sanitizer to run can be several hours. Plug the computer into an AC outlet before starting.

Nonvolatile memory usage

Use this table to troubleshoot nonvolatile memory usage.

Table 11-1 Troubleshooting information for nonvolatile memory usage

Description	Volatility description	Storage user data	How to erase
Primary storage device, holds the OS, applications, and application settings	Nonvolatile, 8-256 GB of eMMC or NVMe SSD storage, removable	Yes ¹	See Current BIOS steps on page 79 for information about erasing the primary storage device.
System memory (RAM), holds transient data during system operation	Volatile, SODIMM socket. Removable (4 GB/8 GB/16 GB)	Yes	Unplug unit from power.
Permanent system BIOS settings	Nonvolatile, 16 KB, stored	No ²	See Current BIOS steps on page 79 for information about clearing BIOS settings.
System boot ROM (BIOS)	Nonvolatile memory, 128 Mbit (16 MB) socketed, removable	No	Download the latest BIOS for your model from the HP website and follow the instructions to flash the BIOS that are on the website.
RTC (CMOS) RAM	Volatile memory, 256 bytes located in AMD embedded System on Chip (SoC)	No	Desktop computers with a CMOS button: Unplug unit from main power, remove top cover and press the Clear CMOS button. Notebook and desktop computers without a CMOS button: 1. Press and hold power button for 12 seconds. 2. Press Windows key + V, and then press power button.
Keyboard/mouse (ROM)	Nonvolatile, 2 KB embedded in the super I/O controller (SIO2)	Yes	N/A
Keyboard/mouse (RAM)	Volatile, 256 bytes embedded in the super I/O controller (SIO2)	No	Unplug unit from main power.
LOM EEPROM	Nonvolatile, 2 MB embedded in LAN controller	No	N/A
TPM	Nonvolatile, 51 KB ROM for firmware and 38 KB system parametric data	No ³	See Current BIOS steps on page 79 for information about clearing TPM.

¹ Under typical operation, the only user data stored on the primary storage device are preferences for device configuration and settings for connections. However, the administrator can configure the system to allow users to store data locally.

² The only user data potentially stored in BIOS Settings are the ownership and asset tags, administrator password, and startup password.

³ The TPM might contain encrypted passwords or certificates generated from user or administrator input.

Questions and answers

Use this section to answer your questions about nonvolatile memory.

1. How can the BIOS settings be restored (returned to factory settings)?

 **IMPORTANT:** The restore defaults feature does not securely erase any information on your hard drive. See question and answer 6 for steps to securely erase information.

The restore defaults feature does not reset the Custom Secure Boot keys. See question and answer 7 for information about resetting the keys.

- Turn on or restart the computer, and then quickly press **esc**.
- Select **Main**, and then select **Apply Factory Defaults and Exit**.
- Follow the on-screen instructions.
- Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

2. What is a UEFI BIOS?

The Unified Extensible Firmware Interface (UEFI) BIOS is an industry-standard software interface between the platform firmware and an operating system (OS). It replaces the older legacy BIOS architecture.

The UEFI BIOS provides an interface to display the system information and configuration settings and to change the configuration of your computer before an OS is loaded. BIOS provides a secure runtime environment that supports a GUI. In this environment, you can use either a pointing device (touch screen, touchpad, pointing stick, or USB mouse) or the keyboard to navigate and make menu and configuration selections. The UEFI BIOS also contains basic system diagnostics.

In addition, the UEFI BIOS works to initialize the computer's hardware before loading and executing the OS; the runtime environment allows the loading and execution of software programs from storage devices to provide more functionality, such as advanced hardware diagnostics (with the ability to display more detailed system information) and advanced firmware management and recovery software.

3. Where is the UEFI BIOS located?

The UEFI BIOS is located on a flash memory chip. You must use a utility to write to the chip.

4. What kind of configuration data is stored on the DIMM Serial Presence Detect (SPD) memory module? How would this data be written?

The DIMM SPD memory contains information about the memory module, such as size, serial number, data width, speed and timing, voltage, and thermal information. This information is written by the module manufacturer and stored on an EEPROM. You cannot write to this EEPROM when the memory module is installed in a computer. Third-party tools do exist that can write to the EEPROM when the memory module is not installed in a computer. Various third-party tools are available to read SPD memory.

5. What is meant by “Restore the nonvolatile memory found in Intel-based system boards”?

This message relates to clearing the Real Time Clock (RTC) CMOS memory that contains computer configuration data.

6. How can the BIOS security be reset to factory defaults and erase the data?

 **IMPORTANT:** Resetting results in the loss of information.

These steps do not reset Custom Secure Boot Keys. See question and answer 7 for information about resetting the keys.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select **Main**, and then select **Reset Security to Factory Defaults**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

7. How can the Custom Secure Boot Keys be reset?

Secure Boot is a feature to ensure that only authenticated code can start on a platform. If you enabled Secure Boot and created Custom Secure Boot Keys, disabling Secure Boot does not clear the keys. You must also select to clear the Custom Secure Boot Keys. Use the same Secure Boot access procedure that you used to create the Custom Secure Boot Keys, but select to clear or delete all Secure Boot Keys.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select the **Security** menu, select **Secure Boot Configuration**, and then follow the on-screen instructions.
- c. At the **Secure Boot Configuration** window, select **Secure Boot**, select **Clear Secure Boot Keys**, and then follow the on-screen instructions to continue.

Using HP Sure Start (select products only)

Select computer models are configured with HP Sure Start, a technology that monitors the computer's BIOS for attacks or corruption. If the BIOS becomes corrupted or is attacked, HP Sure Start automatically restores the BIOS to its previously safe state, without user intervention.

HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. Advanced users can customize the default configuration.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

12 Power cord set requirements

This chapter provides power cord requirements for countries and regions.

The wide-range input feature of the computer permits it to operate from any line voltage from 100 V AC to 120 V AC, or from 220 V AC to 240 V AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

These power cord requirements are applicable to all countries and regions.

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 V AC or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

To determine power cord requirements for specific countries and regions, use this table.

Table 12-1 Power cord requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1

Table 12-1 Power cord requirements for specific countries and regions (continued)

Country/region	Accredited agency	Applicable note number
India	BIS	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
The People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
United Kingdom	ASTA	1
United States	UL	2

1. The flexible cord must be Type HO5VV-F, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a 2-pole grounding type with a NEMA 5-15P (15 A, 125 V AC) or NEMA 6-15P (15 A, 250 V AC) configuration. CSA or C-UL mark. UL file number must be on each element.
3. The appliance coupler, flexible cord, and wall plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, 3-conductor, 0.75 mm² or 1.25 mm² conductor size. The wall plug must be a 2-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V AC) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
5. The flexible cord must be Type HO5VV-F 3-conductor, 0.75 mm² conductor size. KTL logo and individual approval number must be on each element. Approval number and logo must be printed on a flag label.
6. The flexible cord must be Type HVCTF 3-conductor, 1.25 mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.

7. For 127 V AC, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V AC), with UL and CSA or C-UL marks. For 240 V AC, the flexible cord must be Type H05VV-F 3-conductor, 0.75 mm² or 1.00 mm² conductor size, with plug BS 1363/A with BSI or ASTA marks.

13 Swelling or deformation of notebook battery

To protect your hardware from potential damage, HP recommends that if you are experiencing battery swelling, stop using the notebook until you can replace the battery.

You can contact HP to understand what battery replacement options are available. To learn more about lithium-ion batteries and the factors that can accelerate battery swelling, see https://support.hp.com/us-en/document/ish_6824662-6824706-16.

Swollen notebook batteries

You might notice that your notebook battery has become somewhat deformed or swollen over time. In some cases, the battery swelling might be significant enough to impact other components of the system including the touchpad, keyboard, and chassis.

Swollen battery is not a safety issue

A swollen battery does not present a safety issue. It is the result of the generation of gases per the normal degradation of the battery cell over time.

HP has worked closely with our battery cell suppliers and third-party industry experts to help minimize the potential for HP batteries to swell over time and to identify that swollen batteries are not a safety issue.

Discontinue using a swollen battery

To protect your hardware from potential damage, HP recommends that, if you are experiencing battery swelling, you stop using the notebook until the battery can be replaced.

You can contact <https://www.hp.com/go/contacthp> to understand what battery replacement options are available.

Replace a swollen battery

If a battery is under warranty, HP will replace the battery per the terms and conditions of the HP Worldwide Limited Warranty or applicable HP Care Packs.

For batteries no longer under warranty, contact HP to purchase a genuine HP replacement battery.

Minimize battery swelling

Multiple factors can accelerate battery swelling.

To help mitigate battery swelling over time, you can use either HP Adaptive Battery Optimizer (consumer notebooks) or HP Battery Health Manager (commercial notebooks) settings to improve battery longevity and performance for various use scenarios.

Adaptive Battery Optimizer (consumer notebooks)

Adaptive Battery Optimizer technology can help mitigate the factors that cause the battery to swell. It is available on select HP OMEN, HP Spectre, HP Pavilion, and HP ENVY notebook computers.

Adaptive Battery Optimizer has been available on select gaming notebooks since 2019 and select consumer notebooks since 2020. To learn more about enabling Adaptive Battery Optimizer on your HP notebook, see https://support.hp.com/us-en/document/ish_9908083-9908127-16.

HP Battery Health Manager (commercial notebooks)

HP Battery Health Manager provides an easy-to-manage solution to help mitigate factors that cause the battery to swell. It is available on select HP ProBook and HP EliteBook notebook computers.

HP Battery Health Manager is available on select commercial notebooks manufactured since 2016. To learn more about HP Battery Health Manager, see https://support.hp.com/us-en/document/ish_4449597-3519507-16.

14 Recycling

When a nonrechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

Index

- A**
- AC adapter and battery light, identifying 8
 - AC adapter, spare part number 22
 - AC adapters, spare part numbers 22
 - action key, identifying 15
 - antenna
 - illustrated 22
 - spare part number 22
 - audio-out (headphone)/audio-in (microphone) combo jack, identifying 6, 7
 - audio, product description 2
- B**
- backup, creating 63
 - backups 63
 - battery swelling 87
 - BIOS
 - determining version 67
 - downloading an update 68
 - preparing for an update 67
 - updating 67
 - Bluetooth label 6, 16
 - boot order
 - changing using the f9 prompt 69
 - boot order, changing 65
 - bottom components 15
 - bottom cover
 - illustrated 19
 - removal 32
 - spare part number 19, 32
 - buttons
 - left touchpad 10, 11
 - power 14
 - right touchpad 10, 11
- C**
- camera
 - identifying 10
 - Camera light, identifying 10
 - camera privacy cover, identifying 10
 - camera/microphone module
 - illustrated 21
 - spare part number 21
 - caps lock light 12
 - caring for your computer 28
 - cautions
 - electrostatic discharge 24, 25
 - cleaning your computer 28
 - caring for wood veneer 30
 - disinfecting 29
 - HP Easy Clean 28
 - removing dirt and debris 28
 - components
 - bottom 6, 15
 - display 6, 9
 - keyboard area 10
 - left side 6, 7
 - lights 11
 - right side 6
 - top 6
 - touchpad 10, 11
 - computer major components 17
 - Computer Setup
 - navigating and selecting 66
 - restoring factory settings 66
 - starting 66
 - computer specifications 76
 - connectors
 - power 8
 - control zone 10
- D**
- display
 - specifications 76
 - display assembly
 - subcomponents 20
 - display back cover
 - illustrated 20
 - spare part number 20
 - spare part numbers 22
 - display bezel
 - illustrated 20, 21
 - spare part number 20
 - spare part numbers 21
 - display cable
 - illustrated 20
 - spare part number 20
 - display components 9
 - display panel
 - illustrated 20, 22
 - product description 2
 - spare part number 20
 - spare part numbers 22
 - display panel cable
 - illustrated 22
 - spare part number 22
- E**
- electrostatic discharge (ESD) 24, 25
 - preventing damage 24-26
 - esc key, identifying 15
- F**
- fan
 - removal 50
 - spare part number 50
 - fingerprint reader 14
 - illustrated 20
 - removal 48
 - spare part number 20
 - spare part numbers 48
 - fn key, identifying 15
- G**
- graphics, product description 1
 - grounding methods 24-26
 - guidelines
 - packaging 24, 30
 - transporting 24, 30
 - workstation 24
- H**
- hard drive
 - product description 2
 - specifications 76
 - HDMI port
 - identifying 8
 - heat sink
 - illustrated 20
 - removal 59
 - spare part number 20
 - spare part numbers 59
 - hinge
 - illustrated 20, 22

- spare part number 20
- spare part numbers 22
- hinge cover
 - illustrated 20
 - spare part number 20
- hot keys
 - break 6
 - insert 6
 - pause 6
 - programming query 6
 - scroll lock 6
- hotkeys, using 6
- HP PC Hardware Diagnostics UEFI
 - downloading 73
 - failure ID code 72
 - HP Hotkey Support
 - software 73
 - starting 72, 73
 - using 72
- HP PC Hardware Diagnostics
 - Windows
 - accessing 70, 71
 - downloading 71
 - failure ID code 70
 - installing 72
 - using 70
- HP Recovery media
 - recovery 64
- HP Sure Recover 65
- HP Sure Start 79

I

- illustrated parts catalog 17
- internal microphones,
 - identifying 9

J

- jacks
 - audio-out (headphone)/audio-in (microphone) 6, 7
 - network 7
 - RJ-45 (network) 7

K

- keyboard
 - product description 3
- keyboard with top cover
 - spare part numbers 61
- keys
 - action 15
 - esc 15
 - fn 15
 - Windows 15

- Windows Copilot 15

L

- labels
 - Bluetooth 6, 16
 - regulatory 6, 16
 - serial number 6, 16
 - service 6, 16
 - wireless certification 6, 16
 - WLAN 6, 16
- left control zone, identifying 10
- left side components 7
- lights
 - AC adapter and battery 8
 - camera 10
 - caps lock 12
 - microphone mute 12
 - power 12
 - RJ-45 (network) status 7
 - touchpad 10
- low blue light mode 9

M

- memory
 - nonvolatile 79
 - volatile 79
- memory module
 - illustrated 42
 - product description 2
 - spare part number 42
- memory modules
 - removal 42
 - spare part numbers 42
- microphone
 - product description 2
- microphone mute light,
 - identifying 12
- model name 1

N

- network jack, identifying 7
- nonvolatile memory 79

O

- operating system, product
 - description 4

P

- packaging guidelines 24, 30
- pointing device, product
 - description 3

- ports
 - HDMI 8
 - product description 2
 - USB port 6-8
 - USB Type-C® 10 Gbps port 8
 - UUSB Type-C® 10 Gbps port 8
- power button, identifying 14
- power connector
 - identifying 8
- power cord
 - requirements for all
 - countries 84
 - requirements for specific
 - countries and regions 84
 - set requirements 84
 - spare part numbers 23
- power cords, spare part
 - numbers 22
- power light, identifying 12
- power requirements, product
 - description 3
- primary storage
 - product description 2
- processor
 - product description 1
- product description
 - audio 2
 - display panel 2
 - graphics 1
 - hard drive 2
 - keyboard 3
 - memory module 2
 - microphone 2
 - operating system 4
 - pointing device 3
 - ports 2
 - power requirements 3
 - primary storage 2
 - processors 1
 - product name 1
 - security 4
 - serviceability 5
 - solid-state drive 2
 - video 2
 - wireless 2
- product name 1
- product name and number,
 - computer 6, 16

R

- recovery 63
 - discs 64
 - media 64
 - USB flash drive 64

- recovery media 63
 - creating using HP Cloud Recovery Download Tool 63
 - creating using Windows tools 63
- regulatory information
 - regulatory label 6, 16
 - wireless certification labels 6, 16
- Remote HP PC Hardware Diagnostics UEFI settings
 - customizing 75
 - using 74
- removal and replacement
 - procedures 32, 41
 - SSD 41
- removing personal data from volatile system memory 79
- restoring 63
- restoring and recovery
 - methods 64
- right control zone, identifying 10
- right side components 6
- RJ-45 (network) jack, identifying 7
- RJ-45 (network) status lights, identifying 7

S

- Screw Kit, spare part number 22
- security cable slot, identifying 7
- security, product description 4
- serial number, computer 6, 16
- service labels, locating 6, 16
- serviceability, product
 - description 5
- setup utility
 - navigating and selecting 66
 - restoring factory settings 66
- slots
 - security cable 7
- solid-state drive
 - product description 2
 - specifications 77
- spare part country codes 61
- speaker
 - illustrated 19
 - removal 45
 - spare part number 19, 45
- speakers, identifying 15
- special keys
 - identifying 14
 - using 14

- specifications
 - computer 76
 - display 76
 - hard drive 76
 - solid-state drive 77
- SSD
 - illustrated 20
 - removal and replacement 41
 - spare part number 20
- static electricity 24, 25
- support information 30
- Sure Start
 - using 83
- swelling or deformation of notebook battery 87
- system board
 - illustrated 19, 57
 - removal 56
 - spare part number 19, 57
 - spare part numbers 56
- system memory, removing personal data from volatile 79
- system restore 64
- system restore point, creating 63

T

- top cover/keyboard
 - illustrated 18
 - spare part number 18
- touchpad
 - illustrated 19
 - removal 46
 - settings 10
 - spare part number 19
 - spare part numbers 46
- touchpad buttons
 - identifying 10, 11
- touchpad components 10
- touchpad light, identifying 10
- touchpad settings, adjusting 10
- touchpad zone, identifying 10, 11
- transporting guidelines 24, 30
- traveling with the computer 6, 16

U

- USB board
 - removal 60
 - spare part number 60
- USB port, identifying 6-8
- USB Type-C 10 Gbps port, identifying 8
- USB Type-C® 10 Gbps port, identifying 8

V

- vents, identifying 16
- video, product description 2

W

- Windows
 - backup 63
 - recovery media 63
 - system restore point 63
- Windows Copilot key, identifying 15
- Windows key, identifying 15
- Windows tools, using 63
- wireless antennas
 - illustrated 20
 - spare part number 20
- wireless antennas, identifying 9
- wireless certification label 6, 16
- wireless, product description 2
- WLAN antenna kit
 - illustrated 22
 - spare part number 22
- WLAN antennas, identifying 9
- WLAN device 6, 16
- WLAN label 6, 16
- WLAN module
 - removal 44
 - spare part numbers 44
- workstation guidelines 24