

MULTIREACH™  
2-IN-1 CORDLESS VACUUM  
**USER GUIDE**

1313 SERIES

# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING YOUR VACUUM.

When using an electrical appliance, basic precautions should be observed, including the following:

### **WARNING** TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- » Do not use outdoors or on wet surfaces.
- » Do not allow to be used as a toy.
- » Close attention is necessary when used by or near children.
- » Do not use for any purpose other than described in this User's Guide.
- » Use only manufacturer's recommended attachments.
- » Do not use with damaged cord or plug.
- » If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- » Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- » Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- » Do not handle charging base, including plug and charging base terminal with wet hands.
- » Do not charge the unit outdoors.
- » Use only the charger supplied by the manufacturer to recharge.
- » Do not incinerate the appliance even if it severely damaged. The batteries can explode in a fire.
- » Do not put any object into opening.
- » Do not use with any opening blocked.
- » Keep openings free of dust, lint, hair and anything that may reduce airflow.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- » Use extra care when cleaning stairs.
- » Do not pick up flammable materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids or vapors.
- » Always turn off this appliance before connecting or disconnecting the motorized nozzle.
- » Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- » Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- » Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- » Do not use without dust cup or filters in place.
- » Use only on dry, indoor surfaces.
- » Keep appliance on a level surface.

### **WARNING**

TO REDUCE THE RISK OF ELECTRIC SHOCK - NOT USE OUTDOORS OR ON WET SURFACES. RISK OF FIRE OR INJURY TO PERSONS - NO USER - REPLACEABLE PARTS INSIDE. USE ONLY WITH THE CHARGER MANUFACTURED BY SIL, MODEL SAA-220023EU for 12v.

## SAVE THESE INSTRUCTIONS FOR FUTURE USE

This model is for household use only.

# Thanks for buying a BISSELL vacuum

We're glad you purchased a BISSELL vacuum. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL vacuum is well made, and we back it with a limited two-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.




My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL vacuum.

Thanks again, from all of us at BISSELL.



Mark J. Bissell  
Chairman & CEO

Safety Instructions . . . . .	2
Product View . . . . .	4
Assembly . . . . .	5
Operations . . . . .	6-8
Maintenance & Care . . . . .	9
Replacement Parts . . . . .	10
Guarantee . . . . .	11
Consumer Care . . . . .	11

	<p><b>WARNING</b></p>	<p><b>AN ACTION OR ATTENTION IS NEEDED TO THIS AREA IN ORDER TO REDUCE THE RISK OF ELECTRIC SHOCK, FIRE, OR INJURY</b></p>
	<p><b>GUIDE</b></p>	<p><b>READ USER GUIDE FOR COMPLETE SAFETY AND USER INSTRUCTIONS</b></p>
	<p><b>WEEE</b></p>	<p><b>DO NOT THROW THE APPLIANCE AWAY WITH THE NORMAL HOUSEHOLD WASTE AT THE END OF ITS LIFE, BUT HAND IT IN AT AN OFFICIAL COLLECTION POINT FOR RECYCLING. BY DOING THIS YOU WILL HELP TO PRESERVE THE ENVIRONMENT.</b></p>

EN 2-11  
CZ 12-23  
DA 24-35  
DE 36-47  
FI 48-59  
FR 60-71  
HU 72-83  
IT 84-95  
NL 96-107  
NO 108-119  
PL 120-131  
SK 132-143  
SE 144-155

# Product View

- 1 Power/Brush Roll On/Off/Suction Power Control
- 2 2-Way Folding Handle Release
- 3 Hand Vacuum Power Button
- 4 Dirt Cup Release
- 5 Detachable Hand Vacuum
- 6 Dirt Cup
- 7 Washable Filter Cup
- 8 Swivel Head
- 9 Crevice Tool with Dusting Brush
- 10 Charging Adapter Plug
- 11 Charging Base (optional)
- 12 6" Wide Tool



## **WARNING**

Plastic film can be dangerous. To avoid danger of suffocation, keep away from babies and children.

## **WARNING**

Do not plug in your vacuum cleaner until you are familiar with all instructions and operating procedures.

 
 
 
 
 
## **WARNING**

To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

# Assembly

## **WARNING**

Do not plug in your vacuum cleaner until you are familiar with all instructions and operating procedures.

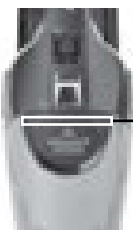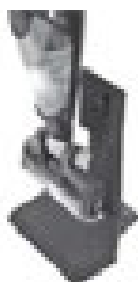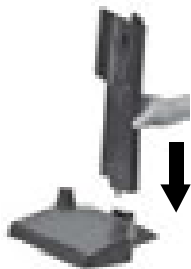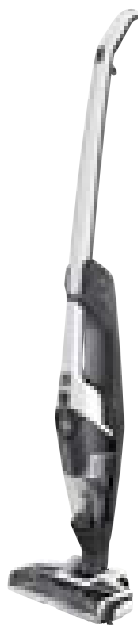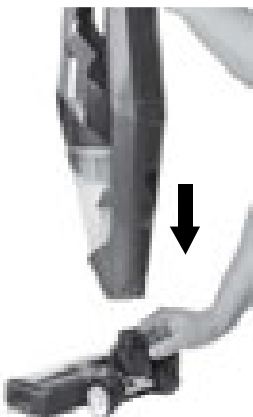

Charging		
Battery Status	LED Color	Charging
Full	Green	Green
Low	Red	Slow Blinking Red

**8**  
**HOURS**

# Operations

## **WARNING**

 
 
Do not operate cleaner with damp or wet filters or without vacuum bags and all filters in place.

a.



**ON / OFF**

b.




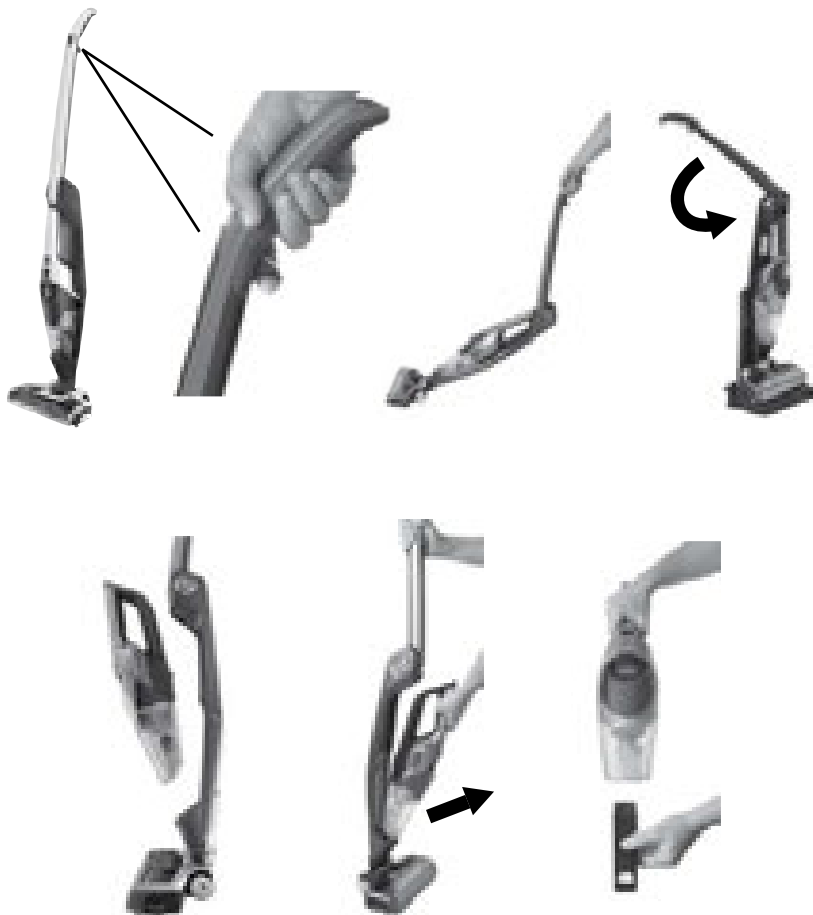
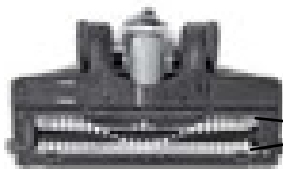









## Maintenance & Care

### **⚠ WARNING**

     To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

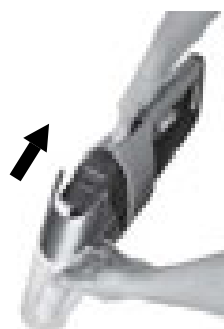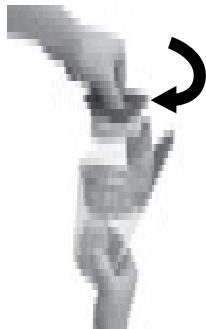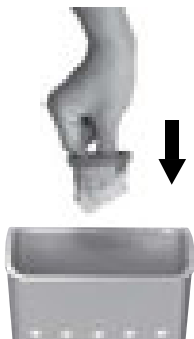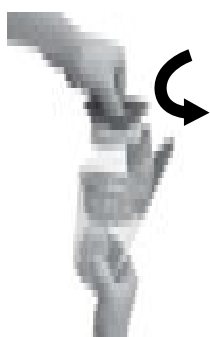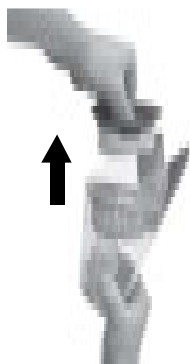

# Maintenance & Care

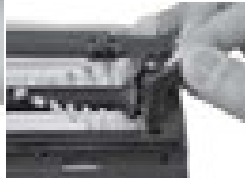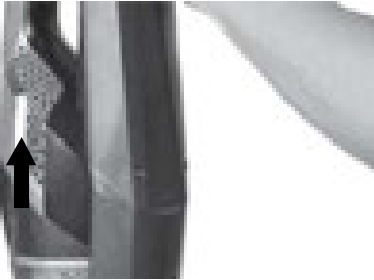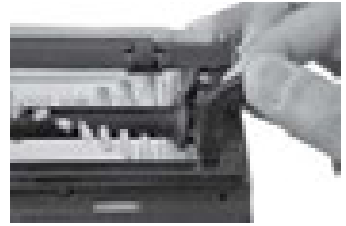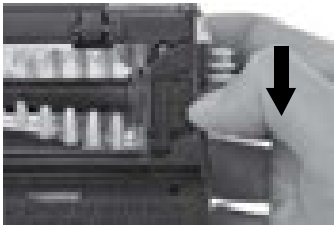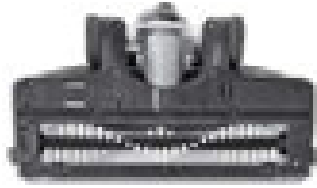     



# Maintenance & Care

## Brush roll reset:

If larger debris becomes lodged in the foot of the unit and the brush roll shuts off, turn the unit off and remove the obstruction. Wait approximately 15 seconds for the motor to cool down before turning back on. Brush will function again after allowing time to cool down.

 
## Disposal of Batteries

If your MultiReach Ion Series is to be disposed of, the batteries should be removed and disposed of properly.

- 1. IMPORTANT:** Unplug Charger and discharge the unit completely.
2. Remove hand vac from unit and remove dirt cup from handle.
3. Remove (2) Phillips head screws and remove the lens from the hand vacuum.
4. Remove (2) Phillips head screws from the hand vacuum cover.
5. Lift off the hand vacuum cover.
6. Take out push rod.
7. Remove (5) Phillips head screws from the side of the hand vacuum.
8. Remove the entire battery assembly from the cover.
9. Cut wires from the PCB and wrap the wire ends with insulation tape.
10. Keep Battery Pack together - DO NOT separate individual batteries. For specific disposal instructions of batteries, please follow local regulations.
11. Hand in remainder of product at an official collection point for recycling.

### CAUTION

Disconnecting the battery will destroy the appliance and invalidate the warranty.

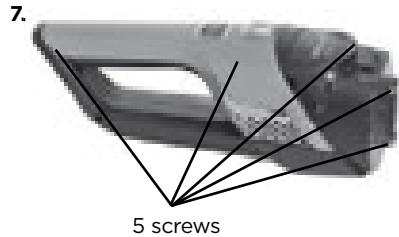

### WARNING

DO NOT ABUSE BATTERY. DISPOSE OF BATTERY PROPERLY.

# Replacement Parts

## 1313 Series

PART #	PART NAME		PART #	PART NAME	
1604734	Filter		1604481	Washable Filter Cup	
1606381	Foot Assembly		1604480	Dirt Cup Assembly	
1604272	Crevice Tool with Dusting Brush		1604479	Brush Roll	
1605217	Charging Adapter Plug		1606384	Hand Vacuum	
1606379	Handle & Body Assembly		1604257	Stair & Upholstery Tool	
1605427	Charging Base				

# Consumer Guarantee

This Guarantee only applies outside of the USA and Canada. It is provided by BISSELL International Trading Company BV ("BISSELL").

This Guarantee is provided by BISSELL. It gives you specific rights. It is offered as an additional benefit to your rights under law. You also have other rights under law which may vary from country to country. You can find out about your legal rights and remedies by contacting your local consumer advice service. Nothing in this Guarantee will replace or lessen any of your legal rights or remedies. If you need additional instruction regarding this Guarantee or have questions regarding what it may cover, please contact BISSELL Consumer Care or contact your local distributor.

This Guarantee is given to the original purchaser of the product from new and is not transferable. You must be able to evidence the date of purchase in order to claim under this Guarantee.

## Limited Two-Year Guarantee

Subject to the \*EXCEPTIONS AND EXCLUSIONS identified below, BISSELL will for two years from the date of purchase by the original purchaser repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge, any defective or malfunctioning part or product.

BISSELL recommends that the original packaging and evidence of the date of purchase be kept for the duration of the Guarantee period in case the need arises within the period to claim on the Guarantee. Keeping the original packaging will assist with any necessary re-packaging and transportation but is not a condition of the Guarantee.

If for your product is replaced by BISSELL under this Guarantee, the new item will benefit from the remainder of the term of this Guarantee (calculated from the date of the original purchase). The period of this Guarantee shall not be extended whether or not your product is repaired or replaced.

### \*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE GUARANTEE

This Guarantee applies to products used for personal domestic use and not commercial or hire purposes. Consumable components such as filters, belts and mop pads, which must be replaced or serviced by the user from time to time, are not covered by this Guarantee.

This Guarantee does not apply to any defect arising from fair wear and tear. Damage or malfunction caused by the user or any third party whether as a result of accident, negligence, abuse, neglect, or any other use not in accordance with the User Guide is not covered by this Guarantee.

An unauthorised repair (or attempted repair) will void this Guarantee whether or not damage has been caused by that repair/attempt.

Removing or tampering with the Product Rating Label on the product or rendering it illegible will void this Guarantee.

SAVE AS SET OUT BELOW BISSELL AND ITS DISTRIBUTORS ARE NOT LIABLE FOR ANY LOSS OR DAMAGE THAT IS NOT FORESEEABLE OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT INCLUDING WITHOUT LIMITATION LOSS OF PROFIT, LOSS OF BUSINESS, BUSINESS INTERRUPTION, LOSS OF OPPORTUNITY, DISTRESS, INCONVENIENCE OR DISAPPOINTMENT. SAVE AS SET OUT BELOW BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

BISSELL DOES NOT EXCLUDE OR LIMIT IN ANY WAY ITS LIABILITY FOR (A) DEATH OR PERSONAL INJURY CAUSED BY OUR NEGLIGENCE OR THE NEGLIGENCE OF OUR EMPLOYEES, AGENTS OR SUBCONTRACTORS; (B) FRAUD OR FRAUDULENT MISREPRESENTATION; (C) OR FOR ANY OTHER MATTER WHICH CANNOT BE EXCLUDED OR LIMITED UNDER LAW.

## Consumer Care

**If your BISSELL product should require service or to claim under our Limited Two-Year Guarantee, please visit:**

### Website or E-mail:

[www.BISSELL.com](http://www.BISSELL.com)

### For UK inquiries:

Telephone: 0344 888 6644

Monday - Thursday 9am - 5pm

Friday 9am - 4pm

BISSELL Homecare (Overseas) Inc.  
Ground Floor

226 Berwick Avenue

Slough, Berkshire, SL1 4QT

United Kingdom

**Replacement parts and accessories are available for purchase. To purchase visit [www.BISSELL.com](http://www.BISSELL.com)**

## Visit the BISSELL website: [www.BISSELL.com](http://www.BISSELL.com)

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: \_\_\_\_\_ Please record your Purchase Date: \_\_\_\_\_

**NOTE: Please keep your original sales receipt. It provides proof of the date of purchase in the event of a Guarantee claim. See Guarantee for details.**



©2015 BISSELL Homecare, Inc  
Grand Rapids, Michigan  
All rights reserved. Printed in China  
Part Number 160-6203 Rev 02/15  
Visit our website at: [www.BISSELL.com](http://www.BISSELL.com)