

Important safety instructions to be kept with the product

Please read attentively

	To prevent fire and electric shock, do not expose this receiver to rain or moisture. In order to avoid any possible risk of electric shock, never attempt to open the unit. In case of breakdown, reparation should be made by qualified technicians. No part of this unit should be repaired by users.
---	---

WARNING!

Presence of dangerous tension inside apparatus! Do not open. Risk of electric shock! No part should be repaired by users. The maintenance of the receiver should be carried out exclusively by qualified persons.

If the power cord is damaged, it must be replaced or repaired by the manufacturer, its after-sales service, qualified electrician or persons of similar qualification in order to avoid possible danger.

The product must be installed in accordance with national regulations.

The used batteries must be disposed of safely. Throw them in collection bins provided is prohibited (inquire after your retailer for more details) in order to protect the environment.

Proper Installation

- Place the receiver on a flat, firm and stable surface. Do not put it on a carpet or rug.
- Do not place the receiver on top of another device, such as an amplifier. This may lead to overheating.
- Do not put anything above the unit (for example, CDs or magazines).

Sufficient Ventilation

- Place the receiver in a well-ventilated location to prevent accumulation of internal heat. Allow a gap of at least 10cm to the rear and the top of the unit, as well as a space of 5cm to both sides to avoid overheating.
- Do not obstruct any ventilation openings with items such as newspapers, tablecloths, curtains, etc.

Protecting the Receiver from High Temperatures, Humidity, Water and Dust

- The receiver should not be exposed to dripping water or splashing.
- No objects filled with liquids, such as vases, shall be placed on the unit.
- Do not place any objects that might damage your unit near it (e.g. liquid filled objects or candles).
- Do not place any source of flames such as lit candles on the receiver.
- This receiver is to be used in a temperate climate and should not be used in a tropical climate.

Electricity Supply

- Please unplug the receiver in case of prolonged non-use.
- If the power cord is damaged, it must be replaced or repaired by the manufacturer, its after-sales service, qualified electrician or similar qualifications to those to avoid possible danger.

- This device must be connected to a 230V ~ 50Hz electrical network.
- The plug must remain readily accessible after the installation of the product.

Welcome Section

Congratulations on choosing to buy a **DENVER** product. By doing so you now have the assurance and peace of mind that comes with purchasing a product made by one of the leading manufactory.

Main features:

- Slim size (168mm)
- MPEG-2, MPEG-4(H.264) decoding
- USB2.0 for software update , music ,image, movie and recording
- LCN(Logical Channel Number) supported;
- Parental control
- Favorite lists
- Timer
- EPG/TXT/SUBTITLE supported
- Digital sound through COAXIAL output (S/PDIF)
- PVR ready supported

Automatic Standby: the STB preset to automatically switch from active mode into standby if 3 hours no interaction and/or channel change from user, with alert message 2 minutes before going into standby. User can choose OFF (turn off this function) or other hours.

FAQ – DENVER DVB-C

Congratulations with your digital cable-tv tuner. With this settop box you can enjoy digital TV signal, and get HD channels in full quality.

To get a proper signal you need good cables with proper connectors and assembling. If you don't have this, it can be hard to receive proper signal.

This is why it is important to check your cables. Bad assembling and bad quality of assemblings can do so that you don't get signal at all, or in best case pixelating channels.

Check your cables.

If possible, the DVB-C box shall be connected directly to the input connector of the house. And you should maximum use 10 meter cables. If you put more cables in a row (with connectors), you risk to loose a lot of signal, so use one long cable instead of several with connectors.

It is also important to use double shielded cables, and preferable of the type with mounted connectors.

- If you need to split the signal to more than one tv, it is best to do this after the box is connected. OR best of all use a connector box with F-connectors. And not the T-pieces that you use as normal antenna plug.

F-Connector looks like this:



- Please make sure not to make sharp turns on the cable. You risk to damage the inside of the cable this way.

 
If you follow these rules, you will get digital cable tv in super quality.

Please notice that in some houses it might be necessary to use a signal amplifier. If you use this, make sure it is made for digital cable tv, and has the proper shielding. It might be a good idea to ask you tv provider what amplifier they suggest.

1. Installation of STB.....	ENG-5
1.1 Front Panel.....	ENG-5
1.2 Rear Panel.....	ENG-5
1.3 Connection	ENG-6
1.4 Remote	ENG-7
2. Installation Guide.....	ENG-8
3. Basic Operation.....	ENG-8
3.1 Program Organizer.....	ENG-8
3.2 Installation Guide.....	ENG-9
3.3 System Setup	ENG-9
3.4 Tools.....	ENG-11
3.5 Timers	ENG-11
3.6 Record.....	ENG-11
3.7 MutiMeida	ENG-12
3.8 Audio key.....	ENG-12
3.9 TV Channel and radio Channel list	ENG-12
4. Other functions introduction.....	ENG-12
4.1 Program information	ENG-12
4.2 Favorite List	ENG-13
4.3 EPG (Electronic program guide).....	ENG-13
5. Troubleshooting.....	ENG-13


1. Installation of STB

1.1 Front Panel

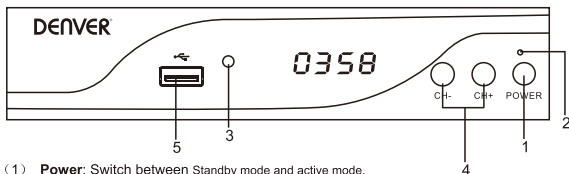

- (1) **Power:** Switch between Standby mode and active mode.
- (2) **on/off:** Power lamp, red color in Standby mode, green color in active mode
- (3) **IR sensor:** Receives the remote control signal.
- (4) **CH+/CH-:** Switch channel
- (5) **USB**

 1.2 Rear Panel

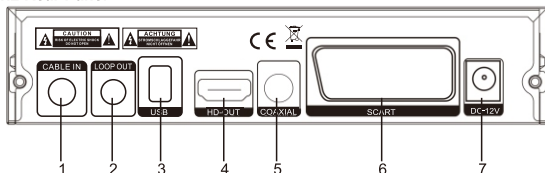

1. Cable IN

Connect cable signal.

2. LOOP OUT

Connect to TV.

3. USB

It is used for playing wma,m4a, aac, JPEG,BMP,PNG,AVI, XVID,MKV and USB PVR(USB stickers, mobile HDD with external power supply and FAT32 format).

USB harddisc on products with PVR function:

Please notice that we recommend using a hard disc with OWN power supply on this unit. This is to ensure that it has enough power to work properly.

You can buy many hard discs without power supply, but our experience is that they need too much power to work stable. MAXIMUM power for hard discs without power supply is 500mAh.. If they use more than this, they will fail when recording.

4. HDMI

Connecting to the HDMI input on the TV set.

5. COAXIAL

Digital audio signal output, It is Coaxial output

 
6.TV SCART Connector

Connect your receiver to your TV Scart port using a SCART cable.

7. DC IN

1.3 Connection

Note: Before connect this STB to other devices, please close all devices' power.

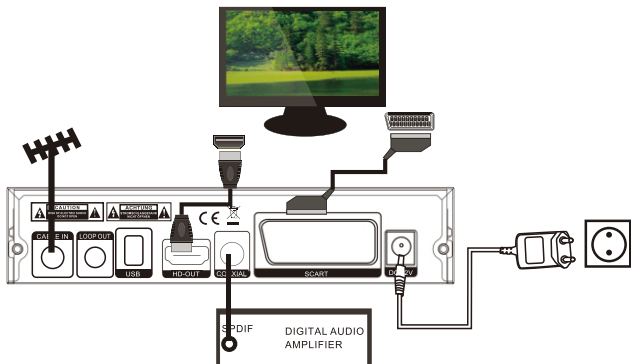

1.3.1 Connecting to cable signal

To receive the broadcast signal, the cable signal should be connected to the CABLE IN connector at the back of the receiver.

 
1.3.2 Connecting to TV

1. Connect the HDMI connector of the receiver to the HDMI connector of TV set.
2. Connect the TV Scart connector of the receiver to the Scart connector of TV set.

1.3.3 Connecting to Digital Audio Amplifier

Connect S/PDIF (COAXIAL) connector of your receiver to digital audio input of your amplifier.


1.4 Remote

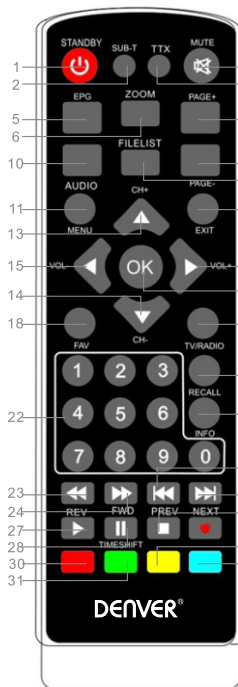

- 1.STANDBY: Switch The Standby Mode
- 2.SUBTITLE:Select Subtitle Language
- 3.MUTE:Mute Or Restore Audio Output
- 4.TTX
- 5.EPG:Electronic Program Guide
- 6.ZOOM
- 7.P+:Page Up
- 8.P-: Page Down
- 9.FILELIST
- 10.AUDIO:Choose Audio language Or Audio Mode
- 11.MENU:Enter The Main Menu
- 12.Exit:Exit The Current Menu
- 13.CH+:Change Channel+
- 14.CH-: Change Channel-
- 15.16.V+/-:Change Vol
- 17.OK
- 18.FAV:Enter Favorite List
- 19.TV/RADIO
- 20.RECALL:Return To Last Playing Program Or Last Operation
- 21.INFO:Show The Current Program Information
- 22.Number(0~9):Select A Channel Or Setting
- 23.REV:Return
- 24.FWD:Forward
- 25.PRVE:Return To Last Page
- 26.Next
- 27.28.Play/Pause
- 29.Stop
- 30.31.32.33.Multi-Function Key

2. Installation Guide

 After all connections have been made properly, switch on TV and make sure the receiver is connected to the Main Power. Press Power button to switch receiver on. If you are using the receiver for the first time or restored to Factory Default, the Main Menu will appear on your TV screen.

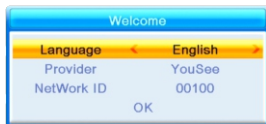


- (1) Select [OSD Language] and press RIGHT/LEFT key to select an language
- (2) Select provider and press right/lift to select provider
- (3) Once channel tuning is complete, you are now ready to watch TV

3. Basic Operation

3.1 Program Organizer

 To access the Menu, press the MENU button and select [Program organizer]. The Menu provides options to adjust the Program Manage Settings. Press the EXIT button to exit the Menu.

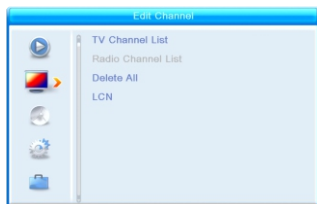

3.1.1 Channel Manager

 
To edit your program preferences (lock, skip, favourite, move or delete), you will need to enter the Program Edit Menu. This Menu requires a password to access.

3.1.2 Channel sort

1. Sort your channels from the following options:
[LCN] - Sort the channels in ascending order
[ONID]-Sort the channels according to the original network
[Service Name] - Sort the channels in alphabetical order
[Service ID] - Sort the channels according to the station
2. LCN (Logical channel number)
Set LCN on or off.

3.2 Installation Guide

To access the menu, press MENU and select [Install Guide]. The Menu provides options to adjust the Channel Search settings. Select an option and press OK or RIGHT to the setting page. Press EXIT to exit the Menu.

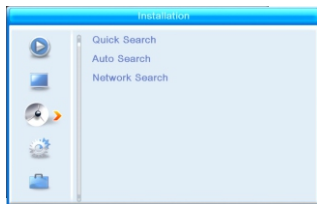

3.2.1 Search Setup

- (1) Country: Setup an country that it determine the time region.
- (2) Standby Loop Through : You can select Standby Loop Through On or Off.

3.2.2 Auto Search

Search and install all channels automatically. This option overwrites all preset channels.

1. Input the symbol.
2. Press LEFT or RIGHT key to select QAM and search mode.
3. Press OK to start searching channels

3.2.3 Manual Search

Install new channels manually. This option adds new channels without changing the current channels list.

1. Select [Manual Search] then press OK or RIGHT. The channel search screen will appear.

2. Input the frequency and symbol.
3. Press LEFT or RIGHT key to select QAM and search mode.
4. Press OK to start searching channels

If a channel is found, it is saved and added to the channels list. If channels can't be found, and then exit the menu.

3.2.4 Net Work Search

 
You can search channels by net work. Input the local Network ID which your program provider provides.

3.3 System Setup

To access the menu, press MENU and select [System setup]. The menu provides options to adjust the system settings.

Press the UP/DOWN key to select an option and press OK to enter the setting page.

Press EXIT to exit the Menu.

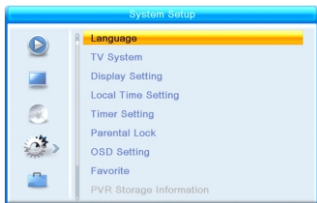

3.3.1 Language Setting

You can set menu language that was the OSD language.

You can set the audio language that was the default choice when the program

has multi-audio.

You can set the subtitle language that was the default choice when the program has multi-subtitle

3.3.2 OSD setting

You can set the OSD transparent and infobar show time.

3.3.3 TV Setting

(1) TV mode

If the video does not appear correctly, you need to change the settings.

This should match the most common setting for TVs in your country.

[NTSC]: for NTSC system TV.

[PAL]: for PAL system TV.

(2) Aspect

You must set the display format to 4:3 Pan& Scan, 4:3 Letter Box, 16:9 Wide Screen or Auto to get the maximum display when watching TV.

(3). Vedio Resolution

If the video does not appear correctly, change the setting. This setting is to match the most common setting for HDMI.

[576i]: for PAL system TV.

[576P]: for PAL system TV.

[720P_50]: for PAL system TV

[720P_60]:for NTSC system TV

[1080I_25]:for PAL system TV

[1080I_30]: for NTSC system TV

[1080I]: for NTSC or PAL system TV.

3.3.4 Audio Setting

It control the **Digital Audio Amplifier output**.

3.3.5 Time Setting

This menu provides options to adjust the time settings.

Press UP/DOWN to select an option and press RIGHT/LEFT to adjust the setting.

Press EXIT to exit the menu.

(1) Time offset

Select auto or manual for GMT offset adjustments.

(2) Time Zone

Select the Time Zone Offset when [Time Offset] is set to Manual.

3.3.6 Auto Standby

Select the Sleep time.

The machine will automatic switch off after 3 hours without user activity.

3.3.7 Parental Lock

You can restrict access to channels that are unsuitable for children. To restrict/lock the channel you will need to enter either the default password '0000' or your own

password.

3.3.8 Restore Factory Default

Reset your Set Top Box to the Default Factory Settings.

In Main Menu select [Restore Factory Default] and press OK or RIGHT to select. press OK to confirm. This option will delete all preset channels and settings.

3.4 Tools

To access the menu, press MENU and select [Tools]. The menu provides options to adjust the system settings.

Press the UP/DOWN key to select an option and press OK to enter the setting page.

Press EXIT to exit the Menu.

(1) Information

View model, hardware and software information.

(2) USB Upgrade

It support the upgrade the software when choose the right file which the manufacture provide .

 
(3) Remove USB device

Remove the USB device safely.



3.5 Timers

In this menu, you can select the channel number which you want to record, set the start date, start time, end time and select the repeat mode(Once, Daily), then set the mode to Record, press Ok to save the timer. This channel will be recorded

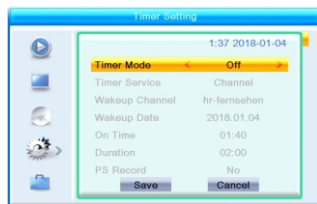


3.6 Record

This menu contains video list ,USB device information ,Record setup and remove USB device (the the usb device is interted,this option would be appear)

Video list: you can see PVR.

 USB device information :You can format the usb device to FAT32 or NTFS

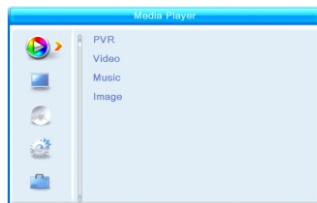

Record setup: you can view record device information.

3.7 Media player

You can play music, view the photo, see the movie

Multimedia player feature also has been integrated on the receiver. You could show your preference photo, playing music and movie on multimedia player. Known supported file were illustration below. FAT32 and FAT16 file system could be supported at the moment.



Player	Supported file
Photo	JPEG, BMP, PNG
Music	*.m4a, *.aac
Movie	*.AVI, *.MKV, *.XviD, *.dat, *.ts, *.mp4(GMC not supported)

Photo Configure

You can set Slide Time, Slide Mode and Aspect Ration

Movie Configure

In this menu, you can set Subtitle Specific, Subtitle BG and Subtitle Fontcolor..

3.8 Audio key

The program might have multilingual audio language and the audio broadcast on different audio mode such as Stereo, Left or Right. All the available audio languages will display on the audio track windows while you press AUDIO key. The screenshot is illustrated below. If there is no audio output after you select the audio language, it indicates that there is no audio on the current audio mode, so you have to select preferable audio mode.

3.9 TV Channel and radio Channel list

Press OK key to display all TV channel Press TV/Radio to watch Radio channel. Follow the help information at the bottom of the window to select preference channel.

4. Other functions introduction

4.1 Program information

If you press the **INFO** button once, a banner is displayed on the upper part of the screen, and if you press the button again before the upper banner is disappeared, the banner will show the details of the currents channel.

4.2 Favorite List

If you press **"FAV"** on the remote controller at No menu state, the favorite group list will be displayed on the screen. You can select one favorite group and press **"OK"** key to enter the favorite channel list

4.3 EPG (Electronic program guide)

The EPG is an on-screen TV guide that shows scheduled programs seven days in advance for every tuned channel. Press the EPG button on the Remote Control to access guide.

When entering EPG for the first time on a channel it can take up to 2 minutes before EPG is fully shown. If you change channels, the 2-minute loading time can be starting over again. This is not an error, but a normal waiting time for the EPG to load".



You can use the UP/DOWN key to select the preferred program and press color key to change time that view event. Press **"OK"** key, you can view or record program by timer

5. Troubleshooting

There may be various reasons for the abnormal operation of the receiver. Check the receiver according to the procedures shown below. If the receiver does not work properly after checking it, please contact the dealer. Don't open the receiver cover. This may cause a dangerous situation.

Symptom	Cause	Remedy
The LED display on front panel does not light up.	The power cord is not plugged in.	Check that the power cord is plugged in to the wall outlet.
No picture or sound	Wrong connection of the Audio/ Video output of the receiver to TV. Audio muting. TV power off.	Connect the Audio/ Video output of the receiver to TV correctly. Press the MUTE button Turn TV on.
No picture	The receiver can't receive the signal Incorrect values of some tuner parameters Wrong direction of the antenna.	Check the antenna cable, replace the cable, or connect the cable to the receiver tightly. Set the values of the tuner parameters correctly in the installation menu. Check the antenna connect.
The remote control does not work	The batteries of the remote control are not inserted or exhausted	Check whether the batteries are inserted correctly in your remote control. Check the batteries, and if exhausted replace the batteries in the remote control.

 **Tips:** If you refer to this troubleshooting, but no resolve that problem you encountered. Please you contact the local dealer or technical support instantly, don't to discover the machine, because that do is very danger, and it damage that machine in that cases.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

DENVER®

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type DVBC-120 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.denver-electronics.com and then click the search ICON on topline of website. Write model number: DVBC-120. Now enter product page, and red directive is found under downloads/other downloads.

Operating Frequency Range: 143-786MHz

Max Output Power: 10W

DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denverelectronics

AC/DC ADAPTER

Manufacturer's name or trade mark, commercial registration number and address	Manufacturer's name: Heyuan Mao Two Power Co., Ltd Trade mark: MOERPS Commercial registration number: 91441602MA52BB18XT Address: 2 Floor, 6 Building, Baohao Industrial Park, Hepu Avenue, Longling Industrial Park, Yuancheng, Heyua
Model identifier	MR-1201000EU
Input voltage	100-240 Vac
Input AC frequency	50/60 Hz
Output voltage	12.0 Vdc
Output current	1.0 A
Output power	12.0W
Average active efficiency	85.71%
Efficiency at low load (10%)	77.78%
No-load power consumption	0.041