

During warranty period, assistance for replacement or exchange of defective components is available at the place of purchase with receipt or valid proof of purchase. The warranty does not cover repair or exchange of product resulting from misuse, accident, modification, unsuitable physical or operating environment, improper maintenance, or failure caused by non-SilverStone product. The warranty is voided by removal or alteration of product or parts identification labels.

Warranty period is region specific, please contact your reseller or SilverStone authorized distributor for more information.

This instruction will help you make the most out of your product. Please read through it before installation. Also, please keep your product receipt and this instruction in safe place for future reference.

We, SilverStone Technology, hope you will enjoy your product.

If you have any comments or suggestions, please e-mail to support@silverstonetek.com

Thank you for choosing and supporting our product.

For Australia only

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Please refer to below for further warranty details, SilverStone Technology Co., Ltd, 12F No, 168 Jankang Rd., Zhonghe Dist., New Taipei City 235 Taiwan R.O.C, + 886-2-8228-1238 (standard international call charges apply)

1.Product component defects or damages resulted from defective production is covered under warranty. Defects or damages with the following conditions will be fixed or replaced under SilverStone Technology's jurisdiction.

- (a) Usage in accordance with instructions provided in this manual, with no misuse, overuse, or other inappropriate actions.
- (b) Damage not caused by natural disaster (thunder, fire, earthquake, flood, salt, wind, insect, animals, etc...)
- (c) Product is not disassembled, modified, or fixed. Components not disassembled or replaced.
- (d) Warranty mark/stickers are not removed or broken.

Loss or damages resulted from conditions other than ones listed above are not covered under warranty.

2.Under warranty, SilverStone Technology's maximum liability is limited to the current market value for the product (depreciated value, excluding shipping, handling, and other fees). SilverStone Technology is not responsible for other damages or loss associated with the use of product.

3.Under warranty, SilverStone Technology is obligated to repair or replace its defective products. Under no circumstances will SilverStone Technology be liable for damages in connection with the sale, purchase, or use including but not limited to loss of data, loss of business, loss of profits, loss of use of the product or incidental or consequential damage whether or not foreseeable and whether or not based on breach of warranty, contract or negligence, even if SilverStone Technology has been advised of the possibility of such damages.

4.Warranty covers only the original purchaser through authorized SilverStone distributors and resellers and is not transferable to a second hand purchaser

5.You must provide sales receipt or invoice with clear indication of purchase date to determine warranty eligibility.

6.Unless otherwise noted, the limited warranty detail as below

- (a) All SilverStone retail boxed power supply products (excluding power supply sold as part of a case product) come with 3 year warranty from the date of purchase.
- (b) All SilverStone retail case products that have power supply included come with 1 year warranty from the date of purchase.
- (c) All SilverStone retail storage and accessory products (excluding expendable material) come with 1 year warranty from the date of purchase.

7.If a problem develops during the Warranty Period, please contact your retailer/reseller/SilverStone authorized distributors or SilverStone <http://www.silverstonetek.com>. Please note that:
(i) You must provide proof of original purchase of the Product by a dated itemized receipt; (ii) You shall bear the cost of shipping (or otherwise transporting) the Product to SilverStone authorized distributors. SilverStone authorized distributors will bear the cost of shipping (or otherwise transporting) the Product back to you after completing the warranty service; (iii) Before you send the Product, you must be issued a Return Merchandise Authorization ("RMA") number from SilverStone. Updated warranty information will be posted on SilverStone's official website. Please visit <http://www.silverstonetek.com> for the latest updates.

SilverStone Technology Co., Ltd.

www.silverstonetek.com

support@silverstonetek.com

Issue date: March, 2012

NO: G11215610



SILVERSTONE®
Designing Inspiration



RL01 REDLINE SERIES

Special Features

Fantastic styling details with glowing button and red LED fan

Positive pressure design for effective dust reduction

Removable magnetic dust filter for top and bottom vents

Smart backside cable routing design


Motherboard back plate opening for quick CPU cooler assembly

Support easy access drive bays with tool-less design

Specifications

Material	High-strength plastic and meshed front panel	
Model	SST-RL01B-USB 2.0, SST-RL01B-W-USB 2.0	
	SST-RL01B-USB 3.0, SST-RL01B-W-USB 3.0	
Motherboard	ATX, Micro ATX	
Drive Bay	Exposed	5.25" x 3, 3.5" x 1
	Internal	3.5" x 5, 2.5" x 1
Cooling System	Front	1 x 120mm red LED intake fan
	Rear	1 x 120mm fan slot
	Top	2 x 120mm or 1 x 120mm and 1 x 140mm fan slots
	Bottom	1 x 120mm fan slot
Expansion Slot	7	
Front I/O Port	USB 2.0 x 2 (SST-RL01B-USB 2.0+SST-RL01B-W-USB 2.0 only) USB 3.0 x 2 (SST-RL01B-USB 3.0+SST-RL01B-W-USB 3.0 only) Audio x 1, MIC x 1	
Power Supply	1 x optional standard PS2 (ATX)	
Expansion Card	Compatible with expansion cards up to 11"	
Limitation of CPU cooler	155mm	
Dimension	192.5mm (W) x 440.3mm (H) x 485mm (D)	

Optical drive installation

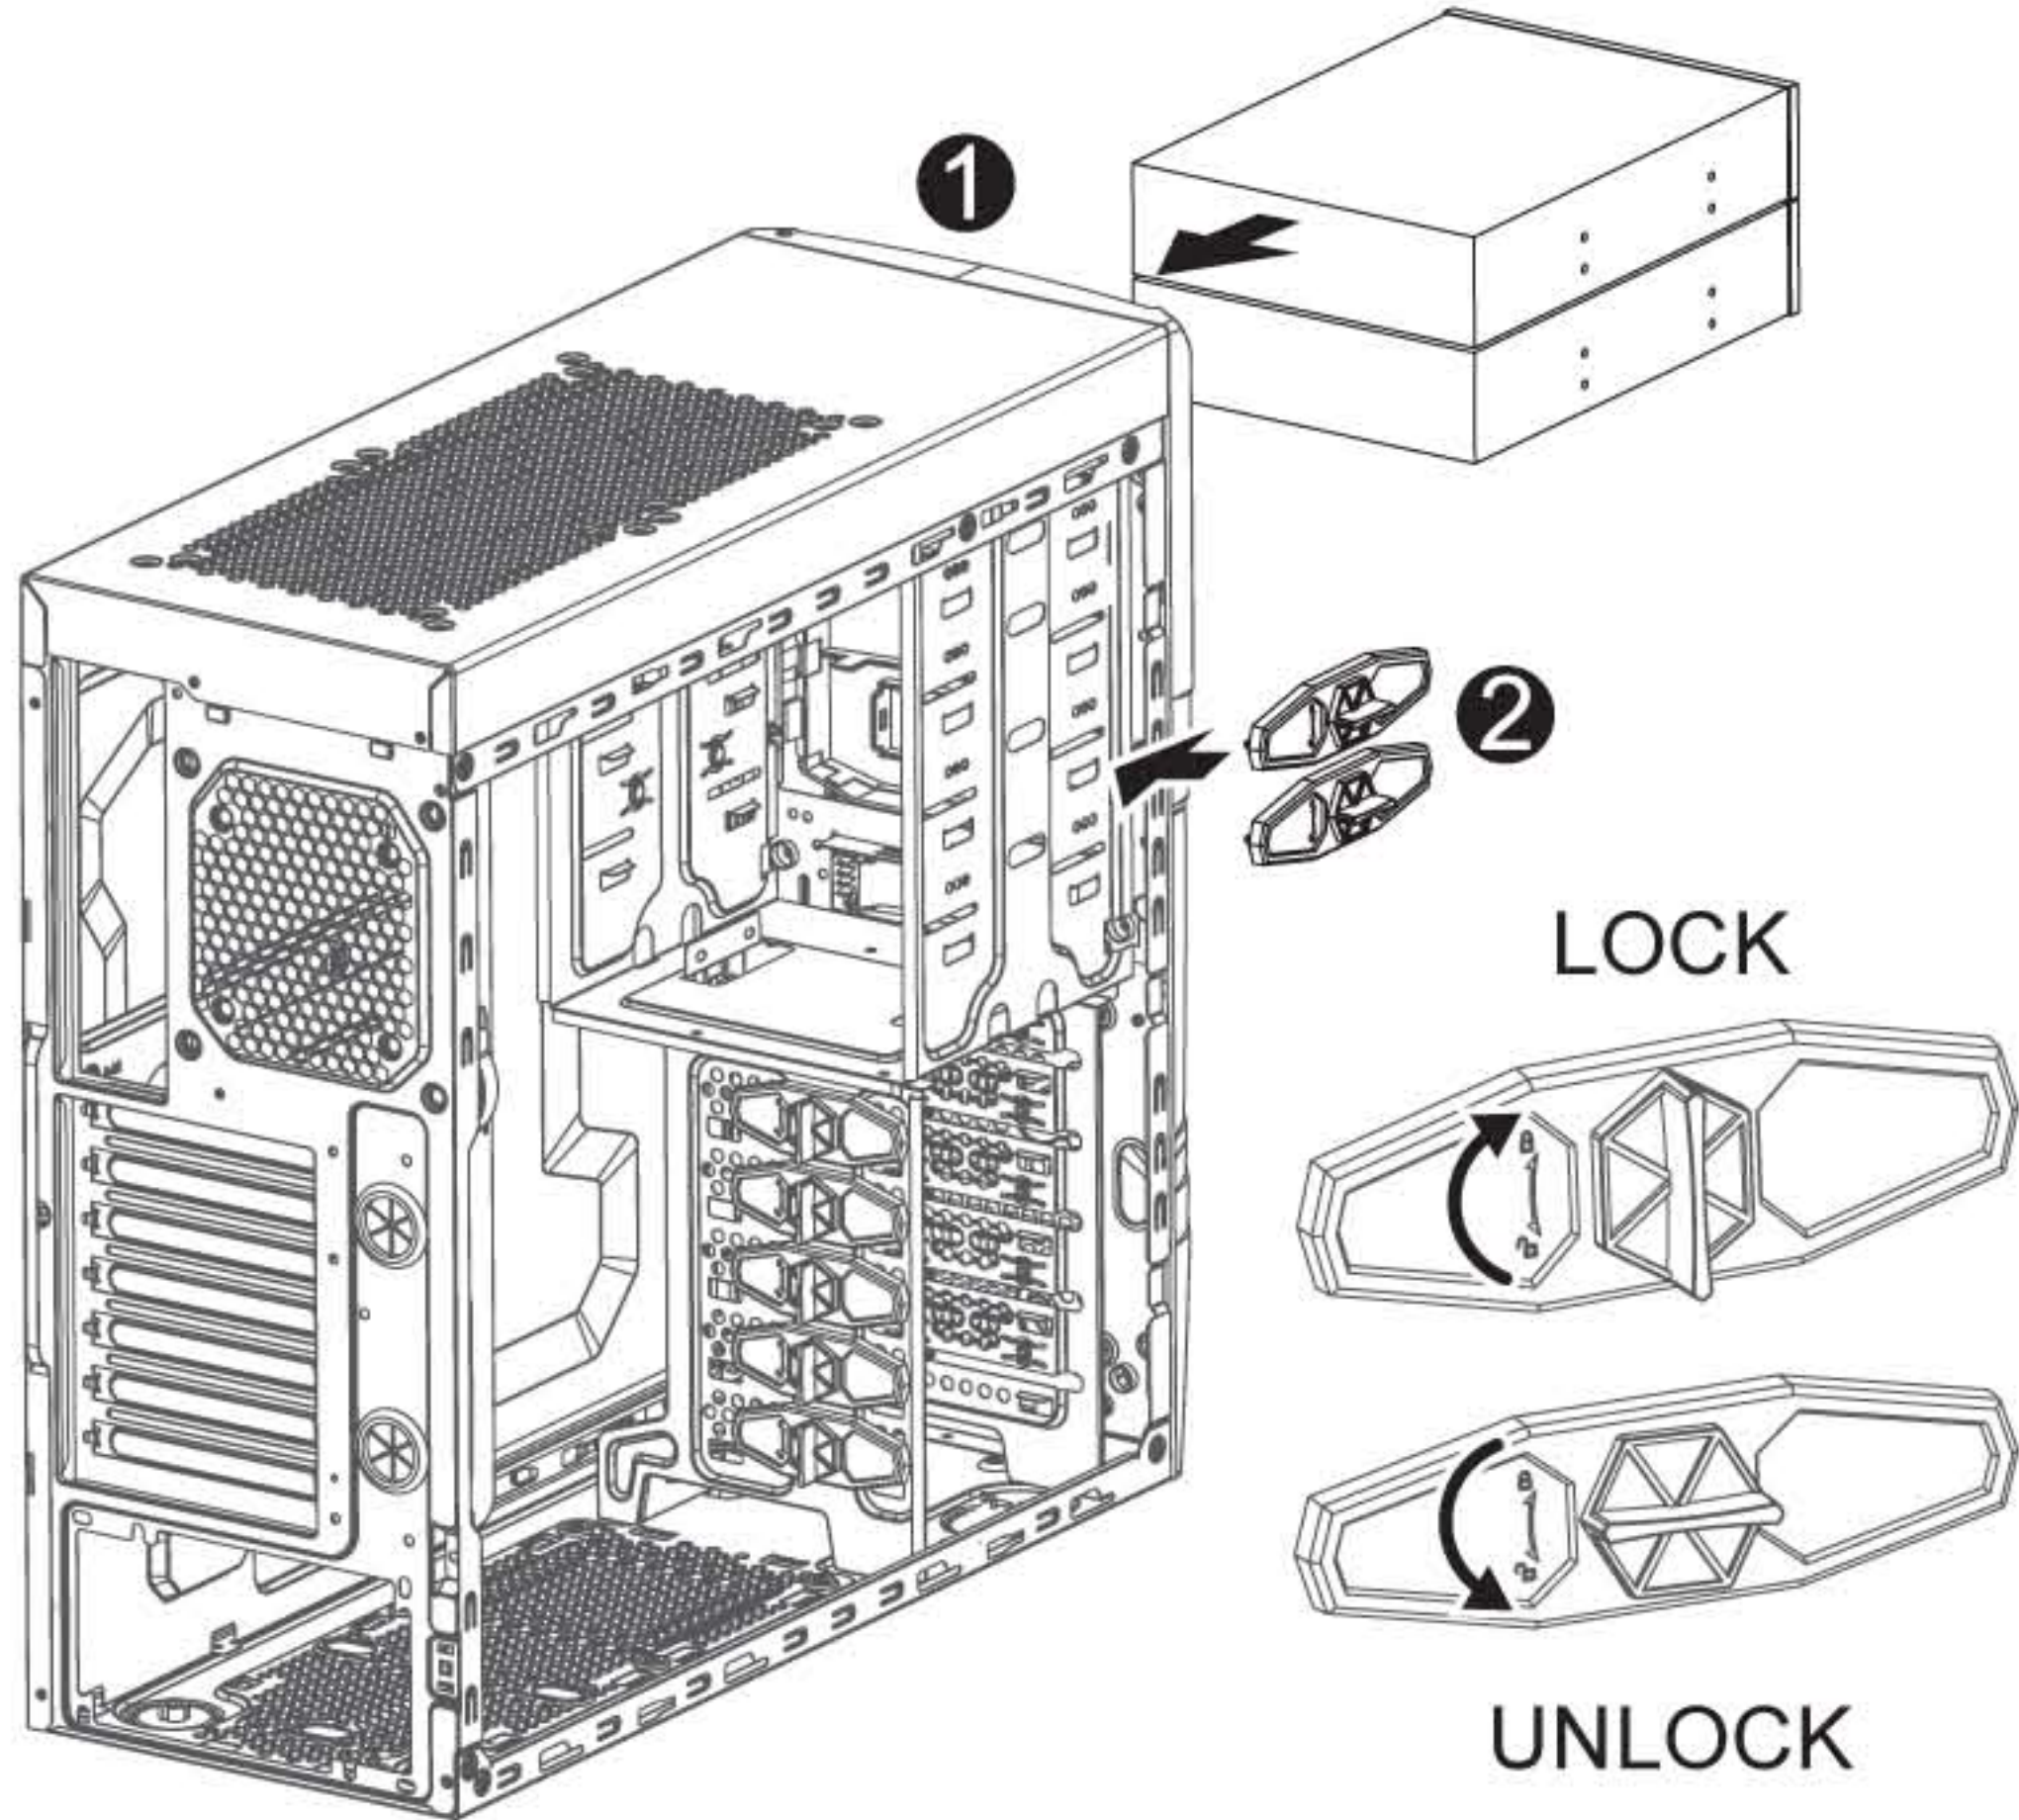

繁體中文

請依圖示照箭頭方向旋轉90度後將扣具自5.25吋裝置架取出。
依圖示安裝你的光碟機或5.25吋裝置。
(免螺絲扣具請順時針方向90度鎖上，逆時針方向90度解開)


日本語

ツール不要のロックを表示された方向に向かって90度回転し、5.25"ドライブベイから取り外します。
ご使用の光学ドライブあるいは5.25"デバイスを、図の通りに設置します。
(ツール不要のロックは、時計回りの方向に90度回転するとロック解除し、反時計回りに90度回転するとロックされます)

한국어

도구가 필요 없는 잠금 장치를 표시된 방향으로 90도로 돌리고 5.25" 드라이브 베이에서 제거하십시오.
광학 드라이브나 5.25" 기기들을 다이어그램에 나타난 대로 설치하십시오.
(도구가 필요 없는 잠금 장치는 시계방향으로 90도 돌리면 풀리고 시계 반대방향으로 90도 돌리면 잠깁니다)

External 3.5" drive/device installation

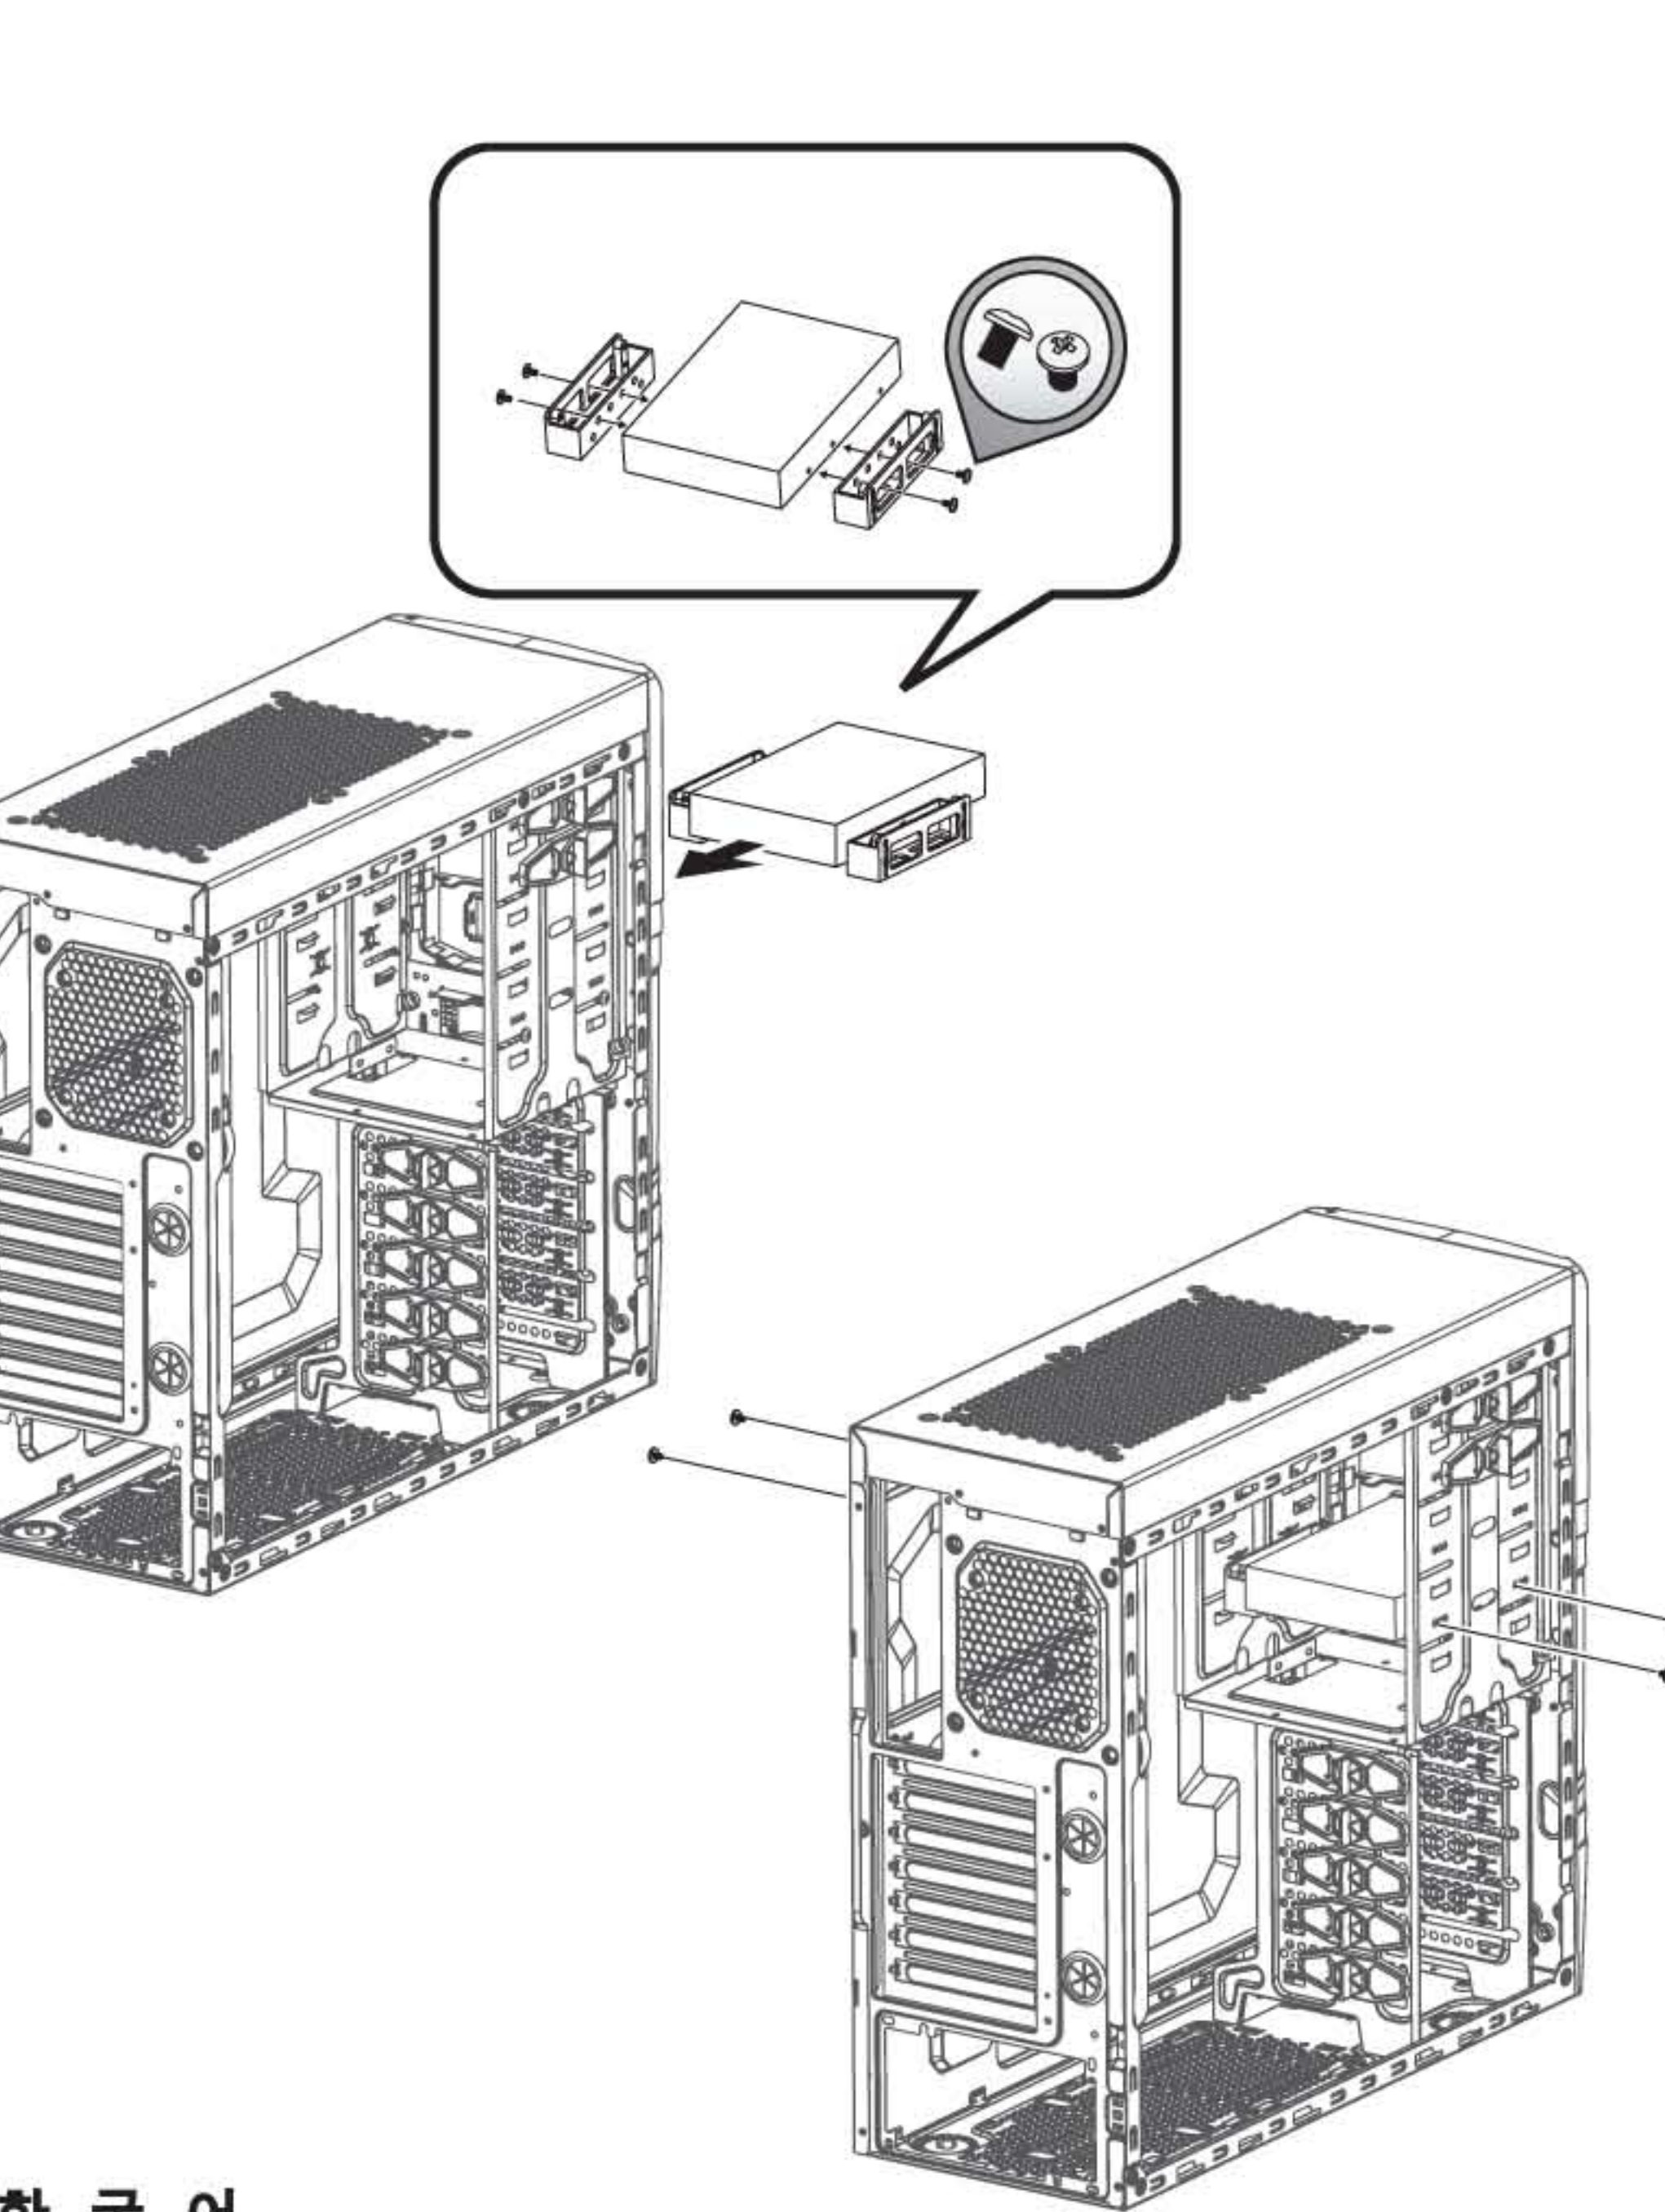

한국어

외부 3.5" 드라이브 또는 기기를 확실히 5.25"~3.25" 변환 브래킷에 장착하고 케이스 내에 그림과 같이 설치하십시오.
5.25" 변환 브래킷을 나사를 이용하여 고정하십시오.

ENGLISH

Turn the tool-less lock 90 degrees toward the indicated direction to remove it from the 5.25" drive bay.
Install your optical drive or 5.25" device as indicated in the diagram.
(Tool-less lock is unlocked by turning it 90 degrees in the clockwise direction and locked by turning 90 degrees in the anti-clockwise direction)

DEUTSCH

Drehen Sie die werkzeuglose Verriegelung um 90 ° in die angezeigte Richtung, anschließend aus dem 5,25-Zoll-Laufwerkschacht herausnehmen.
Installieren Sie das optische Laufwerk oder 5,25-Zoll-Gerät wie in der Abbildung gezeigt. (Die werkzeuglose Verriegelung wird durch 90 °-Drehung im Uhrzeigersinn gelöst, durch 90 °-Drehung gegen den Uhrzeigersinn fixiert.)

FRANÇAIS

Tourner le verrou sans outil par 90 degrés vers la direction indiquée pour le retirer de la baie de disque 5,25".
Installez votre lecteur optique ou un périphérique 5,25" comme indiqué dans l'illustration. (Le verrou sans outil est déverrouillé en le tournant par 90 degrés vers la droite, et verrouillé en le tournant par 90 degrés vers la gauche)

ESPAÑOL

Gire el seguro de activación manual 90 grados hacia la dirección indicada para quitarlo de la bahía para unidades de 5,25".
Instale la unidad óptica o el dispositivo de 5,25" tal y como se indica en el diagrama. (El seguro de activación manual se desbloquea girándolo 90 grados en el sentido de las agujas del reloj y se bloquea girándolo 90 grados en sentido contrario)

ITALIANO

Girare la serratura ad incastro di 90 gradi verso la direzione indicata per rimuoverla dall'alloggio unità 5,25".
Installare l'unità ottica o il dispositivo da 5,25" come indicato nello schema. (La serratura ad incastro si sblocca facendola girare di 90 gradi in senso orario e si blocca facendola girare di 90 in senso antiorario)

РУССКИЙ

Поверните фиксатор на 90° без использования инструментов в указанном направлении, чтобы снять его с отсека для 5,25-дюймовых приводов.
Установите оптический привод или 5,25-дюймовое устройство, как показано на схеме. (Фиксатор открывается без использования инструментов поворотом на 90° по часовой стрелке и закрывается поворотом на 90° против часовой стрелки.)

INDONESIAN

Putar kunci tanpa alat sejauh 90 derajat ke arah yang ditunjukkan untuk melepasnya dari wadah drive 5,25".
Pasang drive optik atau perangkat 5,25" seperti yang ditunjukkan dalam diagram. (Kunci tanpa alat dibuka dengan memutarnya 90 derajat searah jarum jam dan dikunci dengan memutar 90 derajat berlawanan arah jarum jam)

ENGLISH

Secure the external 3.5" drive or device onto the 5.25" to 3.25" transfer bracket and install into the case in the direction as shown.
Secure the 5.25" transfer bracket with screws.

DEUTSCH

Fixieren Sie das 3,5-Zoll-Laufwerk oder -Gerät am 5,25-zu-3,25-Zoll-Adapter, installieren Sie den Adapter wie abgebildet im Gehäuse.
Fixieren Sie den Adapter mit Schrauben.

FRANÇAIS

Attachez le lecteur externe 3,5" ou le périphérique sur le support de transfert 5,25" à 3,25" et insérez-le dans le boîtier dans le sens indiqué.
Attachez le support de transfert 5,25" avec des vis.

ESPAÑOL

Asegure la unidad o el dispositivo externo de 3,5" en el soporte corredero de 5,25" a 3,25" e instálelo en la carcasa en la dirección mostrada.
Asegure el soporte corredero de 5,25" con tornillos.

ITALIANO

Fissare l'unità/dispositivo esterno da 3,5" sulla staffa di trasferimento 5,25" a 3,25" ed installare nel case nella direzione mostrata.
Fissare la staffa di trasferimento 5,25" con viti.

РУССКИЙ

Закрепите внешний 3,5-дюймовый привод или устройство на переходном кронштейне с 5,25 на 3,25 дюйма и установите его в корпус в указанном направлении.
Закрепите 5,25-дюймовый переходный кронштейн винтами.

繁體中文

將5.25"轉3.5"轉接架先鎖固於FDD兩側，再依箭頭方向放入機殼內。
然後再用螺絲固定於5.25吋裝置架。


日本語

外付け3.5"ドライブあるいはデバイスを、5.25"・ツ－・3.25"転換ブラケットの上に固定し、表示された方向に向けてケースに設置します。
5.25転換ブラケットをネジで固定する

INDONESIAN

Kencangkan drive atau perangkat 3,5" eksternal ke braket transfer berukuran 5,25" hingga 3,25", lalu pasang ke casing sesuai arah yang ditunjukkan.
Kencangkan braket transfer 5,25" dengan sekrup.

Hard drive installation

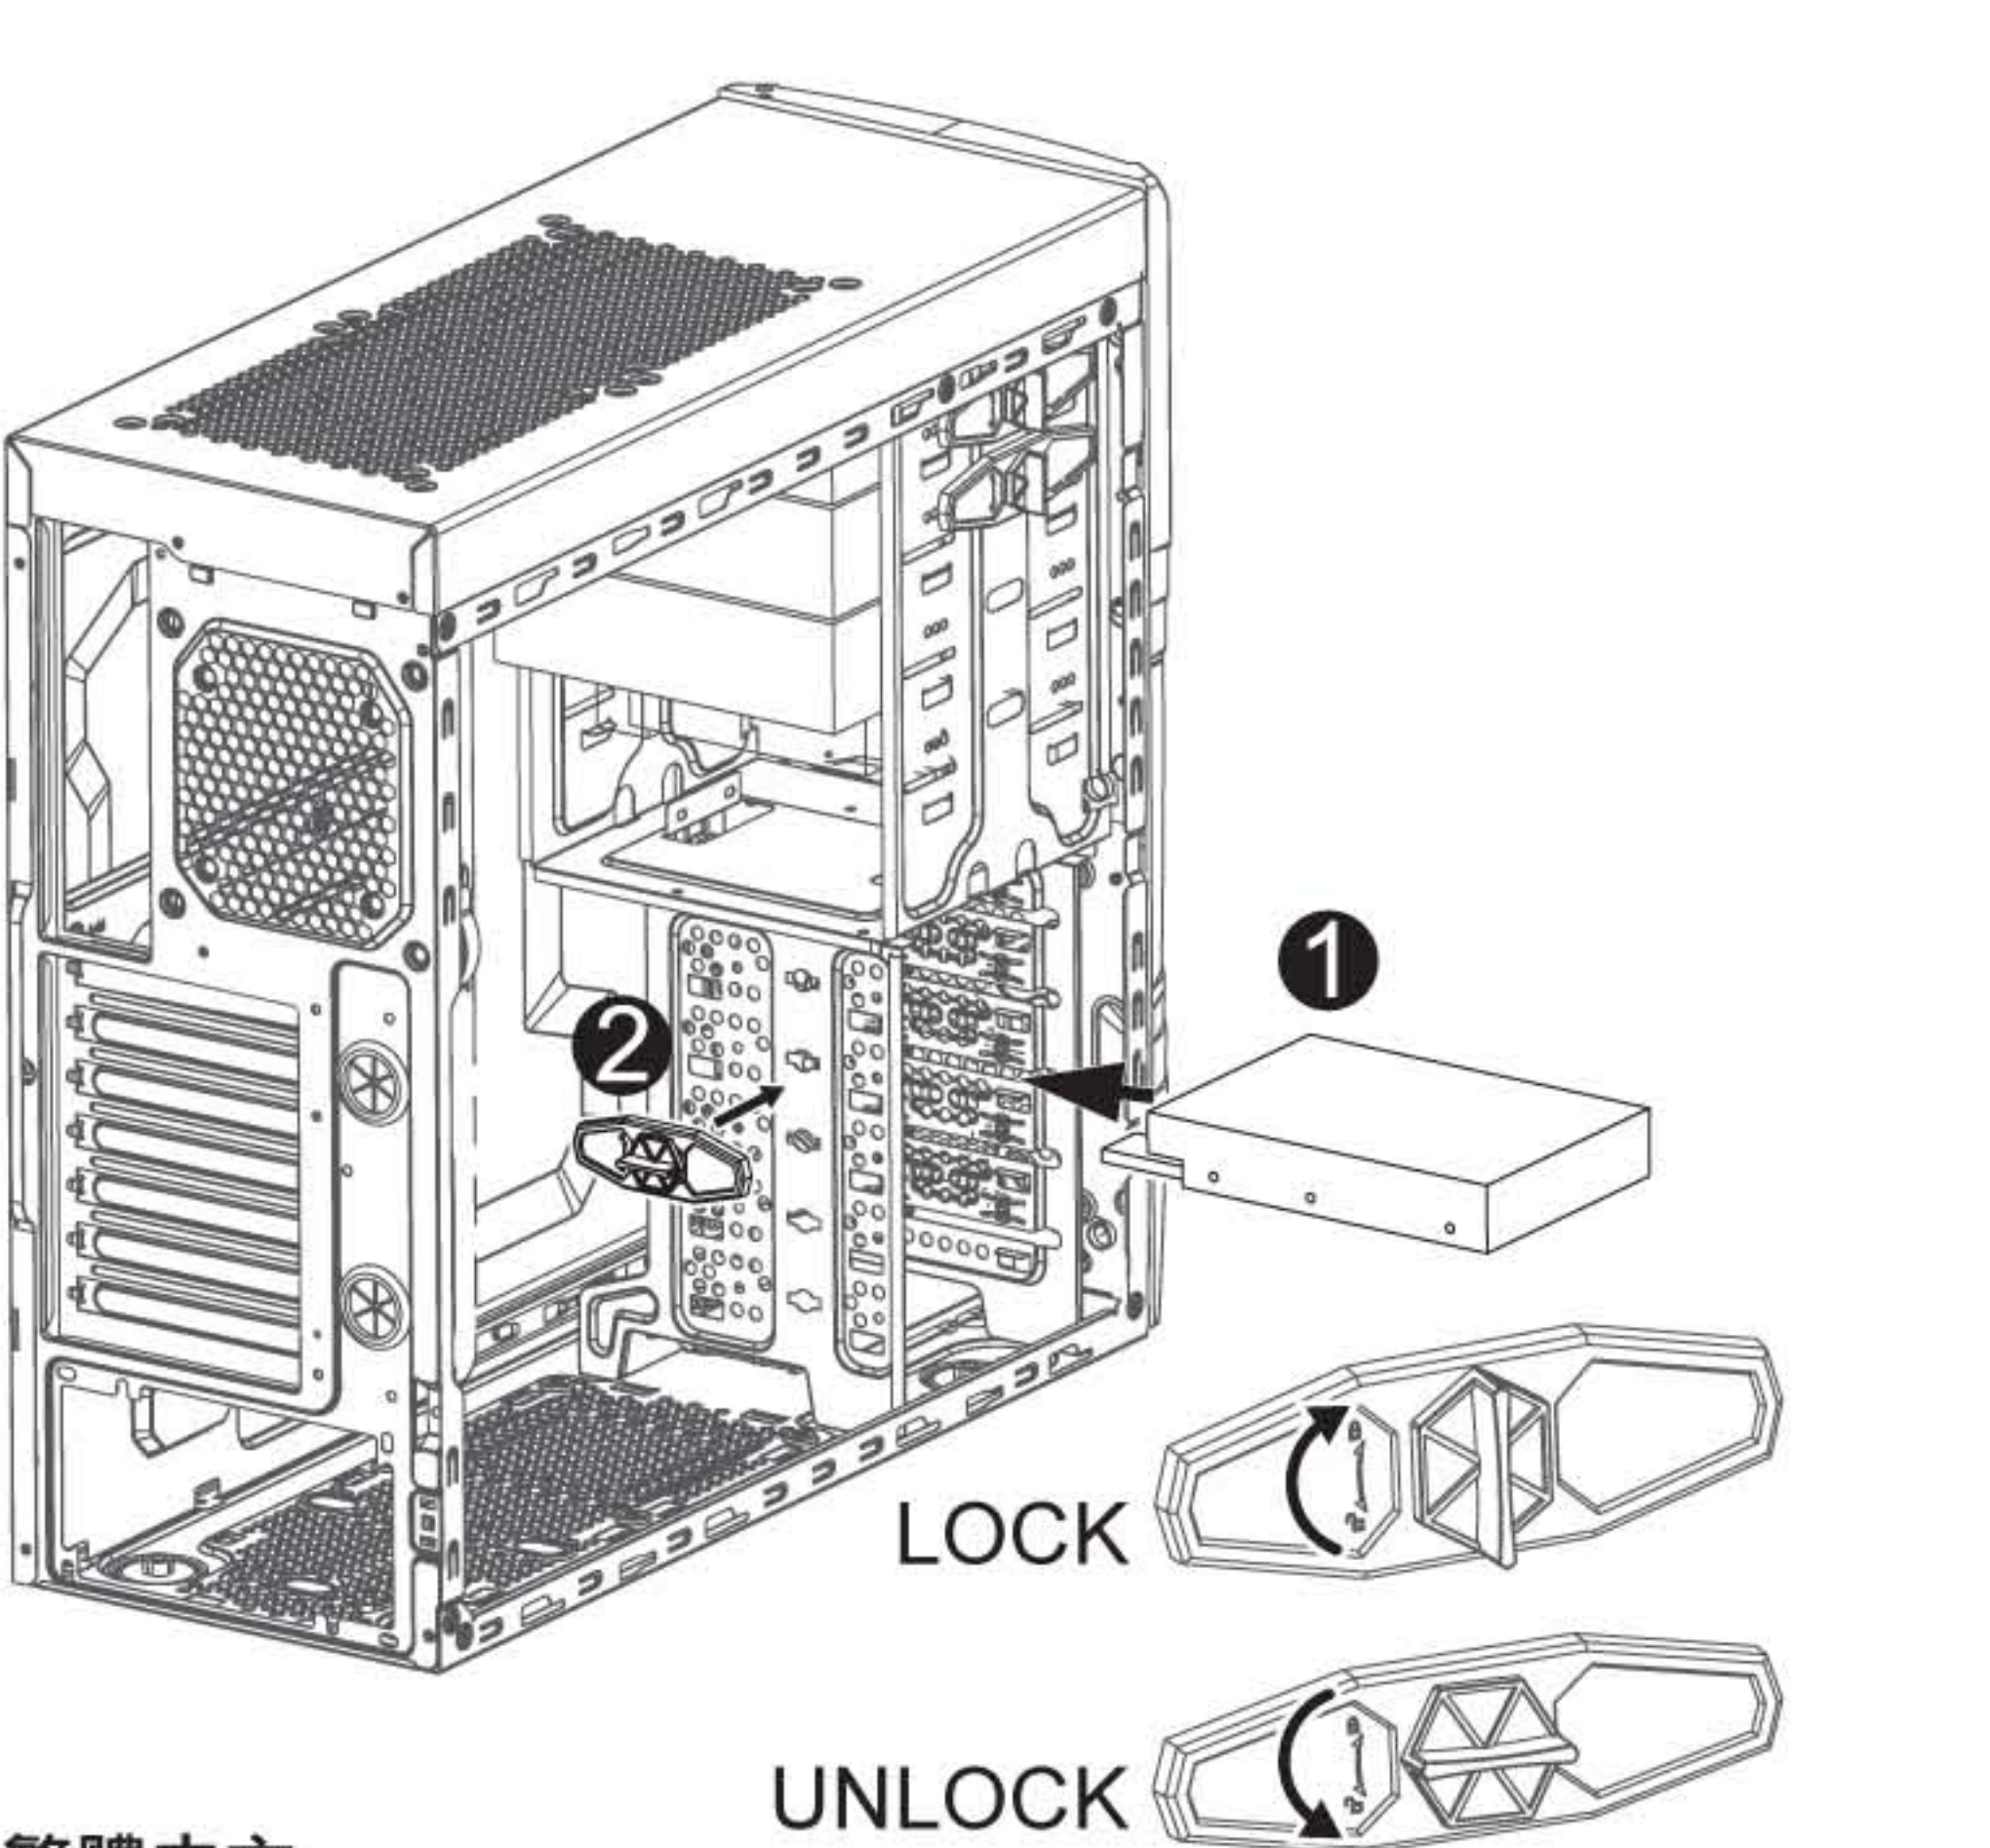

繁體中文

請依圖示照箭頭方向旋轉90度後裝扣具自3.5吋裝置架取出。
安裝您的3.5吋硬碟至硬碟架中。


日本語

ノブを90度（表示された方向）回転させて3.5"ブラケットのロックを解除し、3.5"ラックを取り外します。
ご使用の3.5"ドライブをハードドライブブラケットの上に設置します。

한국어

노브를 표시된 방향으로 90도 돌려 3.5" 브래킷을 풀어 3.5" 랙을 제거하십시오.
3.5" 드라이브를 하드 드라이브 브래킷에 장착하십시오.

SSD installation

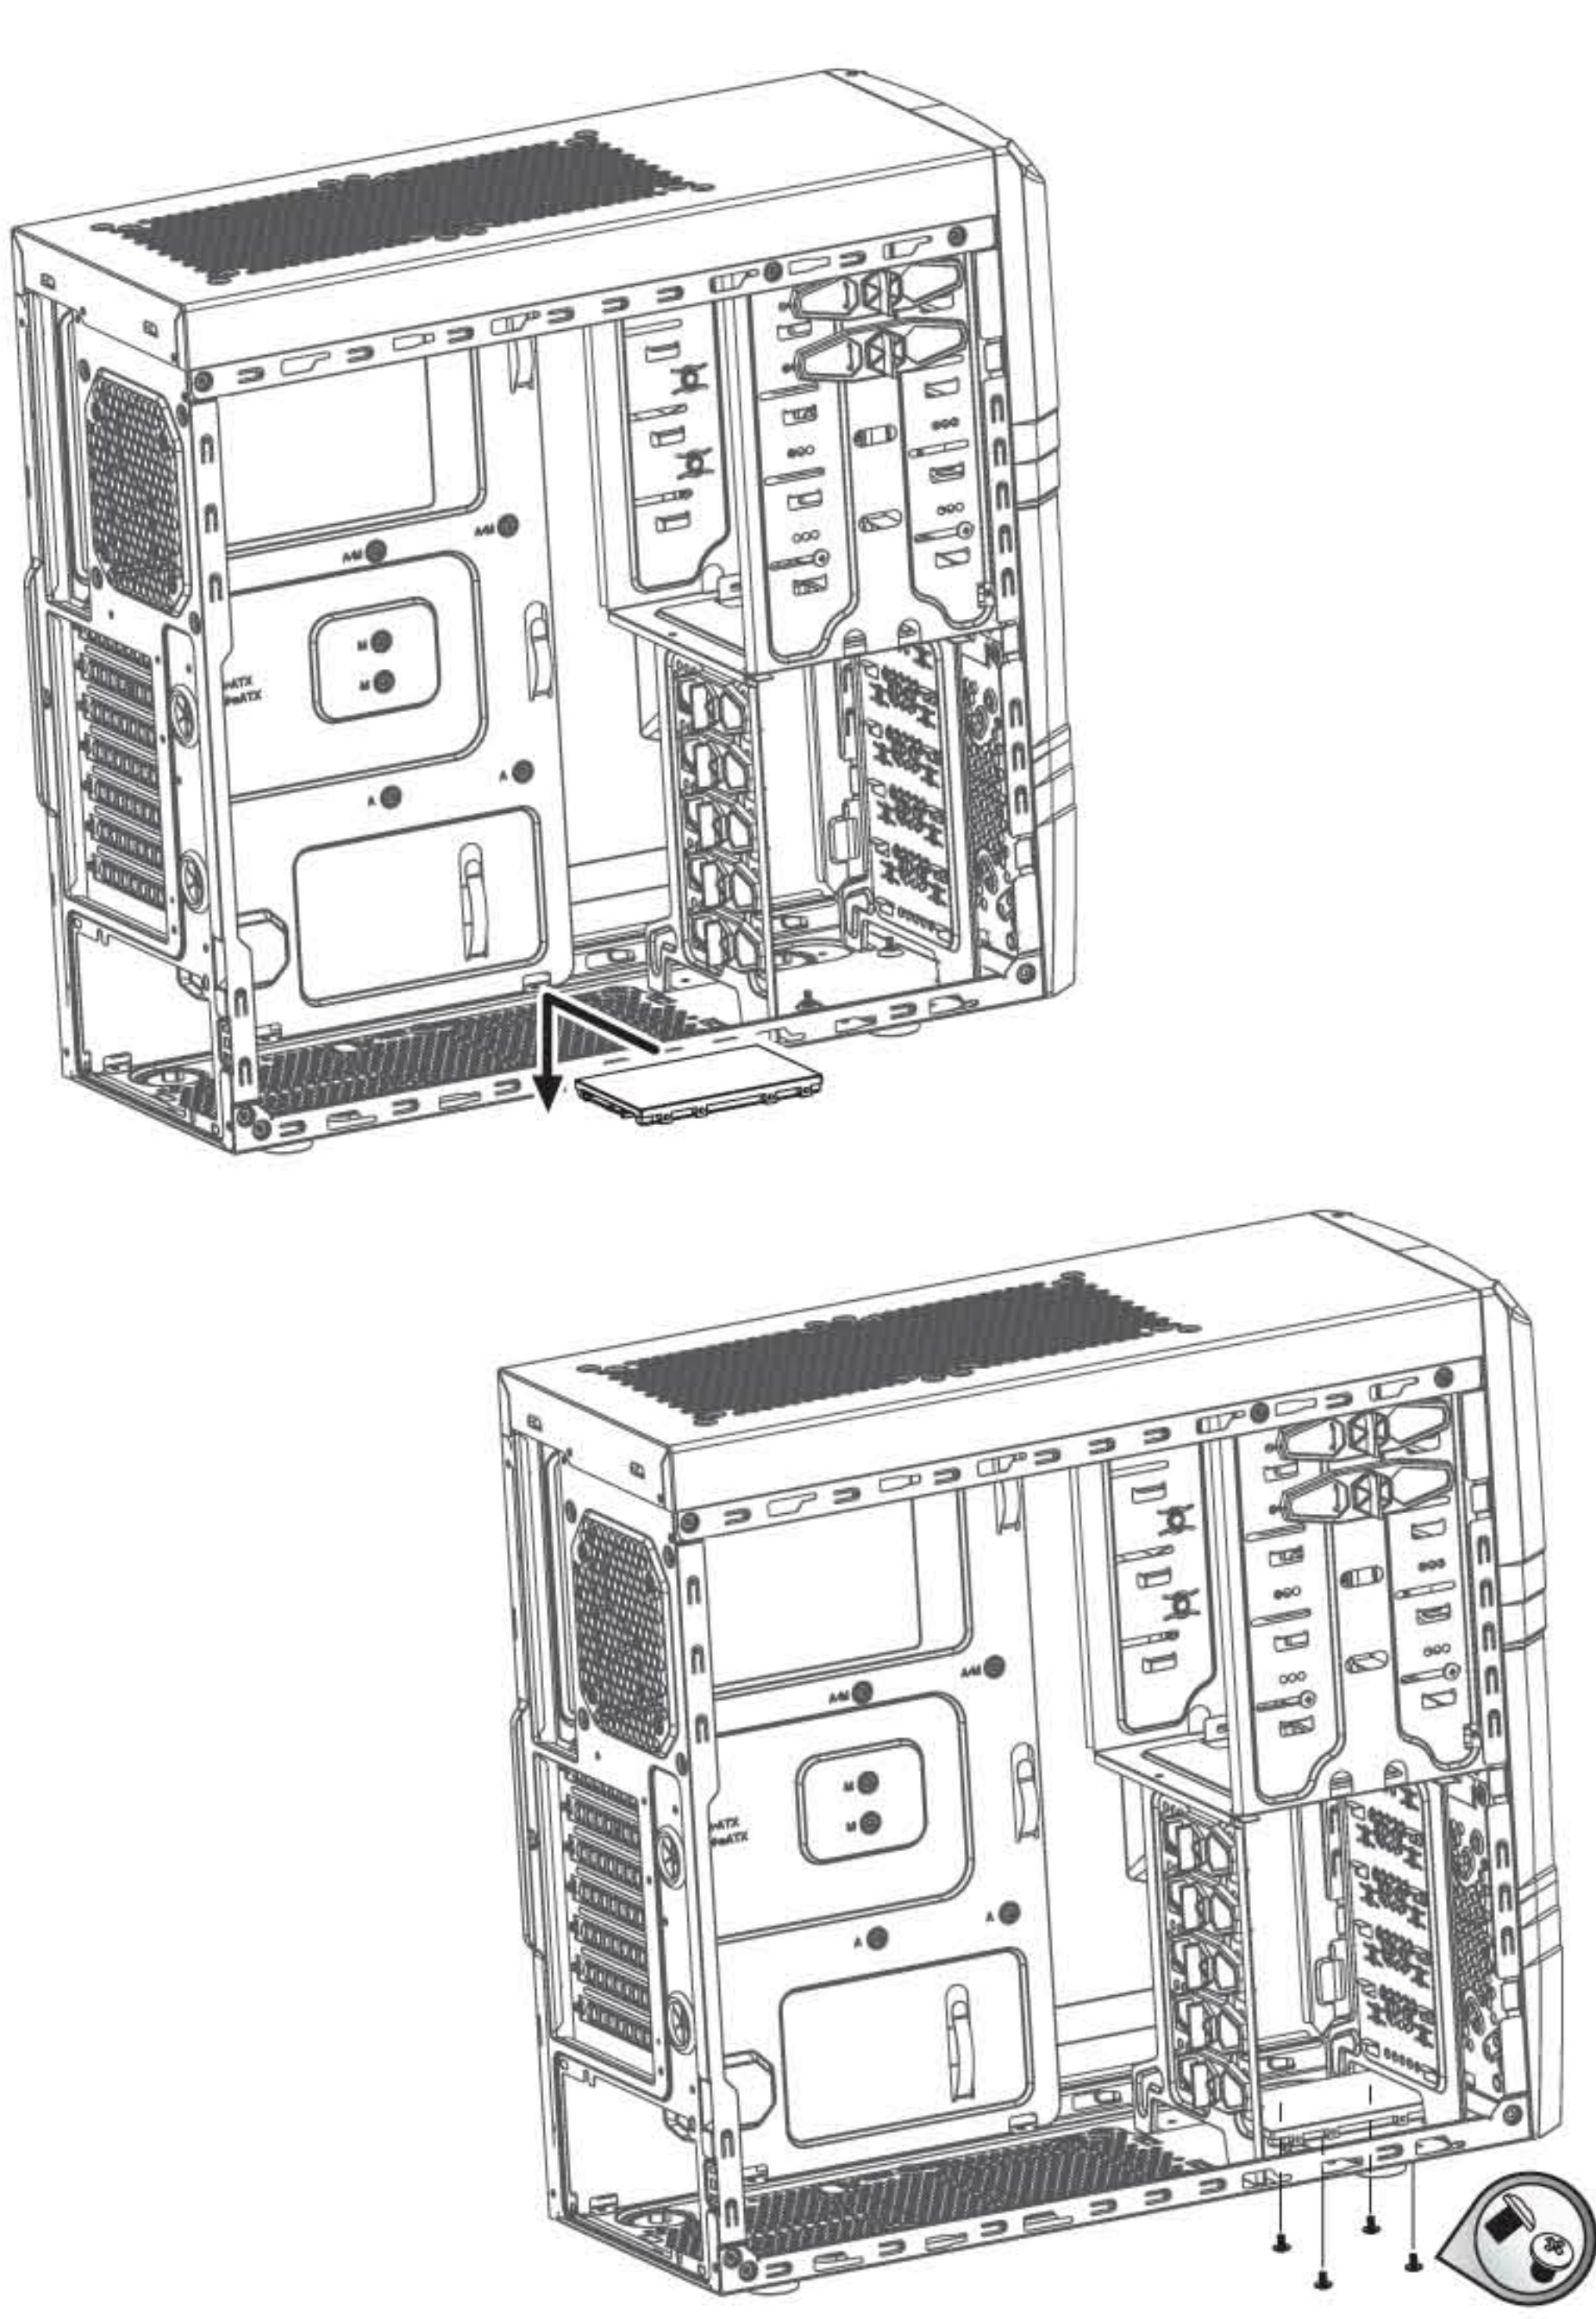

ENGLISH

Unlock the 3.5" bracket by turning the knob 90 degrees in the indicated direction and remove the 3.5" rack.
Install your 3.5" drive onto the hard drive bracket.

DEUTSCH

Lösen Sie die 3,5-Zoll-Halterung durch Drehen des Knopfes um 90 ° in die angegebene Richtung, nehmen Sie die 3,5-Zoll-Halterung heraus.
Installieren Sie in das 3,5-Zoll-Laufwerk in der Festplattenhalterung.

FRANÇAIS

Déverrouillez le support 3,5" en tournant le bouton par 90 degrés dans la direction indiquée et retirez le compartiment 3,5".
Insérez votre disque dur 3,5" dans le support de disque dur.

ESPAÑOL

Desbloquee el soporte de 3,5" girando el mando 90 grados en la dirección indicada y quite dicho soporte.
Instale la unidad de 3,5" en el soporte para unidades de disco duro.

ITALIANO

Sbloccare la staffa 3,5" girando la manopola di 90 gradi nella direzione indicata e rimuovere il rack 3,5".
Installare l'unità 3,5" sul supporto disco rigido.

РУССКИЙ

Откройте 3,5-дюймовый кронштейн, повернув фиксатор на 90° в указанном направлении, и снимите 3,5-дюймовый кронштейн.
Установите 3,5-дюймовый диск в кронштейн для жесткого диска.

INDONESIAN

Lepas braket 3,5" dengan memutar kenop 90 derajat ke arah yang ditunjukkan, lalu lepas rak 3,5".
Pasang drive 3,5" ke braket hard drive.

ENGLISH

Install 2.5" drive into the bottom of the chassis and secure with screws.

DEUTSCH

Installieren Sie das 2,5 Zoll-Laufwerk im unteren Teil des Gehäuses, anschließend mit Schrauben fixieren.

FRANÇAIS

Installez le lecteur 2.5" dans le bas du boîtier et fixez-le avec des vis.

ESPAÑOL

Instale el disco de 2,5" en la parte inferior de la carcasa y fíjelo con tornillos.

ITALIANO

Installare il drive da 2,5" nella parte bassa dello chassis ed assicurarlo alla struttura con le viti in dotazione.

РУССКИЙ

Установите 2,5-дюймовый жесткий диск в нижнюю часть корпуса и закрепите его винтами.

INDONESIAN

Instal 2.5 "drive ke bagian bawah chassis dan aman dengan sekrup.

繁體中文

從機箱底部鎖固四顆螺絲。

日本語

ケース底部に2.5インチドライブを装着し、ネジで固定します。

한국어

2.5"드라이브를 케이스 바닥에 장착한 후 나사로 고정합니다.