

AUS GUTEM GRUND
GRUNDIG

**COMPACT JUG BLENDER
KOMPAKT STANDMIXER**

SM 3330



EN





SAFETY AND SET-UP

Please read this instruction manual thoroughly prior to using this appliance! Follow all safety instructions in order to avoid damage due to improper use!

Keep the instruction manual for future reference. Should this appliance be given to a third party, this instruction manual must also be handed over.

- This appliance is intended for private domestic use only and is not suitable for professional-catering purposes. It should not be used for commercial use.
- The blades are very sharp! Handle the sharp blades with utmost care, especially during removing and cleaning, in order to avoid injuries follow all instructions.
- Check if the mains voltage on the rating label corresponds to your local mains supply. The only way to disconnect the appliance from the mains is to pull the plug from the wall socket.
- For additional protection, this appliance should be connected to a household current fault protection circuit breaker of no more than 30 mA. Consult an electrician for advice.
- Do not immerse the motor housing, power cord, or power plug in water or any other liquids. Do not hold it under running water. Only the lid and the plastic jug can be cleaned safely with water and washing-up liquid in the dishwasher.
- Disconnect the power plug after using the appliance, before cleaning the appliance or leaving the room and if a fault occurs. Do not disconnect the plug by pulling on the cord.
- Do not squeeze or bend the power cord and do not rub it on sharp edges in order to prevent any damage.
- Keep the power cord away from hot surfaces and open flame.
- Do not use an extension cord with the appliance.
- Never use the appliance if the power cord or the appliance is damaged.

SAFETY AND SET-UP

- Our GRUNDIG Household Appliances meet applicable safety standards, thus if the appliance or power cord is damaged, it must be repaired or replaced by an authorised service centre to avoid any dangers. Faulty or unqualified repair work may cause danger and risks to the user.
- Do not dismantle the appliance under any circumstances. No warranty claims are accepted for damage caused by improper handling.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Children shall not play with the appliance.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Do not leave the appliance unattended while it is in use. Extreme caution is advised when the appliance is being used near children and people with limited physical, sensory or mental capabilities.
- Before using the appliance for the first time, clean all parts which come into contact with food carefully. Please see details in the "Cleaning and Care" section.
- Never operate or place any part of this appliance on or near hot surfaces such as a gas burner, hotplate or heated oven.
- Do not use the appliance for anything other than its intended use.
- Never use the appliance in or near to combustible or inflammable places and materials.
- Operate the appliance only with the delivered parts.
- Do not use the appliance with damp or wet hands.

SAFETY AND SET-UP

- Never place the appliance, attachments, power cord or plug on hot surfaces such as gas or electric burners or hot oven surfaces and never use it with hot liquids or food. Let hot food and liquids cool down to min. 80°C or less, before using the appliance.
- Always use the appliance on a stable, flat, clean, dry and non-slip surface.
- Make sure that there is no danger that the power cord could be accidentally pulled or that someone could trip over it when the appliance is in use.
- Position the appliance in such a way that the plug is always accessible.
- The blade unit is very sharp! Handle the blade unit with utmost care, especially during cleaning, in order to avoid injuries.
- Do not use the appliance if the blade unit is damaged or shows signs of wear.
- Never clean the appliance with your bare hands.
- Never try to use the appliance without the lid.
- Do not attempt to remove the lid until the blades have completely stopped.
- A spatula may be used to remove the ingredients from the plastic jug. The appliance must be switched off before doing this.
- Never operate the appliance for longer than necessary for processing the food.
- Remove bones and stones from food to prevent the blade unit and the appliance from being damaged.
- This appliance is only intended for short periods of use and should only be in continuous use for maximum 1 minute. After use, let the appliance cool down sufficiently.
- Do not crush ice cubes.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

AT A GLANCE

Dear Customer,

Congratulations on the purchase of your new GRUNDIG Compact Jug Blender SM 3330.

Please read the following user notes carefully to ensure full enjoyment of your quality GRUNDIG product for many years to come.

A responsible approach!



GRUNDIG focusses on contractually agreed social working conditions with fair wages for both internal employees and suppliers. We also attach great importance to the efficient use of raw materials with continuous waste reduction of several tonnes of plastic every year. Furthermore, all our accessories are available for at least 5 years.

For a future worth living.

For a good reason. Grundig.

Controls and parts

See the figure on page 3.

- A** Cap
- B** Cover opening
- C** Cover
- D** Plastic jug
- E** Mixer blade device
- F** Motor housing
- G** Slow speed button
- H** High speed button
- I** Non-slip feet
- J** Cable reel
- K** Chopper
- L** Beaker blade device
- M** Cover for shredder
- N** Filter

OPERATION

Preparation

Caution

- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- 1 Remove all packaging and sticker materials and dispose of them according to the applicable legal regulations.
 - 2 Take the entire unit of the motor housing **F** and place it on a level surface, e.g. on the kitchen counter.

Caution

- The blade unit is very sharp! Handle the blade unit with utmost care, especially during cleaning, in order to avoid injuries.
- 3 Clean all parts, with the exception of the motor housing **F** as described in "Cleaning and Care".
 - 4 Then re-assemble the jug blender in the reverse order.
 - 5 Put the plastic jug **D** on the motor housing **F**.

Note

- Make sure that the notches on the bottom of the plastic jug **D** fit those in the motor housing **F**.

Blending

- 1 Place the device on an even and dry surface. The non-slip feet **I** ensure the stability of the appliance.
- 2 Make sure that the power cord is disconnected from the power supply.
- 3 Remove the plastic jug **D** from motor housing **F**; to do this, turn the plastic jug **D** in an anti-clockwise direction and lift it upwards; open the cover **C**.
- 4 Now put the ingredients to be blended in the plastic jug **D**. The ingredients should only be about 2-5 cm long.

Notes

- Add water to ensure the jug blender functions smoothly.
- Mix 3 units of hard food and 2 units of water in order to have a smooth jug blender experience. (i.e: 60 gr hard food 40 ml water)

Caution

- Do not put or blend hot food or liquids in the plastic jug **D**. If you process soup, make sure that the liquid temperature does not exceed 40°C.
 - Never let the jug blender operate while empty (without food).
 - Never let the jug blender operate without the plastic jug on the motor housing **F**.
- 5 Close the cover **C**. Ensure that the cap **A** is located and secured in the cover opening **B**. To close, turn in a clockwise direction.
 - 6 Place the plastic container **D** upright on the motor housing **F** and turn in a clockwise direction.

Caution

- Never move or turn the plastic jug after it is properly seated in the place.
- 7 Connect the power plug to a suitable power outlet.
 - 8 Press the required cutting speed **G** or **H**.

Notes

- To operate the blender at the low speed, turn the control dial to "1".
- To mix at a high speed, press the speed regulator **H** to "2".
- To add ingredients during operation: Add the ingredients through the opening in the cover **C**. To do this, turn the cap **C** in an anti-clockwise direction and remove.

Caution

- Never run the blender for longer than 1 minute, otherwise it would overheat.
- After running the appliance for 1 minute, let it cool down before using it again.

OPERATION

- Be sure the motor is switched off and has completely stopped before removing the plastic jug **[D]** from the motor housing **[F]**.
- Do not place any utensil (scraper, fork, etc.) in the glass jug while the blender is operating.
- 9 Pull the power plug out of the power outlet.
- 10 Remove the plastic container **[D]** from the motor housing **[F]**; to do this, turn the plastic container **[D]** in an anti-clockwise direction.
- 11 Take off the lid and pour the mixture into glasses or other containers.

Maximum quantities and processing time

- See table with maximum quantities and processing time.

Ingre-dients	Maximum quantities	Processing time
Fruit	100 - 200 g	20 - 30 Seconds
Fruits	100 - 200 g	20 - 30 Seconds
Fruit juice	100-200 g Fruit + Water (optional)	20 - 30 Seconds
Milkshake	100 g Fruit + 300 ml Milk	20 - 30 Seconds

Shredder

Caution

- Liquid food is not suitable for use of chopper **[K]**.
 - The chopper **[K]** is suitable for ingredients such as meat or onions.
- 1 Cut ingredients into 1-2 cm pieces and add to the container.
 - 2 Position the beaker blade device, **[L]** on the beaker by turning it in an anti-clockwise direction.

- 3 Position the beaker upright on the motor housing by turning it in a clockwise direction.
- 4 Connect the power cable to a suitable socket.
- 5 Press the required cutting speed.
- 6 Open the blade device **[L]** by turning it in a clockwise direction.

Filter (optional)

- You can also grind fresh coffee with the filter **[N]**. The filter ensures that the beans are collected quicker and that they are more finely ground.
 - You can also use the filter **[N]** to prepare refreshing fruit juices, cocktails, or soya milk. The filter ensures that the juice remains free of seeds.
- 1 Add the coffee beans to the filter **[N]**.
 - 2 Place the filter **[N]** in the plastic container.
 - 3 Put on the cover **[C]**.
 - 4 Place the plastic container **[D]** upright on the motor housing **[F]** and turn in a clockwise direction.

INFORMATION

Tips for blending

- To add food while the blender is operating, remove the cap **A** and drop the ingredients through the opening. Be sure to cut the food into about 2-5 cm pieces to fit through the opening. Replace the cap **A** when you have finished adding ingredients.
- When blending solid food, such as raw vegetables, cooked or uncooked meat and fruits always cut them into no larger than 2-5 cm pieces before placing them into the plastic jug. Blend no more than 2 cups of these food at a time. This will speed the blending process and reduce wear on the blending blades.
- Always place liquid ingredients in the plastic jug first, unless a recipe specifically states otherwise.
- To blend beverages, place all ingredients in the plastic jug at the same time.
- Avoid overblending. Usually, you will need to blend for a few seconds.
- Overblending may cause food to become mushy.

Cleaning and care

Caution

- Never use petrol, solvents, abrasive cleaners, or metal objects and hard brushes to clean the appliance.
- The blades of the cutter unit are very sharp! Handle the blades with utmost care in order to avoid injuries.
- Never clean the appliance with your bare hands.
- Clean the jug blender after each use. Do not let any food remnants harden on and inside the jug blender. This will make it more difficult to clean it later.

- Do not use boiling water. The blade assembly bearings have been designed with a lifetime lubricant; exposure to boiling water may damage these bearings and shorten the life of the blender.
- 1 Turn the appliance off and disconnect it from the wall socket.
 - 2 Allow the appliance to cool down.
 - 3 Remove the plastic jug **D** from the motor housing **F**. Rinse with water to remove any large food particles that may have accumulated in the plastic jug.
 - 4 Replace the plastic jug **D** on the motor housing **F**.
 - 5 Place 1 to 1 ½ cups warm water with some drops of mild cleanser into the glass jug **D** and switch to speed "2" for a few seconds. Remove the plastic jug from the motor housing **F** and rinse with water. Repeat as necessary.

Note

- Do not immerse the motorized base or blade unit in liquid, or place them in the dishwasher. Only the lid and the plastic jug may be immersed and placed in the dishwasher.
- 6 Use a damp soft cloth and some mild cleanser to clean the exterior of the appliance.
 - 7 Wipe the blender base, cutter unit **F** and lid with a lint free cloth before the next usage.

Storage

If you do not plan to use the appliance for a long period of time, please store it carefully. Make sure the appliance is unplugged and completely dry.

Store the appliance in a cool, dry place. Make sure the appliance is kept out of the reach of children.

Environmental note

This product has been made from high-quality parts and materials which can be re-used and are suitable for recycling.



Therefore, do not dispose the product with normal household waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. This is indicated by this symbol on the product, in the operating manual and on the packaging.

Please consult your local authorities to find out where the nearest collection point is.

Help protect the environment by recycling used products.

Technical data



This product conforms to the European directives 2004/108/EC, 2006/95/EC, 2009/125/EC and 2011/65/EU.

Power supply: 220 - 240V~, 50/60 Hz

Power: 350 W

Technical and design modifications reserved.

FOR A GOOD REASON

GRUNDIG

Grundig Intermedia GmbH
Beuthener Strasse 41
D-90471 Nürnberg

www.grundig.com
72011 909 5900 15/28