


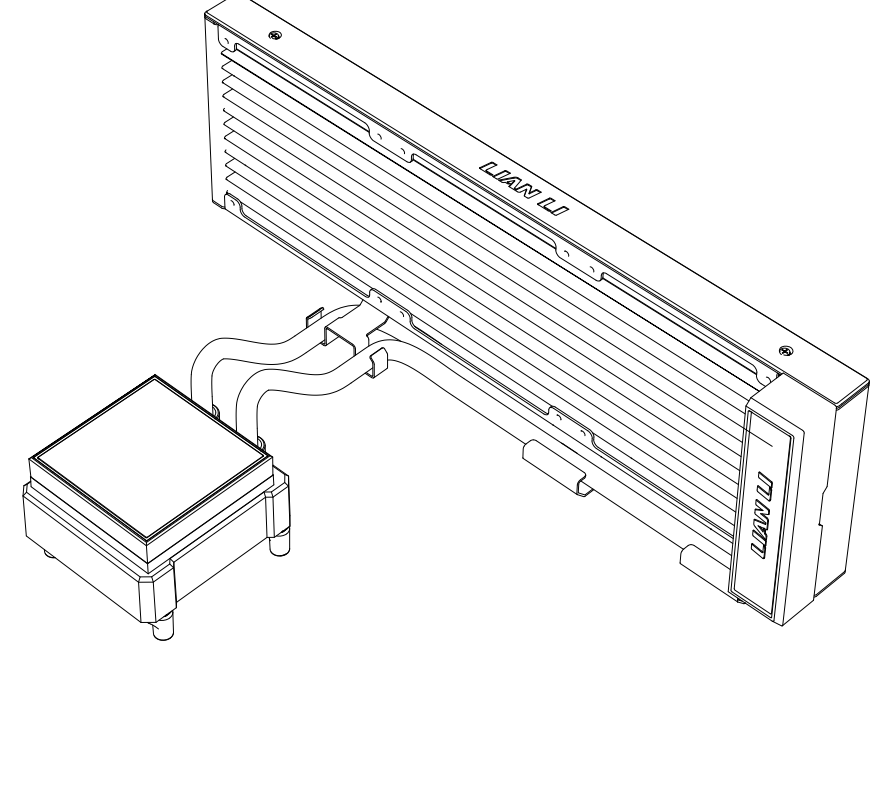


HYDROSHIFT II LCD-S 360N




INSTALLATION GUIDE/安装指南/安装图例

HYDROSHIFT II LCD-S 360N

Hardware List/零件盒目录/零件盒目录一览表

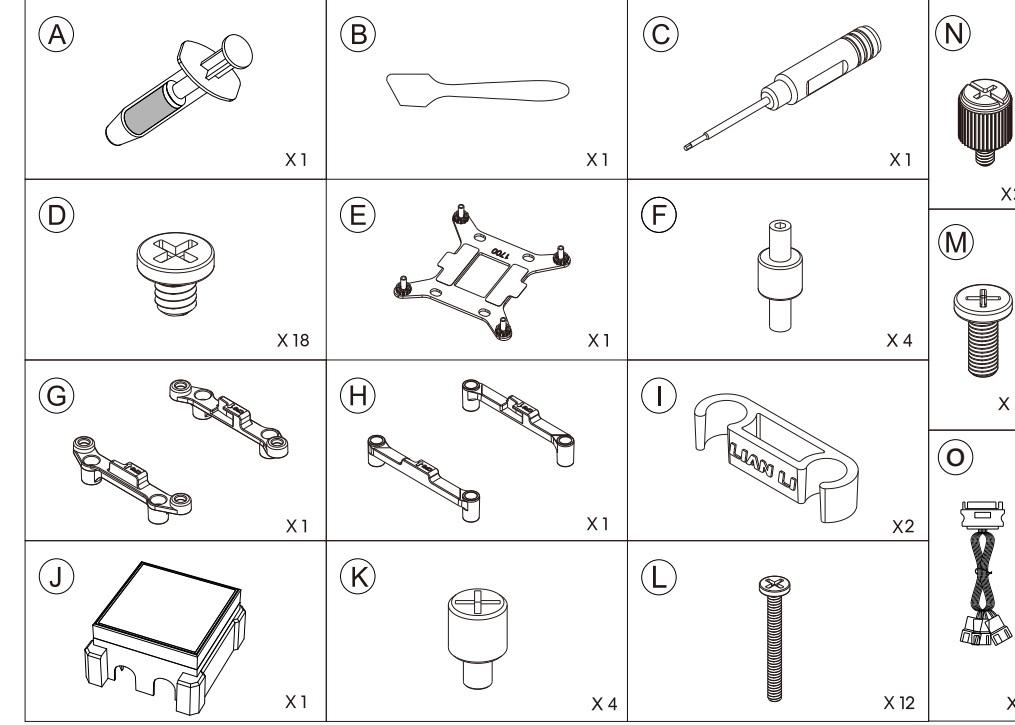


Dimension Compatibility Check/安装尺寸兼容/安装尺寸确认

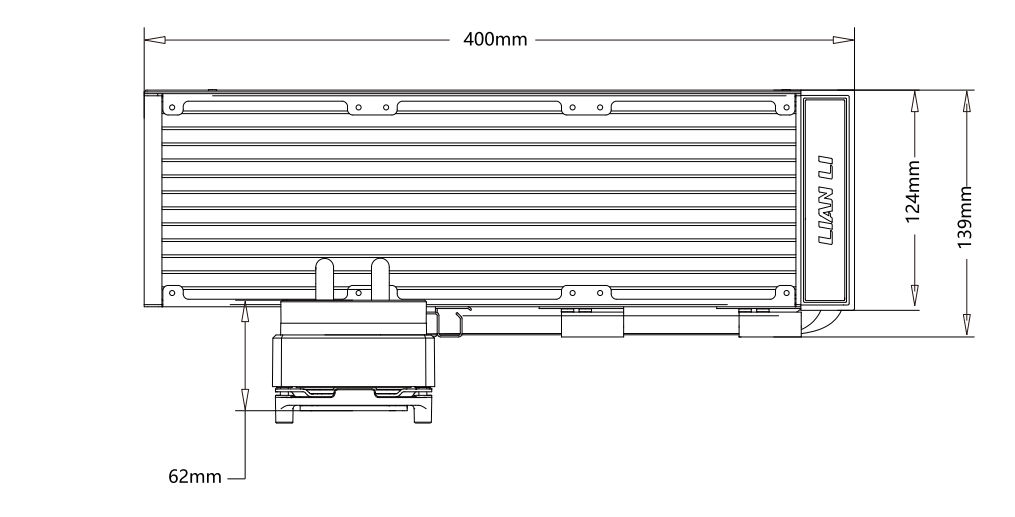


HYDROSHIFT II LCD-S 360N

Fan assembly/风扇组装/风扇组装

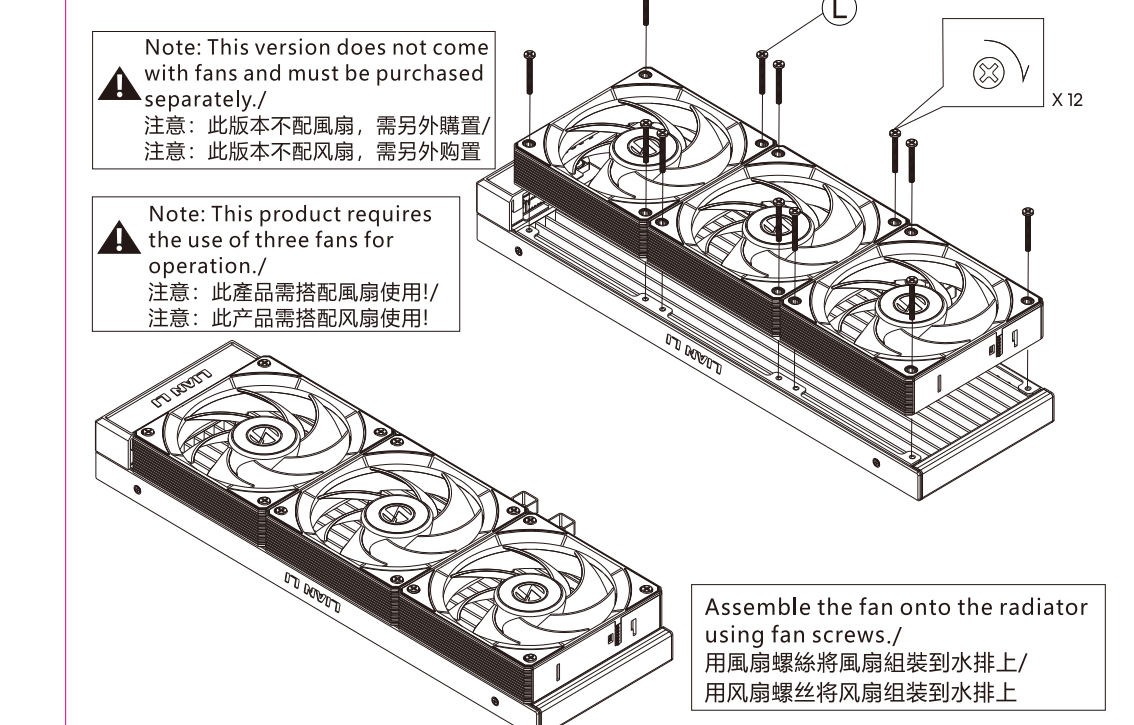


Adjust the position of the water pipe/调整水管位置/调整水管位置

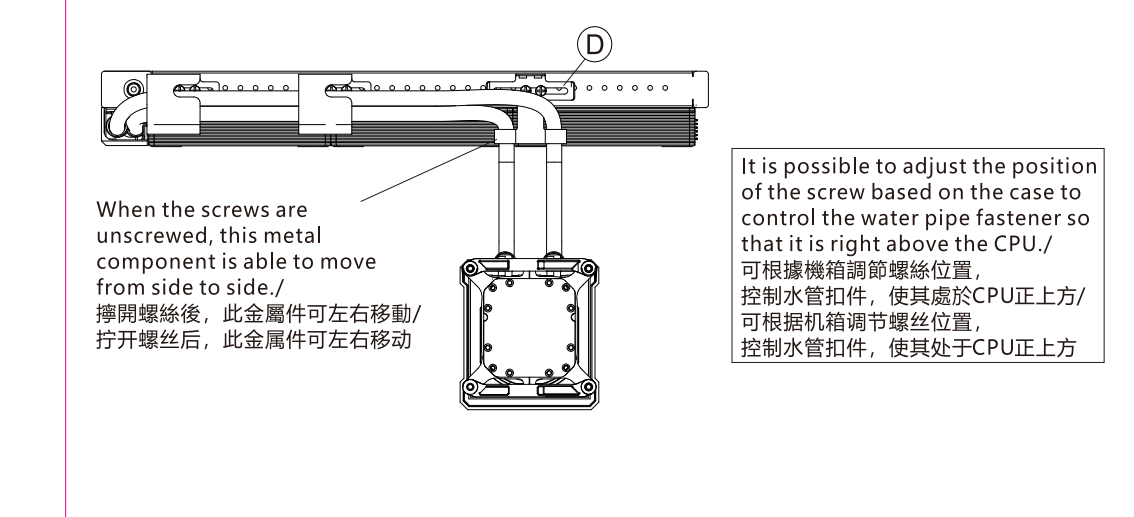


HYDROSHIFT II LCD-S 360N

Intel LGA1700/1851 installation steps/intel LGA1700/1851 安装步骤/intel LGA1700/1851 安装步骤

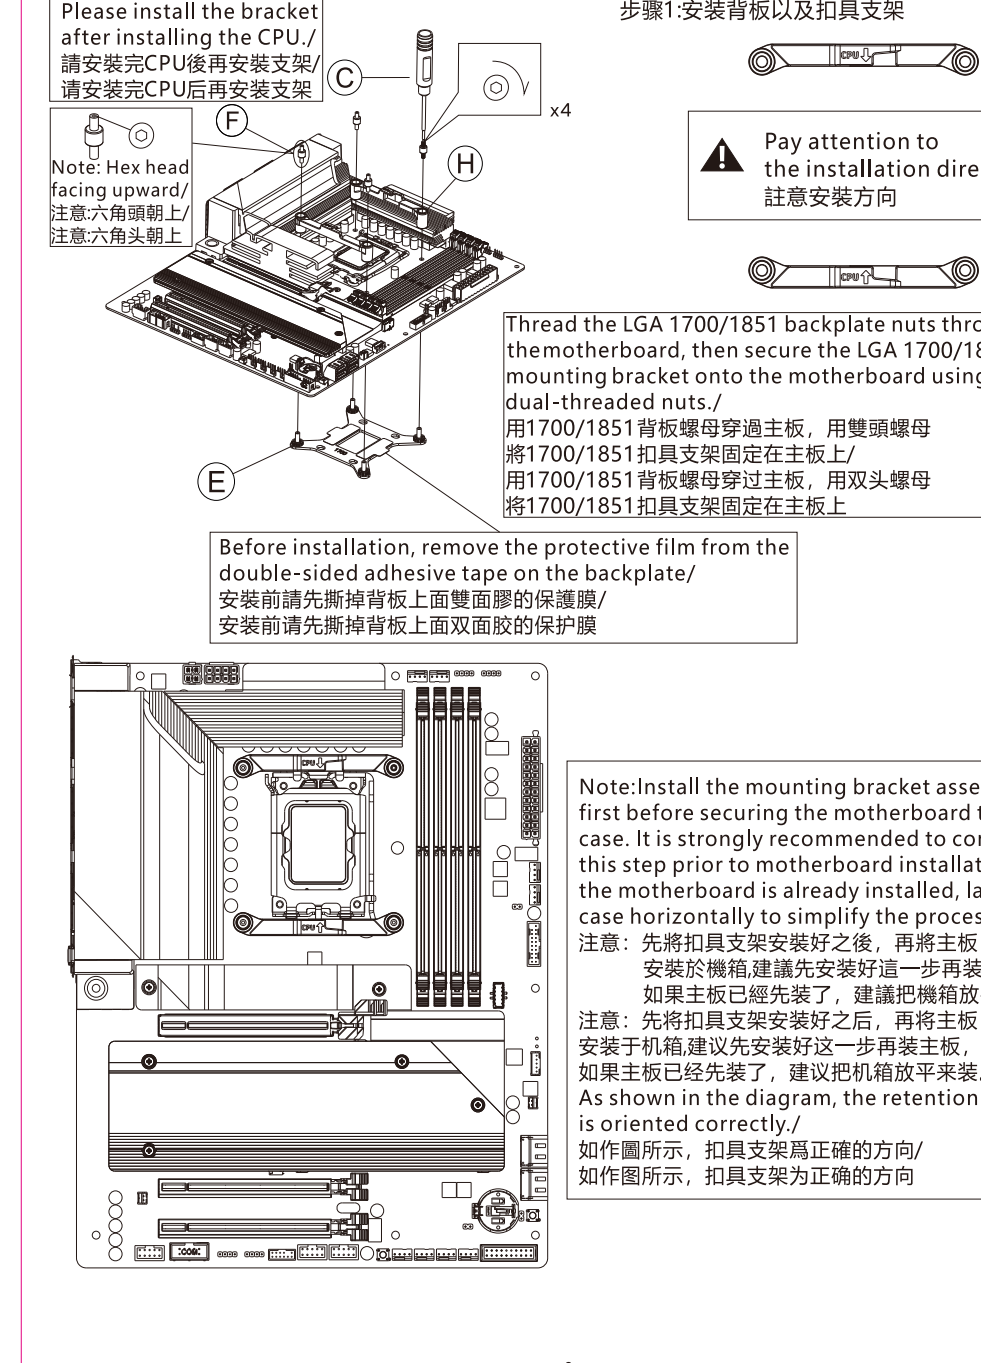


HYDROSHIFT II LCD-S 360N

Intel LGA1700/1851 installation steps/intel LGA1700/1851 安装步骤/intel LGA1700/1851 安装步骤

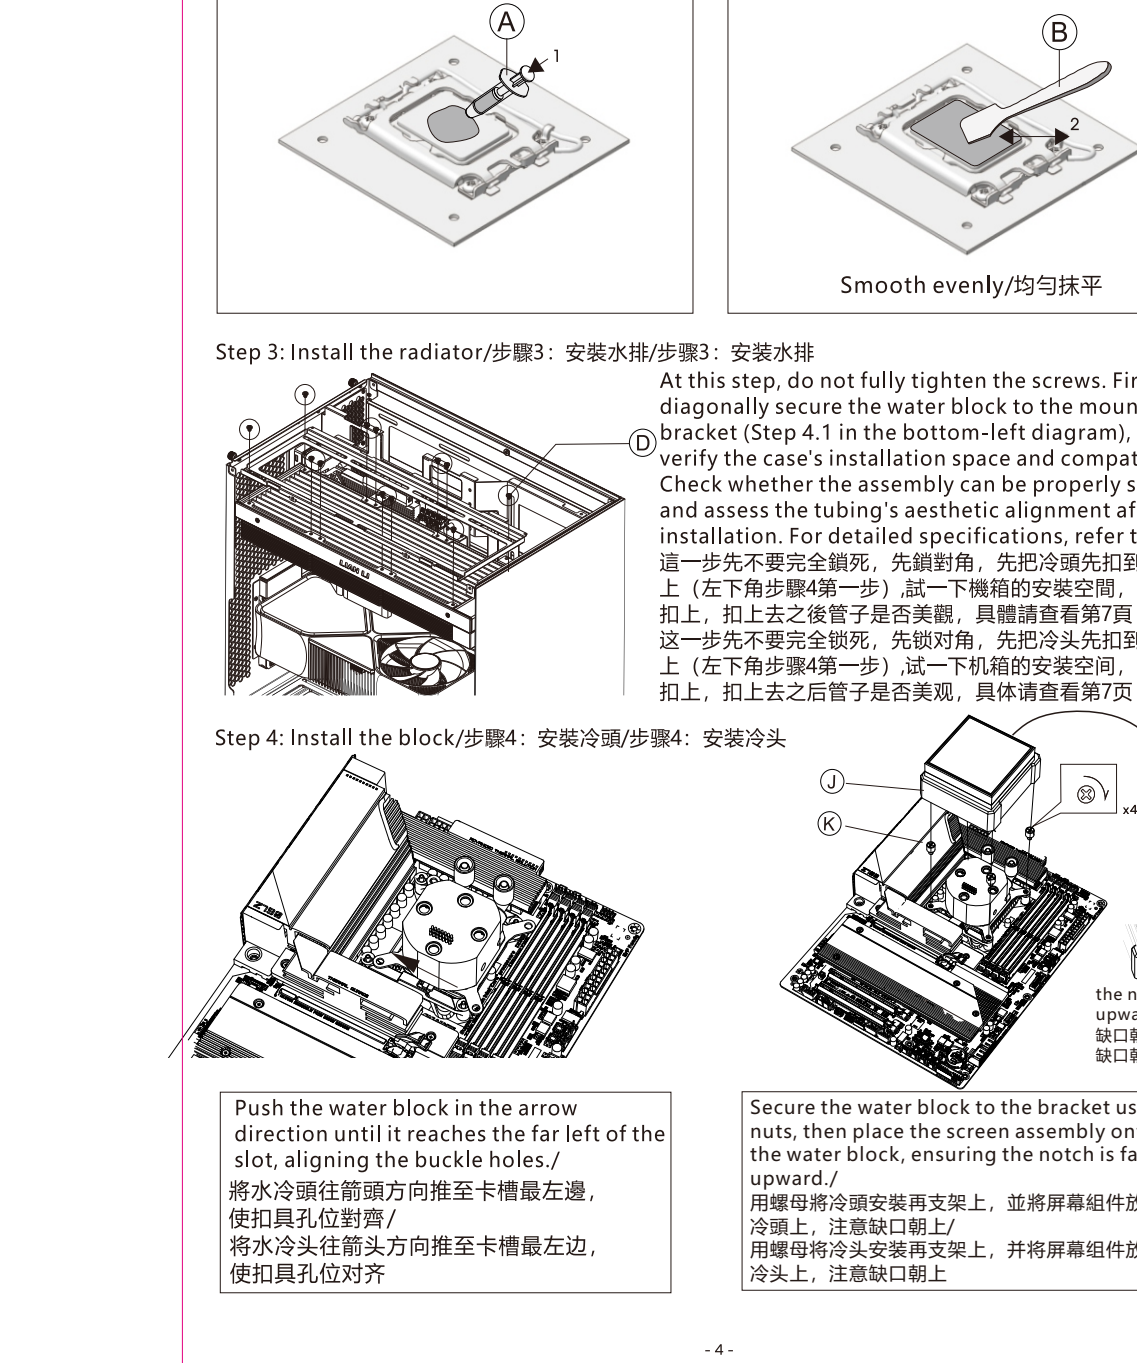


HYDROSHIFT II LCD-S 360N

AMA/AMS Installation steps/AMA/AMS 安装步骤/AMA/AMS 安装步骤

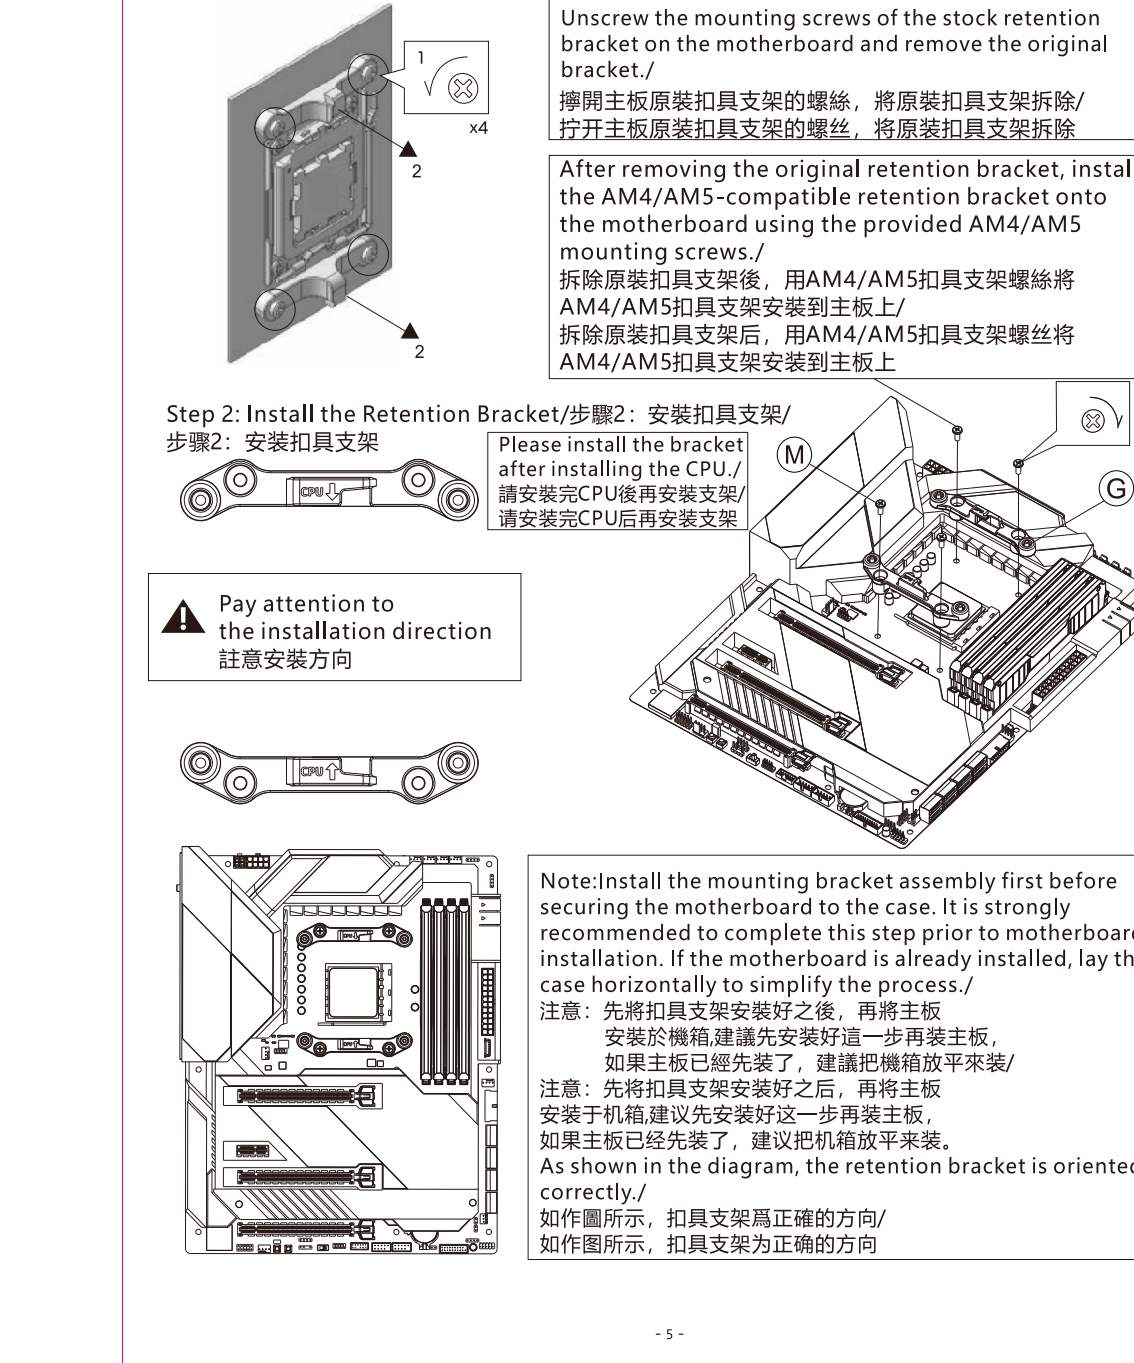

HYDROSHIFT II LCD-S 360N

AMA/AMS Installation steps/AMA/AMS 安装步骤/AMA/AMS 安装步骤

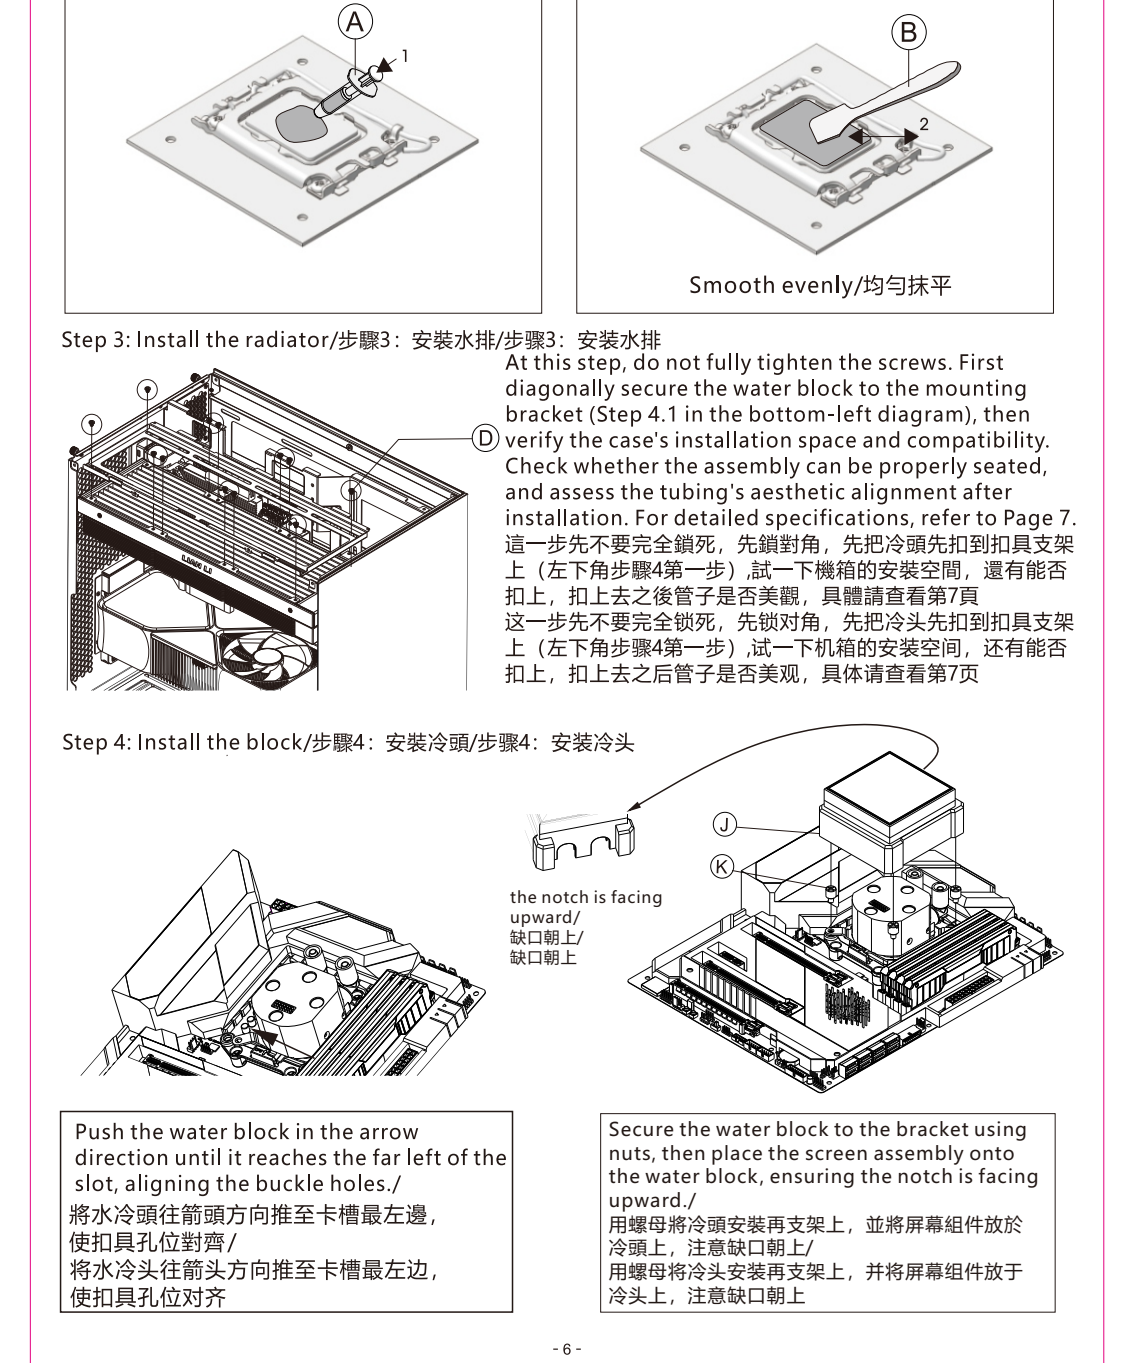


HYDROSHIFT II LCD-S 360N

Chassis Installation Space Check/机箱安装空间检查/机箱安装空间检查




HYDROSHIFT II LCD-S 360N

Coolant Tubing Management/水管管理/水管管理

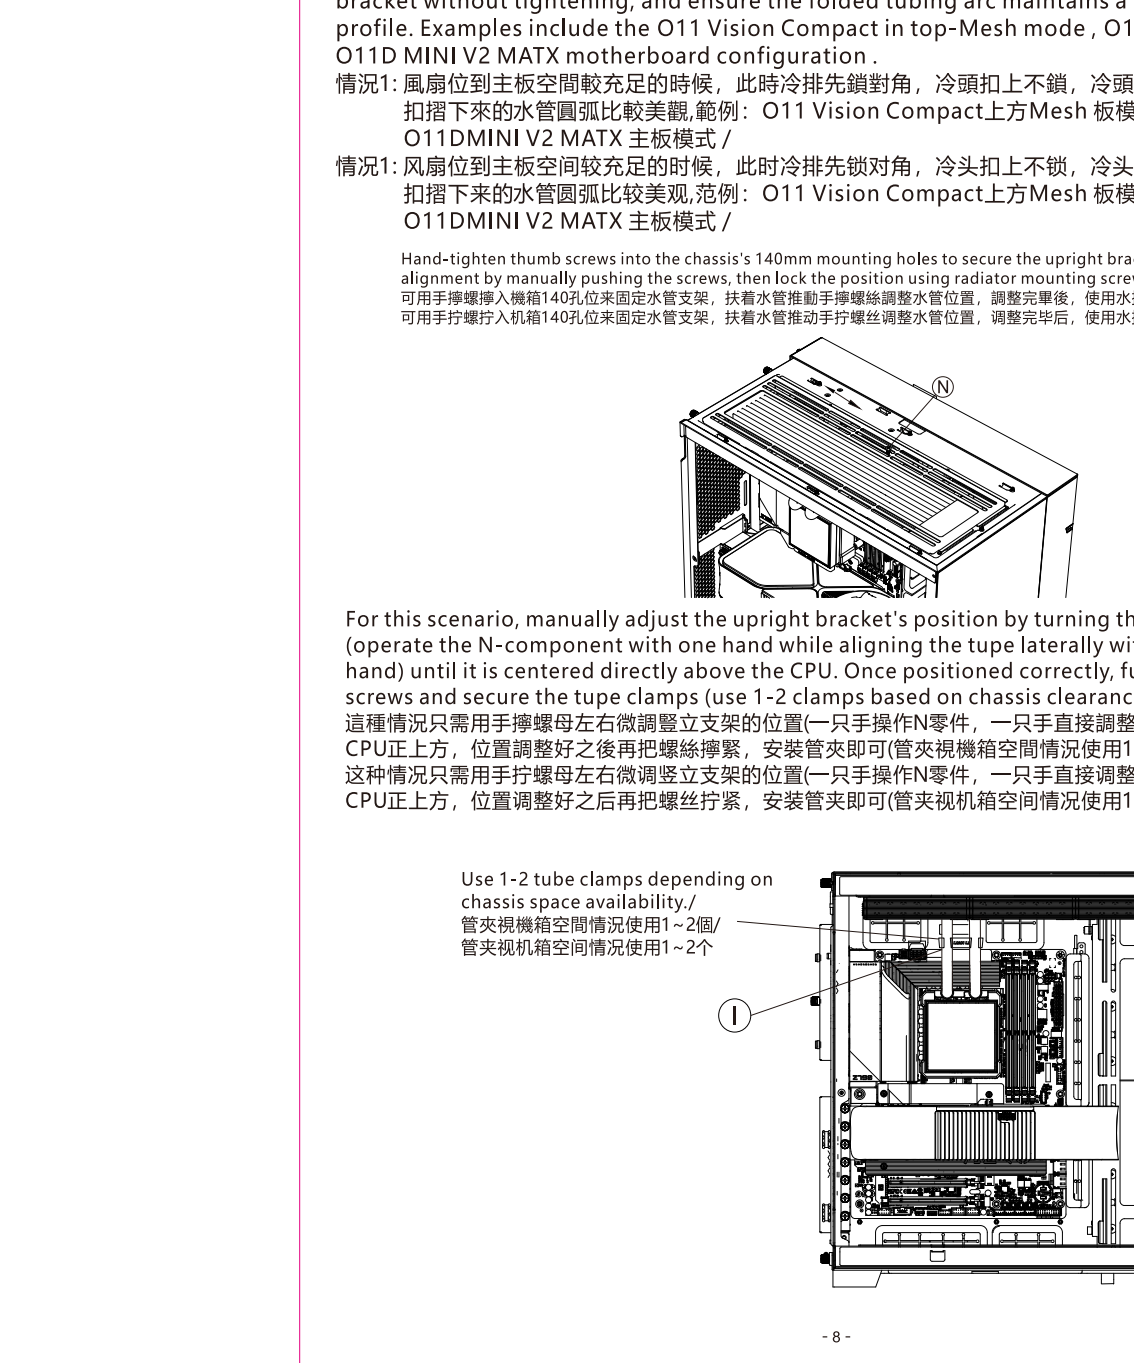


HYDROSHIFT II LCD-S 360N

Coolant Tubing Management/水管管理/水管管理

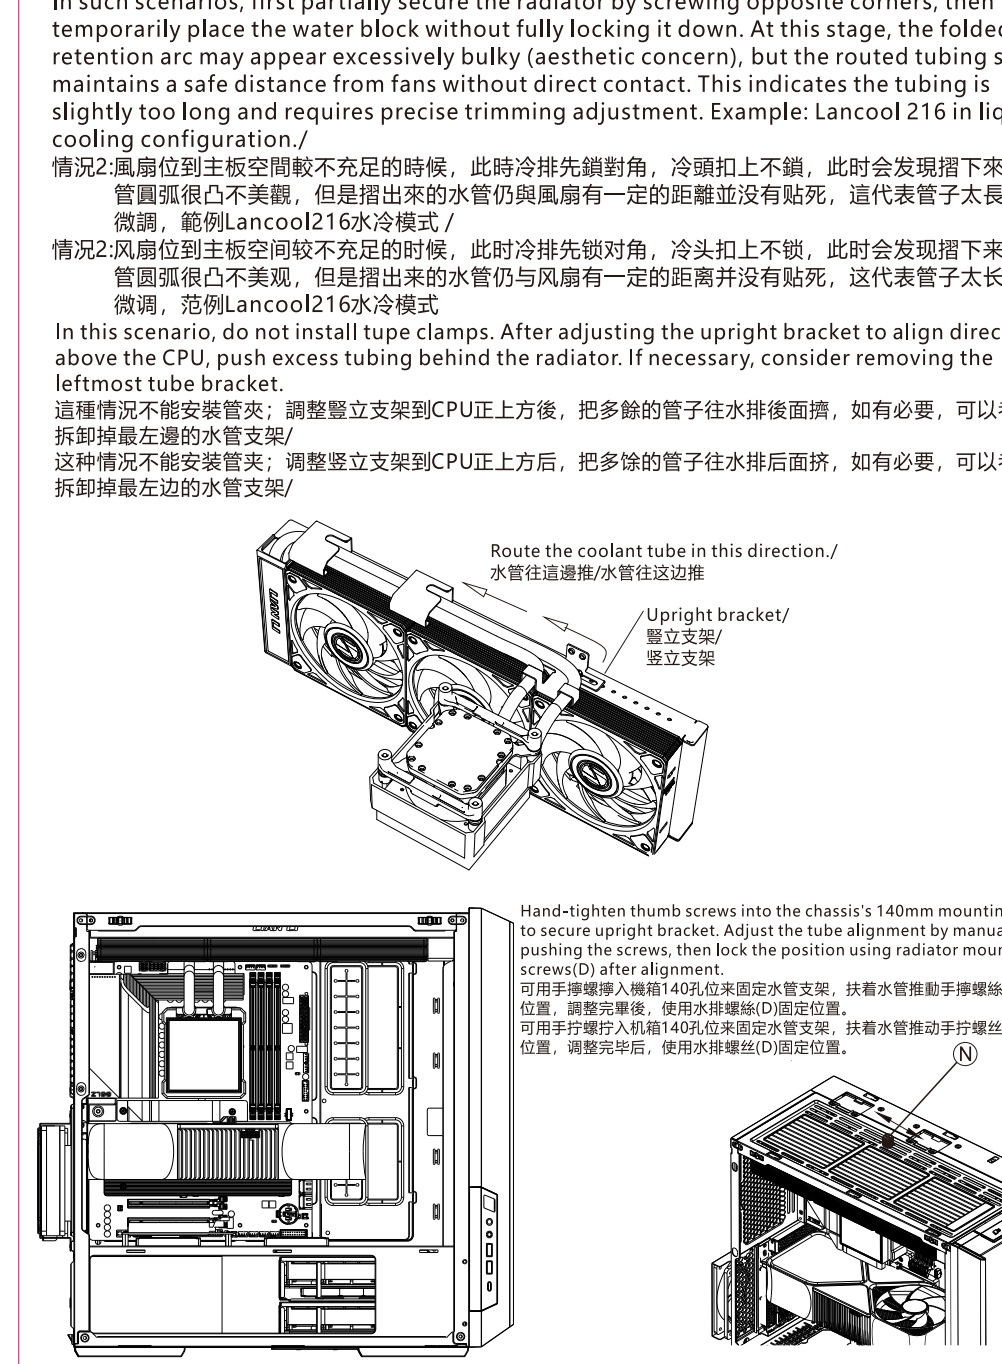


HYDROSHIFT II LCD-S 360N

Coolant Tubing Management/水管管理/水管管理

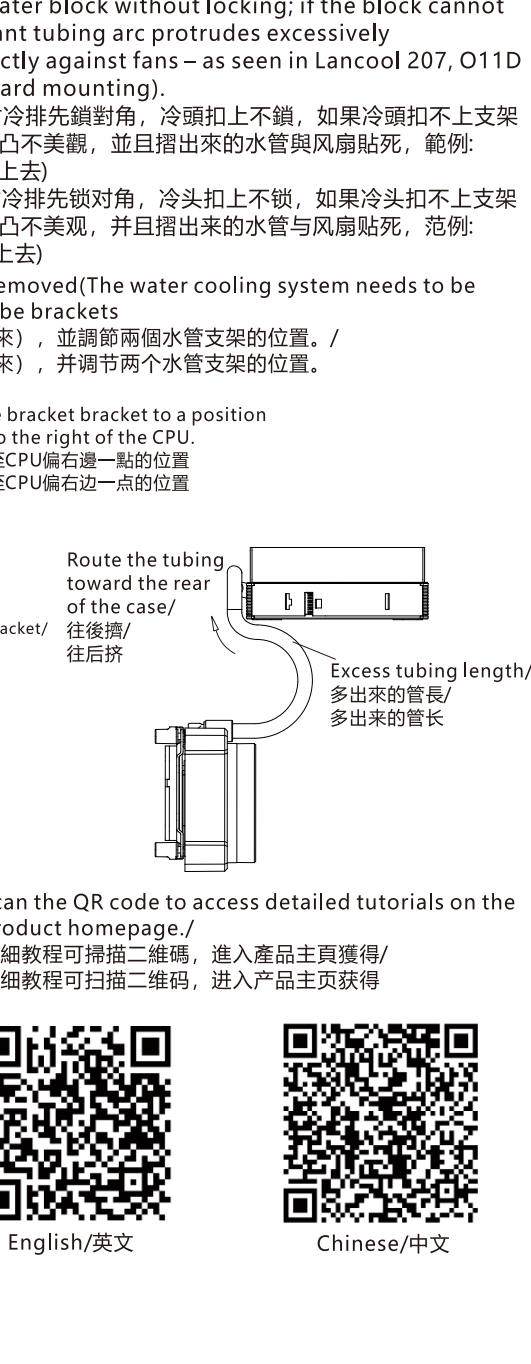


HYDROSHIFT II LCD-S 360N

Wiring Guide/接线指南/接线指南

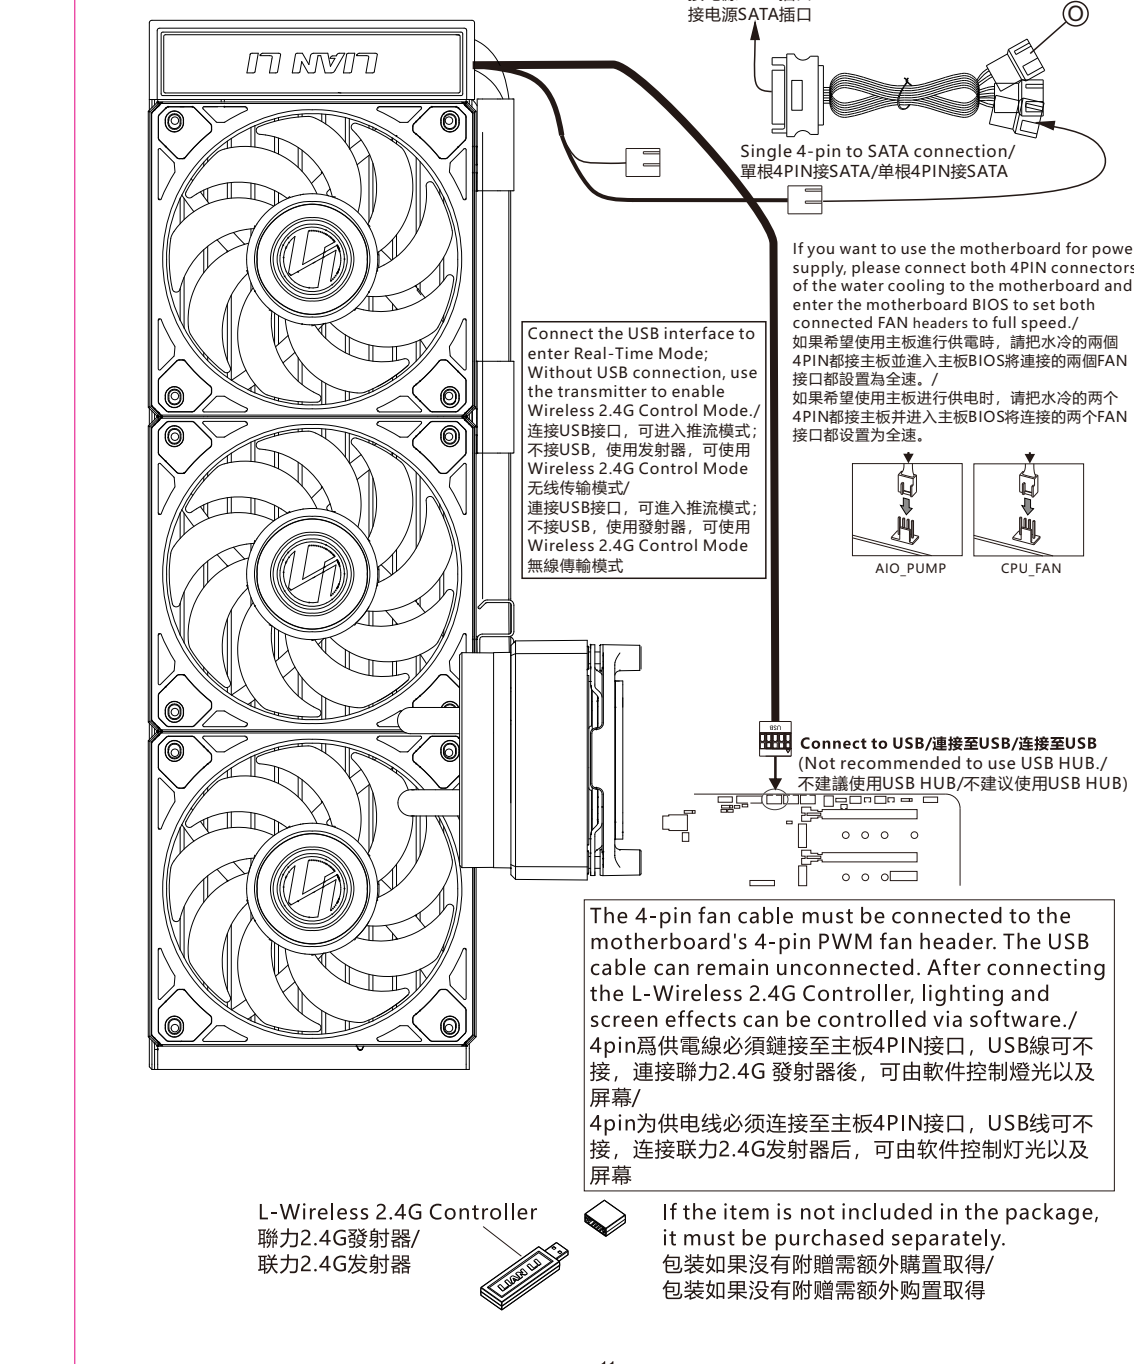


HYDROSHIFT II LCD-S 360N

Offline Mode/离线模式/离线模式

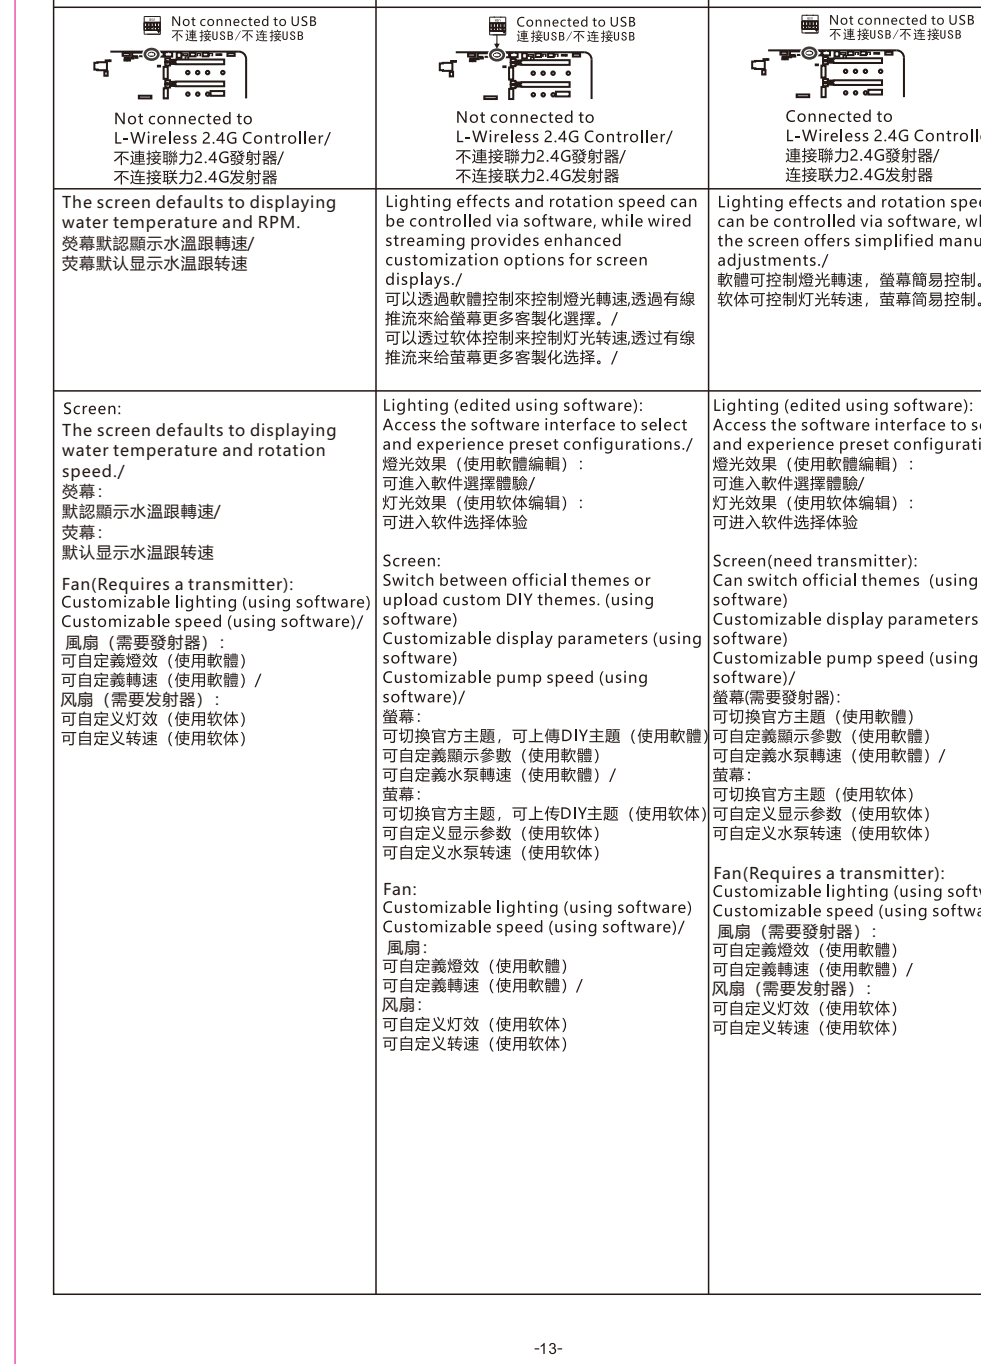


HYDROSHIFT II LCD-S 360N

USB cable removal/USB线移除/USB线移除

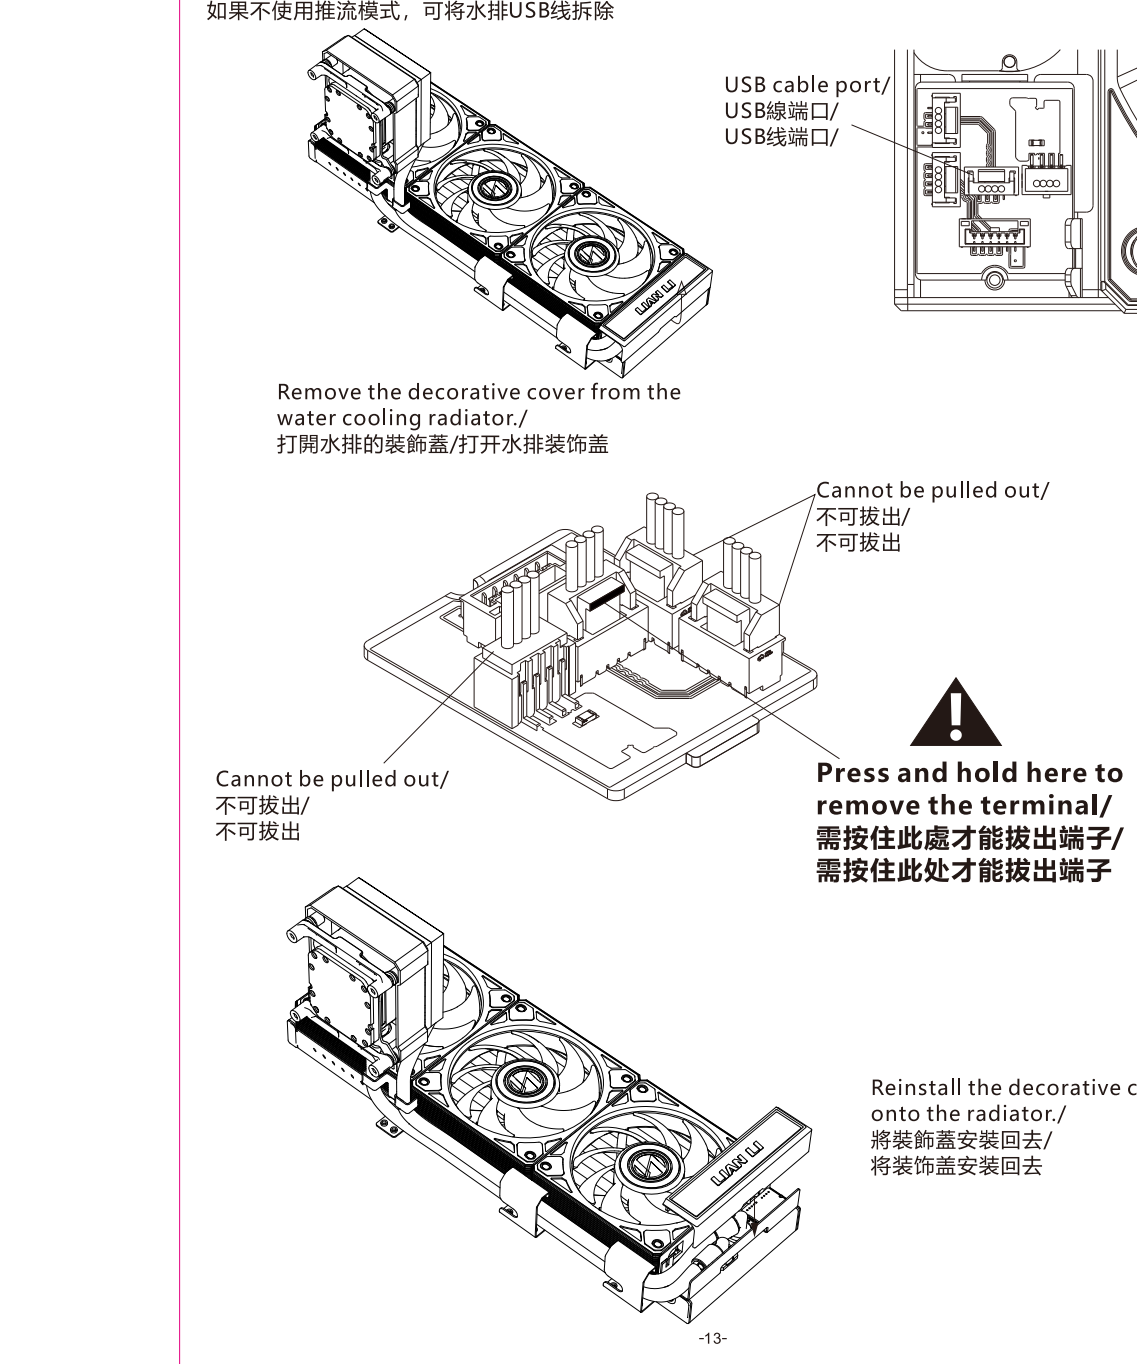


HYDROSHIFT II LCD-S 360N

Gameplay Introduction/玩法介绍/玩法介绍

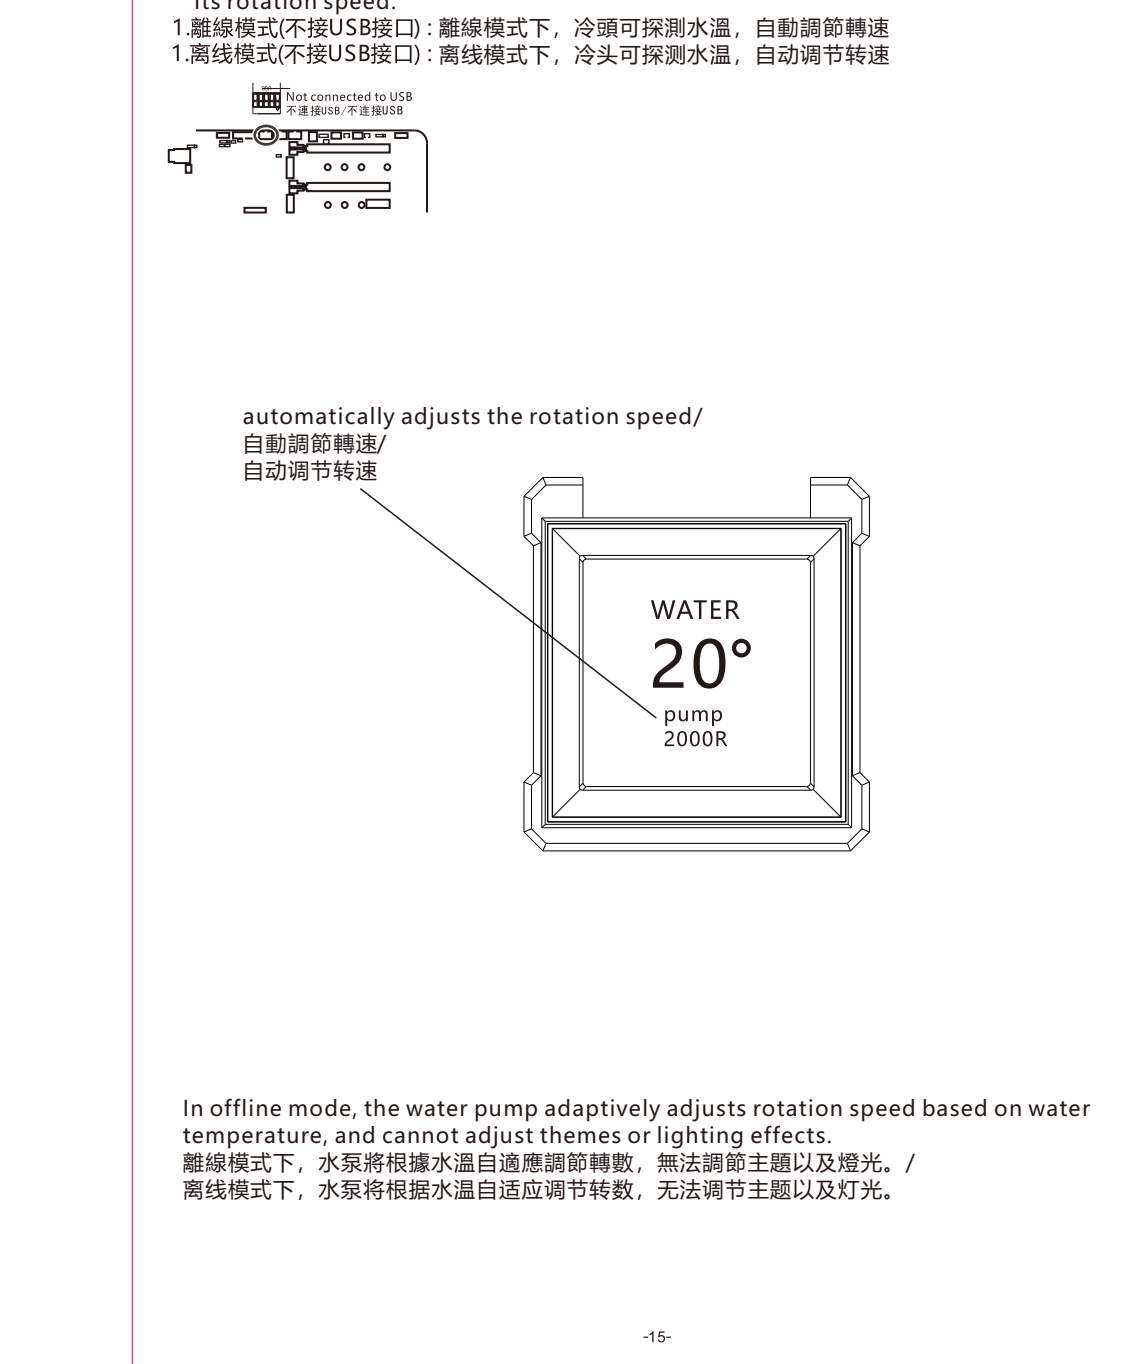


HYDROSHIFT II LCD-S 360N

Gameplay Introduction/玩法介绍/玩法介绍

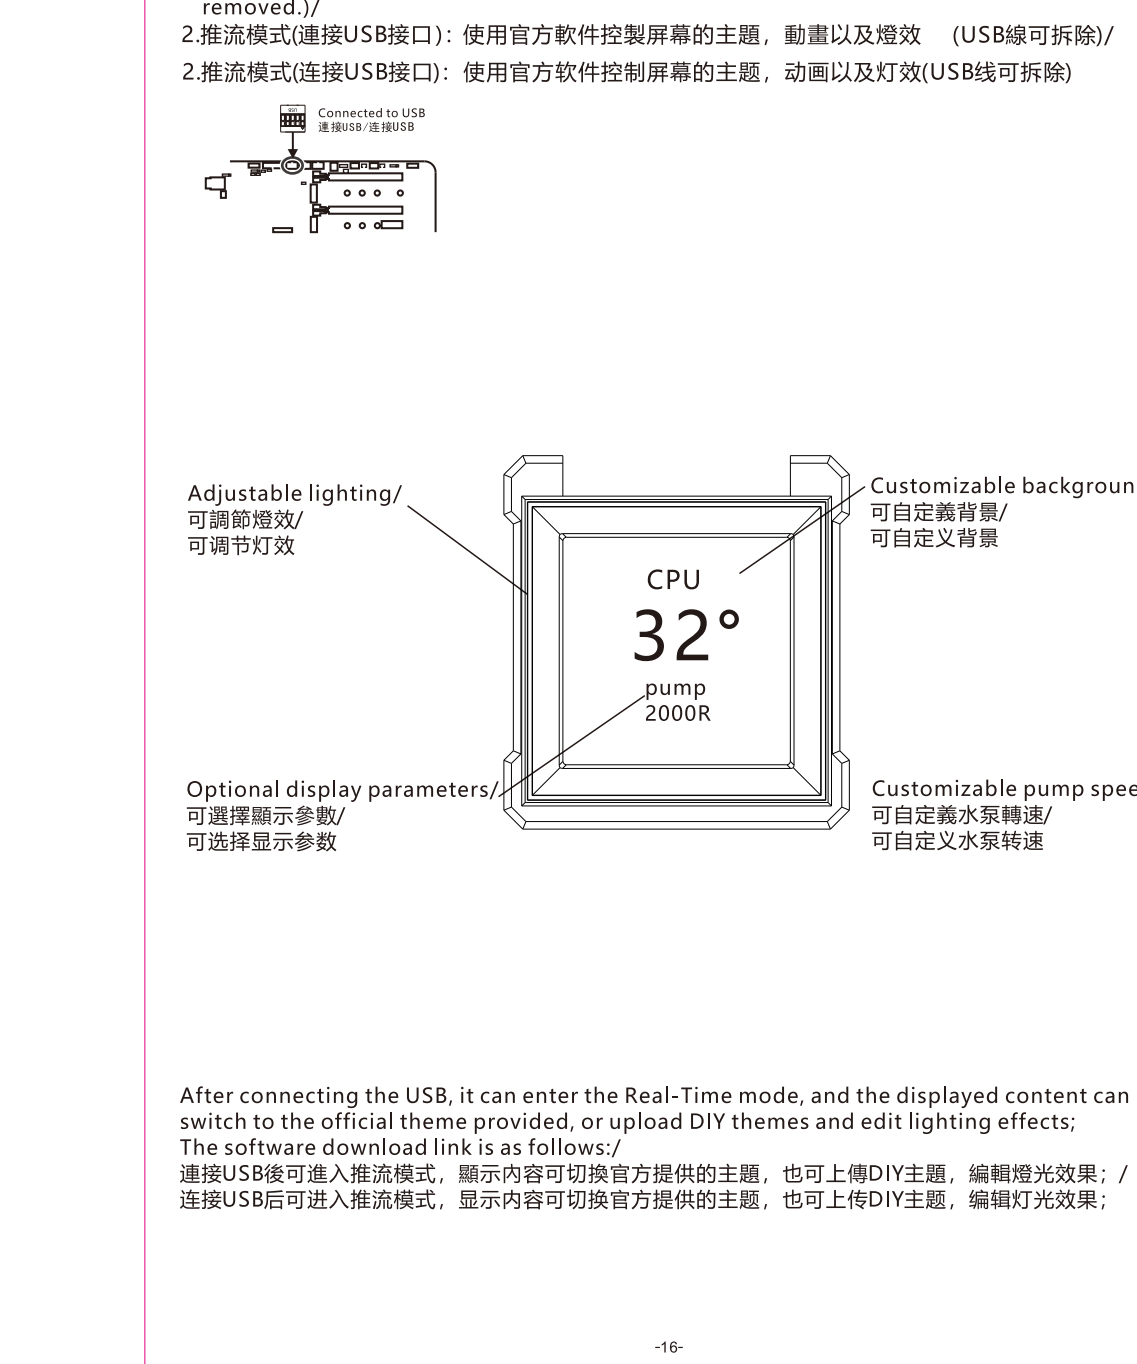

HYDROSHIFT II LCD-S 360N

Gameplay Introduction/玩法介绍/玩法介绍

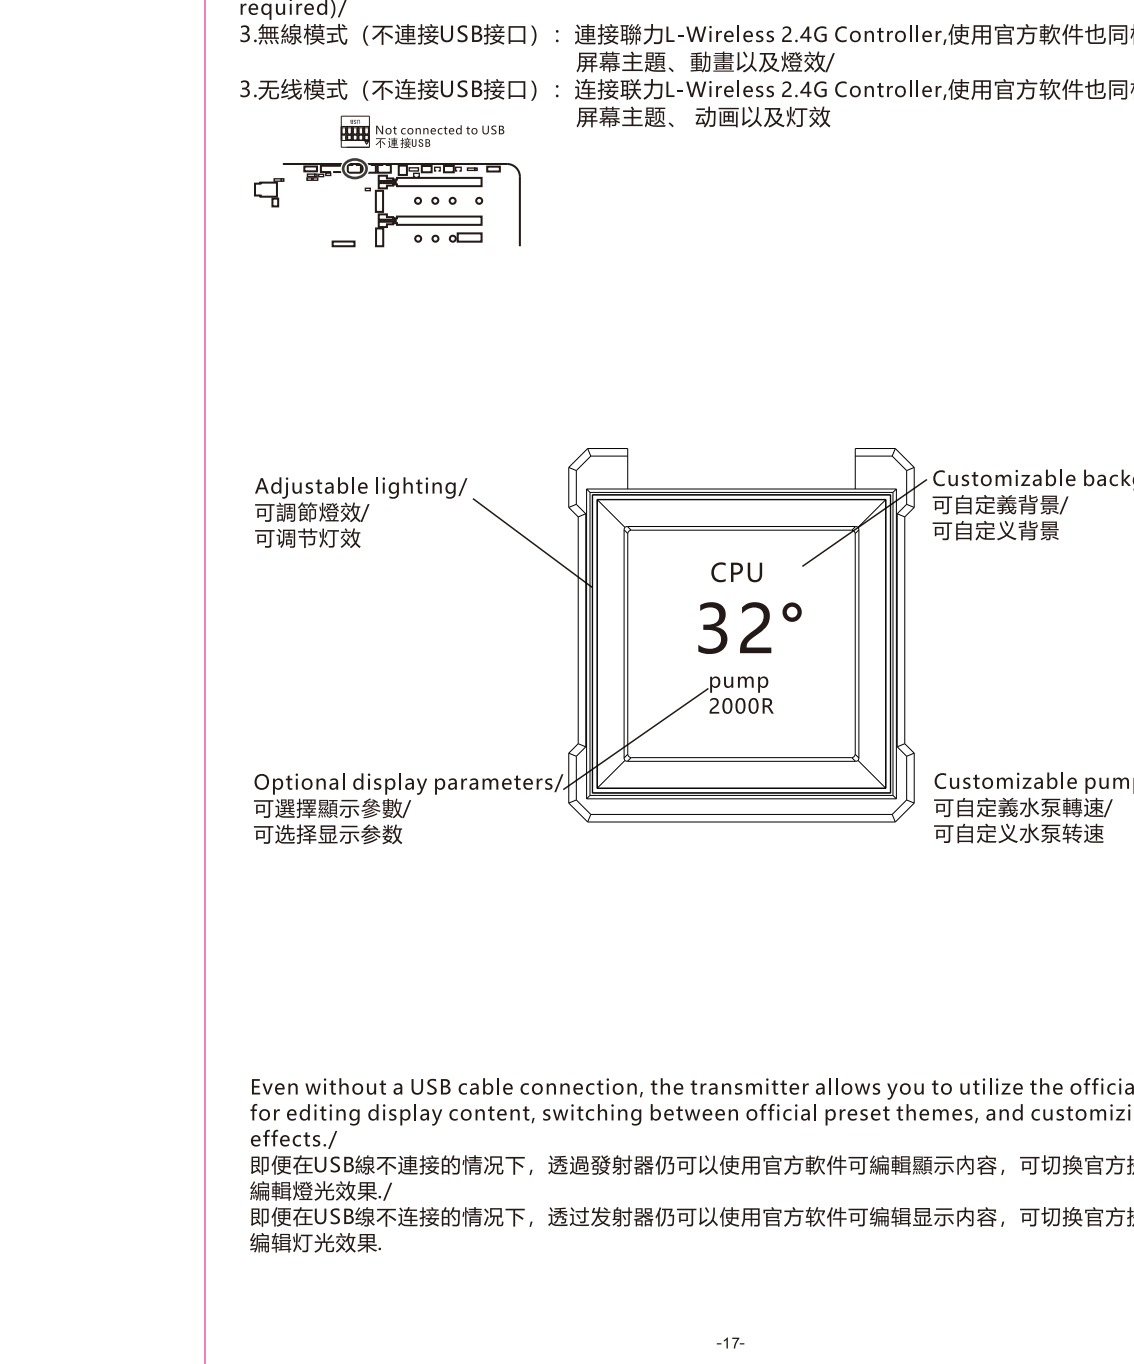

HYDROSHIFT II LCD-S 360N

Gameplay Introduction/玩法介绍/玩法介绍

