



CONGRATULATIONS!

You are now the proud owner of a ROCCAT® Kone EMP! The Kone EMP is the high-powered weapon that rounds out your arsenal. Built to exacting standards and using only the highest quality components, it's perfect for every game and genre. Featuring a ROCCAT-developed Owl-Eye optical sensor and a robust build with expanded button functionality, it provides unrelenting pointer precision, supreme comfort and unbreakable durability.

The Kone EMP is domination, empowered.

ROCCAT OWL-EYE OPTICAL SENSOR

Featuring the world-beating Owl-Eye optical sensor expertly developed by ROCCAT. Translating your mouse movements on screen with 1:1 accuracy, Owl-Eye delivers unrelenting pointer precision making it a leading optical sensor.

ROCCAT® SWARM

Swarm is the software incarnation of ROCCAT's future ready philosophy. It'll cover you for all relevant gaming platforms and devices. It's the next-gen system that keeps on top all games, apps and ROCCAT products in one place.

TRUE COLOR ILLUMINATION

The Kone EMP features two illuminated stripes in vivid RGB color. Fully customizable with a variety of different lighting and color effects, the illumination system perfectly complements your gameplay with style.



QUICK-INSTALLATION GUIDE IMPORTANT DOCUMENT

Should you need assistance ...

Our support team is ready to help with any technical questions. Just send an e-mail to support@roccat.org. Or visit our website at:

www.roccat.org/support

PLEASE USE YOUR PRODUCT'S SERIAL NUMBER
(LOCATED ON THE BOTTOM LABEL)
FOR REGISTRATION. SIGN IN AT:

www.roccat.org/support/authenticity-check



ROCCAT GmbH | Gasstrasse 4 | 22761 Hamburg | Germany

© 2018 ROCCAT GmbH. All rights reserved. Any product names mentioned in this manual may be trademarks or registered trademarks and are the property of their respective owners. Information contained herein is subject to change without notice. ROCCAT GmbH shall not be made liable for any errors that may appear in this manual. This publication or parts of it may not be reproduced without the express consent of the publisher.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

FCC Caution: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

BSMI 限用物質聲明表查詢,請上 <http://bsmi.roccat.org/159/>

GENERAL SAFETY GUIDELINES AND INTENDED USE

- Do not open or modify the product.
- Not approved changes or modifications may void the operation authority and/or warranty.
- In case of trouble or doubt, contact us immediately.
- Keep the product away from fire/water/humidity/temperature extremes.
- Only use as intended with a compliant PC and connector part.
- Improper or incorrect use of the product or use of the product for purposes not recommended by the manufacturer void the liability and/or warranty.
- Don't look into the light beam on bottom of the mouse.

Hereby, ROCCAT GmbH declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/30/EU.

The full Declaration of Conformity can be requested via following:
Company: ROCCAT GmbH

Address: Gasstrasse 4, 22761 Hamburg, Germany
E-Mail: support@roccat.org



ID002



DOMINATION EMPOWERED.

SPECIFICATIONS

PACKAGE CONTAINS

- ROCCAT® Kone EMP – Max Performance RGB Gaming Mouse
- Quick-Installation Guide

SYSTEM REQUIREMENTS

- Windows® 7, Windows® 8, Windows® 10
- USB 2.0 port
- Internet connection (for driver installation)

TECH SPECS


- ROCCAT® Owl-Eye optical sensor with 12000dpi
- 1000Hz polling rate
- Default DPI steps: 400, 800 (default), 1,200, 1,600, 3,200
- 1ms response time
- 50 g acceleration
- 250ips motion detection speed
- Mouse acceleration: no
- Angle snapping: no
- Distance Control Unit
- ARM Cortex-M0 50MHz
- 512kB onboard memory
- 1.8m braided USB cable

DEFAULT BUTTON ASSIGNMENT

(no driver installed)

STANDARD

- 1 = Left mouse button
- 2 = Right mouse button
- 3 = Universal scroll
- 4 = IE Forward
- 5 = IE Backward
- 6 = Tilt left
- 7 = Tilt right
- 8 = Scroll up
- 9 = Scroll down
- 10 = DPI up
- 11 = DPI down

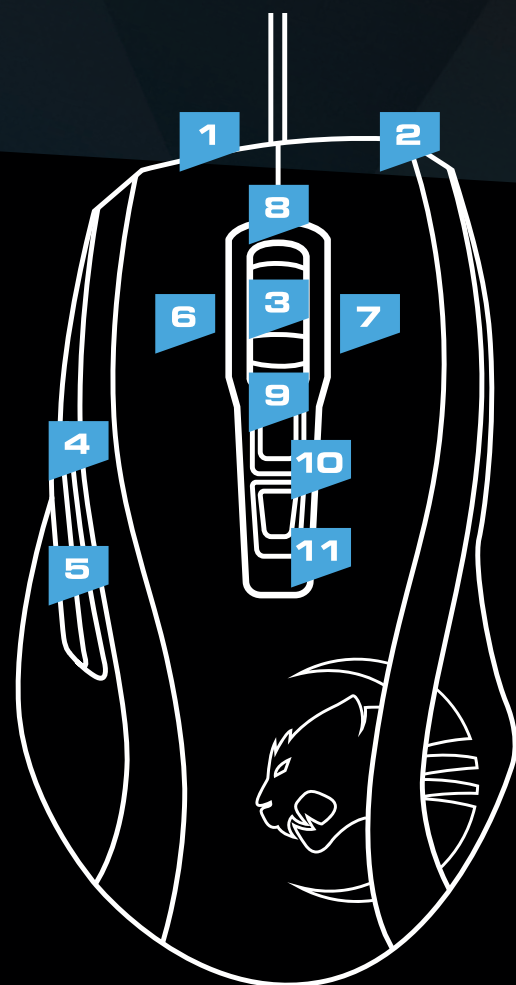

WHAT'S ROCCAT® SWARM?

Swarm provides next-level ROCCAT® product integration. It works a unified driver suite where you can keep tabs on all of your ROCCAT® devices in one place. Say goodbye to multiple tray icons – with Swarm you have a veritable gaming command HQ for every weapon in your arsenal.



WHAT'S EASY-SHIFT[+]™?

The Kone EMP features world famous Easy-Shift[+]™ button duplicator technology, which lets you assign a secondary function to your mouse buttons, for a total of 21 possible functions. This gives you the power to pack a massive amount of quickly-accessible control into a clean, uncluttered space.



DE ANLEITUNG

1. Verbinde deine ROCCAT® Kone EMP mit einem freien USB Steckplatz deines Computers.
2. Starte deinen Computer neu und stelle eine Verbindung zum Internet her.
3. Rufe www.roccat.org/roccat-swarm auf und lade dir die neuste Swarm Version herunter.
4. Starte die Software Installation und folge den Anweisungen.

DK INSTRUKTIONER

1. Sæt USB-forbindelsen på din ROCCAT® Kone EMP ind i en ledig USB port.
2. Start computeren op, og forbind den med internettet.
3. Navigér til www.roccat.org/roccat-swarm, og download den nyeste version af Swarm.
4. Start software-installationen, og følg anvisningerne på skærmen.

EN INSTRUCTIONS

1. Plug the USB connector on your ROCCAT® Kone EMP into any free USB port.
2. Boot your computer and connect to the internet.
3. Navigate to www.roccat.org/roccat-swarm and download the latest version of Swarm.
4. Start the software installation process and follow the on-screen instructions.

ES INSTRUCCIONES

1. Enchufe el conector USB en un puerto USB libre del ROCCAT® Kone EMP.
2. Reinicie el ordenador y conéctese a internet.
3. Acceda a la página www.roccat.org/roccat-swarm y descárguese la última versión swarm.
4. Inicie el proceso de instalación de software y siga las instrucciones de la pantalla.

FI OHJEET

1. Pistä USB-liitin sisään ROCCAT® Kone EMP -laitteessasi mihin tahansa vapaaseen USB-porttiin.
2. Käynnistä tietokoneesi ja yhdistä internetiin.
3. Siirry osoitteeseen www.roccat.org/roccat-swarm ja lataa Swarm-ohjelmiston uusin versio.
4. Käynnistä ohjelmiston asennusprosessi ja seuraa näyttörudulla näkyviä ohjeita.

FR INSTRUCTIONS

1. Insérez le connecteur USB de votre ROCCAT® Kone EMP à un port USB libre.
2. Allumez votre PC et connectez-vous à internet.
3. Allez sur www.roccat.org/roccat-swarm et téléchargez la dernière version de Swarm.
4. Débutez l'installation du programme et suivez les indications.

PL INSTRUKCJA

1. Podłącz wtyk USB ROCCAT® Kone EMP do wolnego portu USB.
2. Uruchom komputer i połącz się z Internetem.
3. Przejdź do strony www.roccat.org/roccat-swarm i pobierz najnowszą wersję Swarm.
4. Rozpocznij instalację oprogramowania i postępuj zgodnie z instrukcjami na ekranie.

PT INSTRUÇÕES

1. Ligar o conector USB ao seu ROCCAT® Kone EMP numa porta USB livre.
2. Ligar o computador e estabelecer ligação à internet.
3. Navegar para www.roccat.org/roccat-swarm e descarregar a versão mais recente do Swarm.
4. Iniciar o processo de instalação do software e seguir as instruções indicadas no ecrã.

RU ИНСТРУКЦИИ

1. Вставьте USB-коннектор ROCCAT® Kone EMP в любой свободный USB-порт.
2. Включите компьютер и выйдите в Интернет.
3. Зайдите на www.roccat.org/roccat-swarm и загрузите самую новую версию Swarm.
4. Начните процесс установки программного обеспечения и следуйте указаниям на экране.

SE INSTRUKTIONER

1. Sätt ROCCAT® Kone EMP USB-kontakt i en ledig USB-port.
2. Boota datorn och koppla upp dig på Internet.
3. Gå till www.roccat.org/roccat-swarm och ladda ned den senaste versionen av Swarm.
4. Starta programvaruinstallationen och följ anvisningarna på bildskärmen.