



Maintenance and Service Guide

HP Spectre x360 16 inch 2-in-1 Laptop PC

Model numbers: 16-aa0xxx

SUMMARY

This guide provides maintenance information about such topics as spare parts, removal and replacement of parts, security, and backing up.

Legal information

© Copyright 2023 HP Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Intel, Arc, Core, and Thunderbolt are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. USB Gen4, USB Type-C, and USB-C are registered trademarks of USB Implementers Forum. DisplayPort™ and the DisplayPort™ logo are trademarks owned by the Video Electronics Standards Association (VESA®) in the United States and other countries. Miracast and Wi-Fi are registered trademarks of Wi-Fi Alliance.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: December 2023

Document Part Number: N74966-001

Product notice

This guide describes features that are common to most products. Some features might not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems might require upgraded and/or separately purchased hardware, drivers, software, or BIOS update to take full advantage of Windows functionality. Windows is automatically updated, which is always enabled. High-speed internet and Microsoft account required. ISP fees might apply and additional requirements might apply over time for updates. See <http://www.windows.com>. **If your product ships with Windows in S Mode:** Windows in S Mode works exclusively with apps from the Microsoft Store within Windows. Certain default settings, features, and apps cannot be changed. Some accessories and apps that are compatible with Windows might not work (including some antivirus, PDF writers, driver utilities, and accessibility apps), and performance might vary, even if you switch out of S Mode. If you switch to Windows, you cannot switch back to S Mode. Learn more at Windows.com/SmodeFAQ.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Setup & User Guides**.

To help us improve this document, please send any suggestions, comments, or errors to <mailto:hp.doc.feedback@hp.com>. Include the document part number when submitting your feedback.

Software Terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice

Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.

-
- ⚠ WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by applicable safety standards.
-

Table of contents

1 Product description	1
2 Getting to know your computer	5
Right side	5
Left side.....	6
Display	6
Low blue light mode (select products only).....	7
IMAX Enhanced Mode (select products only)	7
Wake-on-voice (select products only).....	7
Keyboard area	8
Touchpad settings and components	8
Touchpad settings	8
Adjusting touchpad settings.....	8
Turning on the touchpad	8
Turning on touchpad gesture control	9
Touchpad components	9
Lights	10
Buttons, speakers, and fingerprint reader	11
Special keys.....	12
Rear	13
Bottom	13
Labels	14
3 Illustrated parts catalog	17
Computer major components.....	17
Display assembly subcomponents.....	19
Miscellaneous parts.....	21
4 Removal and replacement procedures preliminary requirements	23
Tools required	23
Service considerations.....	23
Plastic parts.....	23
Cables and connectors.....	23
Drive handling	23
Electrostatic discharge information.....	24
Generating static electricity.....	24
Preventing electrostatic damage to equipment	25
Personal grounding methods and equipment.....	25
Grounding the work area.....	26
Recommended materials and equipment.....	26

Cleaning your computer	27
Enabling HP Easy Clean (select products only)	27
Removing dirt and debris from your computer	27
Cleaning your computer with a disinfectant	28
Caring for wood veneer (select products only)	29
Packaging and transporting guidelines	29
Accessing support information	30
5 Removal and replacement procedures for authorized service provider parts	32
Component replacement procedures	32
Preparation for disassembly	32
Bottom cover	32
Battery	34
Display subcomponents (without removing the display)	35
Display assembly	43
System board protective cover	47
WLAN module	48
Speakers	49
Solid-state drive	50
Audio board	52
Fans	53
Heat sink	54
Infrared (IR) board	55
System board	57
Touchpad	60
Power button/fingerprint reader board	61
Keyboard	63
6 Using Setup Utility (BIOS)	68
Starting Setup Utility (BIOS)	68
Updating Setup Utility (BIOS)	68
Determining the BIOS version	68
Preparing for a BIOS update	69
Downloading a BIOS update	69
Installing a BIOS update	69
7 Backing up, restoring, and recovering	71
Backing up information and creating recovery media	71
Using Windows tools for backing up	71
Using the HP Cloud Recovery Download Tool to create recovery media (select products only)	71
Restoring and recovering your system	71
Creating a system restore	72
Restoring and recovery methods	72
Recovering using HP Recovery media	72
Changing the computer boot order	73
Using HP Sure Recover (select products only)	73
8 Using HP PC Hardware Diagnostics	74

Using HP PC Hardware Diagnostics Windows (select products only).....	74
Using an HP PC Hardware Diagnostics Windows hardware failure ID code.....	74
Accessing HP PC Hardware Diagnostics Windows.....	74
Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant.....	74
Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only).....	75
Downloading HP PC Hardware Diagnostics Windows.....	75
Downloading the latest HP PC Hardware Diagnostics Windows version from HP.....	75
Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store.....	75
Downloading HP Hardware Diagnostics Windows by product name or number (select products only).....	75
Installing HP PC Hardware Diagnostics Windows.....	76
Using HP PC Hardware Diagnostics UEFI.....	76
Using an HP PC Hardware Diagnostics UEFI hardware failure ID code.....	76
Starting HP PC Hardware Diagnostics UEFI.....	76
Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only).....	77
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive.....	77
Downloading the latest HP PC Hardware Diagnostics UEFI version.....	78
Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only).....	78
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only).....	78
Downloading Remote HP PC Hardware Diagnostics UEFI.....	78
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version.....	78
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number.....	78
Customizing Remote HP PC Hardware Diagnostics UEFI settings.....	79
9 Specifications.....	80
Computer specifications.....	80
Display specifications.....	80
Solid-state drive specifications.....	81
10 Power cord set requirements.....	82
Requirements for all countries.....	82
Requirements for specific countries and regions.....	82
11 Recycling.....	84
Index.....	85

1 Product description

This table provides detailed product information.

Table 1-1 Product components and their descriptions

Category	Description
Product Name	HP Spectre x360 16 inch 2-in-1 Laptop PC Model numbers: 16-aa0xxx CTO model number: 16t-aa000
Processors	Intel® Core® Ultra 7 155H (4.8 GHz, 16 cores, 24 MB Intel Smart Cache, 28 W)
Graphics	Internal graphics Intel Arc™ Integrated Graphics Discrete graphics NVIDIA® GeForce™ RTX 4050
Display	16.0 in (40.6 cm), direct bonding, active matrix organic light-emitting diode (AMOLED), augmented reality (AR) very high resolution (VHR), DBTS 2.8K (2880 × 1800), 100% DCI-P3, BrightView, narrow bezel, low blue light, ultrawide viewing angle (UWVA), embedded DisplayPort™ (eDP) 1.4 + panel self-refresh (PSR), 400 nits, touch screen, 120 Hz (VRR) WQXGA (2560 × 1600) antiglare, low blue light, UWVA, 100% sRGB, 400 nits, 120 Hz (VRR)
Memory	Integrated, not customer accessible or upgradeable, supporting 32 GB or 16 GB of RAM LPDDR5x-6400
Primary storage	PCIe, Non-Volatile Memory express (NVMe), M.2 2280 solid-state drives 2 TB, PCIe-4 × 4, triple layer cell (TLC) 2 TB, PCIe-4 × 4, TLC (only available in China) 1 TB, PCIe-4 × 4, TLC 1 TB, PCIe-4 × 4, TLC (only available in China) 512 GB, PCIe-4 × 4, TLC 512 GB, PCIe-4 × 4, TLC (only available in China)

Table 1-1 Product components and their descriptions (continued)

Category	Description
Audio and video	Quad speakers
	Supports speaker swap
	Supports Alexa
	Supports HP Presence 2.0
	Supports DTS:X Ultra
	Support for HP Audio Boost 2.0
	Supports XiaoWei
	Supports Cortana (far field)
	Supports Poly Studio
Video	HP Wide Vision 9 MP Camera: with shutter door, indicator LED, 1× infrared (IR) LED, MIPI, 9 MP BSI sensor, f1.8, WDR/TNR, 88° wide field-of-view (WFOV)
	Dual-array digital microphone with appropriate software: beam forming, echo cancellation, noise suppression
	Supports Windows Hello
Wireless	Compatible with Miracast® devices
	Supports Modern Standby (Connected)
	Intel Bluetooth® Audio Offload
	Wi-Fi BIOS SAR
	WLAN Time Average SAR (TAS)
	Dynamic antenna gain
	UNII-4 5 GHz channel
	Bluetooth LE Audio
	Integrated wireless module
	Intel AX211 Wi-Fi® 6E Bluetooth 5.3 WLAN
	Intel Wi-Fi 7 BE200 + Bluetooth 5.4 (802.11be 2 × 2, 320 MHz)
Ports	Audio-out (headphone)/audio-in (microphone) combo jack
	HDMI 2.1 out
	USB 3.1 Gen 2 Type-C® (left side, supports HP Sleep & Charge)
	(2) USB Gen4® Type-C Thunderbolt™ (right side), supports:
	<ul style="list-style-type: none"> • Thunderbolt 3 and Thunderbolt 4 • Data transfer • Power Delivery 3.0 • HP Sleep & Charge • DisplayPort 2.1 (2 × 4 K, 2 × 5 K, 1 × 8 K output) through USB-C adapter • HDMI 2.1 out up to 8K @ 60 Hz with HDCP 2.2 through adapter

Table 1-1 Product components and their descriptions (continued)

Category	Description
Keyboard/pointing devices	Keyboard
	Backlit, island style
	Haptic touchpad
	Haptics touchpad gestures
	Multitouch gestures enabled
	Precision touchpad support
	Brightness/volume mode switch
Taps enabled as default	
Power requirements	Battery (polymer, HP Long Life)
	6 cell, 83 Whr
	HP Fast Charge Technology
	Smart AC adapters (USB-C, slim, straight)
	140 W
	100 W
	Power cord
	C5, premium, 1 m (3.3 ft), right angle
C5, premium, 1m (3.3 ft) with plug adapter	
Security	Supports Trusted Platform Module (TPM) 2.0, discrete
	Microphone mute
	Camera privacy cover
	Fingerprint reader
Sensors	Accelerometer + Gyroscope + eCompass
	Accelerometer x2
	AI chip
	IR thermal sensor
Operating system	Windows® 11 Pro
	Windows 11 Pro High End
	Windows 11 Pro High End China
	Windows 11 Pro China
	Windows 11 Pro Value
	Windows 11 Pro Value China
	Windows 11 Pro Entry

Table 1-1 Product components and their descriptions (continued)

Category	Description
Operating system	Windows 11 Pro Entry China
	Windows 11 Home 64 Desktop AIO Chinese Market CPPP
	Windows 11 Home in S Mode for Developed Markets (ML)
	Windows 11 Home in S Mode for Emerging Markets (EM/SL)
	Windows 11 Home in S Mode for China Market
	Windows 11 Home in S Mode for APAC Markets
	Windows 11 Home in S Mode for Africa Markets
	Windows 11 Home in S Mode for Indonesia Market
	Windows 11 Home in S Mode for India Market
	Windows 11 Home for Developed Market (ML)
	Windows 11 Home for Developed Market (ML)
	Windows 11 Home for Emerging Market (EM/SL)
	Windows 11 Home for China Market
	Windows 11 Home for India Market
	Windows 11 Home for Indonesia Market
	Windows 11 Home for APAC Market
	Windows 11 Home for Africa PPP Market
Serviceability	End user replaceable parts
	AC adapter

2 Getting to know your computer

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

Right side

Identify the components on the right side of the computer.

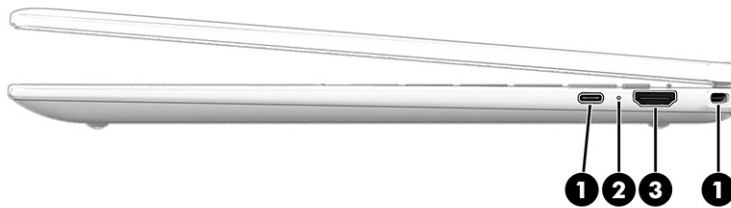


Table 2-1 Right-side components and their descriptions

Component	Description
(1)	<p>USB Type-C® power connectors and Thunderbolt™ ports with HP Sleep and Charge and DisplayPort™ output (2)</p> <p>- and -</p> <p>Connect USB devices, provide high-speed data transfer, and charge small devices (such as a smartphone), even when the computer is off.</p> <p>NOTE: Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device.</p> <p>- and -</p> <p>Connect display devices that have a USB Type-C connector, providing DisplayPort output.</p> <p>NOTE: Your computer might also support a Thunderbolt docking station.</p>
(2)	<p>AC adapter and battery light</p> <ul style="list-style-type: none">• White: The AC adapter is connected and the battery is fully charged.• Blinking amber: The AC adapter is disconnected and the battery has reached a low battery level.• Amber: The AC adapter is connected and the battery is charging.• Off: The battery is not charging.

Table 2-1 Right-side components and their descriptions (continued)

Component	Description
(3) HDMI HDMI® port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High-Definition Multimedia Interface® (HDMI®) device.

Left side

Identify the components on the left side of the computer.

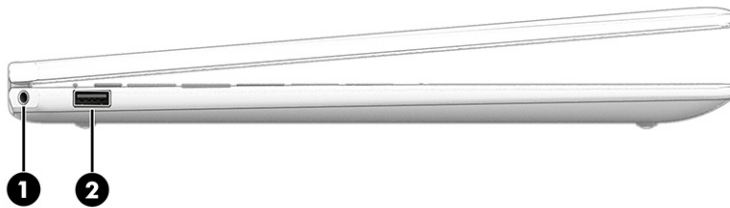


Table 2-2 Left-side components and their descriptions

Component	Description
(1) Audio-out (headphone)/Audio-in (microphone) combo jack	<p>Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones.</p> <p>WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i>.</p> <p>To access this guide:</p> <ul style="list-style-type: none"> Select the Search icon in the taskbar, type HP Documentation in the search box, and then select HP Documentation. <p>NOTE: When a device is connected to the jack, the computer speakers are disabled.</p>
(2) USB 10 Gbps port with HP Sleep and Charge	<p>Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off.</p> <p>NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.</p>

Display

The computer display can include essential components such as speakers, antennas, cameras, and microphones.

Low blue light mode (select products only)

Your computer display is shipped from the factory in low blue light mode for improved eye comfort and safety. Also, blue light mode automatically adjusts blue light emissions when you are using the computer at night or for reading.

⚠ WARNING! To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is available on the web at <http://www.hp.com/ergo>.

IMAX Enhanced Mode (select products only)

Select computer models are configured with IMAX Enhanced Mode, a solution built into the hardware and software to enhance the IMAX audio and video experience.

To access the latest setup documentation, go to <http://www.hp.com/support> and type IMAX in the **Search our knowledge library** search box. Select **HP Consumer Notebook PCs - Enabling the IMAX features**.

Wake-on-voice (select products only)

Use the wake-on-voice feature to bring the computer out of the Sleep state quickly.

To access the wake-on-voice settings, follow these steps:

1. Select the **Search** icon in the taskbar, type *XiaoWei* in the search box, and then select **XiaoWei**.
2. When the tool opens, scan the QR code with your mobile device, which takes you to the settings page, where you can select your wake-on-voice features.
3. Follow the on-screen instructions.

📝 NOTE: Allow the XiaoWei app to continue running on the computer.

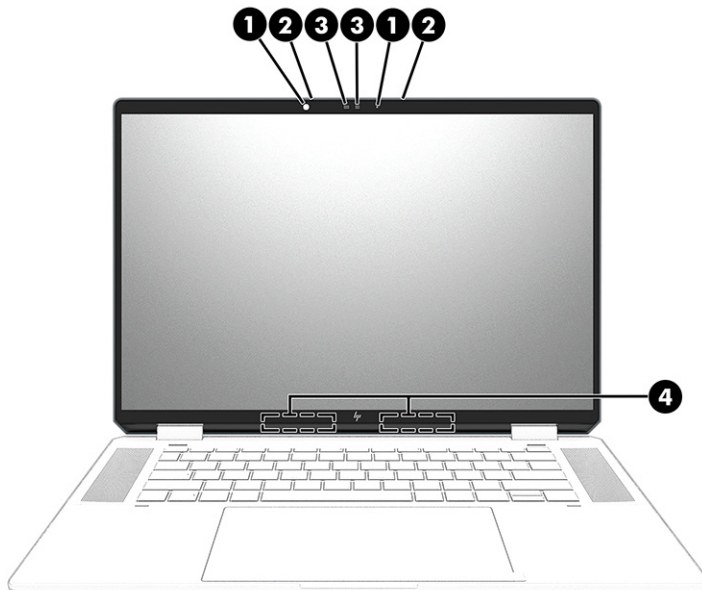


Table 2-3 Display components and their descriptions

Component	Description
(1) Camera lights (2)	On: One or more cameras are in use.
(2) Internal microphones (2)	Record sound.
(3) Cameras (2)	Allow you to video chat, record video, and record still images. Some cameras also allow a facial recognition logon to Windows®, instead of a password logon. NOTE: Camera functions vary depending on the camera hardware and software installed on your product.
(4) WLAN antennas* (2)	Send and receive wireless signals to communicate with wireless local area networks (WLANs).

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

- Select the **Search** icon in the taskbar, type `HP Documentation` in the search box, and then select **HP Documentation**.

Keyboard area

Keyboards can vary by language.



NOTE: The keyboard area, including the function keys and (select products only) power key, is disabled in stand, tent, and tablet modes. To enable the keyboard, including the power key, change to the clamshell mode.

Touchpad settings and components

Learn the touchpad settings and components.

Touchpad settings

Learn how to adjust touchpad settings.

Adjusting touchpad settings

Use these steps to adjust touchpad settings and gestures.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press `enter`.
2. Choose a setting.

Turning on the touchpad

Follow these steps to turn on the touchpad.

1. Select **Start**, select **Settings**, select **Bluetooth & devices**, and then select **Touchpad**.

- Using an external mouse, click the **Touchpad** button.

If you are not using an external mouse, press the **Tab** key repeatedly until the pointer rests on the **Touchpad** button. Then press the **spacebar** to select the button.

Turning on touchpad gesture control

The touchpad gesture control feature allows you to customize your touchpad to control screen brightness and speaker volume.

By default, touchpad gesture control is turned off. Follow these steps to turn on the touchpad gesture control feature.

- Go to the **myHP** app.
- Select **PC Device**, and then select **Touchpad**.
- Turn on **Enable gesture control**.

Touchpad components

Identify the touchpad components.

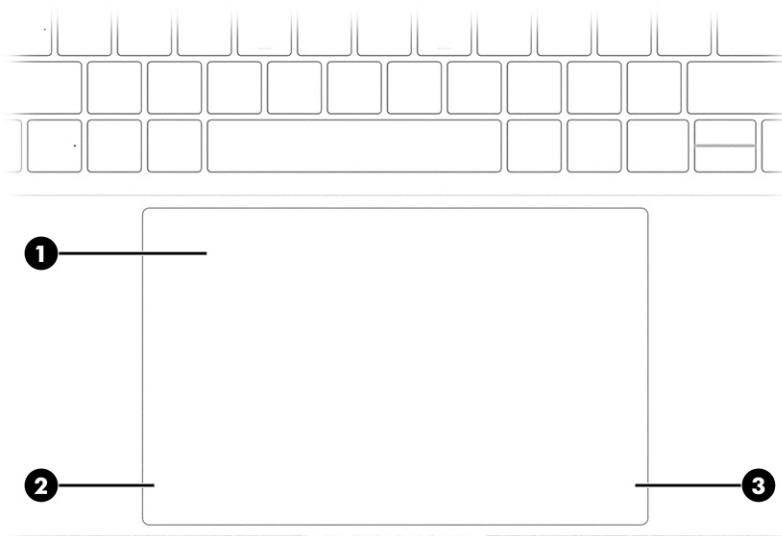


Table 2-4 Touchpad components and their descriptions

Component	Description
(1) Touchpad	Includes haptic technology that enables you to use the entire surface of the touchpad to read your finger gestures to move the pointer or activate items on the screen. Move your finger on the touchpad to move the mouse pointer. You can also tap anywhere on the surface of the touchpad with one finger to perform the left-click action and two fingers to perform the right-click action.
(2) Left touchpad button	Functions like the left button on an external mouse.
(3) Right touchpad button	Functions like the right button on an external mouse.

Lights

Identify the lights on the computer.

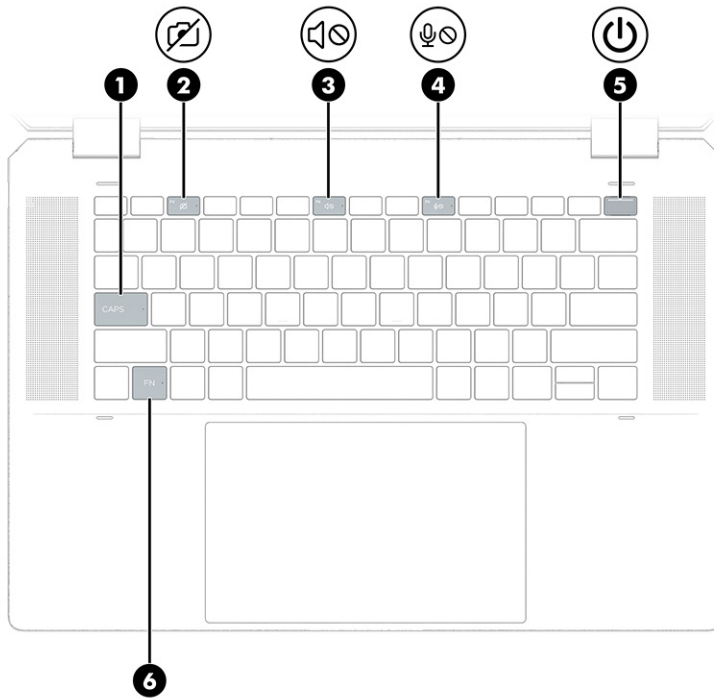






Table 2-5 Lights and their descriptions

Component	Description
(1) Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(2)  Camera privacy light	<ul style="list-style-type: none">• On: The camera is off.• Off: The camera is on.
(3)  Mute light	<ul style="list-style-type: none">• On: Computer sound is off.• Off: Computer sound is on.
(4)  Microphone mute light	<ul style="list-style-type: none">• On: Microphone is off.• Off: Microphone is on.
(5)  Power light	<ul style="list-style-type: none">• On: The computer is on.• Blinking (select products only): The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unnecessary components.• Off: Depending on your computer model, the computer is off, in Hibernation, or in Sleep. Hibernation is the power-saving state that uses the least amount of power.
(6) Fn lock light	On: The fn key is locked.

Buttons, speakers, and fingerprint reader

Identify the computer button, speakers, and fingerprint reader.

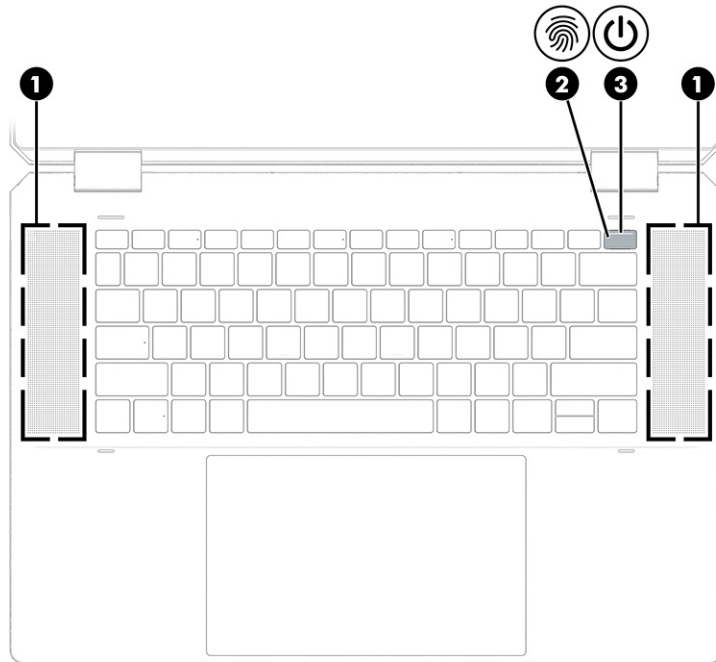


Table 2-6 Button, speakers, and fingerprint reader and their descriptions




Component	Description
(1) Speakers (2)	Produce sound.
(2)  Fingerprint reader	Allows a fingerprint logon to Windows, instead of a password logon. <ul style="list-style-type: none"><li data-bbox="892 1220 1326 1241">■ Touch your finger to the fingerprint reader. <p>IMPORTANT: To prevent fingerprint logon issues, make sure when you register your fingerprint that all sides of your finger are registered by the fingerprint reader.</p>

Table 2-6 Button, speakers, and fingerprint reader and their descriptions (continued)

Component	Description
<p>(3)  Power button</p>	<ul style="list-style-type: none"> When the computer is off, press the button briefly to turn on the computer. When the computer is on, press the button briefly to initiate Sleep. When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only). When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button down for at least 10 seconds to turn off the computer.</p> <p>To learn more about your power and sleep settings:</p> <ul style="list-style-type: none"> Right-click the Power icon , and then select Power and sleep settings.

Special keys

Identify the special keys.

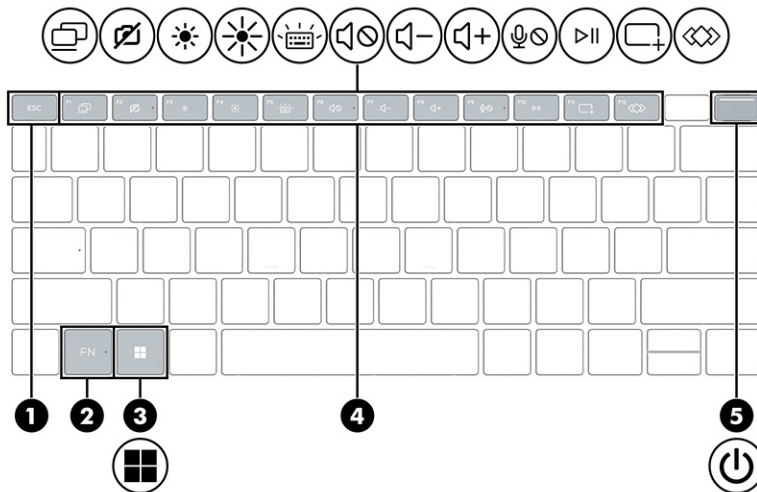





Table 2-7 Special keys and their descriptions

Component	Description
(1) esc key	Displays system information when pressed in combination with the fn key.
(2) fn key	Executes specific functions when pressed in combination with another key.

Table 2-7 Special keys and their descriptions (continued)

Component	Description
(3)  Windows key	<p>Opens the Start menu.</p> <p>NOTE: Pressing the Windows key again will close the Start menu.</p>
(4) Action keys	Execute frequently used system functions as defined by the icon symbols on f1 through f12 function keys.
(5)  Power button	<ul style="list-style-type: none"> When the computer is off, press the button briefly to turn on the computer. When the computer is on, press the button briefly to initiate Sleep. When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only). When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button down for at least 10 seconds to turn off the computer.</p> <p>To learn more about your power and sleep settings:</p> <ul style="list-style-type: none"> Right-click the Power icon , and then select Power and sleep settings.

Rear

Identify the rear component.



Table 2-8 Rear component and its description

Component	Description
Vent	<p>Enables airflow to cool internal components.</p> <p>NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>

Bottom

Identify the bottom components.

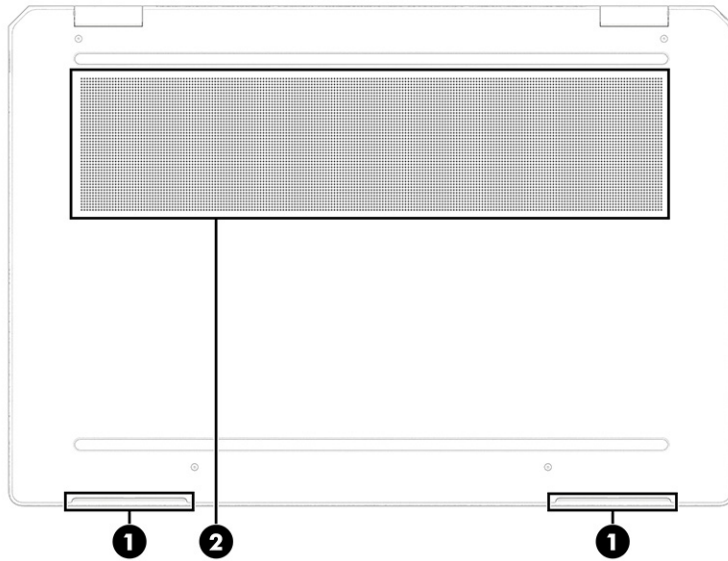


Table 2-9 Bottom components and their descriptions

Component	Description
(1) Speakers (2)	Produce sound.
(2) Vent	Enables airflow to cool internal components.

NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels

The labels affixed to the computer provide information that you might need when you troubleshoot system problems or travel internationally with the computer. Labels can be in paper form or imprinted on the product.

IMPORTANT: Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- Service label—Provides important information to identify your computer. When contacting support, you might be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

Your service label will resemble one of the following examples. Refer to the illustration that most closely matches the service label on your computer.



Table 2-10 Service label components

Component	
(1)	Serial number
(2)	Product ID
(3)	HP product name and model number

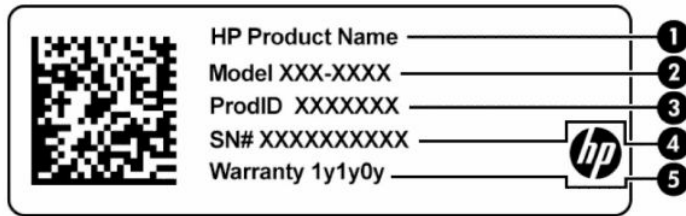


Table 2-11 Service label components

Component	
(1)	HP product name
(2)	Model number
(3)	Product ID
(4)	Serial number
(5)	Warranty period

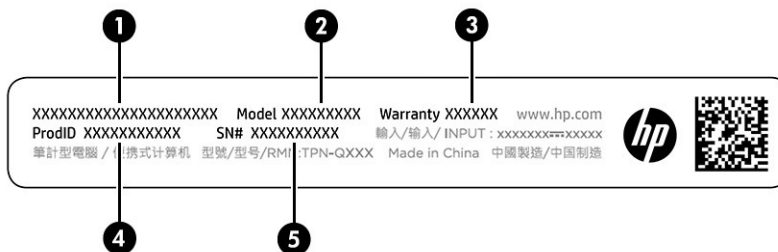


Table 2-12 Service label components

Component	
(1)	HP product name

Table 2-12 Service label components (continued)

Component	
(2)	Model number
(3)	Warranty period
(4)	Product ID
(5)	Serial number

- Regulatory labels—Provide regulatory information about the computer.
- Wireless certification labels—Provide information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.

3 Illustrated parts catalog

Use this chapter to determine the spare parts that are available for the computer.

Computer major components

To identify the computer major components, use this illustration and table.

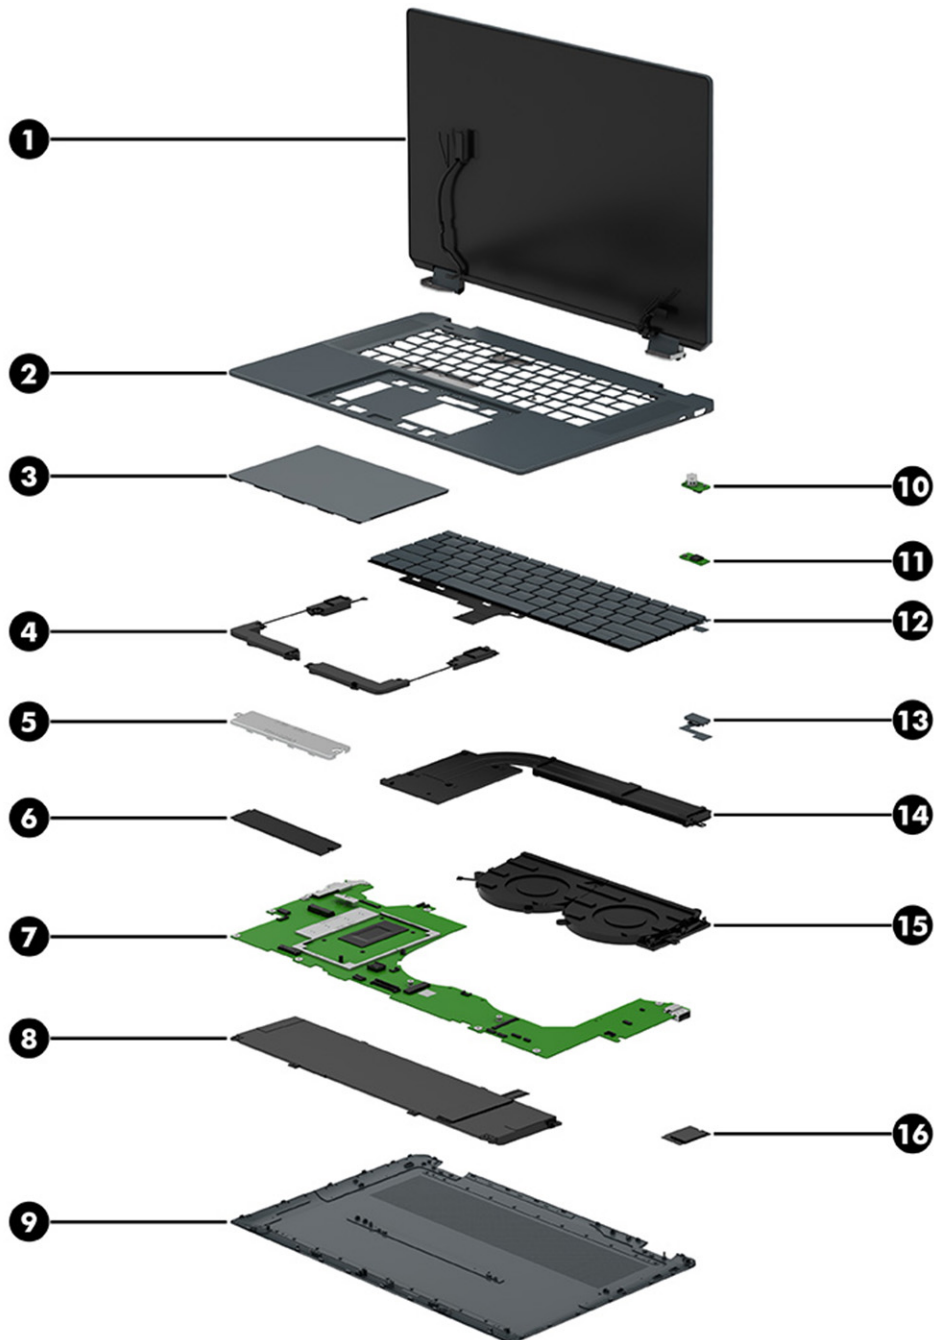


Table 3-1 Computer major component descriptions and part numbers

Item	Component	Spare part number
(1)	Display assembly NOTE: Display assemblies are offered as spare parts only at a subcomponent level. For more information, see Display assembly subcomponents on page 19 .	not available as a spare part
(2)	Top cover	
	Nightfall black	N66400-001
	Slate blue	N66402-001
	Nightfall black, for use in Japan	N66401-001
(3)	Touchpad (does not include bracket) NOTE: The touchpad power cable is available using spare part number N66407-001. The touchpad signal cable is available using spare part number N66408-001.	
	Nightfall black	N66405-001
	Slate blue	N66406-001
(4)	Speakers (left and right)	N66409-001
(5)	Solid-state drive cover (includes thermal pad)	N66413-001
(6)	Solid-state drive (PCIe)	
	2 TB, TLC	M52027-005
	2 TB, TLC (only for use in China)	N77396-005
	1 TB, TLC	M16560-005
	1 TB, TLC (only for use in China)	N77395-005
	512 GB, TLC	M17436-005
(7)	System board (includes processor; for use in models with the Windows operating system)	
	Models with UMA graphics memory:	
	<ul style="list-style-type: none"> Intel Core Ultra 7 155H processor with 32 GB of integrated system memory, models with an OLED display 	N66378-601
	<ul style="list-style-type: none"> Intel Core Ultra 7 155H processor with 32 GB of integrated system memory, models with an OLED display (for use in the People's Republic of China) 	N83094-601
	<ul style="list-style-type: none"> Intel Core Ultra 7 155H processor with 16 GB of integrated system memory, models with an OLED display 	N66377-601
	<ul style="list-style-type: none"> Intel Core Ultra 7 155H processor with 16 GB of integrated system memory, models with an LCD display 	N66376-601
	Models with discrete graphics memory:	
	<ul style="list-style-type: none"> Intel Core Ultra 7 155H processor with 32 GB of integrated system memory, models with an OLED display 	N66380-601
	<ul style="list-style-type: none"> Intel Core Ultra 7 155H processor with 32 GB of integrated system memory, models with an OLED display (for use in the People's Republic of China) 	N83095-601
	<ul style="list-style-type: none"> Intel Core Ultra 7 155H processor with 16 GB of integrated system memory, models with an OLED display 	N66379-601
(8)	Battery (6 cell, 83 Whr)	M48025-005

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
(9)	Bottom cover (includes rubber feet)	
	Nightfall black	N66395-001
	Slate blue	N66396-001
(10)	IR sensor board	N66393-001
	The IR sensor board cable is available using spare part number N66394-001.	
(11)	Audio board	N66391-001
	NOTE: The audio board cable is available using spare part number N66392-001.	
(12)	Keyboard	
	For a detailed list of country codes, see Keyboard on page 63 .	
	Nightfall black	N66403-xx1
	Slate blue	N66404-xx1
(13)	Power button/fingerprint reader board	
	The fingerprint reader board cable is available using spare part number N66412-001.	
	Nightfall black	N66410-001
	Slate blue	N66411-001
(14)	Heat sink	
	UMA	N66397-001
	Discrete	N66398-001
(15)	Fans (left and right)	N66399-001
(16)	WLAN module	
	Intel AX211 Wi-Fi 6E Bluetooth 5.3 WLAN	M53366-005
	Intel Wi-Fi 7 BE200 + Bluetooth 5.4 (802.11be 2 × 2, 320 MHz)	N39883-005

Display assembly subcomponents

To identify the display assembly subcomponents, use this illustration and table.

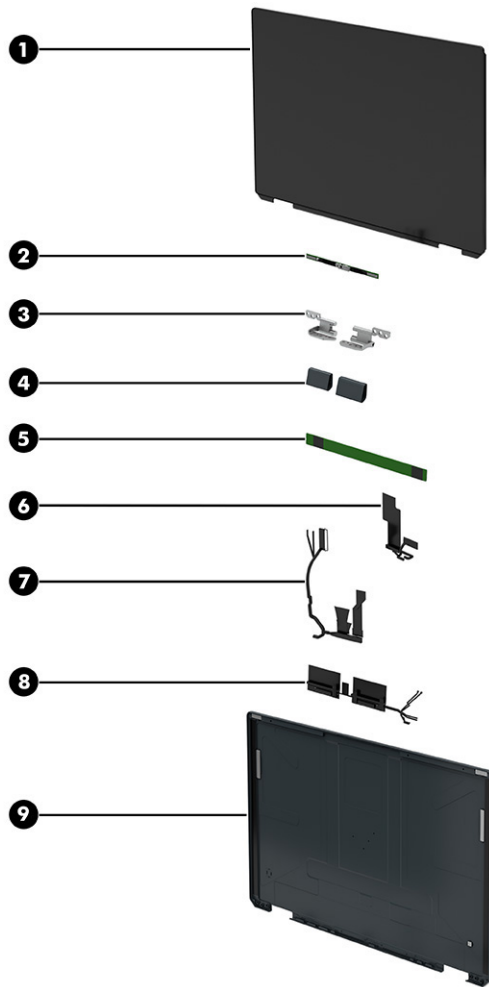


Table 3-2 Display component descriptions and part numbers

Item	Component	Spare part number
(1)	Display panel	
	NOTE: Panel adhesive is available as spare part number N66420-001.	
	WQXGA, nightfall black	N66381-001
	OLED, nightfall black	N66382-001
	WQXGA, slate blue	N70800-001
	OLED, slate blue	N70801-001
(2)	Camera module (includes rubber pieces)	N66386-001
(3)	Hinges (left and right)	N66389-001
(4)	Hinge covers (left and right)	
	Nightfall black	N86530-001
	Slate blue	N86529-001
(5)	Touch board	N66383-001

Table 3-2 Display component descriptions and part numbers (continued)

Item	Component	Spare part number
(6)	Camera cable	N66387-001
	Camera cable	N66388-001
(7)	Display panel cable	
	LCD panel	N66384-001
	OLED panel	N66385-001
(8)	Wireless antenna kit	N66419-001
(9)	Display back cover (includes wireless antennas)	
	LCD panel, nightfall black	N66415-001
	OLED panel, nightfall black	N66417-001
	LCD panel, slate blue	N66416-001
	OLED panel, slate blue	N66418-001

Miscellaneous parts

To identify the miscellaneous parts, use this table.

Table 3-3 Miscellaneous part descriptions and part numbers

Component	Spare part number
Slim AC adapter (nPFC, USB-C)	
140 W	N22282-001
100 W	N57045-001
Screw Kit	N66390-001
Misc Parts Kit (includes display panel absorber with foil, display foil with protective tape, thermal protective tape, memory module foil, and fingerprint reader rubber)	N66414-001
Solid-state drive shield with thermal pad	N66413-001
Pen	N54711-001
HP USB external DVD-RW drive	747080-001
Display panel adhesive	N66420-001
HDMI-to-VGA adapter	701943-001
HP USB-C®-to-USB 3.0 adapter	814618-001
HP USB-C-to-VGA adapter	831751-001
HP USB-C-to-RJ-45 adapter	M95985-001
HP USB-C-to-USB-A hub	916838-001
HP USB-C-to-HDMI 2.0 adapter	935325-001
Power adapter (C5)	
Japan	L33157-001

Table 3-3 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
Power cords (C5, premium, 1.0 m [3.3 ft])	
Argentina	L42493-001
Australia	L42486-001
Denmark	L42487-001
Europe (Austria, Belgium, Finland, France, Germany, the Netherlands, Norway, and Sweden)	L42488-001
India	N23033-001
Japan	L42490-001
North America	L42492-001
People's Republic of China	N23032-001
South Korea	L42491-001
Switzerland	L42494-001
United Kingdom	L42497-001

4 Removal and replacement procedures preliminary requirements

Use this information to properly prepare to disassemble and reassemble the computer.


Tools required

You need the following tools to complete the removal and replacement procedures:

- Tweezers
- Nonconductive, nonmarking pry tool
- Magnetic Phillips P1 screwdriver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.


 **NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts

Using excessive force during disassembly and reassembly can damage plastic parts.

Cables and connectors


Handle cables with extreme care to avoid damage.

 **IMPORTANT:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed so that they cannot be caught or snagged as you remove or replace parts. Handle flex cables with extreme care; these cables tear easily.

Drive handling

Note the following guidelines when handling drives.

 **IMPORTANT:** Drives are fragile components. Handle them with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:


- Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

- Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.
 - Before removing an optical drive, be sure that a disc is not in the drive, and be sure that the optical drive tray is closed.
 - Handle drives on surfaces covered with at least 2.54 cm (1 inch) of shock-proof foam.
 - Avoid dropping drives from any height onto any surface.
 - After removing a hard drive or an optical drive, place it in a static-proof bag.
 - Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.
 - Avoid exposing a drive to temperature extremes or liquids.
 - If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging, and label the package "FRAGILE."
-

Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.

 **IMPORTANT:** To prevent damage to the device when you remove or install internal components, observe these precautions:

- Keep components in their electrostatic-safe containers until you are ready to install them.
 - Before touching an electronic component, discharge static electricity by using the guidelines described in [Personal grounding methods and equipment on page 25](#).
 - Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
 - If you remove a component, place it in an electrostatic-safe container.
-

Generating static electricity

Follow these static electricity guidelines:

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

Table 4-1 Static electricity occurrence based on activity and humidity

Event	Relative humidity		
	55%	40%	10%
Walking across carpet	7,500 V	15,000 V	35,000 V
Walking across vinyl floor	3,000 V	5,000 V	12,000 V
Motions of bench worker	400 V	800 V	6,000 V
Removing dual in-line packages (DIPs) from plastic tube	400 V	700 V	2,000 V
Removing DIPs from vinyl tray	2,000 V	4,000 V	11,500 V
Removing DIPs from polystyrene foam	3,500 V	5,000 V	14,500 V
Removing bubble pack from PCB (printed circuit board)	7,000 V	20,000 V	26,500 V
Packing PCBs in foam-lined box	5,000 V	11,000 V	21,000 V

Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.



NOTE: As little as 700 V of static electricity can degrade a product.

Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity.

The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components:

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.
- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

Personal grounding methods and equipment

Using certain equipment can prevent static electricity damage to electronic components.

- **Wrist straps** are flexible straps with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance in the ground cords. To provide proper ground, a strap must be worn snug against bare skin. The ground cord must be connected and fit snugly into the banana plug connector on the grounding mat or workstation.
- You can use **heel straps, toe straps, and boot straps** at standing workstations. These straps are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance between the operator and ground.

Table 4-2 Static shielding protection levels

Static shielding protection levels	
Method	Voltage
Antistatic plastic	1,500
Carbon-loaded plastic	7,500
Metallized laminate	15,000

Grounding the work area

To prevent static damage at the work area, follow these precautions:

- Cover the work surface with approved static-dissipative material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- Avoid contact with pins, leads, or circuitry.

Recommended materials and equipment

HP recommends certain materials and equipment to prevent static electricity:

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of $1\text{ M}\Omega \pm 10\%$ resistance
- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing $1\text{ M}\Omega \pm 10\%$ resistance
- Material handling packages

- Conductive plastic bags
- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes

Cleaning your computer

Cleaning your computer regularly removes dirt and debris so that your device continues to operate at its best. Use the following information to safely clean the external surfaces of your computer.

Enabling HP Easy Clean (select products only)

HP Easy Clean helps you to avoid accidental input while you clean the computer surfaces. This software disables devices such as the keyboard, touch screen, and touchpad for a preset amount of time so that you can clean all computer surfaces.


1. Start HP Easy Clean in one of the following ways:
 - Select the **Start** menu, and then select **HP Easy Clean**.
- or -
 - Select the **HP Easy Clean** icon in the taskbar.
- or -
 - Select **Start**, and then select the **HP Easy Clean** tile.
2. Now that your device is disabled for a short period, see [Removing dirt and debris from your computer on page 27](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 28](#) for guidelines to help prevent the spread of harmful bacteria and viruses.

Removing dirt and debris from your computer


Here are the recommended steps to clean dirt and debris from your computer.

For computers with wood veneer, see [Caring for wood veneer \(select products only\) on page 29](#).


1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.

 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with water. The cloth should be moist, but not dripping wet.

 **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.

 **IMPORTANT:** Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

See [Cleaning your computer with a disinfectant on page 28](#) for recommended steps to clean the high-touch, external surfaces on your computer to help prevent the spread of harmful bacteria and viruses.


Cleaning your computer with a disinfectant

The World Health Organization (WHO) recommends cleaning surfaces, followed by disinfection, as a best practice for preventing the spread of viral respiratory illnesses and harmful bacteria.


After cleaning the external surfaces of your computer using the steps in [Removing dirt and debris from your computer on page 27](#), [Caring for wood veneer \(select products only\) on page 29](#), or both, you might also choose to clean the surfaces with a disinfectant. A disinfectant that is within HP's cleaning guidelines is an alcohol solution consisting of 70% isopropyl alcohol and 30% water. This solution is also known as rubbing alcohol and is sold in most stores.


Follow these steps when disinfecting high-touch, external surfaces on your computer:

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.


 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with a mixture of 70% isopropyl alcohol and 30% water. The cloth should be moist, but not dripping wet.

 **CAUTION:** Do not use any of the following chemicals or any solutions that contain them, including spray-based surface cleaners: bleach, peroxides (including hydrogen peroxide), acetone, ammonia, ethyl alcohol, methylene chloride, or any petroleum-based materials, such as gasoline, paint thinner, benzene, or toluene.

 **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.

 **IMPORTANT:** Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

Caring for wood veneer (select products only)

Your product might feature high-quality wood veneer. As with all natural wood products, proper care is important for best results over the life of the product. Because of the nature of natural wood, you might see unique variations in the grain pattern or subtle variations in color, which are normal.

- Clean the wood with a dry, static-free microfiber cloth or chamois.
- Avoid cleaning products containing substances such as ammonia, methylene chloride, acetone, turpentine, or other petroleum-based solvents.
- Do not expose the wood to sun or moisture for long periods of time.
- If the wood becomes wet, dry it by dabbing with an absorbent, lint-free cloth.
- Avoid contact with any substance that might dye or discolor the wood.
- Avoid contact with sharp objects or rough surfaces that might scratch the wood.

See [Removing dirt and debris from your computer on page 27](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 28](#) for sanitizing guidelines to help prevent the spread of harmful bacteria and viruses.

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.

- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Accessing support information

To find the HP support that you need, use this information.

Table 4-3 Support information locations



Service consideration	Path to access information
Records of reported failure incidents stored on the computer	<p>Windows®:</p> <p>Preoperating system failures are logged in the BIOS Event Log. To view the BIOS Event Log:</p> <ol style="list-style-type: none"> 1. Press the power button. 2. Immediately and repeatedly press esc when the power button light turns white. <p>NOTE: If you do not press esc at the appropriate time, you must restart the computer and again repeatedly press esc when the power button light turns white to access the utility.</p> <ol style="list-style-type: none"> 3. Press f10 to enter the BIOS setup. 4. (On commercial products) Under the Main tab, select BIOS event log, and then select View BIOS Event Log. <p>- or -</p> <p>(On consumer products) Under the Main tab, select System Log.</p> <p>Post-operating system failures are logged in the Event Viewer.</p> <ol style="list-style-type: none"> 1. Turn on the computer and allow the operating system to open. 2. Select the search icon  in the taskbar. 3. Type <code>Event Viewer</code>, and then press enter. 4. Select the log from the left panel. Details display in the right panel. <p>Chrome™:</p> <ol style="list-style-type: none"> 1. Go to support.google.com/chrome. 2. Search <code>collect Chrome device logs</code>.
Technical bulletins	<p>To locate technical bulletins:</p> <ol style="list-style-type: none"> 1. Go to www.hp.com. 2. Place the cursor over Problem solving to display more options. 3. Select Support & Troubleshooting. 4. Type the serial number, product number, or product name to go to the product support page. 5. Select Advisories to view technical bulletins.


Table 4-3 Support information locations (continued)

Service consideration	Path to access information
Repair professionals	To locate repair professionals: <ol style="list-style-type: none"><li data-bbox="703 310 932 331">1. Go to www.hp.com.<li data-bbox="703 359 1362 380">2. Place the cursor over Support resources to display more options.<li data-bbox="703 407 1091 428">3. Select Authorized service providers.
Component and diagnosis information, failure detection, and required action	To locate diagnosis information and actions: <ol style="list-style-type: none"><li data-bbox="703 506 1203 527">1. Go to http://www.hp.com/go/techcenter/pcdiags.<li data-bbox="703 554 932 575">2. Select Get Support.<li data-bbox="703 602 1445 648">3. Near the bottom of the window, select Notebook PCs, and then select your location.

5 Removal and replacement procedures for authorized service provider parts


This chapter provides removal and replacement procedures for authorized service provider parts.

 **IMPORTANT:** Only an authorized service provider should access the components described in this chapter. Accessing these parts can damage the computer or void the warranty.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

Component replacement procedures

To remove and replace computer components, use the procedures described in this section.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com/partsurfer/>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

To remove and replace computer components, use these procedures:

For initial safety procedures, see [Removal and replacement procedures preliminary requirements on page 23](#).

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Bottom cover

To remove the bottom cover, use this procedure and illustration.


Table 5-1 Bottom cover description and part number

Description	Spare part number
Bottom cover, nightfall black	N66395-001
Bottom cover, slate blue	N66396-001


Before removing the bottom cover, prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).

Remove the bottom cover:


1. Remove the two Phillips M2.0 × 9.0 screws **(1)** from the bottom cover.
2. Remove the two Phillips M2.0 × 3.5 screws **(2)** from the bottom cover.

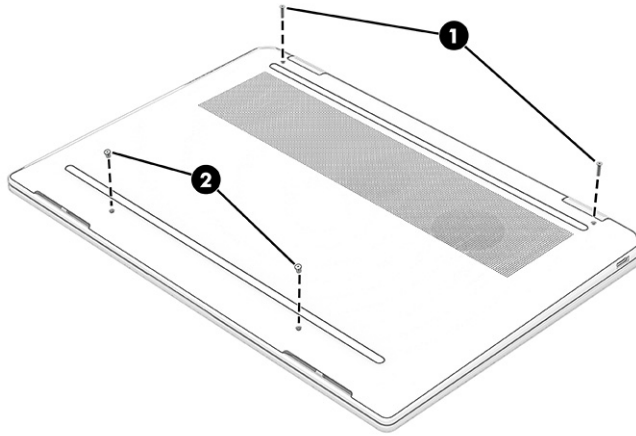

3. Press on the sides of the touchpad near the keyboard **(1)** as shown in the following illustration until the bottom cover releases from the computer **(2)**.

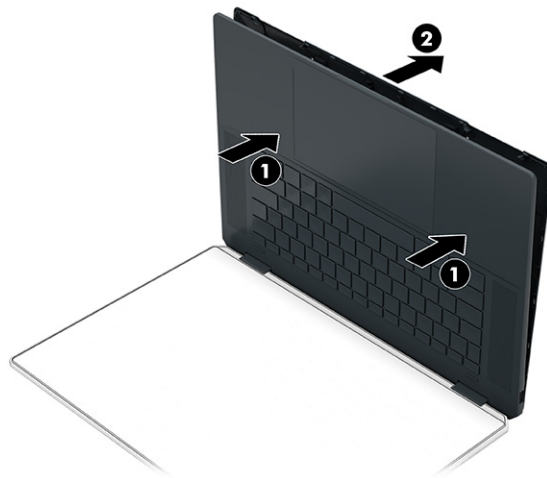

4. Lift up on the back of the bottom cover to remove it from the computer.

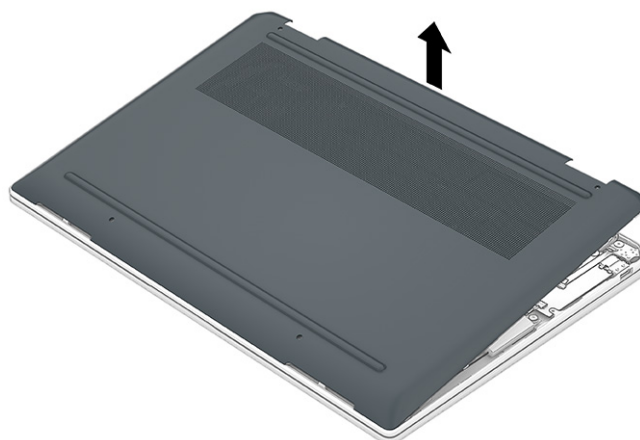

To install the bottom cover, reverse the removal procedures.

Battery

To remove the battery, use this procedure and illustration.

Table 5-2 Battery description and part number

Description	Spare part number
6 cell, 83 Whr	M48025-005


⚠ WARNING! To avoid personal injury and damage to the product:

- Do *not* puncture, twist, or crack the battery.
- Do *not* cause an external puncture or rupture to the battery. They can cause a short inside the battery, which can result in battery thermal runaway.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* compress or squeeze the battery case with tools or heavy objects stacked on top of the case. These actions can apply undue force on the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

Before removing the battery, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).

⚠ WARNING! To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

 **IMPORTANT:** Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

Remove the battery:

1. Disconnect the battery cable (1) from the system board.
2. Remove the eight Phillips M2.0 × 3.5 screws (2) that secure the battery to the computer.
3. Remove the battery from the computer (3).

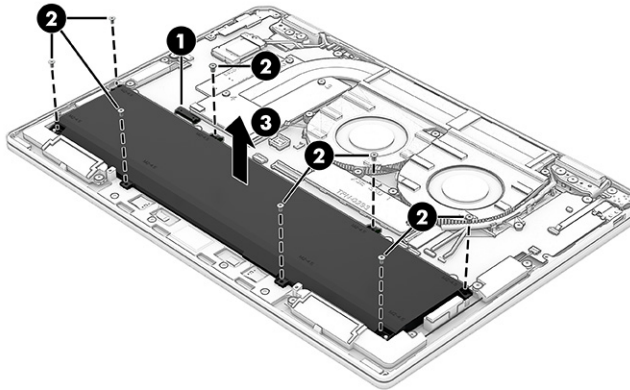

To install the battery, reverse the removal procedures.

Display subcomponents (without removing the display)


You can remove some display subcomponents without removing the entire display assembly from the computer. To remove the display panel, camera module, and touch board, use these procedures and illustrations.

To remove display subcomponents that require that you remove the display from the computer, see [Display assembly on page 43](#).

Before removing the display subcomponents, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 34](#)).

Remove the display assembly subcomponents:

 **NOTE:** The display assembly can remain attached to the computer for these procedures.

1. To remove the display panel:

- a. Use a heating device to heat the display rear cover to loosen the panel adhesive.

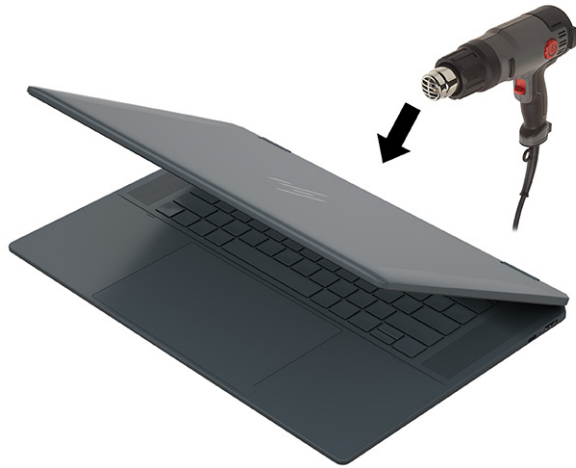


- b. Attach suction cups (1) to the top, middle of the display.



NOTE: Be sure not to place the suction cup over the camera module.

- c. Pull the tools apart (2) to create a gap between the panel and display rear cover.
- d. Insert a pry tool (3) into the gap, and then slide to tool back and forth (4) along the entire length of the top of the display to release the panel.

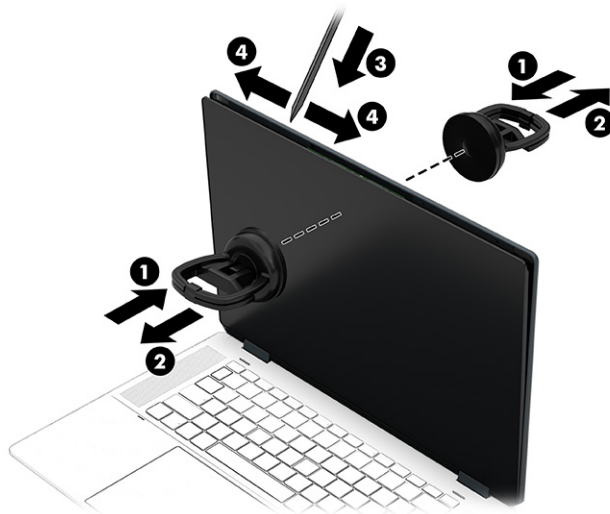


- e. Attach suction cups (1) to the top, right of the display.
- f. Pull the tools apart to create a gap (2) between the panel and display rear cover.


- g. Use tweezers (3) to pull the tape (4) out from behind the right side of the display panel.




- h. Attach suction cups (1) to the top, left of the display.
- i. Pull the tools apart to create a gap (2) between the panel and display rear cover.
- j. Use tweezers (3) to pull the tape (4) out from behind the left side of the display panel.

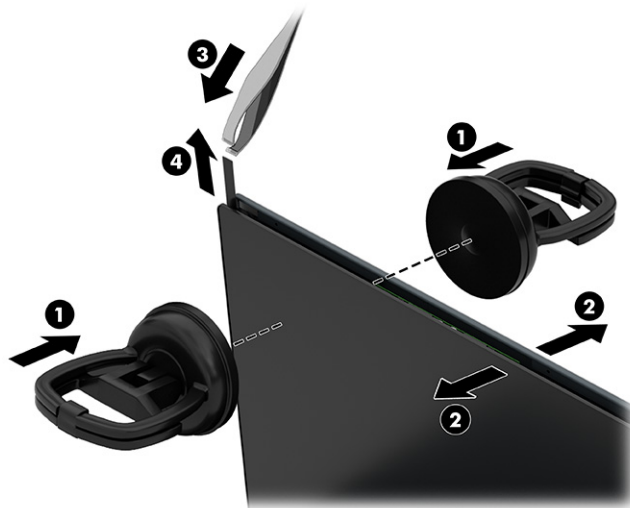


- k. Rotate the panel over onto the keyboard.

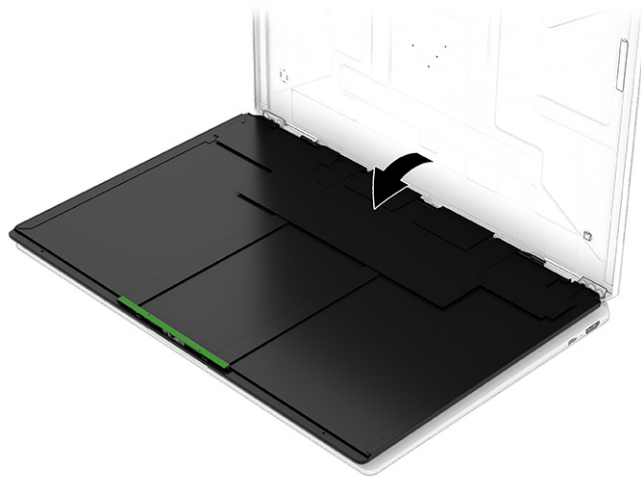


- l. Peel the foil off the touch board on the bottom of the display panel.

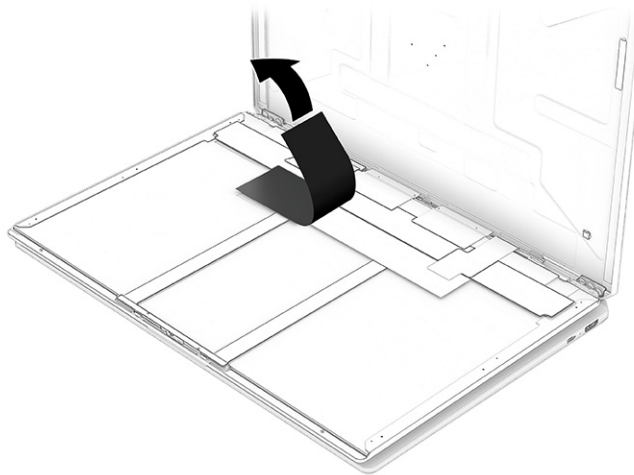

- m. Peel the tape off the display panel.

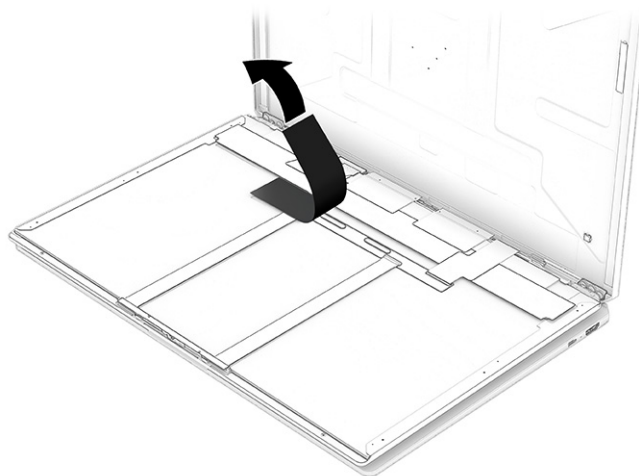

- n. Lift the conductive tape (1) off the LVDS connector on the bottom of the panel.
- o. Lift the locking bar (2) off the connector
- p. Disconnect the cable (3).
- q. Disconnect the right LVDS cable (4) from the ZIF connector on the touch board.
- r. Disconnect the two DBTS cables (5) from the ZIF connector on the touch board.
- s. Disconnect the camera cable (6) from the ZIF connector on the touch board.

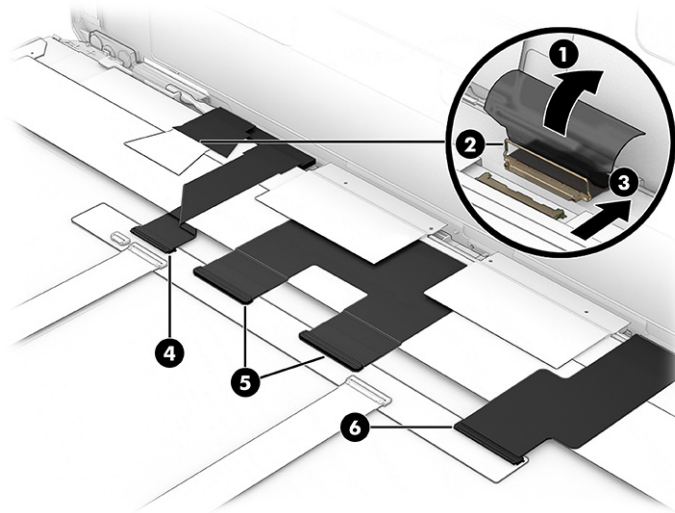

Display panels are available as spare part numbers:

N66381-001: WQXGA, nightfall black


N66381-002: OLED, nightfall black


N70800-001: WQXGA, slate blue

N70801-001: OLED, slate blue


Display foil and tape are available in the Misc Parts Kit as spare part number N66414-001.

- t. When installing a display panel, use the following illustration to determine tape installation locations on the inside of the display rear cover.

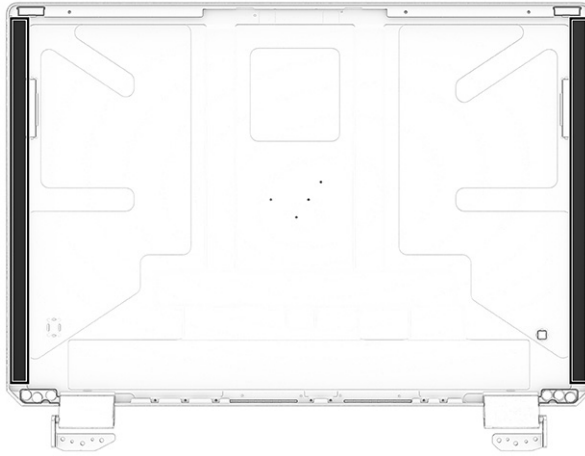


 **NOTE:** Display panel adhesive is available as spare part number N66420-001.

- u. If you are reinstalling the existing panel, thoroughly clean and repaste the VHB adhesive (not tape) on the top of the panel.

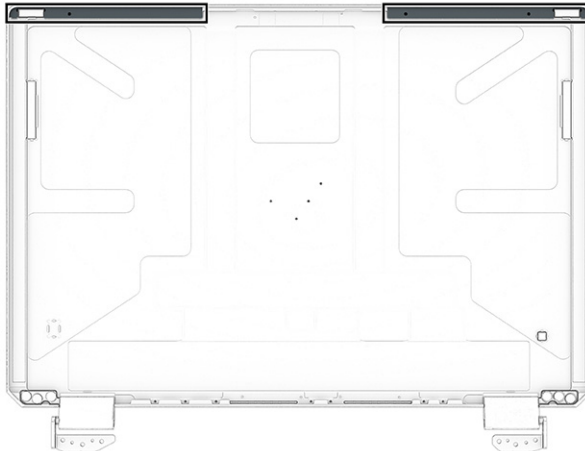

- v. When installing a display panel, be sure that magnets are installed in the upper corners of the display rear cover with the black lines on the magnets facing outward.

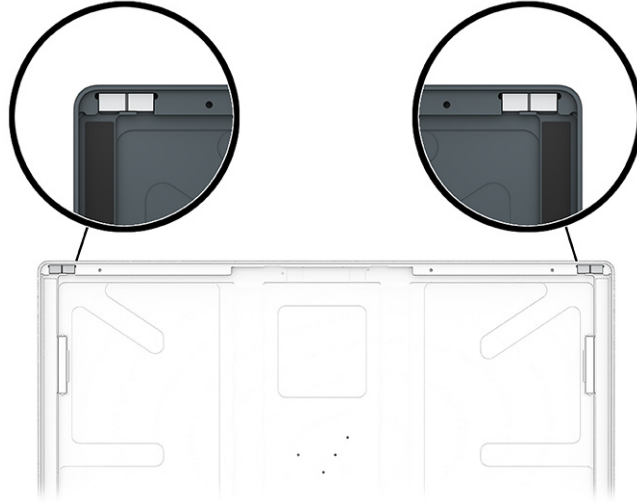


2. To remove the camera module:

- a. Insert a thin pry tool into two gaps (1) on the camera module, and then lift the tool to release the module (2).




NOTE: To avoid damaging the camera module, be sure to use a thin pry tool.

- b. Peel the two camera cables (3) off the panel.
- c. Disconnect the cables (4) from the touch board.

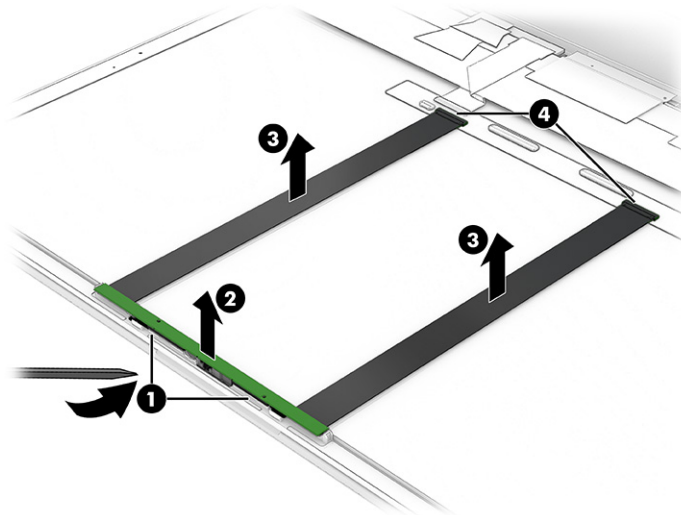


The camera module is available as spare part number N66386-001.

- d. When installing a camera module, position the rubber pieces with the arrows (1) pointing at each other, and then place the rubber pieces (2) onto the module in the locations shown in the following illustration.

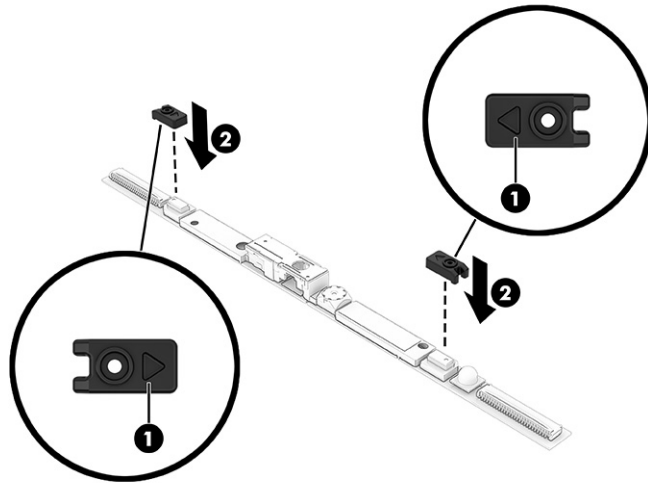

3. To remove the touch board:

- a. Disconnect the cables from the ZIF connectors (1) on the board, and then pry up to release the board (2).

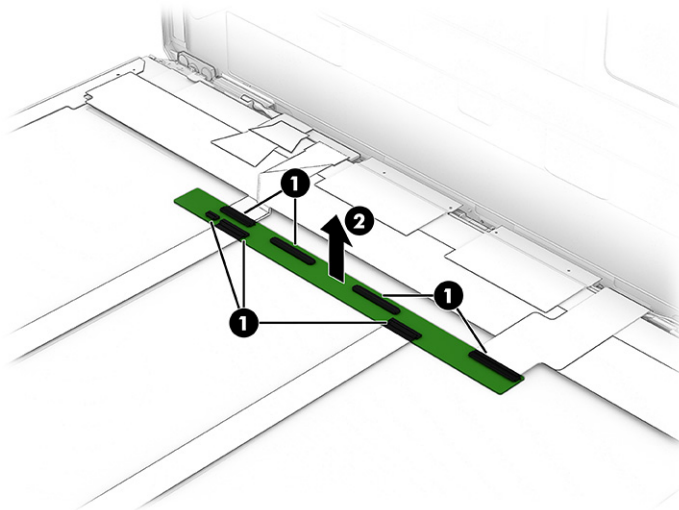

The touch board is available as spare part number N66383-001.


- b. When installing a touch board, make sure tape installed at the locations as shown in the following illustration.



To install the display components with the display attached to the computer, reverse these procedures.

Display assembly

To remove and disassemble the display assembly, use these procedures and illustrations.


 **NOTE:** The display assembly is spared at the subcomponent level. For display assembly spare part information, see the individual removal subsections.

Before removing the display panel, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 34](#)).


Remove the display assembly:

1. Lift the tape **(1)** from the smaller side of the display cable, and then disconnect smaller cable **(2)** from system board.
2. Lift the locking bar **(3)** of the larger side of the display cable, and then disconnect the larger cable **(4)** from the system board.
3. Remove the cable from the clips **(5)** in the computer.

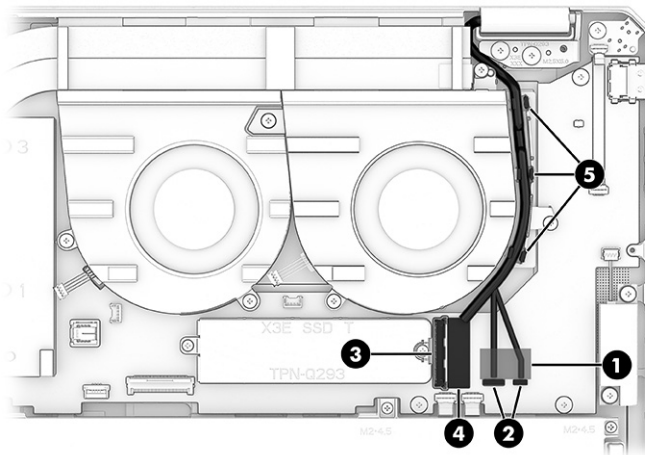


4. Remove the Phillips M2.0 × 2.5 screw **(1)** from the bracket on the WLAN module, and then remove the bracket **(2)**.
5. Disconnect the antenna cables **(3)** from antenna connectors on the WLAN module.
6. Remove the antenna cables from the clip **(4)**.
7. Lift the locking bar **(5)** of the larger side of the camera cable, and then disconnect the larger cable **(6)** from the system board.
8. Lift the tape **(7)** from the smaller side of the camera cable, and then disconnect smaller cable **(8)** from system board.

9. Release the cables from the clip (9).

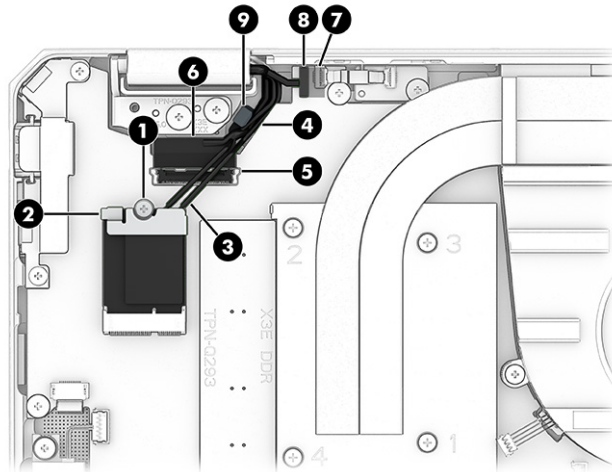


10. Open the display (1) to 270°.
11. Remove the four Phillips M2.5 × 5.0 screws (2) that secure the display assembly to the computer.
12. Separate the display (3) from the computer.

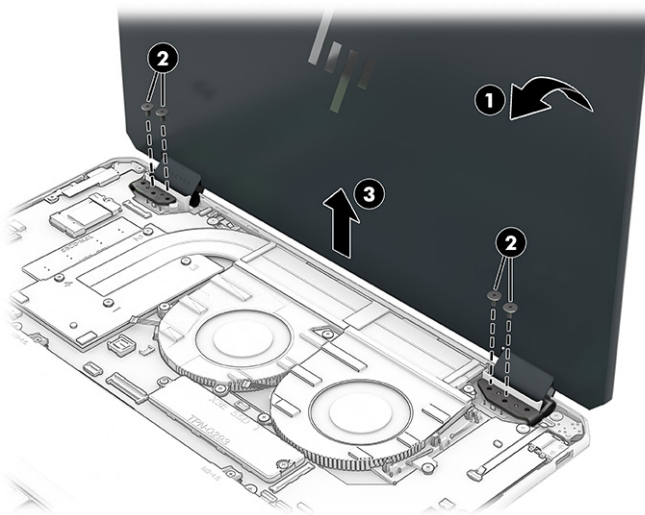


13. To remove the display panel, camera module, and touch board, see [Display subcomponents \(without removing the display\) on page 35](#).
14. To remove the hinges from the display rear cover:
 - a. Remove the three Phillips M2.0 × 2.0 broadhead screws (1) from each hinge.


- b. Remove the hinges (2) from the display back cover.

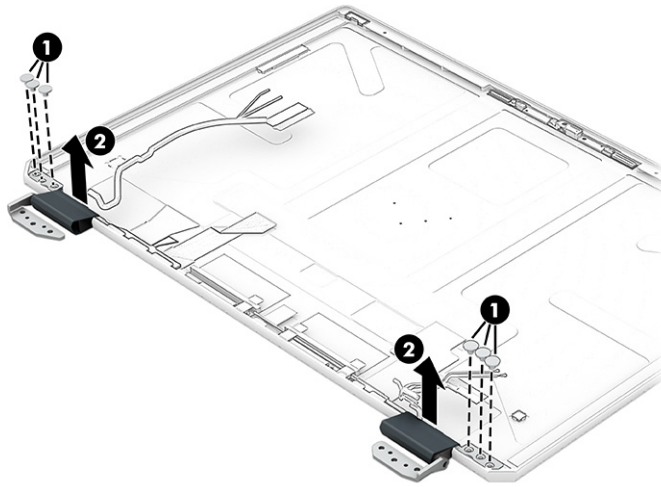


- c. Remove the rubber piece (1) from the right hinge cover.
- d. Remove the antenna cables and camera cable (2) from the right hinge.
- e. Remove the rubber piece (3) from the left hinge cover.
- f. Remove the display cable (4) from the left hinge.

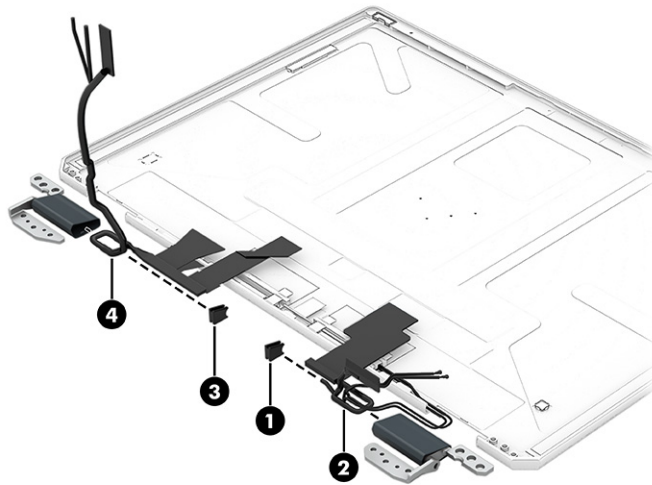

- g. When reassembling the display hinges, be sure to insert the rubber pieces in into the hinges after the cables.

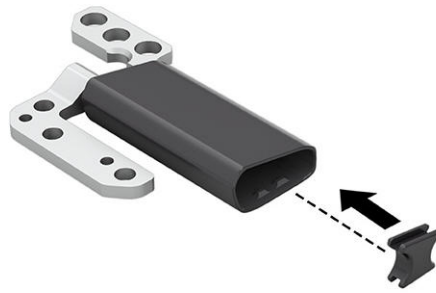

- h. Remove one screw (1) from each hinge cover, and then pull the covers off the hinges (2).

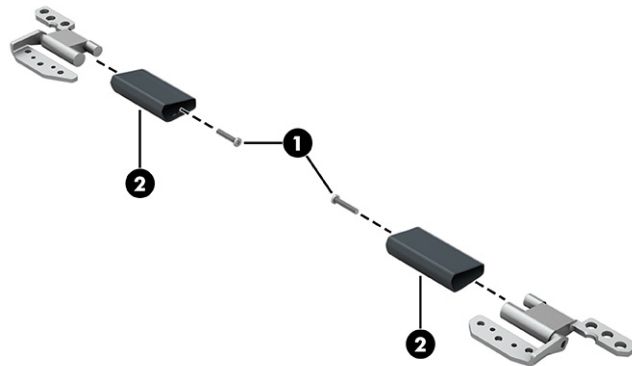


Hinge covers are available as spare part numbers:

N86530-001: Nightfall black


N86529-001: Slate blue

- i. When installing the display hinge covers, note the left (L) and right (R) labels on each hinge to be sure to install the covers in the correct locations.

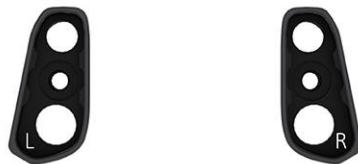

The display hinges are available as spare part number N66389-001.

15. Peel the wireless antennas (1) off the display back cover, and then release the wireless antenna cables from the retention clips (2) built into the display back cover.

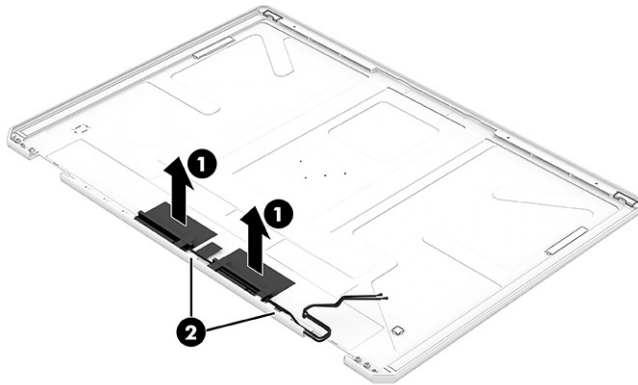

The wireless cables and antennas are available as spare part number N66419-001. The wireless cables and antennas are also included in the display rear cover spare part kit.

To reassemble and replace the display assembly, reverse these procedures.

System board protective cover

To remove the protective cover from the system board, use this procedure and illustration.

Table 5-3 System board protective cover description and part number


Description	Spare part number
Misc parts kit	N66414-001

Before removing the system board protective cover, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).

Remove the system board protective cover,;

- Lift the cover straight up and off the system board.

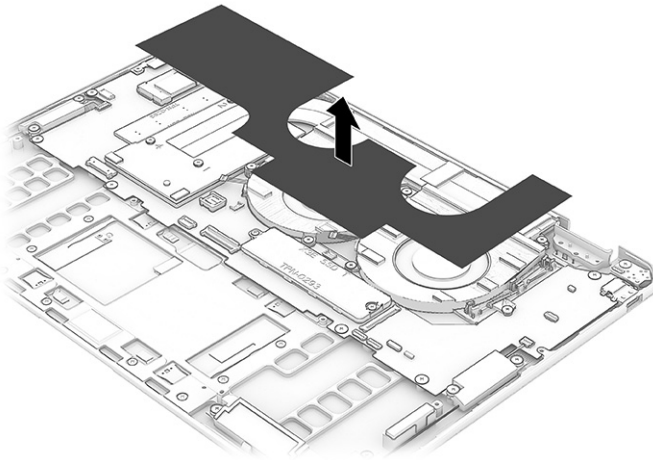

To install the system board protective cover, reverse the removal procedures.

WLAN module

To remove the WLAN module, use this procedure and illustration.

Table 5-4 WLAN module descriptions and part numbers

Description	Spare part number
Intel AX211 Wi-Fi 6E Bluetooth 5.3 WLAN	M53366-005
Intel Wi-Fi 7 BE200 + Bluetooth 5.4 (802.11be 2 × 2, 320 MHz)	N39883-005

IMPORTANT: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.


Before removing the WLAN module, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 34](#)).
4. Remove the large protective cover from the system board (see [System board protective cover on page 47](#)).

Remove the WLAN module:


1. Remove the Phillips M2.0 × 2.5 screw **(1)** that secure the bracket, and then remove the bracket **(2)**.
2. Carefully disconnect the antenna cables **(3)** from the module.

3. Pull the WLAN module (4) out of the connector.

 **NOTE:** When connecting the antenna cables, be sure to match the number or letter on the cable with the appropriate connector on the module.

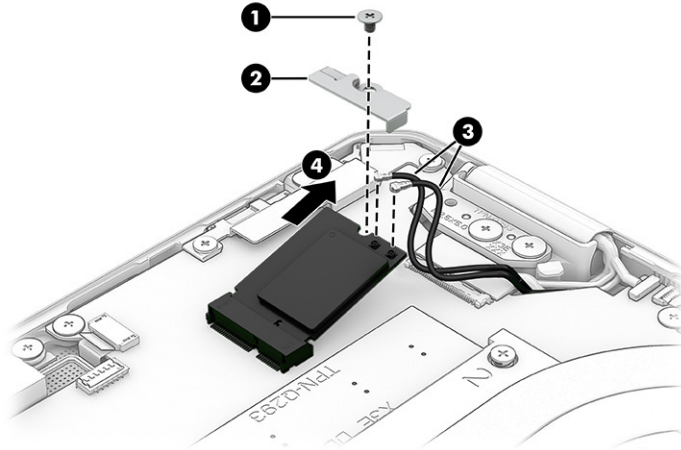

4. If the WLAN antenna is not connected to the terminal on the WLAN module, you must install a protective sleeve on the antenna connector, as shown in the following illustration.

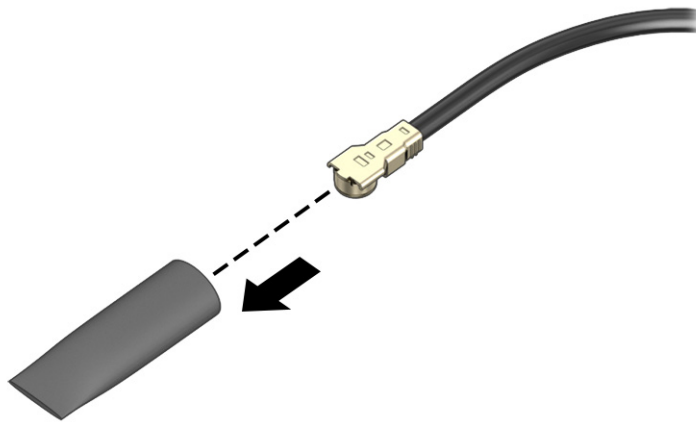

To install a WLAN module, reverse this procedure.

Speakers

To remove the speakers, use this procedure and illustration.

Table 5-5 Speaker description and part number


Description	Spare part number
Speakers (left and right)	N66409-001

Before removing the speakers, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 34](#)).

Remove the speakers:

1. Remove the clear plastic covers (1) from both speaker connectors on the system board.
2. Disconnect both speaker cables (2) from the system board.
3. Remove the four Phillips M1.6 × 3.0 screws (3) that secure each speaker.
4. Remove the speakers from the computer (4).

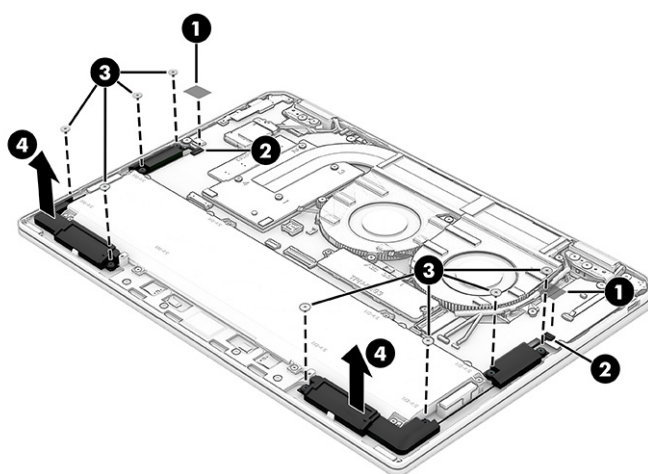

To install the speakers, reverse this procedure.

Solid-state drive

To remove the solid-state drive, use this procedure and illustration.

Table 5-6 Solid-state drive descriptions and part numbers


Description	Spare part number
2 TB, TLC	M52027-005
2 TB, TLC (only for use in China)	N77396-005
1 TB, TLC	M16560-005
1 TB, TLC (only for use in China)	N77395-005
512 GB, TLC	M17436-005
Solid-state drive cover with thermal pad	N66413-001

Before removing the solid-state drive, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 34](#)).
4. Remove the large protective cover from the system board (see [System board protective cover on page 47](#)).

Remove the solid-state drive:


1. Remove the two Phillips M2.0 × 2.5 screws **(1)** that secure the solid-state drive cover.
2. Lift the cover **(2)** off the drive.
3. Pull the drive out of the socket **(3)**.

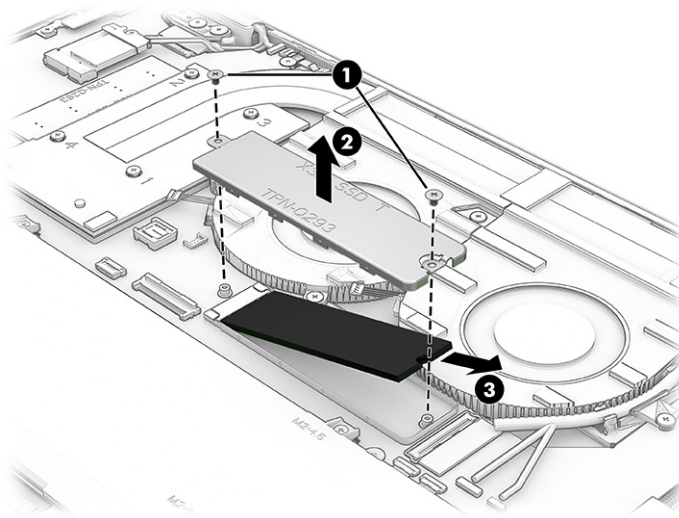


4. When installing a solid-state drive, be sure a thermal pad is installed on the bottom of the solid-state drive cover.

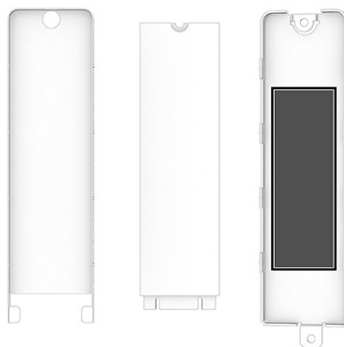

5. You must remove the bottom solid-state drive bracket to remove the system board. To remove the bracket, lift it up to release it from the computer. The bracket is secured with adhesive.

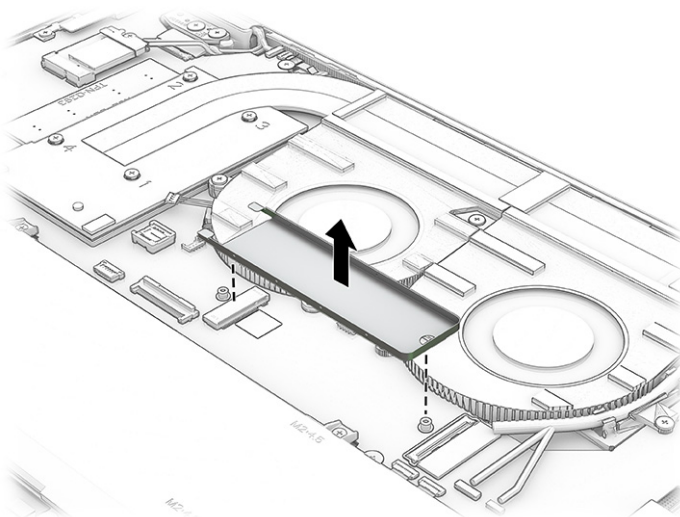

To install the solid-state drive, reverse the removal procedures.

 **NOTE:** Solid-state drives are designed with a notch to prevent incorrect insertion.

Audio board

To remove the audio board, use this procedure and illustration.

Table 5-7 Audio board description and part number

Description	Spare part number
Audio board	N66391-001
Audio board cable	N66392-001


Before removing the audio board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Remove the battery (see [Battery on page 34](#)).


Remove the audio board:

1. Remove the Phillips M2.0 × 3.5 screw **(1)** that secures the audio board to the computer.

2. Remove the board (2).

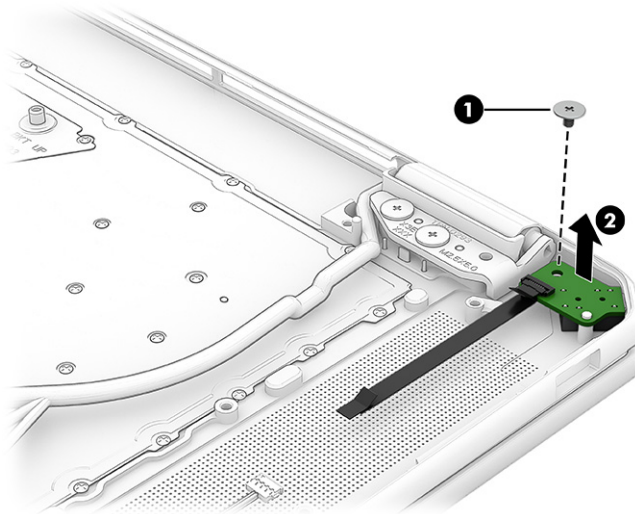

3. To remove the cable from the audio board, remove the protective tape (1) from the connector on the board, and then disconnect the cable (2) from the ZIF connector.

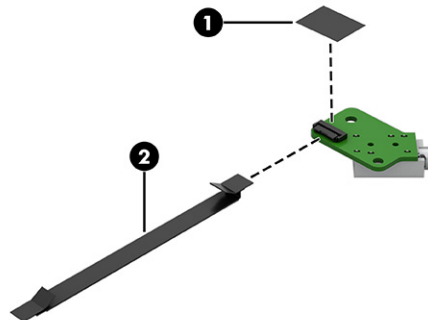

To install the audio board, reverse this procedure.

Fans

To remove the fans, use these procedures and illustrations.

Table 5-8 Fan descriptions and part numbers

Description	Spare part number
Fans (left and right)	N66399-001


Before removing the fans, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).

2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 34](#)).
4. Remove the large protective cover from the system board (see [System board protective cover on page 47](#)).

Remove the fans:

1. Remove the protective tape (1) from both fan system board connectors, and then disconnect the fan cables.
2. Remove the six Phillips 2.0 × 4.0 screws (2) from the fans.
3. Remove the fans (3).

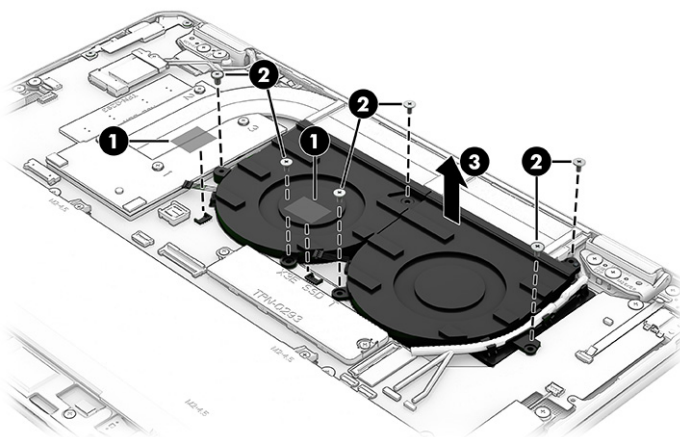

To install the fans, reverse this procedure.

Heat sink

To remove the heat sink, use these procedures and illustrations.

Table 5-9 Heat sink descriptions and part numbers


Description	Spare part number
Heat sink for use in models with UMA graphics memory	N66397-001
Heat sink for use in models with discrete graphics memory	N66398-001

Before removing the heat sink, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 34](#)).
4. Remove the large protective cover from the system board (see [System board protective cover on page 47](#)).
5. Remove the fans (see [Fans on page 53](#)).


Remove the heat sink:

1. Peel the tape (1) off the side of the heat sink. You can leave the tape connected to the computer.
2. In the order indicated on the heat sink, remove the Phillips 2.0 × 3.5 screws (2) - (5).
3. Remove the heat sink (6).

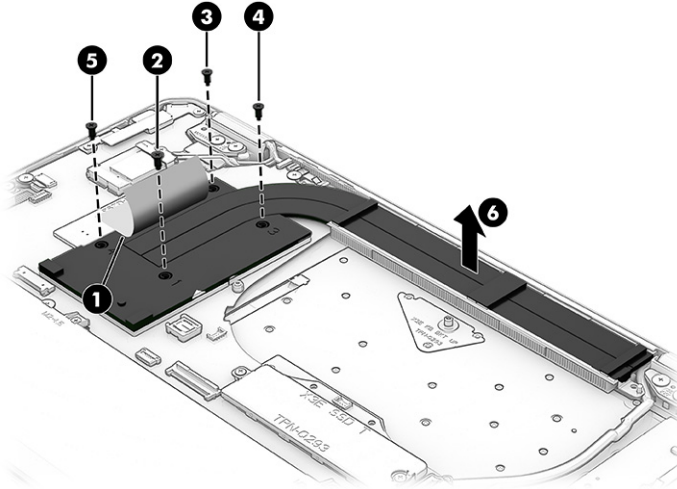

4. Thoroughly clean the thermal paste from the surfaces of the heat sink and the system board components each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits.

White thermal grease (1) and gray thermal grease (2) is used on the heat sink.

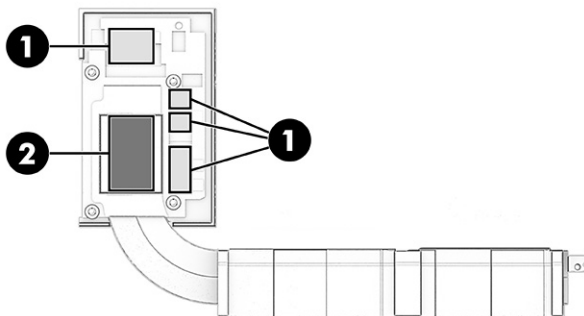

To install the heat sink, reverse this procedure.

Infrared (IR) board

To remove the IR board, use this procedure and illustration.

Table 5-10 IR board description and part number


Description	Spare part number
IR board sensor board	N66393-001
IR board sensor board cable	N66394-001

Before removing the IR board, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Remove the battery (see [Battery on page 34](#)).
4. Remove the large protective cover from the system board (see [System board protective cover on page 47](#)).
5. Remove the fans (see [Fans on page 53](#)).
6. Remove the heat sink (see [Heat sink on page 54](#)).

Remove the IR board:

1. Remove the Phillips M2.0 × 3.5 screw **(1)** that secures the IR board to the computer.
2. Remove the board **(2)**.

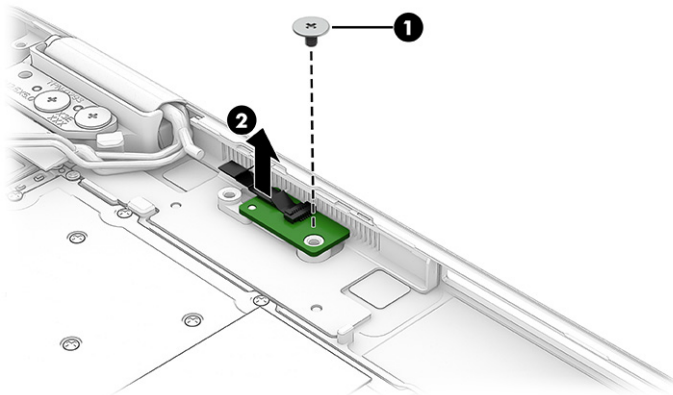

3. To disconnect the cable from the IR board, lift the protective tape (1) from the connector, and then disconnect the cable (2) from the ZIF connector on the board.

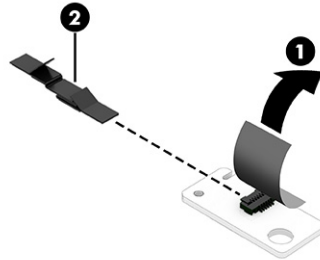

To install the IR board, reverse this procedure.

System board

To remove the system board, use these procedures and illustrations.

Table 5-11 System board descriptions and part numbers

Description	Spare part number
System board (includes processor and integrated system memory; for use in models with the Windows operating system)	
Models with UMA graphics memory:	
<ul style="list-style-type: none"> Intel Core Ultra 7 155H processor with 32 GB of integrated system memory, models with an OLED display 	N66378-601
<ul style="list-style-type: none"> Intel Core Ultra 7 155H processor with 32 GB of integrated system memory, models with an OLED display (for use in the People's Republic of China) 	N83094-601
<ul style="list-style-type: none"> Intel Core Ultra 7 155H processor with 16 GB of integrated system memory, models with an OLED display 	N66377-601
<ul style="list-style-type: none"> Intel Core Ultra 7 155H processor with 16 GB of integrated system memory, models with an LCD display 	N66376-601
Models with discrete graphics memory:	
<ul style="list-style-type: none"> Intel Core Ultra 7 155H processor with 32 GB of integrated system memory, models with an OLED display 	N66380-601
<ul style="list-style-type: none"> Intel Core Ultra 7 155H processor with 32 GB of integrated system memory, models with an OLED display (for use in the People's Republic of China) 	N83095-601
<ul style="list-style-type: none"> Intel Core Ultra 7 155H processor with 16 GB of integrated system memory, models with an OLED display 	N66379-601

Before removing the system board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).

2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Remove the battery (see [Battery on page 34](#)).
4. Remove the large protective cover from the system board (see [System board protective cover on page 47](#)).
5. Remove the fans (see [Fans on page 53](#)).
6. Remove the heat sink (see [Heat sink on page 54](#)).

When you replace the system board, be sure to remove the following components (as applicable) from the defective system board and install them on the replacement system board:

- WLAN module (see [WLAN module on page 48](#)).
- Solid-state drive (see [Solid-state drive on page 50](#)).


Remove the system board:

1. Disconnect the following cables from the system board:




NOTE: Some connectors are covered by transparent tape.


- Large camera cable **(1)**
- Small camera cable **(2)**
- IR board cable (ZIF) **(3)**
- Audio board cable (ZIF) **(4)**
- Left speaker cable **(5)**
- Large display cable (ZIF) **(6)**
- Small display cable (ZIF) **(7)**
- Touchpad cable (ZIF) **(8)**
- Keyboard cable (ZIF) **(9)**
- Keyboard backlight cable (ZIF) **(10)**
- Touchpad cable (ZIF) **(11)**
- Right speaker cable **(12)**
- Power button cable (ZIF) **(13)**
- Antenna cables from WLAN module **(14)**

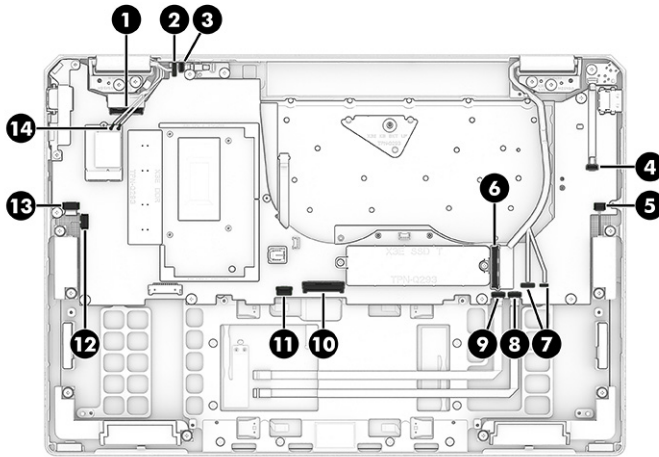

2. Remove two Phillips M2.0 × 4.0 screws **(1)** from the I/O bracket, and then remove the bracket **(2)**.
3. Remove eight Phillips M2.0 × 3.0 screws **(3)** from the system board.

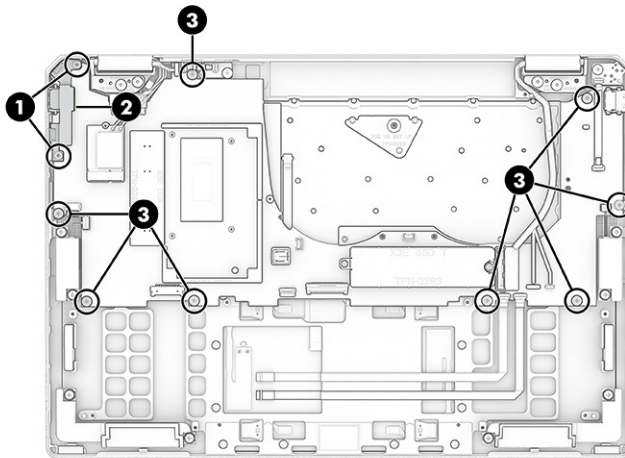

4. Lift the right side of system board (1), and then pull the system board right and away from the left-side connectors to remove it from the computer (2).

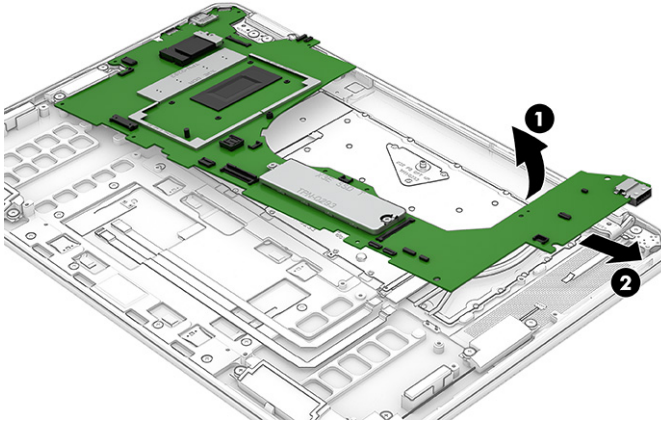

To install the system board, reverse this procedure.

Touchpad

To remove the touchpad, use this procedure and illustration.

Table 5-12 Touchpad description and part number

Description	Spare part number
Touchpad, nightfall black	N66405-001
Touchpad, slate blue	N66406-001
Touchpad power cable	N66407-001
Touchpad signal cable	N66408-001


Before removing the touchpad, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Remove the battery (see [Battery on page 34](#)).
4. Remove the large protective cover from the system board (see [System board protective cover on page 47](#)).
5. Remove the fans (see [Fans on page 53](#)).
6. Remove the heat sink (see [Heat sink on page 54](#)).
7. Remove the system board (see [System board on page 57](#)).


Remove the touchpad:

1. Remove the tape (1) from both connectors on the touchpad.

2. Disconnect both cables from the ZIF connectors (2) on the touchpad.
3. Peel both cables (3) off the touchpad.
4. Remove the transparent screw covers (4) from the two screws near the middle of the touchpad.
5. Remove the larger piece of transparent protective tape (5) from the top screws.
6. Remove the 10 Phillips M1.6 × 2.0 screws (6) from the touchpad.

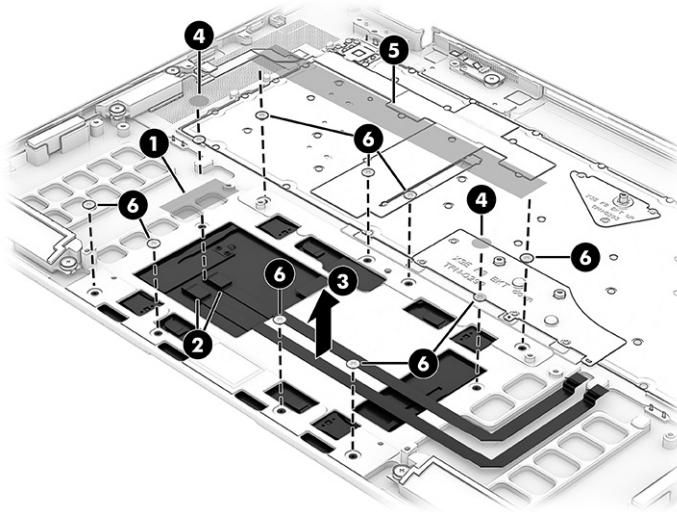

7. Lift the computer (1), and then remove the touchpad from under the computer (2).

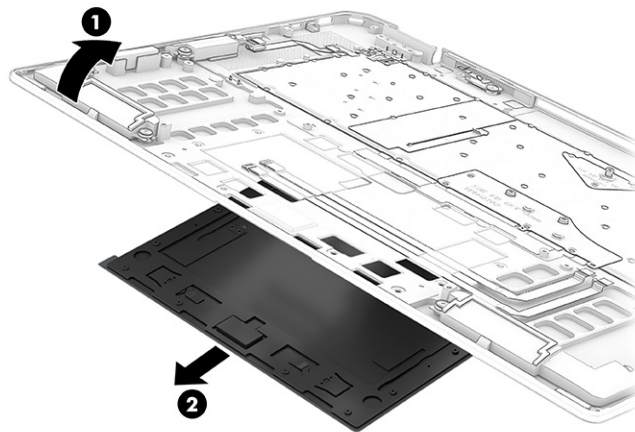

To install the touchpad, reverse this procedure.

Power button/fingerprint reader board

To remove the power button board, use this procedure and illustration.

Table 5-13 Power button/fingerprint reader board description and part number

Description	Spare part number
Power button/fingerprint reader board, nightfall black	N66410-001

Table 5-13 Power button/fingerprint reader board description and part number (continued)


Description	Spare part number
Power button/fingerprint reader board, slate blue	N66411-001
Power button/fingerprint reader board cable	N66412-001

Before removing the power button/fingerprint reader board, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Remove the battery (see [Battery on page 34](#)).
4. Remove the large protective cover from the system board (see [System board protective cover on page 47](#)).
5. Remove the fans (see [Fans on page 53](#)).
6. Remove the heat sink (see [Heat sink on page 54](#)).
7. Remove the system board (see [System board on page 57](#)).

Remove the power button/fingerprint reader board:


1. Remove the protective tape (1) from the power button/fingerprint reader board cable.
2. Remove the cable (2).

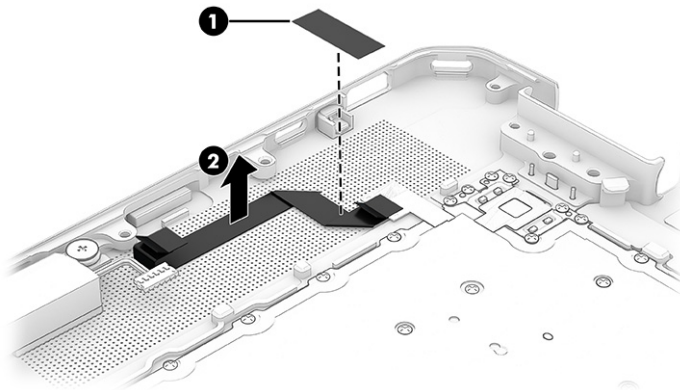

3. Peel the protective covering off the board.

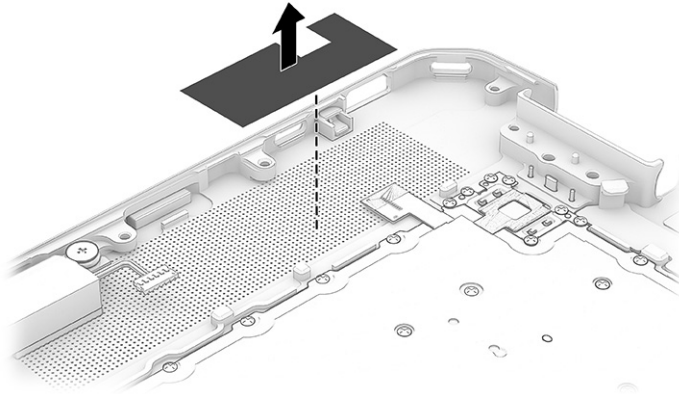

4. Remove the seven Phillips M2.0 × 3.5 screws (1), and then remove the board (2) from the computer.

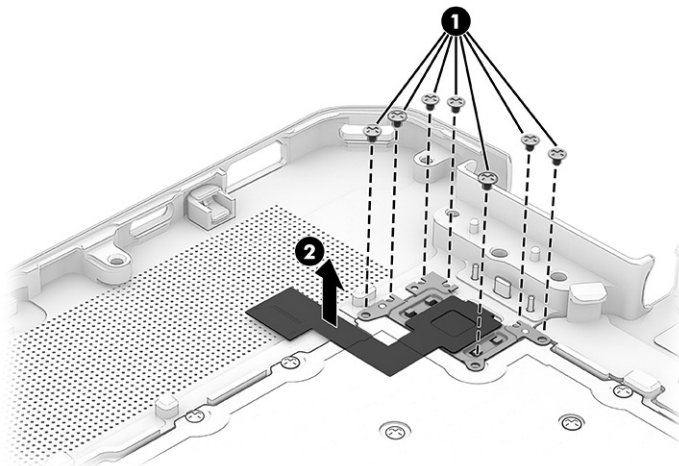

To install the power button/fingerprint reader board, reverse this procedure.

Keyboard

To remove the keyboard, use these procedures and illustrations. The first table provides the main spare part numbers for the top covers and keyboards. The second table provides the keyboard country codes.

Table 5-14 Top cover and keyboard descriptions and part numbers

Description	Spare part number
Top cover, nightfall black	N66400-001
Top cover, slate blue	N66402-001
Top cover, nightfall black, for use in Japan	N66401-001
Keyboard, nightfall black	N66403-xx1
Keyboard, slate blue	N66404-xx1

Table 5-15 Top cover and keyboard descriptions and part numbers


For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Belgium	-A41	Hungary	-211	Saudi Arabia	-171
Brazil	-201	Iceland	-DD1	Slovenia	-BA1
Bulgaria	-261	India	-D61	South Korea	-AD1
Chile	-161	Israel	-BB1	Spain	-071
Czech Republic/Slovakia	-FL1	Italy	-061	Switzerland	-BG1
Denmark	-081	Japan	-291	Taiwan	-AB1
Denmark, Finland, and Norway	-DH1	The Netherlands	-B31	Thailand	-281
French Canada	-DB1	Northern Africa	-FP1	Turkey	-141
Finland/Sweden	-B71	Norway	-091	Turkey-F	-541
France	-051	Portugal	-131	Ukraine	-BD1
Germany	-041	Romania	-271	United Kingdom	-031
Greece	-151	Russia	-251	United States	-001

Before removing the keyboard from the top cover, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 32](#)).
2. Remove the bottom cover (see [Bottom cover on page 32](#)).
3. Remove the battery (see [Battery on page 34](#)).
4. Remove the large protective cover from the system board (see [System board protective cover on page 47](#)).
5. Remove the fans (see [Fans on page 53](#)).
6. Remove the heat sink (see [Heat sink on page 54](#)).
7. Remove the system board (see [System board on page 57](#)).

Remove the keyboard from the top cover:


1. Peel off the four protective covers as shown in the following illustration.

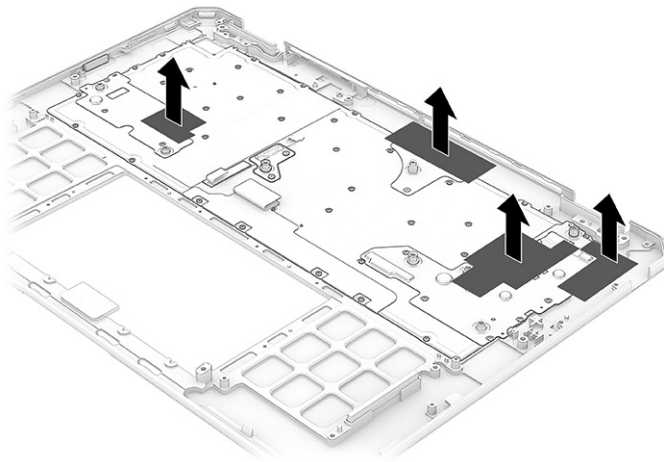


2. Peel off the large copper piece as shown in the following illustration.

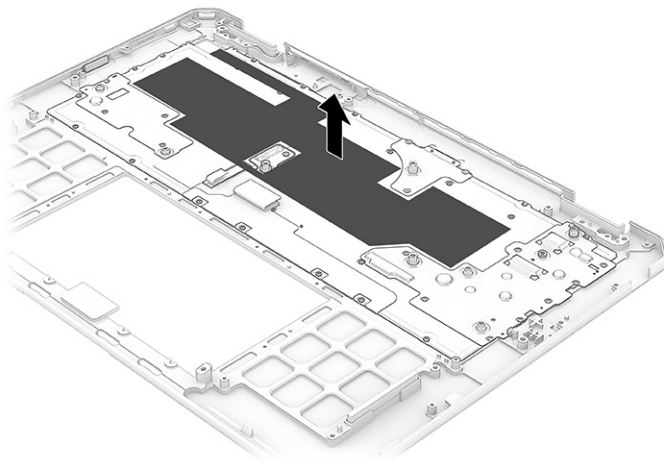


3. Remove 18 Phillips M10 × 12 screws (1) from four keyboard brackets, and then remove the right (2), lower middle (3) upper middle (4), and left bracket (5).

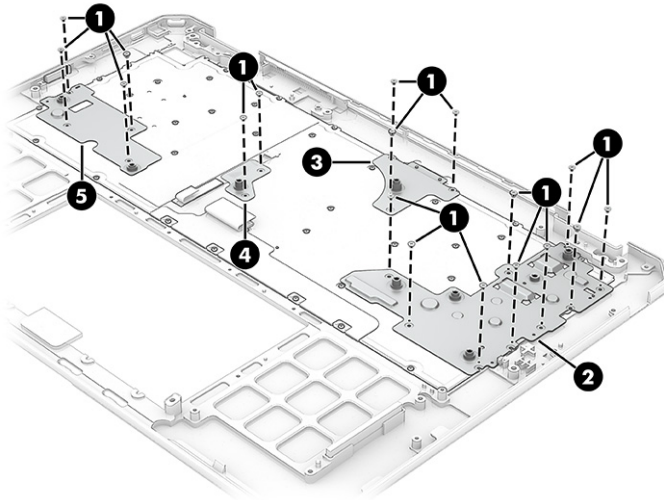

4. Remove 37 Phillips M10 × 10 screws from the keyboard.

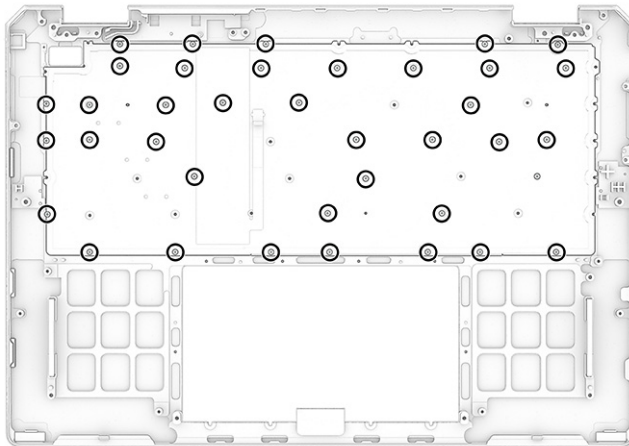

5. Remove the keyboard.

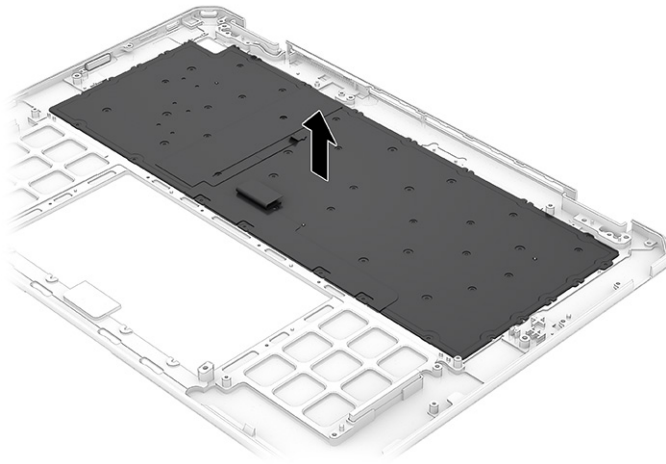

The top cover spare part remains after removing the keyboard.

To install the keyboard, reverse this procedure.

6 Using Setup Utility (BIOS)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.



NOTE: To start Setup Utility on convertible computers, your computer must be in notebook mode and you must use the keyboard attached to your notebook.

Starting Setup Utility (BIOS)

You have several ways to access the Setup Utility (BIOS).



IMPORTANT: Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

- Turn on or restart the computer and quickly press **f10**.

- or -

Turn on or restart the computer, quickly press **esc**, and then press **f10** when the Start menu is displayed.

Updating Setup Utility (BIOS)

Updated versions of Setup Utility (BIOS) might be available on the HP website. Most BIOS updates on the HP website are packaged in compressed files called *SoftPags*. Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Setup Utility (BIOS), first determine the BIOS version on your computer.

To reveal the BIOS version information (also known as *ROM date* and *System BIOS*), use one of these options.

- HP Support Assistant
 1. Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.

- or -

Select the question mark icon in the taskbar.


 2. Under **My notebook**, select **Specifications**.
- Setup Utility (BIOS)
 1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\) on page 68](#)).

2. Select **Main**, and then make note of the BIOS version.
 3. Select **Exit**, select one of the options, and then follow the on-screen instructions.
- In Windows, press **ctrl+alt+s**.


To check for later BIOS versions, see [Preparing for a BIOS update on page 69](#).

Preparing for a BIOS update

Be sure to follow all prerequisites before downloading and installing a BIOS update.

 **IMPORTANT:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

- Do not disconnect power from the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.

 **NOTE:** If your computer is connected to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

Downloading a BIOS update

After you review the prerequisites, you can check for and download BIOS updates.

1. Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.

- or -
Select the question mark icon in the taskbar.
2. Select **Updates**. The **Checking for Updates** window opens, and Windows checks for updates.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS version, make a note of the date, name, or other identifier. You might need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

Installing a BIOS update

BIOS installation procedures vary. Follow any instructions that appear on the screen after the download is complete. If no instructions appear, follow these steps.

1. Select the **Search** icon in the taskbar, type `file` in the search box, and then select **File Explorer**.

2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).

The BIOS installation begins.


5. Complete the installation by following the on-screen instructions.




NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

7 Backing up, restoring, and recovering

You can use Windows tools or HP software to back up your information, create a restore point, reset your computer, create recovery media, or restore your computer to its factory state. Performing these standard procedures can return your computer to a working state faster.

 **IMPORTANT:** If you are performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.


 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Backing up information and creating recovery media

These methods of creating recovery media and backups are available on select products only.

Using Windows tools for backing up

HP recommends that you back up your information immediately after initial setup. You can do this task either using Windows Backup locally with an external USB flash drive or using online tools.


 **NOTE:** If computer storage is 32 GB or less, Microsoft® System Restore is disabled by default.


Using the HP Cloud Recovery Download Tool to create recovery media (select products only)

You can use the HP Cloud Recovery Download Tool to create HP Recovery media on a bootable USB flash drive.

For details:

- Go to <http://www.hp.com>, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have.

 **NOTE:** If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

 **IMPORTANT:** HP recommends that you follow the [Restoring and recovery methods on page 72](#) to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Restoring and recovering your system

You have several tools available to recover your system both within and outside of Windows if the desktop cannot load.

HP recommends that you attempt to restore your system using the [Restoring and recovery methods on page 72](#).

Creating a system restore

System Restore is available in Windows. The System Restore software can automatically or manually create restore points, or snapshots, of the system files and settings on the computer at a particular point.

When you use System Restore, it returns your computer to its state at the time you made the restore point. Your personal files and documents should not be affected.

Restoring and recovery methods

After you run the first method, test to see whether the issue still exists before you proceed to the next method, which might now be unnecessary.

1. Run a Microsoft System Restore.
2. Run Reset this PC.



NOTE: The options **Remove everything** and then **Fully clean the drive** can take several hours to complete and leave no information on your computer. It is the safest way to reset your computer before you recycle it.

3. Recover using HP Recovery media. For more information, see [Recovering using HP Recovery media on page 72](#).

For more information about the first two methods, see the Get Help app:

- Select the **Start** button, select **All apps**, select the **Get Help** app, and then enter the task you want to perform.



NOTE: You must be connected to the internet to access the Get Help app.

Recovering using HP Recovery media

You can use HP Recovery media to recover the operating system and drivers that were installed at the factory. On select products, you can create recovery media on a bootable USB flash drive using the HP Cloud Recovery Download Tool.

For details, see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 71](#).



NOTE: If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

To recover your system:


- Insert the HP Recovery media, and then restart the computer.



NOTE: HP recommends that you follow the [Restoring and recovery methods on page 72](#) to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Changing the computer boot order

If your computer does not restart using the HP Recovery media, you can change the computer boot order, which is the order of devices listed in BIOS for startup information. You can select an optical drive or a USB flash drive, depending on the location of your HP Recovery media.

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

To change the boot order:

1. Insert the HP Recovery media.
2. Access the system **Startup** menu.
 - For computers or tablets with keyboards attached, turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.
 - For tablets without keyboards, turn on or restart the tablet, quickly press and hold the volume up button, and then select **f9**.

– or –

Turn on or restart the tablet, quickly press and hold the volume down button, and then select **f9**.
3. Select the optical drive or USB flash drive from which you want to boot, and then follow the on-screen instructions.

Using HP Sure Recover (select products only)

Select computer models are configured with HP Sure Recover, a PC operating system (OS) recovery solution built into the hardware and software. HP Sure Recover can fully restore the HP OS image without installed recovery software.

Using HP Sure Recover, an administrator or user can restore the system and install:

- Latest version of the operating system
- Platform-specific device drivers
- Software applications, in the case of a custom image

To access the latest documentation for HP Sure Recover, go to <http://www.hp.com/support>. Follow the on-screen instructions to find your product and locate your documentation.

8 Using HP PC Hardware Diagnostics

You can use the HP PC Hardware Diagnostics utility to determine whether your computer hardware is running properly. The three versions are HP PC Hardware Diagnostics Windows, HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface), and (for select products only) Remote HP PC Hardware Diagnostics UEFI, a firmware feature.

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 75](#).

Using an HP PC Hardware Diagnostics Windows hardware failure ID code

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit failure ID code is generated for select component tests. For interactive tests, such as keyboard, mouse, or audio and video palette, you must perform troubleshooting steps before you can receive a failure ID.

- You have several options after you receive a failure ID:
 - Select **Next** to open the Event Automation Service (EAS) page, where you can log the case.
 - Scan the QR code with your mobile device, which takes you to the EAS page, where you can log the case.
 - Select the box next to the 24-digit failure ID to copy your failure code and send it to support.

Accessing HP PC Hardware Diagnostics Windows


After HP PC Hardware Diagnostics Windows is installed, you can access it from HP Support Assistant or the Start menu.

Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Support Assistant:

1. Complete one of the following tasks:
 - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
 - Select the question mark icon in the taskbar.
2. Select **Fixes & Diagnostics**.


3. Select **Run hardware diagnostics**, and then select **Launch**.
4. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

 **NOTE:** To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from the Start menu:

1. Select the **Start** button, and then select **All apps**.
2. Select **HP PC Hardware Diagnostics Windows**.
3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

 **NOTE:** To stop a diagnostic test, select **Cancel**.

Downloading HP PC Hardware Diagnostics Windows

The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only. You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version from HP

To download HP PC Hardware Diagnostics Windows from HP, follow these steps:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics Windows**, and then select the specific Windows diagnostics version to download to your computer or a USB flash drive.

The tool downloads to the selected location.

Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store


You can download the HP PC Hardware Diagnostics Windows from the Microsoft Store:

1. Select the Microsoft Store app on your desktop or select the **Search** icon in the taskbar, and then type `Microsoft Store` in the search box.
2. Type `HP PC Hardware Diagnostics Windows` in the **Microsoft Store** search box.
3. Follow the on-screen directions.

The tool downloads to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

You can download HP PC Hardware Diagnostics Windows by product name or number.

 **NOTE:** For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.

The tool downloads to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

HP PC Hardware Diagnostics Unified Extensible Firmware Interface (UEFI) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.



NOTE: For some products, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 77](#).

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

Using an HP PC Hardware Diagnostics UEFI hardware failure ID code

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit failure ID code is generated.

For assistance in solving the problem, complete one of these tasks:

- Select **Contact HP**, accept the HP privacy disclaimer, and then use a mobile device to scan the failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your failure ID and product number automatically filled in. Follow the on-screen instructions.
- Contact support, and provide the failure ID code.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow this procedure.

1. Turn on or restart the computer, and quickly press **esc**.
2. Press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive



NOTE: To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 78.](#)

- b. Hard drive
 - c. BIOS
3. When the diagnostic tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only)

This section describes how to start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software.



NOTE: You must disable fast boot to access HP PC Hardware Diagnostics UEFI from the HP System Information application.

To disable fast boot:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Boot Options**.
3. Clear **Fast Boot**.
4. Select **Save Changes and Exit**, and then select **Yes**.

To start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software, follow this procedure.:

1. From the **Start** menu, open the HP System Information Application or press **fn+esc**.
2. In HP System Information screen, select **Run System Diagnostics**, select **Yes** to run the application, and then select **Restart**.



IMPORTANT: To prevent loss of data, save your work in all open apps before restarting your computer.



NOTE: When the restart is complete, the computer opens the HP PC Hardware Diagnostics UEFI Application. Proceed with the troubleshooting tests.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in some situations.

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.
- The hard drive is damaged.



NOTE: The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive, follow this procedure:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics UEFI**, and then select **Run**.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

You can download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then run the diagnostics on your computer, and it might upload results to a preconfigured server.

For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, and then select **Find out more**.

Downloading Remote HP PC Hardware Diagnostics UEFI

Remote HP PC Hardware Diagnostics UEFI is also available as a SoftPaq that you can download to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

You can download the latest Remote HP PC Hardware Diagnostics UEFI version to a USB flash drive.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download Remote Diagnostics**, and then select **Run**.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

You can download Remote HP PC Hardware Diagnostics UEFI by product name or number.



NOTE: For some products, you might have to download the software by using the product name or number.

1. Go to <http://www.hp.com/support>.

2. Select **Software and Drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform several customizations.

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics UEFI**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage, such as a hard drive or USB flash drive, to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.
3. Make your customization selections.
4. Select **Main**, then select **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

9 Specifications

This chapter provides specifications for your computer system.

Computer specifications

This section provides specifications for your computer. When you travel with your computer, the computer dimensions and weights, as well as input power ratings and operating specifications, provide helpful information.

Table 9-1 Computer specifications

	Metric	U.S.
Dimensions		
Width	356.8 mm	14.1 in
Depth	245.5 mm	9.7 in
Height	19.9 mm	0.8 in
Weight		
Integrated graphics	2076 g	4.6 lb
Discrete graphics	2173 g	4.8 lb
Input power		
Operating voltage and current	5 V DC @ 3 A / 9 V DC @ 3 A / 12 V DC @ 5 A / 15 V DC @ 5 A / 20 V DC @ 5 A / 5 V DC USB-A port @ 2 A - 100 W USB-C + 10 W USB-A	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft
NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.		

Display specifications

This section provides specifications for your display.

Table 9-2 Display specifications

	Metric	U.S.
Active diagonal size	35.6 cm	14.0 in
Resolution	2880 × 1800 (2.8K) 2560 × 1600	
Surface treatment	Antiglare	
Brightness	400 nits	
Viewing angle	UWVA	
Backlight	AMOLED	
Display panel interface	eDP	

Solid-state drive specifications

This section provides specifications for your solid-state drives.

Table 9-3 Solid-state drive specifications

	512 GB*	1 TB*	2 TB*
Dimensions			
Height	1.0 mm	1.0 mm	1.0 mm
Length	50.8 mm	50.8 mm	50.8 mm
Width	28.9 mm	28.9 mm	28.9 mm
Weight	< 10 g	< 10 g	< 10 g
Interface type			
Ready time, maximum (to not busy)	< 1.0 ms	< 1.0 ms	< 1.0 ms
Access times, logical	0.1 ms	0.1 ms	0.1 ms
Transfer rate			
Sequential read	up to 2150 MBps	Up to 300,000 IOPs	Up to 300,000 IOPs
Random read	Up to 300,000 IOPs	Up to 300,000 IOPs	Up to 300,000 IOPs
Sequential write	up to 1550 MBps	up to 1550 MBps	up to 2500 MBps
Random write	Up to 100,000 IOPs	Up to 100,000 IOPs	Up to 125,000 IOPs
Total logical sectors	1,000,215,216	1,500,336,388	2,985,523,121
Operating temperature	0°C to 70°C (32°F to 158°F)		
*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications might differ slightly.			
NOTE: Certain restrictions and exclusions apply. Contact support for details.			

10 Power cord set requirements

This chapter provides power cord requirements for countries and regions.

The wide-range input feature of the computer permits it to operate from any line voltage from 100 V AC to 120 V AC, or from 220 V AC to 240 V AC.

The three-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

These power cord requirements are applicable to all countries and regions.

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 V AC or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

To determine power cord requirements for specific countries and regions, use this table.

Table 10-1 Power cord requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1

Table 10-1 Power cord requirements for specific countries and regions (continued)

Country/region	Accredited agency	Applicable note number
Germany	VDE	1
India	BIS	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
United Kingdom	ASTA	1
United States	UL	2

1. The flexible cord must be Type H05VV-F, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, three-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V AC) or NEMA 6-15P (15 A, 250 V AC) configuration. CSA or C-UL mark. UL file number must be on each element.
3. The appliance coupler, flexible cord, and wall plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, three-conductor, 0.75 mm² or 1.25 mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V AC) configuration.
4. The flexible cord must be Type RVV, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
5. The flexible cord must be Type H05VV-F three-conductor, 0.75 mm² conductor size. KTL logo and individual approval number must be on each element. Approval number and logo must be printed on a flag label.
6. The flexible cord must be Type HVCTF three-conductor, 1.25 mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.
7. For 127 V AC, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V AC), with UL and CSA or C-UL marks. For 240 V AC, the flexible cord must be Type H05VV-F three-conductor, 0.75 mm² or 1.00 mm² conductor size, with plug BS 1363/A with BSI or ASTA marks.

11 Recycling

When a nonrechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

Index

A

- AC adapter and battery light, identifying 5
- AC adapters, spare part numbers 21
- action key, identifying 13
- audio board
 - illustrated 19
 - removal 52
 - spare part number 19, 52
- audio-out (headphone)/audio-in (microphone) combo jack, identifying 6
- audio, product description 2

B

- backup, creating 71
- backups 71
- battery
 - illustrated 18
 - spare part number 18
- BIOS
 - determining version 68
 - downloading an update 69
 - starting the Setup Utility 68
 - updating 68
- Bluetooth label 14
- boot order, changing 73
- bottom components 13
- bottom cover
 - illustrated 19
 - removal 32
 - spare part number 19, 32
- buttons
 - left touchpad 8, 9
 - power 12, 13
 - right touchpad 8, 9

C

- camera
 - identifying 8
 - illustrated 20
 - spare part number 20
- camera light, identifying 8
- camera privacy light, identifying 10
- caps lock light 10

- caring for your computer 27
- cautions
 - electrostatic discharge 23, 24
- cleaning your computer 27
 - caring for wood veneer 29
 - disinfecting 28
 - HP Easy Clean 27
 - removing dirt and debris 27
- components
 - bottom 13
 - display 6, 7
 - keyboard area 8
 - left side 6
 - lights 10
 - rear 13
 - right side 5
 - touchpad 8, 9
- computer major components 17
- computer specifications 80
- connectors
 - power 5

D

- display
 - specifications 80
- display assembly
 - subcomponents 19
- display back cover
 - illustrated 21
 - spare part number 21
- display cable
 - illustrated 21
 - spare part number 21
- display components 6, 7
- display panel
 - illustrated 20
 - product description 1
 - spare part number 20

E

- electrostatic discharge (ESD) 23, 24
 - preventing damage 23-25
- esc key, identifying 12

F

- fans
 - removal 53
 - spare part numbers 53
- fingerprint reader 11
- fn key, identifying 12
- fn lock light, identifying 10

G

- graphics, product description 1
- grounding methods 23-25
- guidelines
 - packaging 23, 29
 - transporting 23, 29
 - workstation 23

H

- hard drive
 - product description 1
 - specifications 80
- HDMI port
 - identifying 6
- heat sink
 - illustrated 19
 - removal 54
 - spare part number 19
 - spare part numbers 54
- hinge
 - illustrated 20
 - spare part number 20
- hinge covers
 - illustrated 20
 - spare part number 20
- HP PC Hardware Diagnostics UEFI
 - downloading 77
 - failure ID code 76
 - HP Hotkey Support
 - software 77
 - starting 76, 77
 - using 76
- HP PC Hardware Diagnostics Windows
 - accessing 74, 75
 - downloading 75
 - failure ID code 74
 - installing 76
 - using 74

HP Recovery media
 recovery 72
HP Sure Recover 73

I

illustrated parts catalog 17
IMAX Enhanced Mode 7
internal microphones,
 identifying 8
IR board
 removal 55
 spare part number 55
IR sensor board
 illustrated 19
 spare part number 19

J

jacks
 audio-out (headphone)/audio-in
 (microphone) 6

K

keyboard
 illustrated 19
 product description 3
 removal 63
 spare part number 19, 63

keys
 action 13
 esc 12
 fn 12
 Windows 13

L

labels
 Bluetooth 14
 regulatory 14
 serial number 14
 service 14
 wireless certification 14
 WLAN 14
left side components 6
lights
 AC adapter and battery 5
 camera 8
 camera privacy 10
 caps lock 10
 fn lock 10
 microphone mute 10
 mute 10
 power 10
low blue light mode 7

M

memory module
 product description 1
microphone
 product description 2
microphone mute light,
 identifying 10
model name 1
mute light, identifying 10

O

operating system, product
 description 3, 4

P

packaging guidelines 23, 29
pointing device, product
 description 3
ports
 HDMI 6
 product description 2
 USB Type-C power connector
 and Thunderbolt port with
 HP Sleep and Charge and
 DisplayPort output 5
 USB with HP Sleep and
 Charge 6
power button, identifying 12, 13
power button/fingerprint reader
 board
 illustrated 19
 removal 61
 spare part number 19, 61
power connector
 identifying 5
power cord
 requirements for all
 countries 82
 requirements for specific
 countries and regions 82
 set requirements 82
power cords, spare part
 numbers 21
power light, identifying 10
power requirements, product
 description 3
primary storage
 product description 1
processor
 product description 1
product description
 audio 2
 display panel 1

graphics 1
hard drive 1
keyboard 3
memory module 1
microphone 2
operating system 3, 4
pointing device 3
ports 2
power requirements 3
primary storage 1
processors 1
product name 1
security 3
serviceability 4
solid-state drive 1
video 2
wireless 2
product name 1
product name and number,
 computer 14

R

rear components 13
recovery 71
 discs 72
 media 72
 USB flash drive 72
recovery media 71
 creating using HP Cloud
 Recovery Download Tool 71
 creating using Windows
 tools 71
regulatory information
 regulatory label 14
 wireless certification labels 14
Remote HP PC Hardware
 Diagnostics UEFI settings
 customizing 79
 using 78
removal and replacement
 procedures 32
 solid-state drive 50
restoring 71
restoring and recovery
 methods 72
right side components 5

S

Screw Kit, spare part number 21
security, product description 3
serial number, computer 14
service labels, locating 14
serviceability, product
 description 4

- solid-state drive
 - illustrated 18
 - product description 1
 - removal and replacement 50
 - spare part number 18
 - specifications 81
- speaker
 - illustrated 18
 - removal 49
 - spare part number 18
 - spare part numbers 49
- speakers 11, 14
- special keys
 - identifying 12
 - using 12
- specifications
 - computer 80
 - display 80
 - hard drive 80
 - solid-state drive 81
- static electricity 23, 24
- support information 30
- system board
 - illustrated 18
 - removal 57
 - spare part number 18
 - spare part numbers 57
- system restore 72
- system restore point, creating 71

T

- top cover
 - illustrated 18
 - spare part number 18, 63
- touchpad
 - gesture control 9
 - illustrated 18
 - removal 60
 - settings 8
 - spare part number 18
 - spare part numbers 60
- touchpad buttons
 - identifying 8, 9
- touchpad components 8
- touchpad gesture control, turning on 9
- touchpad settings, adjusting 8
- touchpad zone, identifying 8
- touchpad, identifying 9
- transporting guidelines 23, 29
- traveling with the computer 14

U

- USB 10 Gbps port with HP Sleep and Charge, identifying 6
- USB Type-C power connector and Thunderbolt port with HP Sleep and Charge and DisplayPort output, identifying 5

V

- vents, identifying 13, 14
- video, product description 2

W

- wake-on-voice 7
- Windows
 - backup 71
 - recovery media 71
 - system restore point 71
- Windows key, identifying 13
- Windows tools, using 71
- wireless antennas
 - illustrated 21
 - spare part number 21
- wireless antennas, identifying 8
- wireless certification label 14
- wireless, product description 2
- WLAN antennas, identifying 8
- WLAN device 14
- WLAN label 14
- WLAN module
 - removal 48
 - spare part numbers 48
- workstation guidelines 23