



# Maintenance and Service Guide

## HP ProBook 4 G1a 16 inch Notebook AI PC

### **SUMMARY**

This guide provides maintenance information about such topics as spare parts, removal and replacement of parts, security, and backing up.

## Legal information

© Copyright 2025 HP Development Company, L.P.

AMD, Radeon, and Ryzen are trademarks of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Intel and Thunderbolt are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. USB Type-C, USB-C, and the USB 5 Gbps and USB 10 Gbps port logos are trademarks or registered trademarks of USB Implementers Forum. DisplayPort and the DisplayPort logo are trademarks owned by the Video Electronics Standards Association (VESA) in the United States and other countries. Miracast and Wi-Fi are registered trademarks of Wi-Fi Alliance.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: May 2025

Document Part Number: P23960-001

### Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows is automatically updated, which is always enabled. High-speed internet and Microsoft account required. ISP fees may apply and additional requirements may apply over time for updates. See <http://www.windows.com>.

#### **If your product ships with Windows in S**

**Mode:** Windows in S Mode works exclusively with apps from the Microsoft Store within Windows. Certain default settings, features, and apps cannot be changed. Some accessories and apps that are compatible with Windows may not work (including some antivirus, PDF writers, driver utilities, and accessibility apps), and performance may vary, even if you switch out of S Mode. If you switch to Windows, you cannot switch back to S Mode. Learn more at [Windows.com/SmodeFAQ](http://Windows.com/SmodeFAQ).

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Manuals**.

### Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

## Safety warning notice

Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.

---

 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter provided by HP comply with the user-accessible surface temperature limits defined by applicable safety standards.

---

## Important notice about Customer Self-Repair parts

Your computer includes Customer Self-Repair parts and parts that should be accessed only by an authorized service provider.



**IMPORTANT:** See [Removal and replacement procedures for Customer Self-Repair parts on page 35](#) for details.

Accessing parts described in [Removal and replacement procedures for authorized service provider parts on page 53](#) can damage the computer or void your warranty.

---

---

# Table of contents

|                                                                           |           |
|---------------------------------------------------------------------------|-----------|
| <b>1 Product description.....</b>                                         | <b>1</b>  |
| <b>2 Components.....</b>                                                  | <b>5</b>  |
| Right.....                                                                | 5         |
| Left.....                                                                 | 5         |
| Display .....                                                             | 7         |
| Low blue light mode (select products only).....                           | 7         |
| Keyboard area .....                                                       | 9         |
| Touchpad .....                                                            | 9         |
| Touchpad settings .....                                                   | 9         |
| Adjusting touchpad settings.....                                          | 9         |
| Turning on the touchpad .....                                             | 9         |
| Touchpad components .....                                                 | 9         |
| Lights .....                                                              | 10        |
| Power key and fingerprint reader .....                                    | 12        |
| Special keys .....                                                        | 13        |
| Bottom .....                                                              | 15        |
| Rear .....                                                                | 16        |
| Labels .....                                                              | 16        |
| <b>3 Illustrated parts catalog .....</b>                                  | <b>19</b> |
| Computer major components.....                                            | 19        |
| Display assembly subcomponents.....                                       | 21        |
| Miscellaneous parts.....                                                  | 23        |
| <b>4 Removal and replacement procedures preliminary requirements.....</b> | <b>26</b> |
| Tools required .....                                                      | 26        |
| Service considerations.....                                               | 26        |
| Plastic parts.....                                                        | 26        |
| Cables and connectors.....                                                | 26        |
| Drive handling .....                                                      | 26        |
| Electrostatic discharge information.....                                  | 27        |
| Generating static electricity.....                                        | 27        |
| Preventing electrostatic damage to equipment.....                         | 28        |
| Personal grounding methods and equipment.....                             | 28        |
| Grounding the work area.....                                              | 29        |
| Recommended materials and equipment.....                                  | 29        |
| Cleaning your computer .....                                              | 30        |
| Enabling HP Easy Clean (select products only) .....                       | 30        |
| Removing dirt and debris from your computer.....                          | 30        |

|                                                                                                            |           |
|------------------------------------------------------------------------------------------------------------|-----------|
| Cleaning your computer with a disinfectant.....                                                            | 31        |
| Caring for wood veneer (select products only).....                                                         | 32        |
| Packaging and transporting guidelines.....                                                                 | 32        |
| Accessing support information.....                                                                         | 32        |
| <b>5 Removal and replacement procedures for Customer Self-Repair parts .....</b>                           | <b>35</b> |
| Component replacement procedures .....                                                                     | 35        |
| Preparation for disassembly.....                                                                           | 35        |
| Bottom cover .....                                                                                         | 35        |
| Battery.....                                                                                               | 38        |
| Removing and reinstalling the same battery .....                                                           | 38        |
| Installing a new battery.....                                                                              | 40        |
| Memory modules.....                                                                                        | 44        |
| Solid-state drive (M.2 2280).....                                                                          | 45        |
| Second solid-state drive (M.2 2230) (select products only).....                                            | 47        |
| WLAN module.....                                                                                           | 49        |
| WWAN module.....                                                                                           | 50        |
| <b>6 Removal and replacement procedures for authorized service provider parts.....</b>                     | <b>53</b> |
| Component replacement procedures .....                                                                     | 53        |
| Speakers.....                                                                                              | 53        |
| Fingerprint reader board.....                                                                              | 54        |
| Fan.....                                                                                                   | 55        |
| I/O board.....                                                                                             | 56        |
| Touchpad.....                                                                                              | 57        |
| Heat sink .....                                                                                            | 58        |
| System board .....                                                                                         | 60        |
| Display assembly.....                                                                                      | 62        |
| Top cover with keyboard .....                                                                              | 70        |
| <b>7 Backing up, restoring, and recovering.....</b>                                                        | <b>72</b> |
| Backing up information and creating recovery media.....                                                    | 72        |
| Using Windows tools for backing up.....                                                                    | 72        |
| Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive (select products only)..... | 72        |
| Restoring and recovering your system.....                                                                  | 72        |
| Creating a system restore .....                                                                            | 73        |
| Restoring and recovery methods .....                                                                       | 73        |
| Recovering using the HP Recovery USB flash drive .....                                                     | 73        |
| Changing the computer boot order .....                                                                     | 74        |
| Using HP Sure Recover (select products only).....                                                          | 74        |
| <b>8 Computer Setup (BIOS), TPM, and HP Sure Start .....</b>                                               | <b>75</b> |
| Using Computer Setup .....                                                                                 | 75        |
| Navigating and selecting in Computer Setup .....                                                           | 75        |
| Restoring factory settings in Computer Setup.....                                                          | 75        |
| Updating the BIOS .....                                                                                    | 76        |
| Determining the BIOS version .....                                                                         | 76        |
| Preparing for a BIOS update .....                                                                          | 76        |

|                                                                                                          |           |
|----------------------------------------------------------------------------------------------------------|-----------|
| Downloading a BIOS update .....                                                                          | 77        |
| Installing a BIOS update .....                                                                           | 77        |
| Changing the boot order using the f9 prompt .....                                                        | 78        |
| TPM BIOS settings (select products only) .....                                                           | 78        |
| Using HP Sure Start (select products only) .....                                                         | 78        |
| <b>9 Using HP PC Hardware Diagnostics .....</b>                                                          | <b>79</b> |
| Using HP PC Hardware Diagnostics Windows (select products only) .....                                    | 79        |
| Using an HP PC Hardware Diagnostics Windows hardware failure ID code .....                               | 79        |
| Accessing HP PC Hardware Diagnostics Windows .....                                                       | 79        |
| Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant .....                             | 79        |
| Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only) .....            | 80        |
| Downloading HP PC Hardware Diagnostics Windows .....                                                     | 80        |
| Downloading the latest HP PC Hardware Diagnostics Windows version from HP .....                          | 80        |
| Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store .....                        | 80        |
| Downloading HP Hardware Diagnostics Windows by product name or number (select products only) .....       | 81        |
| Installing HP PC Hardware Diagnostics Windows .....                                                      | 81        |
| Using HP PC Hardware Diagnostics UEFI .....                                                              | 81        |
| Using an HP PC Hardware Diagnostics UEFI hardware failure ID code .....                                  | 81        |
| Starting HP PC Hardware Diagnostics UEFI .....                                                           | 81        |
| Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only) ..... | 82        |
| Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive .....                                   | 82        |
| Downloading the latest HP PC Hardware Diagnostics UEFI version .....                                     | 83        |
| Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only) .....       | 83        |
| Using Remote HP PC Hardware Diagnostics UEFI settings (select products only) .....                       | 83        |
| Downloading Remote HP PC Hardware Diagnostics UEFI .....                                                 | 83        |
| Downloading the latest Remote HP PC Hardware Diagnostics UEFI version .....                              | 83        |
| Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number .....                       | 84        |
| Customizing Remote HP PC Hardware Diagnostics UEFI settings .....                                        | 84        |
| <b>10 Specifications .....</b>                                                                           | <b>85</b> |
| Computer specifications .....                                                                            | 85        |
| Display specifications .....                                                                             | 86        |
| Solid-state drive specifications .....                                                                   | 86        |
| <b>11 Statement of memory volatility .....</b>                                                           | <b>88</b> |
| Current BIOS steps .....                                                                                 | 88        |
| Nonvolatile memory usage .....                                                                           | 90        |
| Questions and answers .....                                                                              | 91        |
| <b>12 Power cord set requirements .....</b>                                                              | <b>93</b> |
| Requirements for all countries .....                                                                     | 93        |
| Requirements for specific countries and regions .....                                                    | 93        |

13 Swelling or deformation of notebook battery..... 96

Swollen notebook batteries ..... 96

Swollen battery is not a safety issue ..... 96

Discontinue using a swollen battery ..... 96

Replace a swollen battery ..... 96

Minimize battery swelling..... 96

HP Adaptive Battery Optimizer (consumer notebooks)..... 97

HP Battery Health Manager (commercial notebooks)..... 97

14 Recycling..... 98

Index..... 99

# 1 Product description

This table provides detailed product information.



**NOTE:** For the latest specifications related to your computer, go to <http://www.hp.com/support> and follow the instructions to find your product. Select **Specifications & Accessories**, select **Product information**, and then select the specifications link.

**Table 1-1** Product components and their descriptions

| Category            | Description                                                                                                                                                                            |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Product Name</b> | <b>HP ProBook 4 G1a 16 inch Notebook AI PC</b>                                                                                                                                         |
| <b>Processors</b>   | <b>AMD® processors</b>                                                                                                                                                                 |
|                     | AMD Ryzen™ 7 250                                                                                                                                                                       |
|                     | AMD Ryzen 5 230                                                                                                                                                                        |
|                     | AMD Ryzen 5 220                                                                                                                                                                        |
|                     | AMD Ryzen 3 210                                                                                                                                                                        |
| <b>Graphics</b>     | <b>Internal graphics</b>                                                                                                                                                               |
|                     | AMD Radeon™ Graphics                                                                                                                                                                   |
|                     | Supports:                                                                                                                                                                              |
|                     | <ul style="list-style-type: none"><li>• HDMI 2.1</li><li>• Up to four displays (including internal display)</li></ul>                                                                  |
|                     | Hardware acceleration for CODEC H.265/HEVC (High Efficiency Video Coding) is disabled                                                                                                  |
| <b>Display</b>      | <b>40.6 cm (16.0 in), bent type panel, camera privacy cover</b>                                                                                                                        |
|                     | <b>Nontouch</b>                                                                                                                                                                        |
|                     | 2.5 K (2560 × 1600), LCD, UWVA, antiglare, low blue light, sRGB 100%, 400 nits, 60 Hz (VRR)                                                                                            |
|                     | 2.5 K (2560 × 1600), LCD, UWVA, antiglare, WLED + low blue light, DCI-P3 100%, 400 nits, 120 Hz (VRR)                                                                                  |
|                     | WUXGA (1920 × 1200), LCD, UWVA, antiglare, WLED + low blue light, low power, sRGB 100%, 400 nits                                                                                       |
|                     | WUXGA (1920 × 1200), LCD, UWVA, antiglare, WLED, sRGB 62.5%, 300 nits                                                                                                                  |
|                     | <b>Touch</b>                                                                                                                                                                           |
|                     | WUXGA (1920 × 1200), LCD, UWVA, antiglare, sRGB 62.5%, low power, 300 nits                                                                                                             |
|                     | <ul style="list-style-type: none"><li>• 16:10 aspect ratio</li><li>• Maximum hinge open angle: 177° ± 3°</li><li>• Wide dynamic range</li><li>• Screen-to-body ratio: 90.60%</li></ul> |
| <b>Memory</b>       | Two customer-replaceable memory module slots supporting up to 32 GB of RAM                                                                                                             |
|                     | DDR5-5600 dual-channel support                                                                                                                                                         |

**Table 1-1 Product components and their descriptions (continued)**

| Category                    | Description                                                                                                        |
|-----------------------------|--------------------------------------------------------------------------------------------------------------------|
|                             | Supports the following configurations:                                                                             |
|                             | <ul style="list-style-type: none"> <li>32 GB (16 × 2)</li> </ul>                                                   |
|                             | <ul style="list-style-type: none"> <li>32 GB (16 × 2) (for use in the People's Republic of China [PRC])</li> </ul> |
|                             | <ul style="list-style-type: none"> <li>24 GB (12 × 2)</li> </ul>                                                   |
|                             | <ul style="list-style-type: none"> <li>24 GB (12 × 2) (PRC)</li> </ul>                                             |
|                             | <ul style="list-style-type: none"> <li>16 GB (8 × 2) or (16 × 1)</li> </ul>                                        |
|                             | <ul style="list-style-type: none"> <li>16 GB (8 × 2) or (16 × 1) (PRC)</li> </ul>                                  |
|                             | <ul style="list-style-type: none"> <li>8 GB (8 × 1)</li> </ul>                                                     |
|                             | <ul style="list-style-type: none"> <li>8 GB (8 × 1) (PRC)</li> </ul>                                               |
| <b>Storage</b>              | <b>Primary storage</b> (M.2 2280 solid-state drive)                                                                |
|                             | 1 TB                                                                                                               |
|                             | 1 TB (PRC)                                                                                                         |
|                             | 512 GB                                                                                                             |
|                             | 512 GB (PRC)                                                                                                       |
|                             | 256 GB                                                                                                             |
|                             | 256 GB (PRC)                                                                                                       |
|                             | <b>Secondary storage</b> (M.2 2230 solid-state drive) (select products only)                                       |
|                             | 256 GB, PCIe, NVMe                                                                                                 |
| <b>Audio and video</b>      | <b>Camera</b> (select products only)                                                                               |
|                             | 5 MP + IR (infrared) (wide field-of-view [WFOV])                                                                   |
|                             | FHD camera (narrow field-of-view [NFOV])                                                                           |
|                             | Camera privacy cover                                                                                               |
|                             | <b>Audio</b>                                                                                                       |
|                             | Poly Studio                                                                                                        |
|                             | Stereo speakers (2 W, 4 ohm per speaker)                                                                           |
|                             | Integrated dual-array microphones (2)                                                                              |
| <b>RJ-45 (network) jack</b> | Realtek RTL8111EPP 1GbE Ethernet Controller                                                                        |
|                             | RTK GBE Ethernet Controller                                                                                        |
| <b>Wireless</b>             | <b>Wireless Local Area Network (WLAN)</b> (M.2 2230; select products only)                                         |
|                             | MediaTek MT7925 Wi-Fi® 7 Bluetooth® 5.4 AIM-T WW WLAN                                                              |
|                             | Realtek 8852CE Wi-Fi 6E Bluetooth 5.3 WLAN                                                                         |
|                             | MediaTek RZ616 Wi-Fi 6E Bluetooth 5.3 AIM-T WLAN                                                                   |
|                             | <ul style="list-style-type: none"> <li>Compatible with Miracast® devices</li> </ul>                                |
|                             | <ul style="list-style-type: none"> <li>Two WLAN antennas</li> </ul>                                                |

**Table 1-1 Product components and their descriptions (continued)**

| Category                         | Description                                                                                          |
|----------------------------------|------------------------------------------------------------------------------------------------------|
|                                  | <b>Wireless Wide Area Network (WWAN)</b> (select products only)                                      |
|                                  | HP 4G CAT16                                                                                          |
|                                  | <ul style="list-style-type: none"> <li>eSIM on module</li> <li>LTE CAT16: LTE/HSPA+ w/GPS</li> </ul> |
| <b>Ports</b>                     | HDMI 2.1                                                                                             |
|                                  | Audio-out (headphone)/audio-in (microphone) combo jack                                               |
|                                  | USB Type-A 5 Gbps port (power charging, left side)                                                   |
|                                  | USB Type-A 5 Gbps port (power charging, right side)                                                  |
|                                  | USB Type-C® 10 Gbps port (power delivery, DisplayPort™ 1.4, left side) (2)                           |
|                                  | RJ-45 (network) jack                                                                                 |
|                                  | Nano SIM card slot (select products only)                                                            |
|                                  | Security lock slot (integrated)                                                                      |
| <b>Sensors</b>                   | Hall effect sensor                                                                                   |
|                                  | Thermal sensor                                                                                       |
|                                  | Fingerprint sensor (select products only)                                                            |
|                                  | HP Sure Platform                                                                                     |
|                                  | HP Tamper Lock                                                                                       |
| <b>Keyboard/pointing devices</b> | <b>HP Standard Notebook Keyboard, spill-resistant, DuraKey</b>                                       |
|                                  | Backlit                                                                                              |
|                                  | Not backlit                                                                                          |
|                                  | <b>Clickpad</b>                                                                                      |
|                                  | Multitouch gesture support                                                                           |
|                                  | Microsoft precision touchpad default gestures support                                                |
|                                  | Taps enabled as default                                                                              |
|                                  | Image sensor and glass surface                                                                       |
| <b>Power requirements</b>        | <b>Battery</b> (long life, polymer, fast charge [50% in 30 minutes])                                 |
|                                  | 3 cell, 56 Whr                                                                                       |
|                                  | 3 cell, 48 Whr                                                                                       |
|                                  | <b>HP power adapters</b> (USB Type-C) (select products only)                                         |
|                                  | 100 W, slim, straight                                                                                |
|                                  | 65 W, standard, nPFC, straight                                                                       |
|                                  | 65 W, standard, nPFC, straight, halogen free (HF)                                                    |
|                                  | <b>Power cord</b> (select products only)                                                             |
|                                  | C5, 1.0 m (3.3 ft) conventional                                                                      |

**Table 1-1 Product components and their descriptions (continued)**


| Category                | Description                                                                        |
|-------------------------|------------------------------------------------------------------------------------|
|                         | C5, 1.0 m (3.3 ft), conventional, straight, HF                                     |
| <b>Security</b>         | Fingerprint sensor (select products only)                                          |
|                         | Camera privacy cover                                                               |
|                         | Nano Security Lock                                                                 |
| <b>Operating system</b> | Windows® 11 Pro                                                                    |
|                         | Windows 11 Pro Education                                                           |
|                         | Windows 11 Home - HP recommends Windows 11 Pro for Business                        |
|                         | Windows 11 Home Single Language - HP recommends Windows 11 Pro for Business        |
|                         | Windows 11 Pro (Windows 11 Enterprise available with a Volume Licensing Agreement) |
|                         | FreeDOS                                                                            |
| <b>Serviceability</b>   | <b>End user replaceable parts</b>                                                  |
|                         | AC adapter                                                                         |
|                         | Bottom cover                                                                       |
|                         | Battery                                                                            |
|                         | Solid-state drive                                                                  |
|                         | Memory modules                                                                     |
|                         | WLAN module                                                                        |
|                         | WWAN module                                                                        |
|                         | SIM card                                                                           |

## 2 Components

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

### Right

Use the illustration and table to identify the components on the right side of the computer.

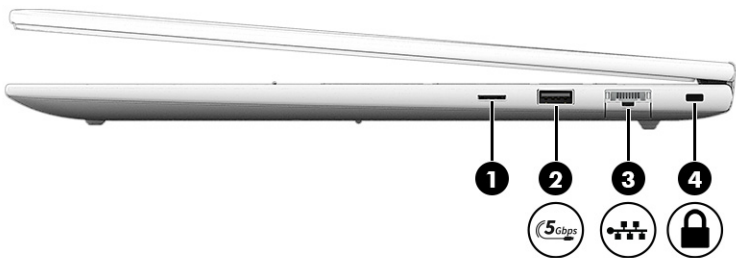


**Table 2-1** Right-side components and their descriptions

|     | Component                                                                                                              | Description                                                                                                                                                                                                                                                                                                                                  |
|-----|------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (1) | SIM card slot                                                                                                          | Supports a wireless subscriber identity module (SIM) card.                                                                                                                                                                                                                                                                                   |
| (2) |  USB 5 Gbps powered port            | Connects and supplies power to a USB device, provides high-speed data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in Sleep mode.<br><br><b>NOTE:</b> Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device. |
| (3) |  RJ-45 (network) jack/status lights | Connects a network cable. <ul style="list-style-type: none"><li>• Green (left): The network is connected.</li><li>• Amber (right): Activity is occurring on the network.</li></ul>                                                                                                                                                           |
| (4) |  Security cable slot                | Attaches an optional security cable to the computer.<br><br><b>NOTE:</b> The security cable is designed to act as a deterrent, but it might not prevent the computer from being mishandled or stolen.                                                                                                                                        |

### Left

Use the illustration and table to identify the components on the left side of the computer.

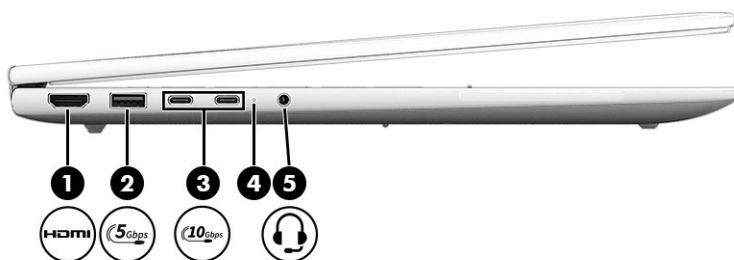

**Table 2-2** Left-side components and their descriptions

|                                                                                            | Component                                                            | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------------------------------------------------------------------------------------------|----------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (1)<br>   | HDMI port                                                            | Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High Definition Multimedia Interface (HDMI) device.                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| (2)<br>   | USB 5 Gbps powered port                                              | <p>Connects and supplies power to a USB device, provides high-speed data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in sleep mode.</p> <p><b>NOTE:</b> Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.</p>                                                                                                                                                                                                                                                                                                            |
| (3)<br>  | USB Type-C power connector, 10 Gbps port with DisplayPort output (2) | <p>Connects an AC adapter that has a USB Type-C connector, supplying power to the computer and, if needed, charging the computer battery.</p> <p>- and -</p> <p>Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off.</p> <p><b>NOTE:</b> Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device.</p> <p>- and -</p> <p>Connects a display device that has a USB Type-C connector, providing DisplayPort output.</p> <p><b>NOTE:</b> Your computer might also support a Thunderbolt™ docking station.</p> |
| (4)<br> | Power light                                                          | <ul style="list-style-type: none"> <li>On: The computer is on.</li> <li>Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components.</li> <li>Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power.</li> </ul>                                                                                                                                                                                                                                                                                                |

Table 2-2 Left-side components and their descriptions (continued)

|     | Component                                                                                                                                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-----|------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (5) |  Audio-out (headphone)/Audio-in (microphone) combo jack | <p>Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones.</p> <p><b>WARNING!</b> To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i>.</p> <p>To access this guide:</p> <ul style="list-style-type: none"><li>■ Select the <b>Search</b> icon in the taskbar, type <b>HP Documentation</b> in the search box, and then select <b>HP Documentation</b>.</li></ul> <p><b>NOTE:</b> When a device is connected to the jack, the computer speakers are disabled.</p> |


## Display

Use the illustration and table to identify the display components.

### Low blue light mode (select products only)

Your computer display is shipped from the factory in low blue light mode for improved eye comfort and safety. Also, blue light mode automatically adjusts blue light emissions when you are using the computer at night or for reading.

 **WARNING!** To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is available on the web at <http://www.hp.com/ergo>.

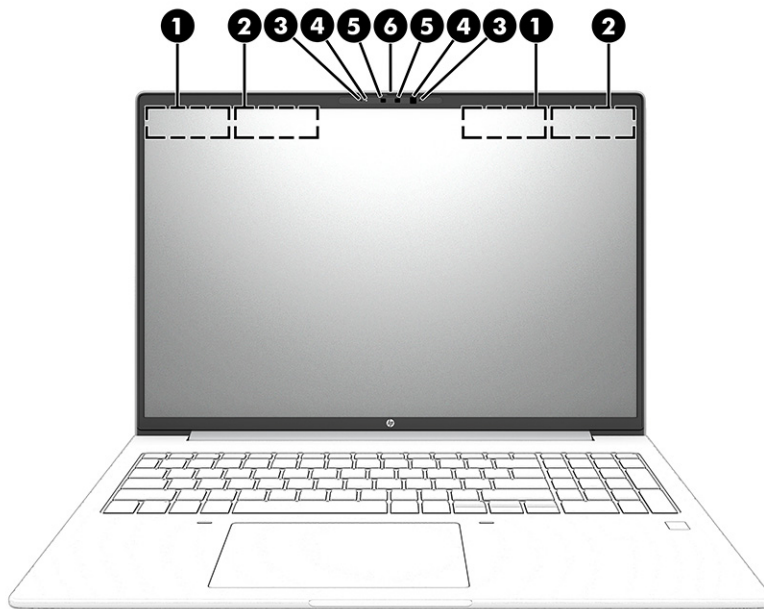

**Table 2-3** Display components and their descriptions

|     | Component                                   | Description                                                                                                                                                                                                                                                                                                                                                                   |
|-----|---------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (1) | WLAN antennas* (2)                          | Send and receive wireless signals to communicate with wireless local area networks (WLANs).                                                                                                                                                                                                                                                                                   |
| (2) | WWAN antennas* (2)                          | Send and receive wireless signals to communicate with wireless wide area networks (WWANs) and low-power wide area networks (LPWAN).                                                                                                                                                                                                                                           |
| (3) | Internal microphones (2)                    | Record sound.                                                                                                                                                                                                                                                                                                                                                                 |
| (4) | Camera lights (2)                           | On: One or more cameras are in use.                                                                                                                                                                                                                                                                                                                                           |
| (5) | Cameras (2) (select products only)          | <p>Allow you to video chat, record video, and record still images. Some cameras also allow a facial recognition logon to Windows, instead of a password logon.</p> <p><b>NOTE:</b> Camera functions vary depending on the camera hardware and software installed on your product.</p>                                                                                         |
| (6) | Camera privacy cover (select products only) | <p>By default, the camera lens is uncovered, but you can slide the camera privacy cover to block the camera's view. To use the camera, slide the camera privacy cover in the opposite direction to reveal the lens.</p> <p><b>NOTE:</b> If you have both front-facing and rear-facing cameras, when one camera lens is revealed and ready to use, the other is concealed.</p> |

\*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

- Select the **Search** icon in the taskbar, type `HP Documentation` in the search box, and then select **HP Documentation**.

## Keyboard area

Keyboards can vary by language.



**NOTE:** The keyboard, including the function keys and power key (select products only), is disabled in stand, tent, and tablet modes. To enable the keyboard, including the power key, change to the clamshell mode.

## Touchpad

The touchpad settings and components are described here.

### Touchpad settings

You learn how to adjust the touchpad settings and components here.

#### Adjusting touchpad settings

Use these steps to adjust touchpad settings and gestures.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press `enter`.
2. Choose a setting.

#### Turning on the touchpad


Follow these steps to turn on the touchpad.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press `enter`.
2. Using an external mouse, click the **Touchpad** button.

If you are not using an external mouse, press the `Tab` key repeatedly until the pointer rests on the **touchpad** button. Then press the `spacebar` to select the button.

### Touchpad components

Use the illustration and table to identify the touchpad components.

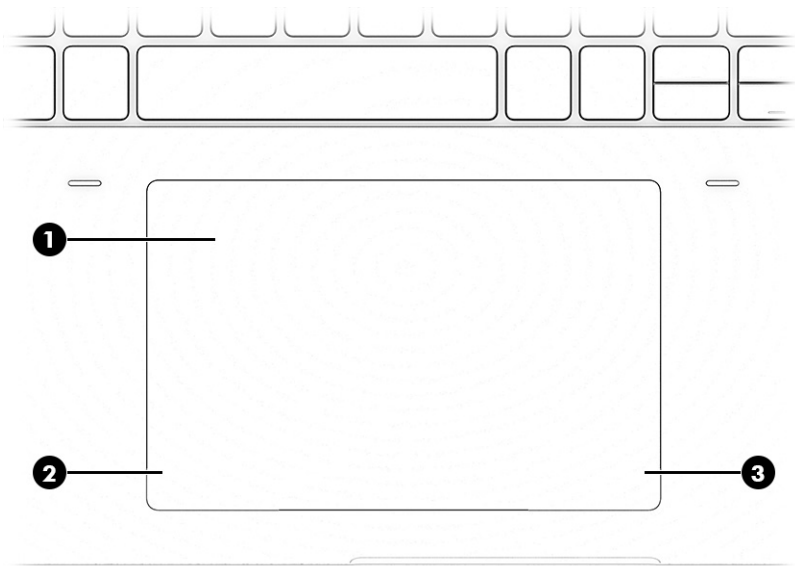


**Table 2-4** Touchpad components and their descriptions

|     | Component          | Description                                                                     |
|-----|--------------------|---------------------------------------------------------------------------------|
| (1) | Touchpad zone      | Reads your finger gestures to move the pointer or activate items on the screen. |
| (2) | Left control zone  | Textured area that allows you to perform additional gestures.                   |
| (3) | Right control zone | Textured area that allows you to perform additional gestures.                   |

## Lights

Use the illustration and table to identify the lights on the computer.

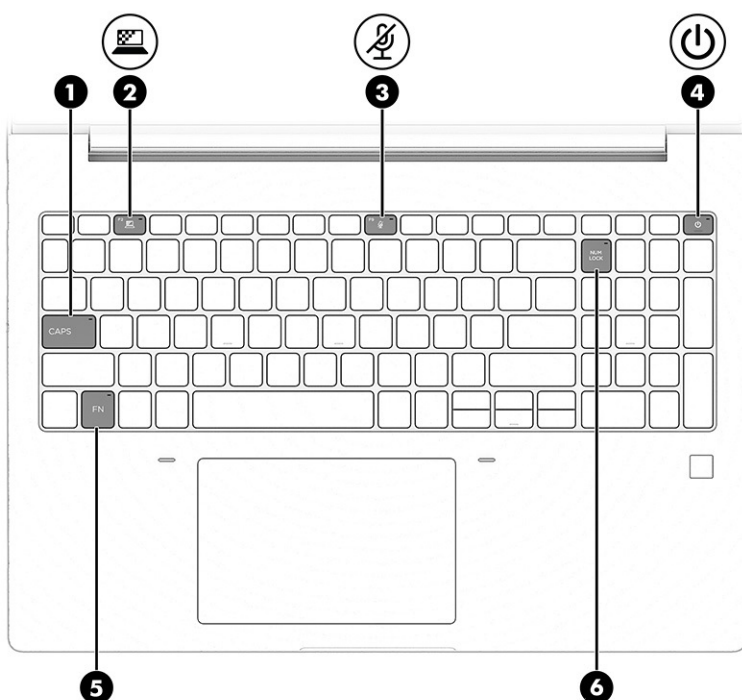

**Table 2-5** Lights and their descriptions

|     | Component                                                                                                                    | Description                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-----|------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (1) | Caps lock light                                                                                                              | On: Caps lock is on, which switches the key input to all capital letters.                                                                                                                                                                                                                                                                                                                                                                |
| (2) |  Privacy key light (select products only) | On: Privacy screen is on, which helps prevent side-angle viewing.                                                                                                                                                                                                                                                                                                                                                                        |
| (3) |  Microphone mute light                    | <ul style="list-style-type: none"> <li>On: Microphone is off.</li> <li>Off: Microphone is on.</li> </ul>                                                                                                                                                                                                                                                                                                                                 |
| (4) |  Power light                              | <ul style="list-style-type: none"> <li>On: The computer is on.</li> <li>Blinking (select products only): The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unnecessary components.</li> <li>Off: Depending on your computer model, the computer is off, in Hibernation, or in Sleep. Hibernation is the power-saving state that uses the least amount of power.</li> </ul> |
| (5) | Fn lock light                                                                                                                | On: The <b>fn</b> key is locked.                                                                                                                                                                                                                                                                                                                                                                                                         |
| (6) |  Num Lk light                             | On: Num Lk is on.                                                                                                                                                                                                                                                                                                                                                                                                                        |

## Power key and fingerprint reader

Fingerprint readers can be located on the touchpad, on a side panel of the computer, or on the top cover below the keyboard.

 **IMPORTANT:** To verify that your computer supports fingerprint reader sign-in, select the **Search** icon in the taskbar, type **Sign-in options** in the search box, and then select the **Sign-on options** app. If **Fingerprint recognition** is not listed as an option, then your notebook does not include a fingerprint reader.


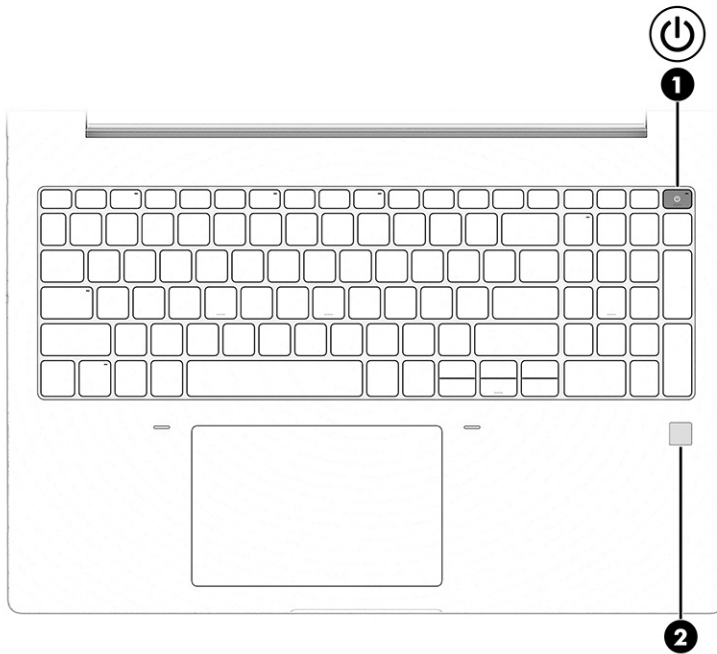


Table 2-6 Power key and fingerprint reader and their descriptions

|     | Component                                                                                   | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-----|---------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (1) |  Power key | <ul style="list-style-type: none"><li>When the computer is off, press the key briefly to turn on the computer.</li><li>When the computer is on, press the key briefly to initiate Sleep.</li><li>When the computer is in the Sleep state, press the key briefly to exit Sleep (select products only).</li><li>When the computer is in Hibernation, press the key briefly to exit Hibernation.</li></ul> <p><b>IMPORTANT:</b> Pressing and holding down the power key results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power key for at least 4 seconds to turn off the computer.</p> <p>To learn more about your power settings, use the Power icon.</p> <ul style="list-style-type: none"><li>Right-click the <b>Power</b> icon , and then select <b>Power and sleep settings</b>.</li></ul> |
| (2) | Fingerprint reader (select products only)                                                   | <p>Allows a fingerprint logon to Windows, instead of a password logon.</p> <ul style="list-style-type: none"><li>Swipe down across the fingerprint reader.</li></ul> <p><b>IMPORTANT:</b> To prevent fingerprint logon issues, make sure when you register your fingerprint that all sides of your finger are registered by the fingerprint reader.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

Special keys

Use the illustration and table to identify the special keys.

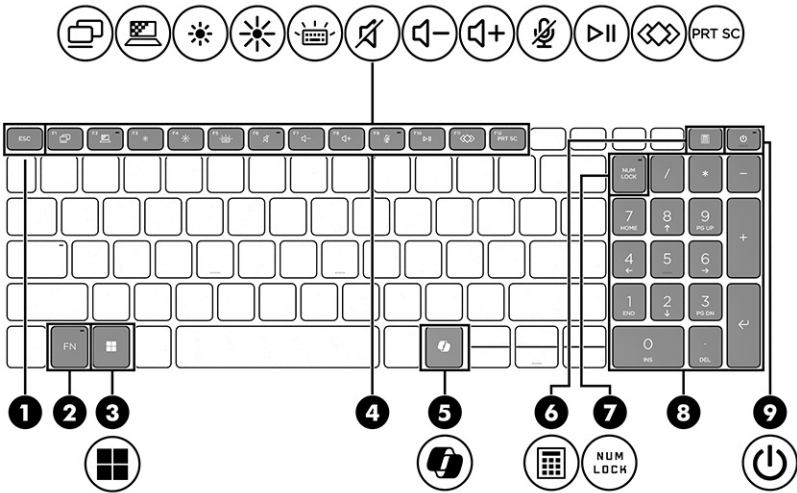

**Table 2-7 Special keys and their descriptions**

|     | Component                                                                                             | Description                                                                                                                                                                                                                                                                                                                    |
|-----|-------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (1) | <code>esc</code> key                                                                                  | Displays system information when pressed in combination with the <code>fn</code> key.                                                                                                                                                                                                                                          |
| (2) | <code>fn</code> key                                                                                   | Executes frequently used system functions when pressed in combination with another key. Such key combinations are called <i>hot keys</i> .                                                                                                                                                                                     |
| (3) | Windows key                                                                                           | Opens the Start menu.<br><br><b>NOTE:</b> Pressing the Windows key again will close the Start menu.                                                                                                                                                                                                                            |
| (4) | Action keys                                                                                           | Execute frequently used system functions.                                                                                                                                                                                                                                                                                      |
| (5) |  Windows Copilot key | Opens Windows Copilot (select products only).                                                                                                                                                                                                                                                                                  |
| (6) |  Calculator key      | Opens the calculator.                                                                                                                                                                                                                                                                                                          |
| (7) | <code>num lk</code> key                                                                               | <p>Turns the embedded numeric keypad on and off when pressed in combination with the <code>fn</code> key.</p> <p>– or –</p> <p>Turns the embedded numeric keypad on and off.</p> <p>– or –</p> <p>Alternates between the navigational and numeric functions on the integrated numeric keypad.</p>                              |
| (8) | Integrated numeric keypad                                                                             | <p>A separate keypad to the right of the alphabet keyboard. When <code>num lk</code> is pressed, the integrated keypad can be used like an external numeric keypad.</p> <p><b>NOTE:</b> If the keypad function is active when the computer is turned off, that function is reinstated when the computer is turned back on.</p> |

Table 2-7 Special keys and their descriptions (continued)

| Component |                                                                                             | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-----------|---------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (9)       |  Power key | <ul style="list-style-type: none"><li>• When the computer is off, press the key briefly to turn on the computer.</li><li>• When the computer is on, press the key briefly to initiate Sleep.</li><li>• When the computer is in the Sleep state, press the key briefly to exit Sleep (select products only).</li><li>• When the computer is in Hibernation, press the key briefly to exit Hibernation.</li></ul> <p><b>IMPORTANT:</b> Pressing and holding down the power key results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power key for at least 4 seconds to turn off the computer.</p> <p>To learn more about your power settings, use the Power icon.</p> <ul style="list-style-type: none"><li>• Right-click the <b>Power</b> icon , and then select <b>Power and sleep settings</b>.</li></ul> |

## Bottom

Use the illustration and table to identify the bottom components.

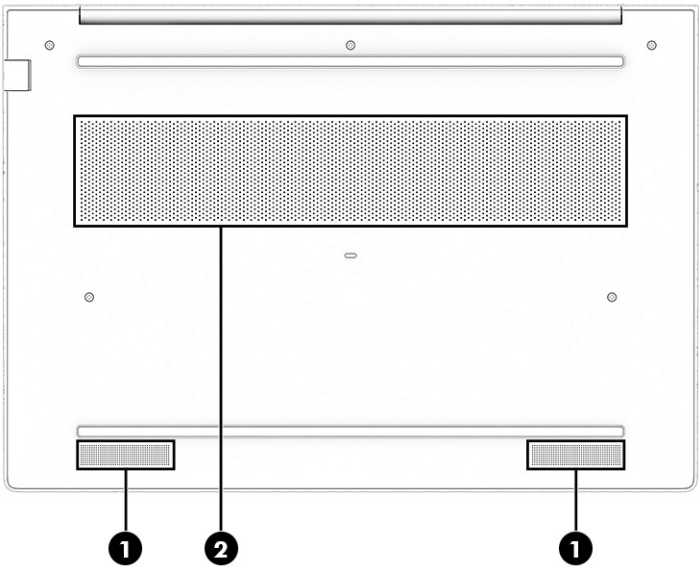


Table 2-8 Bottom components and their descriptions

| Component |              | Description    |
|-----------|--------------|----------------|
| (1)       | Speakers (2) | Produce sound. |

Table 2-8 Bottom components and their descriptions (continued)

| Component | Description                                                                                                                                                                                                                                    |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (2) Vent  | Enables airflow to cool internal components.<br><br><b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation. |

## Rear

Use the illustration and table to identify the rear component.



Table 2-9 Rear component and its description

| Component | Description                                                                                                                                                                                                                                    |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Vent      | Enables airflow to cool internal components.<br><br><b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation. |


## Labels

The labels affixed to the computer provide information you might need when you troubleshoot system problems or travel internationally with the computer. Labels might be in paper form or imprinted on the product.

 **IMPORTANT:** Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.


- Service label—Provides important information to identify your computer. When contacting support, you might be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

Your service label will resemble one of the examples shown below. Refer to the illustration that most closely matches the service label on your computer.

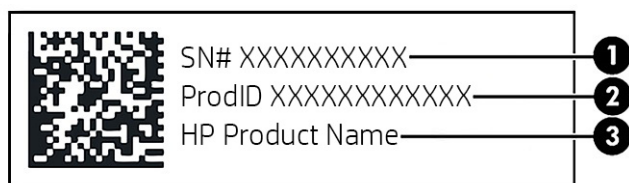


**Table 2-10 Service label components**

| Component |                 |
|-----------|-----------------|
| (1)       | Serial number   |
| (2)       | Product ID      |
| (3)       | HP product name |

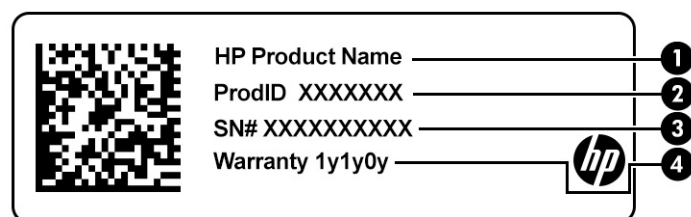

**Table 2-11 Service label components**

| Component |                 |
|-----------|-----------------|
| (1)       | HP product name |
| (2)       | Product ID      |
| (3)       | Serial number   |
| (4)       | Warranty period |

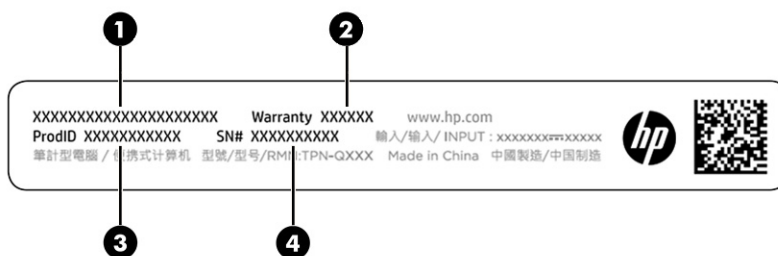

**Table 2-12 Service label components**

| Component |                 |
|-----------|-----------------|
| (1)       | HP product name |

**Table 2-12** Service label components (continued)

| Component |                 |
|-----------|-----------------|
| (2)       | Warranty period |
| (3)       | Product ID      |
| (4)       | Serial number   |



Takes you to serial-number-specific information to assist with setting up and using the product as well as provides you with access to support information.

- Regulatory labels—Provide regulatory information about the computer.
- Wireless certification labels—Provide information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.

## 3 Illustrated parts catalog


Use this chapter to determine the spare parts that are available for the computer.

### Computer major components

To identify the computer major components, use this illustration and table.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

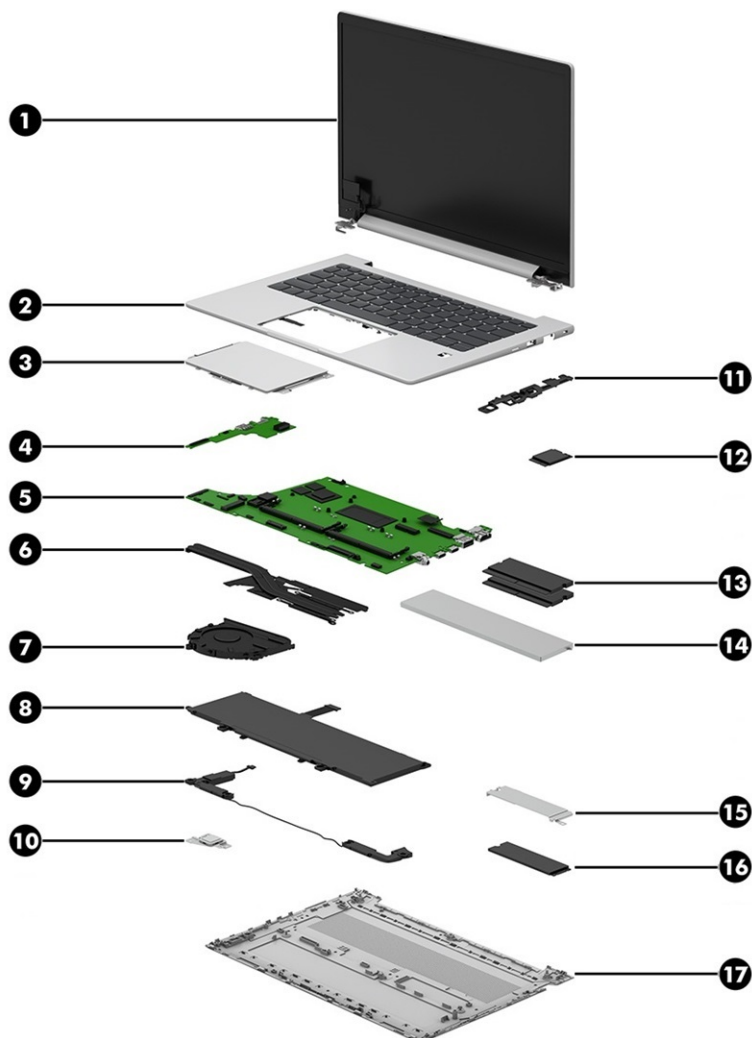

**Table 3-1 Computer major component descriptions and part numbers**


| Item | Component                                                                                                                                                                                                                                                                                                                                                                                 | Spare part number             |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| (1)  | <b>Display assembly</b><br><br><b>NOTE:</b> Display spare parts are available only as subcomponents. For spare part information, see <a href="#">Display assembly subcomponents on page 21</a> .                                                                                                                                                                                          | not available as a spare part |
| (2)  | <b>Top cover with keyboard</b> (backlit)<br><br><b>NOTE:</b> For a detailed list of country codes, see <a href="#">Top cover with keyboard on page 70</a> .                                                                                                                                                                                                                               | P38809-xx1                    |
| (3)  | <b>Touchpad</b> (includes cable)<br><br><b>NOTE:</b> The touchpad cable is also available in the Cable Kit as spare part number N96922-001.                                                                                                                                                                                                                                               | P34545-001                    |
| (4)  | <b>I/O board</b><br><br><b>NOTE:</b> The I/O board cables are available in the Cable Kit as spare part number N96922-001. The RJ-45 door is available as spare part number N96462-001 for plastic models and N96461-001 for metal models.                                                                                                                                                 |                               |
|      | For use in models with only WLAN                                                                                                                                                                                                                                                                                                                                                          | N95961-001                    |
|      | For use in models with WLAN and WWAN                                                                                                                                                                                                                                                                                                                                                      | N95962-001                    |
| (5)  | <b>System board</b> (includes integrated processor)                                                                                                                                                                                                                                                                                                                                       |                               |
|      | AMD Ryzen 7 250H processor                                                                                                                                                                                                                                                                                                                                                                | P35081-608                    |
|      | AMD Ryzen 7 250 processor                                                                                                                                                                                                                                                                                                                                                                 | P35081-604                    |
|      | AMD Ryzen 7 250 processor, models with WWAN                                                                                                                                                                                                                                                                                                                                               | P35081-605                    |
|      | AMD Ryzen 5 230 processor                                                                                                                                                                                                                                                                                                                                                                 | P35081-606                    |
|      | AMD Ryzen 5 230 processor, models with WWAN                                                                                                                                                                                                                                                                                                                                               | P35081-607                    |
|      | AMD Ryzen 5 220 processor                                                                                                                                                                                                                                                                                                                                                                 | P35081-602                    |
|      | AMD Ryzen 5 220 processor, models with WWAN                                                                                                                                                                                                                                                                                                                                               | P35081-603                    |
|      | AMD Ryzen 3 210 processor                                                                                                                                                                                                                                                                                                                                                                 | P35081-601                    |
| (6)  | <b>Heat sink</b> (15 W models)                                                                                                                                                                                                                                                                                                                                                            | N96443-001                    |
|      | <b>Heat sink</b> (28 W models)                                                                                                                                                                                                                                                                                                                                                            | N96444-001                    |
| (7)  | <b>Fan</b> (5 W models)                                                                                                                                                                                                                                                                                                                                                                   | N96441-001                    |
|      | <b>Fan</b> (28 W models)                                                                                                                                                                                                                                                                                                                                                                  | N96442-001                    |
| (8)  | <b>Battery</b>                                                                                                                                                                                                                                                                                                                                                                            |                               |
|      | 3 cell, 56 Whr                                                                                                                                                                                                                                                                                                                                                                            | N70706-001                    |
|      | 3 cell, 48 Whr                                                                                                                                                                                                                                                                                                                                                                            | N70705-001                    |
| (9)  | <b>Speakers</b>                                                                                                                                                                                                                                                                                                                                                                           | N96463-001                    |
| (10) | <b>Fingerprint reader</b><br><br><b>NOTE:</b> The fingerprint reader cable is available in the Cable Kit as spare part number N96922-001. The fingerprint reader bracket is available in the Bracket Kit as spare part number N96233-001. The fingerprint reader insert (for use in models without a fingerprint reader) is available in the Plastics Kit as spare part number N97208-001 | N96242-001                    |
| (11) | <b>System board I/O bracket (available in the Plastics Kit)</b>                                                                                                                                                                                                                                                                                                                           | N97208-001                    |

**Table 3-1 Computer major component descriptions and part numbers (continued)**

| Item | Component                                                                                    | Spare part number |
|------|----------------------------------------------------------------------------------------------|-------------------|
| (12) | <b>WLAN module</b>                                                                           |                   |
|      | Realtek 8852CE Wi-Fi 6E Bluetooth 5.3 WLAN                                                   | N19618-001        |
|      | MediaTek RZ616 Wi-Fi 6E Bluetooth 5.3 AIM-T WLAN                                             | N22541-001        |
|      | MediaTek MT7925 Wi-Fi 7 Bluetooth 5.4 AIM-T WW WLAN                                          | N64646-001        |
|      | <b>WWAN module</b> (not illustrated)                                                         |                   |
|      | HP 4G CAT16                                                                                  | P08117-001        |
| (13) | <b>Memory modules</b> (DDR5, PC-5600)                                                        |                   |
|      | 16 GB                                                                                        | N77399-001        |
|      | 12 GB                                                                                        | P33447-001        |
|      | 8 GB                                                                                         | N77398-001        |
| (14) | <b>Memory cover</b> (available in the Misc Parts Kit)                                        | P33250-001        |
| (15) | <b>SSD cover</b> (Included in the SSD Support Kit)                                           | P37723-001        |
| (16) | <b>Solid-state drive</b> (PCIe-4 × 4, M.2 2280)                                              |                   |
|      | <b>NOTE:</b> The solid-state drive support kit is available as spare part number P37723-001. |                   |
|      | 1 TB                                                                                         | N77394-001        |
|      | 512 GB                                                                                       | N77392-001        |
|      | 256 GB                                                                                       | N77391-001        |
|      | <b>Solid-state drive</b> (PCIe-4 × 4, M.2 2230) (not illustrated)                            |                   |
|      | 256 GB                                                                                       | N77397-001        |
|      |                                                                                              |                   |
| (17) | <b>Bottom cover</b>                                                                          |                   |
|      | Plastic                                                                                      | N96458-001        |
|      | Metal,                                                                                       | N96460-001        |

## Display assembly subcomponents

To identify the display assembly subcomponents, use this illustration and table.

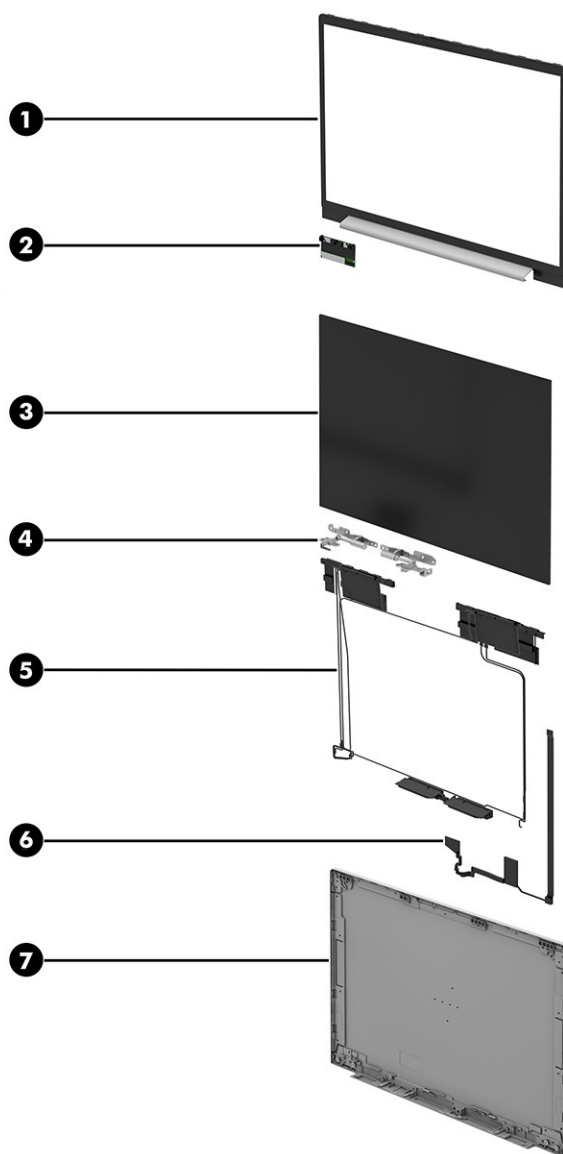

**Table 3-2** Display component descriptions and part numbers

| Item | Component                                                                                     | Spare part number |
|------|-----------------------------------------------------------------------------------------------|-------------------|
| (1)  | <b>Display bezel</b>                                                                          |                   |
|      | For use in models with an FHD camera                                                          | N96946-001        |
|      | For use in models with an IR camera                                                           | N96947-001        |
| (2)  | <b>Camera module</b> (includes cable, sponge, and panel and bezel adhesives)                  |                   |
|      | FHD camera                                                                                    | P34547-001        |
|      | 5 MP + IR camera                                                                              | P34546-001        |
| (3)  | <b>Display panel</b> (includes cables and panel and bezel adhesives)                          |                   |
|      | <b>NOTE:</b> Display panel tape is available in the Tape Kit as spare part number P01184-001. |                   |

**Table 3-2 Display component descriptions and part numbers (continued)**

| Item | Component                                                                                                  | Spare part number |
|------|------------------------------------------------------------------------------------------------------------|-------------------|
|      | WUXGA, 300 nits, touch screen                                                                              | P36274-001        |
|      | WUXGA, 300 nits                                                                                            | P36273-001        |
|      | WUXGA, 400 nits                                                                                            | P36276-001        |
|      | WQXGA, 400 nits                                                                                            | P36275-001        |
|      | 2.5 K, 400 nits                                                                                            | P44285-001        |
| (4)  | <b>Hinges</b> (includes left and right hinges and panel and bezel adhesives)                               | N96466-001        |
| (5)  | <b>Wireless antennas and cables</b> (includes WLAN antennas, WWAN antennas, and panel and bezel adhesives) | P04392-001        |
| (6)  | <b>Display/camera cable kit</b> (includes panel and bezel adhesives)                                       | P35298-001        |
| (7)  | <b>Display back cover</b> (includes wireless antennas and panel and bezel adhesives)                       |                   |
|      | Models with a 300 nit panel, FHD camera, WLAN, no WWAN                                                     | P35292-001        |
|      | Models with a 300 nit panel, 5 MP + IR camera, WLAN, no WWAN                                               | P35293-001        |
|      | Models with a 400 nit panel, FHD camera, WLAN, no WWAN                                                     | P35296-001        |
|      | Models with a 300 nit panel, FHD camera, WLAN, WWAN                                                        | P35294-001        |
|      | Models with a 300 nit panel, 5 MP + IR camera, WLAN, WWAN                                                  | P35295-001        |
|      | Models with a 400 nit panel, 5 MP + IR camera, WLAN, no WWAN                                               | P35297-001        |

## Miscellaneous parts

To identify the miscellaneous parts, use this table.

**Table 3-3 Miscellaneous part descriptions and part numbers**

| Component                                            | Spare part number |
|------------------------------------------------------|-------------------|
| <b>AC adapters</b>                                   |                   |
| 120 W, PFC, 4.5 mm                                   | M95377-001        |
| 100 W, nPFC, USB-C®                                  | N57045-001        |
| 65 W, nPFC, USB-C, 1.8 m (6.0 ft)                    | L67440-001        |
| 65 W, nPFC, USB-C, 1.8 m (6.0 ft), halogen free (HF) | N90678-001        |
| <b>USB-C-to-VGA adapter</b>                          | 831751-001        |
| <b>USB-C-to-RJ-45 adapter</b>                        | M95985-001        |
| <b>USB-C to USB-A Hub</b>                            | 916838-001        |
| <b>HDMI-to-VGA adapter</b>                           | 701943-001        |
| <b>USB BT700 USB-C adapter</b>                       | N46131-001        |
| <b>HP Universal USB-C Multiport Hub</b>              | M96882-001        |
| <b>Multiport USB-C Travel Hub</b>                    | N60372-001        |
| <b>Poly Voyager 4320 USB-A Headset</b>               | N57159-001        |

**Table 3-3** Miscellaneous part descriptions and part numbers (continued)

| Component                                                                                                                                                                                                                                            | Spare part number |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|
| <b>HP Business 17.3 Laptop Backpack</b>                                                                                                                                                                                                              | M55004-001        |
| <b>HP Business 17.3 Laptop Case</b>                                                                                                                                                                                                                  | M55005-001        |
| <b>Screw Kit</b> (for use in product component removal and replacement)                                                                                                                                                                              | P33251-001        |
| <b>Plastics and Rubber Kit</b> (includes fingerprint reader insert, I/O holder, SIM card insert, smart card insert, and SSD frame support)                                                                                                           | N97208-001        |
| <b>Tape Kit</b> (includes display panel stretchable tape and bezel adhesive)                                                                                                                                                                         | P01184-001        |
| <b>Bracket Kit</b> (includes smart card bracket and fingerprint reader bracket)                                                                                                                                                                      | N96233-001        |
| <b>SSD Parts Kit</b> (includes center hook, SSD bracket, and SSD support frame)                                                                                                                                                                      | P37723-001        |
| <b>Cable Kit</b> (includes I/O board cable, touchpad cable, fingerprint reader cable, nano SIM cable, WWAN cable, and adhesive support kit)                                                                                                          | N96922-001        |
| <b>Misc Parts Kit</b> (includes memory shields for DDR5 and DDR6, memory thermal pads, WWAN module foil, WLAN protective tape, WWAN gaskets, fingerprint reader conductive tape, camera cover rubber, and left and right bezel trim protective tape) | P33250-001        |
| <b>USB mouse</b>                                                                                                                                                                                                                                     | L95713-001        |
| <b>HP 125 Laser Wired Mouse</b>                                                                                                                                                                                                                      | M27884-001        |
| <b>HP 128 Laser Wired Mouse</b>                                                                                                                                                                                                                      | M27885-001        |
| <b>HP 435 Wireless Mouse</b>                                                                                                                                                                                                                         | M62277-001        |
| <b>HP 235 Wireless Mouse</b>                                                                                                                                                                                                                         | M86086-001        |
| <b>HP 510/515 Rechargeable Mouse</b>                                                                                                                                                                                                                 | N86885-001        |
| <b>HP 320K Wired Keyboard</b>                                                                                                                                                                                                                        | P24877-001        |
| <b>Nano lock</b>                                                                                                                                                                                                                                     | 918431-001        |
| <b>External optical drive</b>                                                                                                                                                                                                                        | 747080-001        |
| <b>HP Thunderbolt 4 100 W G6 Dock (with cable)</b>                                                                                                                                                                                                   | P34015-001        |
| <b>Bottom case for use with G6 docking station</b>                                                                                                                                                                                                   | P34055-001        |
| <b>Top cover for use with G6 docking station</b>                                                                                                                                                                                                     | P34054-001        |
| <b>Cable Kit (100 W/180 W) for use with G6 docking station</b>                                                                                                                                                                                       | P34060-001        |
| <b>PCA board for use with G6 docking station</b>                                                                                                                                                                                                     | P34056-001        |
| <b>Power button for use with G6 docking station</b>                                                                                                                                                                                                  | P34106-001        |
| <b>Fan (100 W) for use with G6 docking station</b>                                                                                                                                                                                                   | P34059-001        |
| <b>Screw Kit for use with G6 docking station</b>                                                                                                                                                                                                     | P34017-001        |
| <b>Power adapter, duckhead</b>                                                                                                                                                                                                                       |                   |
| Japan                                                                                                                                                                                                                                                | L33157-001        |
| <b>Power cord</b> (C13, premium, 1.0 m [3.3 ft])                                                                                                                                                                                                     |                   |
| Thailand bundle                                                                                                                                                                                                                                      | M85413-001        |
| <b>Power cord</b> (C5, conventional, 1.0 m [3.3 ft], HF)                                                                                                                                                                                             |                   |
| Denmark                                                                                                                                                                                                                                              | M79264-001        |

**Table 3-3** Miscellaneous part descriptions and part numbers (continued)

| Component                                                                                | Spare part number |
|------------------------------------------------------------------------------------------|-------------------|
| Europe (Austria, Belgium, Finland, France, Germany, the Netherlands, Norway, and Sweden) | M79266-001        |
| Switzerland                                                                              | M79265-001        |
| <b>Power cord</b> (C5, conventional, 1.0 m [3.3 ft])                                     |                   |
| Argentina                                                                                | L19357-001        |
| Australia                                                                                | L19358-001        |
| Brazil                                                                                   | L19359-001        |
| Denmark                                                                                  | L19360-001        |
| Europe (Austria, Belgium, Finland, France, Germany, the Netherlands, Norway, and Sweden) | L19361-001        |
| Europe (ADP + cord)                                                                      | N16170-001        |
| India                                                                                    | L19363-001        |
| Israel                                                                                   | L19362-001        |
| Italy                                                                                    | L19364-001        |
| Japan                                                                                    | L19365-001        |
| North America                                                                            | L19367-001        |
| The People's Republic of China                                                           | L19368-001        |
| South Africa                                                                             | L19369-001        |
| South Korea                                                                              | L19366-001        |
| Switzerland                                                                              | L19370-001        |
| Taiwan                                                                                   | L19372-001        |
| Thailand                                                                                 | L19371-001        |
| Thailand (ADP + cord)                                                                    | M85418-001        |
| The United Kingdom                                                                       | L19373-001        |
| The United Kingdom, HF                                                                   | M82711-001        |

---

## 4 Removal and replacement procedures preliminary requirements

Use this information to properly prepare to disassemble and reassemble the computer.

### Tools required

You need the following tools to complete the removal and replacement procedures:

- Tweezers
- Nonconductive, nonmarking pry tool
- Magnetic Phillips P1 screwdriver

### Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



**NOTE:** As you remove each subassembly from the computer, place the subassembly and all accompanying screws away from the work area to prevent damage.

---

### Plastic parts

Using excessive force during disassembly and reassembly can damage plastic parts.

### Cables and connectors

Handle cables with extreme care to avoid damage.



**IMPORTANT:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

---

Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed so that they cannot be caught or snagged as you remove or replace parts. Handle flex cables with extreme care; these cables tear easily.

### Drive handling

Note the following guidelines when handling drives.



**IMPORTANT:** Drives are fragile components. Handle them with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

- Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation or Sleep mode, turn the computer on, and then shut it down through the operating system.

- Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.
  - Before removing an optical drive, be sure that a disc is not in the drive, and be sure that the optical drive tray is closed.
  - Handle drives on surfaces covered with at least 2.54 cm (1 inch) of shock-proof foam.
  - Avoid dropping drives from any height onto any surface.
  - After removing a hard drive or an optical drive, place it in a static-proof bag.
  - Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.
  - Avoid exposing a drive to temperature extremes or liquids.
  - If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging, and label the package "FRAGILE."
- 

## Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.



**IMPORTANT:** To prevent damage to the device when you remove or install internal components, observe these precautions:

- Keep components in their electrostatic-safe containers until you are ready to install them.
  - Before touching an electronic component, discharge static electricity by using the guidelines described in [Personal grounding methods and equipment on page 28](#).
  - Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
  - If you remove a component, place it in an electrostatic-safe container.
- 

## Generating static electricity

Follow these static electricity guidelines:

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

**Table 4-1** Static electricity occurrence based on activity and humidity

| Event                                                   | 55% relative humidity | 40% relative humidity | 10% relative humidity |
|---------------------------------------------------------|-----------------------|-----------------------|-----------------------|
| Walking across carpet                                   | 7,500 V               | 15,000 V              | 35,000 V              |
| Walking across vinyl floor                              | 3,000 V               | 5,000 V               | 12,000 V              |
| Motions of bench worker                                 | 400 V                 | 800 V                 | 6,000 V               |
| Removing dual in-line packages (DIPs) from plastic tube | 400 V                 | 700 V                 | 2,000 V               |
| Removing DIPs from vinyl tray                           | 2,000 V               | 4,000 V               | 11,500 V              |
| Removing DIPs from polystyrene foam                     | 3,500 V               | 5,000 V               | 14,500 V              |
| Removing bubble pack from PCB (printed circuit board)   | 7,000 V               | 20,000 V              | 26,500 V              |
| Packing PCBs in foam-lined box                          | 5,000 V               | 11,000 V              | 21,000 V              |



**NOTE:** Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.



**NOTE:** As little as 700 V of static electricity can degrade a product.

## Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity.

The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components:

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.
- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

## Personal grounding methods and equipment

Using certain equipment can prevent static electricity damage to electronic components.

- **Wrist straps** are flexible straps with a maximum of  $1\text{ M}\Omega \pm 10\%$  resistance in the ground cords. To provide proper ground, wear a strap snug against bare skin. Verify that the ground cord is connected and fits snugly into the banana plug connector on the grounding mat or workstation.
- You can use **heel straps, toe straps, and boot straps** at standing workstations. These straps are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of  $1\text{ M}\Omega \pm 10\%$  resistance between the operator and ground.

**Table 4-2 Static shielding protection levels**

| Method                | Voltage |
|-----------------------|---------|
| Antistatic plastic    | 1,500   |
| Carbon-loaded plastic | 7,500   |
| Metallized laminate   | 15,000  |

## Grounding the work area

To prevent static damage at the work area, follow these precautions:

- Cover the work surface with approved static-dissipative material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- Avoid contact with pins, leads, or circuitry.

## Recommended materials and equipment

HP recommends certain materials and equipment to prevent static electricity:

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of  $1\text{ M}\Omega \pm 10\%$  resistance
- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing  $1\text{ M}\Omega \pm 10\%$  resistance
- Material handling packages
- Conductive plastic bags

- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes

## Cleaning your computer

Cleaning your computer regularly removes dirt and debris so that your device continues to operate at its best. Use the following information to safely clean the external surfaces of your computer.

### Enabling HP Easy Clean (select products only)

HP Easy Clean helps you to avoid accidental input while you clean the computer surfaces. This software disables devices such as the keyboard, touch screen, and touchpad for a preset amount of time so that you can clean all computer surfaces.

1. Start HP Easy Clean in one of the following ways:
  - Select the **Start** menu, and then select **HP Easy Clean**.
  - Select the **HP Easy Clean** icon in the taskbar.
  - Select **Start**, and then select the **HP Easy Clean** tile.
2. Now that your device is disabled for a short period, see [Removing dirt and debris from your computer on page 30](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 31](#) for guidelines to help prevent the spread of harmful bacteria and viruses.

### Removing dirt and debris from your computer

Here are the recommended steps to clean dirt and debris from your computer.

For computers with wood veneer, see [Caring for wood veneer \(select products only\) on page 32](#).

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.

---

 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

---

3. Moisten a microfiber cloth with water. The cloth should be moist, but not dripping wet.

---

 **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

---

4. Wipe the exterior of the product gently with the moistened cloth.

---

 **IMPORTANT:** Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

---

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

See [Cleaning your computer with a disinfectant on page 31](#) for recommended steps to clean the high-touch, external surfaces on your computer to help prevent the spread of harmful bacteria and viruses.

## Cleaning your computer with a disinfectant

The World Health Organization (WHO) recommends cleaning surfaces, followed by disinfection, as a best practice for preventing the spread of viral respiratory illnesses and harmful bacteria.

After cleaning the external surfaces of your computer using the steps in [Removing dirt and debris from your computer on page 30](#), [Caring for wood veneer \(select products only\) on page 32](#), or both, you might also choose to clean the surfaces with a disinfectant. A disinfectant that is within HP's cleaning guidelines is an alcohol solution consisting of 70% isopropyl alcohol and 30% water. This solution is also known as rubbing alcohol and is sold in most stores.

Follow these steps when disinfecting high-touch, external surfaces on your computer:

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.

---

 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

---

3. Moisten a microfiber cloth with a mixture of 70% isopropyl alcohol and 30% water. The cloth should be moist, but not dripping wet.

---

 **CAUTION:** Do not use any of the following chemicals or any solutions that contain them, including spray-based surface cleaners: bleach, peroxides (including hydrogen peroxide), acetone, ammonia, ethyl alcohol, methylene chloride, or any petroleum-based materials, such as gasoline, paint thinner, benzene, or toluene.

---

 **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

---

4. Wipe the exterior of the product gently with the moistened cloth.

---

 **IMPORTANT:** Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

---

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

## Caring for wood veneer (select products only)

Your product might feature high-quality wood veneer. As with all natural wood products, proper care is important for best results over the life of the product. Because of the nature of natural wood, you might see unique variations in the grain pattern or subtle variations in color, which are normal.

- Clean the wood with a dry, static-free microfiber cloth or chamois.
- Avoid cleaning products containing substances such as ammonia, methylene chloride, acetone, turpentine, or other petroleum-based solvents.
- Do not expose the wood to sun or moisture for long periods of time.
- If the wood becomes wet, dry it by dabbing with an absorbent, lint-free cloth.
- Avoid contact with any substance that might dye or discolor the wood.
- Avoid contact with sharp objects or rough surfaces that might scratch the wood.

See [Removing dirt and debris from your computer on page 30](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 31](#) for sanitizing guidelines to help prevent the spread of harmful bacteria and viruses.

## Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

## Accessing support information

To find the HP support that you need, use this information.

**Table 4-3 Support information locations**

| Service consideration                                        | Path to access information                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Records of reported failure incidents stored on the computer | <p><b>Windows:</b></p> <p>Pre-operating system failures are logged in the BIOS Event Log. To view the BIOS Event Log:</p> <ol style="list-style-type: none"> <li>1. Press the power button.</li> <li>2. Immediately and repeatedly press <b>esc</b> when the power button light turns white.</li> </ol> <p><b>NOTE:</b> If you do not press <b>esc</b> at the appropriate time, you must restart the computer and again repeatedly press <b>esc</b> when the power button light turns white to access the utility.</p> <ol style="list-style-type: none"> <li>3. Press <b>f10</b> to enter the BIOS setup.</li> <li>4. Complete one of these tasks: <ul style="list-style-type: none"> <li>• (On commercial products) Under the <b>Main</b> tab, select <b>BIOS event log</b>, and then select <b>View BIOS Event Log</b>.</li> <li>• (On consumer products) Under the <b>Main</b> tab, select <b>System Log</b>.</li> </ul> </li> </ol> <p>Post-operating system failures are logged in the Event Viewer.</p> <ol style="list-style-type: none"> <li>1. Turn on the computer and allow the operating system to open.</li> <li>2. Select the search icon  in the taskbar.</li> <li>3. Type <code>Event Viewer</code>, and then press <b>enter</b>.</li> <li>4. Select the log from the left panel. Details display in the right panel.</li> </ol> <p><b>Chrome OS™:</b></p> <ol style="list-style-type: none"> <li>1. Go to <a href="https://support.google.com/chrome">support.google.com/chrome</a>.</li> <li>2. Search <code>collect Chrome device logs</code>.</li> </ol> |
| Technical bulletins                                          | <p>To locate technical bulletins:</p> <ol style="list-style-type: none"> <li>1. Go to <a href="https://www.hp.com">www.hp.com</a>.</li> <li>2. Place the cursor over <b>Problem solving</b> to display more options.</li> <li>3. Select <b>Support &amp; Troubleshooting</b>.</li> <li>4. Type the serial number, product number, or product name to go to the product support page.</li> <li>5. Select <b>Advisories</b> to view technical bulletins.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Repair professionals                                         | <p>To locate repair professionals:</p> <ol style="list-style-type: none"> <li>1. Go to <a href="https://www.hp.com">www.hp.com</a>.</li> <li>2. Place the cursor over <b>Support resources</b> to display more options.</li> <li>3. Select <b>Authorized service providers</b>.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

**Table 4-3** Support information locations (continued)

| Service consideration                                                       | Path to access information                                                                                                                                                                                                                                                                                                                             |
|-----------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Component and diagnosis information, failure detection, and required action | <p>To locate diagnosis information and actions:</p> <ol style="list-style-type: none"><li>1. Go to <a href="http://www.hp.com/go/techcenter/pcdiags">http://www.hp.com/go/techcenter/pcdiags</a>.</li><li>2. Select <b>Get Support</b>.</li><li>3. Near the bottom of the window, select <b>Notebook PCs</b>, and then select your location.</li></ol> |

## 5 Removal and replacement procedures for Customer Self-Repair parts

This chapter provides removal and replacement procedures for Customer Self-Repair parts.

 **NOTE:** The Customer Self-Repair program is not available in all locations. Installing a part that is not supported by the Customer Self-Repair program can void your warranty. Check your warranty to determine whether Customer Self-Repair is supported in your location.

 **NOTE:** The [HP Support YouTube Channel](#) (in English) has videos that provide step-by-step removal and replacement instructions for many common parts and models.

### Component replacement procedures

To remove and replace computer components, use these procedures.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com/>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

### Preparation for disassembly

To remove and replace computer components, use these procedures:

For initial safety procedures, see [Removal and replacement procedures preliminary requirements on page 26](#).

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation or Sleep mode, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

### Bottom cover

To remove the bottom cover, use this procedure and illustration.


**Table 5-1** Bottom cover descriptions and part numbers

| Description | Spare part number |
|-------------|-------------------|
| Plastic     | N96458-001        |
| Metal       | N96460-001        |


Before removing the bottom cover, prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).

Remove the bottom cover:

1. Close the computer and rest it upside down on a flat work surface with the front toward you.
2. Loosen the five captive Phillips screws that secure the bottom cover to the computer.

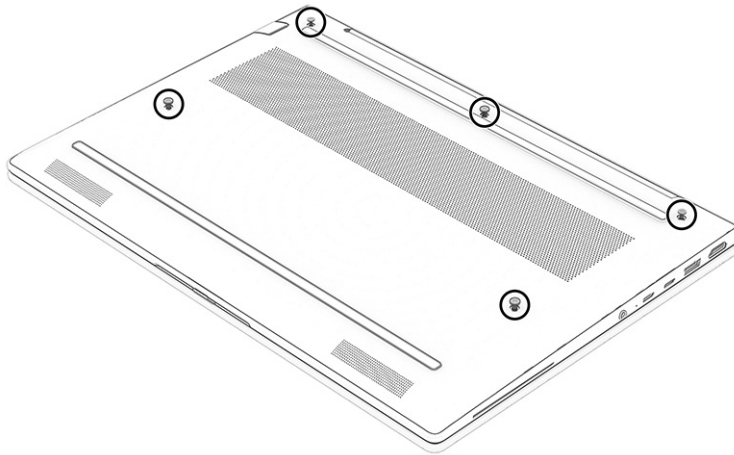

3. Insert a nonmarking, nonconductive tool (1) into the seam in the top middle of the computer, and then release the bottom cover (2) from the computer.
4. Remove the bottom cover (3).

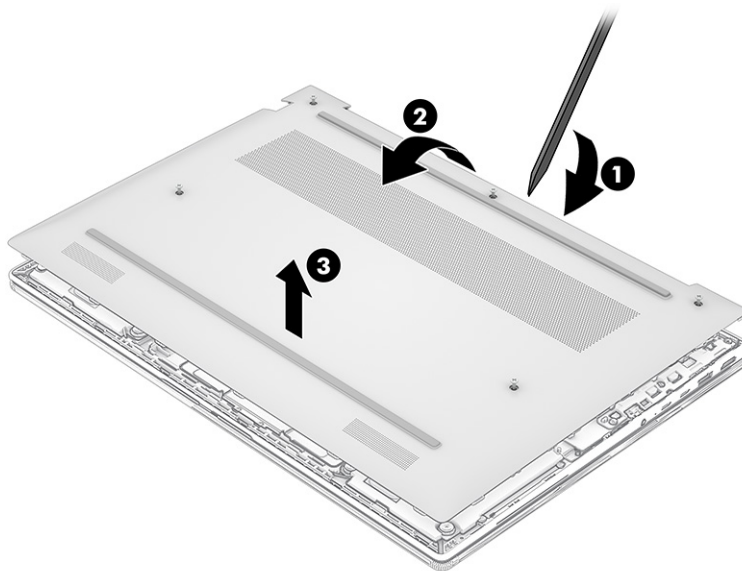

To replace the bottom cover, reverse the removal procedures.

When replacing the bottom cover:


- Remove the Feature Byte label from the inside of the old bottom cover and place it on the inside of the new bottom cover.

- Remove the service tag label from the inside of the old bottom cover and place it on the outside of the new bottom cover.

Be sure to keep these labels with the computer, as the label is required for any future repairs.

### Service tag and Feature Byte labels

 
 **NOTE:** Label appearance might vary.

|                                                                                                                                                                                                                                                                                                                                                                                                              |                               |                                                                                                                                                                                                                                                                         |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p>HP Long Model Name<br/>ProdID AA1234V<br/>SN# CNJ1234567<br/>Warranty 1y1y0y</p>                                                                                                                                                                                                                                        | <p>← Service Tag label →</p>  |  <p>HP Fortis Flip G11 11<br/>ProdID B2PQ4E5RABIN<br/>SN# SC050H4B3R<br/>Warranty 1y1y0y</p>                                                                                          |
| <p>Build ID: XXXXXXXXXXXXX21BYTES</p> <p>Build</p>  <p>Feature Byte:</p> <p>XXXXXXXXXX11112222AAAAAAAAAXX<br/>XXXXXXXXXX11112222AAAAAAAAAXX<br/>XXXXXXXXXX11112222AAAAAAAAAXX<br/>XXXXXXXXXX11112222AAAAAAAAAXX</p>  <p>Keyboard Type:</p> | <p>← Feature Byte label →</p> | <p>Feature Byte:</p> <p>4TUW0757M7R7W7m1AaBaCp4p4u4w4VW<br/>eMx4P4u4mEmv4n7v4ngOp4Up4pp4nXxZ.T1</p>  <p>Keyboard Type:0<br/>Host Based Mac Address:<br/>See Label on System Board</p> |


### New bottom cover label locations

Inside of bottom cover (place Feature Byte label here)

 **NOTE:** Bottom cover appearance might vary.

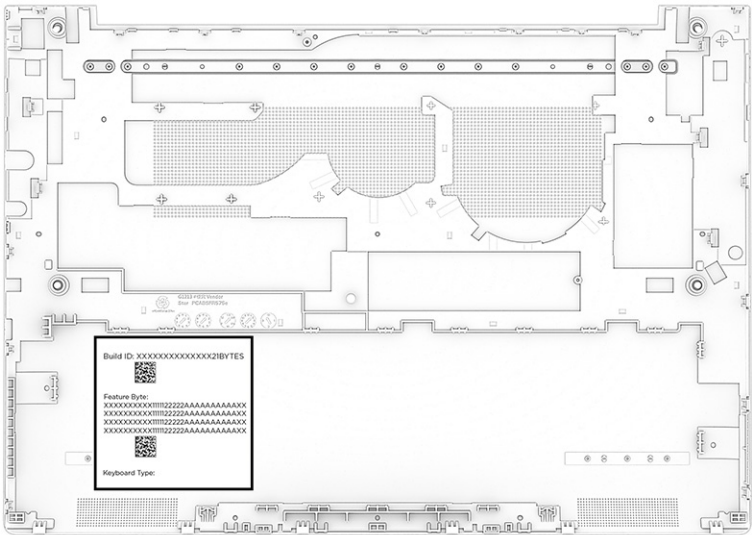

Outside of bottom cover (place service tag label here)

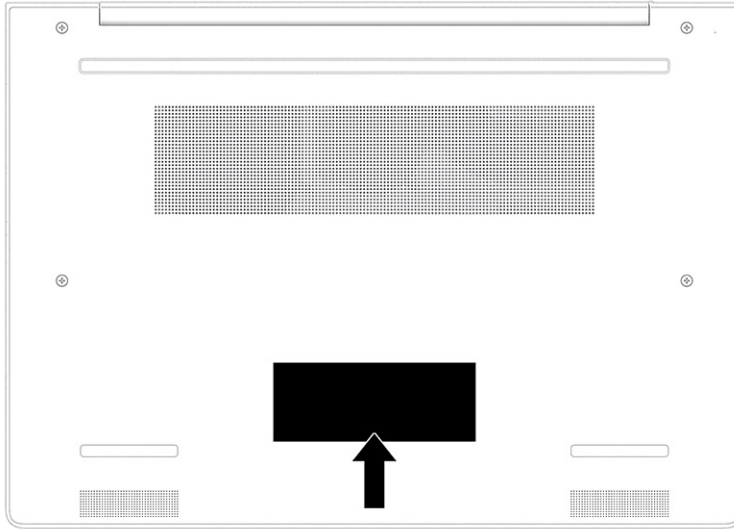

## Battery

The battery removal procedure differs depending on whether you are removing and replacing the existing battery or installing a new battery. To install a new battery, you must use a revive kit.

- To remove and replace the existing battery, see [Removing and reinstalling the same battery on page 38](#).
- To install a new battery, see [Installing a new battery on page 40](#).

### Removing and reinstalling the same battery

To remove the battery and reinstall it, use this procedure and illustration.

---

**⚠ WARNING!** To avoid personal injury and damage to the product:

- Do *not* puncture, twist, or crack the battery.
  - Do *not* cause an external puncture or rupture to the battery, which can cause a short inside the battery that can result in battery thermal runaway.
  - Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
  - Do *not* compress or squeeze the battery case with tools or heavy objects stacked on top of the case. These actions can apply undue force on the battery.
  - Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.
- 

Before removing the battery, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).

2. Remove the bottom cover (see [Bottom cover on page 35](#)).


**⚠ WARNING!** To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

**📝 IMPORTANT:** Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

Remove the battery:

**📝 NOTE:** When replacing the battery or reconnecting the battery cable, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.


1. Disconnect the battery cable **(1)** from the system board.
2. Press the release latch **(2)**, and then slide the battery **(3)** to the left.
3. Lift the battery **(4)** out of the computer.

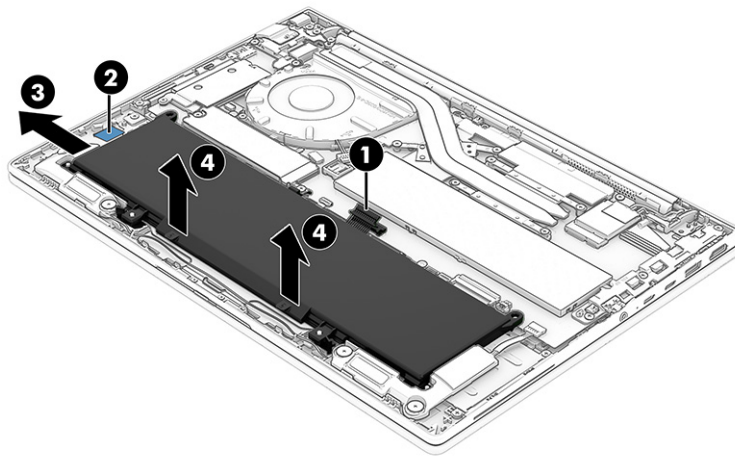

To reinstall the battery, reverse the removal procedures.

**📝 NOTE:** When reinstalling the battery, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.

To install a battery, position the battery **(1)** so the left edge covers the release lever. Slide the battery **(2)** to the right until it clicks into place. Connect the battery cable **(3)** to the system board.

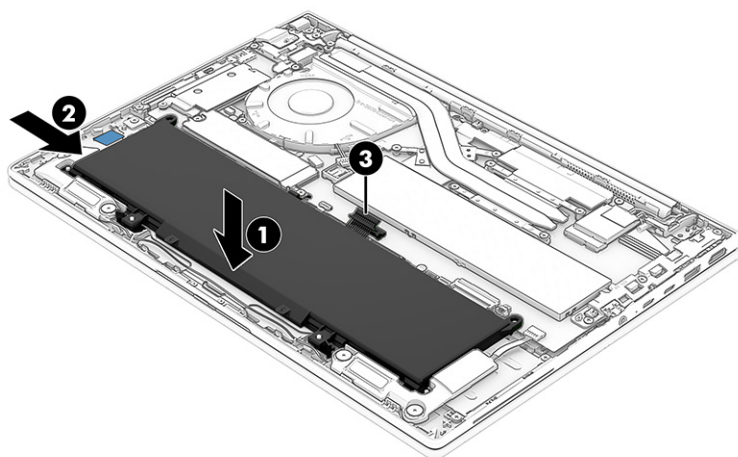

## Installing a new battery

To install a battery, use these procedures and illustrations. You must use a revive kit to remove the old battery and install a new one. The revive kit includes an empty containment tray and a containment tray with a battery preinstalled.

**Table 5-2 Battery descriptions and part numbers**

| Description    | Spare part number |
|----------------|-------------------|
| 3 cell, 56 Whr | N70706-001        |
| 3 cell, 48 Whr | N70705-001        |

Before starting this replacement procedure:

- Ensure other individuals are sufficiently clear of your workspace.
- Ensure your workspace is clear of any flammable material such as paper or oils.
- Locate the nearest ABC dry chemical fire-extinguisher for use in an emergency.

**⚠ WARNING!** This procedure requires removing the battery or disconnecting the battery cable. Use care to avoid bending, twisting, or puncturing the battery regardless of its condition. Failure to follow this replacement guide or to use HP recommended tools might damage the system and/or cause a safety hazard.

- Do *not* remove the battery from the containment tray.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

Should a part become stuck or difficult to remove when opening a unit where a swollen battery is suspected, or if the battery becomes stuck in the unit, stop, and contact HP Support for assistance. Do not try to remove a battery by force.

**📝 NOTE:** Latch locations and internal components might vary.


Before removing the battery, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).

**⚠ WARNING!** To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

**📝 IMPORTANT:** Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.


1. Remove the battery using the revive kit:
  - a. Disconnect the battery cable (1) from the system board.
  - b. Press the release lever (2), and then slide the battery (3) to the left.

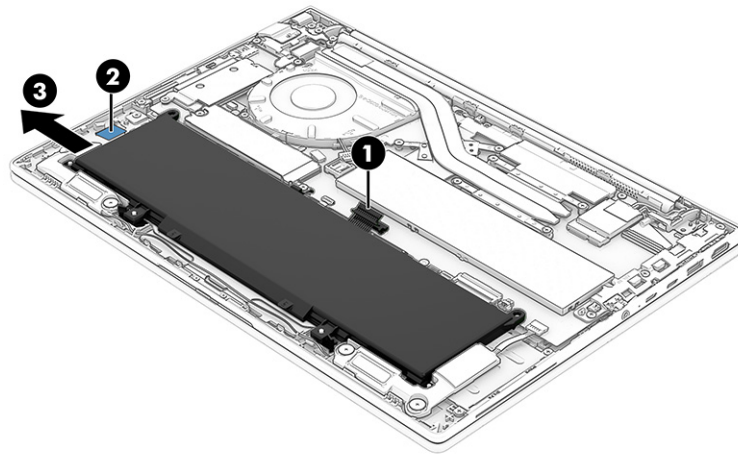


- c. Open the empty battery containment tray.




- d. Remove the paper backing layer from the adhesive on the tray.

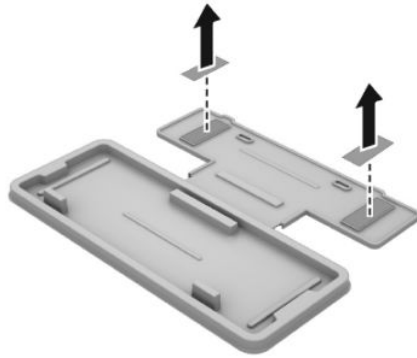


- e. Turn the tray (1) over so that the adhesive is facing down.
- f. Place the tray (2) centered on the battery.
- g. Press down on the indentations on the tray (3) to adhere it to the battery.

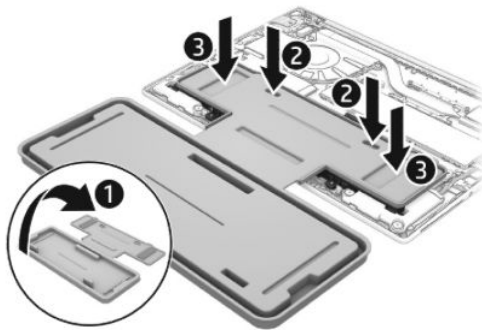

- h. Lift the top of the tray to remove the battery from the computer.

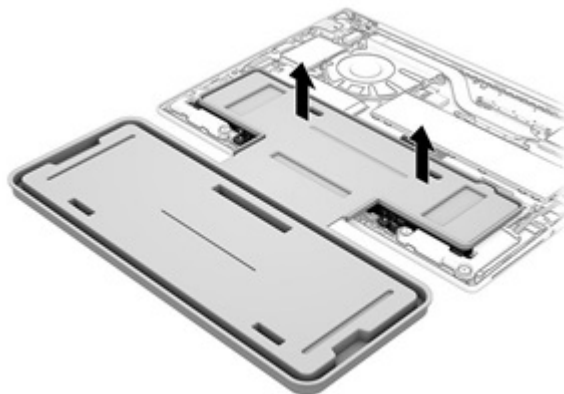

- i. Rotate the battery up and over into the cavity of the containment tray.

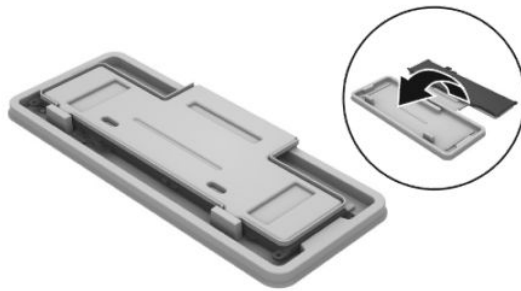


---

 **NOTE:** Please recycle responsibly. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.


---

2. Install the battery using the revive kit:
  - a. Open the containment tray that includes the new battery.
  - b. Turn the tray (1) over so the battery is facing downward, and then insert the battery (2) into the computer. Adhesive secures the battery to the tray.

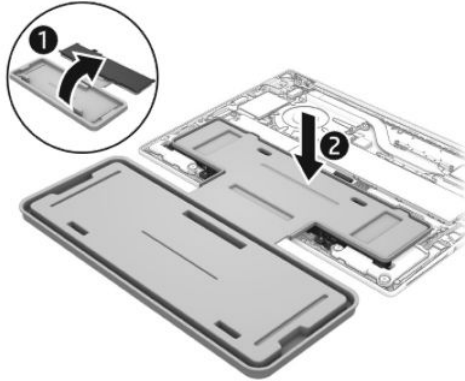

- c. Slide the containment tray (1) to the right until the enclosed battery clicks into place.

- d. Lift the containment tray (2) off the battery.

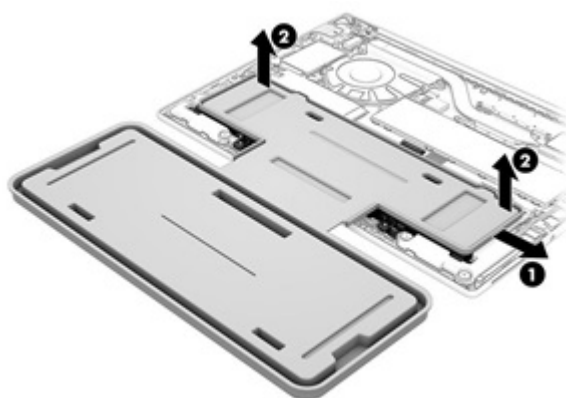

- e. Connect the battery cable to the system board.



**NOTE:** When replacing the battery, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.

## Memory modules

To remove the memory modules, use this procedure and illustration.

**Table 5-3** Memory module descriptions and part numbers


| Description                                    | Spare part number |
|------------------------------------------------|-------------------|
| 16 GB                                          | N77399-001        |
| 12 GB                                          | P33447-001        |
| 8 GB                                           | N77398-001        |
| Memory cover (available in the Misc Parts Kit) | P33250-001        |

Before removing the memory, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).


Remove the memory module:

1. Use the tab **(1)** near the bottom left corner of the cover to lift it **(2)** off the memory modules. The cover is secured to the system board by clips **(3)** on all sides of the cover.

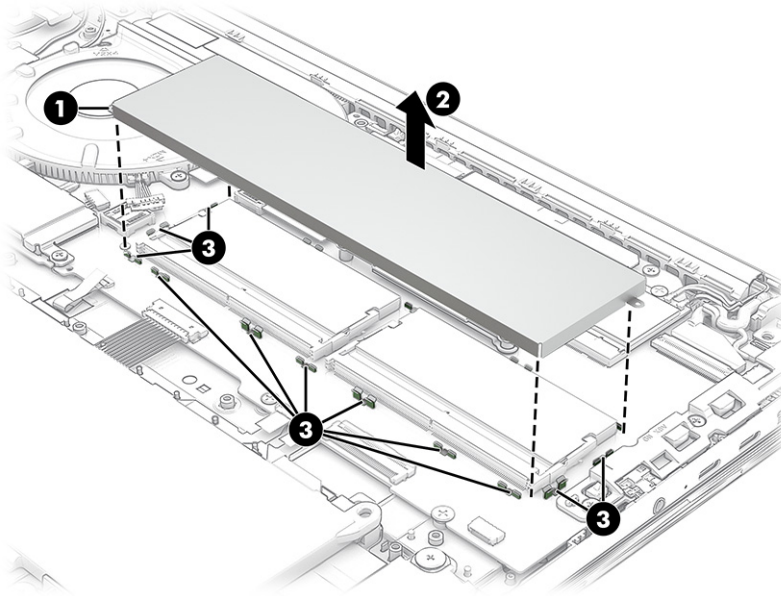

2. Spread the two retention clips outward **(1)** until the memory module tilts up at a 45° angle, and then remove the module **(2)**. Use the same procedure to remove all memory modules.

To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

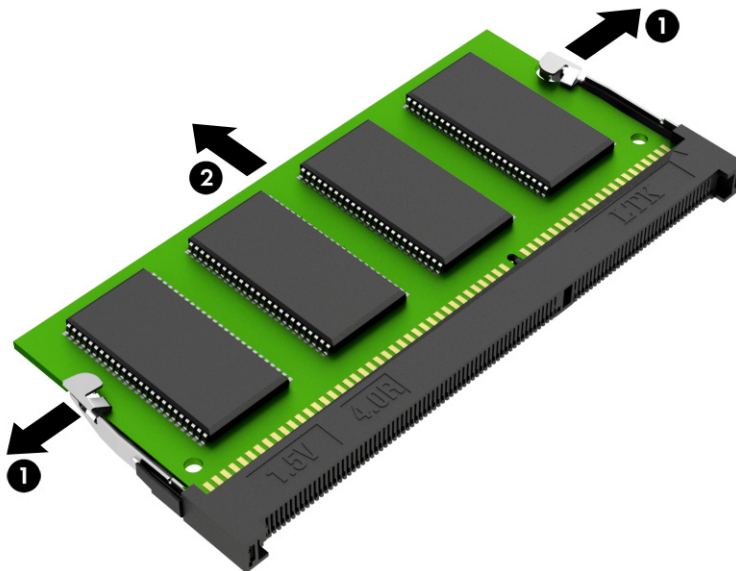

To install a memory module, reverse the removal procedures.

## Solid-state drive (M.2 2280)

To remove the M.2 2280 solid-state drive (SSD), use this procedure and illustration.

**Table 5-4** Solid-state drive descriptions and part numbers


| Description                   | Spare part number |
|-------------------------------|-------------------|
| 1 TB                          | N77394-001        |
| 512 GB                        | N77392-001        |
| 256 GB                        | N77391-001        |
| Solid-state drive support kit | P37723-001        |

Before removing the M.2 2280 SSD, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).

Remove the M.2 2280 SSD:

1. Remove the Phillips M2.0 × 2.5 screw (1) from the drive assembly.
2. Remove the Phillips M2.0 × 4.0 screw (2) from the drive assembly.
3. Remove the shield (3) from the drive, and then pull the drive (4) out of the slot.

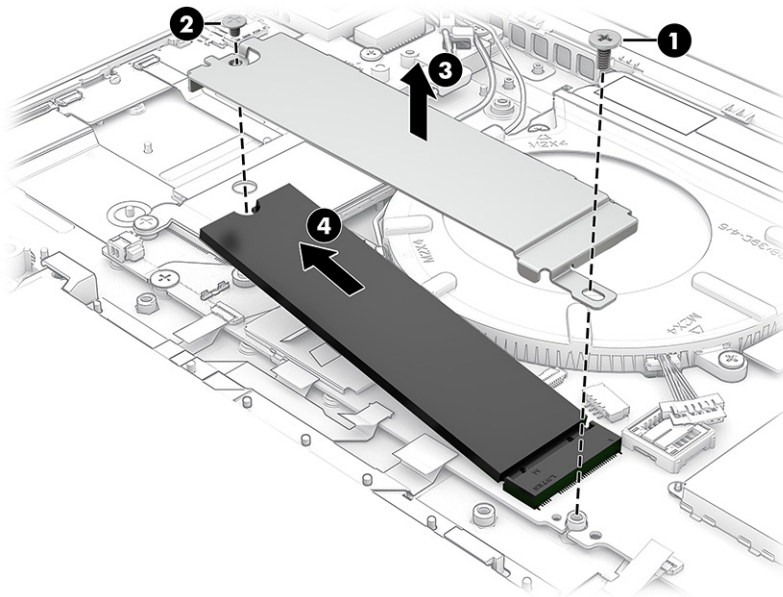

4. When installing an SSD, be sure a thermal pad is installed on the bottom of the drive bracket as shown in the following illustration.



To install the M.2 2280 solid-state drive, reverse the removal procedures.

 **NOTE:** Solid-state drives are designed with a notch to prevent incorrect insertion.

## Second solid-state drive (M.2 2230) (select products only)

To remove the second solid-state drive (SSD), use this procedure and illustration.

You can install only one of the following modules in the computer, because they share the same slot on the system board:

- Second SSD (M.2 2230)
- WWAN module

**Table 5-5** Solid-state drive description and part number


| Description | Spare part number |
|-------------|-------------------|
| 256 GB      | N77397-001        |

Before removing the second SSD, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).


Remove an M.2 2230 SSD:

1. Peel the tape only off the SSD. You can leave the other end of the tape connected to the computer.
2. Remove the Phillips M2.0 × 2.5 screw **(1)** that secures the SSD to the computer, and then pull the SSD **(2)** out of the connector to remove it.

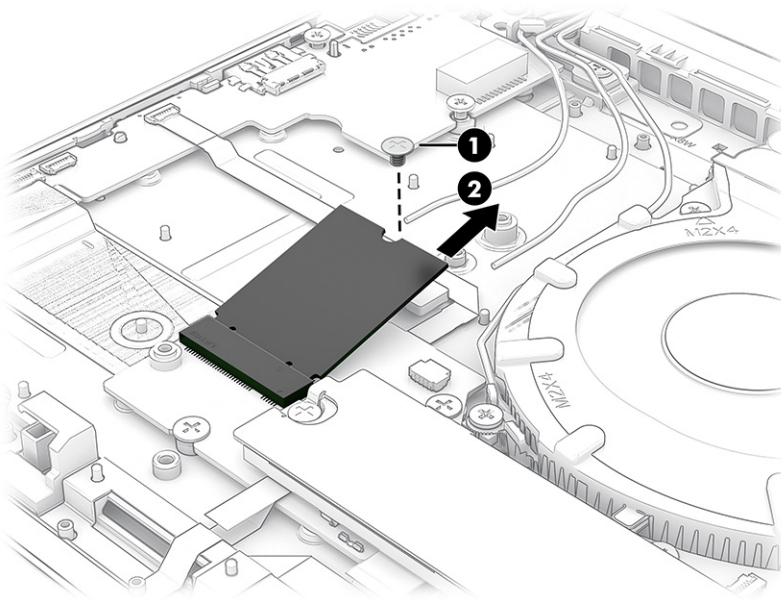


Install an M.2 2230 SSD:

1. Use screw hole (1) to secure an M.2 2230 SSD.

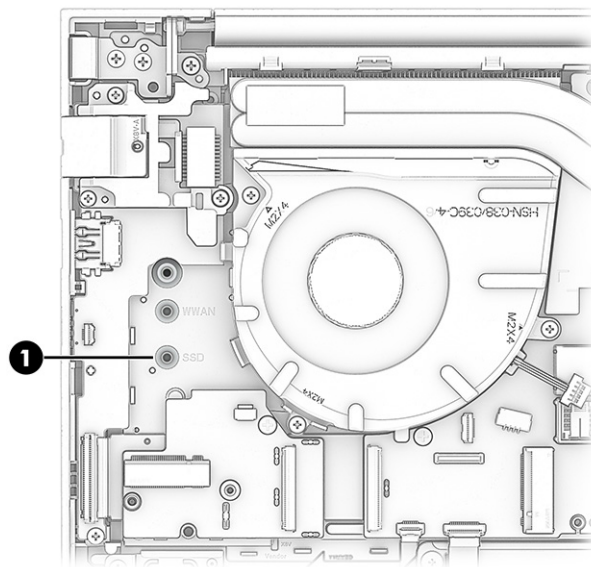

2. If a spacer is not installed, place a spacer onto the screw hole.

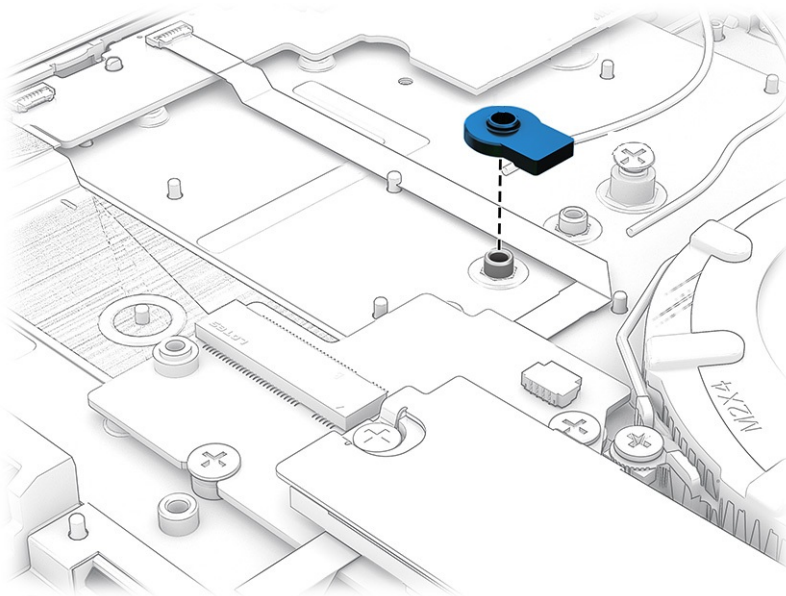

3. Insert the SSD into the socket, and then install a Phillips M2.0 × 2.5 screw.



**NOTE:** Solid-state drives are designed with a notch to prevent incorrect insertion.

## WLAN module

To remove the WLAN module, use this procedure and illustration.

**Table 5-6 WLAN module descriptions and part numbers**

| Description                                         | Spare part number |
|-----------------------------------------------------|-------------------|
| Realtek 8852CE Wi-Fi 6E Bluetooth 5.3 WLAN          | N19618-001        |
| MediaTek RZ616 Wi-Fi 6E Bluetooth 5.3 AIM-T WLAN    | N22541-001        |
| MediaTek MT7925 Wi-Fi 7 Bluetooth 5.4 AIM-T WW WLAN | N64646-001        |



**IMPORTANT:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).

Remove the WLAN module:


1. Remove the plastic protector (1) that covers the antennas.

2. Carefully disconnect the antenna cables (2) from the module.
3. Remove the Phillips M2.0 × 2.5 screw (3), and then pull the WLAN module (4) out of the socket.

 **NOTE:** The #1 white WLAN antenna cable connects to the WLAN module #1 Main terminal. The #2 black WLAN antenna cable connects to the WLAN module #1 Aux terminal.

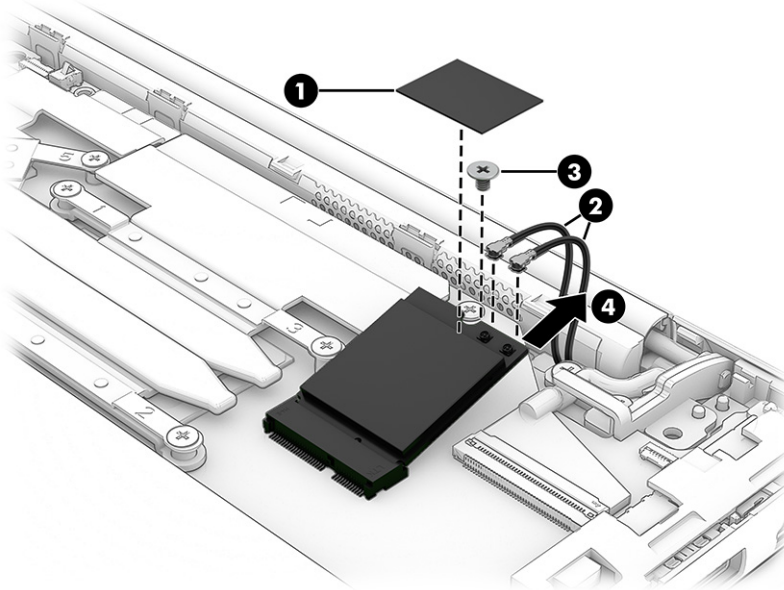

4. If the WLAN antenna is not connected to the terminal on the WLAN module, install a protective sleeve on the antenna connector, as shown in the following illustration.

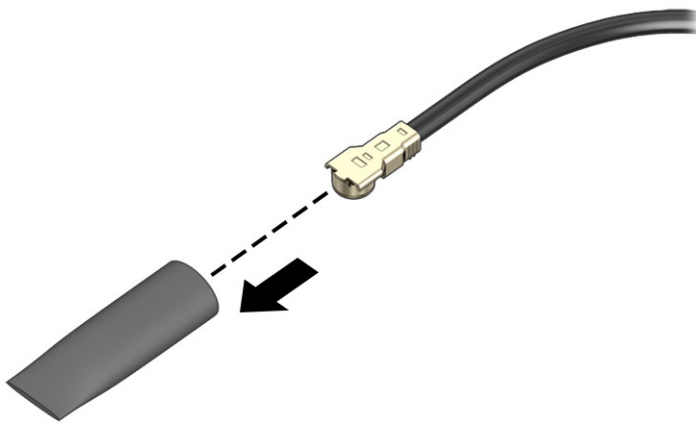

To install the WLAN module, reverse this procedure.

## WWAN module

To remove the WWAN module, use this procedure and illustration.

**Table 5-7 WWAN module description and part number**

| Description | Spare part number |
|-------------|-------------------|
| HP 4G CAT16 | P08117-001        |

 **IMPORTANT:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.


Before removing the WWAN module, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).


Remove the WWAN module:

1. Peel the antenna protector (1) off the module. Leave the other end of the protector connected to the computer.
2. Disconnect the antenna cables (2) from the terminals on the module. The number of antenna cables can vary.
3. Remove the Phillips M2.0 × 3.0 screw (3) that secures the module. The module tilts up.
4. Remove the module (4) by pulling it away from the slot at an angle.

 **NOTE:** Antenna cable colors might vary. Be sure to match the number on the cable with the number next to the connector on the module.

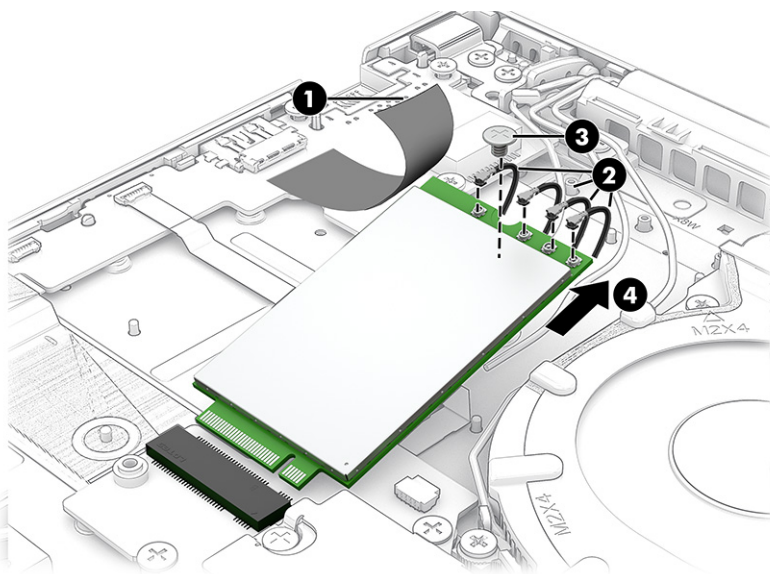

5. If the WWAN antenna is not connected to the terminal on the WWAN module, a protective sleeve must be installed on the antenna connector, as shown in the following illustration.

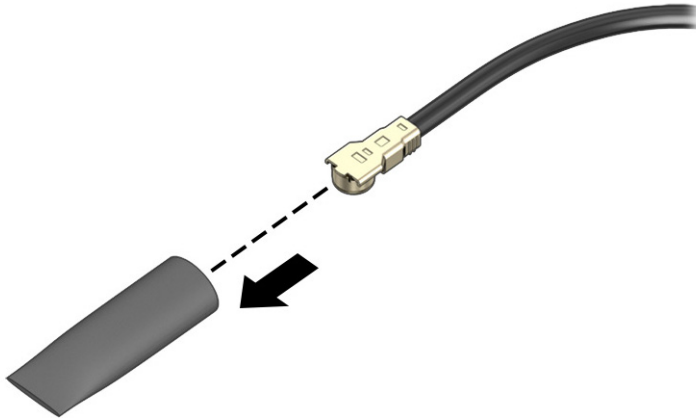

To install a WWAN module, reverse the removal procedures.

## 6 Removal and replacement procedures for authorized service provider parts

This chapter provides removal and replacement procedures for authorized service provider parts.

 **IMPORTANT:** Only an authorized service provider should access the components described in this chapter. Accessing these parts can damage the computer or void the warranty.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

 **NOTE:** The [HP Support YouTube Channel](#) (in English) has videos that provide step-by-step removal and replacement instructions for many common parts and models.

### Component replacement procedures

To remove and replace computer components, use the procedures described in this section.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com/>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

### Speakers

To remove the speakers, use this procedure and illustration.

**Table 6-1 Speakers description and part number**

| Description | Spare part number |
|-------------|-------------------|
| Speakers    | N96463-001        |

Before removing the speakers, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).


Remove the speakers:

1. Disconnect the speaker cable from the system board connector **(1)**.
2. Remove the cable from the clips **(2)** between the speakers.
3. Remove the six Phillips M2.0 × 2.0 screws **(3)** that secure the speakers to the computer.

#### 4. Remove the speakers (4).



**NOTE:** When removing the speakers, make note of the location of the rubber isolators (5) in the screw holes. The absence of or damage to these isolators can result in degraded speaker performance.

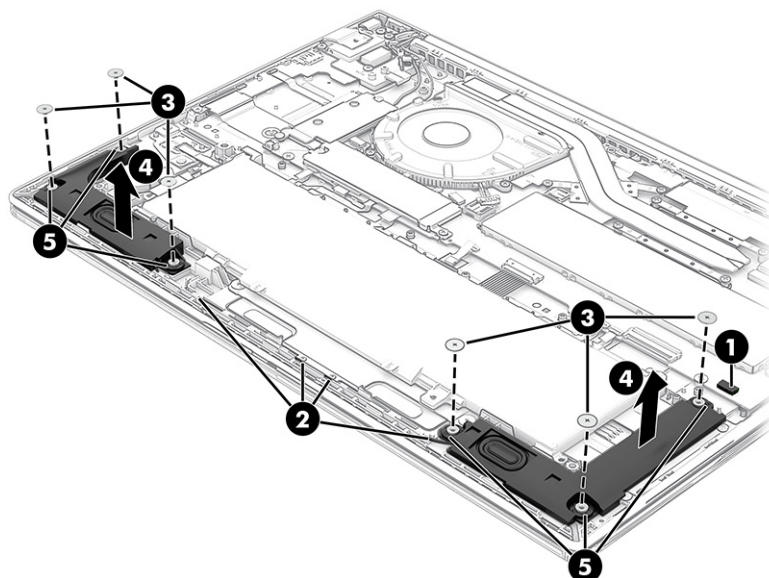

To install the speakers, reverse this procedure.

## Fingerprint reader board

To remove the fingerprint reader board, use this procedure and illustration.

**Table 6-2** Fingerprint reader board descriptions and part numbers

| Description                                                | Spare part number |
|------------------------------------------------------------|-------------------|
| Fingerprint reader board                                   | N96242-001        |
| Fingerprint reader board cable (included in the Cable Kit) | N96922-001        |
| Fingerprint reader insert (included in the Plastics Kit)   | N97208-001        |
| Fingerprint reader bracket (included in the Bracket Kit)   | N96233-001        |


Before removing the fingerprint reader board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).


Remove the fingerprint reader board:

1. Disconnect the cable from the ZIF connector (1) on the fingerprint reader.

2. Remove the two Phillips M2.0 × 2.5 screws (2) that secure the fingerprint reader bracket to the computer, and then remove the bracket (3).
3. Remove the fingerprint reader board (4) from the computer.

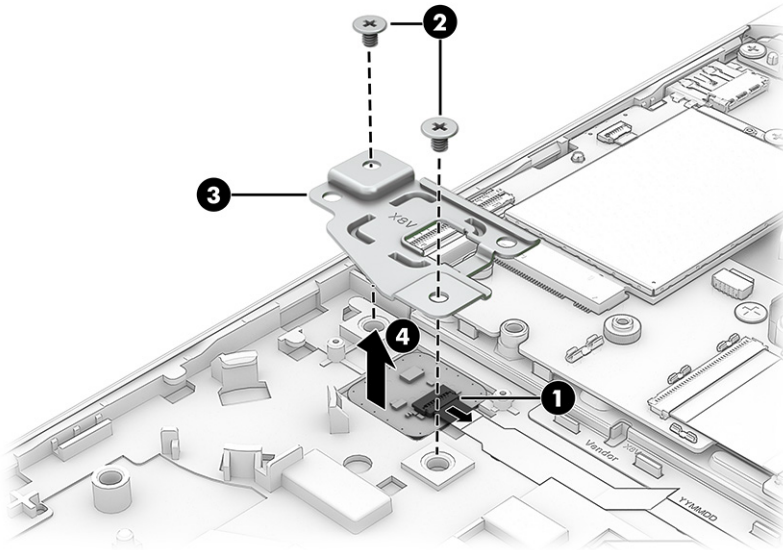

4. To remove the fingerprint reader board cable, disconnect the cable from the ZIF connector (1) on the fingerprint reader and the ZIF connector (2) on the system board.
5. Remove the cable (3) from the computer.

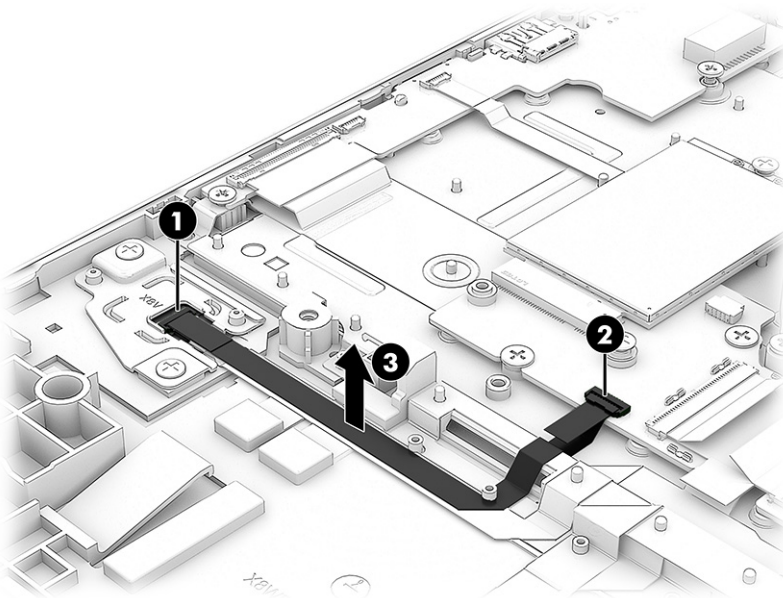

To install the fingerprint reader board, reverse this procedure.

## Fan

To remove the fan, use this procedure and illustration.

**Table 6-3** Fan descriptions and part numbers


| Description       | Spare part number |
|-------------------|-------------------|
| Fan (15 W models) | N96441-001        |
| Fan (28 W models) | N96442-001        |

Before removing the fan, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).

Remove the fan assembly:

1. Disconnect the fan cable from the system board connector **(1)**.
2. Remove the three Phillips 2.0 × 4.0 screws **(2)** that secure the fan to the computer.
3. Remove the fan **(3)** from the computer.

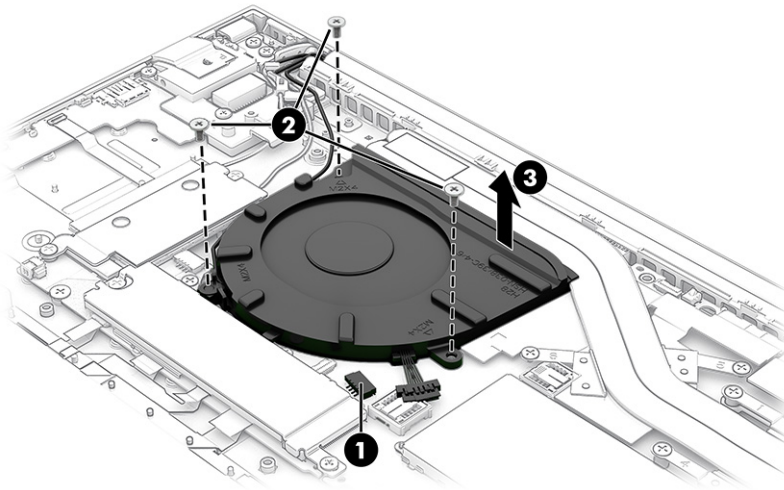

To install the fan, reverse this procedure.

## I/O board

To remove the I/O board, use this procedure and illustration.

**Table 6-4** I/O board descriptions and part numbers

| Description                                       | Spare part number |
|---------------------------------------------------|-------------------|
| I/O board for use in models with only WLAN        | N95961-001        |
| I/O board for use in models with WLAN and WWAN    | N95962-001        |
| I/O board cables (included in Cable Kit)          | N96922-001        |
| RJ-45 (network) jack door for use in metal models | N96461-001        |

**Table 6-4** I/O board descriptions and part numbers (continued)


| Description                                         | Spare part number |
|-----------------------------------------------------|-------------------|
| RJ-45 (network) jack door for use in plastic models | N96462-001        |

Before removing the I/O board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).
4. If installed, remove either the WWAN module or Cat-M wireless module (see [WWAN module on page 50](#)).

Remove the I/O board:

1. Disconnect the cables from the smaller ZIF connector **(1)** (select products only) and larger ZIF connector **(2)** on the I/O board.
2. Remove the four Phillips M2.0 × 4.0 screws **(3)** that secure the board to the computer, and then remove the network jack door **(4)** from the board.
3. Lift the front of the board **(5)** up, and then pull the board **(6)** into the computer to remove it.

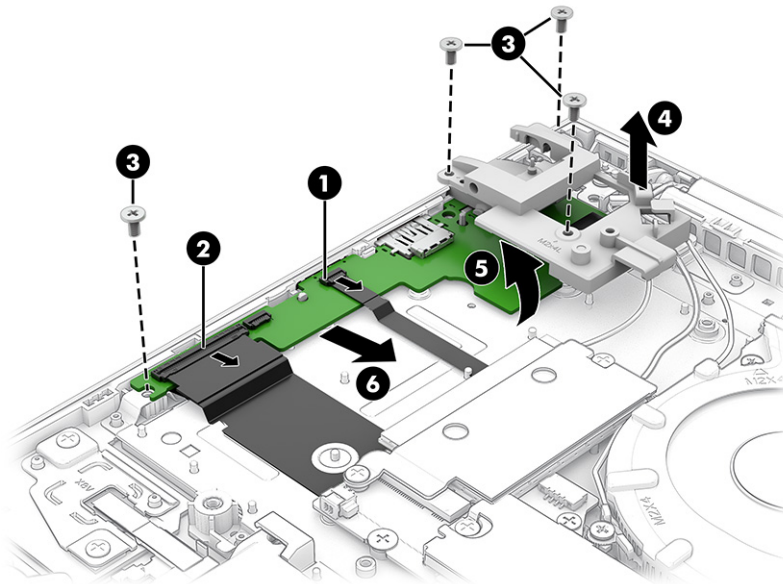

To install the I/O board, reverse this procedure.

## Touchpad

To remove the touchpad, use this procedure and illustration.

**Table 6-5 Touchpad descriptions and part numbers**


| Description                            | Spare part number |
|----------------------------------------|-------------------|
| Touchpad (includes cable)              | P34545-001        |
| Touchpad cable (included in Cable Kit) | N96922-001        |

Before removing the touchpad, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 38](#)).

Remove the touchpad:

1. Move the speaker cable (1) from the clips below the touchpad.
2. Disconnect the system board cable from the ZIF connector (2) on the touchpad.
3. Remove the conductive tape (3) from the top of the touchpad.
4. Remove the four Phillips M2.0 × 2.0 screws (4) that secure the touchpad to the computer.
5. Remove the three Phillips M1.6 × 2.0 screws (5) that secure the touchpad to the computer.
6. Remove the touchpad (6) from the computer.

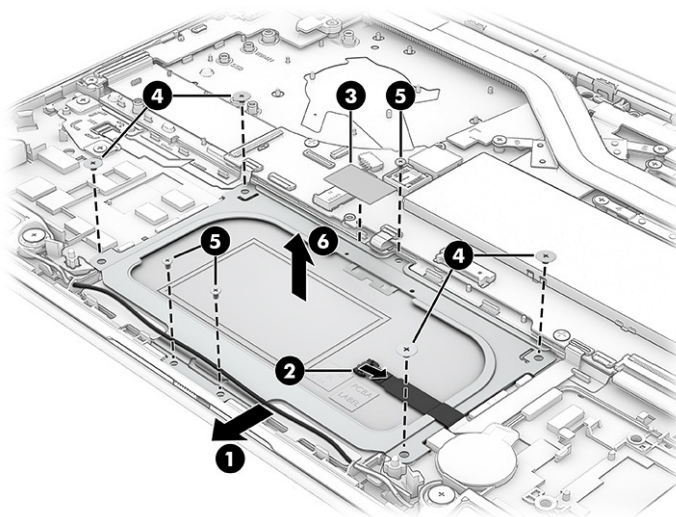

To install the touchpad, reverse this procedure.

## Heat sink

To remove the heat sink, use these procedures and illustrations.

**Table 6-6 Heat sink descriptions and part numbers**

| Description             | Spare part number |
|-------------------------|-------------------|
| Heat sink (28 W models) | N96444-001        |

**Table 6-6** Heat sink descriptions and part numbers (continued)


| Description             | Spare part number |
|-------------------------|-------------------|
| Heat sink (15 W models) | N96443-001        |

Before removing the heat sink, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).

Remove the heat sink:

1. In the order indicated on the heat sink, remove the four Phillips M2.0 × 2.5 screws (1) that secure the heat sink to the computer.
2. Remove the heat sink (2) from the computer.

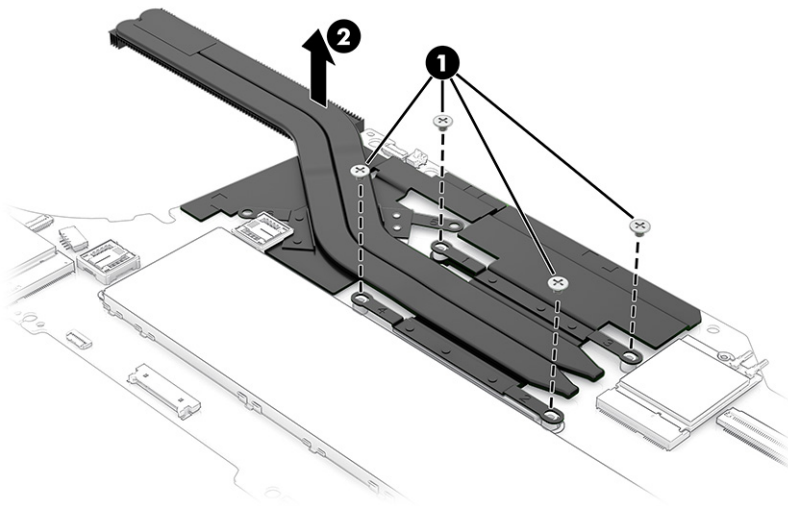

3. Thoroughly clean the thermal grease from the surfaces of the heat sink and the system board components each time the heat sink is removed. Install gray thermal grease on the heat sink.

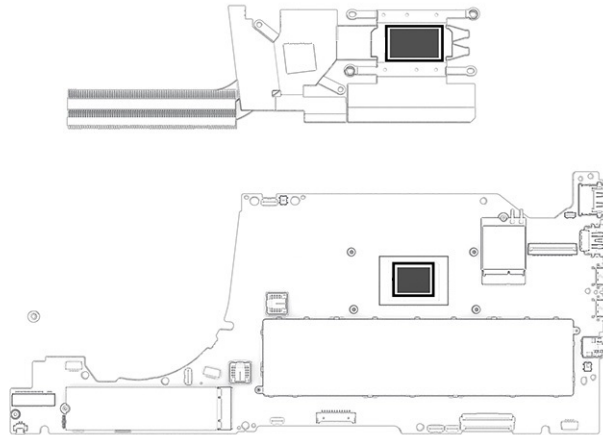

To install the heat sink, reverse this procedure.

## System board

To remove the system board, use these procedures and illustrations.

**Table 6-7 System board descriptions and part numbers**

| Description                                         | Spare part number |
|-----------------------------------------------------|-------------------|
| <b>System board</b> (includes integrated processor) |                   |
| AMD Ryzen 7 250H processor                          | P35081-608        |
| AMD Ryzen 7 250 processor                           | P35081-604        |
| AMD Ryzen 7 250 processor, models with WWAN         | P35081-605        |
| AMD Ryzen 5 230 processor                           | P35081-606        |
| AMD Ryzen 5 230 processor, models with WWAN         | P35081-607        |
| AMD Ryzen 5 220 processor                           | P35081-602        |
| AMD Ryzen 5 220 processor, models with WWAN         | P35081-603        |
| AMD Ryzen 3 210 processor                           | P35081-601        |

Before removing the system board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 38](#)).
4. Remove the fan (see [Fan on page 55](#)).




**NOTE:** You do not have to remove the heat sink to remove the system board.

When you replace the system board, be sure to remove the following components (as applicable) from the defective system board and install them on the replacement system board:


- Memory modules (see [Memory module on page 44](#)).
- Solid-state drive (see [Solid-state drive \(M.2 2280\) on page 45](#)).
- WLAN module (see [WLAN module on page 49](#)).
- WWAN module (see [WWAN module on page 50](#)).
- Heat sink (see [Heat sink on page 58](#)).

Remove the system board:


1. Disconnect the following cables from the system board:
  - Remove the antenna cover from the WLAN module (select products only) **(1)**
  - Antenna cables from the WLAN module (select products only) **(2)**
  - Display cable (ZIF) **(3)**
  - Speaker cable **(4)**
  - Keyboard cable (reverse ZIF) **(5)**
  - Card reader cable (ZIF) (not used in this product) **(6)**
  - Touchpad cable (ZIF) **(7)**
  - Keyboard backlight cable (ZIF) (select products only) **(8)**
  - NFC cable (ZIF) (not used in this product) **(9)**
  - Fingerprint reader cable (ZIF) (select products only) **(10)**
  - I/O board cable (reverse ZIF) from I/O board **(11)**

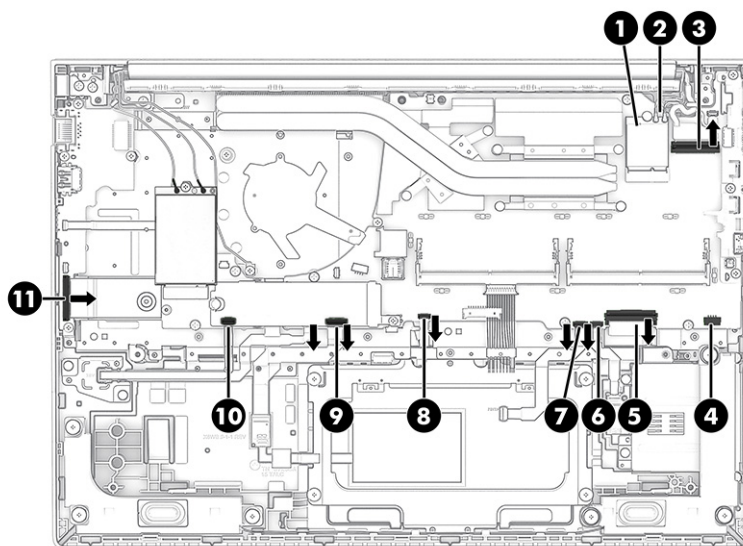

2. Remove the six Phillips M2.0 × 4.0 screws (1) from the system board and the plastic I/O bracket.
3. Remove the bracket (2) from the right edge of the board.

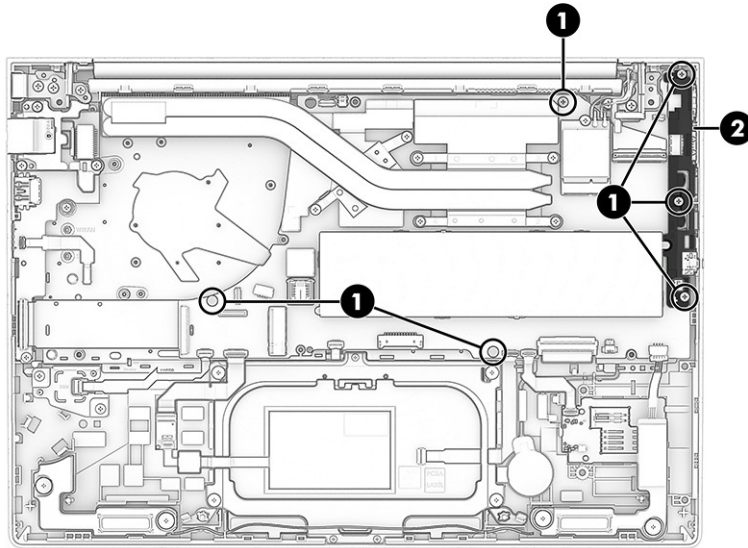

4. Lift the side of the system board (1) upward, and then pull the system board (2) away from the connectors on the side of the computer to remove it.

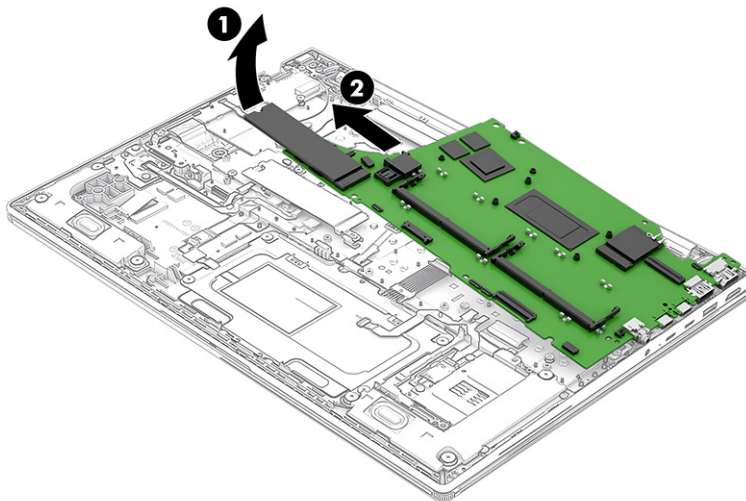

To install the system board, reverse this procedure.

## Display assembly

To remove and disassemble the display assembly, use these procedures and illustrations.


Full hinge-up displays are not available as spare parts. Spare parts for displays are available only at the subcomponent level.

Before removing the display panel, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).

Remove the display assembly:


1. (Select models only) Disconnect the antenna cables **(1)** from the WWAN module.
2. (Select models only) Disconnect the WWAN cable from the system board connector **(2)**.
3. (Select models only) Remove the WWAN cable and antenna cables from the routing channel **(3)** in the RJ-45 door bracket.
4. Disconnect the antenna cables **(4)** from the WLAN module.
5. Disconnect the display cable **(5)** from the system board ZIF connector.
6. Remove the display cable and WLAN antenna cables from the metal clip **(6)** at the bottom of the hinge.

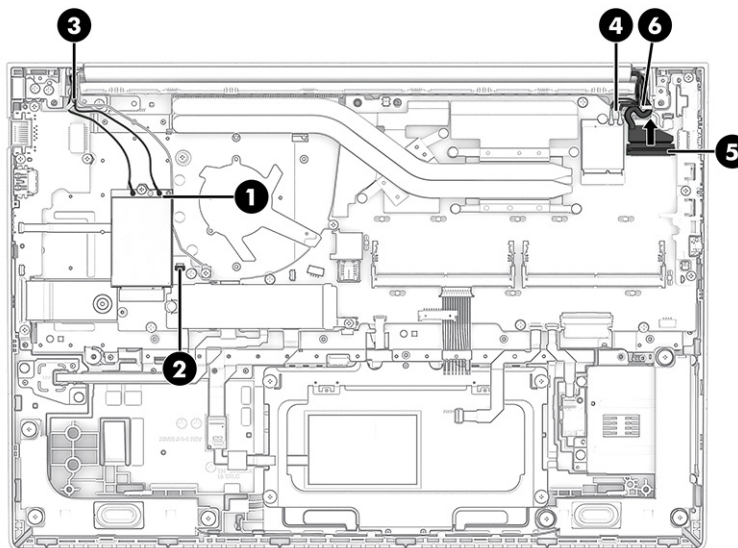

7. Remove the seven Phillips M2.5 × 4.0 screws that secure the display assembly to the computer.

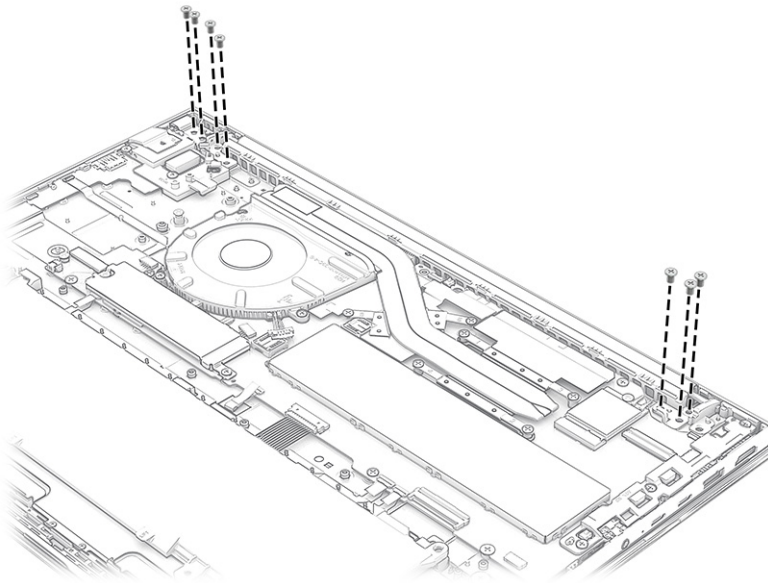

8. Open the display (1).
9. Rotate the hinges (2) up.
10. Separate the display assembly (3) from the computer.

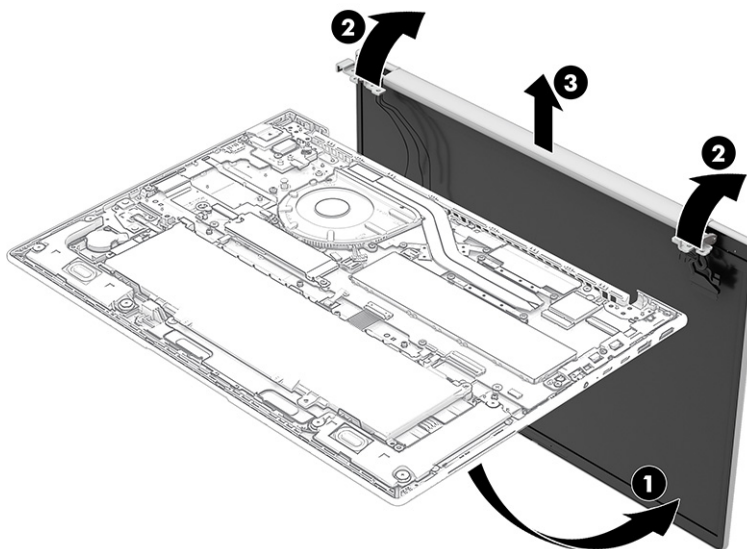

11. To remove the bezel:
  - a. Use a thin plastic tool (1), such as a case utility tool, to separate the outside edges of the display bezel from the display assembly.
  - b. In the following sequence, release the top (2), left and right (3), and bottom (4) edges of the display bezel from the display assembly.


- c. Remove the bezel **(5)** from the display.

 **NOTE:** To avoid damaging the panel, do not use a tool to release the inside of the bezel. You can use a tool only when you insert it from the outside of the top, left, and right sides of the bezel. Use your fingers to lift up on the bezel. Avoid pressing down on the panel during removal.

The display bezel is available as the following spare part numbers:

N96946-001: Models with an FHD camera

N96947-001: Models with an IR camera

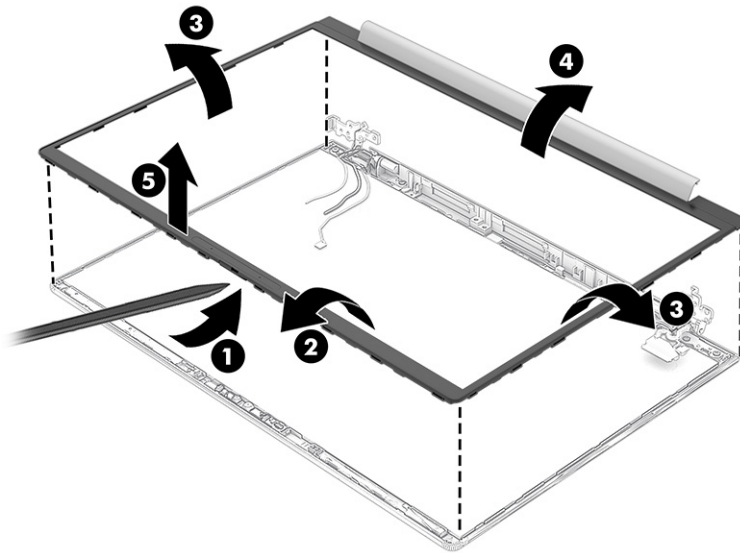

**12.** To remove the display panel:

- a. The display panel is secured to the display enclosure with tape that is installed under the sides of the panel. To remove the panel from all four corners **(1)**, use tweezers **(2)** to pull the end of the tape out from behind the panel. Use tweezers or your fingers to pull the tape **(3)** out from behind the display panel. You must pull the tape multiple times before it is completely removed.
- b. Rotate the display panel over and place it next to the display enclosure.

Display panels are available as the following spare part numbers:

P36274-001: WUXGA, 300 nit panel, touch screen


P36273-001: WUXGA, 300 nit panel

P36276-001: WUXGA, 400 nit panel


P36275-001: WQXGA, 400 nit panel

P44285-001: 2.5 K, 400 nit panel


Display panel stretchable tape is available in the Tape Kit as spare part number P01184-001.

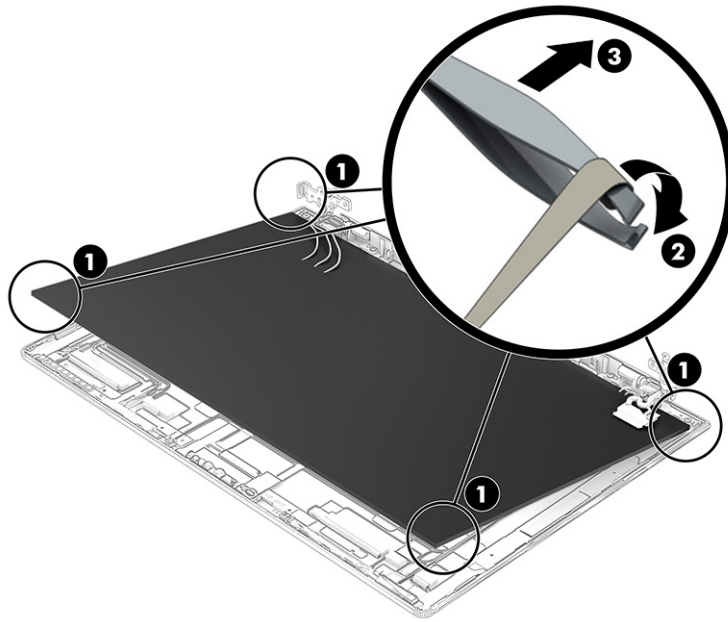

- c. Lift the tape (1) and the locking arm (2) from the connector on the display panel, and then disconnect the cable (3) from the panel.

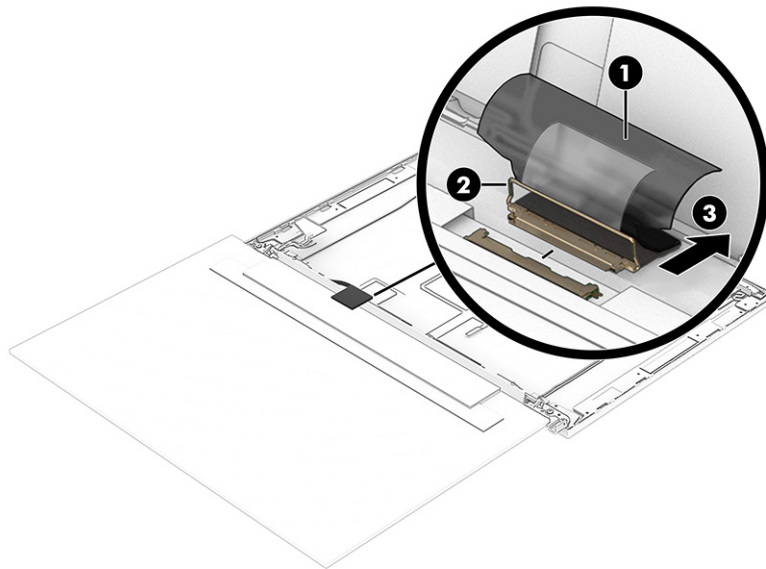


- d. When installing a display panel, use the following illustration to determine tape installation locations on the inside of the display rear cover.

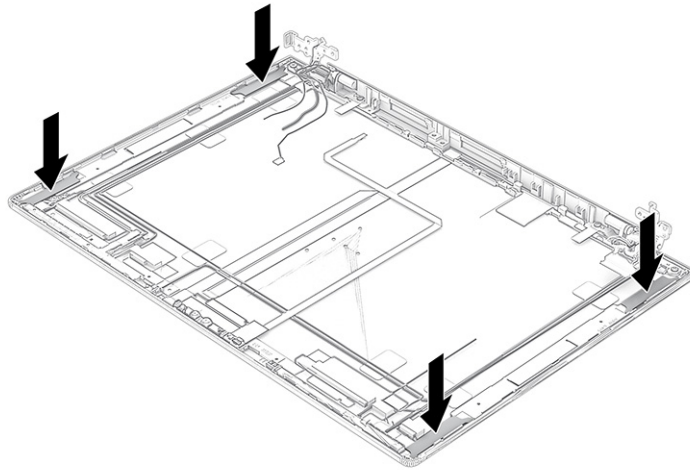

13. To remove an IR camera module:


- a. Disconnect the cable from the ZIF connector (1) on the module. Starting on the left side of the module, use a tool (2) to release the module, and then remove the module (3). The IR camera module is available as spare part number P34546-001.

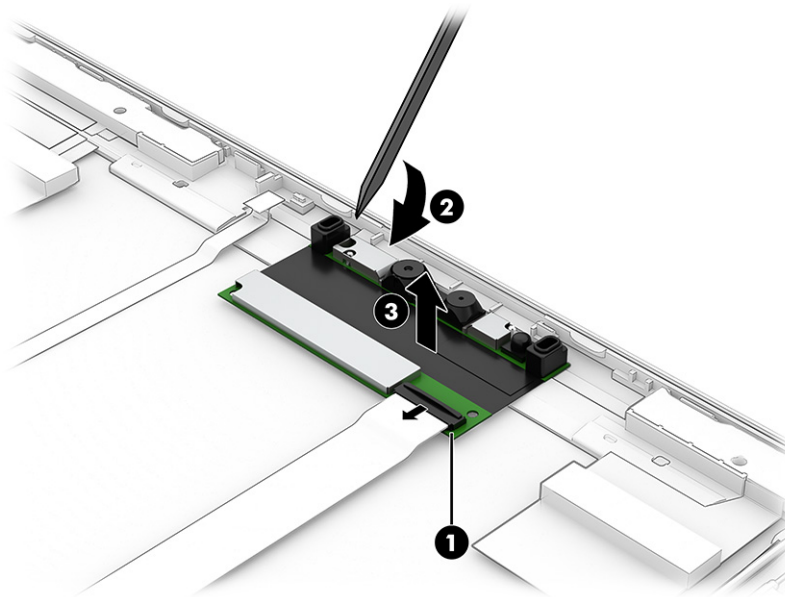

- b. IR cameras use different black protective tape depending on the panel. When installing a new IR camera, be sure to add new tape that matches the shape of the tape on the old camera.
14. To remove an FHD camera module:

- Starting on the left side of the module, use a tool **(1)** to release the module. Lift the module **(2)** up, and then disconnect the cable from the reverse ZIF connector **(3)** on the module. The FHD camera module is available as spare part number P34547-001.


 **NOTE:** During installation, note that the cable routes under the camera module before it connects to the module. Insert the bottom side of the module first when installing the camera.

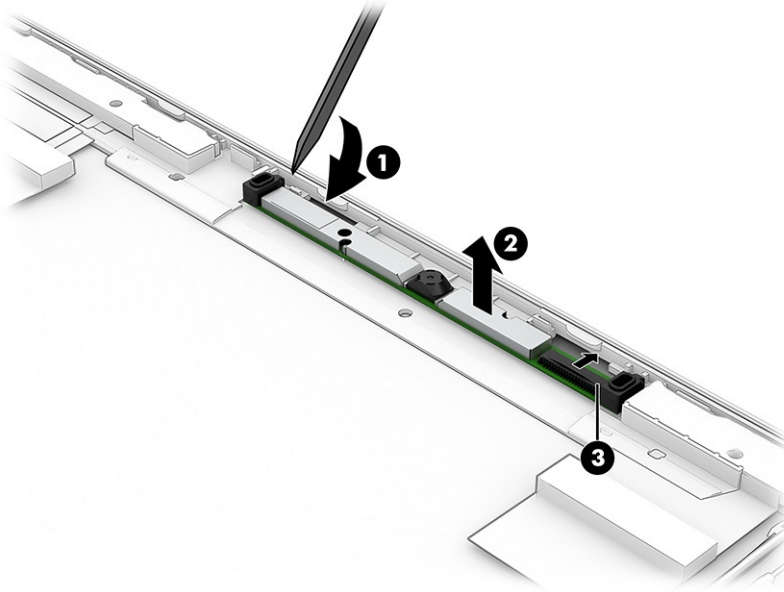

15. To remove the display panel/camera cable on models with an IR camera:
- a. Release the display panel cable from the retention clips **(1)** and routing channel built into the bottom edge of the display back cover.
  - b. Carefully detach the camera module **(2)** and the cable **(3)** from the display back cover. The camera module and cable are attached with double-sided adhesive.


 **NOTE:** The following illustration shows the IR camera module.

The display panel/camera cable is available as spare part number P35298-001.

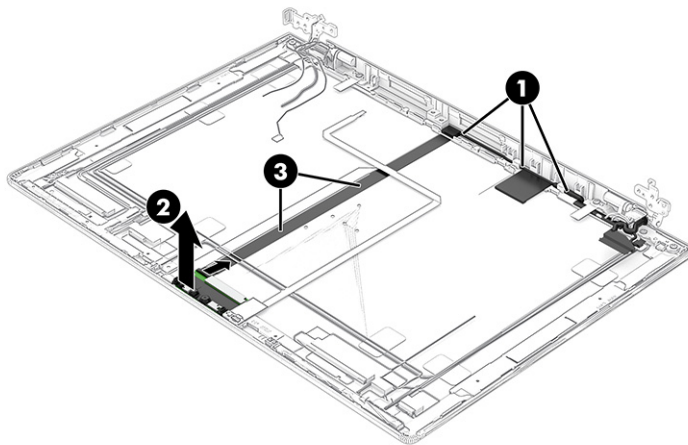

- c. Disconnect the cable from the camera module.
- 16. To remove the wireless antennas and cables:
  - a. Release the adhesive tabs **(1)** that secure the wireless antenna cables to the display back cover.
  - b. Detach the wireless antennas **(2)** from the display back cover. The antennas are attached with double-sided adhesive.

The wireless antennas and cables, including both WLAN and WWAN antennas, are available as spare part number P04392-001.

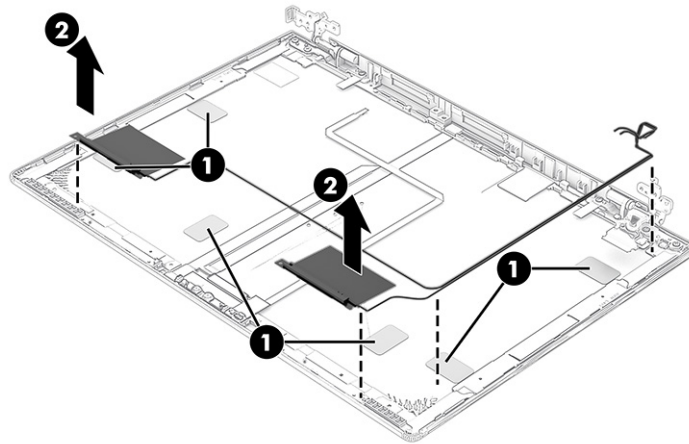


- 17. To remove the hinges from the display enclosure:



**NOTE:** You do not have to remove the display panel to remove the hinges.

- a. Remove any cables that route around the hinges.
- b. Remove the three Phillips M2.0 × 2.0 screws **(1)** from each hinge.
- c. Remove the hinges **(2)** from the display.

The hinges are available as spare part number N96466-001.

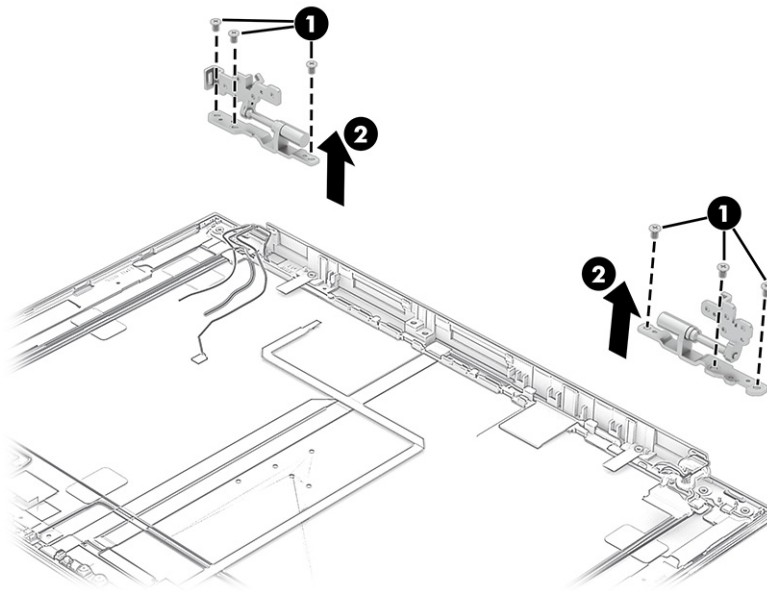

To reassemble and replace the display assembly, reverse these procedures.

## Top cover with keyboard

The top cover with keyboard remains after removing all other spare parts from the computer. In this section, the first table provides the main spare part number for the top covers with keyboards. The second table provides the country codes.

**Table 6-8 Top cover with keyboard description and part number**

| Description                      | Spare part number |
|----------------------------------|-------------------|
| Top cover with keyboard, backlit | P38809-xx1        |

**Table 6-9 Spare part country codes**

| For use in country or region | Spare part number | For use in country or region | Spare part number | For use in country or region | Spare part number |
|------------------------------|-------------------|------------------------------|-------------------|------------------------------|-------------------|
| Belgium                      | -A41              | Hungary                      | -211              | Saudi Arabia                 | -171              |
| Brazil                       | -201              | Iceland                      | -DD1              | Slovenia                     | -BA1              |
| Bulgaria                     | -261              | India                        | -D61              | South Korea                  | -AD1              |
| Chile                        | -161              | Israel                       | -BB1              | Spain                        | -071              |
| Czech Republic/Slovakia      | -FL1              | Italy                        | -061              | Switzerland                  | -BG1              |
| Denmark                      | -081              | Japan                        | -291              | Taiwan                       | -AB1              |
| Denmark, Finland, and Norway | -DH1              | The Netherlands              | -B31              | Thailand                     | -281              |
| French Canada                | -DB1              | Northern Africa              | -FP1              | Turkey                       | -141              |
| Finland/Sweden               | -B71              | Norway                       | -091              | Turkey-F                     | -541              |
| France                       | -051              | Portugal                     | -131              | Ukraine                      | -BD1              |

**Table 6-9 Spare part country codes (continued)**

| For use in country or region | Spare part number | For use in country or region | Spare part number | For use in country or region | Spare part number |
|------------------------------|-------------------|------------------------------|-------------------|------------------------------|-------------------|
| Germany                      | -041              | Romania                      | -271              | United Kingdom               | -031              |
| Greece                       | -151              | Russia                       | -251              | United States                | -001              |

---

## 7 Backing up, restoring, and recovering

You can use Windows tools or HP software to back up your information, create a restore point, reset your computer, create recovery media, or restore your computer to its factory state. Performing these standard procedures can return your computer to a working state faster.



**IMPORTANT:** If you are performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.



**IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

---

### Backing up information and creating recovery media

These methods of creating recovery media and backups are available on select products only.

#### Using Windows tools for backing up

HP recommends that you back up your information immediately after initial setup. You can do this task either using Windows Backup locally with an external USB flash drive or using online tools.



**NOTE:** If computer storage is 32 GB or less, Microsoft System Restore is disabled by default.

---

#### Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive (select products only)

You can use the HP Cloud Recovery Download Tool to create an HP Recovery bootable USB flash drive.

For details:

- Go to <http://www.hp.com>, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have and follow the on-screen instructions.



**NOTE:** In select countries, if you cannot create the HP Recovery USB flash drive yourself, contact support. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.



**IMPORTANT:** HP recommends that you follow the [Restoring and recovery methods on page 73](#) to restore your computer before you obtain and use the HP USB flash drive. Using a recent backup can return your machine to a working state sooner than using the HP USB flash drive. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

---

### Restoring and recovering your system

You have several tools available to recover your system both within and outside of Windows if the desktop cannot load.

HP recommends that you attempt to restore your system using the [Restoring and recovery methods on page 73](#).

## Creating a system restore

System Restore is available in Windows. The System Restore software can automatically or manually create restore points, or snapshots, of the system files and settings on the computer at a particular point.

When you use System Restore, it returns your computer to its state at the time you made the restore point. Your personal files and documents should not be affected.

## Restoring and recovery methods

After you run the first method, test to see whether the issue still exists before you proceed to the next method, which might now be unnecessary.

1. Run a Microsoft System Restore.
2. Run Reset this PC.



**NOTE:** The options **Remove everything** and then **Fully clean the drive** can take several hours to complete and leave no information on your computer. It is the safest way to reset your computer before you recycle it.

3. Recover using the HP Recovery USB flash drive. For more information, see [Recovering using the HP Recovery USB flash drive on page 73](#).

For more information about the first two methods, see the Get Help app:

- Select the **Start** button, select **All apps**, select the **Get Help** app, and then enter the task you want to perform.



**NOTE:** You must be connected to the internet to access the Get Help app.

## Recovering using the HP Recovery USB flash drive

You can use the HP Recovery USB flash drive to recover the operating system and drivers that were installed at the factory. On select products, you can create recovery media on a bootable USB flash drive using the HP Cloud Recovery Download Tool.

For details, see [Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive \(select products only\) on page 72](#).



**NOTE:** In select countries, if you cannot create the HP Recovery USB flash drive yourself, contact support. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

To recover your system:

- Insert the HP Recovery USB flash drive, and then restart the computer.



**NOTE:** HP recommends that you follow the [Restoring and recovery methods on page 73](#) to restore your computer before you obtain and use the HP USB flash drive. Using a recent backup can return your machine to a working state sooner than using the HP USB flash drive. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

## Changing the computer boot order

If your computer does not restart using the HP Recovery USB flash drive, you can change the computer boot order, which is the order of devices listed in BIOS for startup information.



**IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

To change the boot order:

1. Insert the HP Recovery USB flash drive.
2. Access the system **Startup** menu.
  - For computers or tablets with keyboards attached, turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.
  - For tablets without keyboards, turn on or restart the tablet, and then quickly press and hold one of the following buttons:
    - Volume up
    - Volume down

Then select **f9**.
3. Select the USB flash drive to boot from, and then follow the on-screen instructions.

## Using HP Sure Recover (select products only)

Select computer models are configured with HP Sure Recover, a PC operating system (OS) recovery solution built into the hardware and software. HP Sure Recover can fully restore the HP OS image without installed recovery software.

Using HP Sure Recover, an administrator or user can restore the system and install:

- Latest version of the operating system
- Platform-specific device drivers
- Software applications, in the case of a custom image

To access the latest documentation for HP Sure Recover, go to <http://www.hp.com/support>. Follow the on-screen instructions to find your product and locate your documentation.

---

## 8 Computer Setup (BIOS), TPM, and HP Sure Start

HP provides several tools to help set up and protect your computer.

### Using Computer Setup

Computer Setup, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as hard drives, display, keyboard, mouse, and printer). Computer Setup includes settings for types of devices installed, the startup sequence of the computer, and amount of system and extended memory.

---

 **NOTE:** Use extreme care when making changes in Computer Setup. Errors can prevent the computer from operating properly.

---

To start Computer Setup, turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.

### Navigating and selecting in Computer Setup

You can navigate and select in Computer Setup using one or more methods.

- To select a menu or a menu item, use the **tab** key and the keyboard arrow keys and then press **enter**, or use a pointing device to select the item.
- To scroll up and down, select the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key on the keyboard.
- To close open dialog boxes and return to the main Computer Setup screen, press **esc**, and then follow the on-screen instructions.

To exit Computer Setup, choose one of the following methods:

- To exit Computer Setup menus without saving your changes, select **Main**, select **Ignore Changes and Exit**, and then select **Yes**.

---

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

---

- To save your changes and exit Computer Setup menus, select **Main**, select **Save Changes and Exit**, and then select **Yes**.

---

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

---

Your changes go into effect when the computer restarts.

### Restoring factory settings in Computer Setup

To return all settings in Computer Setup to the values that were set at the factory, follow these steps.

---

 **NOTE:** Restoring defaults will not change the hard drive mode.

---

1. Start Computer Setup. See [Using Computer Setup on page 75](#).
2. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes**.

---

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press [enter](#).

 **NOTE:** On select products, the selections might display **Restore Defaults** instead of **Apply Factory Defaults and Exit**.

---

Your changes go into effect when the computer restarts.

---

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

---

## Updating the BIOS

Updated versions of the BIOS might be available on the HP website. Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named Readme.txt, which contains information regarding installing and troubleshooting the file.

### Determining the BIOS version

To decide whether you need to update Computer Setup (BIOS), first determine the BIOS version on your computer.

If you are already in Windows, you can access BIOS version information (also known as *ROM date* and *System BIOS*) by pressing [fn+esc](#) (select products only). Or you can use Computer Setup.

1. Start Computer Setup. See [Using Computer Setup on page 75](#).
2. Select **Main**, and then select **System Information**.
3. To exit Computer Setup menus without saving your changes, select **Main**, select **Ignore Changes and Exit**, and then select **Yes**.

---

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press [enter](#).

---

To check for later BIOS versions, see [Preparing for a BIOS update on page 76](#).

### Preparing for a BIOS update

Be sure to follow all prerequisites before downloading and installing a BIOS update.

 **IMPORTANT:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to the following types of reliable external power:

- The HP AC adapter provided with the computer (select products only)
  - A replacement AC adapter provided by HP
  - An AC adapter with the power rating specified on the product label
- 

Do not download or install a BIOS update while the computer is operating under these circumstances:

- Running on battery power

- Docked in an optional docking device
- Connected to an optional docking power source

During the download and installation, follow these instructions:

- Do not disconnect power on the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.

## Downloading a BIOS update

After you review the prerequisites, you can check for and download BIOS updates.

1. Perform one of these tasks:
  - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
  - Select the question mark icon (select products only) in the taskbar.
2. Select **Updates**, and then select **Check for updates and messages**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
  - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You might need this information to locate the update later, after it has been downloaded to your hard drive.
  - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.



**NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

## Installing a BIOS update

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete. If no instructions are displayed, follow these steps.

1. Select the **Search** icon in the taskbar, type `file` in the search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).  
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.



**NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

## Changing the boot order using the f9 prompt

To dynamically choose a boot device for the current startup sequence, follow these steps.

1. Access the Boot Device Options menu:
  - Turn on or restart the computer, and when the HP logo appears, press **f9** to enter the Boot Device Options menu.
2. Select a boot device, press **enter**, and then follow the on-screen instructions.

## TPM BIOS settings (select products only)

TPM provides additional security for your computer. You can modify the TPM settings in Computer Setup (BIOS).



**IMPORTANT:** Before enabling Trusted Platform Module (TPM) functionality on this system, you must ensure that your intended use of TPM complies with relevant local laws, regulations and policies, and approvals or licenses must be obtained if applicable. For any compliance issues arising from your operation or usage of TPM that violates the previously mentioned requirement, you shall bear all the liabilities wholly and solely. HP will not be responsible for any related liabilities.



**NOTE:** If you change the TPM setting to Hidden, TPM is not visible in the operating system.

To access TPM settings in Computer Setup:

1. Start Computer Setup. See [Using Computer Setup on page 75](#).
2. Select **Security**, select **TPM Embedded Security**, and then follow the on-screen instructions.

## Using HP Sure Start (select products only)

Select computer models are configured with HP Sure Start, a technology that monitors the computer's BIOS for attacks or corruption. If the BIOS becomes corrupted or is attacked, HP Sure Start automatically restores the BIOS to its previously safe state, without user intervention.

HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. Advanced users can customize the default configuration.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

---

## 9 Using HP PC Hardware Diagnostics

You can use the HP PC Hardware Diagnostics utility to determine whether your computer hardware is running properly. The three versions are HP PC Hardware Diagnostics Windows, HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface), and (for select products only) Remote HP PC Hardware Diagnostics UEFI, a firmware feature.

### Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 80](#).

### Using an HP PC Hardware Diagnostics Windows hardware failure ID code

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit failure ID code is generated for select component tests. For interactive tests, such as keyboard, mouse, or audio and video palette, you must perform troubleshooting steps before you can receive a failure ID.

You have several options after you receive a failure ID:

- Select **Next** to open the Event Automation Service (EAS) page, where you can log the case.
- Scan the QR code with your mobile device, which takes you to the EAS page, where you can log the case.
- Select the box next to the 24-digit failure ID to copy your failure code and send it to support.

### Accessing HP PC Hardware Diagnostics Windows

After HP PC Hardware Diagnostics Windows is installed, you can access it from HP Support Assistant or the Start menu.

#### Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Support Assistant:

1. Complete one of the following tasks:
  - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
  - Select the question mark icon in the taskbar.
2. Select **Fixes & Diagnostics**.

3. Select **Run hardware diagnostics**, and then select **Launch**.
4. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



---

**NOTE:** To stop a diagnostic test, select **Cancel**.

---

## Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from the Start menu:

1. Select the **Start** button, and then select **All apps**.
2. Select **HP PC Hardware Diagnostics Windows**.
3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



---

**NOTE:** To stop a diagnostic test, select **Cancel**.

---

## Downloading HP PC Hardware Diagnostics Windows

The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only. You must use a Windows computer to download this tool because only .exe files are provided.

### Downloading the latest HP PC Hardware Diagnostics Windows version from HP

To download HP PC Hardware Diagnostics Windows from HP, follow these steps:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Diagnose PC Hardware issues in Windows**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

### Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store

You can download the HP PC Hardware Diagnostics Windows from the Microsoft Store:

1. Select the Microsoft Store app on your desktop or select the **Search** icon in the taskbar, and then type `Microsoft Store` in the search box.
2. Type `HP PC Hardware Diagnostics Windows` in the **Microsoft Store** search box.
3. Follow the on-screen directions.

The tool downloads to the selected location.

## Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

You can download HP PC Hardware Diagnostics Windows by product name or number.



**NOTE:** For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.

The tool downloads to the selected location.

## Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

## Using HP PC Hardware Diagnostics UEFI

HP PC Hardware Diagnostics Unified Extensible Firmware Interface (UEFI) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.



**NOTE:** For some products, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 82](#).

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

## Using an HP PC Hardware Diagnostics UEFI hardware failure ID code

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit failure ID code is generated.

For assistance in solving the problem, complete one of these tasks:

- Select **Contact HP**, accept the HP privacy disclaimer, and then use a mobile device to scan the failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your failure ID and product number automatically filled in. Follow the on-screen instructions.
- Contact support, and provide the failure ID code.

## Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow this procedure.

1. Turn on or restart the computer, and quickly press **esc**.
2. Press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive



**NOTE:** To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 83](#).

- b. Hard drive

- c. BIOS

3. When the diagnostic tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

## Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only)

This section describes how to start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software.



**NOTE:** You must disable fast boot to access HP PC Hardware Diagnostics UEFI from the HP System Information application.

To disable fast boot:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Boot Options**.
3. Clear **Fast Boot**.
4. Select **Save Changes and Exit**, and then select **Yes**.

To start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software, follow this procedure:

1. From the **Start** menu, open the HP System Information Application or press **fn+esc**.
2. In HP System Information screen, select **Run System Diagnostics**, select **Yes** to run the application, and then select **Restart**.



**IMPORTANT:** To prevent loss of data, save your work in all open apps before restarting your computer.



**NOTE:** When the restart is complete, the computer opens the HP PC Hardware Diagnostics UEFI Application. Proceed with the troubleshooting tests.

## Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in some situations.

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.

- The hard drive is damaged.



**NOTE:** The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

## Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive, follow these steps:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Diagnose PC Hardware Issues outside of the OS**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

## Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

You can download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive.



**NOTE:** For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

## Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then run the diagnostics on your computer, and it might upload results to a preconfigured server.

For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, select **Diagnose Other Potential Issues**, scroll down to **Remote PC Hardware Diagnostics UEFI**, and then select **Learn More**.

## Downloading Remote HP PC Hardware Diagnostics UEFI

Remote HP PC Hardware Diagnostics UEFI is also available as a SoftPaq that you can download to a server.

## Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

You can download the latest Remote HP PC Hardware Diagnostics UEFI version to a USB flash drive.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.

2. Select **Diagnose PC Hardware Issues outside of the OS**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

## Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

You can download Remote HP PC Hardware Diagnostics UEFI by product name or number.



**NOTE:** For some products, you might have to download the software by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

## Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform several customizations.

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics UEFI**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage, such as a hard drive or USB flash drive, to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **F10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.
3. Make your customization selections.
4. Select **Main**, then select **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

# 10 Specifications

This chapter provides specifications for your computer system.

## Computer specifications

This section provides specifications for your computer. When you travel with your computer, the computer dimensions and weights, as well as input power ratings and operating specifications, provide helpful information.

**Table 10-1** Computer specifications

|                                          | Metric                    | U.S.                |
|------------------------------------------|---------------------------|---------------------|
| <b>Dimensions</b>                        |                           |                     |
| Width                                    | 359.4 mm                  | 14.15 in            |
| Depth                                    | 251.0 mm                  | 9.88 in             |
| Height (front)                           | 10.9 mm                   | 0.43 in             |
| Height (rear)                            | 17.0 mm                   | 0.67 in             |
| Height (maximum, plastic)                | 19.9 mm                   | 0.78 in             |
| Height (maximum, metal)                  | 20.9 mm                   | 0.82 in             |
| <b>Weight</b> (with 56 Whr battery)      | 1.75 kg                   | 3.86 lbs            |
| <b>Input power</b>                       |                           |                     |
| Operating voltage and current            | 19.5 V DC @ 2.31 A – 45 W |                     |
|                                          | 19.5 V DC @ 3.33 A – 65 W |                     |
| <b>Temperature</b>                       |                           |                     |
| Operating                                | 5°C to 35°C               | 41°F to 95°F        |
| Nonoperating                             | -20°C to 60°C             | -4°F to 140°F       |
| <b>Relative humidity</b> (noncondensing) |                           |                     |
| Operating                                | 10% to 90%                |                     |
| Nonoperating                             | 5% to 95%                 |                     |
| <b>Maximum altitude</b> (unpressurized)  |                           |                     |
| Operating                                | -15 m to 3,048 m          | -50 ft to 10,000 ft |
| Nonoperating                             | -15 m to 12,192 m         | -50 ft to 40,000 ft |



**NOTE:** Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.

## Display specifications

This section provides specifications for your display.

**Table 10-2** Display specifications

|                         | Metric                                     | U.S.    |
|-------------------------|--------------------------------------------|---------|
| Active diagonal size    | 40.6 cm                                    | 16.0 in |
| Resolution              | 2560 × 1600 (2.5 K)<br>1920 × 1200 (WUXGA) |         |
| Surface treatment       | Antiglare                                  |         |
| Brightness              | 300 nits<br>400 nits                       |         |
| Viewing angle           | UWVA                                       |         |
| Backlight               | LED<br>WLED                                |         |
| Display panel interface | eDP                                        |         |

## Solid-state drive specifications

This section provides specifications for your solid-state drives.

**Table 10-3** Solid-state drive specifications

|                                   | 256 GB*                            | 512 GB*            | 1 TB*              |
|-----------------------------------|------------------------------------|--------------------|--------------------|
| <b>Dimensions</b>                 |                                    |                    |                    |
| Height                            | 1.0 mm                             | 1.0 mm             | 1.0 mm             |
| Length                            | 50.8 mm                            | 50.8 mm            | 50.8 mm            |
| Width                             | 28.9 mm                            | 28.9 mm            | 28.9 mm            |
| Weight                            | < 10 g                             | < 10 g             | < 10 g             |
| <b>Interface type</b>             | PCIe                               | PCIe               | PCIe               |
| Ready time, maximum (to not busy) | 1.0 ms                             | < 1.0 ms           | 1.0 ms             |
| Access times, logical             | 0.1 ms                             | 0.1 ms             | 0.1 ms             |
| <b>Transfer rate</b>              |                                    |                    |                    |
| Sequential read                   | up to 2150 MBps                    | up to 2150 MBps    | up to 2150 MBps    |
| Random read                       | Up to 300,000 IOPs                 | Up to 300,000 IOPs | Up to 300,000 IOPs |
| Sequential write                  | up to 1550 MBps                    | up to 1550 MBps    | up to 1550 MBps    |
| Random write                      | Up to 100,000 IOPs                 | Up to 100,000 IOPs | Up to 100,000 IOPs |
| <b>Total logical sectors</b>      | 468,883,296                        | 1,000,215,216      | 1,500,336,388      |
| <b>Operating temperature</b>      | <b>0°C to 70°C (32°F to 158°F)</b> |                    |                    |

\*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications might differ slightly.



---

**NOTE:** Certain restrictions and exclusions apply. Contact support for details.

---

---

# 11 Statement of memory volatility

For general information regarding nonvolatile memory in HP business computers, and to restore nonvolatile memory that can contain personal data after the system has been turned off and the hard drive has been removed, use these instructions.

HP business computer products that use Intel®-based or AMD®-based system boards contain volatile DDR memory. The amount of nonvolatile memory present in the system depends upon the system configuration. Intel-based and AMD-based system boards contain nonvolatile memory subcomponents as originally shipped from HP, with the following assumptions:

- No subsequent modifications were made to the system.
- No applications, features, or functionality were added to or installed on the system.

Following system shutdown and removal of all power sources from an HP business computer system, personal data can remain on volatile system memory (DIMMs) for a finite period of time and also remains in nonvolatile memory. Use the following steps to remove personal data from the computer, including the nonvolatile memory found in Intel-based and AMD-based system boards.



**NOTE:** If your tablet has a keyboard base, connect to the keyboard base before beginning steps in this chapter.

---

## Current BIOS steps

Use these instructions to restore nonvolatile memory.

1. Follow these steps to restore the nonvolatile memory that can contain personal data. Restoring or reprogramming nonvolatile memory that does not store personal data is neither necessary nor recommended.

- a. Turn on or restart the computer, and then quickly press **esc**.



**NOTE:** If the system has a BIOS administrator password, type the password at the prompt.

---

- b. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes** to load defaults. The computer restarts.
- c. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



**NOTE:** If the system has a BIOS administrator password, type the password at the prompt.

---

- d. Select the **Security** menu, select **Restore Security Settings to Factory Defaults**, and then select **Yes** to restore security level defaults. The computer restarts.
- e. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



**NOTE:** If the system has a BIOS administrator password, type the password at the prompt.

---

- f. If an asset or ownership tag is set, select the **Security** menu and scroll down to the **Utilities** menu. Select **System IDs**, and then select **Asset Tracking Number**. Clear the tag, and then make the selection to return to the prior menu.
- g. If a DriveLock password is set, select the **Security** menu, and scroll down to **Hard Drive Utilities** under the **Utilities** menu. Select **Hard Drive Utilities**, select **DriveLock**, and then clear the check box for **DriveLock password on restart**. Select **OK** to proceed.
- h. Select the **Main** menu, and then select **Reset BIOS Security to factory default**. Select **Yes** at the warning message. The computer restarts.
- i. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



**NOTE:** If the system has a BIOS administrator password, type the password at the prompt.

- j. Select the **Main** menu, select **Apply Factory Defaults and Exit**, select **Yes** to save changes and exit, and then select **Shutdown**.
  - k. Restart the system. If the system has a TPM, fingerprint reader, or both, one or two prompts will appear—one to clear the TPM and the other to Reset Fingerprint Sensor. Press or tap **f1** to accept or **f2** to reject.
  - l. Remove all power and system batteries for at least 24 hours.
2. Complete one of the following tasks:
- Remove and retain the storage drive.
  - Clear the drive contents by using a third-party utility designed to erase data from an SSD.
  - Clear the contents of the drive by using the following BIOS Setup Secure Erase command option steps:



**NOTE:** If you clear data using Secure Erase, you cannot recover it.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select the **Security** menu and scroll down to the **esc** menu.
- c. Select **Hard Drive Utilities**.
- d. Finish by completing one of these tasks:
  - Under **Utilities**, select **Secure Erase**, select the hard drive storing the data you want to clear, and then follow the on-screen instructions to continue.
  - Clear the contents of the drive using the following Disk Sanitizer commands steps:
    - i. Turn on or restart the computer, and then quickly press **esc**.
    - ii. Select the **Security** menu and scroll down to the **Utilities** menu.
    - iii. Select **Hard Drive Utilities**.

- iv. Under **Utilities**, select **Disk Sanitizer**, select the hard drive with the data that you want to clear, and then follow the on-screen instructions to continue.



**NOTE:** The amount of time it takes for Disk Sanitizer to run can take several hours. Plug the computer into an AC outlet before starting.

## Nonvolatile memory usage

Use this table to troubleshoot nonvolatile memory usage.

**Table 11-1** Troubleshooting information for nonvolatile memory usage

| Description                                                                  | Volatility description                                                  | Storage user data | How to erase                                                                                                                                                                                                                                                                                                                                                                                                       |
|------------------------------------------------------------------------------|-------------------------------------------------------------------------|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Primary storage device, holds the OS, applications, and application settings | Nonvolatile, 8-256 GB of eMMC or NVMe SSD storage, removable            | Yes <sup>1</sup>  | See <a href="#">Current BIOS steps on page 88</a> for information about erasing the primary storage device.                                                                                                                                                                                                                                                                                                        |
| System memory (RAM), holds transient data during system operation            | Volatile, SODIMM socket. Removable (4 GB/8 GB/16 GB)                    | Yes               | Unplug unit from power.                                                                                                                                                                                                                                                                                                                                                                                            |
| Permanent system BIOS settings                                               | Nonvolatile; 16 KB; stored                                              | No <sup>2</sup>   | See <a href="#">Current BIOS steps on page 88</a> for information about clearing BIOS settings.                                                                                                                                                                                                                                                                                                                    |
| System boot ROM (BIOS)                                                       | Nonvolatile memory, 128 Mbit (16 MB) socketed, removable                | No                | Download the latest BIOS for your model from the HP website and follow the instructions to flash the BIOS that are on the website.                                                                                                                                                                                                                                                                                 |
| RTC (CMOS) RAM                                                               | Volatile memory, 256 bytes located in AMD embedded System on Chip (SoC) | No                | <b>Desktop computers with a CMOS button:</b><br><br>Unplug unit from main power, remove top cover and press the <b>Clear CMOS</b> button.<br><br><b>Notebook and desktop computers without a CMOS button:</b><br><br><ol style="list-style-type: none"><li>1. Press and hold power button for 12 seconds.</li><li>2. Press <a href="#">Windows key</a> + <a href="#">V</a>, and then press power button.</li></ol> |
| Keyboard/mouse (ROM)                                                         | Nonvolatile, 2 KB embedded in the super I/O controller (SIO2)           | Yes               | N/A                                                                                                                                                                                                                                                                                                                                                                                                                |
| Keyboard/mouse (RAM)                                                         | Volatile, 256 bytes embedded in the super I/O controller (SIO2)         | No                | Unplug unit from main power.                                                                                                                                                                                                                                                                                                                                                                                       |
| LOM EEPROM                                                                   | Nonvolatile, 2 MB embedded in LAN controller                            | No                | N/A                                                                                                                                                                                                                                                                                                                                                                                                                |
| TPM                                                                          | Nonvolatile; 51 KB ROM for firmware and 38 KB system parametric data    | No <sup>3</sup>   | See <a href="#">Current BIOS steps on page 88</a> for information about clearing TPM.                                                                                                                                                                                                                                                                                                                              |

<sup>1</sup> Under typical operation, the only user data stored on the primary storage device are preferences for device configuration and settings for connections. However, the administrator can configure the system to allow users to store data locally.

<sup>2</sup> The only user data potentially stored in BIOS Settings are the ownership and asset tags, administrator password, and startup password.

<sup>3</sup> The TPM might contain encrypted passwords or certificates generated from user or administrator input.

## Questions and answers

Use this section to answer your questions about nonvolatile memory.

### 1. How can the BIOS settings be restored (returned to factory settings)?

 **IMPORTANT:** The restore defaults feature does not securely erase any information on your hard drive. See question and answer 6 for steps to securely erase information.

The restore defaults feature does not reset the Custom Secure Boot keys. See question and answer 7 for information about resetting the keys.

- Turn on or restart the computer, and then quickly press [esc](#).
- Select **Main**, and then select **Apply Factory Defaults and Exit**.
- Follow the on-screen instructions.
- Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

### 2. What is a UEFI BIOS?

The Unified Extensible Firmware Interface (UEFI) BIOS is an industry-standard software interface between the platform firmware and an operating system (OS). It replaces the older legacy BIOS architecture.

The UEFI BIOS provides an interface to display the system information and configuration settings and to change the configuration of your computer before an OS is loaded. BIOS provides a secure runtime environment that supports a GUI. In this environment, you can use either a pointing device (touch screen, touchpad, pointing stick, or USB mouse) or the keyboard to navigate and make menu and configuration selections. The UEFI BIOS also contains basic system diagnostics.

In addition, the UEFI BIOS works to initialize the computer's hardware before loading and executing the OS; the runtime environment allows the loading and execution of software programs from storage devices to provide more functionality, such as advanced hardware diagnostics (with the ability to display more detailed system information) and advanced firmware management and recovery software.

### 3. Where is the UEFI BIOS located?

The UEFI BIOS is located on a flash memory chip. You must use a utility to write to the chip.

### 4. What kind of configuration data is stored on the DIMM Serial Presence Detect (SPD) memory module? How would this data be written?

The DIMM SPD memory contains information about the memory module, such as size, serial number, data width, speed and timing, voltage, and thermal information. This information is written by the module manufacturer and stored on an EEPROM. You cannot write to this EEPROM when the memory module is installed in a computer. Third-party tools do exist that can write to the EEPROM when the memory module is not installed in a computer. Various third-party tools are available to read SPD memory.

**5. What is meant by “Restore the nonvolatile memory found in Intel-based system boards”?**

This message relates to clearing the Real Time Clock (RTC) CMOS memory that contains computer configuration data.

**6. How can the BIOS security be reset to factory defaults and erase the data?**

---

 **IMPORTANT:** Resetting results in the loss of information.

These steps do not reset Custom Secure Boot Keys. See question and answer 7 for information about resetting the keys.

---

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select **Main**, and then select **Reset Security to Factory Defaults**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

**7. How can the Custom Secure Boot Keys be reset?**

Secure Boot is a feature to ensure that only authenticated code can start on a platform. If you enabled Secure Boot and created Custom Secure Boot Keys, disabling Secure Boot does not clear the keys. You must also select to clear the Custom Secure Boot Keys. Use the same Secure Boot access procedure that you used to create the Custom Secure Boot Keys, but select to clear or delete all Secure Boot Keys.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select the **Security** menu, select **Secure Boot Configuration**, and then follow the on-screen instructions.
- c. At the **Secure Boot Configuration** window, select **Secure Boot**, select **Clear Secure Boot Keys**, and then follow the on-screen instructions to continue.

## 12 Power cord set requirements

This chapter provides power cord requirements for countries and regions.

The wide-range input feature of the computer permits it to operate from any line voltage from 100 V AC to 120 V AC, or from 220 V AC to 240 V AC.

The three-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

### Requirements for all countries

These power cord requirements are applicable to all countries and regions.

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 V AC or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

### Requirements for specific countries and regions

To determine power cord requirements for specific countries and regions, use this table.

**Table 12-1** Power cord requirements for specific countries and regions

| Country/region | Accredited agency | Applicable note number |
|----------------|-------------------|------------------------|
| Argentina      | IRAM              | 1                      |
| Australia      | SAA               | 1                      |
| Austria        | OVE               | 1                      |
| Belgium        | CEBEC             | 1                      |
| Brazil         | ABNT              | 1                      |
| Canada         | CSA               | 2                      |
| Chile          | IMQ               | 1                      |
| Denmark        | DEMKO             | 1                      |
| Finland        | FIMKO             | 1                      |
| France         | UTE               | 1                      |

**Table 12-1** Power cord requirements for specific countries and regions (continued)

| Country/region                 | Accredited agency | Applicable note number |
|--------------------------------|-------------------|------------------------|
| Germany                        | VDE               | 1                      |
| India                          | BIS               | 1                      |
| Israel                         | SII               | 1                      |
| Italy                          | IMQ               | 1                      |
| Japan                          | JIS               | 3                      |
| Netherlands                    | KEMA              | 1                      |
| New Zealand                    | SANZ              | 1                      |
| Norway                         | NEMKO             | 1                      |
| The People's Republic of China | CCC               | 4                      |
| Saudi Arabia                   | SASO              | 7                      |
| Singapore                      | PSB               | 1                      |
| South Africa                   | SABS              | 1                      |
| South Korea                    | KTL               | 5                      |
| Sweden                         | SEMKO             | 1                      |
| Switzerland                    | SEV               | 1                      |
| Taiwan                         | BSMI              | 6                      |
| Thailand                       | TISI              | 1                      |
| United Kingdom                 | ASTA              | 1                      |
| United States                  | UL                | 2                      |

1. The flexible cord must be Type HO5VV-F, three-conductor, 0.75 mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, three-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V AC) or NEMA 6-15P (15 A, 250 V AC) configuration. CSA or C-UL mark. UL file number must be on each element.
3. The appliance coupler, flexible cord, and wall plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, three-conductor, 0.75 mm<sup>2</sup> or 1.25 mm<sup>2</sup> conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V AC) configuration.
4. The flexible cord must be Type RVV, three-conductor, 0.75 mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
5. The flexible cord must be Type HO5VV-F three-conductor, 0.75 mm<sup>2</sup> conductor size. KTL logo and individual approval number must be on each element. Approval number and logo must be printed on a flag label.
6. The flexible cord must be Type HVCTF three-conductor, 1.25 mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.

7. For 127 V AC, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V AC), with UL and CSA or C-UL marks. For 240 V AC, the flexible cord must be Type H05VV-F three-conductor, 0.75 mm<sup>2</sup> or 1.00 mm<sup>2</sup> conductor size, with plug BS 1363/A with BSI or ASTA marks.

---

## 13 Swelling or deformation of notebook battery

To protect your hardware from potential damage, HP recommends that if you are experiencing battery swelling, stop using the notebook until you can replace the battery.

You can contact HP to understand what battery replacement options are available. To learn more about Lithium-ion batteries and the factors that can accelerate battery swelling, see [https://support.hp.com/us-en/document/ish\\_6824662-6824706-16](https://support.hp.com/us-en/document/ish_6824662-6824706-16).

### Swollen notebook batteries

You might notice that your notebook battery has become somewhat deformed or swollen over time. In some cases, the battery swelling might be significant enough to impact other components of the system including the touchpad, keyboard, and chassis.

### Swollen battery is not a safety issue

A swollen battery does not present a safety issue. It is the result of the generation of gases per the normal degradation of the battery cell over time.

HP has worked closely with our battery cell suppliers and third-party industry experts to help minimize the potential for HP batteries to swell over time and to identify that swollen batteries are not a safety issue.

### Discontinue using a swollen battery

To protect your hardware from potential damage, HP recommends that, if you are experiencing battery swelling, you stop using the notebook until the battery can be replaced.

You can contact <https://www.hp.com/go/contacthp> to understand what battery replacement options are available.

### Replace a swollen battery

If a battery is under warranty, HP will replace the battery per the terms and conditions of the HP Worldwide Limited Warranty or applicable HP Care Packs.

For batteries no longer under warranty, contact HP to purchase a genuine HP replacement battery.

### Minimize battery swelling

Multiple factors can accelerate battery swelling.

To help mitigate battery swelling over time, you can use either HP Adaptive Battery Optimizer (consumer notebooks) or HP Battery Health Manager (commercial notebooks) settings to improve battery longevity and performance for various use scenarios.

## HP Adaptive Battery Optimizer (consumer notebooks)

HP Adaptive Battery Optimizer technology can help mitigate the factors that cause the battery to swell. It is available on select HP OMEN, HP Spectre, HP Pavilion, and HP ENVY notebook computers.

HP Adaptive Battery Optimizer has been available on select gaming notebooks since 2019 and select consumer notebooks since 2020. To learn more about enabling HP Adaptive Battery Optimizer on your HP notebook, see <https://support.hp.com/us-en/document/c06310986>.

## HP Battery Health Manager (commercial notebooks)

HP Battery Health Manager provides an easy-to-manage solution to help mitigate factors that cause the battery to swell. It is available on select HP ProBook and HP EliteBook notebook computers.

HP Battery Health Manager is available on select commercial notebooks manufactured since 2016. To learn more about HP Battery Health Manager, see [https://support.hp.com/us-en/document/ish\\_4449597-3519507-16](https://support.hp.com/us-en/document/ish_4449597-3519507-16).

---

## 14 Recycling

When a nonrechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

---

# Index

## A

- AC adapters, spare part numbers 23
- audio-out (headphone)/audio-in (microphone) combo jack, identifying 7
- audio, product description 2

## B

- backup, creating 72
- backups 72
- battery
  - illustrated 20
  - spare part number 20
- battery swelling 96
- BIOS
  - determining version 76
  - downloading an update 77
  - preparing for an update 76
  - updating 76
- Bluetooth label 16
- boot order
  - changing using the f9 prompt 78
- boot order, changing 74
- bottom cover
  - illustrated 21
  - removal 35
  - spare part number 21, 35
- buttons
  - power 13, 15

## C

- camera 8
  - identifying 8
- camera light, identifying 8
- camera privacy cover, identifying 8
- caps lock light, identifying 11
- caring for your computer 30
- cautions
  - electrostatic discharge 26, 27
- cleaning your computer 30
  - caring for wood veneer 32
  - disinfecting 31
  - HP Easy Clean 30
  - removing dirt and debris 30

- components
  - bottom 15
  - display 7
  - keyboard area 9
  - left side 5
  - rear 16
  - right side 5
- computer major components 19
- Computer Setup
  - navigating and selecting 75
  - restoring factory settings 75
  - starting 75
- computer specifications 85
- connector, power 6
- control zone 10

## D

- display
  - specifications 85, 86
- display assembly
  - subcomponents 21
- display back cover
  - illustrated 23
  - spare part number 23
- display bezel
  - illustrated 22
  - spare part number 22
- display cable
  - illustrated 23
  - spare part number 23
- display components 7
- display panel
  - illustrated 22
  - product description 1
  - spare part number 22

## E

- electrostatic discharge (ESD) 26, 27
  - preventing damage 26-28
- esc key, identifying 14

## F

- fan
  - illustrated 20
  - removal 55
  - spare part number 20, 55

- fingerprint reader
  - illustrated 20
  - spare part number 20
- fingerprint reader board
  - removal 54
  - spare part numbers 54
- fingerprint reader, identifying 13
- fn key, identifying 14
- fn lock light, identifying 11

## G

- graphics, product description 1
- grounding methods 26-28
- guidelines
  - packaging 26, 32
  - transporting 26, 32
  - workstation 26

## H

- hard drive
  - product description 2
  - specifications 85
- HDMI port, identifying 6
- heat sink
  - removal 58
  - spare part numbers 58
- hinge
  - illustrated 23
  - spare part number 23
- HP PC Hardware Diagnostics UEFI
  - downloading 82
  - failure ID code 81
  - HP Hotkey Support software 82
  - starting 81, 82
  - using 81
- HP PC Hardware Diagnostics Windows
  - accessing 79, 80
  - downloading 80
  - failure ID code 79
  - installing 81
  - using 79
- HP Recovery media
  - recovery 73
- HP Sure Recover 74
- HP Sure Start 88

## I

I/O board  
    illustrated 20  
    removal 56  
    spare part number 20, 56  
illustrated parts catalog 19  
integrated numeric keypad,  
    identifying 14  
internal microphones,  
    identifying 8

## J

jacks  
    audio-out (headphone)/audio-in  
        (microphone) combo 7  
    network 5  
    RJ-45 (network) 5

## K

keyboard  
    product description 3  
keypad  
    integrated numeric 14  
keys  
    esc 14  
    fn 14  
    num lk 14  
    Windows 14  
    Windows Copilot 14

## L

labels  
    Bluetooth 16  
    regulatory 16  
    serial number 16  
    service 16  
    wireless certification 16  
    WLAN 16  
left control zone, identifying 10  
left side components 5  
lights  
    camera 8  
    caps lock 11  
    fn lock 11  
    microphone mute 11  
    num lk 11  
    power 6, 11  
    privacy key 11  
    RJ-45 (network) 5  
lights, num lk 11  
low blue light mode 7

## M

memory  
    nonvolatile 88  
    volatile 88  
memory module  
    illustrated 21  
    product description 1  
    spare part number 21  
memory modules  
    removal 44  
    spare part numbers 44  
microphone  
    product description 2  
microphone mute light,  
    identifying 11  
model name 1

## N

network jack, identifying 5  
nonvolatile memory 88  
num lk light 11  
num lk light, identifying 11

## O

operating system, product  
    description 4

## P

packaging guidelines 26, 32  
Plastics Kit, spare part  
    number 24  
pointing device, product  
    description 3  
ports  
    HDMI 6  
    product description 3  
    USB SuperSpeed 5, 6  
    USB Type-C power connector  
        and port with HP Sleep and  
        Charge 6  
power button, identifying 13, 15  
power connector  
    identifying USB Type-C 6  
power cord  
    requirements for all  
        countries 93  
    requirements for specific  
        countries and regions 93  
    set requirements 93  
power lights 6, 11  
power requirements, product  
    description 3

primary storage  
    product description 2  
privacy key light 11  
processor  
    product description 1  
product description  
    audio 2  
    display panel 1  
    graphics 1  
    hard drive 2  
    keyboard 3  
    memory module 1  
    microphone 2  
    operating system 4  
    pointing device 3  
    ports 3  
    power requirements 3  
    primary storage 2  
    processors 1  
    product name 1  
    RJ-45 (network) jack 2  
    security 4  
    sensors 3  
    serviceability 4  
    solid-state drive 2  
    video 2  
    wireless 2  
product name 1  
product name and number,  
    computer 16

## R

recovery 72  
    discs 73  
    media 73  
    USB flash drive 73  
recovery media 72  
    creating using HP Cloud  
        Recovery Download  
        Tool 72  
    creating using Windows  
        tools 72  
regulatory information  
    regulatory label 16  
    wireless certification labels 16  
Remote HP PC Hardware  
    Diagnostics UEFI settings  
        customizing 84  
        using 83  
removal and replacement  
    procedures 35, 53  
    solid-state drive, M.2 2230 47  
    solid-state drive, M.2 2280 45

- removing personal data from volatile system memory 88
- restoring 72
- restoring and recovery methods 73
- right control zone, identifying 10
- right side components 5
- RJ-45 (network) jack, identifying 5
- RJ-45 (network) jack, product description 2
- RJ-45 (network) lights, identifying 5

## S

- security cable slot, identifying 5
- security, product description 4
- sensors
  - product description 3
- serial number, computer 16
- service labels, locating 16
- serviceability, product description 4
- setup utility
  - navigating and selecting 75
  - restoring factory settings 75
- SIM card slot, identifying 5
- slots
  - security cable 5
  - SIM card 5
- solid-state drive
  - illustrated 21
  - product description 2
  - spare part number 21
  - specifications 86
- solid-state drive, M.2 2230
  - removal and replacement 47
- solid-state drive, M.2 2280
  - removal and replacement 45
- spare part country codes 70
- speaker
  - illustrated 20
  - spare part number 20
- speakers
  - removal 53
  - spare part numbers 53
- speakers, identifying 15
- special keys, using 13
- specifications
  - computer 85
  - display 85, 86
  - hard drive 85
  - solid-state drive 86
- static electricity 26, 27
- support information 32

- Sure Start
  - using 78
- swelling or deformation of notebook battery 96
- system board
  - illustrated 20, 60
  - removal 60
  - spare part number 20, 60
  - spare part numbers 60
- system memory, removing personal data from volatile 88
- system restore 73
- system restore point, creating 72

## T

- top cover with keyboard
  - illustrated 20
  - spare part numbers 20, 70
- touchpad
  - illustrated 20
  - removal 57
  - settings 9
  - spare part number 20, 57
- touchpad zone, identifying 10
- TPM settings 78
- transporting guidelines 26, 32
- traveling with the computer 16

## U

- USB powered port, identifying 5, 6
- USB Type-C power connector and port with HP Sleep and Charge, identifying 6

## V

- vent, identifying 16
- video, product description 2

## W

- Windows
  - backup 72
  - recovery media 72
  - system restore point 72
- Windows Copilot key, identifying 14
- Windows key, identifying 14
- Windows tools, using 72
- wireless antennas
  - illustrated 23
  - spare part number 23
- wireless antennas, identifying 8
- wireless certification label 16
- wireless, product description 2
- WLAN antennas, identifying 8
- WLAN device 16
- WLAN label 16
- WLAN module
  - illustrated 21
  - removal 49
  - spare part number 21
  - spare part numbers 49
- workstation guidelines 26
- WWAN antennas, identifying 8
- WWAN module
  - removal 50
  - spare part numbers 50