



RAZER SOMA CHROMA

MASTER GUIDE

CONTENTS

1. WHAT'S INSIDE 2

2. LET’S GET YOU COVERED 3

3. WHAT’S NEEDED 4

4. GETTING STARTED 5

 
5. USING THE CHAIR 11

6. CONFIGURING YOUR RAZER SOMA CHROMA..... 14

7. SAFETY AND MAINTENANCE 28


8. LEGALESE..... 30

1. WHAT'S INSIDE

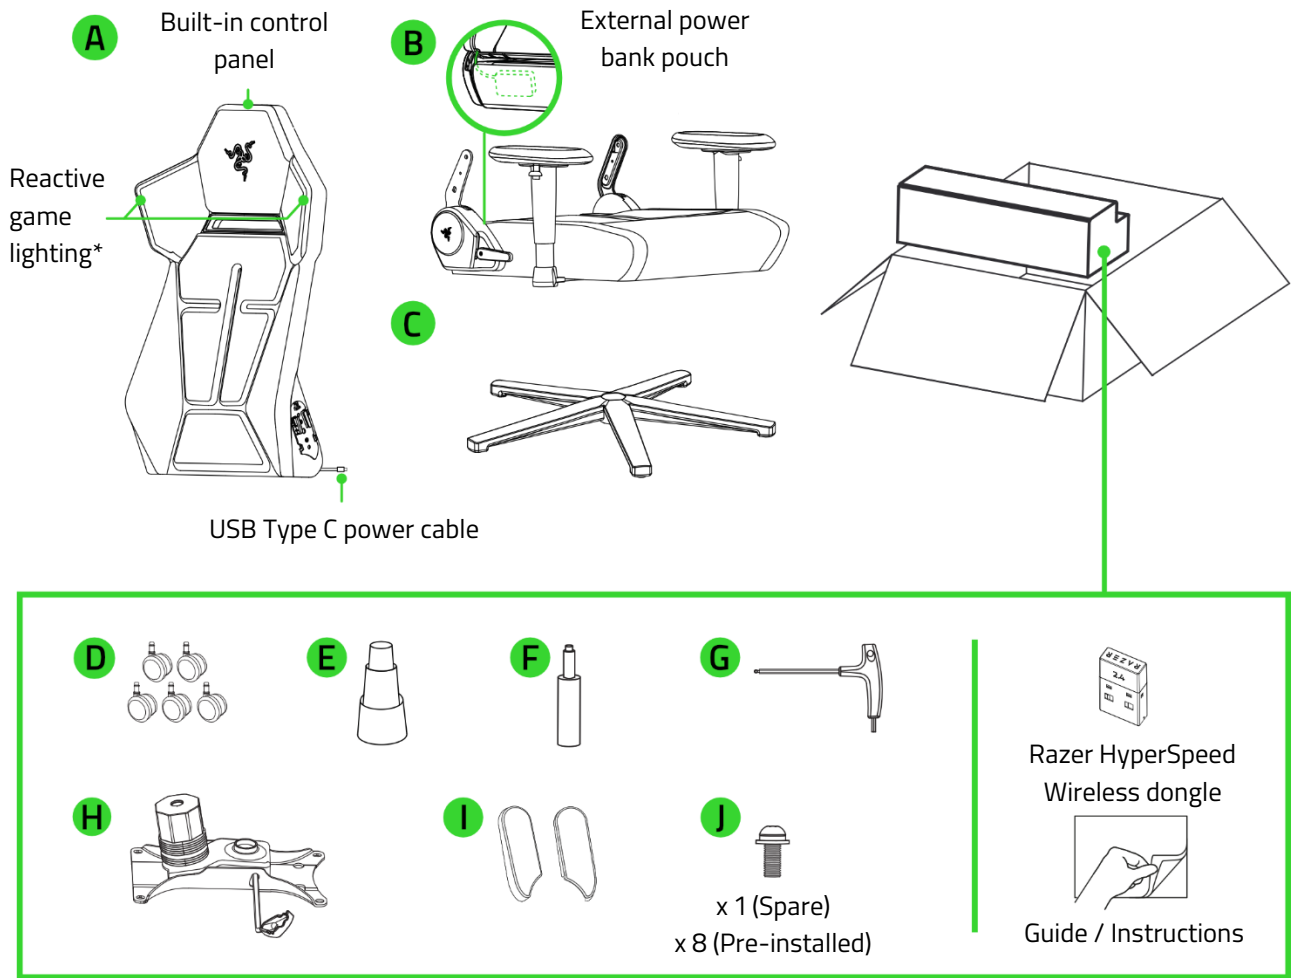

*Requires Razer Synapse for customization and game-reactive features.

 BUILT-IN CONTROL PANEL

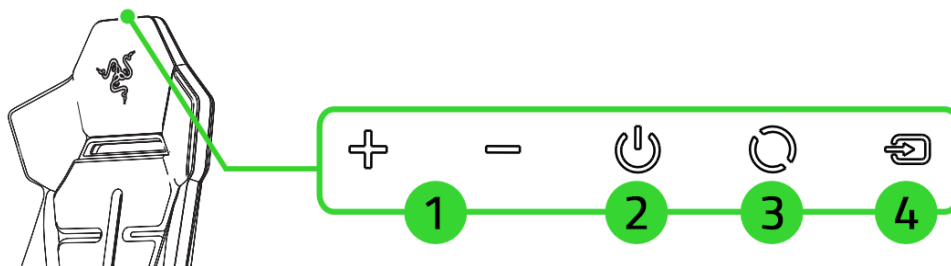

2. LET'S GET YOU COVERED

You've got a great product on your hands:



3-year warranty for mechanisms and moving parts (not including wear and tear).*



2-year warranty for electronic parts.

Now maximize its potential and score exclusive Razer benefits by registering at razerid.razer.com

Your product's serial number can be found here.



SCAN HERE



*2 years additional limited warranty under the extended warranty program.

razer.com/campaigns/razer-gaming-chair-extended-warranty

3. WHAT'S NEEDED

PRODUCT REQUIREMENTS

- USB Type C-enabled external power bank* to power the chair lighting
- USB Type A port or Bluetooth connectivity for lighting customization

RAZER SYNAPSE REQUIREMENTS

- Windows® 11
- Internet connection for software installation

 
 
 
 
 
 
**Power bank not included; also compatible with a 5W USB Type C power adapter (5V/1A) via a USB Type C extension cable (not included; sold separately).*

 
 
 
 
4. GETTING STARTED

ASSEMBLING THE CHAIR

CAUTION


Use the provided EPE foams as floor padding to protect your product during assembly.

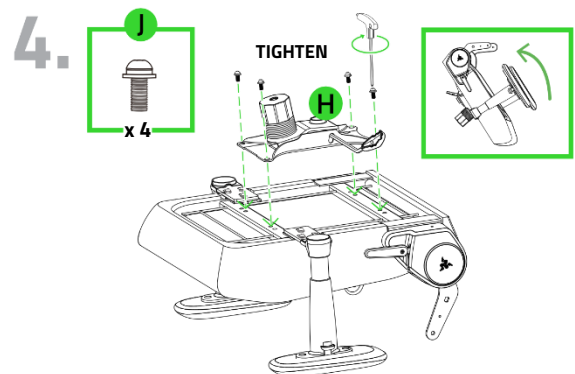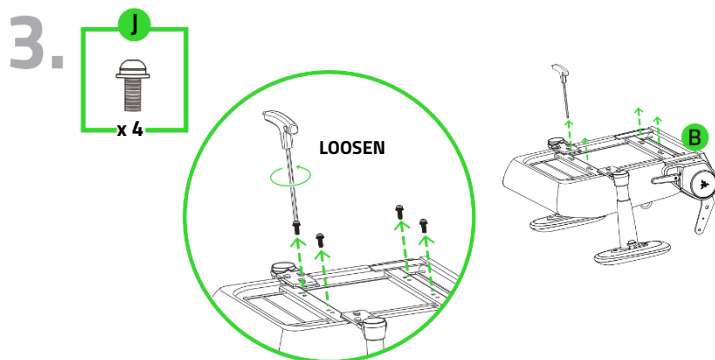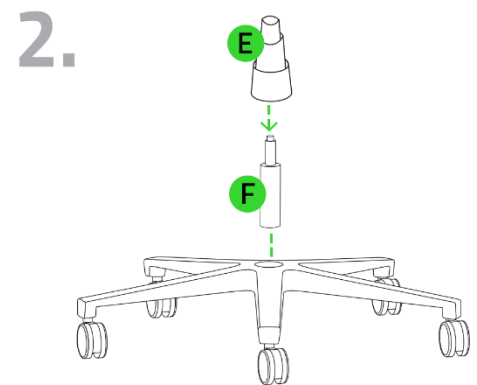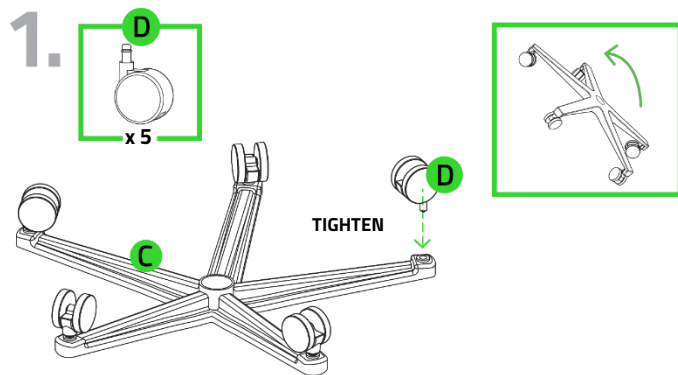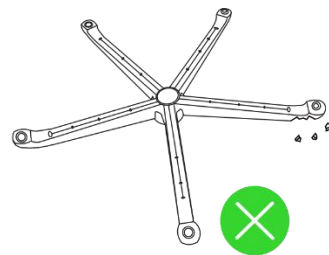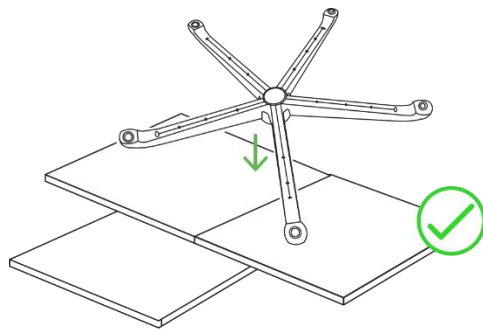

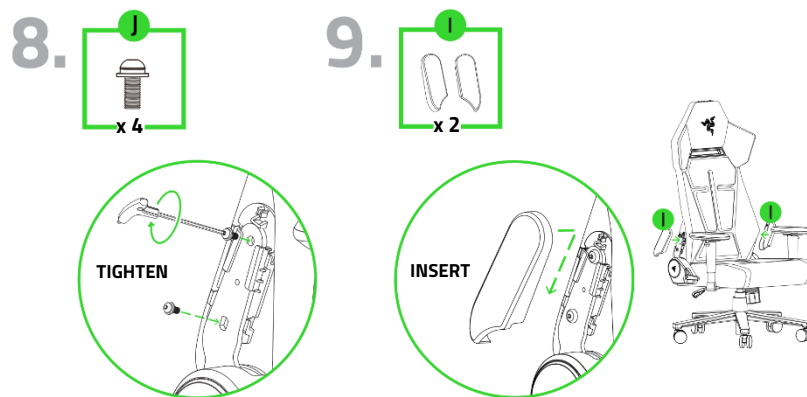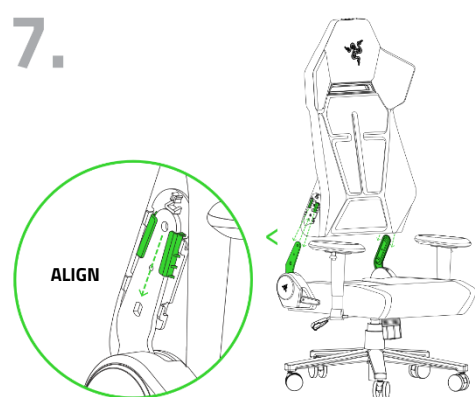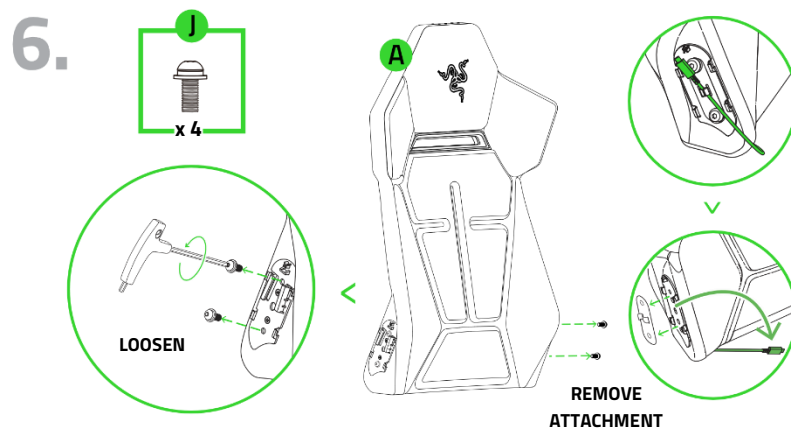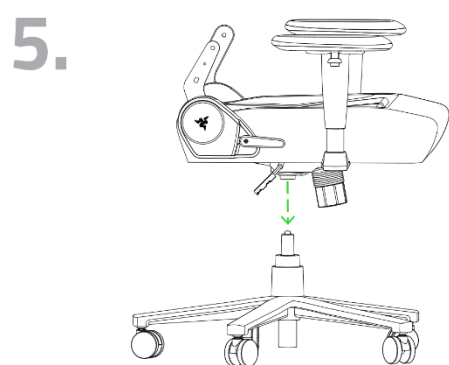


POWERING THE CHAIR LIGHTING

 A. Via external power bank

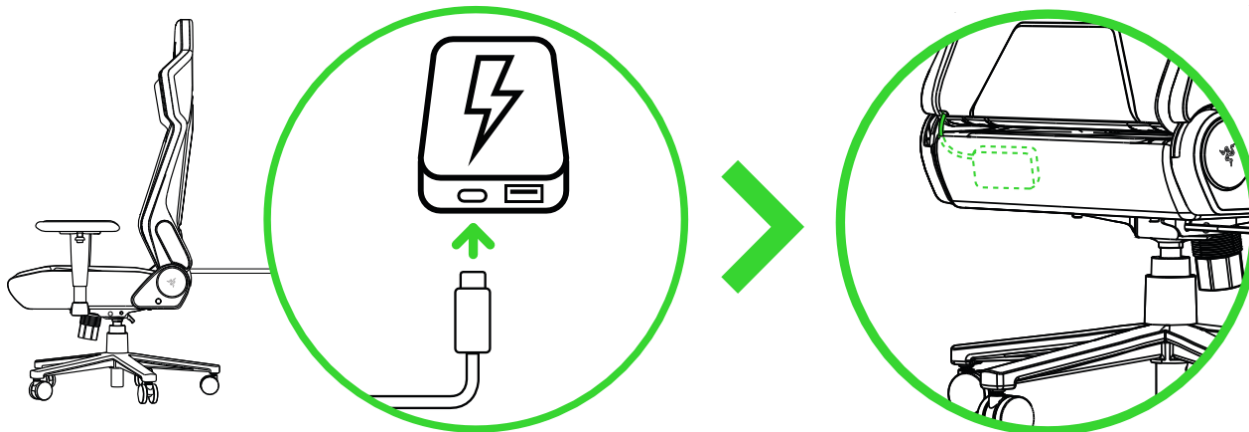

- i** Make sure the compatible external power bank (5V / 1A) is securely placed in the designated pouch and that the power cable is properly connected. Connect this cable only as described in this guide. Improper use or connection may result in damage.

 B. Via USB Type C power adapter

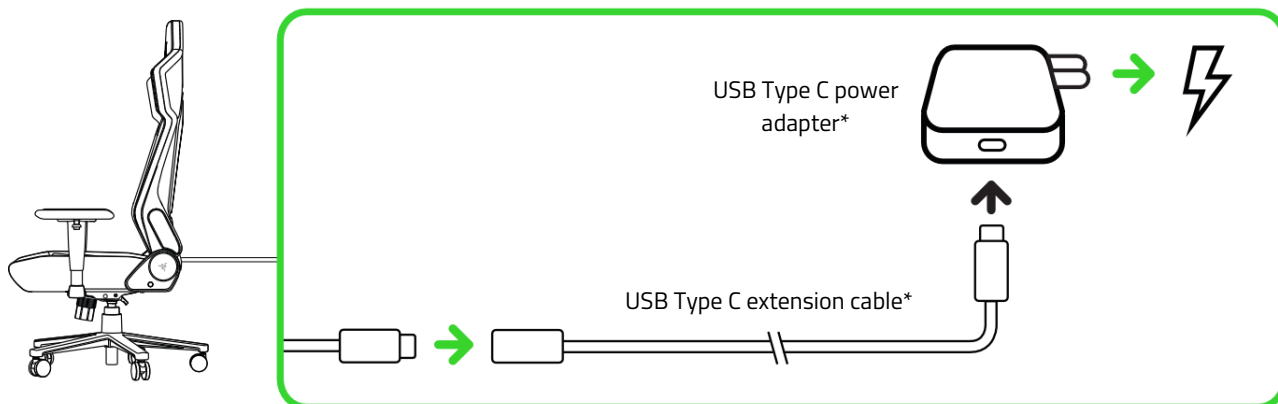

**Not included; sold separately.*

 
- i** Compatible with a 5W USB Type C power adapter (5V/1A), not included. Keep the power cable securely connected and free from strain or damage. Position it away from walkways and sharp edges to avoid hazards while plugged in.

CONNECTING TO YOUR CHAIR

i Before proceeding, make sure that the chair is connected to an external power bank.


A. Via Razer HyperSpeed Wireless mode (2.4 GHz)

1.

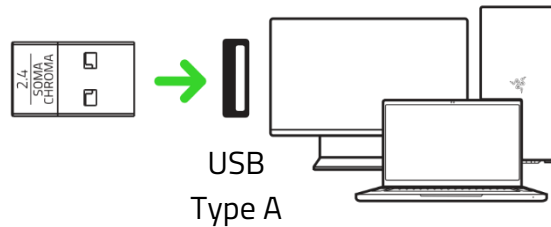

i Install Razer Synapse when prompted or download the installer from [razer.com/synapse](https://www.razer.com/synapse).

 
2.

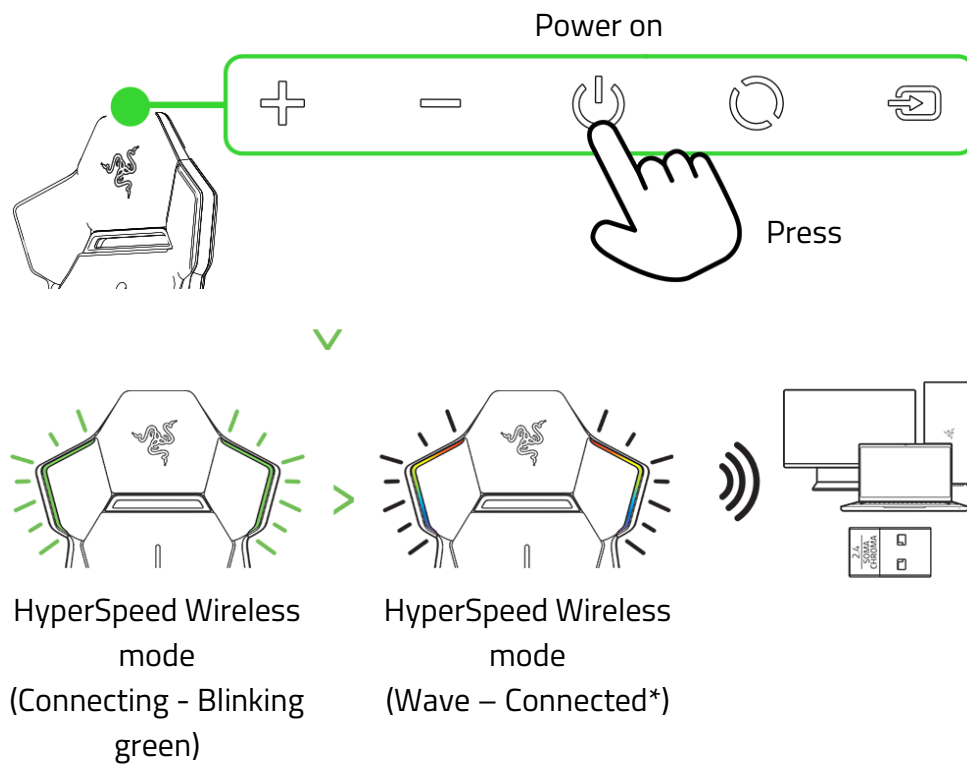

**Once connected, the chair lighting will activate with Wave effect or the last effect set in Razer Synapse.*


B. Via Bluetooth mode

 1.

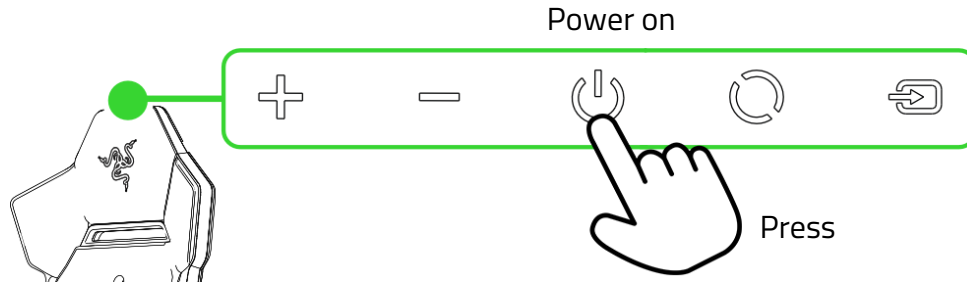


2.

 Switch between connection modes
(Razer HyperSpeed Wireless / Bluetooth)

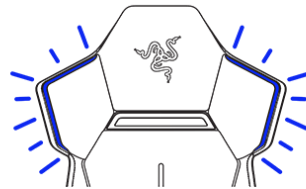


Bluetooth mode
(Pairing - Blinking blue)

 3.

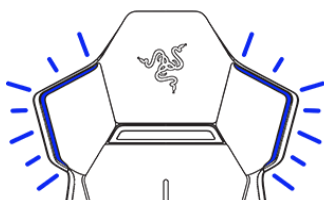

 Bluetooth mode
(Pairing - Blinking blue)

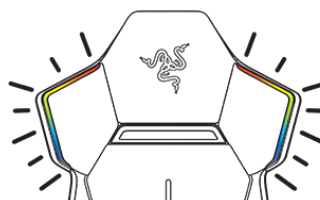

Bluetooth mode
(Wave – Connected*)



i Follow the on-screen instructions

 
*Once connected, the chair lighting will activate with Wave effect or the last effect set in Razer Synapse.

Connecting your chair to a new device (Bluetooth mode)


To connect the chair to a new device, remove it from the Razer Furniture app's Device Settings on the currently paired device; it will automatically enter pairing mode so you can connect again.

5. USING THE CHAIR


BRIGHTNESS ADJUSTMENT BUTTONS

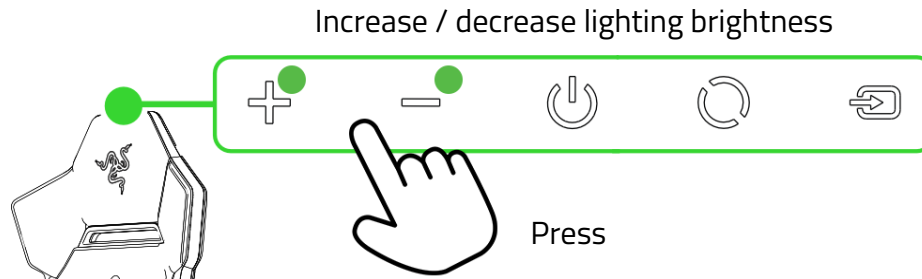

POWER ON / OFF BUTTON

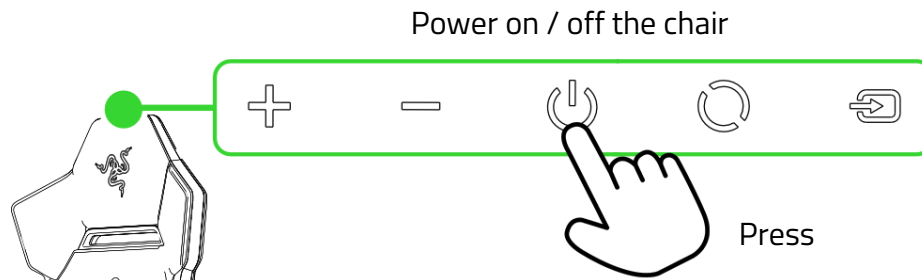 

CHROMA PRESETS BUTTON

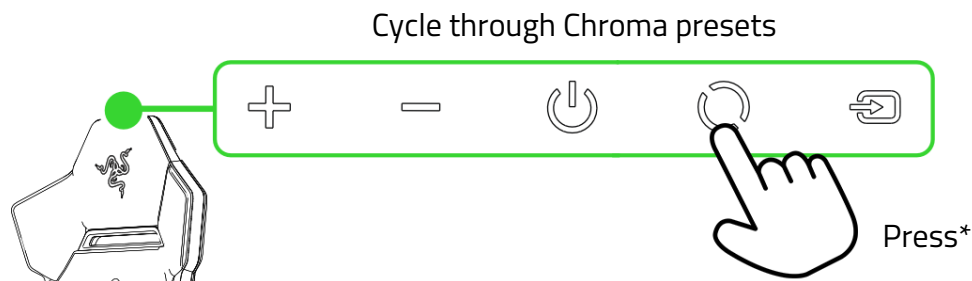 


STATIC > SPECTRUM CYCLING > BREATHING > STARLIGHT > WAVE (DEFAULT)

**Repeat until desired preset is active.*


i Use the Synapse app to customize your chair's lighting effects and access additional effects for cycling.

SOURCE BUTTON


 
Switch between connection modes
(Razer HyperSpeed Wireless / Bluetooth)

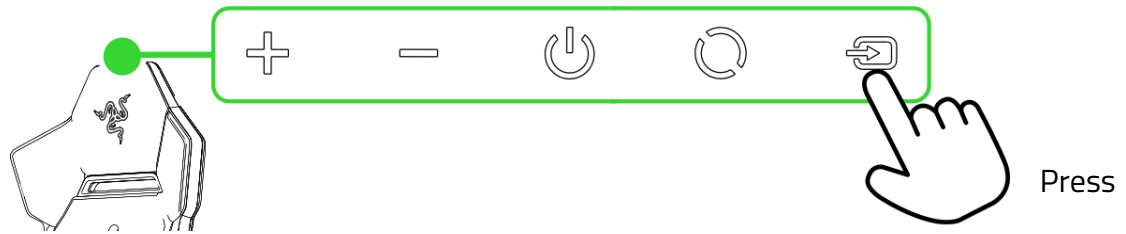

BACKREST ADJUSTMENTS

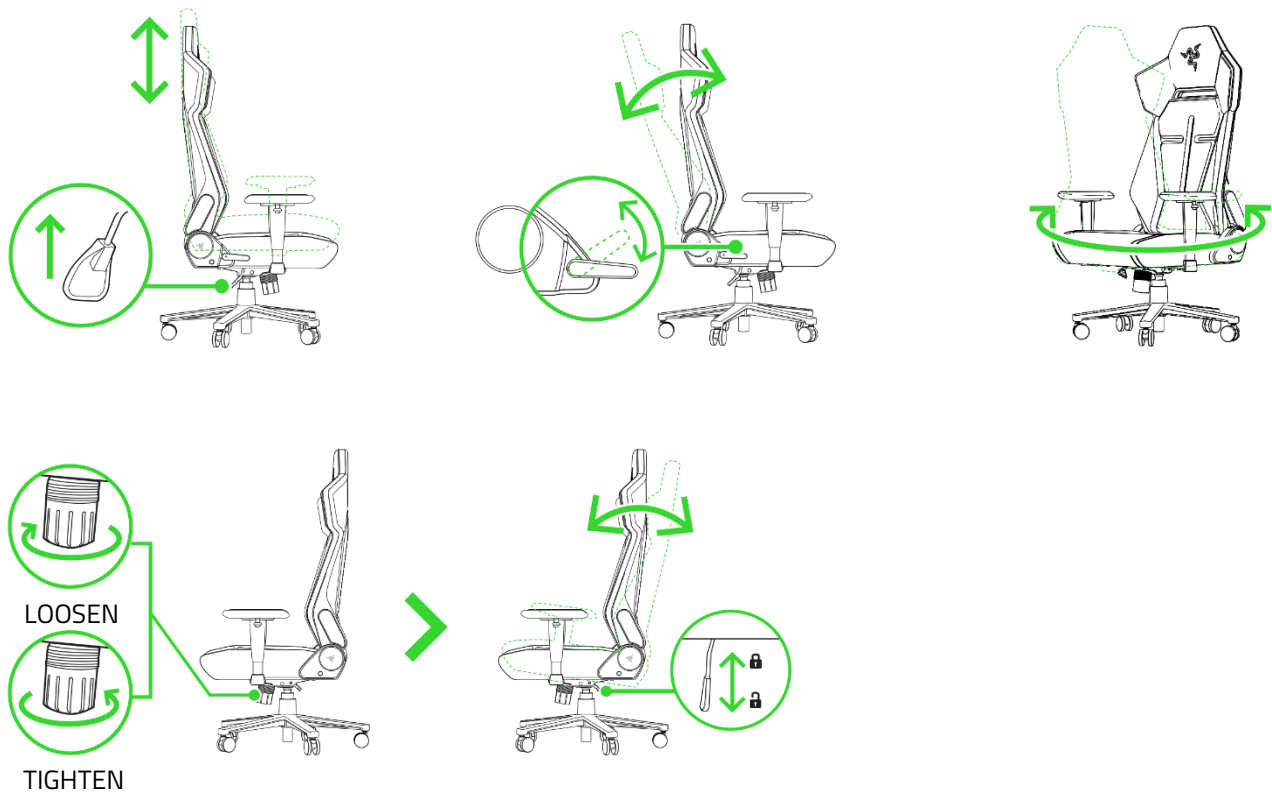 

ARMREST ADJUSTMENTS

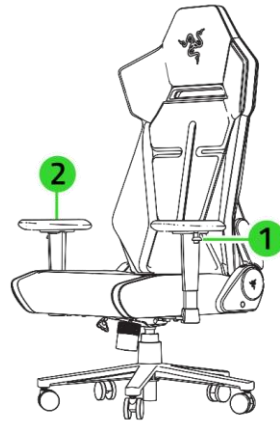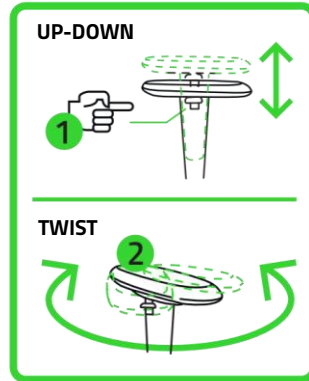  

6. CONFIGURING YOUR RAZER SOMA CHROMA

 *Disclaimer: This guide provides an overview of the New Razer Synapse app and may only partially cover some of the features of your device. The New Razer Synapse requires an Internet connection to install, update, access, and save cloud-based features. Registering for a Razer ID account is recommended but optional. All features listed here are subject to change based on the current version, connected device(s), and supported add-ons.*

SYNAPSE

The Synapse tab is your default tab when you first launch Razer Synapse. Use the following buttons below to navigate the user interface:

 Minimize

Clicking this button will minimize the app to the taskbar while it runs in the background.

 Maximize

This button expands the browser window to fill the entire screen. To restore the window to its original size, click the maximize button again.

 Close

This button will close all relevant tabs and terminate the application completely.

 Previous Tab

Clicking this button will return you to the last tab you have visited.

 Next Tab

Clicking this button will move you to the next page if you've recently used the Previous Tab button.

 Refresh Tab

This button reloads the current page. Use this if a page isn't displaying correctly or you want to see the latest content.

⬇ Download Update

If this button appears, that means there are changes to the app. Use this if a page isn't displaying correctly or you want to see the latest content.

⋮ More

Clicking this button will open a pop-up so you can easily access your Devices, Modules, and Other Installed Apps tabs.

⚙ Settings

Clicking this button will open the Settings tab, so you can quickly change the settings to this app.

👤 Profile

 
This button will open a pop-up to access the Log In, Feedback, Rate This Software, Add WiFi Device, and Exit options.

❓ Info

Hovering over this button will pop up an additional information about a feature or function.


Dashboard

The Dashboard subtab is an overview of your Razer Synapse, where you can access all your Razer devices, modules, and online services.

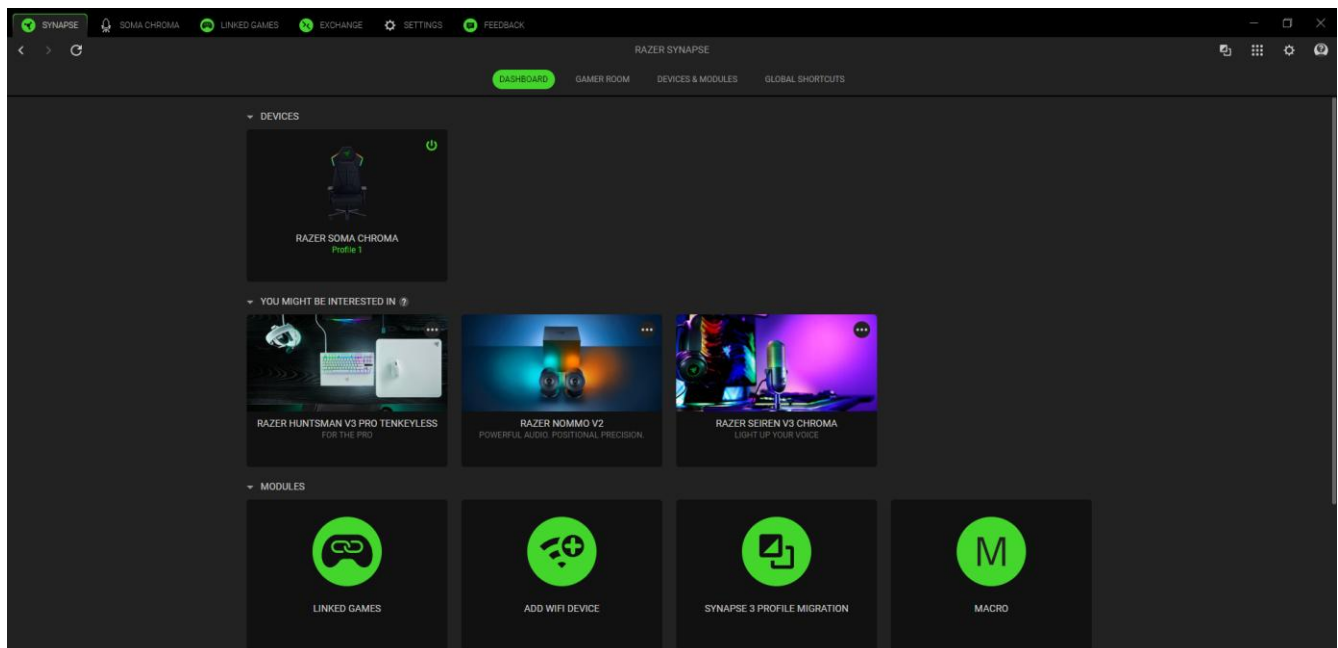

Gamer Room

 The Gamer Room subtab shows all devices with the Razer Aether Light feature. From here, you can view and manage your Gamer Room-supported devices.

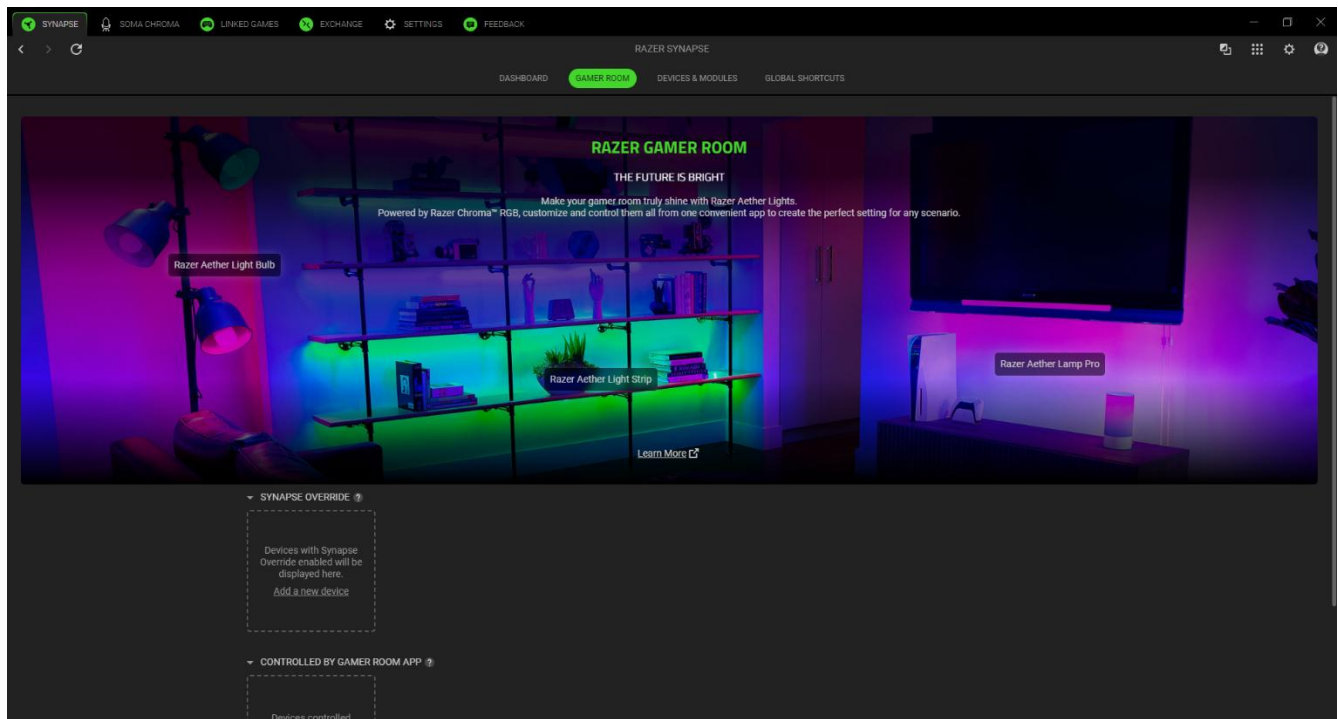

Synapse Override

 
This section allows you to select and customize your device's lighting and make it react to Chroma-enabled games and Chroma Connect apps using Razer Synapse.

Controlled By Gamer Room App

This section displays all supported devices controlled remotely by the Gamer Room app.

Devices & Modules


The Modules subtab displays all installed and available modules for installation.

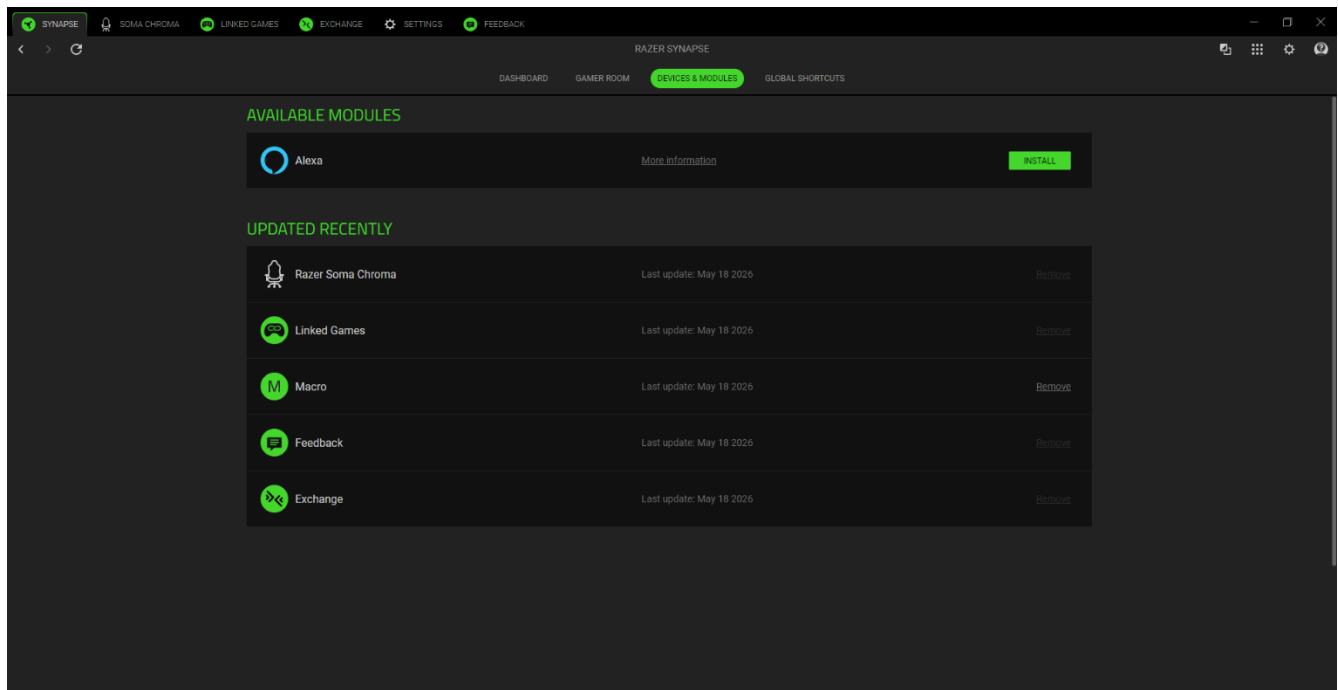

Global Shortcuts

Bind operations or Razer Synapse functions to custom key-combinations from any Razer Synapse-enabled device inputs, which apply across all device profiles.

  *Only Razer Synapse-enabled device inputs will be recognized.*

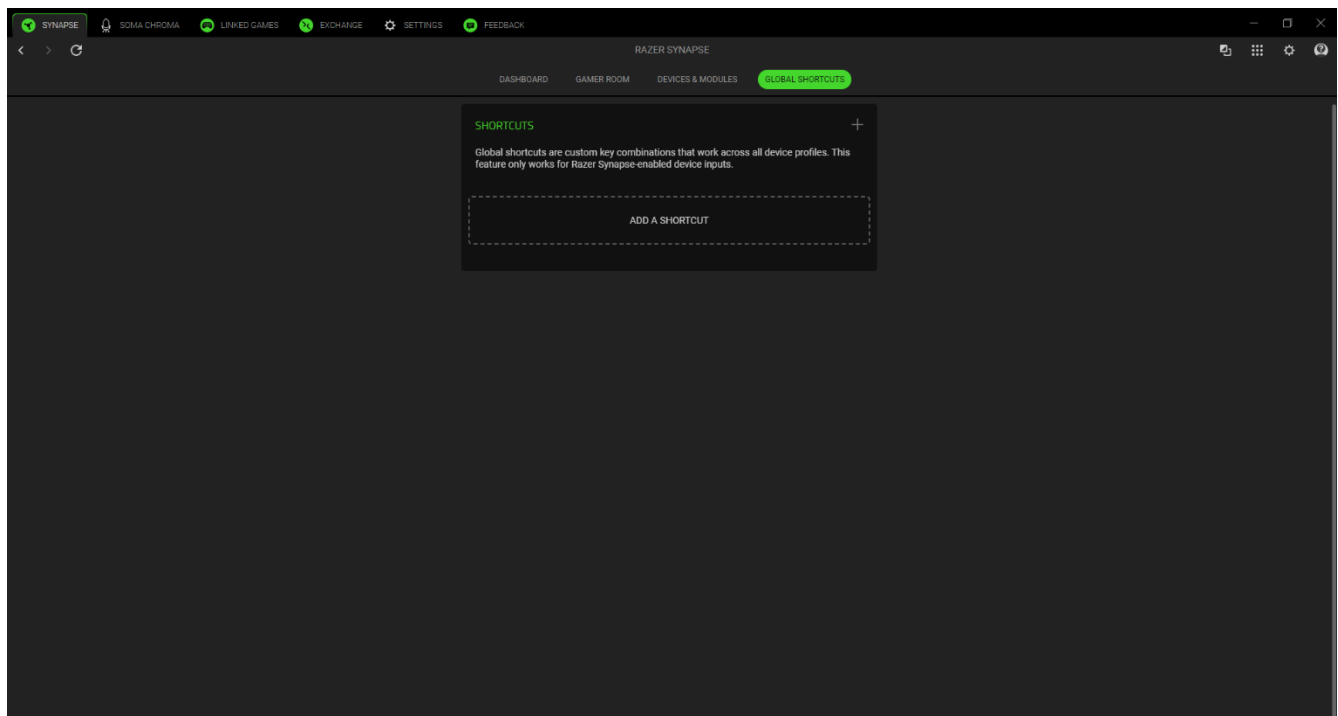

SOMA CHROMA

The SOMA CHROMA tab is the main tab for your Razer device. You can manage your device's settings from here, including lighting customization, brightness and effects, as well as power consumption behavior. Any changes under this tab will be saved automatically to your local system and cloud storage. Use the following buttons below to access your profile options:

▾ Profiles Dropdown Bar

 
Clicking this dropdown bar will display all the profiles for this device so you can quickly change profiles.

... Miscellaneous

Clicking this button will open a pop-up with options related to your current profile.

Lighting

The Lighting subtab enables you to modify your Razer device's light settings.

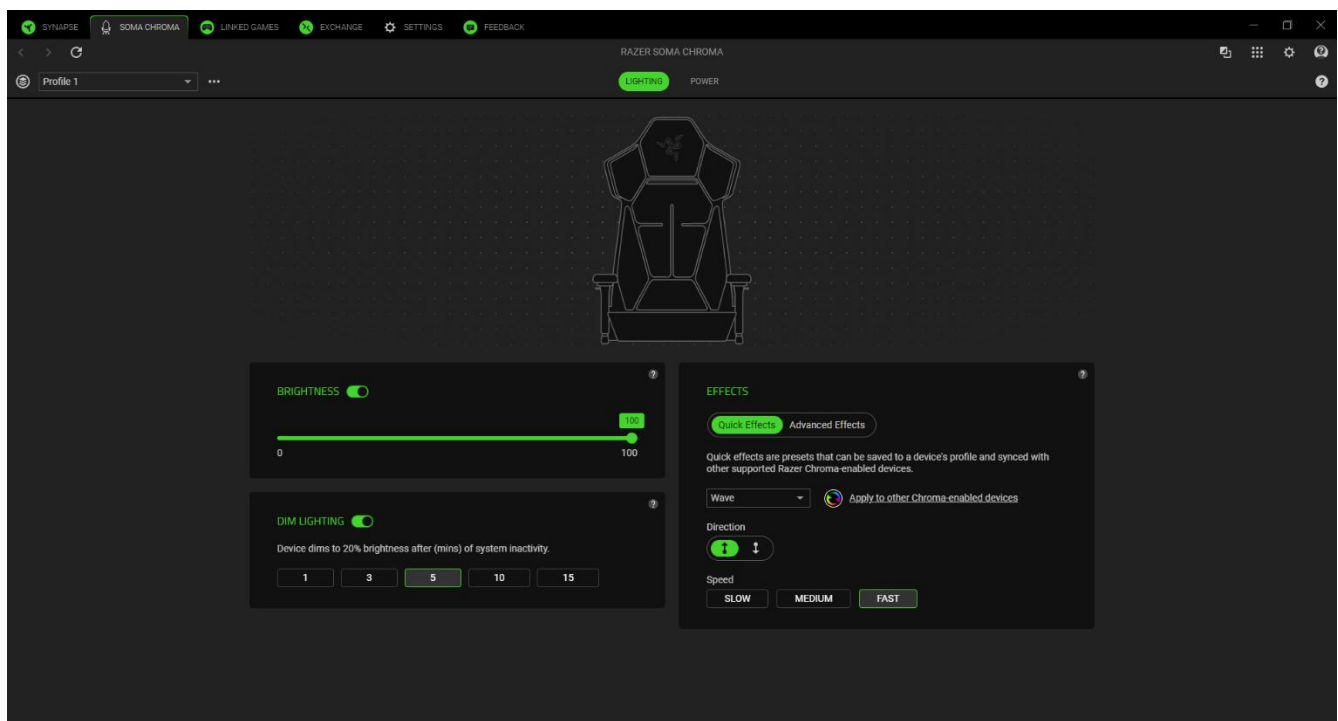

Profile

Profile is a data storage system that keeps all your Razer peripheral settings. By default, the profile name is based on your system's name. Clicking the dropdown bar (▾) will display all profiles for this device so you can quickly switch between them. To add, import, rename, duplicate, export, or delete a profile, press the profile's corresponding Miscellaneous button (...).

Brightness

You can turn off your Razer device's lighting by toggling the Brightness option or increase/decrease the luminance using the slider.

Dim Lighting

Set how long your system should be idle before the device dims, or toggle the feature off.

Quick Effects

A number of quick effects can be selected and applied to your device's lighting, as listed here:

	Name	Description	How to set up
	Ambient awareness	The lighting will reflect the averaged color on the selected screen region	Select or customize a screen region
	Audio meter	The chair will light up according to the audio level with a default spectrum of colors	Select a Color Boost level
	Breathing	The lighting fades in and out of the selected color(s)	Select up to 2 colors or randomize colors
	Fire	The chair lights up in warm colors to mimic the motion of flames	No further customization required
	Spectrum cycling	The lighting will cycle between 16.8 million colors indefinitely	No further customization required
	Starlight	Each LED will have a chance of fading in and out at a random time and duration	Select up to 2 colors or randomize colors and select a duration
	Static	The chair will remain lit in the selected color	Select a color
	Tidal	The lighting will converge or diverge across the chair lighting in the selected color(s)	Select up to 2 colors or randomize colors and select a direction



Wave

The lighting will scroll in the direction selected

Select a direction and speed

If you have other supported Razer Chroma-enabled devices, you can synchronize their quick effects with your Razer device by clicking the Chroma Sync button ().

 
Advanced Effects

The Advanced Effects option allows you to choose a Chroma Effect Profile you want to use on your Razer Chroma-enabled peripheral. To start making your own Chroma Effect Profile, press the Launch Chroma Studio button ().

 *Only other Razer devices that support the selected lighting effect will synchronize.*

Power Saving

The Power subtab allows you to manage your device's energy consumption by setting when it goes to sleep after being idle.

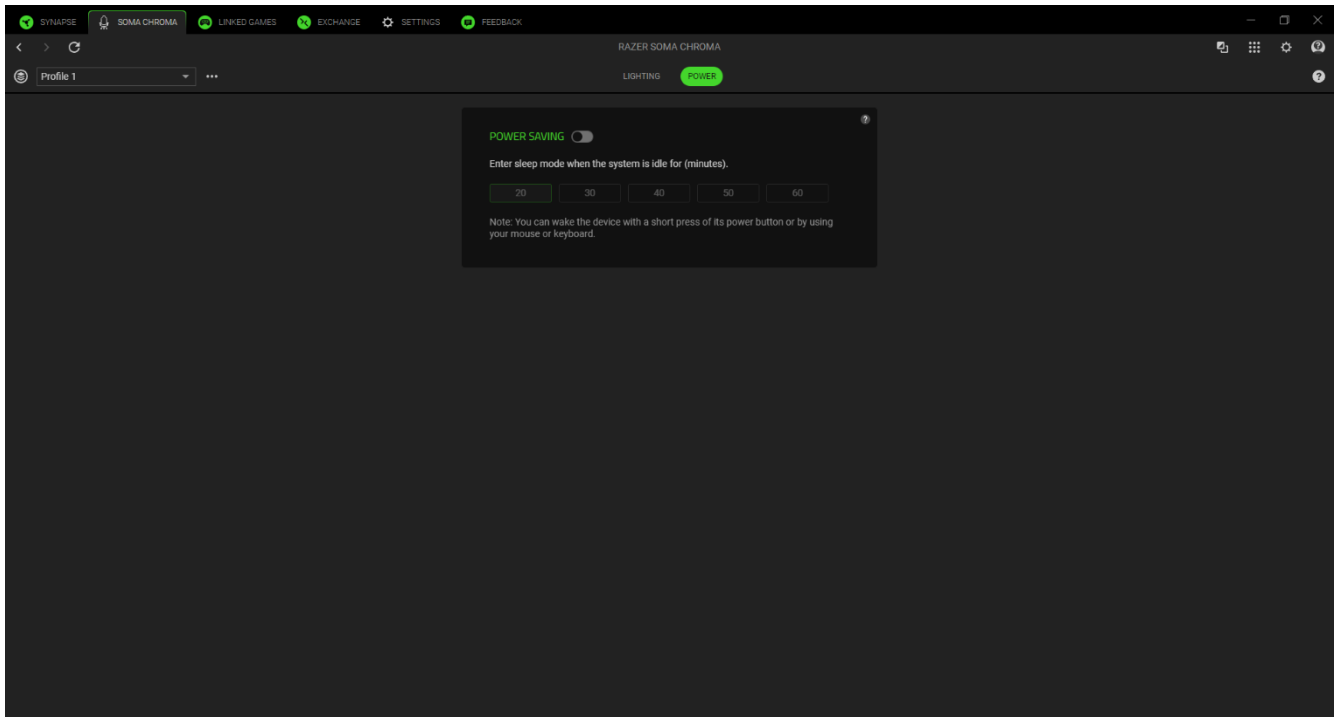


LINKED GAMES

The Linked Games tab allows you to add apps, view peripherals linked to apps, or search for listed apps.

Games

 
The Games subtab enables you to link apps to your peripherals. You can also sort apps based on alphabetical order, last played, or most played. Apps will still be listed here, even if not linked to a Razer device. To add an app that is not listed on the screen, you can use the Add button (**+**) to search for it manually or use the Scan button () to search for it automatically. Click the Search button () to look for a specific game or program from the list.

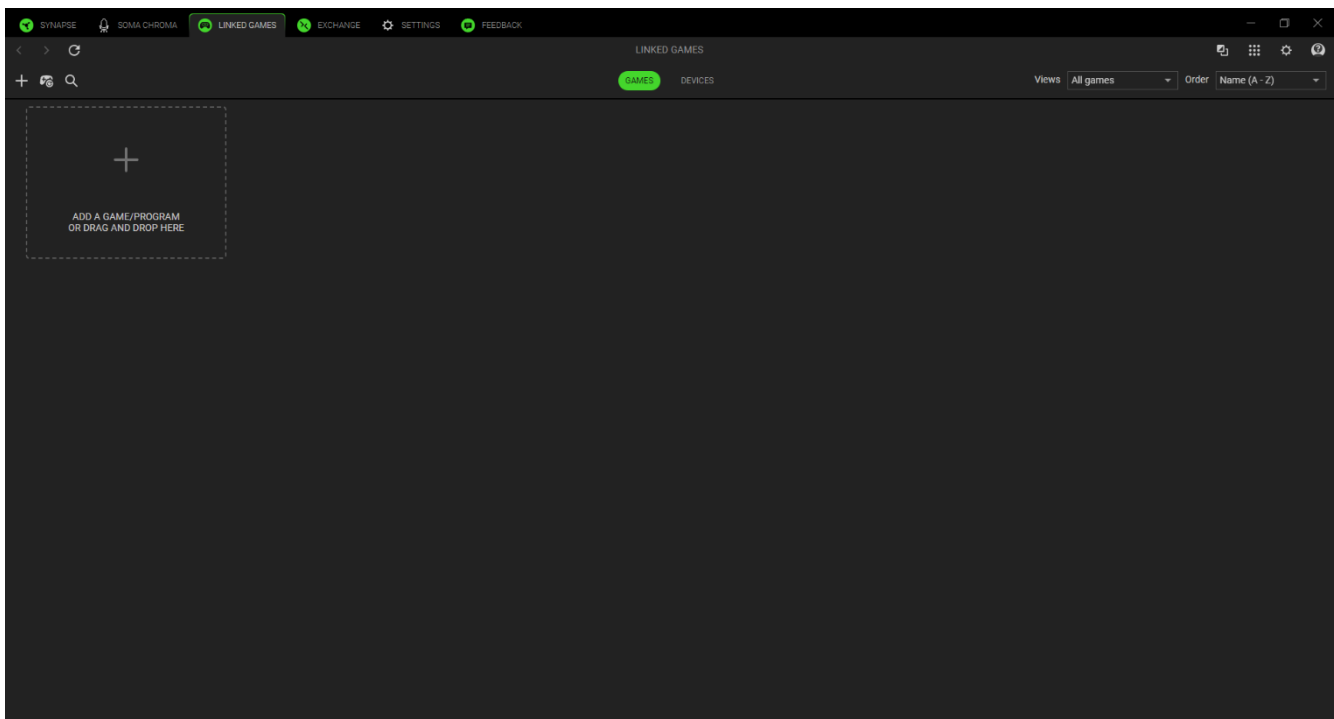

To link an app to your Razer device, click on it from the list and select a device and its profile. This will automatically set your device to the selected profile whenever you launch the app.

Devices

 The Devices subtab lets you view your peripherals and determine which apps are linked to them. By selecting a device, you can see a list of linked apps, add new apps, or remove linked apps. You can filter these apps by using the Views and Order dropdown list. To add an app not listed on your peripheral, you can drag and drop the executable file inside the box or use the Add button (+) to open the search window. While inside the search window, you can click the Refresh button (↻) to rescan installed apps, the Search button (🔍) to look for a specific game or program from the list, or the Browse link to search for the app manually.

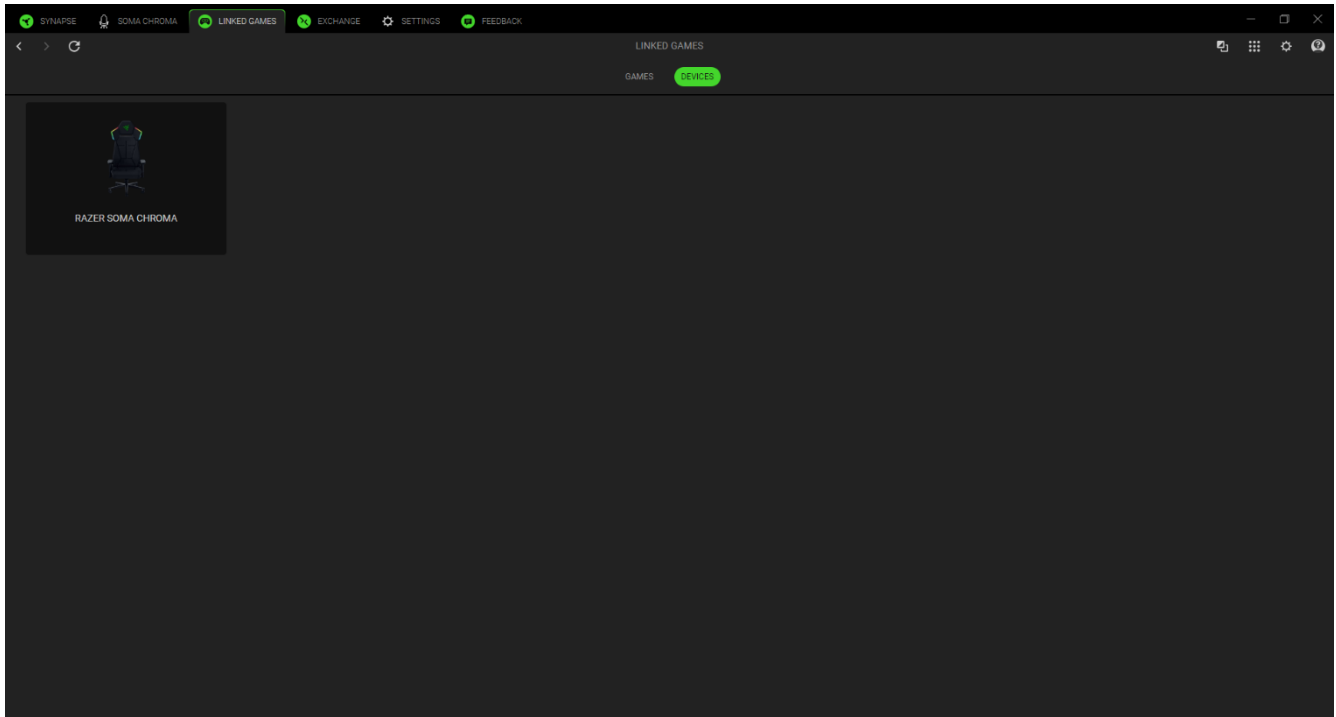


To link an app to your Razer device, click the tick box at the top left corner of the app while inside the search box. This will automatically set your device to the selected profile whenever you launch the app.

EXCHANGE

The Exchange tab is a collection of highly requested macros submitted via the Razer Workshop, as well as other contributors from the community.

Browse

 In the Browse subtab, you can view all available macros along with their brief descriptions, upload dates, number of likes, and number of downloads. Selecting a specific macro will show its specific macro commands. To find a particular macro, you can click the Search () button. Additionally, you can sort the macros by the number of likes, the number of downloads, or by the most recent uploads.

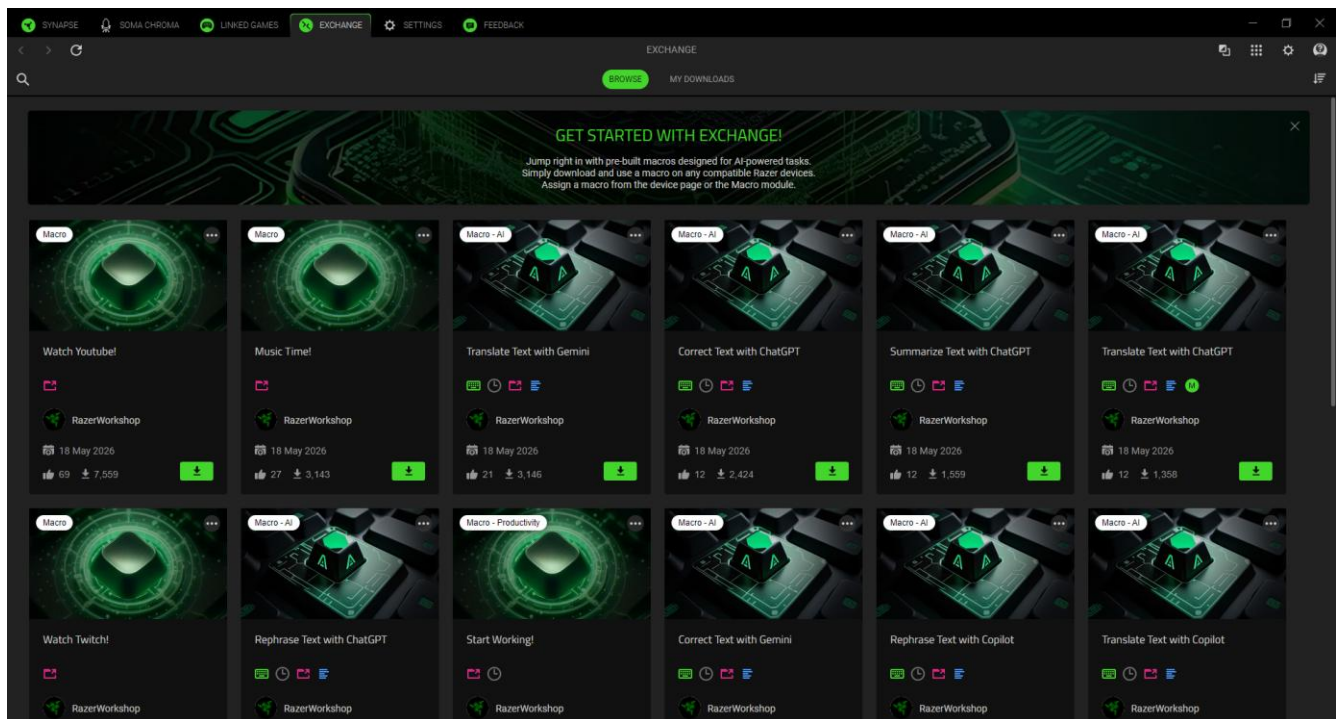

My Downloads

 
You can find all the macros you have downloaded on the My Downloads subtab. From here you can select the Apply button to jump straight to the Macro

SETTINGS

The Settings tab, accessible by clicking the Settings button (⚙️), enables you to configure numerous options as listed below:

Synapse

The Synapse subtab is where you can find options that are specific to the app.

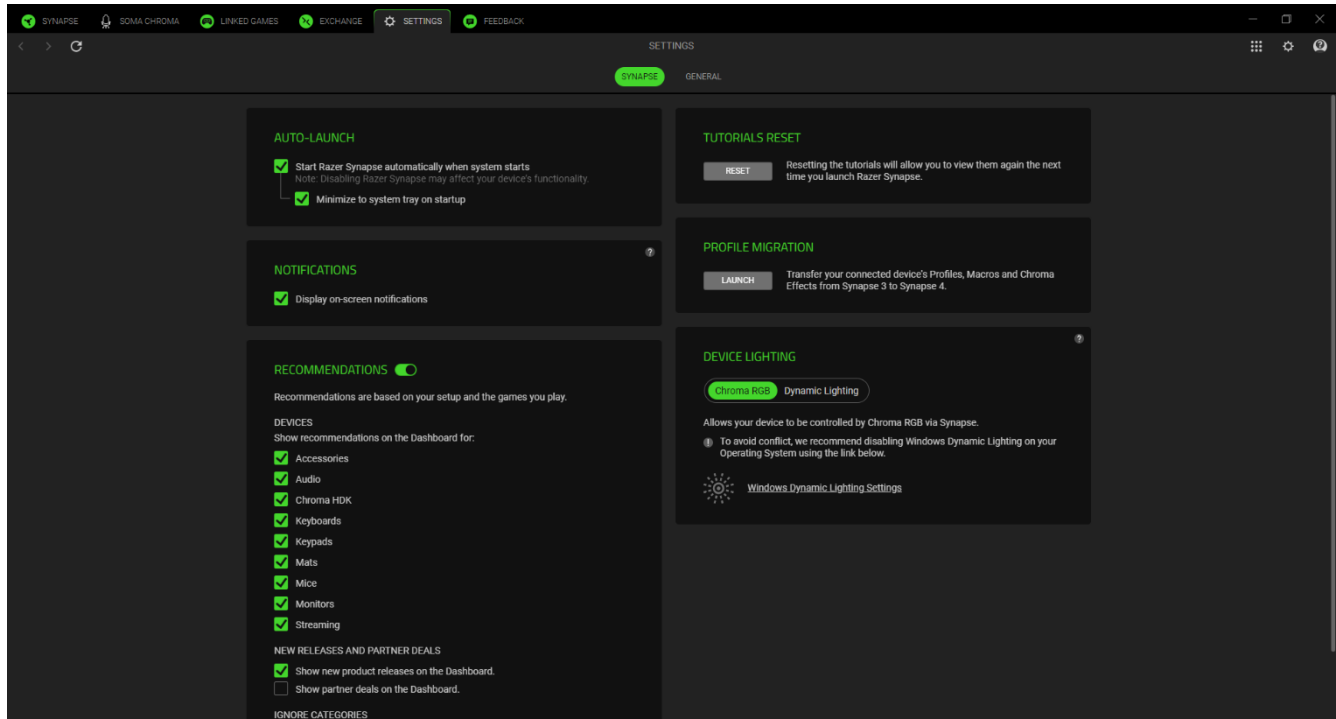

Auto Launch

The Auto Launch option allows you to configure the startup behavior the app.

Notifications

The Notifications option allows the app to display on-screen notifications even if you run full-screen apps.

Recommendations

Recommendations enable us to show the latest products and features on your Dashboard based on your installed devices and linked games.

Tutorials Reset

Selecting the Reset button will reactivate all tutorials that help you acquaint yourself with Razer Synapse's features.

Synapse 3 Profile Migration

 
This function lets you transfer all your device's Profiles, Macros, and Chroma Effects from Synapse 3 to the new Synapse.

Device Lighting

This option lets you choose which app will control the lighting effects on your device.

General

The General subtab is the section where you can access miscellaneous options for your app, as well as find additional information about the software.

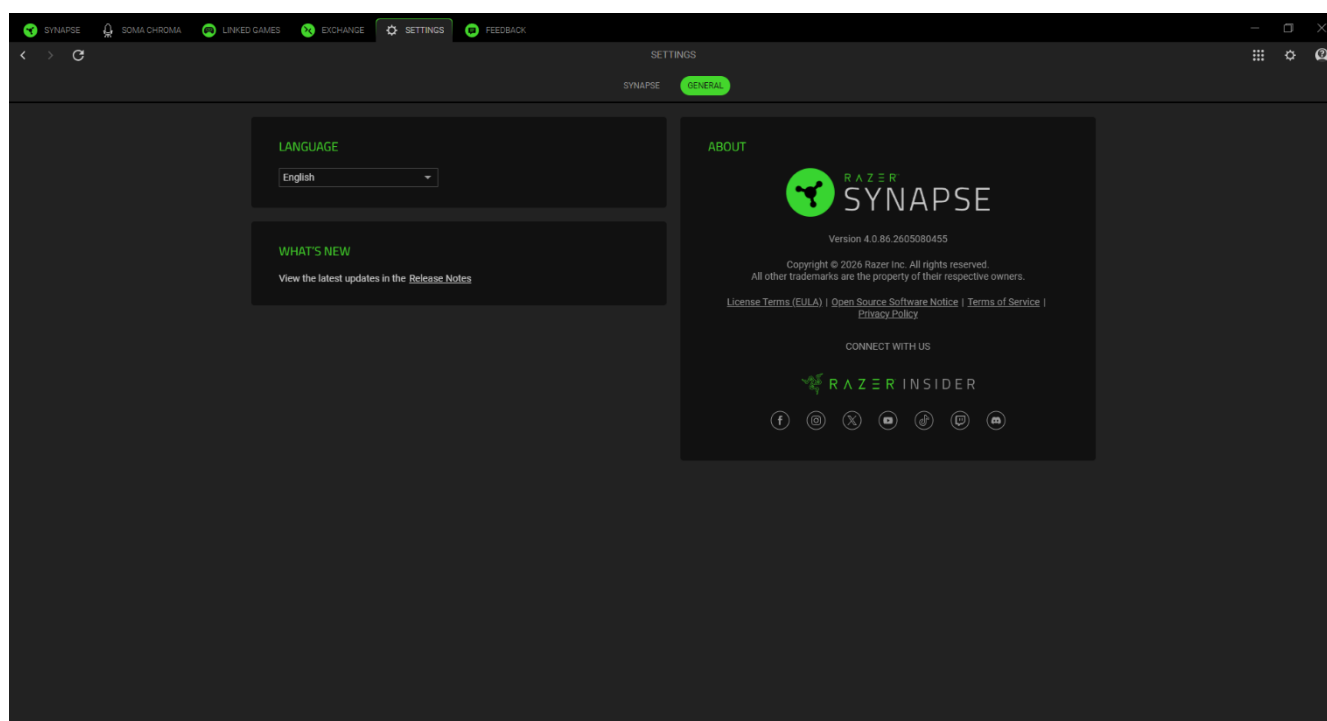

Language

 
This option lets you change the display language of Razer Synapse.

About

The About section shows the current software version, displays the copyright statement, and provides relevant links for Razer's terms of use. You may also use this option to access Razer's social communities quickly.

FEEDBACK

Help us improve Razer Synapse by giving your comments, suggestions, and problems with the software. You can contact us directly using this tab and even earn rewards for reporting bugs.

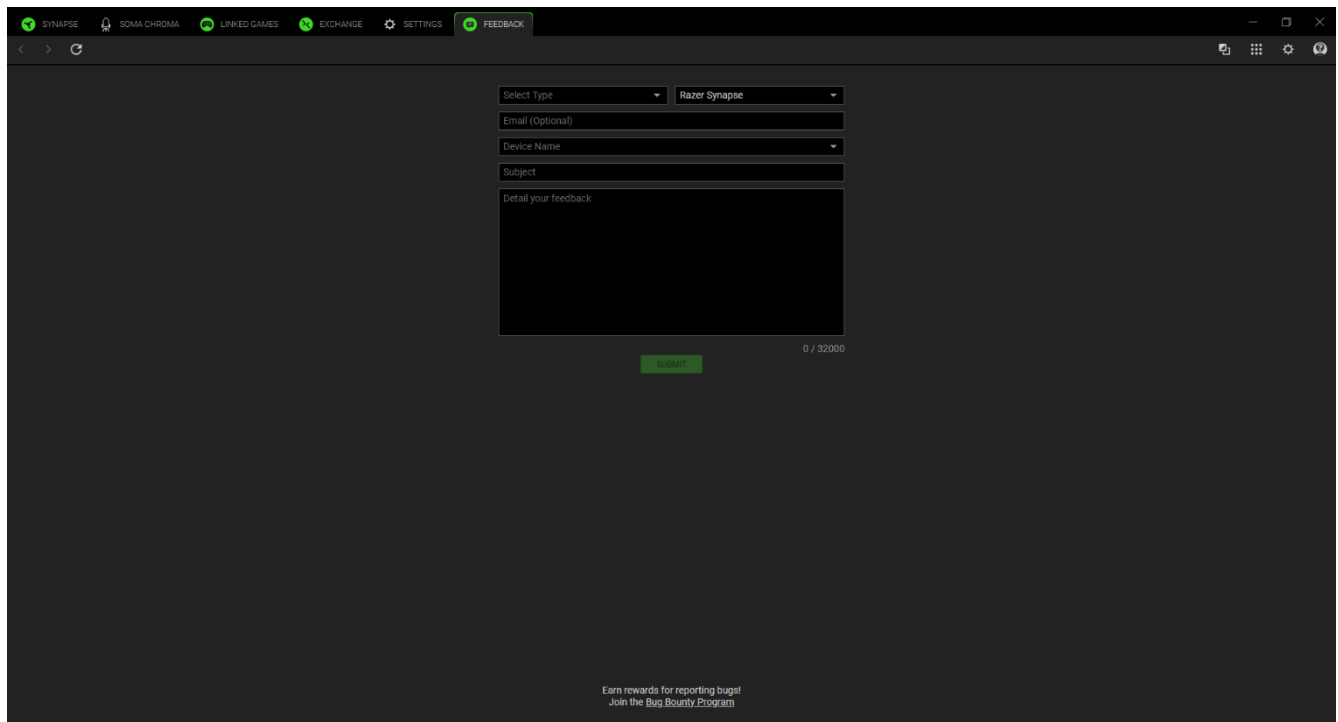

The screenshot shows the Razer Synapse application interface with the 'FEEDBACK' tab selected. The window has a dark theme. At the top, there is a navigation bar with icons for SYNAPSE, SOMA CHROMA, LINKED GAMES, EXCHANGE, SETTINGS, and FEEDBACK. Below the navigation bar, the feedback form is displayed. It includes a 'Select Type' dropdown menu with 'Razer Synapse' selected, an 'Email (Optional)' text input field, a 'Device Name' dropdown menu, and a 'Subject' text input field. Below these fields is a large text area for 'Detail your feedback'. At the bottom right of the text area, there is a character count '0 / 32000'. A green 'SUBMIT' button is located below the text area. At the bottom center of the window, there is a small text link: 'Earn rewards for reporting bugs! Join the Bug Bounty Program'.

Select Type ▼ Razer Synapse ▼

Email (Optional)

Device Name ▼

Subject

Detail your feedback

0 / 32000

[SUBMIT](#)

Earn rewards for reporting bugs!
Join the [Bug Bounty Program](#)

7. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

This product is intended as a piece of furniture designed to accommodate one sitting or reclining person. In order to achieve maximum safety while using your Razer Soma Chroma, we suggest that you adopt the following guidelines:

- To avoid damaging your chair, or cause injury to yourself or others, maneuver the product carefully. Be mindful of your hand or finger placement when adjusting the sliders and levers.
- To prevent the chair from tipping over, keep the center of gravity on the seat with your back on the lumbar support. Do not sit on the front edge of the chair, stand on it, push down the backrest while the chair is reclined, or place your entire weight on the backrest.
- To prevent color from fading, upholstery from drying, and plastic parts from cracking, avoid exposure to high heat such as a radiator or a fireplace; and keep out of direct sunlight.
- Connect cable(s) only as described in this guide. Improper use or connection may result in damage.
- To avoid breaking your chair, do not place heavy objects on the armrests; and do not exceed the chair's weight limit of 300 lbs. (136kg) (e.g., having more than one person sit on the chair).
- To prevent damage to the upholstery, keep your chair away from sharp objects, or pets with claws and teeth.
- To avoid accidents, do not use this chair unless all bolts, screws, and knobs are firmly secured. Check all bolts, screws, and knobs at least every 90 days; and make sure they are properly tightened.
- To prevent damaging your floor, only use the hard tread casters on carpeted areas. Soft tread casters should instead be purchased and installed to your chair if you have a hard surface flooring or a chair mat.
- Do not disassemble the backrest. Attempting to do so or operating the chair under abnormal current loads will void your warranty.
- Do not use the chair in wet or humid environments.
- Always unplug the power bank before cleaning or storing the chair.
- Avoid applying excessive pressure to the chair's control panel and lighting or exposing it to liquids.
- Use only the recommended power bank (5V/1A) or power adapter (5W, 5V/1A) with the chair's lighting system. Do not exceed this voltage or current rating.

- Securely connect the power cable (and the extension cable, if applicable). Position the cable away from walkways and sharp edges to prevent hazards while plugged in.
- When using the chair with lighting, ensure the power bank is securely placed in the designated pouch and that the power cable is properly connected. Do not place the power bank outside the pouch or in any other area of the chair.
- Should you have problems operating the Razer Soma Chroma properly and troubleshooting does not work, contact the Razer hotline or go to support.razer.com for assistance. If any parts are missing, broken, damaged, or worn; and your chair is still covered by warranty, we will provide you with replacement parts. Do not use your chair until the parts have been repaired or replaced.

MAINTENANCE

The Razer Soma Chroma requires minimum maintenance to keep it in optimum condition. Constant exposure to friction, skin, and bodily fluids can degrade the materials over time.

- To maintain the chair's appearance and prevent buildup from perspiration and dirt, we recommend cleaning it once a month.
- Clean up spills immediately to prevent stains, and allow the chair to air dry completely before use.
- Disconnect the chair from the power bank or power adapter before cleaning. Use a soft or microfiber cloth lightly dampened with warm water to wipe down the chair surfaces, and a soft, dry cloth for the control panel and lighting.
- Avoid using soap, liquids, chemical cleaners, or abrasives, as these may damage the chair or its electronic components.

8. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2026 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, and “For Gamers. By Gamers.”, are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks are the property of their respective owners.

Android, Google, Google Logo, Google Play, and the Google Play logo are trademarks of Google LLC.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Razer is under license.

Windows and the Windows logo are trademarks of the Microsoft group of companies.

Razer Inc. (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Soma Chroma (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit razer.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without

invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.