



 
UNI FAN SL-INF FLEX 120

Installation Guide

- Guide d'installation • Installationsanleitung • Guía de instalación
- Installationsguide • Instrukcja instalacji • Руководство по установке
- 安裝指南 • インストールガイド

Package Contents

- Contenu du colis • Verpackungsinhalt • Contenido del paquete • Förpackningens innehåll
- Zawartość opakowania • Содержимое упаковки • 包裝內容物 • パッケージ内容物

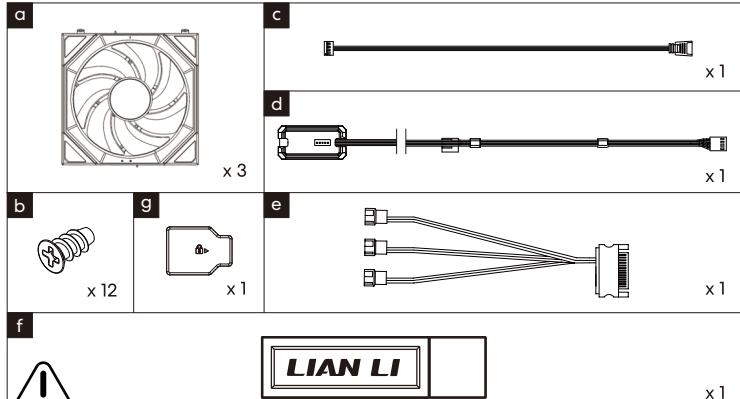

- Keep USB 3.0 and 2.4GHz devices away from the L-Wireless controller to reduce interference.
- Gardez les appareils USB 3.0 et 2.4 GHz éloignés du L-Wireless Controller pour réduire les interférences.
- USB-3.0- und 2.4-GHz-Geräte vom L-Wireless Controller fernhalten, um Störungen zu reduzieren.
- Mantenga los dispositivos USB 3.0 y 2.4 GHz alejados del L-Wireless Controller para reducir interferencias.
- Håll USB 3.0- och 2.4 GHz-enheter borta från L-Wireless Controller för att minska störningar.
- Trzymaj urządzenia USB 3.0 i 2.4 GHz z dala od L-Wireless Controller, aby zmniejszyć zakłócenia.
- Держите устройства USB 3.0 и 2.4 ГГц вдали от L-Wireless Controller для снижения помех.
- USB 3.0 與 2.4GHz 裝置請遠離 L-Wireless 控制器，以減少干擾。
- 干涉防止のためUSB 3.0 / 2.4GHz機器をL-Wirelessから離してください。

低功率射頻器材技術規範
取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規規定作業之無線電通信。低功率射頻器材須遵守合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Manufacturer: LIAN LI INDUSTRIAL CO., LTD.

 
 
- 3-Year Warranty
- Garantie de 3 an
- 3 Jahr Garantie
- 3 año de garantía
- 3 års garanti
- 3rok gwarancji
- Гарантія 3 год
- 3 年保固
- 3 年間保証



LIAN LI INDUSTRIAL CO., LTD.
2F., NO. 20, ANKANG RD., NEIHU DIST., TAIPEI CITY 114, TAIWAN
service@mail.lian-li.com



Fan to Fan Connection

- Connexion ventilateur à ventilateur • Lüfter-zu-Lüfter-Verbindung • Conexión de ventilador a ventilador
- Fläkt till fläkt-anslutning • Połączenie wentylatora z wentylatorem • Соединение вентиляторов между собой
- 風扇之間的連接 • ファン同士の接続

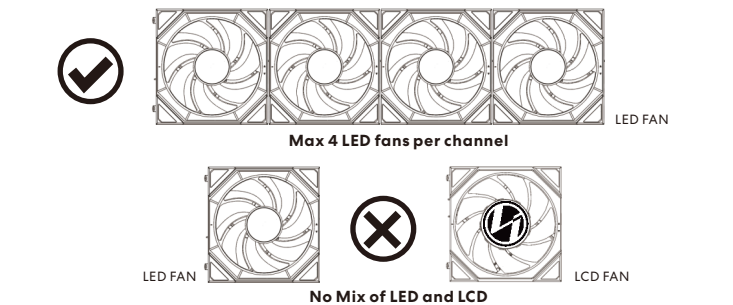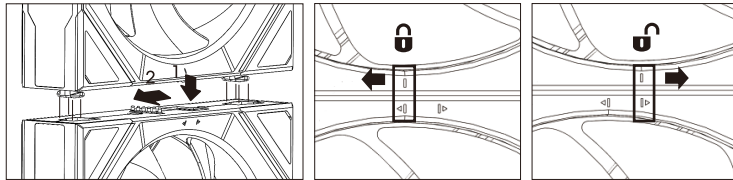


Receiver installation

  - Installation du récepteur • Empfängerinstallation • Instalación del receptor • Installation av mottagare
- Instalacja odbiornika • Установка приемника • 接收器安裝 • レシーバーの取り付け

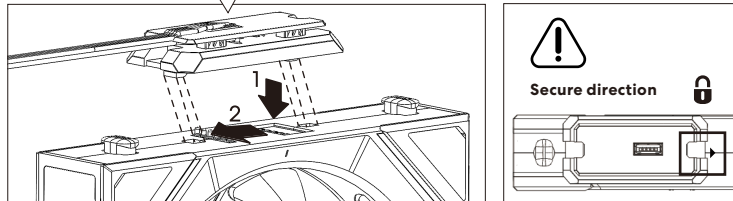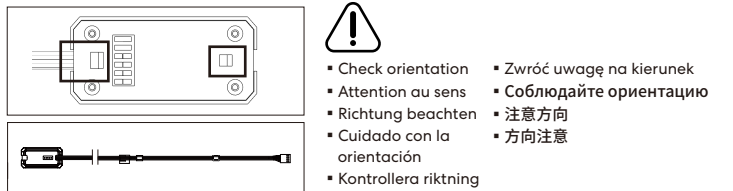


Receiver cable direction conversion diagram

 - Schéma de conversion de direction du câble du récepteur • Diagramm zur Richtungsomwandlung des Empfängerkabels
- Diagrama de conversão de direção do cabo do receptor • Diagram för riktningsomvandling av mottagarkabel
- Schemat zmiany kierunku przewodu odbiornika • Схема изменения направления кабеля приемника
- 接收器電線轉換方向示意 • レシーバーケーブル方向変換図

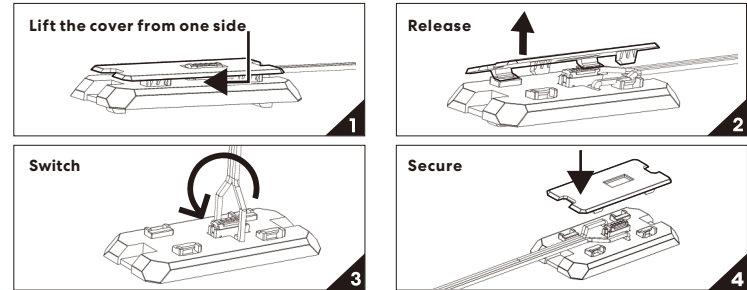


Receiver cable management

 - Gestion des câbles du récepteur • Kabelführung des Empfängers • Organización de cables del receptor
- Kabelhantering för mottagare • Organizacja przewodów odbiornika • Укладка кабелей приемника
- 接收器電線整理 • レシーバー配線整理

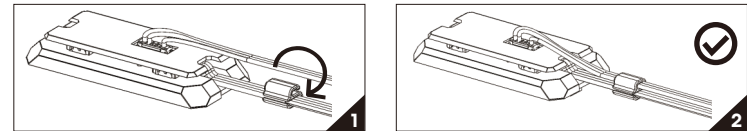


Supports cable output on both sides

 - Prend en charge la sortie de câble des deux côtés
- Unterstützt beidseitige Kabelführung
- Compatible con salida de cable en ambos lados
- Stöder kabelutgång på båda sidor
- Obsługuje wyprowadzenie kabli po obu stronach
- Поддерживает вывод кабеля с двух сторон
- 支援雙邊出線 • 両側配線対応

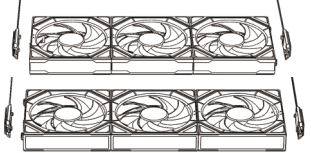

Usage of the Rubber Pads

 
- Utilisation des patins en caoutchouc • Verwendung der Gummipads • Uso de las almohadillas de goma
- Användning av gummidykor • Zastosowanie podkładek gumowych • Использование резиновых прокладок
- 橡膠墊使用方式 • ゴムパッドの使用方式



- Install screws and replace rubber pads for a clean look
- Visser et remplacez les patins pour un rendu propre
- Schrauben einsetzen, Gummipads ersetzen
- Instalar tornillos y cambiar almohadillas
- Skruva fast och byt gummipads
- Zamontuj śruby i wymień podkładki
- Установить винты и заменить прокладки
- 安裝螺絲並更換橡膠墊，外觀更整潔
- ネジ固定・ゴムパッド交換で見た目を整える

Remove the Fan Interlocking Key

 
- Retirez la clé d'interconnexion du ventilateur • Entfernen Sie den Lüfterverriegelungsschlüssel
- Retire la llave de interconexión del ventilador • Ta bort fläktens sammankopplingsnyckel
- Usuń kluczek blokujący wentylator • Снятие фиксатора вентилятора • 風扇扣鎖拆除 • ファン連結キーを取り外します

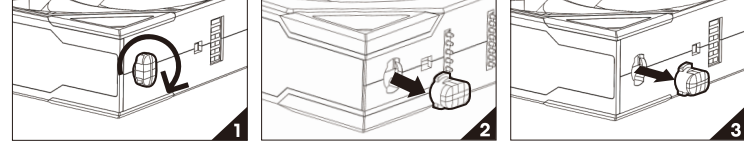

- Remove fan clip if radiator ports interfere
- Retirer le clip si les ports du radiateur gênent
- Clip entfernen bei Störung durch Radiatoranschlüsse
- Retire el clip si los puertos del radiador interfieren
- Ta bort klämman om radiatorportar stör
- Usuń klips, jeśli porty chłodnicy przeszkadzają
- Снимите клипс, если порты радиатора мешают
- 若水冷排進出水干涉，移除卡扣鎖
- 干涉時はクリップを取り外す

Usage of the Pin Cover

 - Utilisation du capuchon de broche • Verwendung der Stiftabdeckung • Uso de la cubierta del pin
- Användning av stiftlocket • Zastosowanie osłony pinów • Использование защитной крышки контактов
- 風扇塑膠薄片使用 • ピンカバーの使用方式

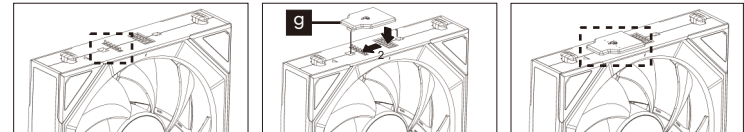

- Exposed POGO PIN contacts may short if touched by metal; use a plastic cover for protection.
- Les broches POGO exposées peuvent provoquer un court-circuit; utilisez une protection en plastique.
- Freiliegende POGO-PINs können Kurzschluss verursachen; Kunststoffschutz verwenden.
- Los pines POGO expuestos pueden causar cortocircuito; use protección plástica.
- Exponerade POGO-pinnar kan kortsluta; använd plastskydd.
- Odsłonięte piny POGO mogą powodować zwarcie; użyj osłony z tworzywa.
- Открытые POGO-пины могут вызвать короткое замыкание; используйте пластиковую защиту.
- POGO PIN端子外露易短路，建議加塑膠片保護。
- POGO PIN露出部是短絡的恐れがあるため保護カバー推奨。

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- *RF warning for Portable device:
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.


2.4g wireless spec: frequency 2402-2480MHz
Transmission: Below 10mw

Control modes (4 modes)

• Modes de contrôle (4 modes) • Steuerungsmodi (4 Modi) • Modos de control (4 modos) • Kontrolllägen (4 lägen)
• Tryby sterowania (4 tryby) • Режимы управления (4 режима) • 控制模式 (四種模式) • 制御モード (4種類)

A  **Control Via Wireless**

 Page 5

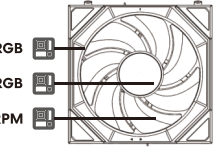


RGB

RGB

RPM

B  **Control Via MB SYNC**

 Page 6

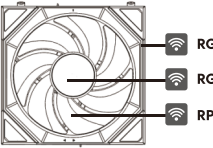


RGB

RGB

RPM

C  **Control Via Wireless**

 Page 7

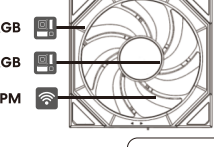


RGB

RGB

RPM

D  **Control Via MB SYNC**

 Page 8

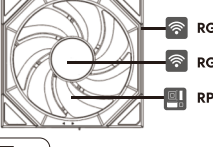

RGB

RGB

 
RPM

Software Download



<https://lian-li.com/L-Connect3>

A  **Control Via Wireless**

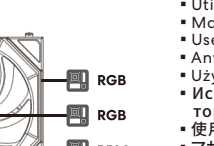


RGB

RGB


RPM

 Connect to PWM fan header




4 Pin PWM

 Connect to MB 5V-3P

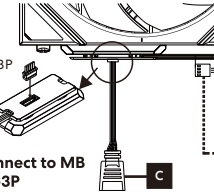

Connect to PSU SATA 15 pin

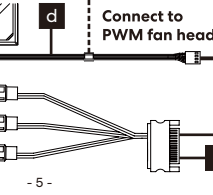 


5V-3P

Connect to MB 5V-3P

Connect to PSU SATA 15 pin

 B  **Control Via MB SYNC**

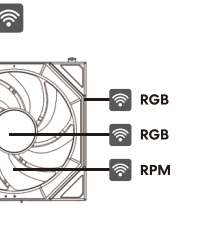


RGB

RGB

RPM

 
1

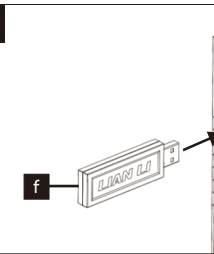

f

- Each L-Wireless Controller supports 10 device channels.
- Chaque L-Wireless Controller prend en charge 10 canaux d'appareils.
- Jeder L-Wireless Controller unterstützt 10 Gerätekanäle.
- Cada L-Wireless Controller admite 10 canales de dispositivos.
- Varje L-Wireless Controller stöder 10 enhetskanaler.
- Każdy L-Wireless Controller obsługuje 10 kanałów urządzeń.
- Каждый L-Wireless Controller поддерживает 10 каналов устройств.
- 每個L-Wireless Controller支援10組裝置通道。
- 各L-Wireless Controllerは10デバイスチャンネル対応。

 2

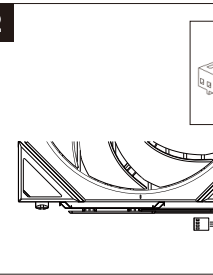


d

Connect to PSU SATA 15 pin

e

- Use wireless for fan and RGB control via L-Connect 3.
- Utilisez le sans fil pour contrôler ventilateur et RGB via L-Connect 3.
- Wireless für Lüfter- und RGB-Steuerung über L-Connect 3.
- Use inalámbrico para control de ventilador y RGB mediante L-Connect 3.
- Använd wireless för fläkt- och RGB-styrning via L-Connect 3.
- Wireless do sterowania wentylatorami i RGB przez L-Connect 3.
- Используйте wireless для управления вентиляторами и RGB через L-Connect 3.
- 使用無線透過 L-Connect 3 控制風扇與RGB。
- wirelessでL-Connect 3によるファン・RGB制御。

 C  **Control Via MB SYNC**

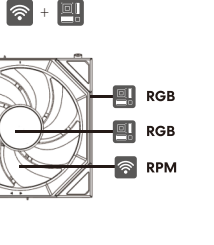


RGB

RGB


RPM

 1

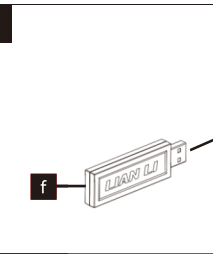

f

 2

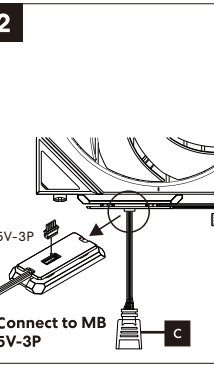

d

Connect to PSU SATA 15 pin

e

- Use wireless for fan speed control, and Motherboard Sync for RGB via L-Connect 3.
- Utilisez wireless pour le ventilateur et Motherboard Sync pour le RGB via L-Connect 3.
- Wireless für Lüftersteuerung und Motherboard Sync für RGB über L-Connect 3.
- Use wireless para ventilador y Motherboard Sync para RGB mediante L-Connect 3.
- Använd wireless för fläktstyrning och Motherboard Sync för RGB via L-Connect 3.
- Wireless do sterowania wentylatorami i Motherboard Sync dla RGB przez L-Connect 3.
- Используйте wireless для вентиляторов и Motherboard Sync для RGB через L-Connect 3.
- 使用wireless控制風扇轉速，並透過L-Connect 3使用主機板SYNC控制RGB。
- wirelessでファン制御・RGBはL-Connect 3のMotherboard Syncを使用。

Motherboard Sync via L-Connect 3

- Synchronisation carte mère via L-Connect 3
- Mainboard-Synchronisation über L-Connect 3
- Sincronización de placa base mediante L-Connect 3
- Moderkortssynk via L-Connect 3
- Synchronizacja płyty głównej przez L-Connect 3
- Синхронизация материнской платы через L-Connect 3
- 透過L-Connect 3使用主機板SYNC
- L-Connect 3経由のマザーボードSYNC

 
Step 1 Bind In L3

L-Wireless SYNC

Step 2 Switch MB lighting On

MB Lighting Sync

D  **Control Via MB SYNC**

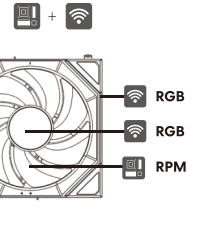


RGB

RGB


RPM

 1

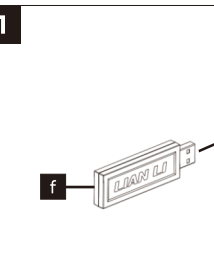

f

 2

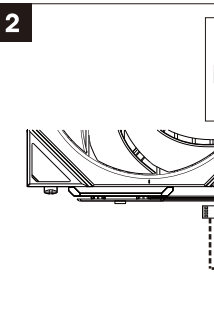

d

Connect to PSU SATA 15 pin

e

- Use wireless for RGB control, and Motherboard Sync for fan speed via L-Connect 3.
- Utilisez wireless pour le RGB et Motherboard Sync pour le ventilateur via L-Connect 3.
- Wireless für RGB-Steuerung und Motherboard Sync für Lüfter über L-Connect 3.
- Use wireless para RGB y Motherboard Sync para ventilador mediante L-Connect 3.
- Använd wireless för RGB och Motherboard Sync för fläkt via L-Connect 3.
- Wireless do RGB i Motherboard Sync dla wentylatorów przez L-Connect 3.
- Используйте wireless для RGB и Motherboard Sync для вентиляторов через L-Connect 3.
- 使用wireless控制RGB，並透過L-Connect 3使用主機板SYNC控制風扇轉速。
- wirelessでRGB制御・ファンはL-Connect 3のMotherboard Syncを使用。

Motherboard Sync via L-Connect 3

- SYNC carte mère via L-Connect 3
- Mainboard-SYNC über L-Connect 3
- SYNC de placa base via L-Connect 3
- Moderkorts-SYNC via L-Connect 3
- SYNC płyty głównej przez L-Connect 3
- SYNC материнской платы через L-Connect 3
- 透過L-Connect 3使用主機板SYNC
- L-Connect 3経由でマザーボードSYNC

Step 1 Bind In L3

L-Wireless SYNC

Step 2 Switch MB RPM On

MB RPM SYNC