 



landscape-portrait rotation TV Mount

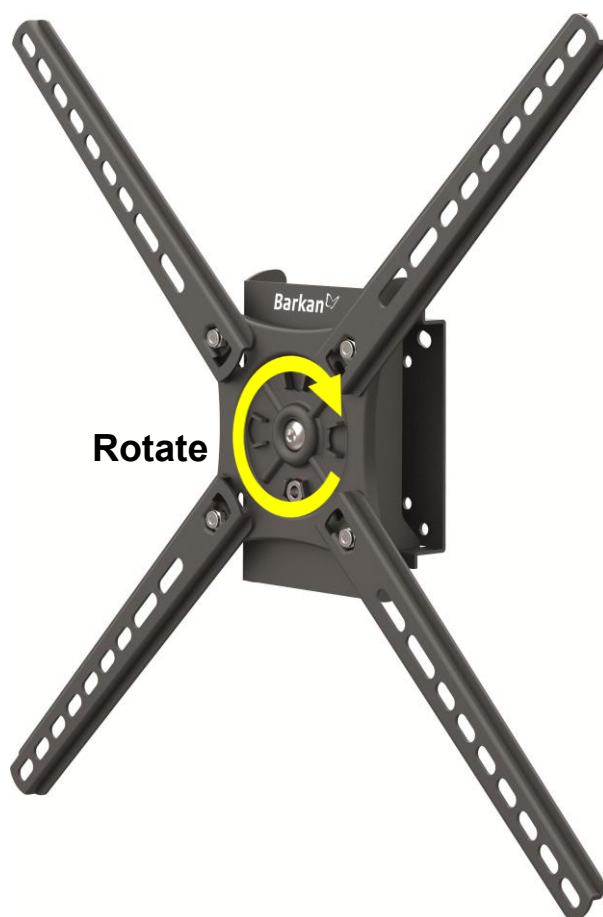

Download Assembly Instructions with Text

For more information: [barkanmounts.com](https://www.barkanmounts.com)

 If you are satisfied with the product, please give us a 5 stars ☆☆☆☆☆ rating on the website you bought it from. If you are not satisfied, please contact us at <https://www.barkanmounts.com/support> and we will solve the problem for you.

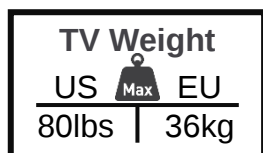


Also fits screens up to 77" with
400X400mm VESA connections






**Safety instructions and installation warnings (provided separately)
must be read in full, prior to assembly.**

Connect the rotation mechanism (A) to the back of the TV

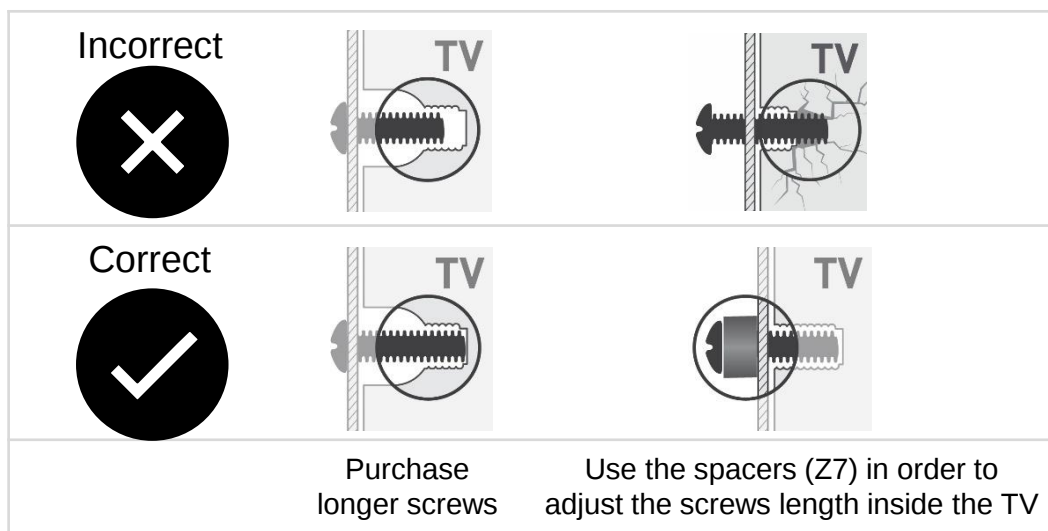


1

Continue according to your TV mounting hole pattern

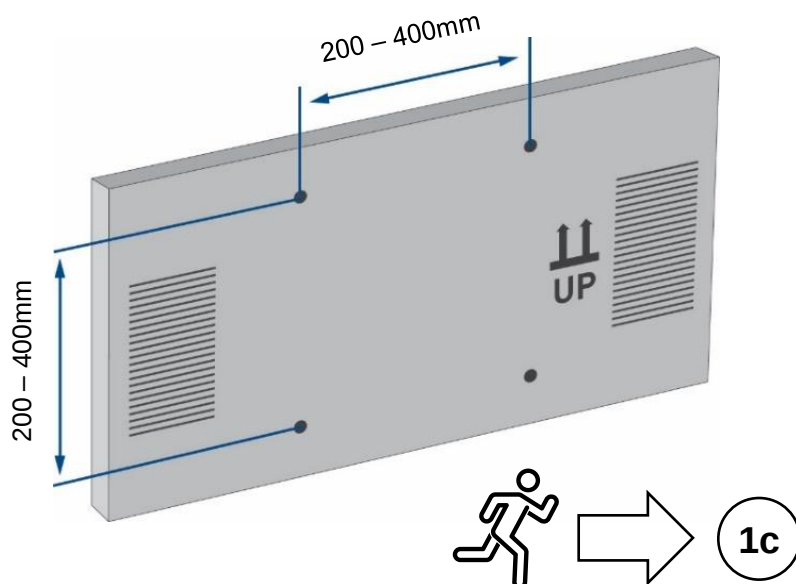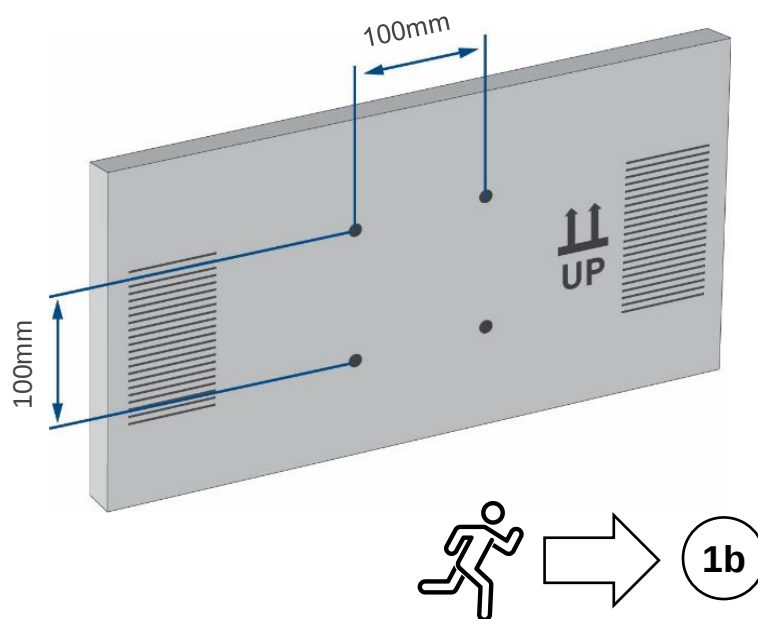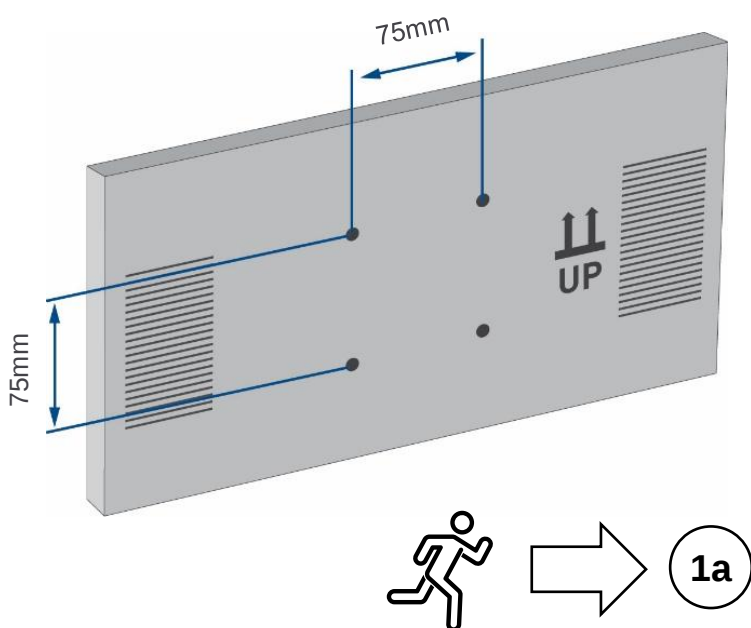


75x75 mm / 100x100 mm TV mounting hole pattern -
Place the rotation mechanism (A) so that part A1 is flush against the back of the TV screen

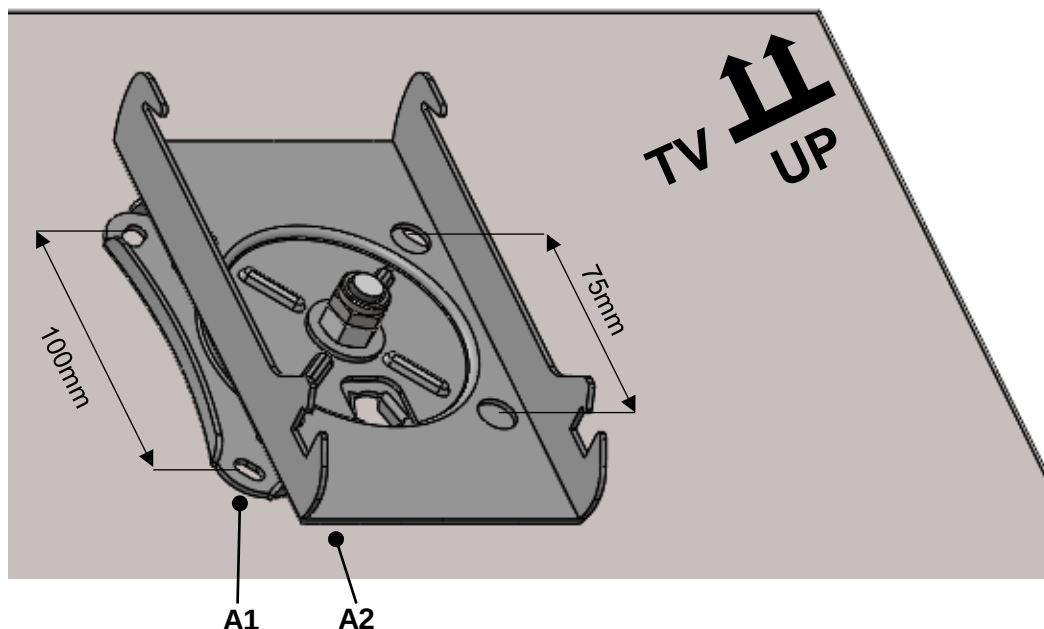


1a 75x75 mm-

- I Rotate part A2 and place Z5 washer on the inside oval hole of part A1. Repeat for all 4 holes

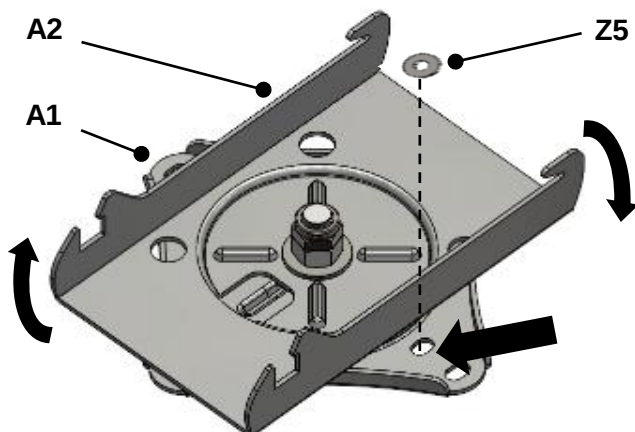


- II Screw Z1/Z2 (according to the TV mounting holes size) through the washers into the TV

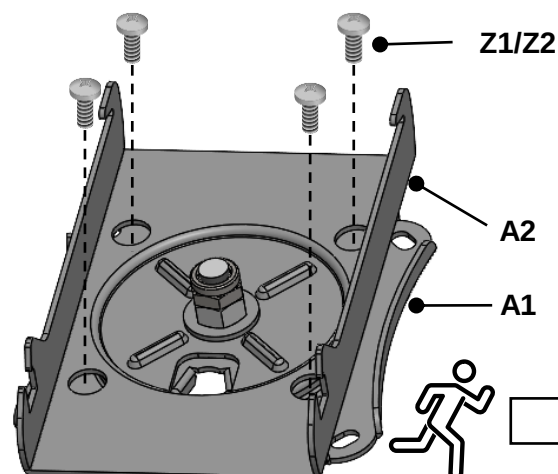


1b 100x100 mm-

- I Place two Z5 washers on the outside oval holes of part A1 and screw two Z1/Z2 screws (according to the TV mounting holes size) through the washers into the TV

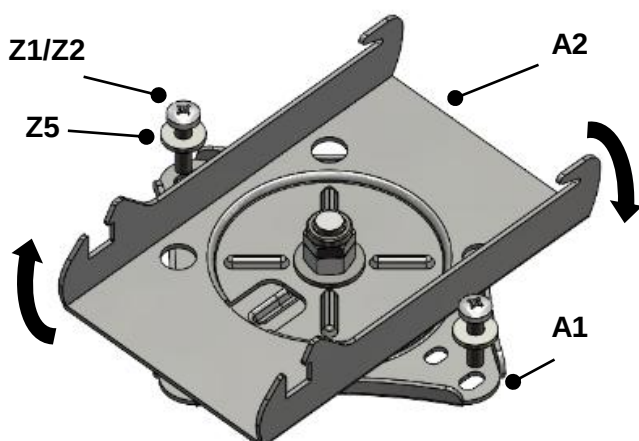


- II Repeat for the other 2 screws and washers

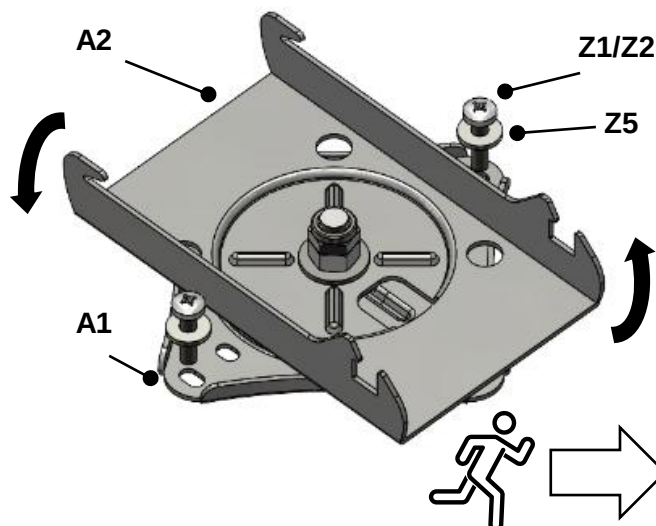


1c TV mounting hole pattern of 200x200 mm up to 400x400 mm:

I Disassemble the screws from the adaptors (B)

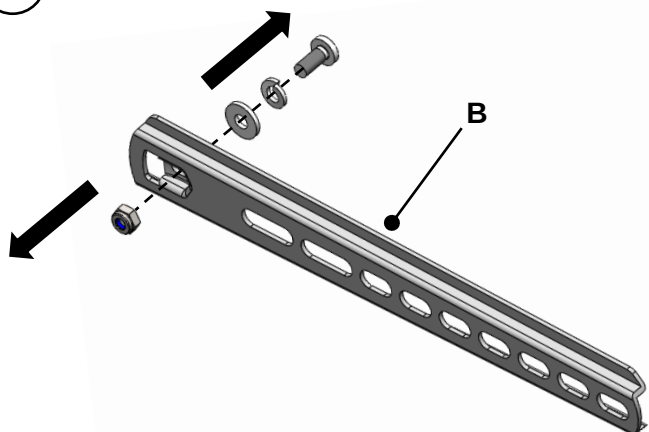



II Rotate part A2 45° relative to part A1

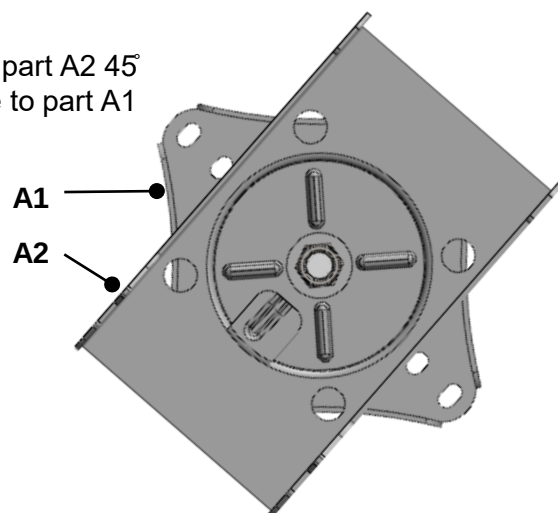

III Connect two adaptors (B) to part A1 and reassemble the screws. Rotate part A2 back and repeat for the two additional adaptors
Continue according to your TV shape

Flat TV

Curved TV

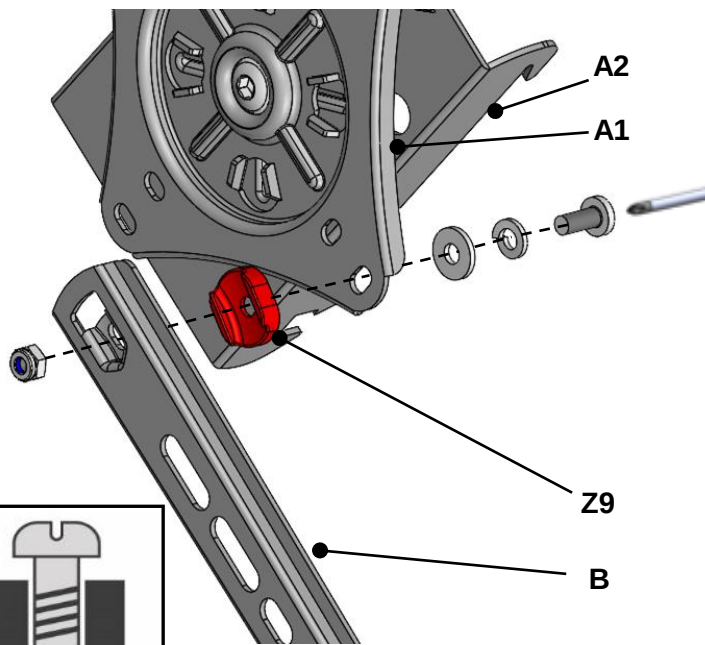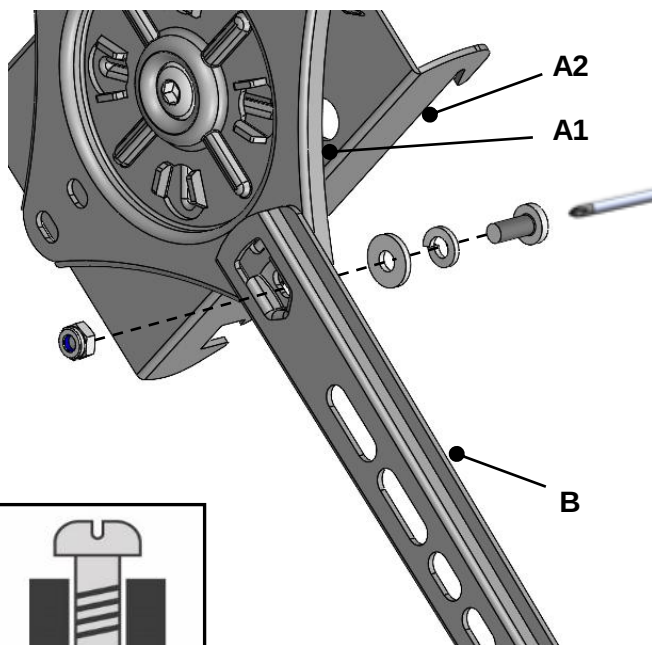


PARTIAL
TIGHTENING


Z9



Correct

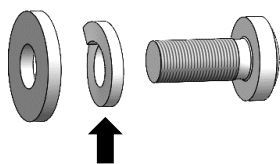


Incorrect

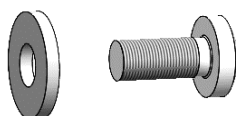


PARTIAL
TIGHTENING


Correct

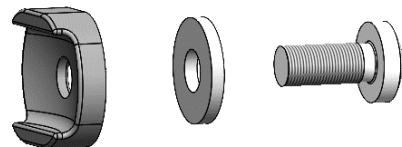

Incorrect

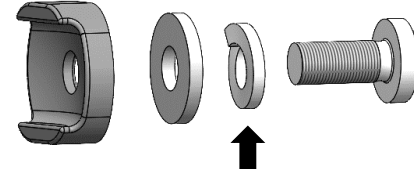


Position the adaptors according to your TV mounting hole pattern.

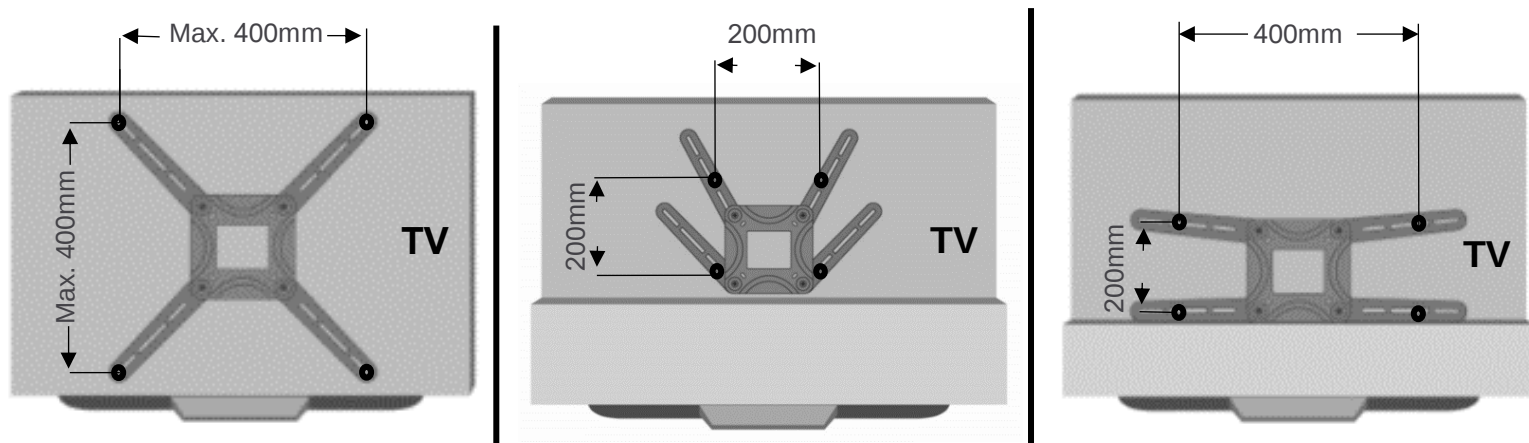

For more positioning options turn to the last page.


IV

Connect the rotation mechanism (A) with the adaptors (B) to the TV in all 4 TV mounting holes

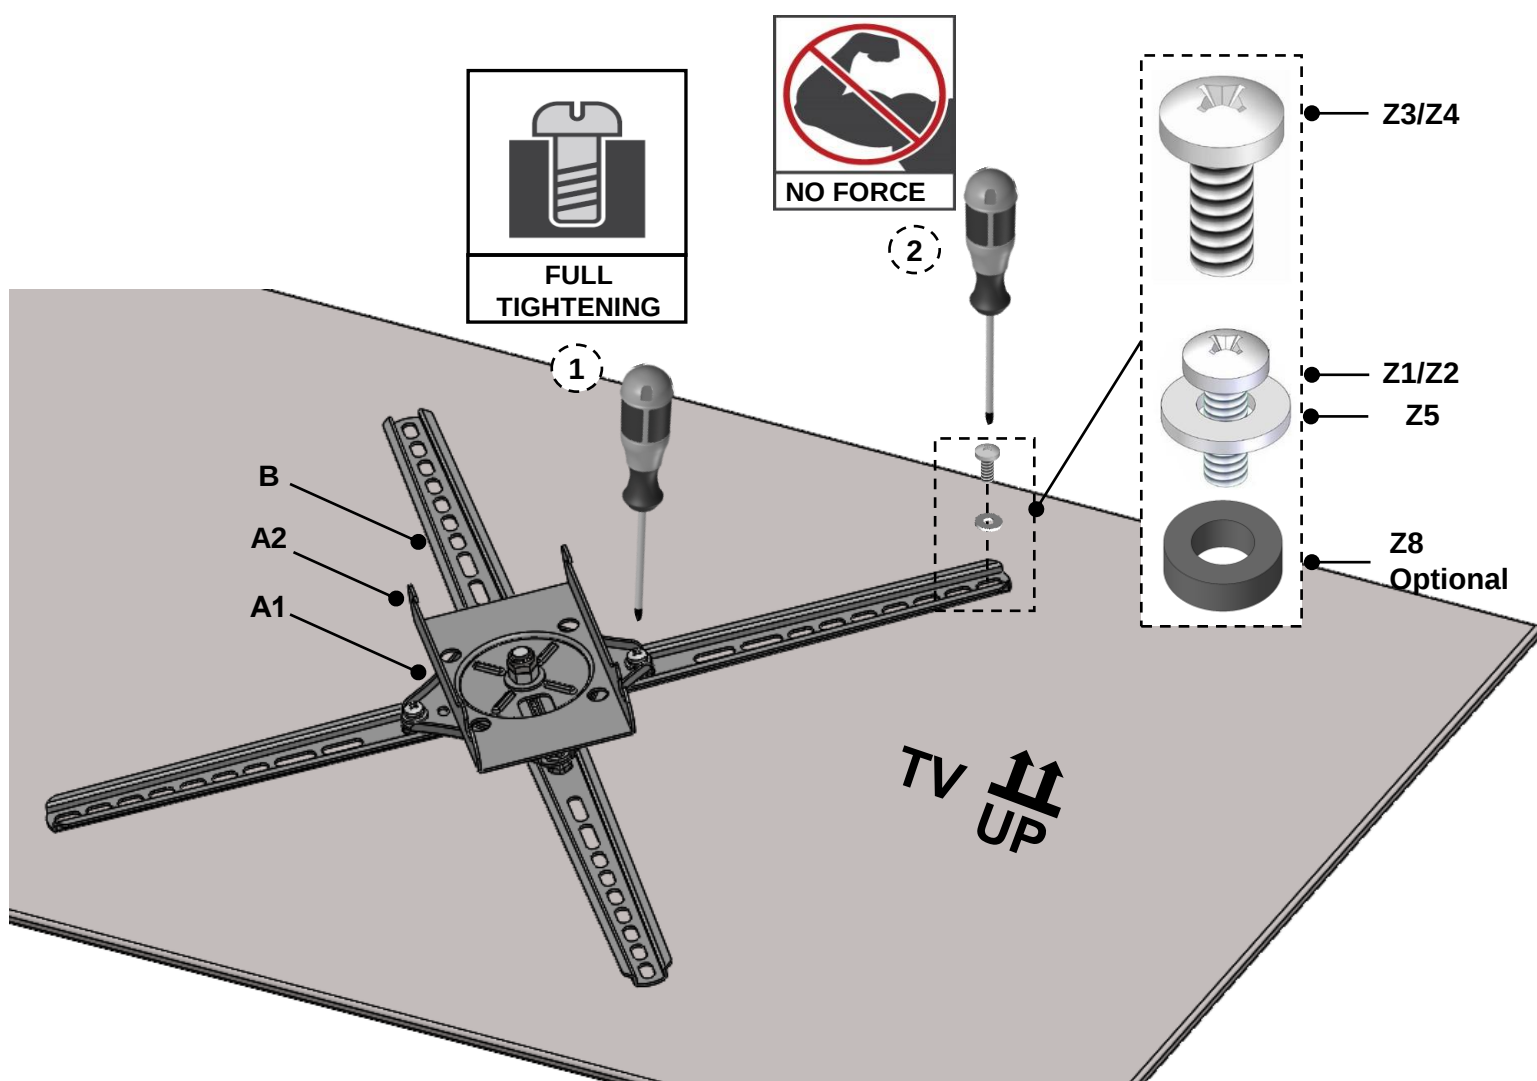


2

Follow the steps according to whether you're installing on a wall
or on a mount

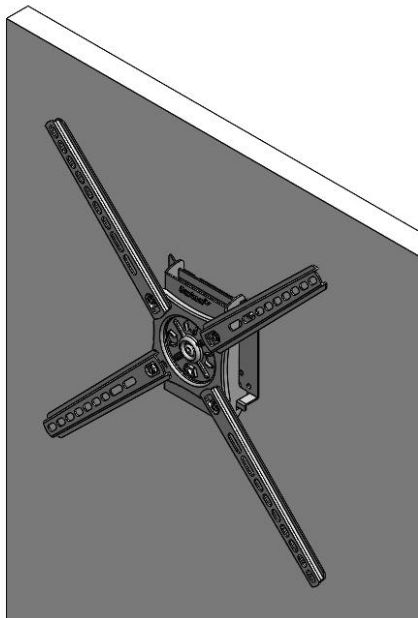

3

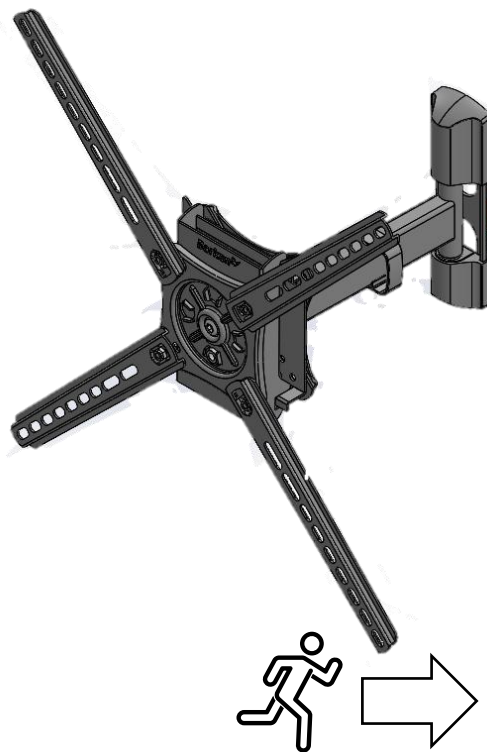

5

Install the Connection Plate (C) on the wall


3

Determine the desired installation height

Note, the center of the TV back screen mounting holes is usually different from the center of the entire screen.


3a

The recommended height of the screen center from the floor is 43" – 47" / 110 - 120 cm. Determine the distance - ① from the bottom edge of the TV to the floor.

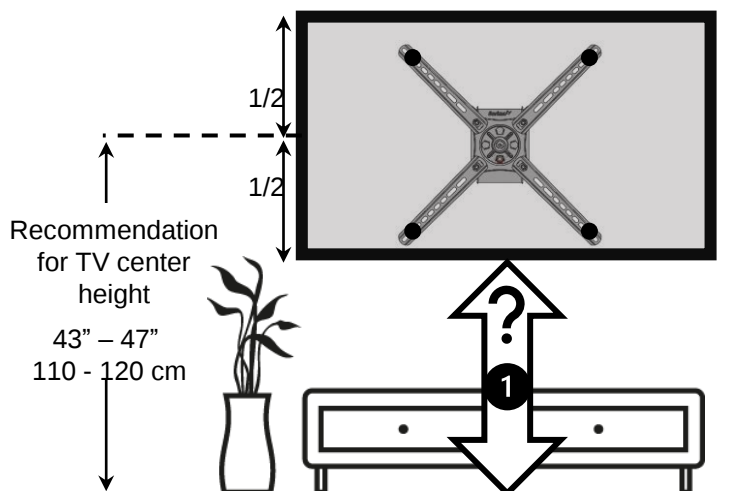


3b

Determine the distance- ② from the center of the back screen mounting holes to the bottom edge of the TV.

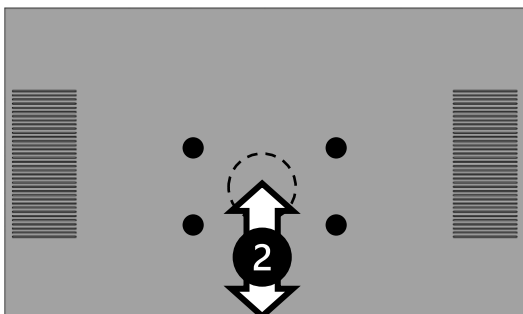



3c

Position the center of the Connection Plate (C) at the distance from the floor that equals the sum of the combined distances of ① and ②. On the wall, mark the center of the back screen mounting holes.

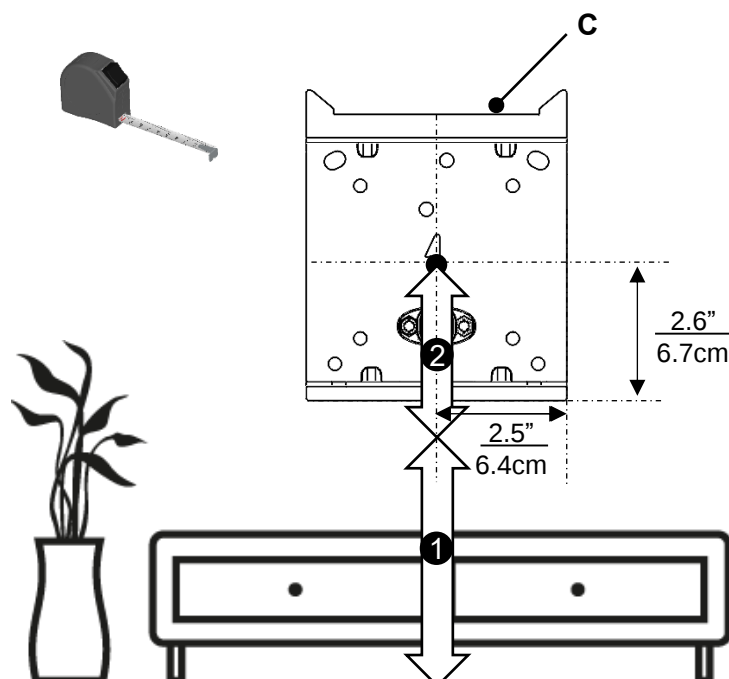

4


Follow the steps according to your wall type

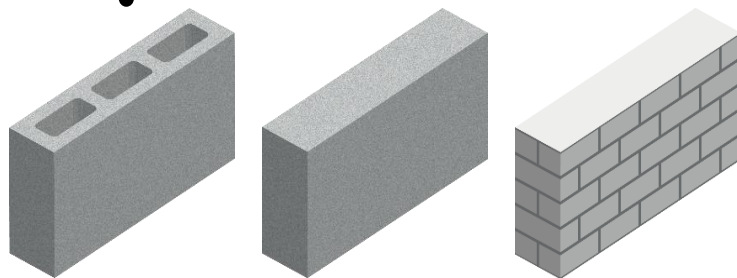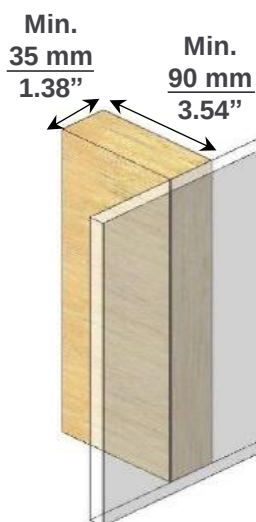


Mark the holes on the wall according to the desired position

4a


Use a stud finder

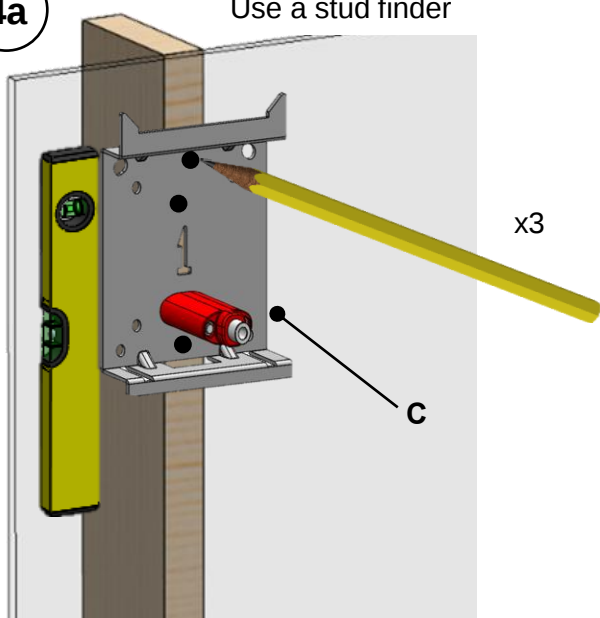


4b

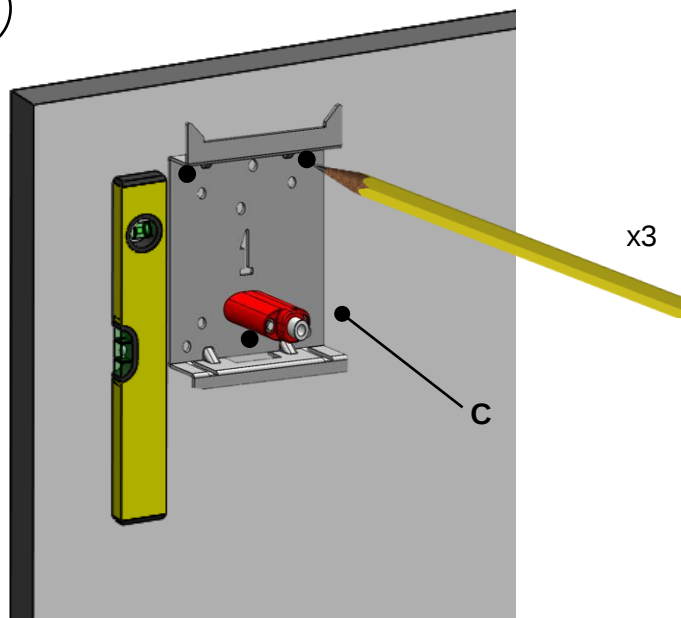

Make sure all holes are drilled inside the stud


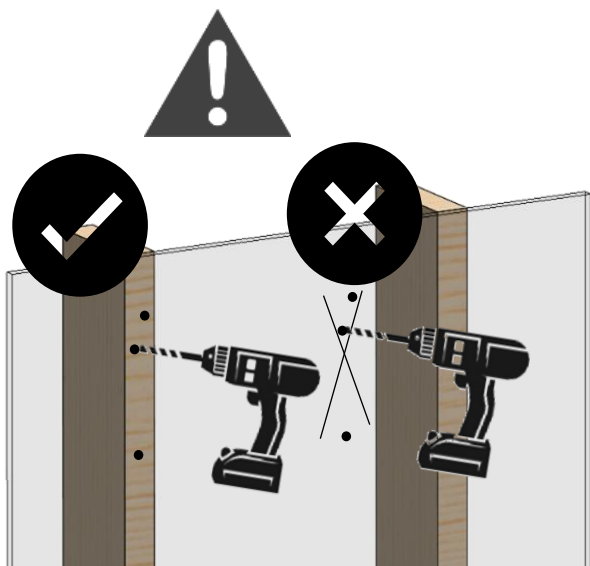


Make sure there are no electrical/water lines in the wall before drilling, and then drill according to the markings

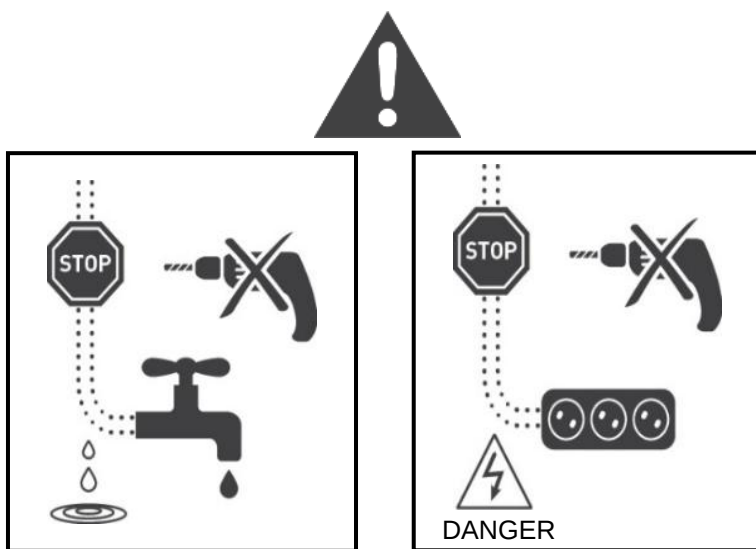


4a

Drill with 5/32" \ 4mm drill bit.


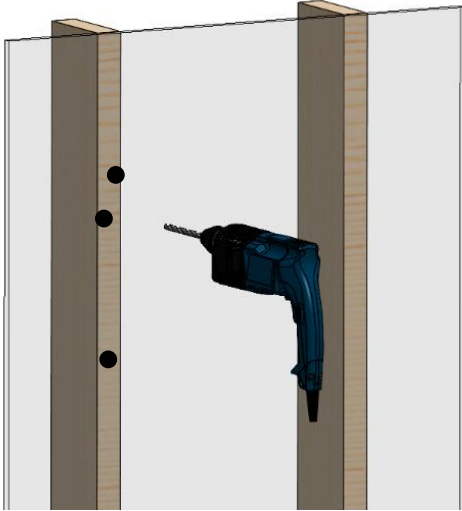
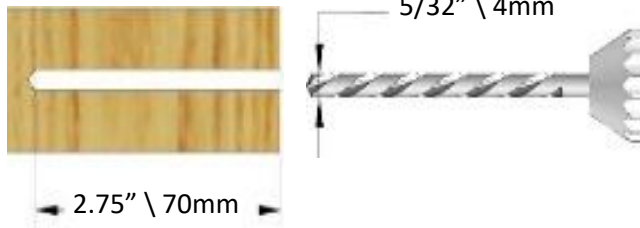


4b







First use 1/4" \ 6mm drill bit.

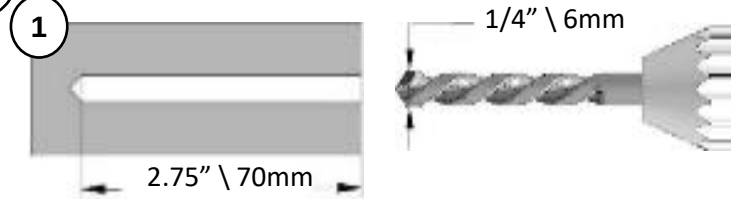

Afterwards use 3/8" \ 10mm drill bit.

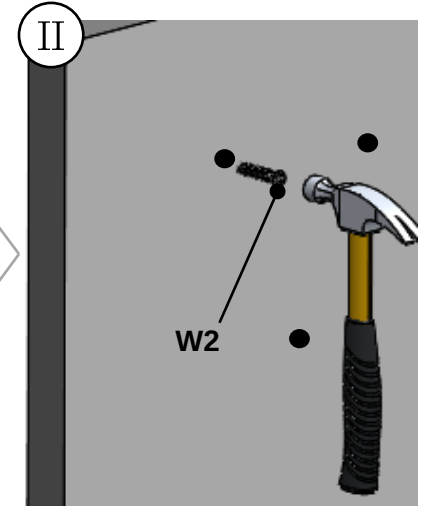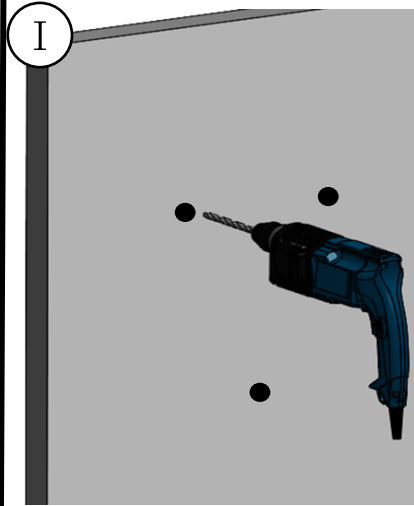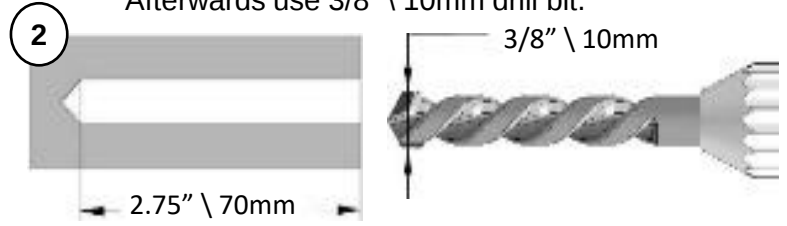


The anchor must be sunk at least 3/8" \ 10 mm into the plaster coating.

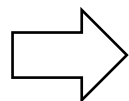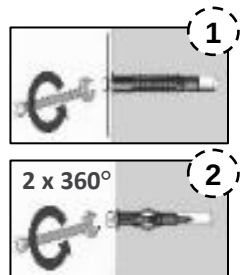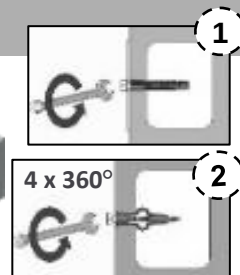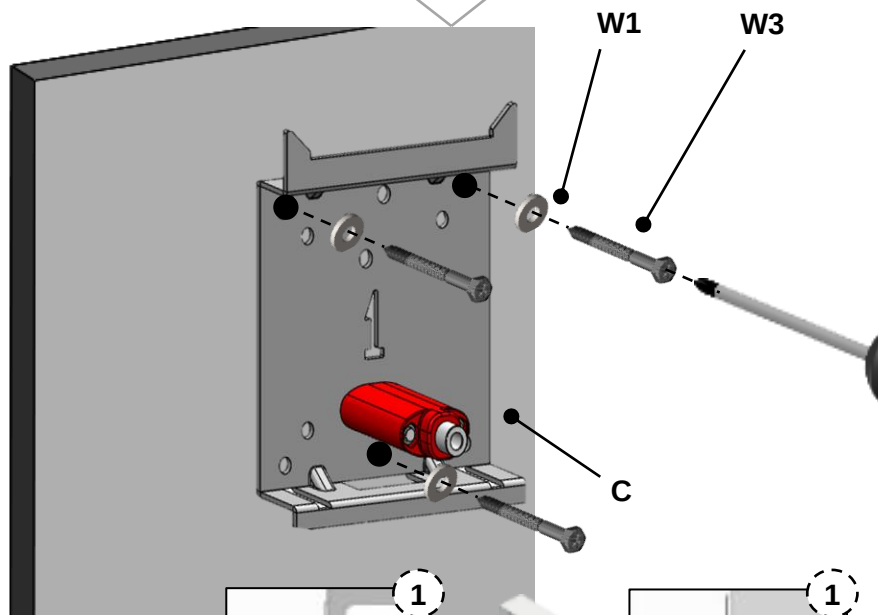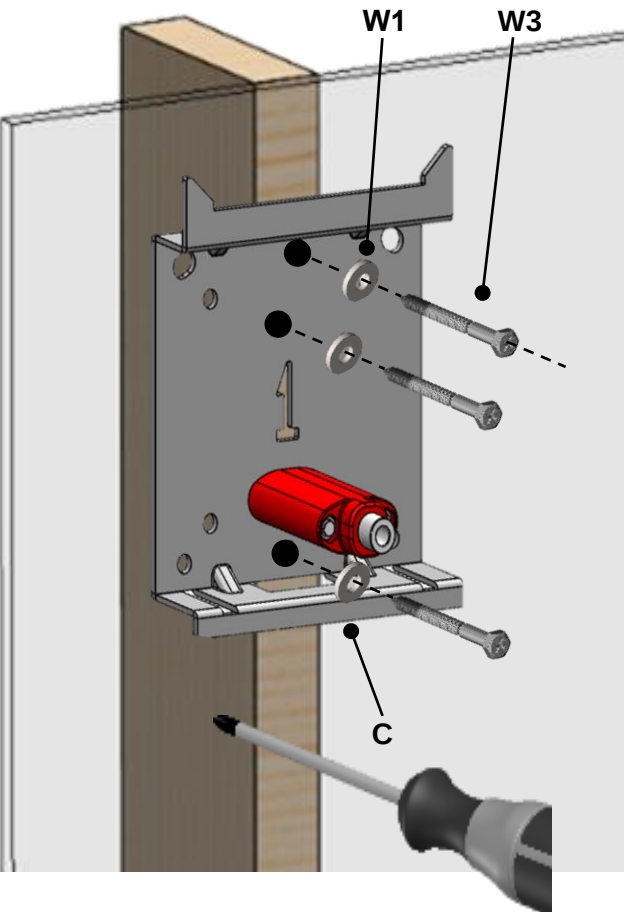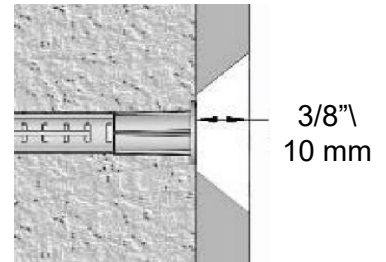


7

5 Set the mount to an upright position – without tilt

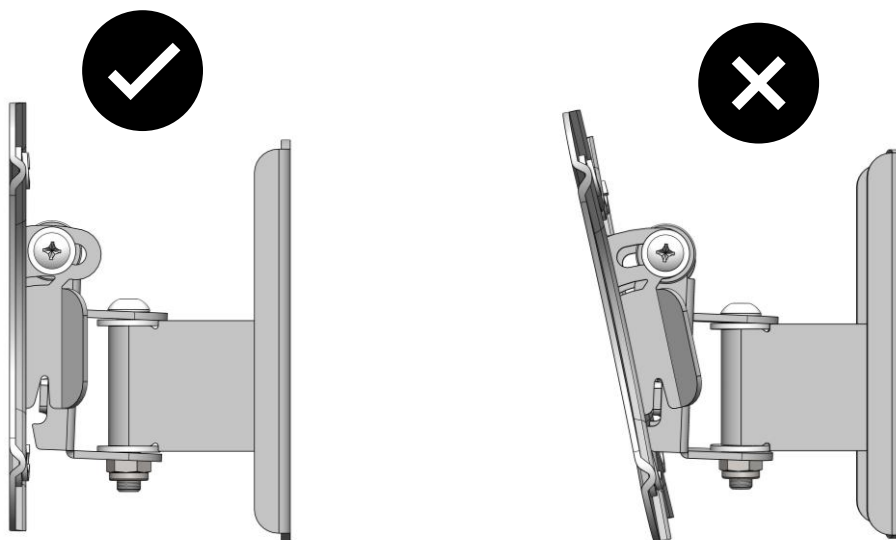



6 Install the Connection Plate on the TV mount-

Install the Connection Plate (C) on the TV mount by inserting screws (Z6) through the wanted holes (according to the TV mounting hole pattern) and securing them from the other side with nuts (Z7)

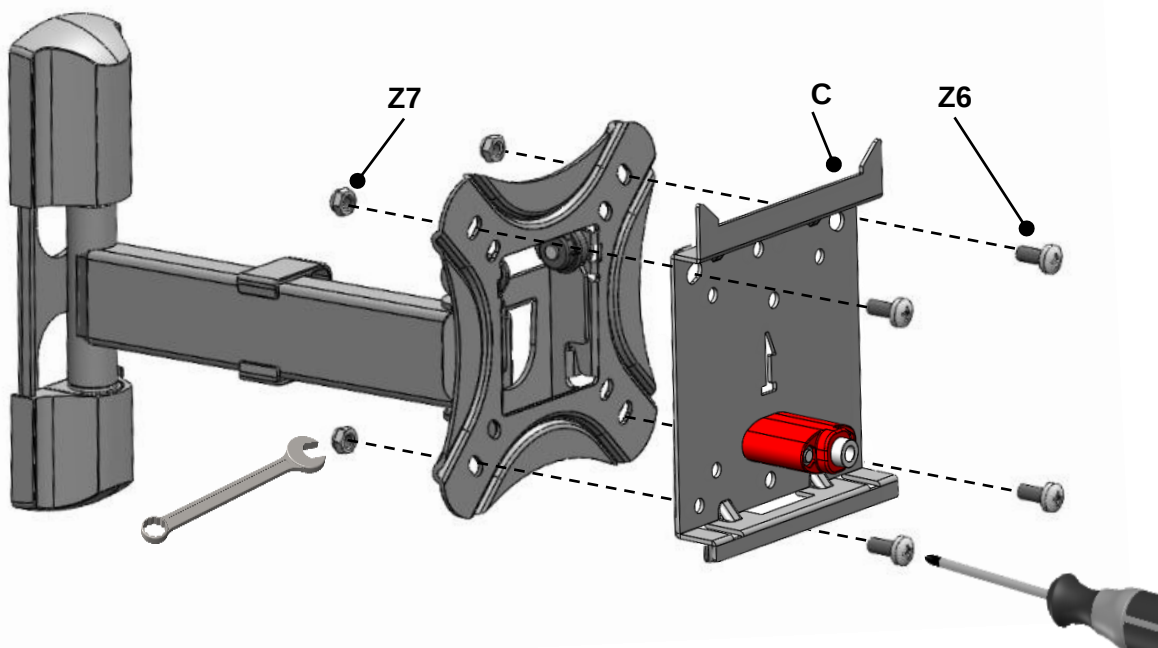



7 Weight test

Apply force on the upper part of the plate and make sure it is connected securely

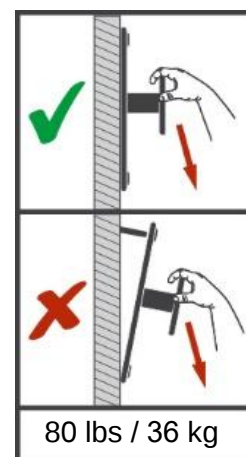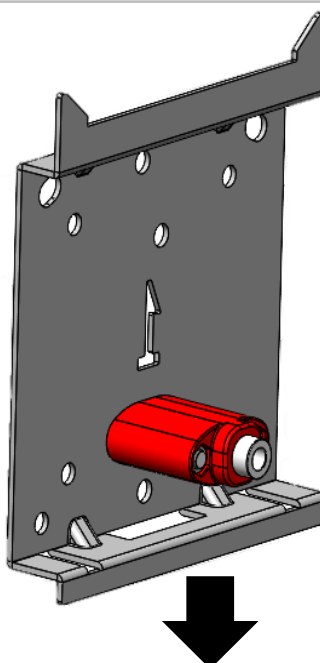


8 Install the TV on the Connection Plate

- I Hang the TV on the Connection Plate (C), **make sure** part A2 attaches both upper teeth securely to the Connection Plate.

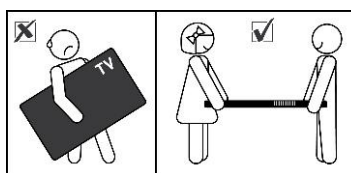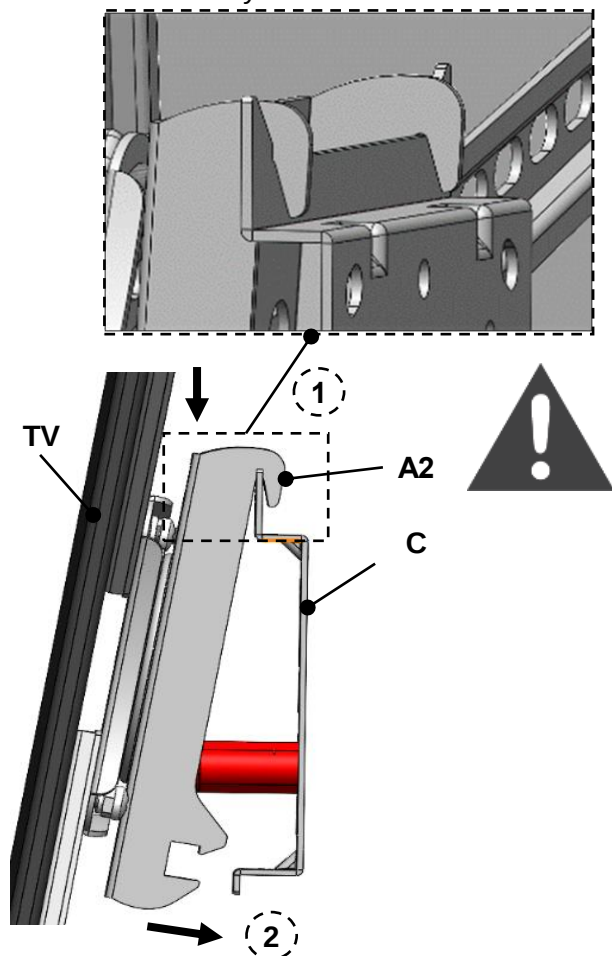


- II Then, push the bottom of the TV towards the wall until the lower teeth of part A2 are completely inserted into the Connection Plate's slots (you will hear a "click")

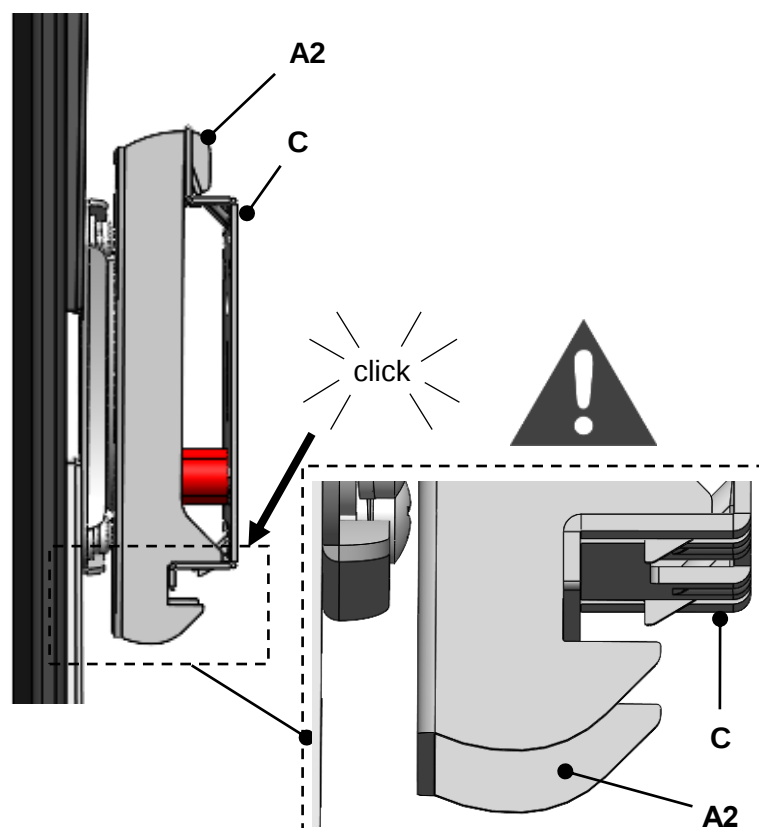


9 Screen rotation



- I Gently pull the bottom of the TV away from the wall/mount, and slightly rotate in the desired direction

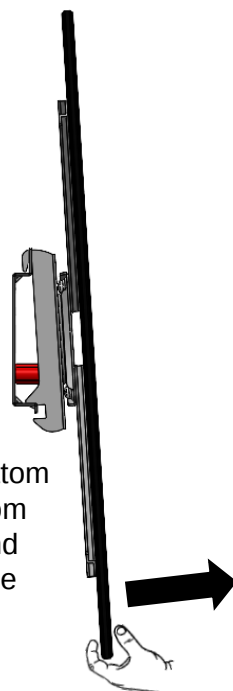




- II Stop pulling the screen and continue to rotate it with both hands until a click is felt and the screen locks into place. The screen locks after turning 90° (a quarter turn). Repeat if another rotation is required.

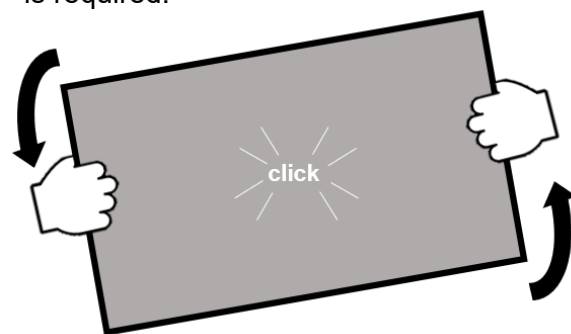

10 Level the TV


If necessary, level the screen by holding it with both hands and, without pulling it out and unlocking it, rotating it gently in the desired direction,

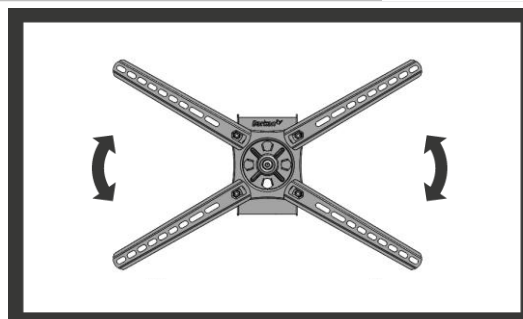

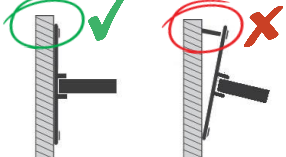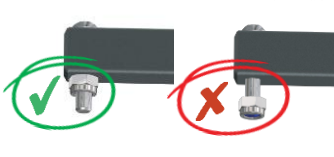Biannual safety inspection  	Secured to wall  	Tightened bolts  	Lubricated hinges 
--	---	--	---

Disconnect the TV

Gently pull the bottom of the TV away from the wall/mount, and lift it upwards








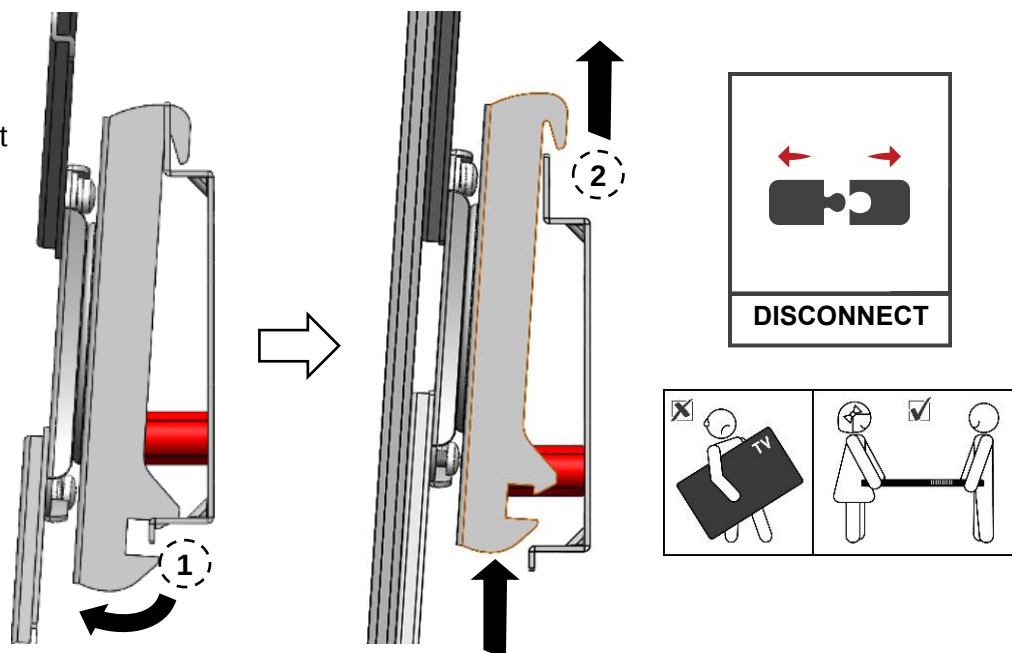


BACKSCREEN CONNECTION POSITIONING OPTIONS

All TV backscreen connections are in millimeters (Width x Height).

There are a few sizes of TV plates available.

The backscreen connections in position 1 are included in some of the different TV plates, according to their size, and do not require the use of the 4 adapters (marked in blue).

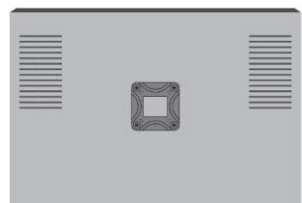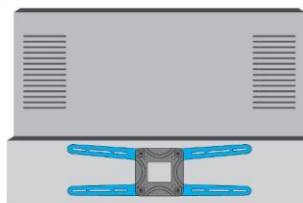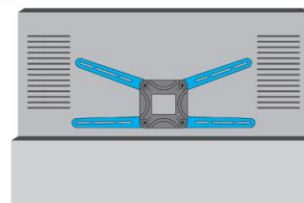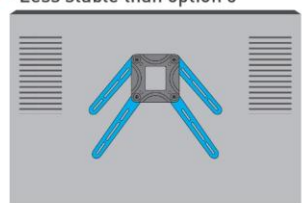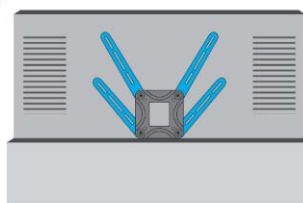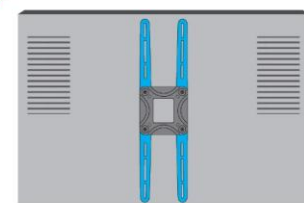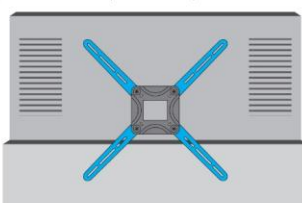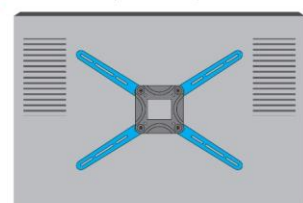1 75x75, 100x100, 100x200, 200x100, 200x200 	2 200x100, 300x200, 400x200, 600x200 	3 200x100, 300x200, 300x300, 400x200, 400x300, 600x200, 600x300 
4 100x100, 200x200, 300x300 *Less stable than option 5 	5 100x100, 200x200, 300x300 	6 100x200, 200x300 
7 100x100, 200x200, 300x300, 300x400, 400x400, 600x400 	8 200x100, 300x200, 400x200, 400x300, 600x400 	If your backscreen connections are not included in any of the positions, please contact us www.barkanmounts.com/support

