



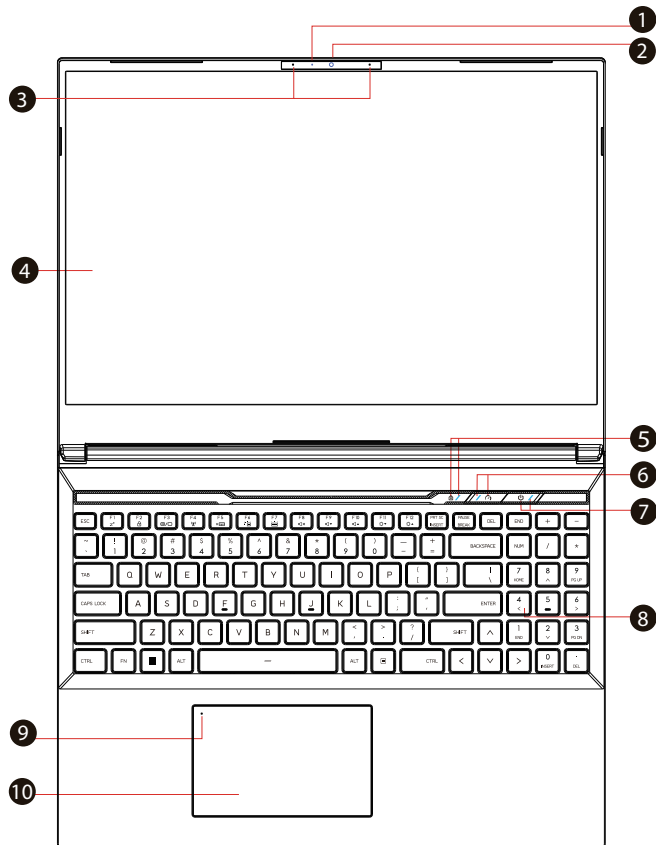


* Tapping twice on top-left corner enables or disables the touchpad.

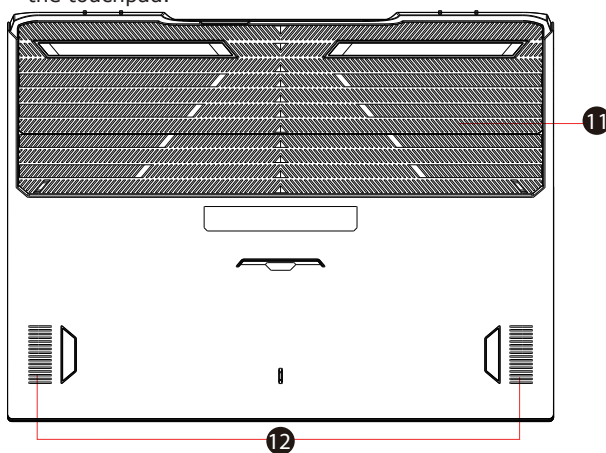


11- Ventilation
12- Speakers

- 1- Webcam Status LED
- 2- Webcam
- 3- Microphone
- 4- LCD screen
- 5- Caps Lock Indicator LED
- 6- Mode Switch & LED indicator
- 7- Balanced / Enthusiast / Overboost Switch
- 8- Keyboard
- 9- Touchpad Status LED / Touchpad Toggle*
- 10- Touchpad / Clickpad

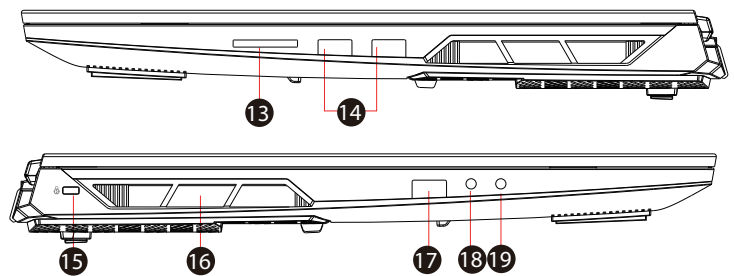

- 13- Card Reader
- 14- USB-A Ports
- 15- Kensington® Lock Port
- 16- Ventilation
- 17- USB-A Ports
- 18- Microphone Jack
- 19- Headset Jack

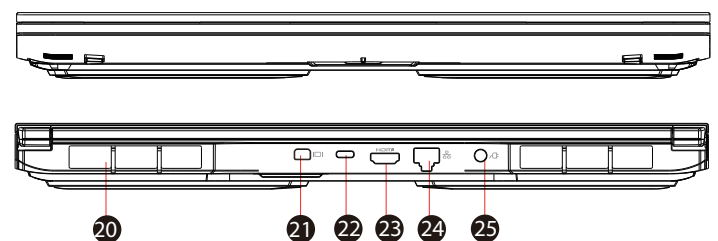

- 20- Ventilation
- 21- Mini-DisplayPort
- 22- USB-C Port
- 23- HDMI Port
- 24- Network/LAN Port
- 25- Power Input

Starting

* Please note: The AC adapter included with your PC was specifically designed and approved for your model. Utilization of an after-market may damage either the notebook or other devices connected to it. If damage is determined to have been caused by utilization of an unauthorized power supply, it will not be protected under warranty.

