





FR - CHARGER

EN - CHARGE
DE - AUFLADEN
NL - OPLADEN
ES - CARGAR
IT - CARICARE


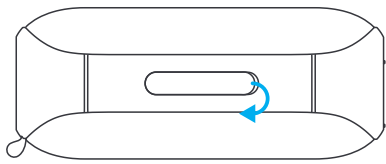


OUVRIR
OPEN
ÖFFNEN
OPENEN
ABRIR
APRIRE

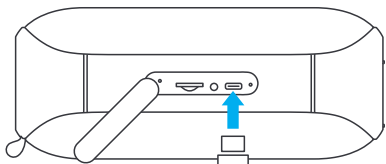



1^{ère} charge = 4 heures
1st charge = 4 hours
1. Ladung = 4 Stunden
1ste lading = 4 uren
1° carga = 4 horas
1° carica = 4 ore

MAX POWER = 5VDC - 2.0A

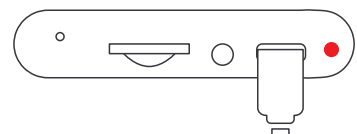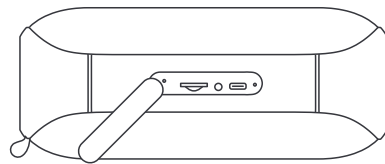

FR - JUMELER

EN - PAIR
DE - PAAREN
NL - KOPPELEN
ES - SINCRONIZAR
IT - ACCOPPIARE

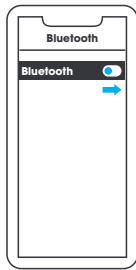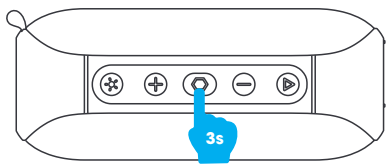

FR - UTILISER

EN - HOW TO USE
DE - VERWENDEN
NL - GEBRUIKEN
ES - UTILIZAR
IT - USARE

CONTROLS



- PRESS 1x**
- PRESS 2x**
- PRESS 2s**
- PRESS 3s**
- PRESS 5s**




ON =

OFF =



FR - DEL

EN - LED
DE - LED
NL - LED
ES - LED
IT - LED

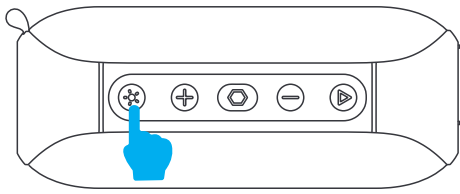

LED EFFECT ON =


CHANGE LED EFFECT = (9 MODES)

LED EFFECT OFF =



FR - PORTS

EN - PORTS
DE - ANSCHLÜSSE
NL - POORTEN
ES - PUERTOS
IT - PORTE

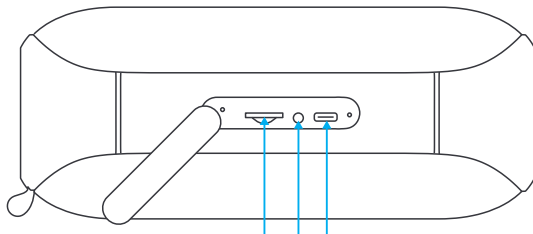

MICRO SD

USB-C

AUX JACK 3.5mm

FR : Les commandes ne marchent pas en mode AUX. **EN:** The controls do not work in AUX mode.
DE: Die Tasten funktionieren nicht in AUX-modus. **NL:** De knoppen functioneren niet in AUX-modus.
ES: Los botones no funcionarán en modo AUX. **IT:** I tasti non funzionano in modalità AUX.



FR - ATTENTION

EN - WARNING
DE - WARNUNG
NL - WAARSCHUWING
ES - ADVERTENCIA
IT - AVERTENZA

FR. Écouter de la musique avec un volume élevé peut gravement nuire à l'audition.

EN. Listening at high volume levels for long periods can lead to permanent hearing defects.

DE. Das Hören mit Kopfhörern bei sehr hohen Lautstärken, vor allem über längere Zeit, kann Gehörschäden verursachen.

NL. Het langdurig luisteren naar muziek op hoog volume kan schade aan het gehoor veroorzaken.

ES. Un volumen excesivo durante un periodo prolongado de tiempo puede causar años auditivos permanentes.

IT. L'esposizione prolungata a un volume elevato può provocare danni permanenti all'udito.



FR - RÉINITIALISER


EN - RESET
DE - ZURÜCKSETZEN
NL - RESETTEN
ES - REINICIAR
IT - RESET

1




SUPPRIMER
DELETE
BESEITIGEN
VERWIJDEREN
SUPPRIMIR
RIMUOVERE



2

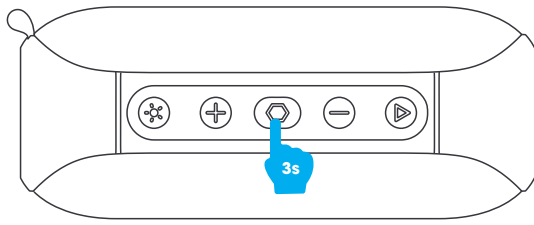

3

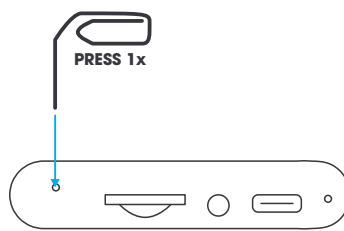


4

 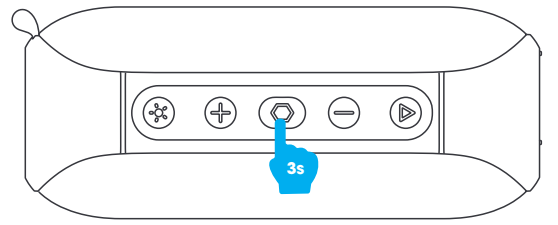


FR - DOUBLE JUMELAGE

EN - DOUBLE PAIRING
DE - DOPPELTE VERBINDUNG
NL - DUBBELE VERBINDING
ES - DOBLE CONEXIÓN
IT - DOPPIA CONNESSIONE


1

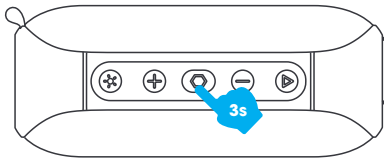

2

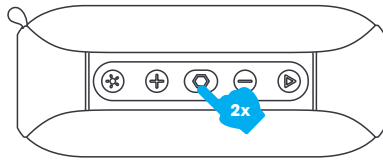

3

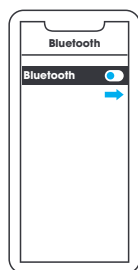


4



FR - RÉGLAGE MANUEL

EN - MANUAL SETTING
DE - MANUELLE EINSTELLUNG
NL - HANDMATIGE INSTELLING
ES - AJUSTE MANUAL
IT - IMPOSTAZIONE MANUALE

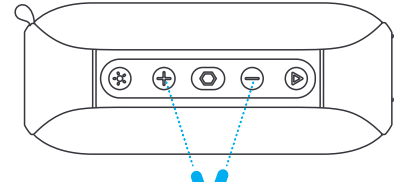

DISCONNECT =

RECONNECT =

RESET BLUETOOTH =

