


【Installation Manual】

A Package details


 x14	 x8	 x8
Motherboard screw	The power screw	HDD screw
 x3	 x12	 x5
Copper pillar	FAN screws (long)	Cable Tie
 x2		
HDD Installation screws		

B Schematic diagram of wire interface

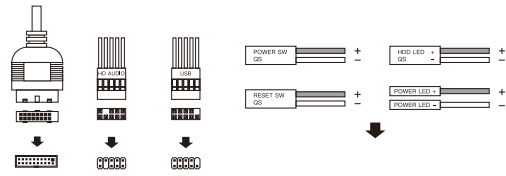


Please refer to the manual that came with your motherboard for any specific connection instructions

C Product size

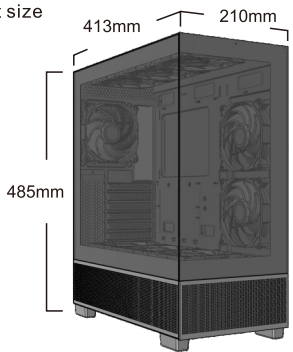


D IO panel

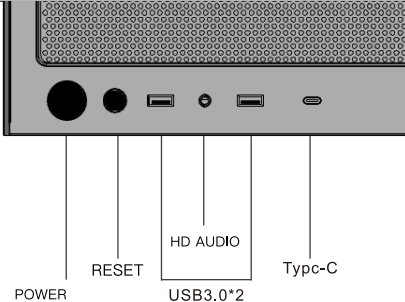


POWER RESET HD AUDIO USB3.0*2 Type-C

E Machine overview

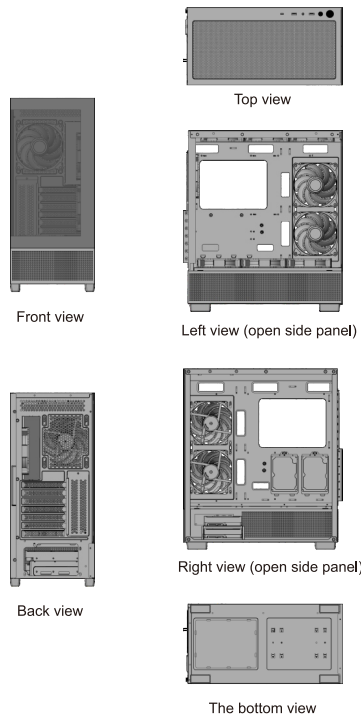


Top view
Front view
Left view (open side panel)
Right view (open side panel)
Back view
The bottom view

F Chassis disassembly diagram

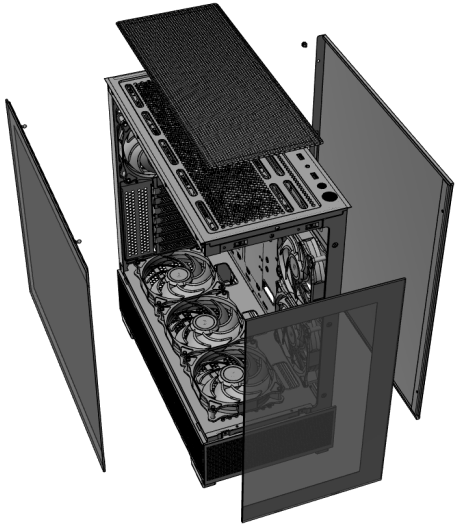


G Remove and install glass side panels

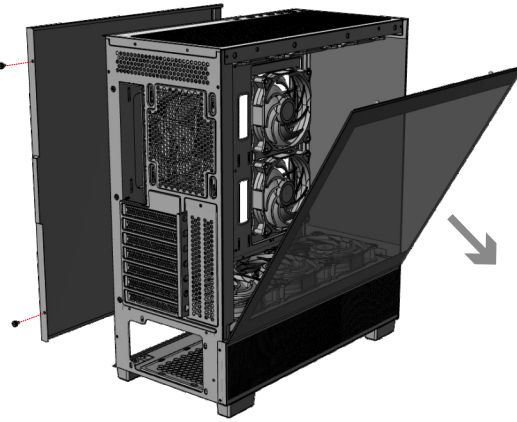


The way of Side glass panel opens is by Clip (without screws).
Remove the iron side plate: remove the two screws at the rear.

H The power supply installation

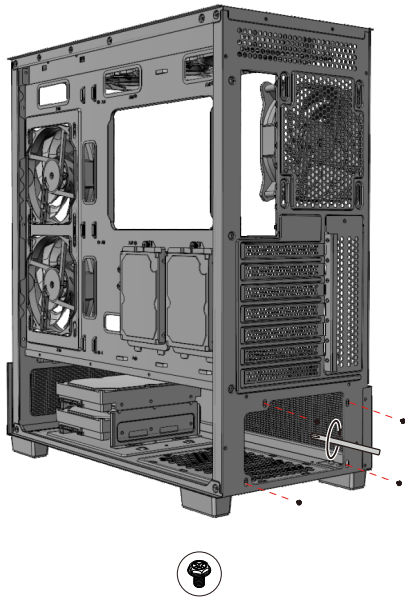

The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different, take the actual object as the standard

I Motherboard installation

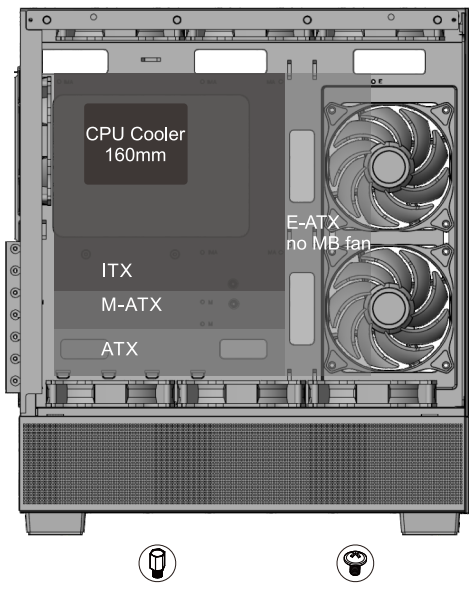

CPU Cooler 160mm
ITX
M-ATX
ATX
E-ATX no MB fan

According to the motherboard type (ATX/M-ATX/ITX), the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Height limit: 160mm

