 


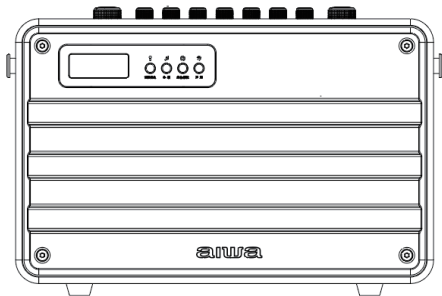


MI-X420 Enigma Lite

User Manual



 Unboxing

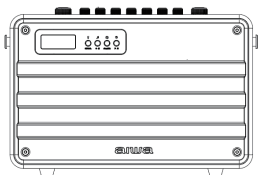

- MI-X420 Enigma Lite Speaker
- Remote Control
- Microphone
- DC15V 1.6A Charger
- 3.5mm Audio Cable
- Apple Audio Cable
- Android Audio Cable
- User's Manual

Please refrain from using any damaged components.
Contact your local authorized AIWA distributor/customer service
should you need any assistance.

Product Specifications

Model Number: MI-X420 Enigma Lite

BT Version: V5.0

IP Rating: -

RMS Output: 100W

Frequency Response: 50~15kHz

S/N Ratio: $\geq 70\text{dB}$

Distortion THD: $\leq 10\%$

Sensitivity: 95dB + 3dB

Supports: TF Card, USB,

Supported Profiles: MP3, WAV, APE, FLAC, WMA

Transmission Distance (Estimated): 10 Meters (No Obstacles)

 
Battery Capacity: 18000mAh

Playback Time: 3 – 8 Hours (Depends on Volume)


Charging Time: 3-4 Hours

The above are estimated values tested in a practical environment and may vary upon individual usage habits.

Product Overview

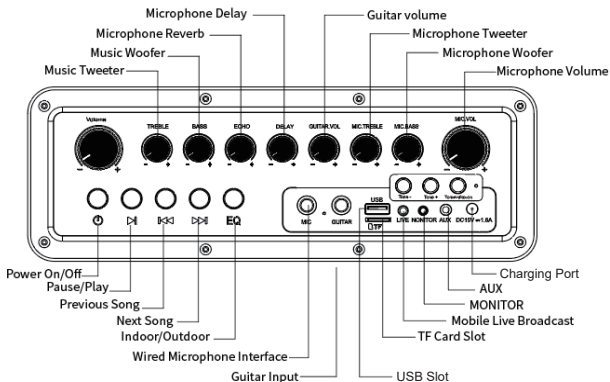

Product Overview

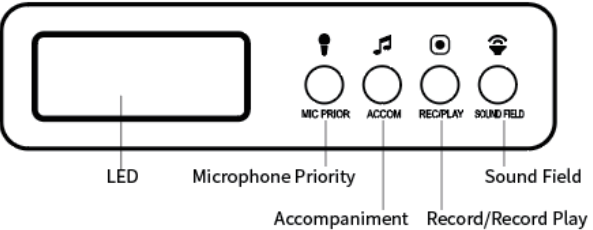 

Product Overview



Product Overview



Product Usage Guide

Power ON/OFF:

Long press power button

Music Control:

Play/Pause: Click  once (1)

Next Song: Click  once (1)

Previous Song: Click  once (1)

Assorted Functions:

Record: Insert TF card/ USB into the designated port. Please make sure Microphone is connected. Short press the record button to start/stop recording. (Supports recording accompaniment soundtrack + Microphone input)

Play Recorded Tracks: Long press 

Delete Recorded Files: Long press  during selected music playback.
(Deletes current music playback from recorded files)

Change Playback Mode: Short press power button to switch between BT/AUX/USB/TF card playback

AUX Playback Mode: Insert AUX cable and connect it to audio source to start.

TF Card Playback Mode: Insert TF card into TF port.

Sound field switch: Click to cycle between Original-Professional-Popular-Echo sound field profile.

Microphone Delay: Works with all sound field modes except original mode.

Microphone Echo: Works with all sound field modes except original mode.

Tone +/-: Short press Tone +/- button once. Short press on Tone+ or Tone- to adjust tone accordingly.

Mic Inflexion: Short press Tone+ or Tone – button to adjust Mic Inflexion accordingly.

Special Effects: Users can play special effects through the remote control.

Microphone Priority: Press the mic priority button on the remote control first.

Accompaniment: Press the accompany button on the remote control/ Accompany button on the speaker.

 
EQ: Short press mode button on the speaker/ Long press mode button on the remote control to cycle between various EQ modes.

Monitor/Earphone Function: Simple plug in your earphones/headphones into the monitor port. The speaker will now be muted. Long press the sound field button to un-mute speaker. (Playback will commence in both speaker and earphones/headphones.

Perform Factory Reset:


Insert needle into reset button until the speaker powers down.

Connecting the Product

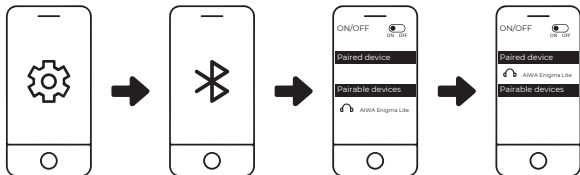

1. Turn on Bluetooth (BT) on your mobile device.
2. Turn on the speaker.
3. Search and connect to "AIWA Enigma Lite" from your mobile device

 TWS Function

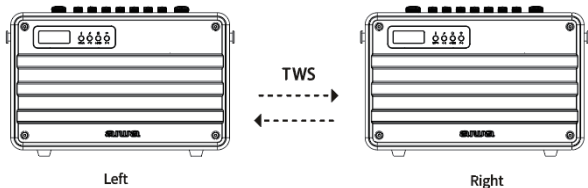

Power ON/OFF:

1. Turn on Both speakers. *LED Screen flashes on both units
2. Choose one of the units to function as the "Main unit", long press "Play" button on this unit and it will enter TWS pairing mode. *LED Screen flashes
3. *Main unit LED screen flashing slowly + LED screen lights up without flashing indicates successful pairing of both speakers
4. Turn on Bluetooth (BT) on your mobile device
5. Search and connect to "AIWA Enigma Lite" from your mobile device
6. Playback should now commence via both speaker units at the same time.
7. Long press "Play" button to disable TWS pairing. *LED Screen Flashes

Battery & Charging

Charging the speaker:

Insert DC 5V adapter

*Red LED Light lights up

*Red LED Light extinguishes upon full charge

Approximate charging time: 3-4 Hours



Aiwa Electronics Int'l Co., Ltd.
Explore more at www.int-aiwa.com