

Operation Manual

Hydraulic Jack

65066

wiltec



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Due to further developments, illustrations, functioning steps, and technical data can differ insignificantly.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.



The information contained in this document may alter at any time without previous notice. It is prohibited to copy or spread any parts of this document in any way without prior written allowance. All rights reserved.

The WilTec Wildanger Technik GmbH cannot be held accountable for any possible mistakes in this operating manual, nor in the diagrams and figures shown.

Even though, the WilTec Wildanger Technik GmbH has undergone biggest possible efforts to ensure that the operating manual is complete, faultless, and up to date, mistakes cannot be entirely avoided.

If you should find a mistake or wish to make a suggestion for improvement, we look forward to hearing from you.

Send an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in various languages can be found in our online shop via:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler
Germany

To return orders for exchange, repair, or other purposes, please use the following address. Attention! To allow for a smooth execution of your complaint or return, it is important to contact our customer service team before returning the goods.

Returns Department
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler

E-mail: **service@wiltec.info**

Tel: +49 2403 55592-0

Fax: +49 2403 55592-15



Introduction

Thank you for purchasing this quality product. **To minimise the risk of injury we urge that our clients take some basic safety precautions when using this device. Please read the operation instructions carefully and make sure you have understood its content.**

Keep these operation instructions safe.


Safety Instructions

- Do not exceed the maximum load capacity of 680 kg (1500 lb).
- Use the device only on hard, level surfaces.
- Distribute the load evenly on the saddle plates.
- For lifting only. Support the vehicle with appropriate means immediately after lifting.
- Do not adjust the safety valve.
- Wear appropriate protective equipment during use such as certified safety goggles and heavy-duty work gloves.
- Keep clear of the load while lifting and lowering.
- Lower the load slowly.
- Lift the vehicle only at the manufacturer-recommended locations.
- Inspect the device before each use; do not use if parts are loose or damaged.
- Secure the load with an appropriate restraint device.
- Ensure the mechanical load-holding devices of the lift are engaged immediately after lifting the load.
- Do not move or reposition the vehicle while it is on the lift.
- Do not make any modifications to this product.
- Keep your hands away from the lift arms when raising or lowering the lift.
- Stay alert. Pay attention to what you are doing, and exercise caution when operating the lift. Do not use the lift if you are tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating the lift can result in serious personal injury.
- Read the manufacturer's instruction manual for the ATV or motorcycle being lifted before use.
- Store the unused lift out of the reach of children and other untrained persons. Lifts are dangerous in the hands of untrained users.
- Maintenance work on the lift should only be performed by qualified repair personnel. Maintenance or repair work carried out by unqualified personnel can result in a risk of injury.
- Maintain the labels and nameplates on the lift. These carry important information.


Technical data

Max. load capacity (kg)	680
Min. width (mm)	1055
Max. width (mm)	1282


Parts overview

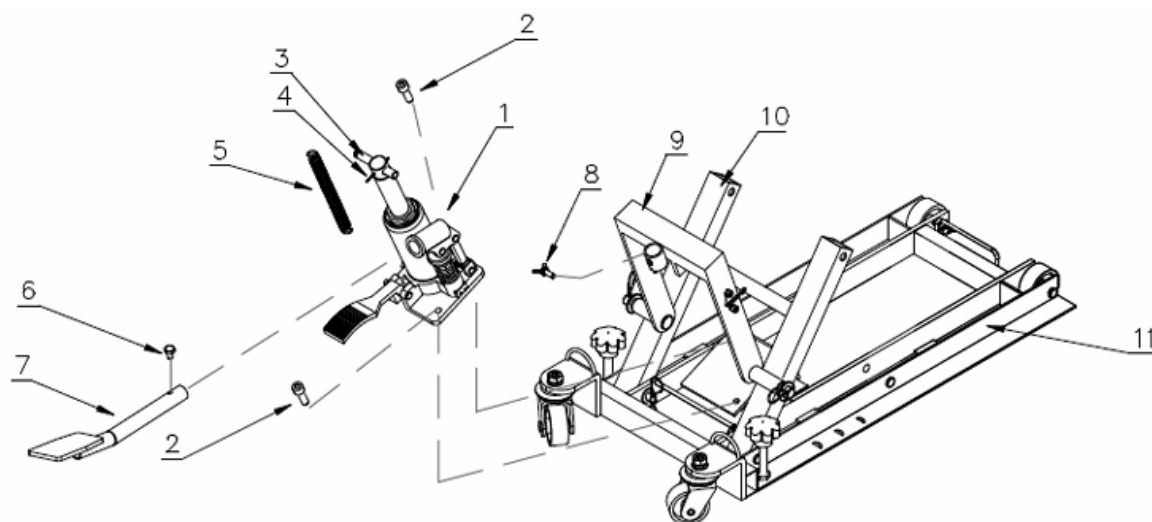

No	Name	Qty.	No	Name	Qty.
1	Pump	1	7	Foot pedal	1
2	Hexagon socket screw	2	8	Wing screw	1
3	Round pin $\varnothing 12$	1	9	Lifting frame	1
4	Split pin	1	10	Lifting arm	1
5	Spring	1	11	Base	1
6	Hexagon head screw	1			

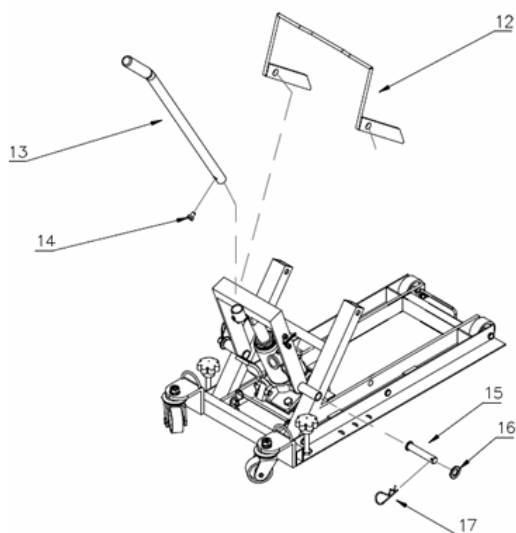

No	Name	Qty.
12	Safety bar	1
13	Handle	1
14	Hexagon head screw	1
15	Round pin $\varnothing 16$	2
16	Washer	2
17	B-pin	2

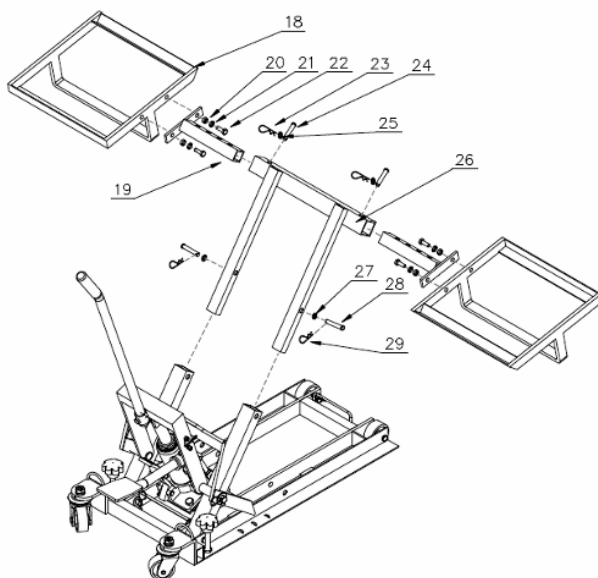

№	Name	Qty.	№	Name	Qty.
18	Clamp	2	24	Round pin $\varnothing 12$	2
19	Position tube	2	25	Washer	2
20	Screw	4	26	Lifting arm	1
21	Washer	4	27	Washer	2
22	Hexagon head screw	4	28	Round pin $\varnothing 12$	2
23	B-pin	2	29	B-pin	2

Maintenance

Check the general condition of the lift before each use. Look for broken, cracked, or bent parts, loose or missing parts, and any condition that may affect the proper operation of the product. If a problem occurs, have it corrected before further use. Do not use damaged equipment.

Change the hydraulic oil at least every three years:

1. Fully lower the lift and remove the oil filler plug on the side of the bottle jack.
2. With assistance, place the lift on its side to allow the old hydraulic oil to drain out of the oil reservoir of the jack completely. Dispose of the old hydraulic oil in accordance with local regulations.
3. Place the lift upright again and completely fill the oil reservoir of the jack with hydraulic oil (sold separately) until the oil reaches the fill hole.
4. Reinstall the oil filler plug.

After use

Wipe the lift dry with a clean cloth. Store the lift in a safe, dry location out of the reach of children and other unauthorized persons.

Important notice:

The reprint or reproduction, even of excerpts, and any commercial use, even in part, of this instruction manual require the written permission of WilTec Wildanger Technik GmbH.