

iCUE 2000D RGB AIRFLOW

ITX - TOWER CASE






CASE SPECIFICATIONS

Length	271mm
Width	200mm
Height	450mm
Maximum GPU length	320mm
Maximum CPU height	90mm
Maximum PSU length	130mm
Fan locations:	
Front	3x 120mm (3x 120mm SP RGB Elite included)
Тор	1x 120mm slim fan (1x AF120S included)
Rear	2x 120mm*
Side	3x 120mm / 2x 140mm
Radiator compatibility:	
Front	NA
Тор	NA
Rear	240mm*
Side	360mm / 280mm


*GPU dependent

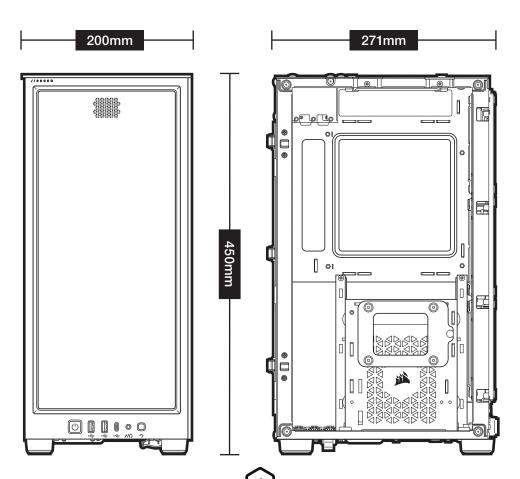


ACCESSORY KIT CONTENTS




Fan screws (short)

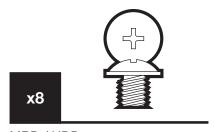


MBD / HDD screws

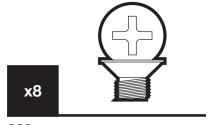

SSD screws

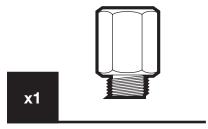


Motherboard standoffs

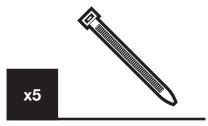

Cable ties


CASE FEATURES

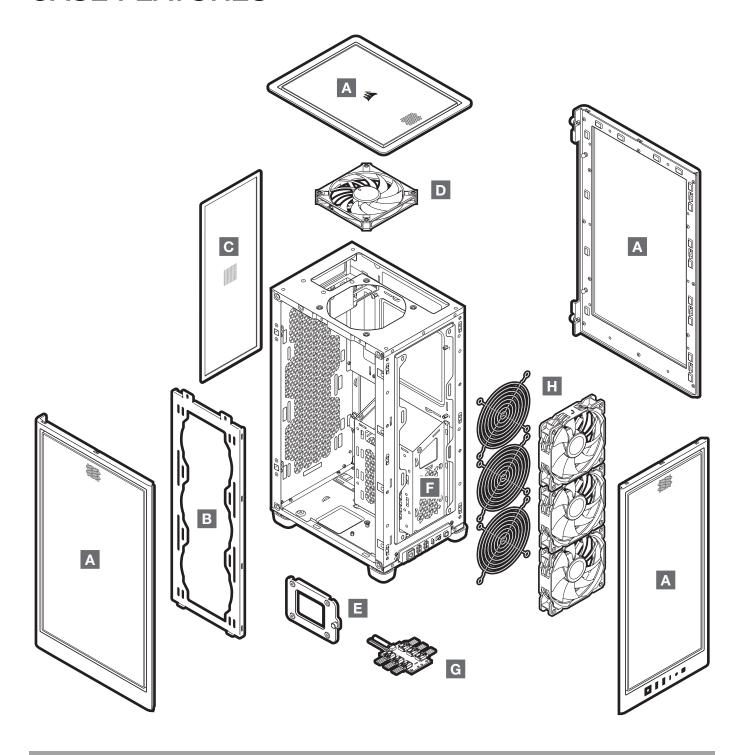


- A MESH PANELS
- **B** SIDE FAN BRACKET
- C REAR DUST FILTER
- **D** 1x AF120S

- **E** 1x REMOVABLE SSD TRAYS
- **F** REMOVEABLE PSU SHROUD
- **G** LIGHTING NODE CORE
- H 3x 120MM SP RGB ELITE & FAN GRILLS


FRONT, TOP & SIDE PANELS ARE REMOVABLE

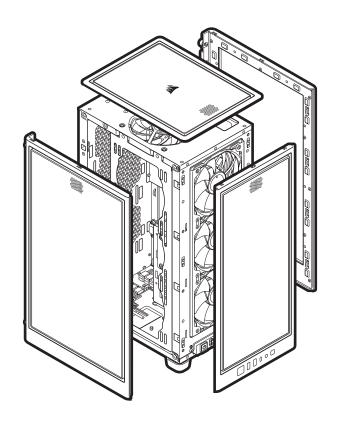


REMOVING SIDE PANELS

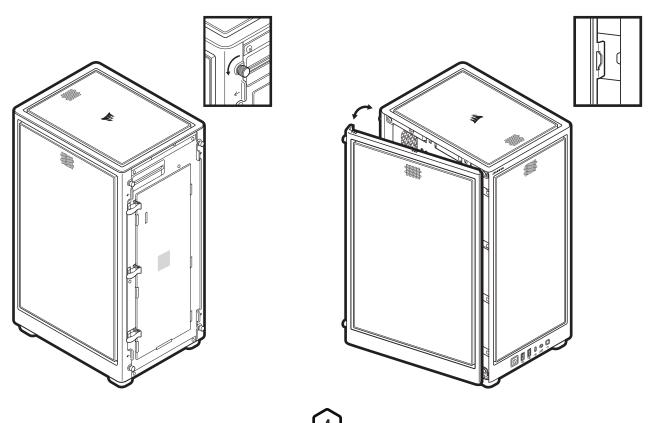


REMOVING & INSTALLING FAN / RAD BRACKET

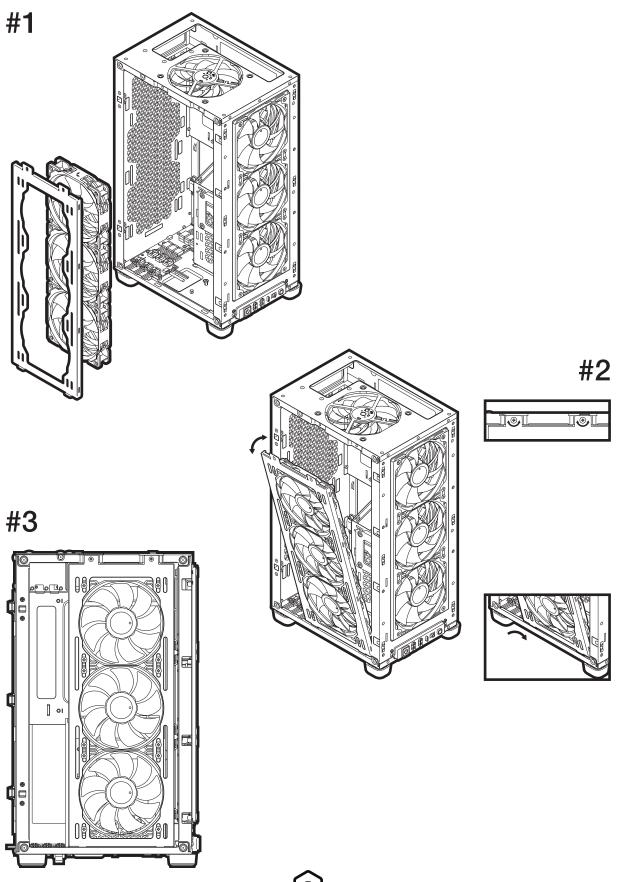


INSTALLING MOTHERBOARD (ITX ONLY)

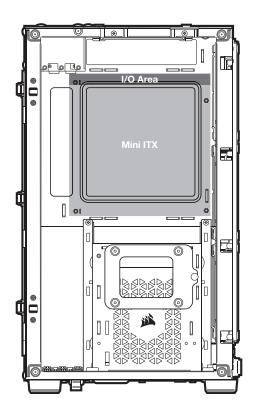



REMOVING PSU SHROUD (SFX & SFX-L ONLY)

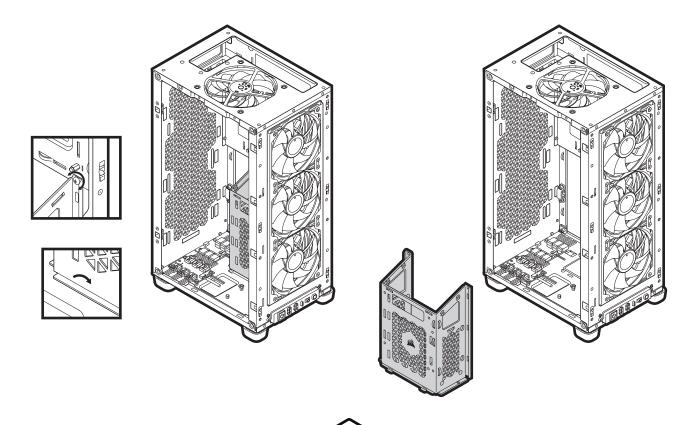


REMOVING PSU SHROUD (SFX & SFX-L ONLY)

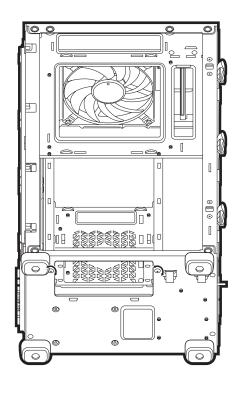

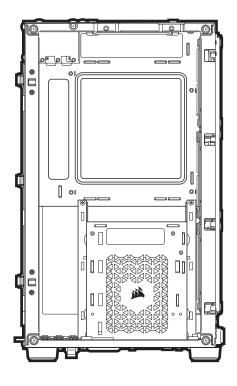


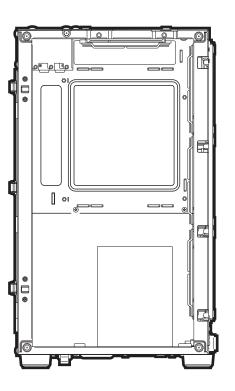


OPTIONAL REMOVAL OF PSU SHROUD (SFX & SFX-L ONLY)

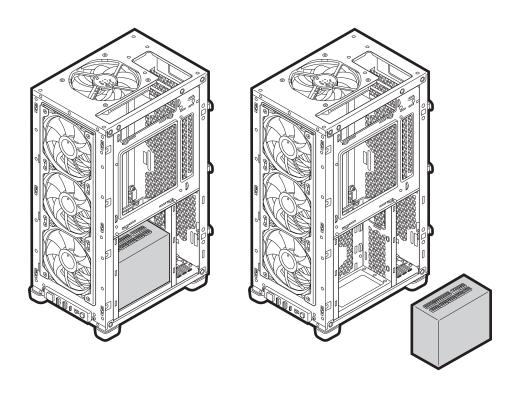


INSTALLING PSU (SFX & SFX-L ONLY)

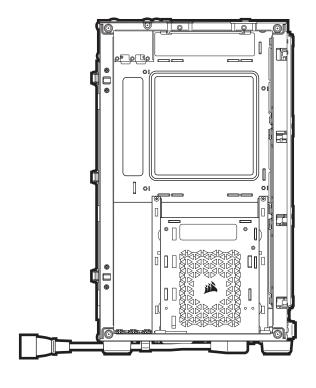


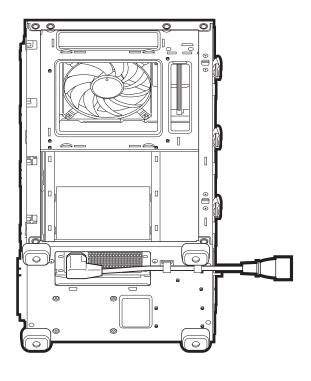


INSTALLING SSD

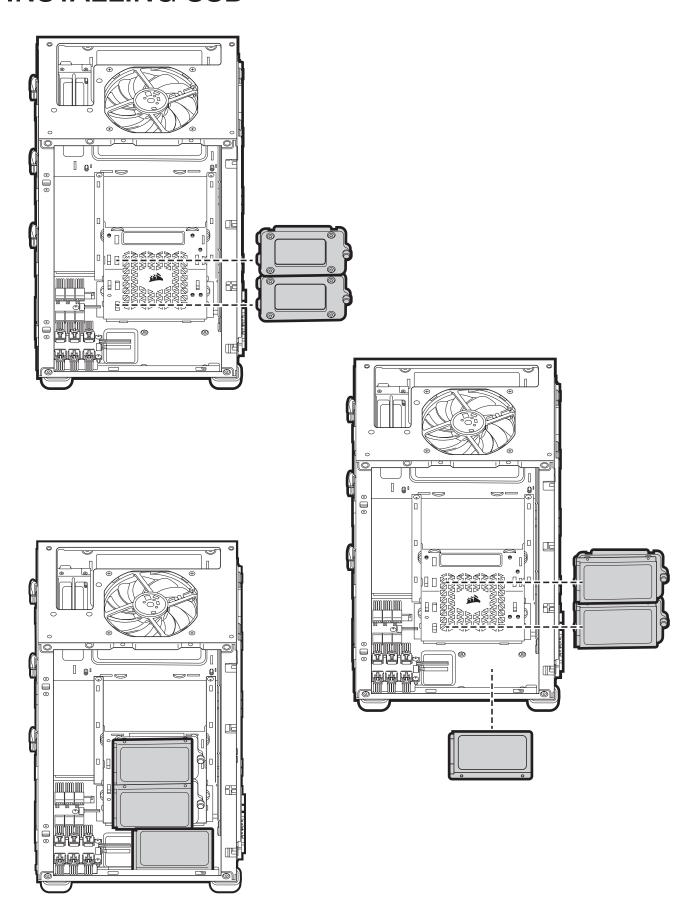


INSTALLING TOP FAN

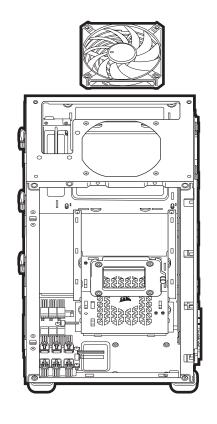


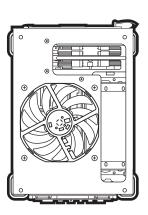

CABLE ROUTING OUT OF THE BACK

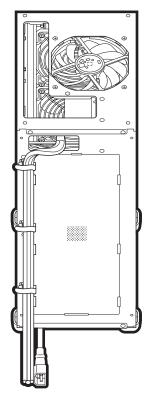

FRONT I/O CONNECTIONS

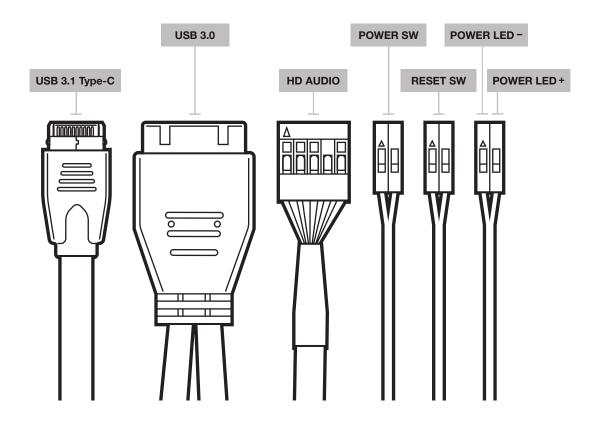

FAQ

- 1. Does the polarity matter with the I/O panel's power and reset header? No, only the LED headers.
- 2. Who should I contact if I received my case damaged or one of the fans is no longer working? Please go to support.corsair.com and request an RMA so that we can replace the damaged part(s).
- 3. Where can I mount a fan?

Fan mount locations	
Front	3x 120mm
Тор	1x 120mm slim fan
Rear	2x 120mm (GPU dependent)
Side	3x 120mm / 2x 140mm

To learn more about this case visit the product page at corsair.com.



Web: Phone: Warranty: corsair.com (888) 222-4346 corsair.com/support/warranty

Support: support.corsair.com Blog: corsair.com/blog Forum: forum.corsair.com

YouTube: youtube.com/corsairhowto

