

Package Contents


- 1×FineCam 4K
- 1×USB Cable
- 1×Magnetic Mounting Stand

Specifications


Video Resolution	Up to 4K@30FPS
Field of View (FOV)	70°(diagonal)/ 62° (horizontal)/ 37.5° (vertical)
Focus Type	Automatic Focus
Microphones	Built-in Dual Microphones with AI Noise Reduction
Voice Pickup Distance	5m/16.4ft
Optimal Image Range	0.1m-5m/0.3ft-16.4ft
Cable Length	2m/6.6ft
Compatible Systems	Windows 7/8/10 or later macOS X10.6 or later Android 5.0 or later

The data are measured by UGREEN lab but may vary based on specific circumstances.

Product Overview

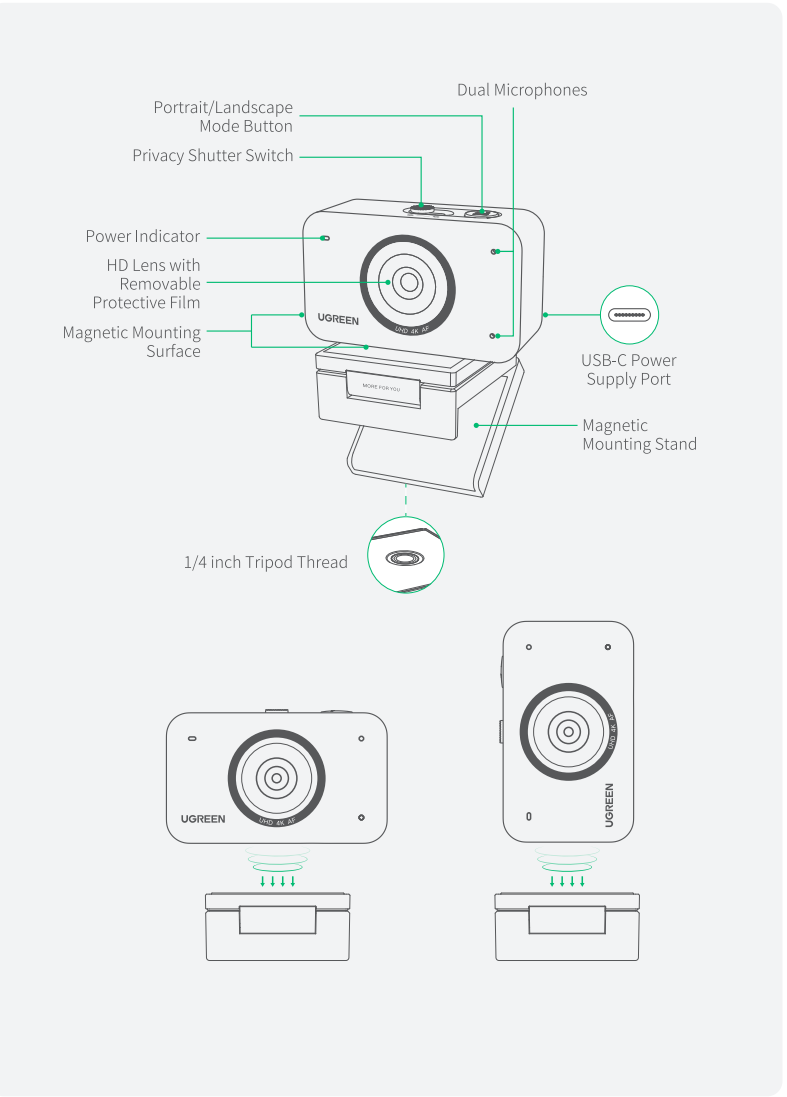

Setup

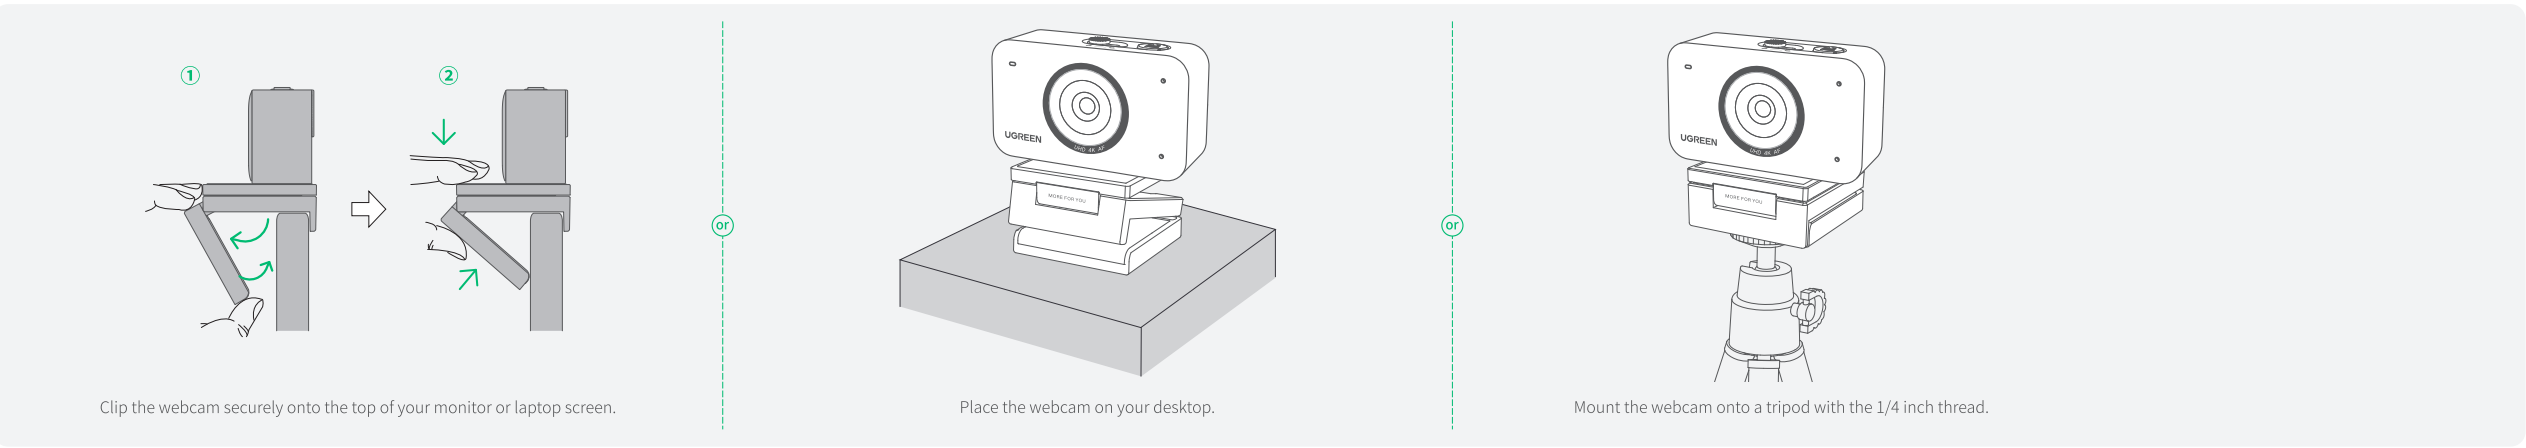

Use & Settings

Take Windows 10 as an example

Camera switching

- Press the "Windows" + "S" simultaneously, type "Camera" in the search box and click "Enter".
- Click "Camera" to change camera.

Sound settings

- Right-click on the sound icon "Speaker" on the system tray and select "Sounds".
- Click "Recording" > set the "UGREEN FineCam 4K CM973 Audio" as the default device.

Take macOS 13.2.1 as an example

Camera switching

- Click "Launchpad" > Click "Photo Booth".
- Click "Camera" in the menu bar, then select "UGREEN FineCam 4K CM973".

Sound settings

- Enter "System Preferences"> "Sound".
- Click "Input" > set the "UGREEN FineCam 4K CM973 Audio" as the default device.

Portrait/Landscape Mode

- Short-press the button and follow the on-screen instructions to switch modes.
- Before starting a livestream or recording, select landscape or portrait mode to avoid interruption.

Mode	Aspect Ratio	Supported Resolutions	Mounting Orientation
Landscape (Default)	16 : 9	MJPG: 3840×2160@30FPS (Default) 2560×1440@30FPS 1920×1080@60FPS 1920×1080@30FPS 1280×960@60FPS 1280×720@60FPS	
Portrait	9 : 16	MJPG: 1440×2560@30FPS (Default) 1080×1920@60FPS 1080×1920@30FPS 960×1280@60FPS 720×1280@60FPS	

Notes

- Do not touch the lens surface with your fingers. If dirt buildup on the lens, please clean it using an air blower, alcohol wipes, and more.
- Do not expose the lens to strong light sources (like sunlight, spotlight), otherwise it may cause damage to the image sensor.
- Do not install the camera near sensitive equipment to avoid electromagnetic interference.
- Do not throw or drop the product or subject it to strong physical shock.
- Please keep out of reach of children and pets.
- Do not dismantle or fix the product by yourself, please contact UGREEN after-sales service if necessary.