

Orbit

MANUAL

BELIEVE IT

www.Antec.com


All rights reserved. Specifications are subject to change without prior notice. Actual products and accessories may differ from illustrations. Omissions and printing errors excepted. Content of delivery might differ in different countries or areas. Some trademarks may be claimed as the property of others.

V2.2

©1986 – 2025 Antec Inc. All rights reserved.

1 CONTENTS

120MM FAN

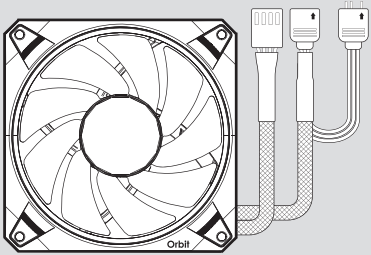


FAN SCREW




RADIATOR SCREW



 4-PIN PWM 1 TO 3 SPLITTER CABLE





2 FAN INTRODUCTION

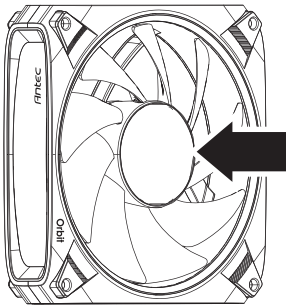

AIR-IN

AIR-OUT

3 FAN INSTALLATION

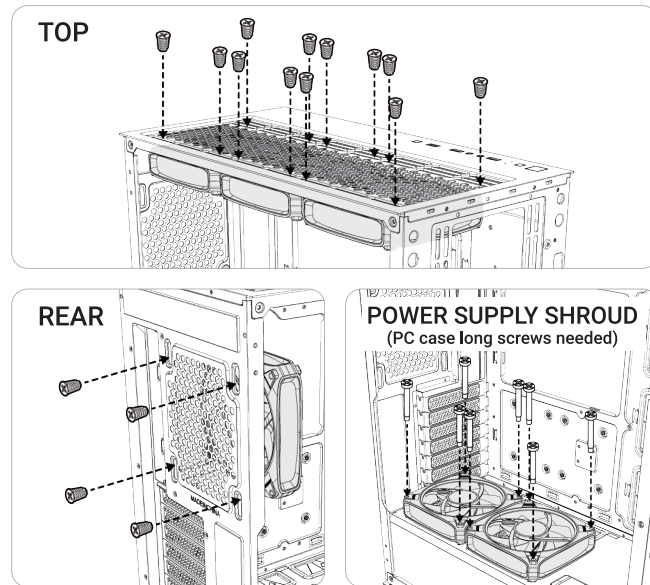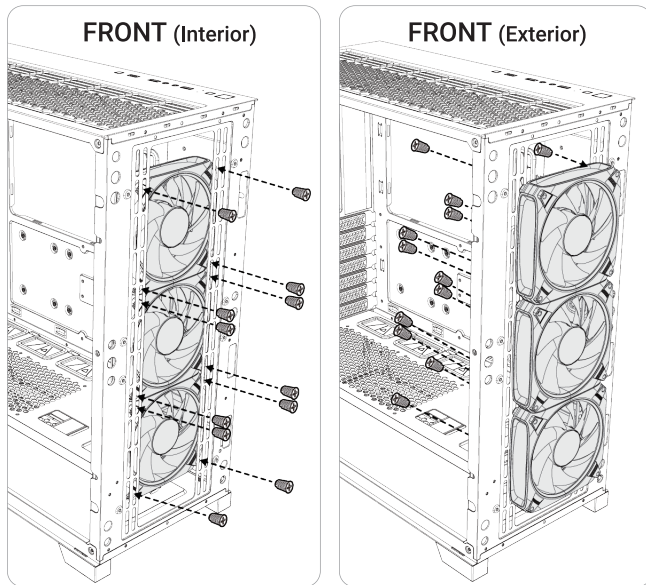


4 FAN CONNECTION



OPTION A :

- Connect the PWM 4-pin connector to the fan 4-pin header of the motherboard.
- Connect the ARGB 3-pin connector to the 3-pin ARGB header of the motherboard.

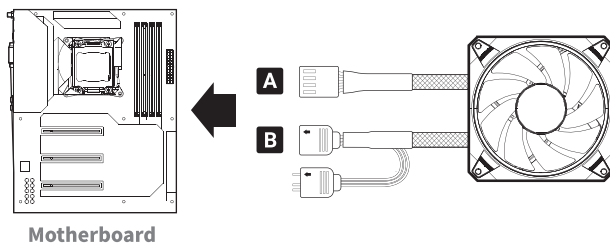

5 CONTROLLER

OPTION B :

- Daisy-chain the male and female connectors of the fan 3-pin ARGB interface.
- Connect the fan 4-pin PWM cable to a 1-to-3 splitter.
- Connect the 4-pin PWM 1-to-3 splitter and the 3-pin ARGB connector to the motherboard.

