

PHILIPS

Micro Music System TAM8905M2



User manual

Register your product and get support at:
www.philips.com/support


Contents

1 Important	2	8 Listen to Podcasts	12
Safety	2	Store/remove Podcast stations to/from	12
Notice	2	Favorite list	
Compliance	2	Select a favorite Podcast station to play	12
Care of the environment	2		
Care for your product	2		
Trademarks	2		
2 Your Micro Music System	3	9 Listen to Spotify	13
What's in the box	3		
Overview of the main unit	3		
Overview of the remote control	4	10 Listen to Bluetooth® music	13
		Connect Bluetooth®	13
		Disconnect Bluetooth®	13
		Clear Bluetooth® pairing records	13
3 Get started	5	11 Auracast™	14
Connect power	5	Auracast™ broadcast (as a transmitter)	14
Connect the radio antenna	5	Disconnect Auracast™ broadcast	14
Prepare the remote control	6	Auracast™ receiver (as a receiver)	14
Set the clock	6	Disconnect Auracast™ receiver	15
Turn On and Off	6		
Set system language	6	12 Use system settings menu	15
Source menu	6	Adjust sound style	15
		Set sleep timer	15
		Adjust backlight settings	16
		Set alarm	16
		Select system language	16
		Factory reset	16
		Check software version	16
4 Play	7	13 Other features	17
Play from dics	7	Listen to an external device	17
Play from USB	7	Headphone output	17
Control play	7		
Skip tracks	7		
Program tracks	7		
5 Listen to DAB+ radio	8	14 Philips Entertainment App	17
Store DAB+ radio stations automatically	8	App download	17
Store DAB+ radio stations manually	8	Pair the App with your micro system	17
Play preset radio stations	8	Select Equalizer (EQ) Effect	18
Use menu in DAB+ mode	9	Select Source	18
Display DAB+ information	9	Set Internet Radio	18
		Set Podcasts	18
		Set Spotify	19
		Receive unencrypted Auracast™ broadcast	19
		Receive encrypted Auracast™ broadcast	19
		Select a preset radio station	20
		Set clock	20
		Set Alarm	20
		Set Sleep Timer	21
		Select Auracast™ broadcast	21
		Remote control	21
		User guide	22
		Firmware upgrade	22
6 Listen to FM radio	9	15 Product specifications	22
Store FM radio stations automatically	9		
Store FM radio stations manually	9		
Select a preset FM radio station	10	16 Troubleshooting	23
Tune to FM radio stations	10		
Use FM menu	10		
Display RDS information	10		
7 Listen to Internet radio	11		
Set up Wi-Fi for Internet radio	11		
Store/remove Internet radio stations to/from	12		
Favorite list			
Select a favorite Internet radio station to play	12		
Show Internet radio information	12		

1 Important

Safety

Read and understand all instructions before you use this micro music system. If damage is caused by failure to follow the instructions, the warranty does not apply.

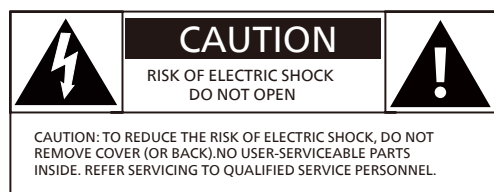

This 'bolt of lightning' indicates uninsulated material within the device may cause an electrical shock. For the safety of everyone in your household, please do not remove the covering. The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems. **WARNING:** To reduce the risk of fire or electric shock, the device should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on the device. **CAUTION:** To prevent electric shock, fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)

Warning

- Never remove the casing of this apparatus.
 - Never lubricate any part of this apparatus.
 - Never look into the laser beam inside this apparatus.
 - Never place this apparatus on other electrical equipment.
 - Keep this apparatus away from direct sunlight, naked flames or heat.
 - Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.
-
- Make sure that there is enough free space around the product for ventilation.
 - Only use attachments/accessories specified by the manufacturer.
 - Battery usage **CAUTION** -to prevent battery leakage which may result in bodily injury, property damage, or damage to the product:
 - Install the battery correctly, + and - as marked on the product.
 - The battery (packed or installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
 - Remove the battery when the product is not used for a long time.
 - The product shall not be exposed to dripping or splashing.
 - Do not place any source of danger on the product (e.g. liquid filled objects, lit candles).
 - Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
 - Please use the product safely in an environment with a temperature between 0°C and 40°C.
 - Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types);
 - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
 - Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
 - A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Notice

Any changes or modifications made to this device that are not expressly approved by MMD Hong Kong Holding Limited may void the user's authority to operate the equipment.

Compliance

Hereby, TP Vision Europe B.V. declares that this product is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/ EU and UK Radio Equipment Regulations SI 2017 No 1206. You can find the Declaration of Conformity on www.philips.com/support.

Care of the environment

Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Regulation (EU) 2023/1542 which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

Removing the disposable batteries

To remove the disposable batteries, see battery installation section.

Environmental information

All unnecessary packaging has been omitted. Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove the discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfiber cloth to clean the product.

This apparatus includes this label:



Note

- The type plate is located on the back of the product.

Trademarks



The Auracast™ word mark and logos are trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license. Other trademarks and trade names are those of their respective owners.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license.



The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.




The Spotify Software is subject to third party licenses found here: <https://www.spotify.com/connect/third-party-licenses>

2 Your Micro Music System


Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/support.

What's in the box


Check and identify the contents of your package:

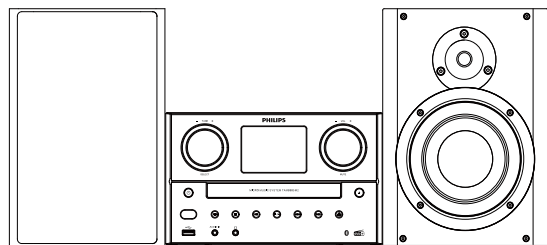

- Main unit

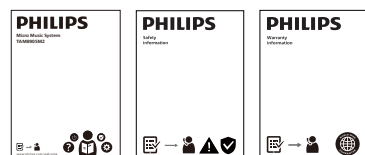


- Quick start guide / Warranty card / Safety sheet

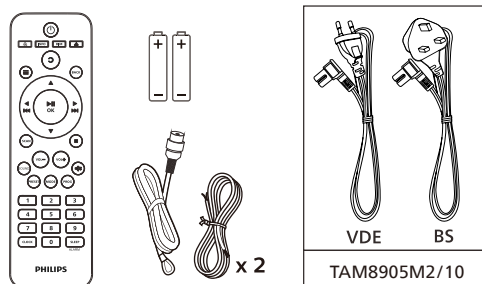

- Remote control (with two AAA batteries)
- Power cord (Power cord quantity and plug type vary by regions)

Overview of the main unit

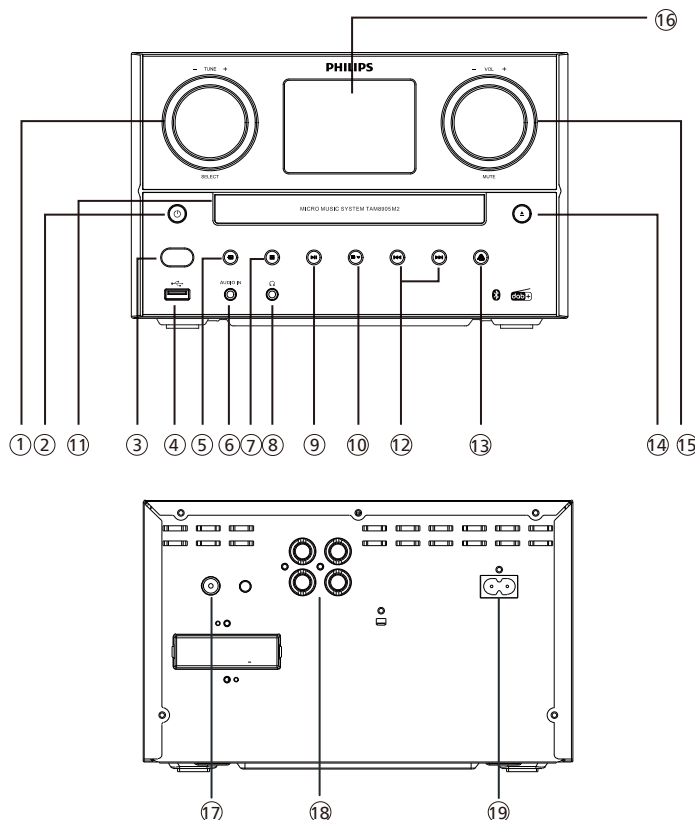

① SELECT knob

- Turn clockwise or anticlockwise to tune to radio stations.
- Turn clockwise or anticlockwise to navigate through the menu list.
- Press to confirm a selection.
- Press and hold to auto scanning all station in FM tuner mode.

②

- Switch this product on or to standby.

③ IR sensor

④

- Connect USB storage devices.

⑤

- Press to enter the source menu.

⑥ AUDIO IN

- Connect external audio devices.

⑦

- In working mode, access the top menu.
- Press and hold to display information in FM/DAB+ mode.

⑧

- Connect the external earphone device.

⑨

- Start or pause play.

10 ■/♥

- Navigate to favorites selection.
- Add/remove current internet radio/podcast from favorites.
- Stop playback.
- Alarm Setting, Auto Scan, Preset Setting,
- Cancel the setup process.

11 Disc compartment

12 ⏮ / ⏭

- Skip to previous/next track.
- Search within a track/disc.
- Tune to a radio station.
- Adjust time.
- In Auracast mode, switch to the previous/next unencrypted broadcast.
- Press and hold to fast forward or backward.

13 📶

- In Auracast receiver mode, press to rescan Auracast™ broadcast channel.
- Press to switch to Auracast™ receiver mode.
- Press and hold for more than 3 seconds to activate / deactivate Auracast™ broadcast mode.

14 ▲

- Open or close the disc compartment.

15 VOLUME knob

- Adjust volume level.
- Press to mute or resume sound.

16 Display screen

- Show current status.

17 FM/DAB+ antenna


- Improve FM/DAB+ reception.

18 SPEAKER OUT socket

- Connect with the speakers.

19 AC IN socket

Overview of the remote control

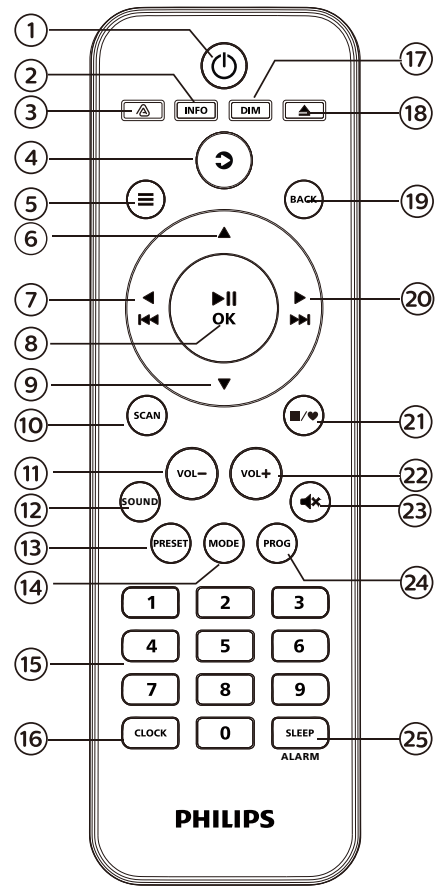

1 Power

- Switch this product on or to standby.

2 INFO

- Display playback information.

3 📶

- Auracast™ Receiver
- Press and hold the Auracast™ button to enter Auracast™ transmission mode.

4 ↻

- Press to enter the source menu.

5 ≡

- In working mode, access the top menu
- Press and hold to display informat in FM/DAB mode

6 ▲

- Skip to next album.
- Adjust time

7 ⏮

- Skip to the previous track.
- Search within a track/disc/USB.
- Tune to a FM station.
- Tune to previous DAB+ station.
- Press and hold to tune to previous DAB+ station continuously.
- Previous Auracast™ broadcast channel.

8 ▶ II / OK

- Press to start, pause, or resume play.
- Confirm a selection

9 ▼

- Skip to previous album.
- Adjust time.

10 SCAN

- Auto store radio stations.
- Auracast: Rescanning Auracast™ broadcast channels.

11 VOL-

- Decrease volume.

- ⑫ **SOUND**
 - Select a preset sound effect.
- ⑬ **PRESET**
 - Press to view the station list.
 - Press and hold to save station.
- ⑭ **MODE**
 - Select shuffle mode to play tracks randomly.
 - Select repeat mode to play a track or all tracks repeatedly.
- ⑮ **Numeric keypad (0-9)**
 - Select a digital track or preset radio station.
- ⑯ **CLOCK**
 - Set the clock.
 - View clock information.
- ⑰ **DIM**
 - Adjust display brightness.
- ⑱ **▲ Open/Close**
 - Open or close the disc compartment.
- ⑲ **BACK**
 - Return to the previous menu under menu setting .
- ⑳ **▶▶|**
 - Skip to the next track.
 - Search within a track/disc/USB.
 - Tune to an FM station.
 - Tune to next DAB+ station.
 - Press and hold to tune to next DAB+ station continuously.
 - Next Auracast™ broadcast channel.
- ㉑ **■/♥**
 - Navigate to favorites selection.
 - Add/remove current internet radio/podcast from favorites.
 - Stop playback.
 - Alarm Setting, Auto Scan, Preset Setting, Cancel the setup process.
- ㉒ **VOL+**
 - Increase volume.
- ㉓ **🔊 Mute**
 - Mute or restore volume.
- ㉔ **PROG**
 - Program tracks.
- ㉕ **ALARM/SLEEP**
 - Set sleep timer.
 - Set alarm .

3 Get started



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.


Connect power



Caution


- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Risk of electric shock! Before you plug the AC power cord, make sure that the plug is fixed securely. When you unplug the AC power cord, always pull the plug, never pull the cord.
- Before you connect the AC power cord, make sure that you have completed all the other connections

Connect the power cord to the wall socket.

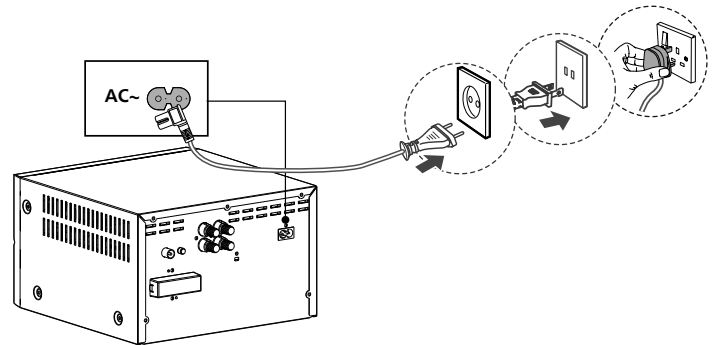

Connect the radio antenna

Connect the supplied radio antenna to this product before listening to radio.

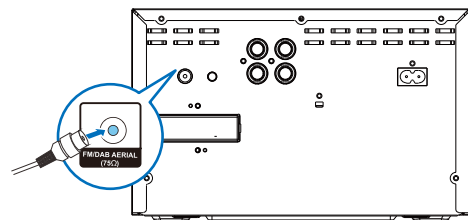


Prepare the remote control

Caution

- Risk of product damage! When the remote control is not used for long periods, remove the batteries.
- Batteries contain chemical substances, so they should be disposed of properly.

To insert the remote control battery:

- 1 Open the battery compartment.
- 2 Insert the supplied two AAA batteries with correct polarities (+/-) as indicated.
- 3 Close the battery compartment.


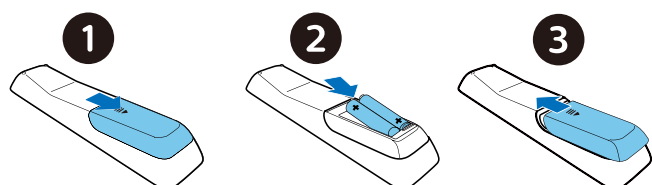


Set the clock

- 1 Press **≡** to Select **[System settings]>[Time/Date]**.
- 2 Turn **SELECT knob** to select an option or suboption, then press **SELECT knob** to confirm.
 - **[Set Time/Date]**: set time and date.
 - **[Auto update]**:
 - **[Update from DAB]**: synchronize time with DAB stations.
 - **[Update from FM]**: synchronize time with FM stations.
 - **[Update from Network]**: synchronize time with Internet radio stations.
 - **[No update]**: deactivate time synchronization.
 - **[Set format]**: set 12/24 hour format.
 - **[Set timezone]**: set timezone.
 - **[Daylight savings]**: activate or deactivate daylight saving time.

Tip

- To view clock in power on mode, press **CLOCK** briefly.
- In standby, you may press and hold **CLOCK** to toggle clock display on or off.
- If clock display is turned on in standby, power consumption increases.

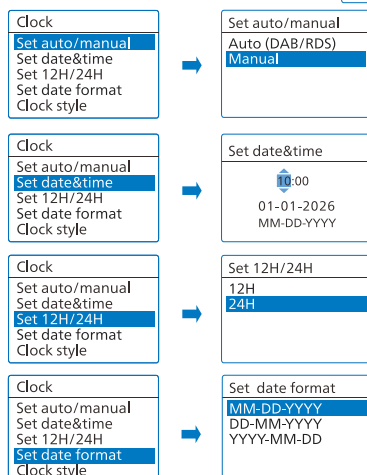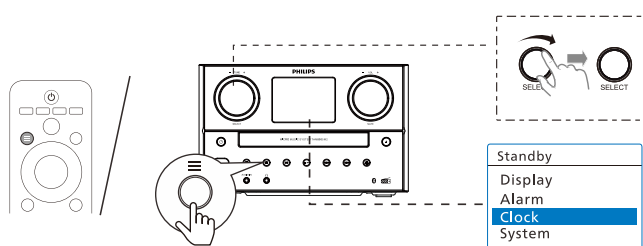

- 1 In power on mode, press and hold **CLOCK** for more than 2 seconds to enter the clock setting mode.
↳ **[Set date&time]** is displayed.
- 2 Press **◀◀/▶▶** to change hour, and then press **▶▶**.
↳ The hour digits begin to blink.
- 3 Press **◀◀/▶▶** to change minute, and then press **▶▶**.
↳ The minute digits begin to blink.
- 4 Repeat step 2-3 to set month/day/year.
↳ The clock is set.

To cancel time setting without saving.

Press **≡** or no button pressed for 20 seconds.

Note

- If you are updating time from DAB or FM, the daylight savings option has no effect.
- If you are updating from the network, set your time zone.

Turn On and Off


- Press **⏻**
↳ The product switches to the last selected source.
- Press **⏻** again
↳ to switch the product to standby with time and date display if set.

Note

- If the system is idle for 15 minutes, the unit switches to standby mode automatically.


Set system language

- 1 In standby or power-on state, press **≡** from the remote control or device to enter the menu.
- 2 Select **[System]>[Language]**.
↳ A language list is displayed.
- 3 Turn **SELECT knob** to select a system language then press **SELECT knob** to confirm.

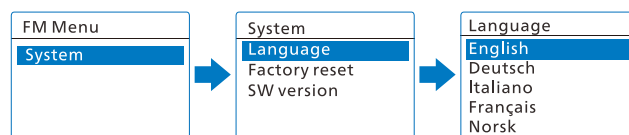

Source menu

Press **⏻** to enter into source menu.

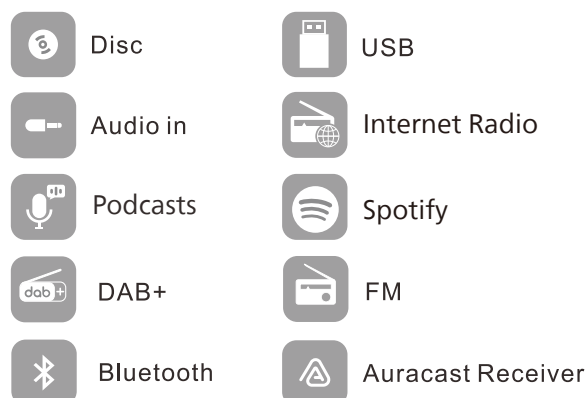


- 1 Turn **SELECT knob** to select source.
- 2 Press **SELECT knob** to confirm selection.

4 Play

Play from disc

- 1 Press and turn **SELECT** knob to select CD source.
- 2 Press to open the disc compartment.
- 3 Insert a disc with the label side up.
- 4 Press to close the disc compartment.
↳ Play starts automatically. If not, press .

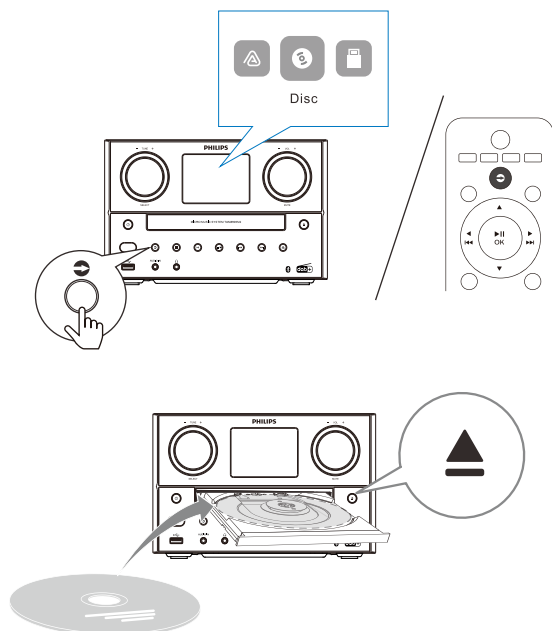


Play from USB

Note

- Make sure that the USB device contains playable audio content.

- 1 Insert a USB device into the socket.
- 2 Press and turn **SELECT** knob to select the USB source.
↳ Play starts automatically. If not, press .

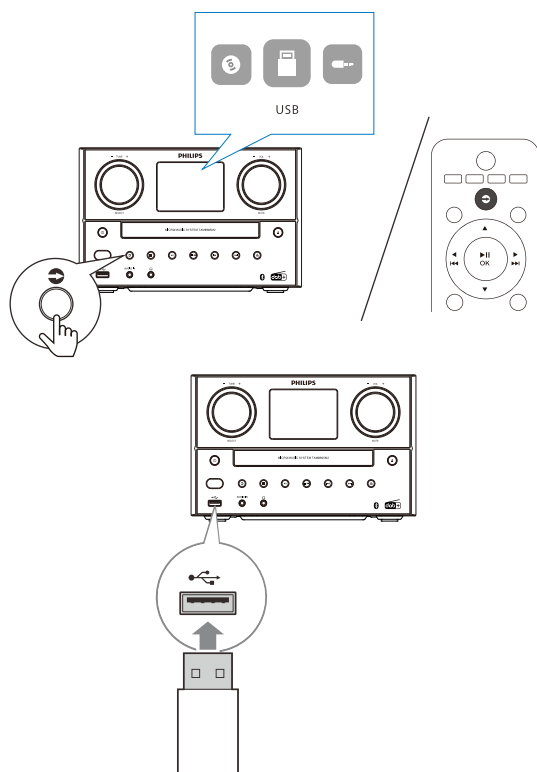

Control play

Start, pause, or resume play.



Navigate to favorites selection.
Add/remove current internet radio/podcast from favorites.
Stop playback.
Alarm Setting, Auto Scan, Preset Setting, Cancel the setup process.



Select an album or a folder.



Press to skip to the previous or next track.
Press and hold to search backward/forward within a track.

MODE

Play a track or all tracks repeatedly.
Play tracks randomly.



Increase or decrease the volume.



Mute or unmute sound.

SOUND

Select a preset sound equalizer.

DIM

Adjust display brightness.

INFO

Show playback information.

Skip tracks

For CD:

Press to select tracks.

For MP3 disc and USB:

- 1 Press to select an album or a folder.
- 2 Press to select a track or a file.

Program tracks

This function allows you to program 20 tracks in the desired sequence.

- 1 In stop mode, press **PROG** to activate the program mode.
↳ [P01] is displayed.
- 2 For MP3 tracks, press to select an album.
- 3 Press to select a track, and then press **PROG** to confirm.
- 4 Repeat steps 2 to 3 to program more tracks.
- 5 Press to play the programmed tracks.

To erase the program

Press twice.

5 Listen to DAB+ radio

With this product, you can listen to DAB+ radio. Digital Audio Broadcasting+ (DAB+) is a way of broadcasting radio digitally through a network of transmitters. It provides you with more choice, better sound quality and more information.

Store DAB+ radio stations automatically

The first time you select DAB+ radio mode, or if the station list is empty, the radio performs a full scan automatically.


- Press Source and turn **SELECT** knob to select **[DAB+ radio]** mode.
 - [Scanning]** is displayed.
 - The radio scans and stores all the DAB+ radio stations automatically, and then broadcasts the first available station.
 - The station list is memorized in the radio. Next time when you turn on the radio, the station scan does not take place.

To tune to a station from the available station list:

- In DAB+ mode, turn **SELECT** knob to navigate through the available DAB+ stations.

Tip

- The stations may change from time to time. To update the station list, select the **[Scan]** menu to perform full scan. Or press and hold **SELECT** knob for 3 seconds to perform full scan.

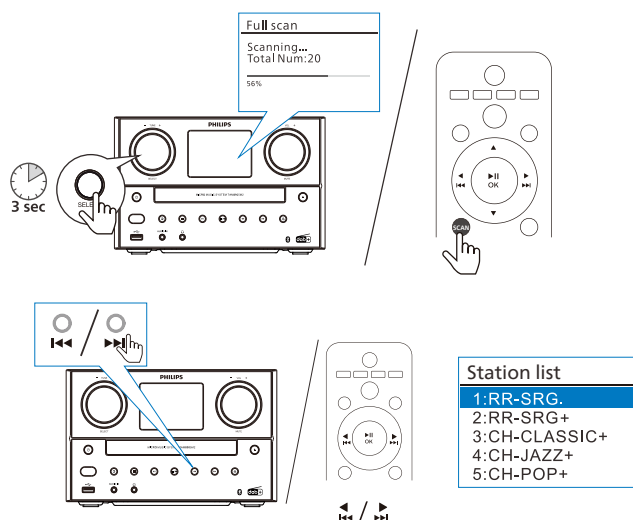

[Prune invalid]

- [YES]**: remove all the invalid stations from the station list.
- [No]**: return to the previous menu.

[DRC]

- [DRC high]**: switch DRC on to a high level (the default option recommended for noisy environment).
- [DRC low]**: switch DRC on to a low level.
- [DRC off]**: switch DRC off.

[Station order]

- [Alphanumeric]**: arrange the stations in alphabetical order (default setting).
- [Ensemble]**: list groups of stations that are broadcast together on the same ensemble (i.e.: BBC or South Wales local).
- [Valid]**: list valid stations first, then off air stations.

Note


- If no button is pressed within 15 seconds, the menu exits.

Store DAB+ radio stations manually

Note


- You can store a maximum of 20 preset radio stations.

- In DAB mode, tune to a DAB+ radio station.
- Press and hold **PRESET** on the remote control for two seconds.
 - The preset station list is displayed.
- Turn **SELECT** knob to select a preset number.
- Press **SELECT** knob to confirm.
 - [Preset stored]** is displayed.
 - The station is stored in the selected position.

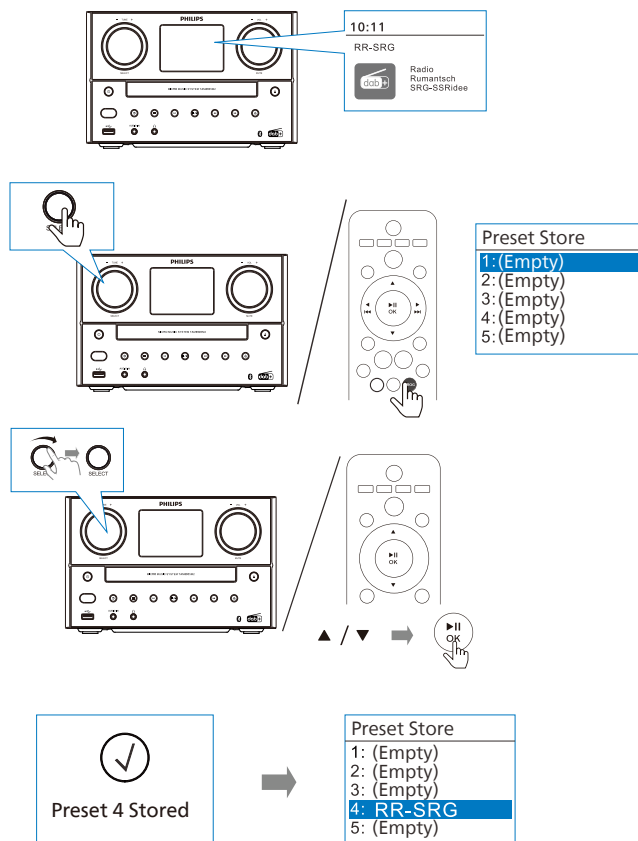

Play preset radio stations

- Enter DAB+ mode.
- Rotate the **SELECT** knob / **PRESET** to enter the Preset Recall list.
- Rotate the **SELECT** knob / **▲** / **▼** to select a preset number, then press the left **SELECT** knob/OK to confirm.
- Play the preset station.

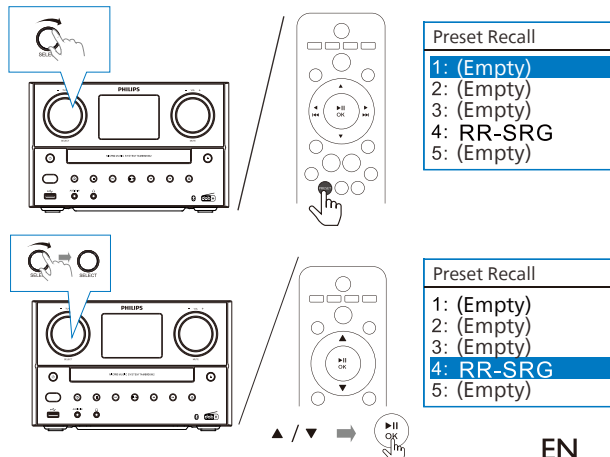

Use menu in DAB+ mode

- 1 In DAB+ mode, press **≡** to access DAB+ menu.
- 2 Turn **SELECT knob** to scroll through the menu options:
 - **[Station list]**: display all DAB+ radio stations. If no station is found, the radio starts to scan DAB+ stations and add them to the station list.
 - **[Scan]**: scan and store all the available DAB+ radio stations.
 - **[Manual tune]**: tune to a specific channel/frequency manually and add it to the station list.
 - **[Prune invalid]**: remove all the invalid stations from the station list.
 - **[DRC]**: compress the dynamic range of a radio signal, so that the volume of quiet sounds is increased, and the volume of loud sounds is reduced.
 - **[Station order]**: define how the stations are arranged when scrolling the station list.
 - **[System settings]**: adjust system settings (see the Chapter "Use system settings menu").
 - **[Main menu]**: access main menu (see the Chapter "Use main menu").
- 3 To select an option, press **SELECT knob**.
- 4 Repeat steps 2 to 3 if any sub-option is available under one option.
- To return to the previous menu, press **≡**.

Display DAB+ information

While listening to DAB+ radio, press **INFO** repeatedly to display various information (if available), such as frequency, signal strength, time, etc.

6 Listen to FM radio


Store FM radio stations automatically

In FM mode, press and hold **SELECT knob** for 3 seconds.

- ↳ The unit stores all the available FM radio stations and broadcasts the first station.

* Tip

- To remove a pre-stored station, store another station in its place.

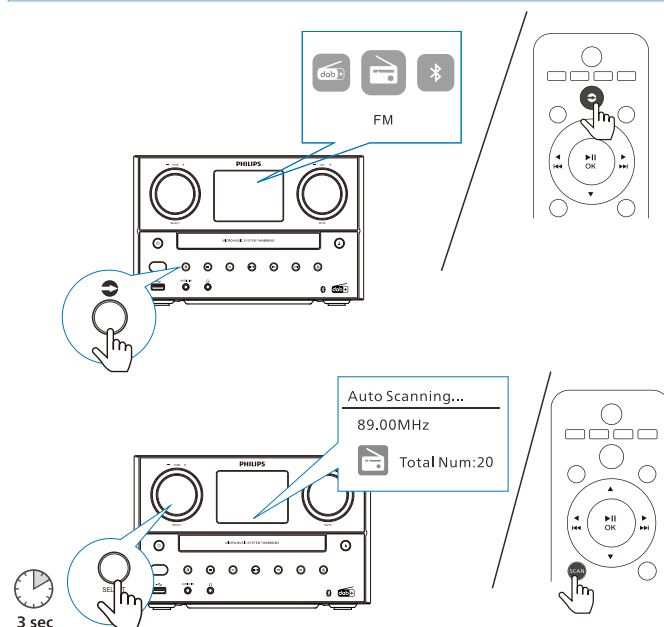


Store FM radio stations manually

Note

- You can store a maximum of 20 FM radio stations.

- 1 Play the FM radio station to be saved.
- 2 Press **SELECT knob/PROG** to enter the Preset Store.
- 3 Rotate the **SELECT knob** to select the storage number(e.g. No.3), then press the **SELECT knob** to confirm saving.
- 4 Save the **FM** radio station to preset No.3 successfully.

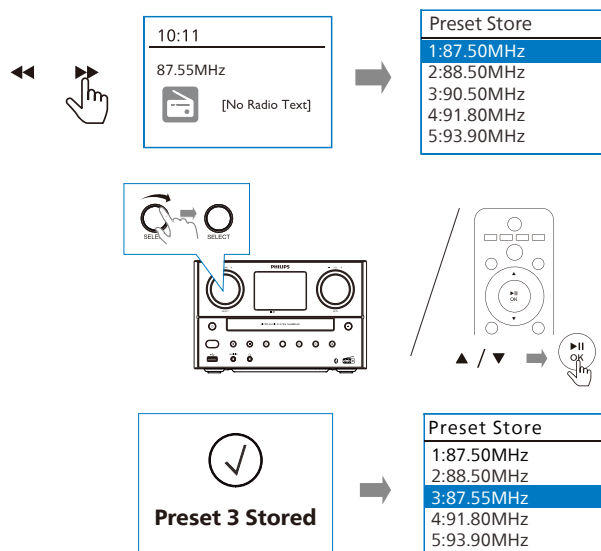

Select a preset FM radio station



In FM mode, you have two ways to select a preset radio station.

Option A:

- 1 Press **PRESET** to enter preset recall.
- 2 Turn **SELECT** knob to select a preset radio station.
- 3 Press **SELECT** knob to confirm.

Option B:

Press **▲** / **▼** to skip to the previous/next preset station.

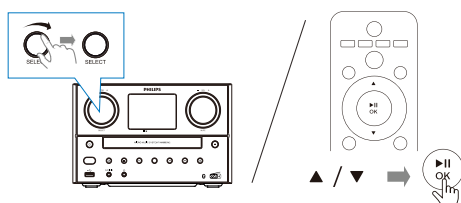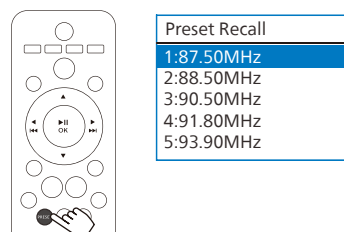

Display RDS information

RDS (Radio Data System) is a service that allows FM stations to show additional information.


If you listen to an FM station with RDS signal, an RDS icon and the station name are displayed.

- 1 Tune to an RDS station.
- 2 Press and hold **≡** repeatedly to scroll through the following information (if available):

- ↳ Station name
- ↳ Radio text messages
- ↳ Program type
- ↳ Frequency
- ↳ Date

Tune to FM radio stations

- 1 Press **↻** and turn **SELECT** knob to select **[FM radio]** mode.
- 2 Press and hold **◀◀/▶▶** for three seconds.
 - ↳ The radio tunes to an FM radio station with strong reception automatically.
- 3 Repeat step 2 to tune to more radio stations.

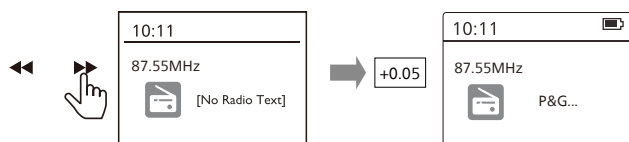

Note

- If no button is pressed within 15 seconds, the menu exits.

Use FM menu

- 1 In **FM** mode, press **≡** to access **FM** menu.
- 2 Turn **SELECT** knob to scroll through the menu options:
 - [Scan setting]**
 - **[Strong stations only?]-[YES]**: scan FM radio stations with strong signals only.
 - **[Strong stations only?]-[NO]**: scan all the available **FM** radio stations.
 - [Audio setting]**
 - **[Listen in Mono only?]-[YES]**: select mono broadcast.
 - **[Listen in Mono only?]-[NO]**: select stereo broadcast.
 - [System settings]**: adjust system settings (see the Chapter "Use system settings menu").
 - [Main menu]**: access main menu(see the Chapter "Use main menu").
- 3 To select an option, press **SELECT** knob.
- 4 Repeat steps 2 to 3 if any sub-option is available under one option.
- To return to the previous menu, press **≡**.

Note

- If no button is pressed within 15 seconds, the menu exits.

7 Listen to Internet radio

This product can play thousands of radio stations and podcasts from around the world through the Internet connection.


Set up Wi-Fi for Internet radio

Once the Internet connection is established, you will find a list of stations displayed in the station list. The selected one will be broadcast.


Note

- Make sure that your home Wi-Fi network is enabled. For better Wi-Fi reception, rotate and adjust the position of the Wi-Fi antenna of your router.

1 Press repeatedly to switch to [Internet radio] source, and press the rotary knob to confirm. You can also select source via the App.

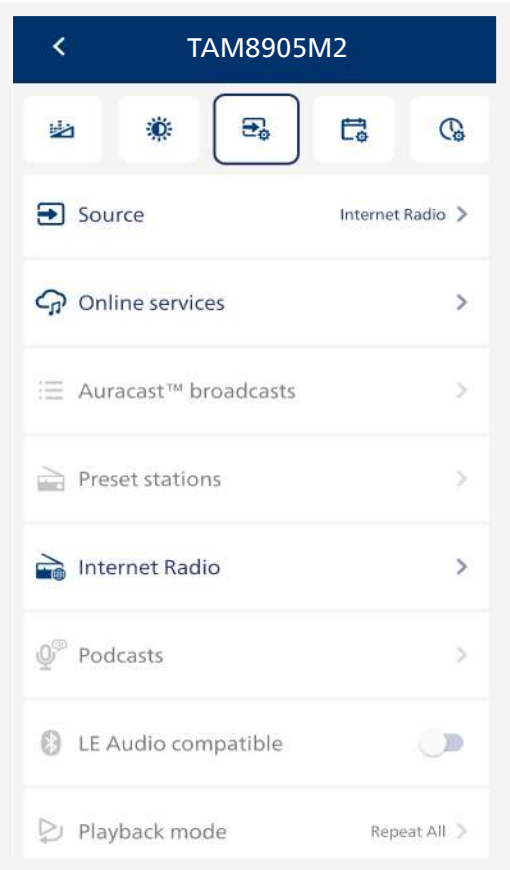

↳ If network connection has not been established before, follow the prompts on the display to set up the network. (Turn the rotary knob or press / to select an option, and press the rotary knob to confirm.) You can also do the setup via the App.

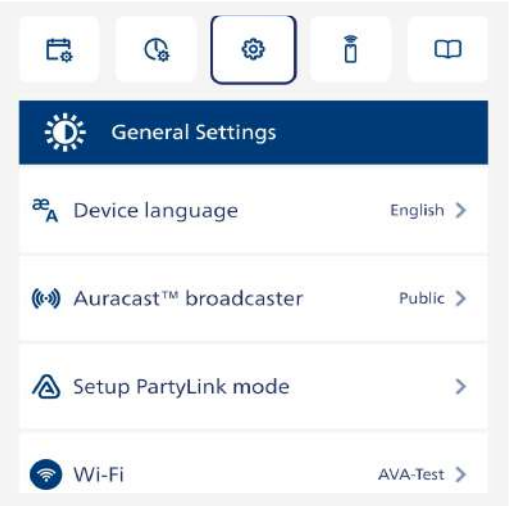


- ↳ If network connection is already set, the radio starts connecting to the previously connected network, and then tunes to your last listened Internet radio station. [Connecting...] will appear, followed by the station playback info.
- 2 Press to access the menu.
- 3 Turn the rotary knob or press / to scroll through the menu options.
 - [Last listened]: Your last listened stations.
 - [Station list]: Tune to any available stations. You can also navigate stations by category.
 - [Network]: Set/check/clear Wi-Fi connection.
- 4 To confirm an option selected, press the rotary knob.
- 5 Repeat steps 3 to 4 if any sub-option is available under one option.

To return to the previous menu, press .

[Station list]

- [History]: browse Internet radio stations by history.
- [Search]: search for Internet radio stations. To search, turn **SELECT** knob to enter a keyword by selecting characters, then press **SELECT** knob continue.
- [Local stations]: browse Internet radio stations by location.
- [Popular stations]: tune to the most popular stations on the internet.
- [Trending]: tune to discover list for trending radio.

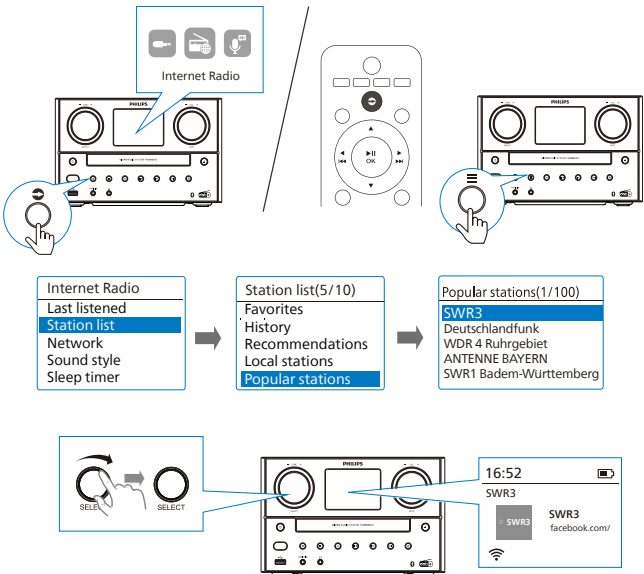

Display	Status and Action
[Press MENU to select a station]	No station is played now. Press to go to the station list and tune to an available radio station.
[Loading]	Loading data from server
[This content is currently not available]	Failed to get data from server. Tune to another station.
[Network is not connected]	Network not set up. Press and scroll to the Network→Network setup option.
[No Internet]	Network is set up but no Internet connection. Check the Wi-Fi connection of your room.
[Unexpected network error]	Server timeout. Check your network connection and Wi-Fi connection.

Store/remove Internet radio stations to/from Favorite list

- 1 In Internet radio mode, select a station from [Station List -> Local Stations / Popular Stations / Trending], or search for one via [Filter / Search].
- 2 Press and hold [stop]/[heart] for three seconds.
 - ↳ The current station is not in the favorite list: [Added to favorites] will display. The current playing station is added to the favorite list.
 - ↳ The current station is already in the favorite list: [Removed from favorites] will display. The current playing station is removed from the favorite list.vv

If there is no station playing, the long press of [stop]/[heart] will not have any effect.

Select a favorite Internet radio station to play

- In Internet radio mode:
- 1 Press [stop]/[heart]
 - 2 Turn the rotary knob or press [left]/[right] to select a station in the favorite list.
 - 3 Press the rotary knob to confirm.
 - ↳ If there is no action after 30 seconds, the current Internet radio station will be played.

Show Internet radio information

While listening to the Internet radio, press and hold [menu] for three seconds repeatedly to scroll through and display the following information (if available):


- ↳ Station description
- ↳ Station genre and location
- ↳ Codec and sampling rate
- ↳ Date

Note

- If no button is pressed within 15 seconds, the menu exits.
- Station lists and sub-menus may change from time to time and vary by locations.

8 Listen to Podcasts

- 1 Press [Podcasts] repeatedly to switch to [Podcasts] source, and press the rotary knob to confirm. You can also select source (in Source Control) and set Wi-Fi network (in General settings) via the App.
 - ↳ If network connection has not been established before, follow the prompts on the display to set up the network. (Turn the rotary knob or press [left]/[right] to select an option, and press the rotary knob to confirm.) You can also do the setup via the Philips Entertainment App.
 - ↳ If network connection is already set, the radio starts connecting to the previously connected network, and then tunes to your last listened Podcast station. [Connecting...] will appear, followed by the station playback info.
 - 2 Press [menu] to access the menu.
 - 3 Turn the rotary knob or press [left]/[right] to scroll through the menu options.
 - [Last listened]: Your last listened stations.
 - [Station list]: Tune to any available stations. You can also navigate stations by category.
 - [Network]: Set/check/clear Wi-Fi connection.
 - 4 To confirm an option selected, press the rotary knob.
 - 5 Repeat steps 3 to 4 if any sub-option is available under one option.
- Refer to Chapter 7 for the Display and Status table.

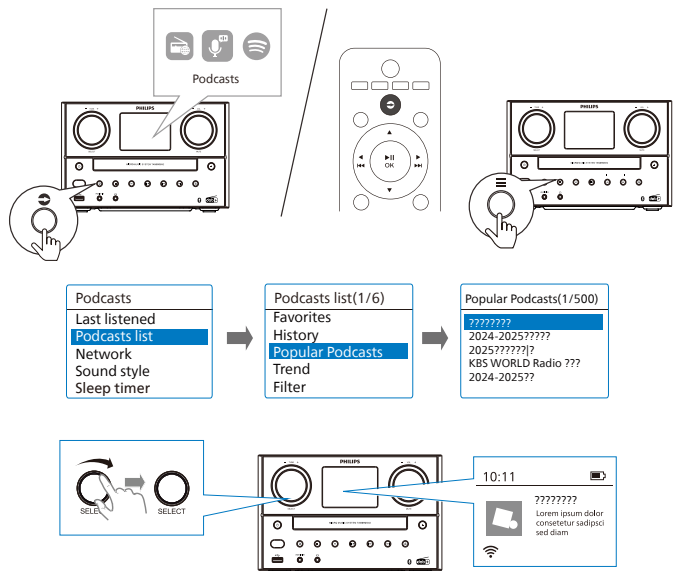

Store/remove Podcast stations to/from Favorite list

- 1 In Podcasts mode, select a Podcast from [Station List -> Popular Podcasts / Trend], or search for one via [Filter / Search].
- 2 Press and hold [stop]/[heart] for three seconds.
 - ↳ The current station is not in the favorite list: [Added to favorites] will display. The current playing station is added to the favorite list.
 - ↳ The current station is already in the favorite list: [Removed from favorites] will display. The current playing station is removed from the favorite list.

The favorite list of Podcasts is a separate list from that of the Internet radio. If there is no station playing, the long press of [stop]/[heart] will not have any effect.


Select a favorite Podcast station to play

- In Podcasts mode:
- 1 Press [stop]/[heart]
 - 2 Turn the rotary knob or press [left]/[right] to select a station in the favorite list.
 - 3 Press the rotary knob to confirm.
 - ↳ If there is no actions after 30 seconds, the current Podcast station will be played.

9 Listen to Spotify

Use your phone, tablet or computer as a remote control for Spotify. Go to [spotify.com/connect](https://www.spotify.com/connect) to learn how.


The Spotify Software is subject to third party licenses found here: <https://www.spotify.com/connect/third-party-licenses>.

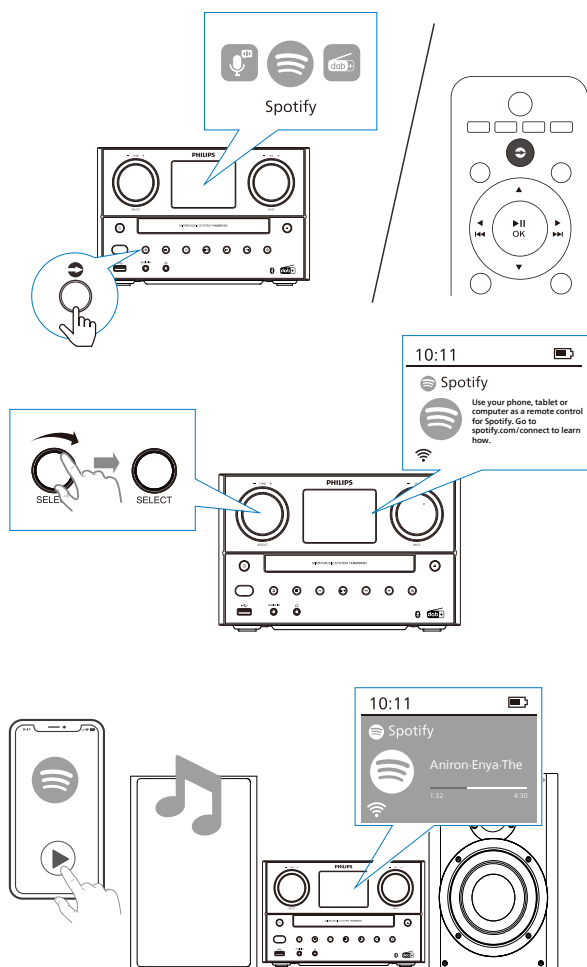

10 Listen to Bluetooth® music


Connect Bluetooth®

- 1 Press and turn **SELECT** knob to select [**Bluetooth**] mode.
- 2 Press to access the menu.
- 3 Turn **SELECT** knob to scroll through the menu options:
 - Select pair menu option and press **SELECT** knob.
 - Prompt message "Please connect with a device to: Philips TAM8905M2" appears with Bluetooth icon flashing.
 - On your Bluetooth device, enable Bluetooth and search for Bluetooth devices that can be paired.
 - Select [**Philips TAM8905M2**] displayed on your device for pairing.
 - After successful connection, the on-screen message will change to [**Connected**]
- 4 To return to the previous menu, press .

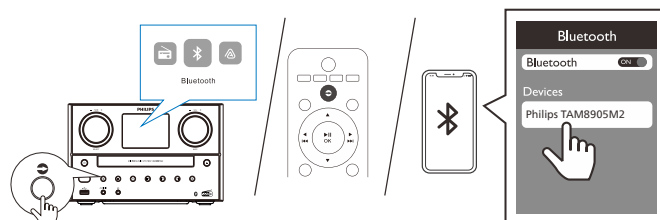


Disconnect Bluetooth®

- Deactivate Bluetooth on your device.
- Press and hold on the product or remote control for 3 seconds to enter pairing mode.

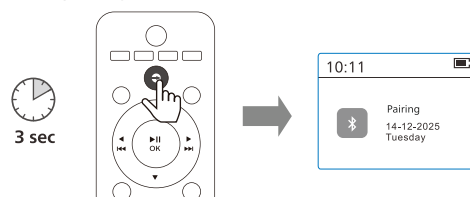

Clear Bluetooth® pairing records

- Press to access the menu.
- Turn **SELECT** knob to scroll through the menu options.
- Select [**Bluetooth clean**] option and press **SELECT** knob to confirm
- [**Yes**]: Clear Bluetooth pairing records to access the menu.

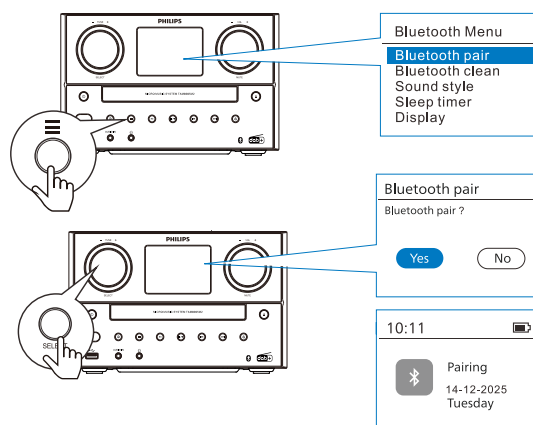

Note

- Compatibility with all Bluetooth devices is not guaranteed.
- Any obstacle between the unit and the device can reduce the operational range.
- The effective operation range between this unit and your Bluetooth enabled device is approximately 30 meters.
- The unit can memorize up to 8 previously connected Bluetooth devices.

11 Auracast™

Auracast™ can be used either as a transmitter or a receiver. You can broadcast your music to this product or any other Auracast™ compatible products.




Auracast™ broadcast (as a transmitter)

In DISC/USB/Audio in/Internet radio/Podcasts/Spotify/DAB/FM/Bluetooth source.

- 1 Play content on any input source that is not an Auracast Receiver.
- 2 Press and hold the  button for 3 seconds.
- 3 When you see [Auracast™ Broadcaster On], it indicates that Auracast has been activated.
- 4 At this point, on other Auracast-compatible devices, search for the Auracast channel named "Philips TAM8905M2-TX".
- 5 Press the SOURCE button to switch between DISC/USB/Audio in/Internet radio/Podcasts/Spotify/DAB/FM/Bluetooth to play different audio sources.

As a private transmitter (setting a password)

- 1 Please download the Philips Entertainment App (Refer to Chapter 10).
- 2 Connect the device.
- 3 On the interface, select [Auracast Broadcaster].
- 4 On Philips Entertainment App, enter General Settings, select Public (unencrypted broadcast) or Personal (encrypted broadcast) from Auracast broadcaster.
- 5 You can broadcast to any number of Auracast™ enabled products, follow the instruction to enable Auracast™ connection.
- 6 If Auracast broadcast channel is encrypted, Auracast receiver products are required to enter the password in order to listen to it.
- 7 After returning to the main menu, select Setup PartyLink mode and start it according to the guide.
- 8 On other Auracast-compatible devices, join the channel according to the corresponding device's guide.

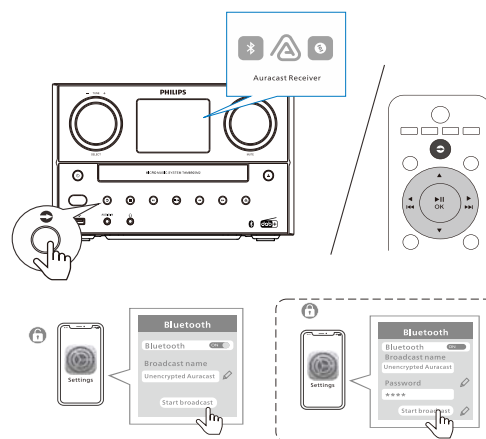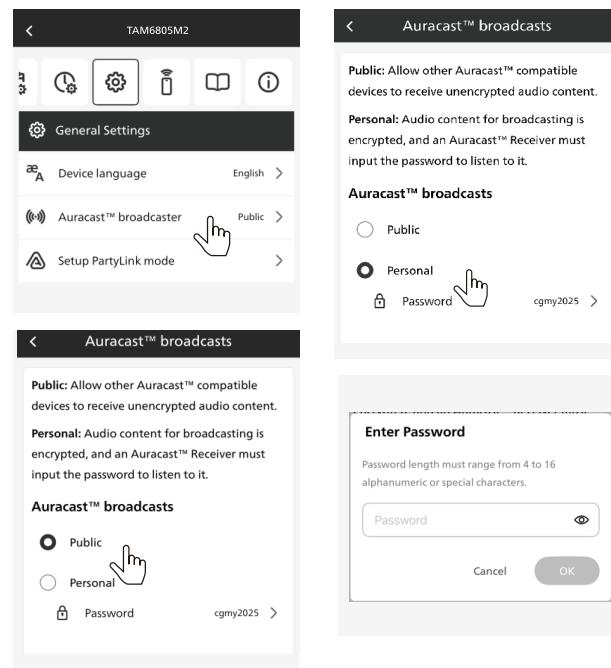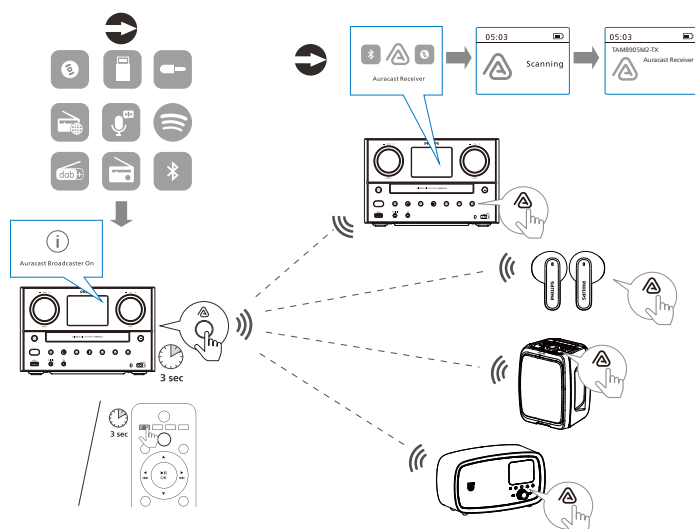


Disconnect Auracast™ broadcast

- Press and hold the  button on your product for 3 seconds.
- Exit Auracast™ broadcast from your product.


Auracast™ receiver (as a receiver)

- 1 Short press the  button on the product or select Source to switch to Auracast™ receiver source.
- 2 If you enter Auracast™ source for the first time or if the station list is empty, the product performs a full scan automatically.
- 3 The product will automatically search for near by Auracast™ broadcasts and connect to the unencrypted broadcast with the strongest signal.
- Entering the same password on Philips Entertainment App that you input when setting up Auracast™ broadcast from your mobile phone, dongle or device.
- 4 On your mobile device or dongle that supports Auracast™, follow the instruction to enable Auracast™ broadcast.
- 5 After successful connection, the product will show the Auracast TX name on the broadcast.
- 6 Select and play audio from your Auracast™ enabled mobile device, dongle or product to the unit.
- 7 Follow the Auracast™ connection on any additional Auracast™ compatible products you want to include. Short press the   buttons to select an Auracast™ broadcast channel.
- Only unencrypted broadcast is selected and encrypted broadcast is skipped.
- 8 Short press the  button again to rescan the Auracast™ broadcasts.

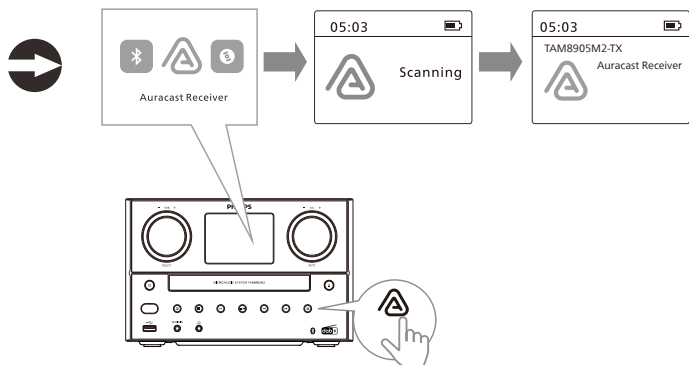

Or

- 1 Please download the Philips Entertainment App (Refer to Chapter 10).
- 2 Connect the device.
- 3 In the **Source Control** section, set it to Auracast Receiver.
- 4 Click on the newly launched Auracastg Broadcasts in the menu.
- 5 Select the desired channel from the list.
- 6 If you need to listen to a channel with a password, enter the correct password.

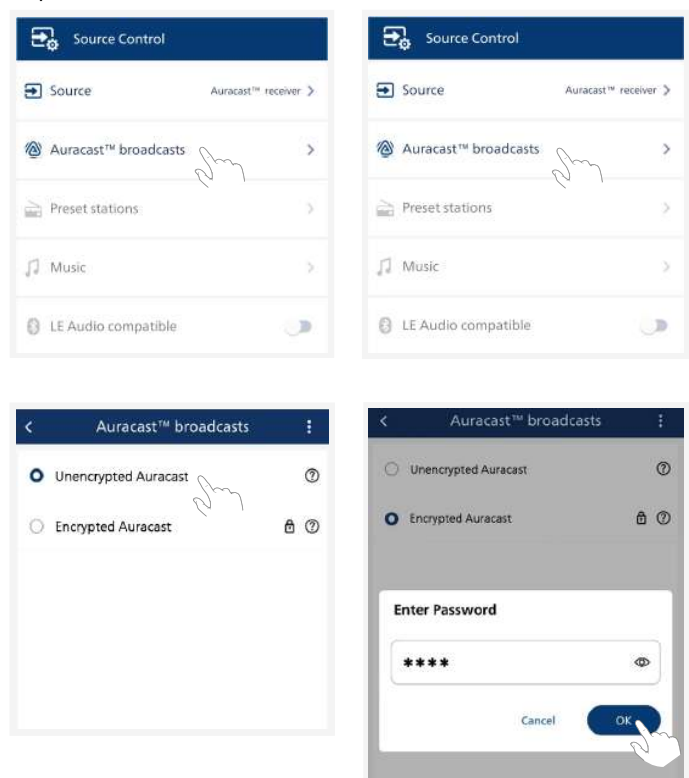

Disconnect Auracast™ receiver

- Switch your turntable to another source.
- Deactivate Auracast™ broadcast on your mobile device, dongle or product.

12 Use system settings menu

- 1 Press **≡** to access the menu.
 - 2 Turn **SELECT** knob repeatedly to select **[System settings]**.
 - 3 Press **SELECT** knob to confirm.
 - 4 Repeat steps 2 to 3 to select an option.
- **Sound style**: Select a preset sound effect.
 - **Sleep timer**: Set sleep timer.
 - **Display**: adjust backlight settings.
 - **Alarm**: set alarm on/off and alarm settings.
 - **Clock**: configure the date, time and corresponding display formats.
 - **System**: adjust language, factory reset and check SW version.

Note


- If no button is pressed within 15 seconds, the menu exits.

Adjust sound style

The following operations are applicable to all supported media.


Select a preset sound effect

Turn the **SELECT** knob to select **[Sound style]** or press **SOUND** on the remote control repeatedly to select a preset sound effect.

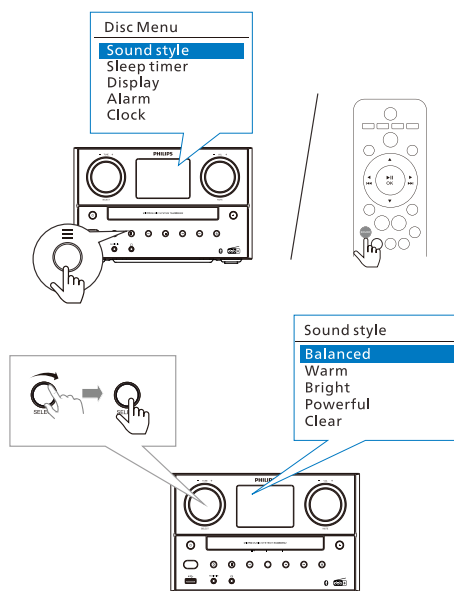

Set sleep timer

- 1 In power on mode, Select **[Main menu]>[Sleep timer]**.
 - 2 Press **SELECT** knob repeatedly to select the sleep timer period (in minutes).
- ➡ When **[Sleep OFF]** is displayed, the sleep timer is deactivated.

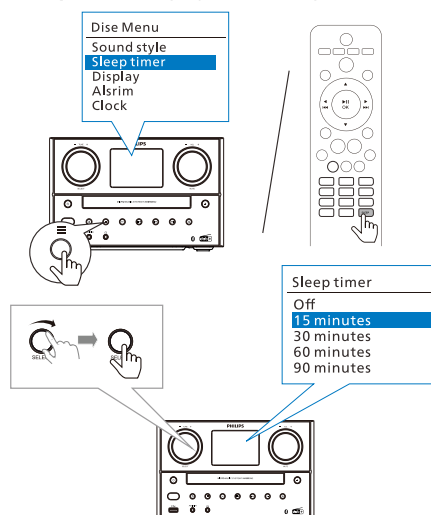


- When the music system is turned on, press **SLEEP/TIMER** repeatedly to select a set period of time (in minutes)

↳ When sleep timer is activated, **SLEEP** is displayed.

To deactivate sleep timer

- Press **SLEEP/TIMER** repeatedly until [OFF] (sleep off) is displayed.

↳ When sleep timer is deactivated, **SLEEP** disappears.

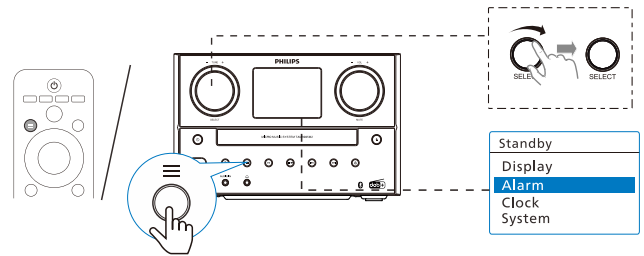

Adjust backlight settings


- 1 Press **≡** Select **[Display]**
 - 2 Turn **SELECT** knob to select an option or sub- option, then press **SELECT** knob to confirm.
- **[Backlight level]**: select a brightness level among Medium, Low and High.
 - **[Dim level]**: select a display brightness level among Medium, Low and High.
 - **[Timeout]**: select a timeout period for display backlight.

Set alarm

Note

- You can set two alarms to ring at different time. To make the alarm work normally, make sure that the clock is set correctly.

- 1 Select **[Main menu]>[Alarm]**.
↳ If clock is not set, a message prompts you to set clock.
 - 2 press **SELECT** knob Set **[Alarm 1]/[Alarm 2]** .
↳ **[Alarm Off]/[Alarm On]**
Press **≡** go back to the previous menu.
 - 3 Turn **SELECT** knob to **[Alarm 1 Setup]/[Alarm 2 Setup]**
↳ Enter **[Frequency]**
 - **[Once]**: the alarm sounds only once.
 - **[Daily]**: the alarm sounds everyday.
 - **[Weekdays]**: the alarm sounds each day from Monday to Friday.
 - **[Weekends]**: the alarm sounds on Saturdays and Sundays.
- Press **≡** go back to the previous menu.
- ↳ Enter **[Wake Up time]**
- Select **[time]**, and then set the alarm time.
Press **≡** go back to the previous menu.
 - ↳ Enter **[Source]**
 - **[Buzzer]**: select buzzer as alarm source.
 - **[FM]**: select your last listened FM radio station as alarm source.
 - **[DAB+]**: select your last listened DAB+ radio station as alarm source.
- Press **≡** go back to the previous menu

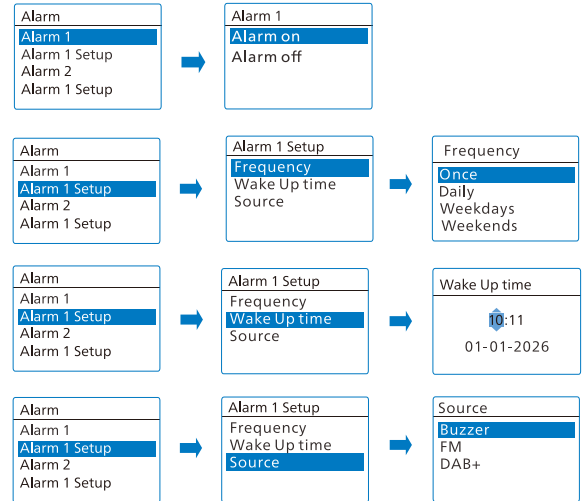

Note

- When the alarm is activated, an alarm icon for Alarm 1 or Alarm 2 is displayed.
- To stop the alarm, press **⏻** on the unit.
- You can also go to **[System settings]>[Time/Date]** to set time and date (see "Use system settings menu">"Set time/date").

Select system language

- 1 Select **[System]>[Language]**.
↳ A language list is displayed.
- 2 Turn **SELECT** knob to select a system language, then press **SELECT** knob to confirm.

Factory reset

- 1 Select **[System]>[Factory Reset]**.
- 2 Turn **SELECT** knob to select an option, then press **SELECT** knob to confirm.
 - **[Yes]**: Reset the radio to factory default status.
 - **[No]**: Return to the previous menu.

Check software version

- Select **[System]>[SW version]**.

Note


- If the product detects that new software is available, it asks if you want to go ahead with an update. If you agree, the new software is downloaded and installed.
- Before software upgrade, make sure that the product is connected to a stable mains power connection. Disconnecting power during a software update may damage the product.

13 Other features

Listen to an external device

You can listen to an external device through this product with an audio cable.

- 1 Use Audio in (included) connecting one end to the external device and connecting the other end of 3.5mm to the **AUDIO IN** jack on this product.
- 2 Press  and turn **SELECT knob** to select **AUDIO IN** source.
- 3 Start to play audio on the device (see the device user manual).

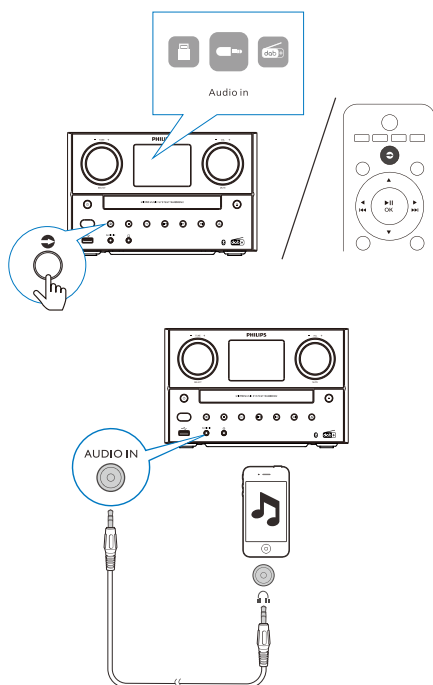

Headphone output

- Connect the headphone/ earphone through the headphone jack  on the front of your turntable.
- Rotate the **VOLUME** knob to adjust the volume level.

14 Philips Entertainment App



App download

Scan the QR code and press "Download" button, or search "Philips Entertainment" in the Apple App Store or Google Play to download the app.



The Philips Entertainment App puts you in charge of the music you are listening to. You can use your smart device to easily choose the sound style you want, switch between sources, and more.


Pair the App with your micro system

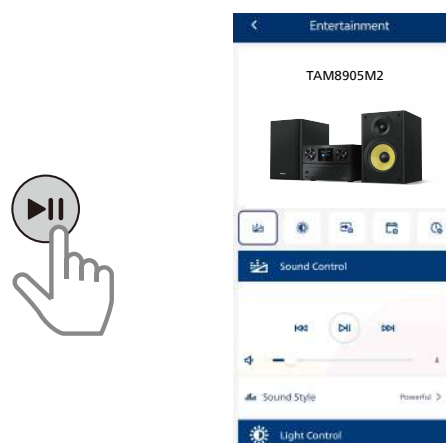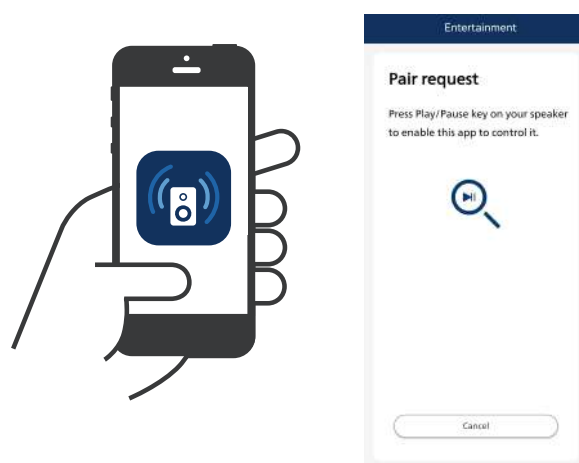

- 1 Launch the Philips EntertainmentApp on your mobile device.
- 2 Make sure your mobile device is enabled the Bluetooth setting.
- 3 If you connect the Philips Entertainment App with your micro system for the first time, you are asked to pair the App with your micro system.
- 4 Press Play/Pause key on your micro system to enable the App to discover and control it.


Select Equalizer (EQ) Effect

Press  icon on the App to select predefined sound modes to suit your music: **BALANCED/WARM/BRIGHT/POWERFUL/CLEAR/CUSTOM**.

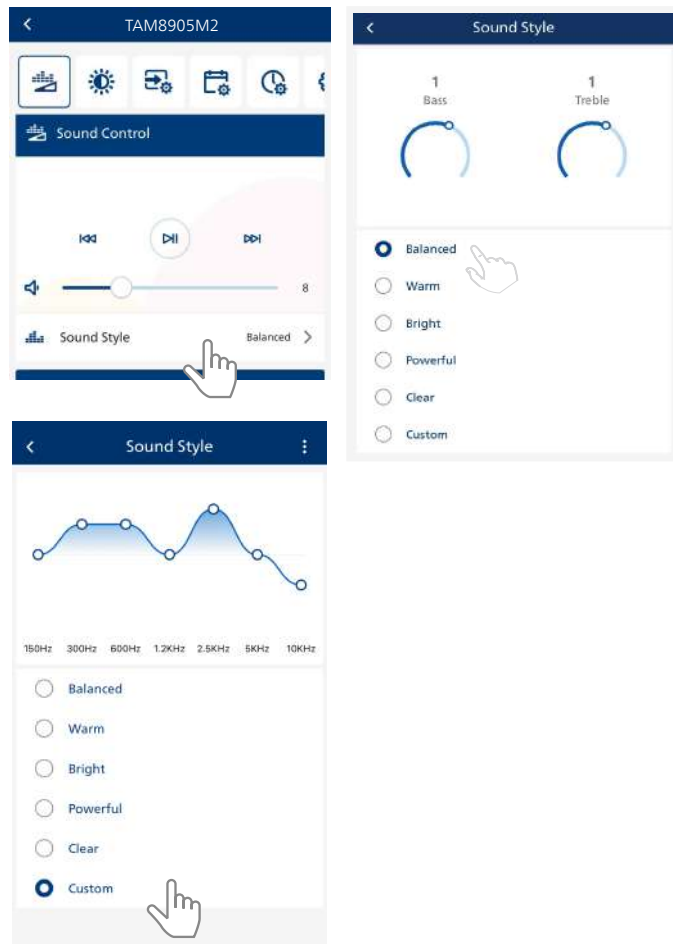


Select Source

Press  icon on the App to select **Internet Radio/Podcasts/Spotify/CD/Bluetooth/Auracast receiver/DAB/FM/USB/Audio in**.

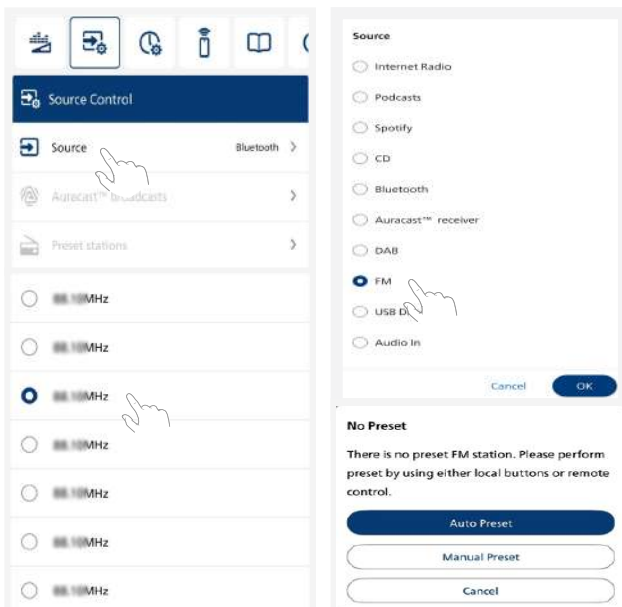


Set Internet Radio

- 1 Select Internet Radio source, Press **[Internet Radio]** to enter Internet Radio station list.

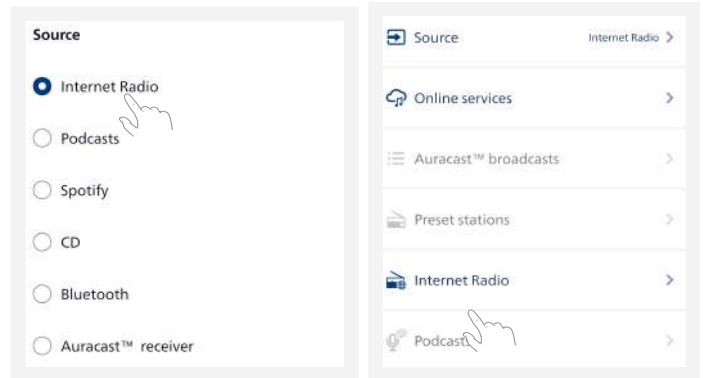


- 2 Display the station list after entering Internet Radio.

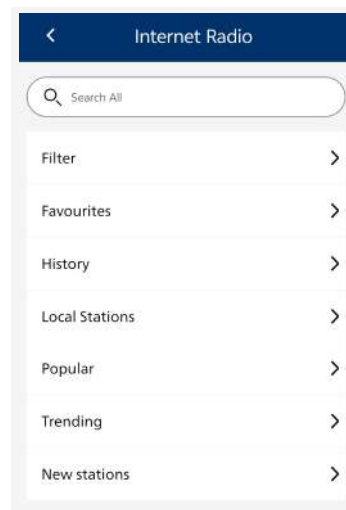


Set Podcasts

- 1 Select Podcasts source, press **[Podcasts]** to enter Podcasts list.

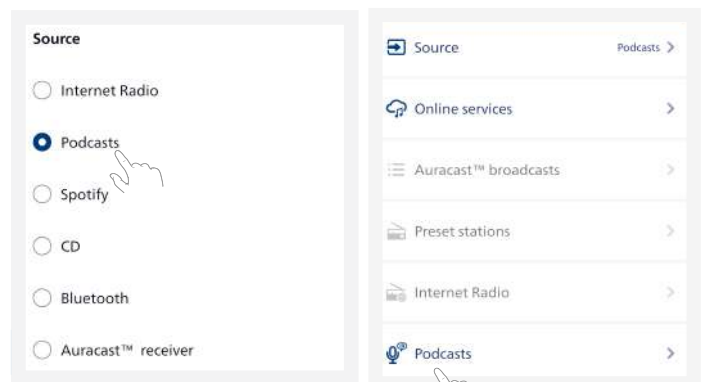


2 Display the podcasts list after entering Podcasts

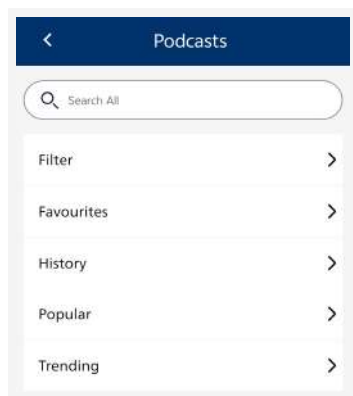


Set Spotify

1 Select Spotify source, press [Online services] to jump to Spotify.

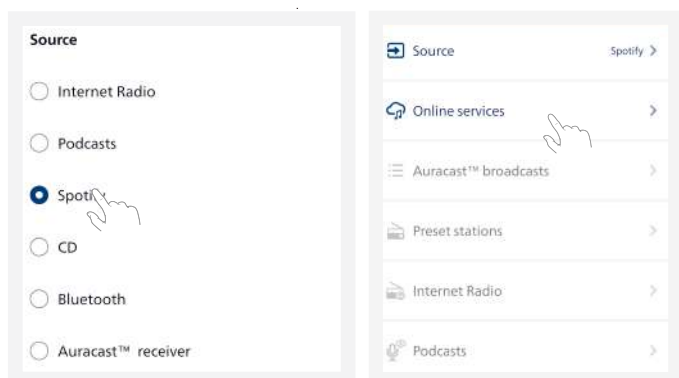

2 Press [Spotify] to connect.

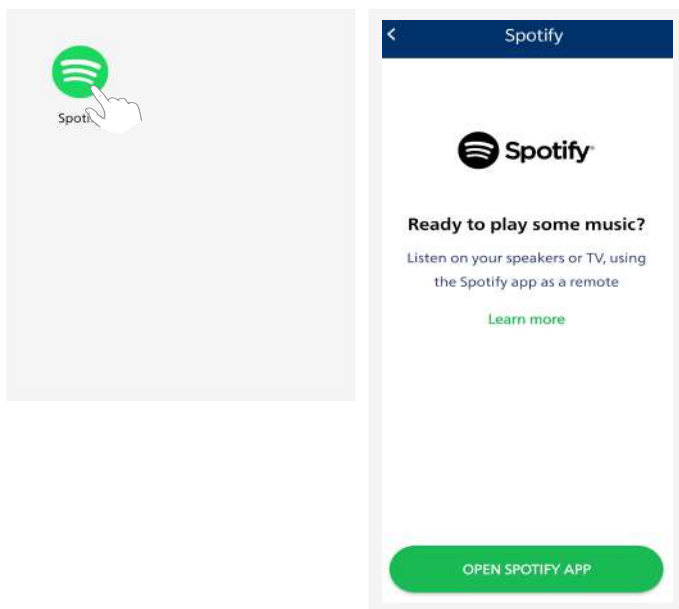


Note


- In order to receive the Internet radio/Podcasts/Spotify station on the APP of smartphone, the unit and smartphone need to keep the same network and activate the location service on the smartphone.

Receive unencrypted Auracast broadcast

1 Select Auracast™ receiver source.

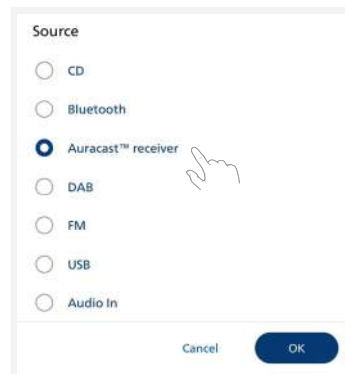


2 Press [Auracast™ broadcasts] to enter Auracast™ broadcast list.

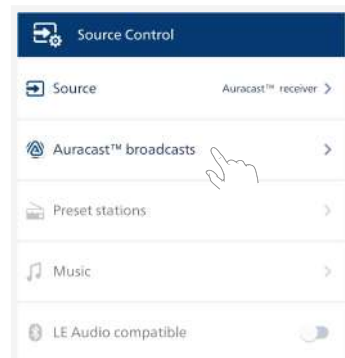


3 When an **unencrypted** playback source from mobile phone or dongle is selected, the micro system will search and connect to it.

↳ Make sure to activate Auracast™ broadcast on your mobile phone or dongle.

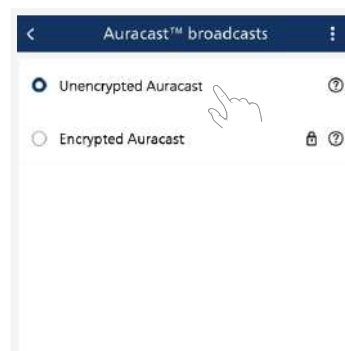


Receive encrypted Auracast™ broadcast

1 Select Auracast™ receiver source.

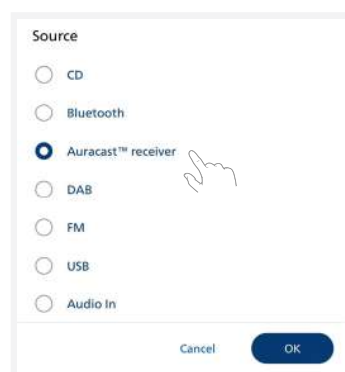


2 Press [Auracast™ broadcasts] to enter Auracast™ broadcast list.

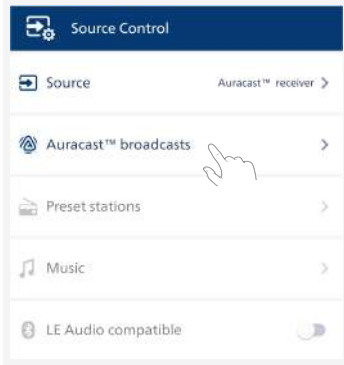


- 3 When an **encrypted** playback source from mobile phone or dongle is selected, you will be asked to input a password. Entering the same password that you input when setting up Auracast™ broadcast from your mobile phone or dongle.

→ Make sure to activate Auracast™ broadcast on your mobile phone or dongle.

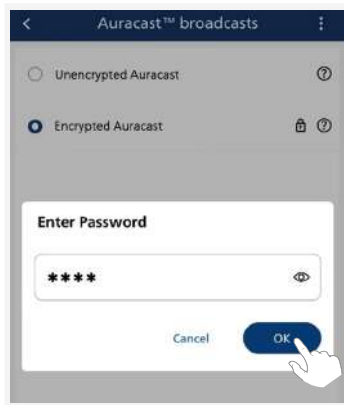


Select a preset radio station


- 1 Select to enter **[FM]** source.

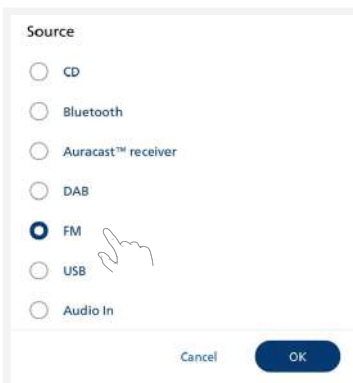

- 2 Press to select FM preset station.

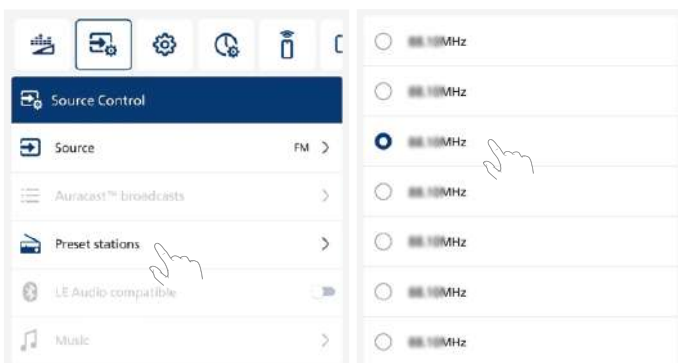


When there is no preset station stored in the micro system, the App will remind to perform auto scanning or manual preset.

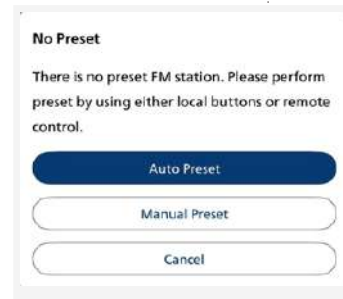

Set clock

Press  icon on the App to enter clock setting.

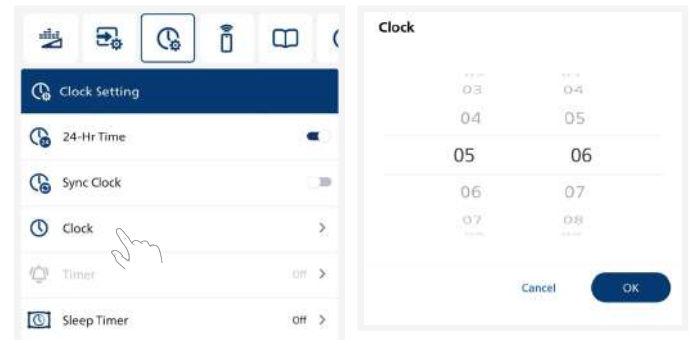

[24-Hr Time]: Set 12 or 24-hour time mode.


→ 24Hr Time is set by default.

[Sync Clock]: When Sync clock is enabled, the App will synchronize the mobile clock to micro system upon their connection.

→ Turn off **[Sync Clock]** so that users can customize the time for their micro systems.

[Clock]: option to swipe and select the time on the clock page.

Set Alarm

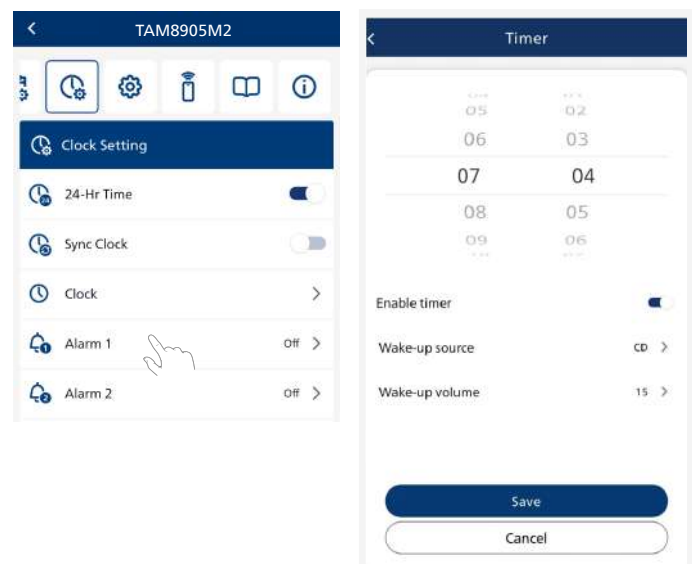


- 1 **[Alarm]** : Press to enter the alarm timer setting. Set the time to wake up the micro system.
- 2 Select **[Enable Alarm]** : The micro system will automatically turn on and play after reaching the set time.
- 3 Select **[Wake-up source]** : CD/FM/DAB/USB.
- 4 Select **[Wake-up volume]** : volume level 0 to 32.
- 5 Press **[Save]** to store the wake-up timer setting.
- 6 The micro system will turn on at the set time.

Note

- When clock is not set, alarm timer cannot be set.


Set Sleep Timer

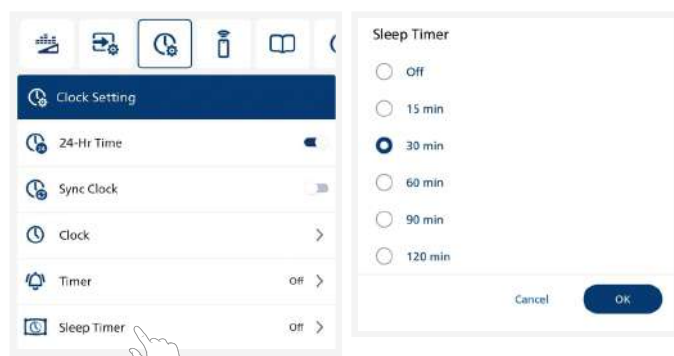

- 1 Press **[Sleep Timer]** to enter sleep timer setting.
- 2 Select **15/30/60/90/120 min**.
- 3 Press **[OK]** to store the sleep timer setting.
- 4 The micro system will turn off after the set time.

Select Auracast broadcast


- 1 Press  icon on the App to enter General Settings list.

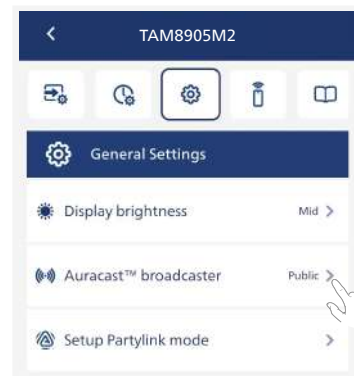


- 2 Select **Public** or **Personal** broadcasts.



- 3 Set a password when **Personal** (encrypted broadcast) is selected.

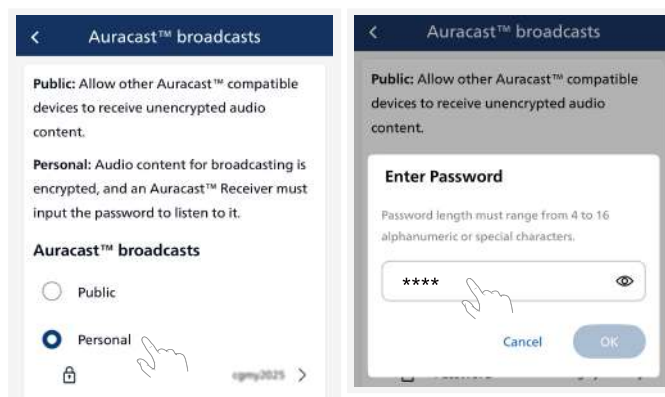

- 4 Press and hold  button on the device then it will enter Auracast scanning mode.

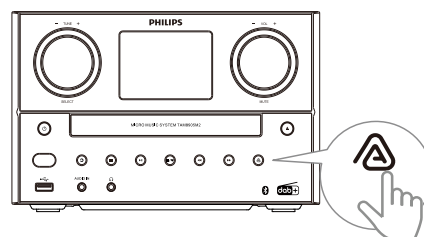


Remote control

Press  icon to enter and use your mobile device via Philips Entertainment App as a remote control to operate the micro system.



User guide

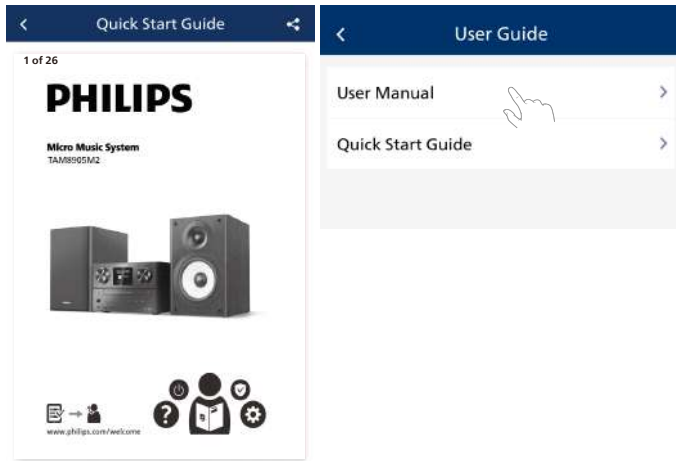

For more information about using this product, press  icon on the App you can find [User Manual] and [Quick StartGuide].


Firmware Upgrade

To get the best features and support, update your product with the latest firmware version.

The firmware for MCU can be upgraded to the latest version via Philips Entertainment App.

Please go to **Firmware Update** and press **Download & Update**. If the upgrade is released, the **Download & Upgrade** icon can be pressed to proceed automatically.

Once this product is connected to Philips Entertainment App, it can receive over-the-air firmware update. Always upgrade with the latest firmware version to improve the performance of this product.

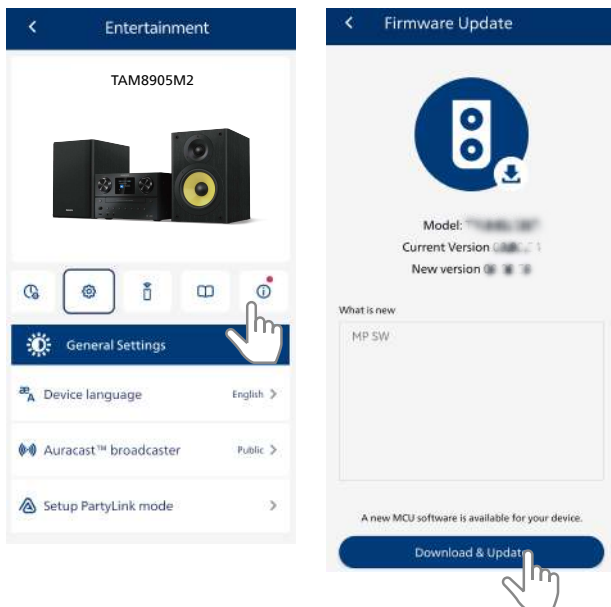

15 Product specifications

Note

- Product information is subject to change without prior notice.

General information

power adapter	100-240V~,50/60Hz
Operation Power Consumption	≤ 40W
Standby Power Consumption (without Wi-Fi)	≤ 0.8W
USB port	5.0V $\overline{\text{DC}}$ 0.5A
Dimension (W x H x D)	230 x 145.3 x 262 mm(Main unit) 174 x 260 x 240 mm(Speaker box)
Weight	2.075 kg (Main unit) 2 x 2.9 kg (Speaker box)
Operating temperature	0-40°C

Amplifier

Rated Output Power	50 Wx2 RMS
Frequency Response	50-20000 Hz, ± 3 dB
Signal to Noise Ratio	> 65 dBA
Total harmonic distortion	≤10%

Speaker

Speaker Impedance	6 ohm
Sensitivity	WF:4ohm TW:12ohm WF:84 $\pm$ 3dB/m/W TW:93 $\pm$ 3dB/m/W

Bluetooth®

Bluetooth Version	V6.0
Bluetooth Frequency Band	2.4 GHz ~ 2.48 GHz ISM Band
Maximum Transit Power	-4.1 dBm
Bluetooth Range	30 m (free space)

Wi-Fi

Wireless network	802.11 a/b/g/n/ac/ax
Operating Frequency	WiFi 2.4GHz: 2412-2472MHz WiFi 5GHz:5180~5240MHz 5260~5320MHz,5500~5700MHz 5745~5825MHz
Maximum Output Power	WIFI 2.4GHz: 15.19dBm WIFI 5G band 4:13.74dBm WIFI 5G band 1/2/3: 18.28dBm

Tuner

Tuning Range(FM)	87.5-108 MHz
Tuning Range(DAB)	174.928-239.2MHz (Band III)
Preset Stations(FM)	20
Preset Stations(DAB)	20

USB playability information

Extension	Codec	Sample Rate	Bitrate
.mp3	MPEG1 Layer 1	32~48 kHz	32~320kbps
	MPEG1 Layer 2	32~48 kHz	32~320kbps
	MPEG1 Layer 3	32~48 kHz	32~320kbps
.wav	WAV	8~48 kHz	Up to 1536 kbps
.wma	WMA	8~48 kHz	48~192 kbps
.flac	FLAC	Up to 96kHz/24 bit	

Compatible USB devices

USB flash memory	USB2.0
USB flash players	USB2.0

Supported USB formats

USB or memory file format	FAT12/FAT16/FAT32
Support audio format	MP3/WAV/FLAC/WMA
Support	≤128G,USB2.0
MP3 bit rate (data rate)	32-320 Kbps and variable bit rate
WMA bit rate (data rate)	48~192 kbps
WAV bit rate (data rate)	1536Kbs
FLAC bit rate (data rate)	376~900kbit
Directory nesting	up to a maximum of 8 levels
Number of albums/folders	maximum 99
Number of tracks/titles	maximum 999

Unsupported USB formats

Empty album	An empty album is an album that does not include MP3/WMA/WAV graphics and will not be displayed.
Unsupported file formats will be skipped. For example, Word files (.doc) or MP3 files with the extension .dif will be ignored and will not be played.	

16 Troubleshooting



Warning

- Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips webpage (www.philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.



The symbol indicates class II equipment



The symbol indicates AC voltage



The symbol indicates DC voltage

- Make sure that the AC power plug of the unit is connected properly.
- Make sure that there is power at the AC outlet.

No sound or poor sound.

- Adjust the volume.
- Check whether the unit is muted or the unit station is still buffering.
- Fully extend and adjust the position of the radio antenna.
- Keep the unit away from other electronic devices to avoid radio interference.

No response from the unit

- Disconnect and reconnect the AC power plug, then turn on the unit again.
- Check if the unit is in standby mode. If yes, turn on the unit.

Poor radio reception

- Keep the unit away from other electronic devices to avoid radio interference.
- Fully extend and adjust the position of the radio antenna.

Insufficient Wi-Fi signal strength

- Check the distance between your router and the unit.
- Rotate and adjust the position of the Wi-Fi antenna.

Cannot connect to your Wi-Fi network

- Check if your wireless router is switched off.
- Check if your wireless router supports WPS. Use the correct setup method(PBC or PIN) to connect your WPS-supported router to the unit. If necessary, refer to the user manual of your wireless router for how to set up Wi-Fi connection.
- Configure the Wi-Fi settings again (see "Get started">"Perform initial setup"and "Use system setting smenu">"Adjust network settings").

Some stations do not work sometimes

- Some stations can only support a limited number of listeners. If you try again after a few minutes, you will be able to listen to the stations.
- The station is not broadcasting. Try again later.

Some stations disappear from the station list

- When a station stops broadcasting on the Internet, it will be removed from the list.The unit will check constantly if the station is on the air. If it restarts broadcasting, it will be brought back to the station list.

Alarm does not work

- Set the clock/alarm correctly.

The audio quality is poor after connection with a Bluetooth-enabled device.

- The Bluetooth reception is poor. Move the device closer to this unit or remove any obstacle between them.

Bluetooth device cannot be connected with this unit.

- Check if the device does not support the profiles required for this unit.
- Check if Bluetooth function of the device is not enabled. Refer to the user manual of the device to find out how to enable the function.
- Check if this unit is not in pairing mode.
- Check if this unit is already connected with another Bluetooth-enabled device. Disconnect that device and then try again.

The paired mobile device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to this unit or remove any obstacle between them.
- Some mobile phones may connect and disconnect constantly when you make or end calls. This does not indicate any malfunction of this unit.

Music playback is unavailable on this unit even after successful Bluetooth connection.

- The device cannot be used to play music through this unit wirelessly.
- For some devices, the Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of this unit.

Cannot display some files in USB device

- The number of folders or files in the USB device has exceeded a certain limit. This phenomenon is not a malfunction.
- The formats of these files are not supported.

USB device not supported

- The USB device is incompatible with the unit. Try another one.

Timer does not work

- Set the clock correctly.
- Switch on the timer.

Clock/timer setting erased

- Power has been interrupted or the power cord has been disconnected.
- Reset the clock/timer.

How to keep clock display on or off in standby?

- In standby, press and hold **CLOCK** button to toggle clock display on or off.

Remote control does not work

- Before you press any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.
- Insert the batteries with polarities(+/- signs) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

No disc detected

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

CH	SI	SK	IS	AT	BE	BG	HR	CY	CZ	DK		
PT	ES	TR	LI	EE	FI	FR	DE	EL	HU	IE		
RO	SE	PL	NO	IT	LV	LT	LU	MT	NL	UK(NI)		UK





Specifications are subject to change without notice.

2026 © Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.

TAM8905M2_10_UM_V1.0