

Amica

WTP 14323 W

OPERATING INSTRUCTIONS EN

DRYER

Please carefully read these Operating Instructions before using the appliance!

CONTENTS

Basic Information.....	3
Safety instructions.....	4
Install the dryer.....	8
Understanding the symbols on clothes labels.....	12
Display and control panel.....	13
Using the appliance.....	17
Table of programmes.....	18
Troubleshooting.....	19
Maintenance and Cleaning.....	21
Specification.....	22
Service and Warranty.....	22
Product fiche.....	23



In accordance with European Directive **2012/19/EU** and Polish legislation regarding used electrical and electronic goods, this appliance is marked with the symbol of the crossed-out waste container.

This marking indicates that the appliance must not be disposed of together with other household waste after it has been used.

The user is obliged to hand it over to waste collection centre collecting used electrical and electronic goods. The collectors, including local collection points, shops and local authority departments provide recycling schemes. Proper handling of used electrical and electronic goods helps avoid environmental and health hazards resulting from the presence of dangerous components and the inappropriate storage and processing of such goods.

BASIC INFORMATION

Dear customer,

From today, DRYING will be easier than ever before. Your Amica DRYER is exceptionally easy to use and extremely efficient. After reading these Operating Instructions, operating the appliance will be easy.

Before being packaged and leaving the manufacturer, the appliance was thoroughly checked with regard to safety and functionality. After these tests some moisture or water may remain in the appliance.

Before using the appliance, please carefully read these Operating Instructions

By following these instructions carefully you will be able to avoid any problems in using the appliance.

It is important to keep these Operating Instructions and store them in a safe place so that they can be consulted at any time.

Follow these instructions carefully in order to avoid possible accidents.



Important!

This dryer is intended for household use only for drying textiles and clothing.

Level the appliance before connecting it to a wall socket.

The manufacturer reserves the right to introduce changes, which do not affect operation of the appliance.

Use

- Carefully read the instructions below before using the appliance.
- Never use the appliance outdoors or anywhere the temperature may fall below freezing.
- The appliance should not be operated by children or anyone who has not read the instructions.

Important! Temperatures below 0°C can damage the appliance!

In the event of the appliance being stored or transported in sub-zero temperatures, it should be left to acclimatise in a temperature above 0°C for 8 hours before being used.

Manufacturer's Declaration

The manufacturer hereby declares that this product meets the requirements of the following European directives:

- Low Voltage Directive **2014/35/EU**,
- Electromagnetic Compatibility (EMC) Directive **2014/30/EU**,
- Directive RoHS **2011/65/EU**,

and has been marked with the  symbol and issued with a declaration of compliance made available to market regulators.

NOTES ON SAFETY

- This product is an electrical appliance that is used exclusively for indoor drying fabrics washed in water. Use of safe power supply during the operation!
- The power source must be grounded. The grounding cable must be buried underground and must not be connected to the utilities network, such as water pipe or gas pipe. Grounding and neutral wire and must be distinguished and may not be connected together.
- The power cord must comply with IEC standards and withstand current greater than 10A. If these requirements are not met, you should immediately adapt your domestic electrical system to ensure the safety of your household.
- The appliance can dry up to 8 kg of washed laundry.
- Do not dry chemically cleaned clothes in the dryer
- Do not dry dirty laundry.
- Laundry contaminated with substances such as cooking oil, acetone, alcohol, petrol, kerosene, stain removers, turpentine, wax and wax removers must be washed in warm water with detergent before drying in the dryer.
- Do not attempt to dry the foam rubber (latex foam), bathing caps, waterproof textiles, rubber-lined clothing or pillows fitted with rubber pads in your tumble dryer.
- Fabric softeners or similar products should be as specified in the relevant directions for use.

NOTES ON SAFETY

- Laundry is not heated in the last part of the drying cycle. It is the cooling cycle to make sure the laundry is not damaged and has the right temperature.
- Filters should be cleaned each you use the appliance.
- Always keep the appliance clean.
- The room where the appliance is used must have adequate ventilation. Do not install the appliance in the same room where you use other appliances that produce exhaust fumes and other combustion gases.
- **CAUTION:** Do not turn off the dryer before the drying cycle ends unless the laundry will be quickly removed and hung out in order to dissipate heat.
- Air from the appliance must not be discharged to a chimney used for discharging flue gas from combustion appliances that burn gas or other fuels.
- The appliance must be installed in such a way as to ensure unlimited access to it and the dryer door may be fully opened.
- Keep pets away from the machine.
- Laundry contaminated with oil may ignite spontaneously, especially in the heat generated in a tumble dryer. Heating oil causes oxidation reaction. The oxidation produces additional heat. If the heat cannot dissipate, the laundry can become hot enough that ignition occurs. Stacking fabrics soiled with oil can prevent heat dissipation and create a fire hazard.

NOTES ON SAFETY

- If you cannot avoid tumble drying fabrics soiled with vegetable oil, cooking oil or dirty hair care products, you must first wash dirty laundry in hot water with detergent. In this way you can reduce, but not eliminate the risk.
- Do not overturn the appliance during normal use and maintenance.
- Before drying, make sure there are no foreign objects such as coins, lighters, matches, etc in clothing pockets.
- This appliance can be used by children aged 8 years and older or persons with physical, mental or sensory handicaps, or those who are inexperienced or unfamiliar with the appliance, provided they are supervised or have been instructed how to safely use the appliance and are familiar with the associated risks. Ensure that children do not play with the appliance. Children should not be allowed to clean or maintain the appliance.

Children less than 3 years of age shall be kept away unless continuously supervised.

- If the power cord is damaged it must be replaced to prevent danger. The power cord can be replaced by a service centre authorized by the manufacturer or by other suitably qualified person.
- This appliance is intended solely for indoor use.
- Make sure any dryer ventilation openings are not blocked by the carpet.

NOTES ON SAFETY


- If the appliance excessively heats up, immediately remove the plug from the wall outlet.
- Do not pull the power cord when removing the plug from the wall outlet.
- Do not insert or remove the plug from the wall outlet with wet hands.
- Do not damage the cord or plug.
- Do not install or disassemble the dryer before you carefully read the operating instructions.
- Do not place the dryer on top of the washing machine without a special kit (You must purchase the stacking kit to install the dryer on top of the washing machine. To avoid the danger hair the dryer must be installed by the manufacturer's service technician or other suitably qualified person).
- Do not lean on the open dryer door.
- Do not place objects such as candles or electric stove on the dryer.
- Do not exceed the maximum appliance load.
- Do not use the dryer without the filter base and its cover.
- Do not dry wet laundry that has not been spun.
- Do not expose the dryer to direct sunlight. The appliance is designed for household use only.
- Do not install dryer in rooms with high humidity.
- Unplug the appliance from the wall outlet before any cleaning and maintenance. Do not clean the appliance with water jet.
- Do not dry laundry contaminated with flammable substances, such as oil or alcohol. This could result in an explosion.

INSTALL THE DRYER

I. Position and level the appliance




- For convenience, it is recommended to place the appliance near a washing machine.
- Do not place the appliance on a carpet!
- The dryer must be installed in a clean place, where dirt does not accumulate. There must be inflow of fresh air near the appliance. Do not block the front air inlet or air intake grilles at the back of the appliance.
- The floor surface should not be either concave or sloping!
- Pay attention to the shape of the floor surface, and make sure the entire appliance weight rests on its legs (not its body)!

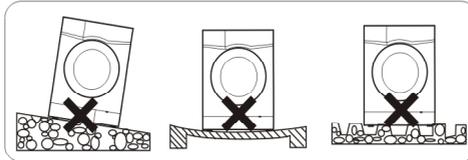

- Place the appliance on a solid, even surface.
- Level the machine by adjusting the legs (1)





After positioning and levelling the appliance, check that it is stable by pressing down each corner and ensuring it does not move!

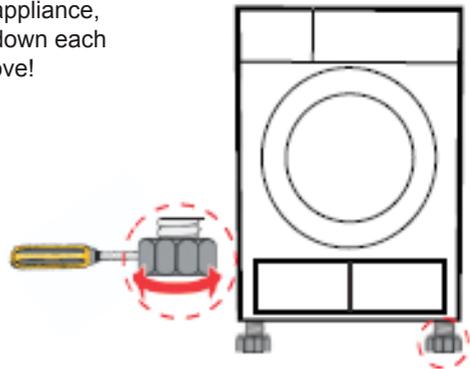


INSTALL THE DRYER

II. Water drain (option)

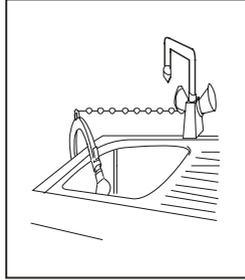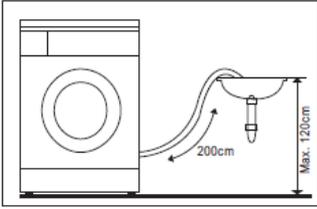


Normally condensed water drains into the container in the upper left corner of the dryer. Optionally, you can use the drain hose in the accessory bag and connect it to the dryer. Connect the hose as shown here.

Installation Steps:

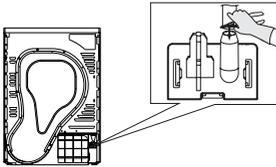


Using pliers remove the drain tube from the connector

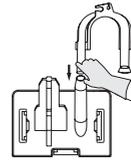


Insert the external drainage hose

Quick Start:

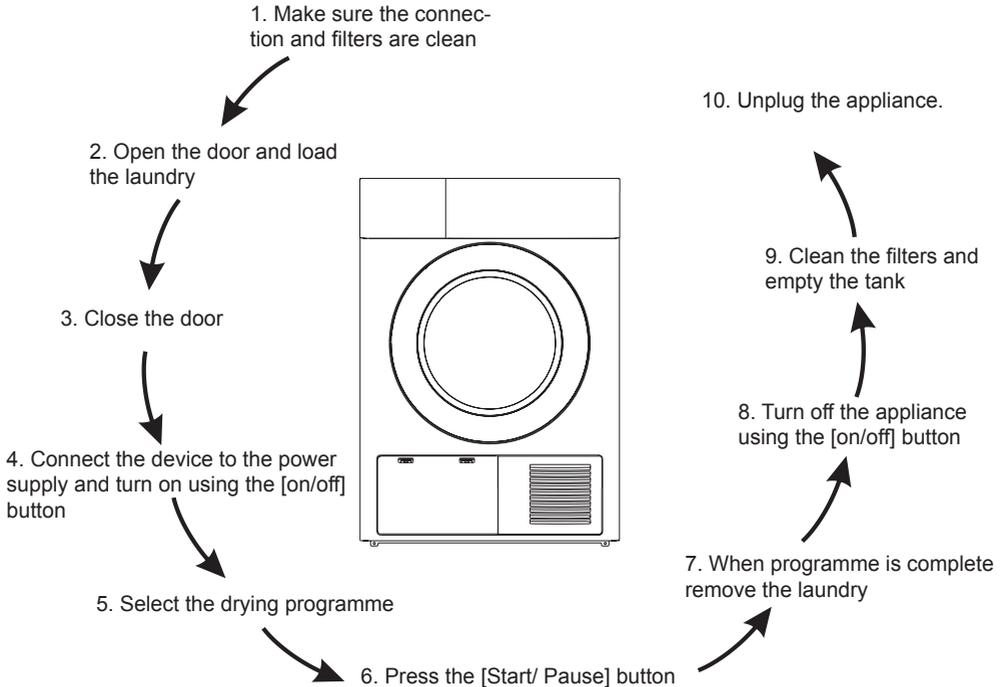

INSTALL THE DRYER

III. Connect to power supply

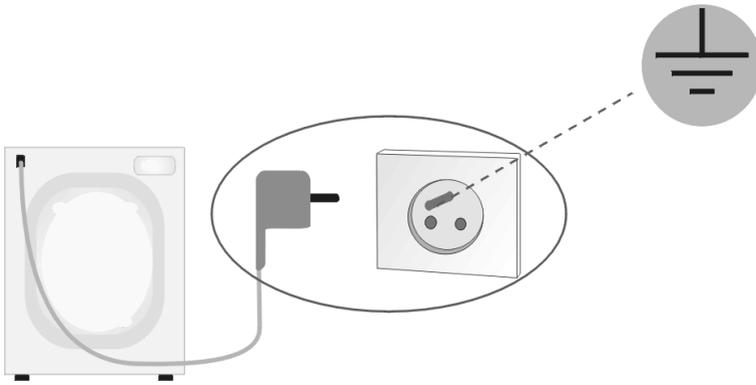

- The appliance's mains connection (electrical wall socket) should be in a visible and accessible place!
- Only plug the appliance into a properly installed socket with an earth pin!
- Do not connect the appliance through any extension cord or an adapter!
- In the event of the power cord being damaged, it must be replaced by an authorised technician.
- The electrical system to which the appliance is to be connected must be protected with a 10 A fuse.

INSTALL THE DRYER

IV. Tips

1. Spin the laundry in the washing machine before tumble drying. The high spin speed can reduce the drying time and save energy.
2. To make sure the drying effects are uniform, sort the laundry by fabric type and drying program.
3. Before the drying close the locks, hooks and buttons, etc.
4. Do not over-dry clothes, as they can easily crease or shrink.
5. Do not dry articles such as raincoats, bike covers or similar flexible materials containing rubber parts.
6. The appliance door can be opened only once the drying programme has completed. Do not open the door during the drying programme as this may result in scalding by hot appliance parts or hot clothing.
7. To avoid extended drying cycles and increased energy consumption, clean the appliance filters after each use. Remember to empty the container with water discharged during drying.
8. Use only the dedicated programme to dry woollen garments.
9. Recommended load depending on the kind of laundry to be dried.

Coats (approx. 800 g) 	Jackets (about 800g cotton) 	Jeans (approx. 800 g) 	Quilts (about 900g cotton) 
Sheets (about 600g cotton) 	Working clothes (upper and lower) (about 1120g cotton) 	Pyjamas (approx. 200g) 	Shirts (about 300g cotton) 
T-shirts (about 180g cotton) 	Briefs, panties (about 70g cotton) 	Socks (about 30g fiber mix) 	

UNDERSTANDING THE SYMBOLS ON CLOTHES LABELS



Before drying pay attention to the symbols on the apparel label.

Failure to follow the symbol instructions may damage or destroy clothes to be dried.

The symbols are explained in the following table:

Dry 	Tumble dry 	Do not tumble dry 	Do not dry 
Line dry/hang to dry 	Drip dry 	Dry flat 	Dry in the shade 
Dry clean 	Do not dry clean 	Dry clean normal cycle with any solvent 	Dry clean normal cycle petroleum solvent only 

DISPLAY AND CONTROL PANEL

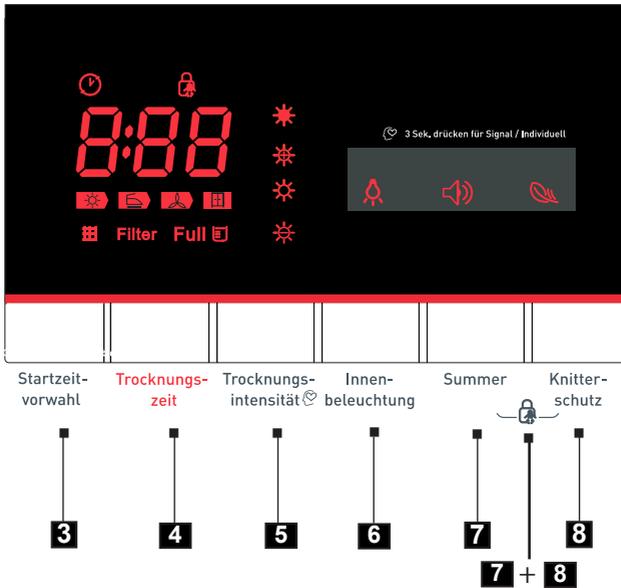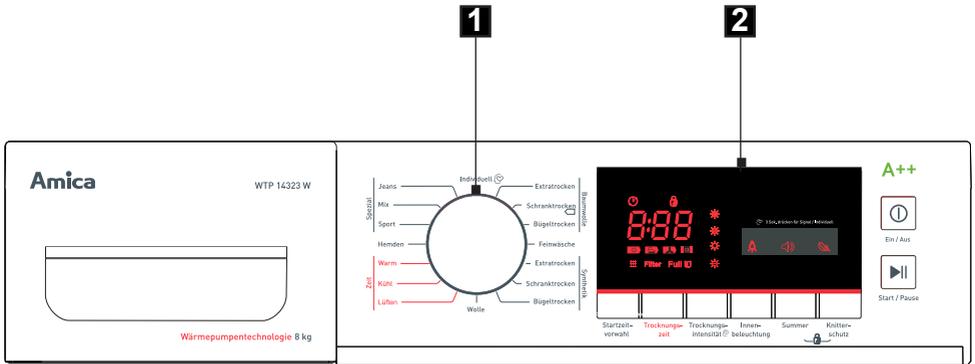

1. Programme selector dial
2. Display
3. **Delay Start** button
4. **Drying time** button
5. **Drying intensity / Favourite** (press and hold for 3 sec.)
6. **Interior Lighting** button
7. **Acoustic signal** button
8. **Anti-Crease** button
- 7+8. **Child Lock**


DISPLAY AND CONTROL PANEL

1. Programme selector dial

Choose the appropriate drying programme as required, depending on the type and amount of laundry loaded, which ensures better results and more effective drying. Once the drying programme is started, turning the programme selector knob to another position is possible, however it does not change the previously selected programme.

2. Display

The display shows the following symbols:

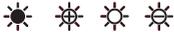	Delay Start indicator
	Child Lock indicator
	The remaining time indicator / error message
	Programme progress symbols
	Soiled filter indicator (caution)
	Water tank full indicator (caution)
	Drying intensity indicators (Four steps)
	Interior lighting indicator
	Acoustic signal indicator
	Anti-Crease indicator

3. Delay Start button

Press this button to set the delay time for starting programme. The setting range available is from 0-24 hours. Press the button to set the time after which drying is to commence.

NOTE: If there is a power outage during Delay Time, countdown will NOT resume immediately after the power is restored. You must re-set the program and the delayed start.

4. Drying Time button

When you selecting 1 of 3 Flex Time programmes (refresh, cold, warm). The drying time may be adjusted in increments of 10 minutes.

The maximum drying times depending on the programmes are given in table of programmes.

DISPLAY AND CONTROL PANEL

5. **Drying intensity / Favourite (press and hold for 3 sec.)**

Use this function to adjust clothes drying intensity. There are four intensities

Drying intensity:    

The drying intensity can set before the start of the programme only.

	Intense drying
	Normal drying
	Medium drying
	Gentle drying

Choose your favourite programme (press and hold for 3 sec.)

To set the **Favourite** programme turn the knob on any programme and set the additional programme features. Then, press and hold down the **Drying Intensity**  for about 3 seconds to confirm the **Favourite** programme setting. The default is the program Cotton – hanger dry.

6. **Interior Lighting button**

The drum interior light will come on for about 3 minutes when you press the button or automatically for 1 minute when the programme ends and the door is opened.

7. **Acoustic signal button**

By default the acoustic signal is on. Press the button to turn on/off the acoustic signal. If the acoustic signal is on:

- (A) The dryer will beep when you press an additional programme feature button.
- (B) When you turn the programme selection dial during the drying cycle the appliance will beep to remind you it is not allowed choice.
- (C) The appliance will beep when the drying programme has ended.

DISPLAY AND CONTROL PANEL

8. Anti-Crease button

Once the programme has ended, the Anti-crease function operates for 30 minutes (default) or 120 minutes (when selected).

When you select the [Anti-Crease] function its indicator will come on. This feature prevents creases in clothing. The laundry can be removed during this phase the exception of programmes: [Cool], [Refresh] and [Wool].

This function can be selected in all programs.

START/PAUSE button

Press **Start/Pause** to start or pause a programme.

During the drying cycle the corresponding drying programme phase symbol is displayed.

When **Paused**, the symbols are lit . You can use **Pause** to add laundry for drying.

7+8. Child Lock

This function locks function buttons to prevent settings being changed or operation interrupted by children. Press and hold **Acoustic signal** and **Anti-Crease** button for 3 seconds to activate the Child Lock during a drying cycle. When child lock function is set, the display will show  icon and only [On/Off] button can be used. To disable Child Lock, press and hold Acoustic signal and Anti-Crease buttons for 3 seconds.

Important! If the Child Lock function is activated, the display will show the  symbol.

Important! When you turn off or unplug the dryer or the drying cycle ends, the Child Lock function will deactivate.

USING THE APPLIANCE

I. Select Programme

1. Press [On / Off]. When the LED display lights up turn the programme selection dial and select the desired programme
2. Select the additional option [Delay Start], [Drying Time], [Drying Intensity] or [Anti-Crease] — if the programme allows you to select additional options.
3. Press the [Start/ Pause] button

II. Set Delay Start

The delayed start function may be used when, for example, taking advantage of discounted electricity tariffs.

Procedure:

1. Close the appliance door.
2. Set the programme selector knob to the desired programme (see the table further on).
3. Select additional functions or drying cycle parameters as required.
4. Press the Delay Start button.
5. Select time ranging from 0 to 24 hours. The display will show the setting from 0H to 24H.
6. Press the [Start/ Pause] button. The appliance will be set in delay mode. Drying cycle will commence immediately after the delay time has elapsed.

Note: If you set delay start, the display will show the time remaining to start the drying program.

III. End of drying cycle

1. Once the programme is complete drum will stop rotating and the display shows "0:00". The last programme phase indicator will flash. If you do not remove clothes from the dryer with a specified time, the appliance will start the [Anti-Crease] programme. Press [On/Off] and remove the plug from the wall outlet.
2. If the appliance suddenly stops during the drying programme and displays an error message, follow the information in the "Troubleshooting" section.

IV. Cancel or modify programme

Press the On/Off button to interrupt the programme. Then press on/off button again to turn on the appliance and select the desired drying programme.

TABLE OF PROGRAMMES

Programme name	Weight (max) kg	Additional functions available				Recommendations	Time [h:min]	Energy consumption [kWh]
		Delayed start	Drying time	Drying intensity	Anti-Crease			
Cotton	8	Option	-	Option	Option	For drying cotton, coloured cotton or linen bundle at the following drying levels: Cupboard Dry, Hanger Dry, Iron Dry	03:22	2.1
		Option	-	Option	Option		02:58	1.9
		Option	-	Option	Option		02:40	1.5
Delicate	1.0	Option	-	Option	-	For drying delicate fabrics that you can tumble dry or for drying Berries hand washed at low temperature.	05:50	0.4
		Option	-	Option	-			
Delicate	3.5	Option	-	Option	Option	For drying thick or layered synthetic fabrics	01:20	0.7
		Option	-	Option	Option		01:10	0.6
		Option	-	Option	Option		00:50	0.5
Synthetics	1.0	Option	-	-	-	Note: Do not tumble dry wooden fabrics if the odd bag prohibits.	00:25	0.15
		Option	-	-	-			
Wool	1.0	Option	-	-	-	To refresh clothes kept in closed containers for a long time, from a maximum of 20 minutes to a maximum of 150 minutes, (in steps of 10 min). To air the laundry with cool air for 10 minutes to a maximum of 30 minutes, (in steps of 10 min). To heat the laundry for 10 minutes to a maximum of 120 min, (in steps of 10 min).	00:20	0.15
		Option	-	-	-		00:10	0.05
		Option	-	-	-		00:10	0.15
Time-flex	-	Option	-	-	-	For crease free clothing such as: shirts and blouses made of fabrics that are easy to iron. Place clothes loosely in the dryer. Avoid drying hanging or delicate items which will not be ironed.	01:00	0.5
		Option	-	-	-		02:40	0.9
		Option	-	-	-		01:40	1.2
Special	8.0	Option	-	Option	Option	Select mix if you can not determine the fabric. For drying jeans or recreational clothing spun at high speed in the washing machine.	03:20	2.2
		Option	-	Option	Option			
		Option	-	Option	Option			

Note: 1. [] This symbol indicates a programme used to determine the energy efficiency of the "standard cotton fabrics drying programme", which is suitable for drying cotton fabrics at normal humidity level. It is the most energy efficient cotton drying programme.

Note: 2. Recommended applications of these programmes are indicative only. The user can select the desired program, according to own preferences. Thick and multi-layered fabrics, eg. linens, jeans and denim clothing, are difficult to dry.

TROUBLESHOOTING

Problem	Probable cause/Solution
No information on the display	<ul style="list-style-type: none">- Make sure the plug is properly inserted into the wall outlet.- Check the main power supply.
The dryer does not start	<ul style="list-style-type: none">- Check if the Start / Pause button is pressed.- Make sure the door is properly closed.
The door opens spontaneously	<ul style="list-style-type: none">- Push the door in until it clicks shut.- Make sure the dryer is not overloaded.
The laundry is not sufficiently dry or drying time is too long	<ul style="list-style-type: none">- Clean the top and bottom filter.- Select the appropriate programme.- Do not block the air intake.

Note:

If you can not correct the problem yourself, ask for assistance:

1. Press [On / Off].
2. Unplug the appliance and call service.

TROUBLESHOOTING

Appliance error codes

The tumble drier indicates error codes to help locate minor operating faults and identify their cause. The ERROR CODES help locate and determine the cause.

Detected errors are indicated as shown in the following table:


Display indication	Reason	Solution
Full 	Water container is full	Empty the container
	Water pump failure or water level sensor error	If the problem persists, contact the SERVICE CENTRE
E32	Humidity sensor failure	
E33	Temperature sensor failure	
 Filter	The filter is clogged or the ambient temperature is too high	
		If the problem persists, contact the SERVICE CENTRE

When an error occurs, the appliance beeps (if active).

MAINTENANCE AND CLEANING


I. Empty the water container

1. Pull out the water container with your both hands;
2. Pour the condensed water into the sink;
3. Replace the water container.

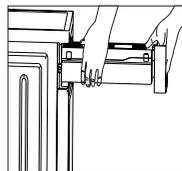


WARNING:

1. Empty the water after each use. If the container becomes full during the drying cycle, programme will be stopped and  icon will flash. After emptying the container, you can restart the dryer by pressing [Start / Pause].
2. Do not drink the condensation water.
3. Do not use the dryer without water container in place.

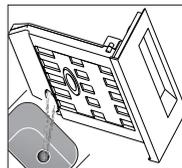


II. Clean the top filter

1. Open the door.
2. Remove the top filter
3. Remove fibres and yarn collected on the filter mesh.
4. Replace the top filter

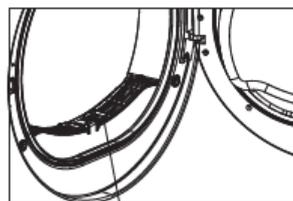

III. Clean the bottom filter

1. Open the filter cover.
2. Unscrew the two locking levers.
3. Pull out the filter body
4. Completely clean the filter mesh.
5. Replace the filter body!
6. Tighten both locking levers.
7. Close the filter cover.

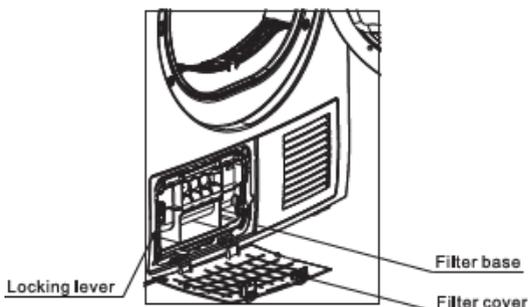


NOTE

1. Fluff, threads, fibres collected on the filter block the air flow and thus extend the drying time and increase the energy consumption;
2. Remove the plug from wall outlet before cleaning!
3. Do not operate the dryer without the filter!
4. Clean the filter after each use to prevent the accumulation of fluff, threads, fibres inside the drum.

IV. Clean the heat exchanger

About every two months or when necessary, use a sponge or a soft brush to remove fluff, threads and fibres from the heat exchanger. Wear gloves when cleaning.

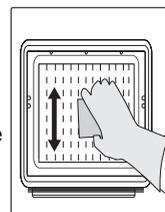

Note: Fluff, threads and fibres can be removed easily when sprayed with water

SPECIFICATION

-Type	WTP 14323 W
-Rated voltage	220-240V / ~50Hz.
-Rated power	650 W
- Refrigerant	R134a
- Ambient temperature	+5°C+35°C
- Maximum Load	max. 8 kg
- Dimensions Height x Depth x Width	845 / 595 / 622 [mm]
- Weight	52 kg
Meets the requirements of EU legislation, EN- 61121 standard	
Contains fluorinated greenhouse gases covered by the Kyoto Protocol Hermetically sealed	

Note:

1. Rated load is a maximum load. Always make sure that the weight of laundry in the dryer never exceeds the rated load.
2. Do not install the tumble dryer in a room where there is a risk of freezing temperature. The dryer may not work properly at temperature close to freezing.
3. Risk of damage if the condensed water freezes in the pump, hose or condensed water container.

Testing for label information in accordance with EN 61121 using the standard cotton drying programmes:

- at full load

- at partial load

- weighted average electricity consumption is **236 kWh/year**

PRODUCT SHEET

(In accordance with Commission Delegated Regulation (EU) No. 392/2012 of 01 March 2012 supplementing Directive 2010/30/EU of the European Parliament and of the Council with regard to energy labelling of household tumble dryers).

Supplier's name or trade mark	Amica
Type	WTP 14323 W
Rated load	8.0 kg
Energy efficiency class ¹⁾²⁾	A++
Dryer Type	condensing with heat pump
Annual weighted average energy consumption AE_c ³⁾	236 kWh/year
Energy consumption of the standard cotton drying programme:	
- At full load E_{dry}	1.98 kWh
- At partial load $E_{dry1/2}$	1.08 kWh
Power consumption in the off-mode P_o	0.01 W
Power consumption in standby mode P_l	0.8 W
Duration of the left-on mode:	1 min
Condensation efficiency class on a scale from G (lowest efficiency) to A (highest efficiency) ¹⁾	B
The average condensation efficiency in the standard cotton programme at full load C_t	80,1 %
The average condensation efficiency for the standard cotton programme at partial load C_{dry}	80,1 %
The weighted condensation efficiency for the standard cotton programme at full and partial load $C_{dry1/2}$	80,1 %
The weighted duration of the standard cotton programme at full and partial load T_t	150 min.
Duration of the standard cotton programme at full load T_{dry}	198 min.
Duration of the standard cotton programme at partial load $T_{dry1/2}$	115 min.
Sound level in the standard cotton program at full load L_{wa}	69 dB (A) re 1 pW
Equipment designed for fitting	No
Automatic tumble dryer	No

¹⁾ Energy efficiency class on a scale from A+++ (more efficient) to D (least efficient)

²⁾ "Standard cotton drying programme" is the programme referred to on label and in the datasheet — it is suitable for drying cotton at normal humidity levels and is the most energy efficient programme for drying cotton. This programme is suitable for drying normal, wet cotton products. It is the most energy efficient cotton drying programme.

³⁾ Estimated weighted annual energy consumption based on 160 standard cotton drying cycles at full and partial load and power consumption in standby and off modes. Actual energy consumption depends on how the appliance is used.

The dryer is equipped with a power management system. Standby time 1 minute.
