

If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.


 

# Quick Start Guide

## 1 Connect 2.4GHz Receiver

Connect the 2.4GHz receiver to the device USB port.



Switch toggle to 2.4GHz mode

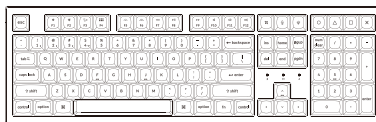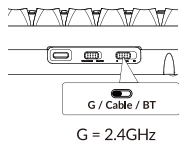


Note: For the best wireless experience, we recommend using the extension adapter for receiver and putting the 2.4GHz receiver somewhere on your desk close to your keyboard for a low rate of latency and fewer signal interferences.


## 2 Connect Bluetooth



 Switch toggle to Bluetooth




Press fn + 1 (for 4 seconds) and pair with device named Keychron K10 Max.

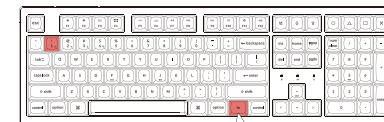


fn + 1

### 3 Connect Cable

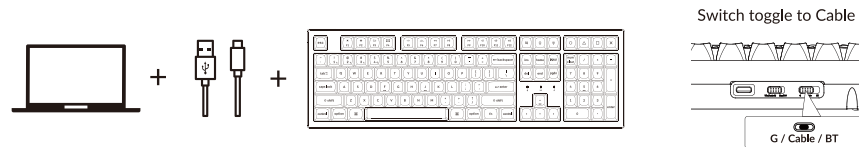


### 4 Switch To The Right System

 Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.




### 5 The Backlight

Press fn + Q to change the lighting effect

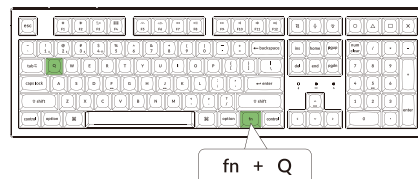


Press fn + tab to turn the backlight on/off

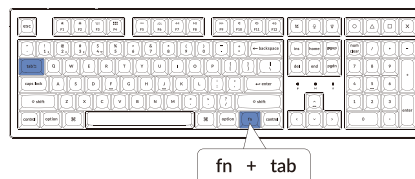


### 6 Adjust The Backlight Brightness

Press fn + W to increase the backlight brightness

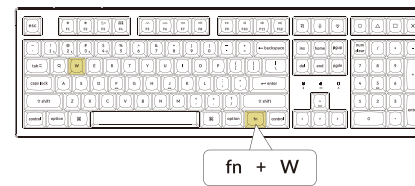

Press fn + S to decrease the backlight brightness

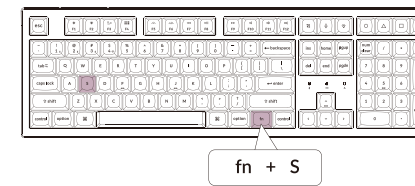

### 7 The Keychron Launcher App

Please visit [launcher.keychron.com](https://launcher.keychron.com) to access the Keychron online launcher app. This app enables users to remap keys, adjust key actuation points, assign multiple commands to a single key, enter game controller mode, and more. If it cannot recognize your keyboard, please reach our support to get instruction.



 
\*The online launcher App can only run on the latest version of Chrome, Edge, and Opera browsers yet.  
\*The online launcher App only works when the keyboard is connected by wire to the computer.

### 8 The Layers


There are four layers of key settings on the keyboard. The layer 0 and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.

If your system toggle is switched to Mac, then the layer 0 will be activated.

If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.



### 9 Factory Reset & Firmware Update

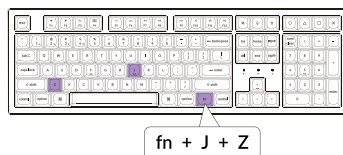

#### Troubleshooting? Don't know what's going on with the keyboard?

##### Factory reset your keyboard

1. Power on your keyboard.
2. Press and hold fn + J + Z (for 4 seconds). The keyboard backlight will flash in red quickly for 3 seconds, indicating that the keyboard has been reset.

##### Flash your keyboard firmware

1. Visit [launcher.keychron.com](https://launcher.keychron.com) to open the online Launcher web app.
2. Ensure the keyboard is in Cable or Wired mode and plug in the power cable.
3. Find the 'Firmware Update' tab on the left side of the Launcher and connect your keyboard with it.
4. Follow the instructions on the Launcher and complete the firmware update.

\*Step-by-step guide, search the keyword "firmware" on [keychron.com](https://keychron.com).

### 10 Warranty

The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.



support@keychron.com