

Package Content

 
- 1 x Fantec NOVI F20 Portable Wireless Speaker
- 1 x USB Charging Cable
- 1 x 3.5mm Audio Cable
- 1 x Camping Snap Hook
- 1 x Warranty card
- 1 x User Manual

Specification

Bluetooth Version	V4.1
Standard	HFP,HSP,A2DP,AVRCP,APTX
Product Weight	0.82 oz (368.8 g)
Product Dimension	8.07x2.2x2.56in / 20.5x5.6x 6.5cm(L x W x H)
Play Time	~15 hrs
Charging Time	4 hrs
Operation Range	Up to 10m / 33ft
Speaker Output Power	2x3 W
AUX	3.5mm Audio-in Jack
Power Input	DC 5V
Battery Type	Rechargeable Lion battery (2600mAh)

Product Overview


- ① Call button
- ② Play/Pause button
- ③ Volume + (long press) / Next Track (short press)
- ④ Volume - (long press) / Previous Track (short press)
- ⑤ LED Indicator
- ⑥ Power Switch (ON/OFF)
- ⑦ Line in
- ⑧ Line out
- ⑨ USB Charging Port
- ⑩ Mic

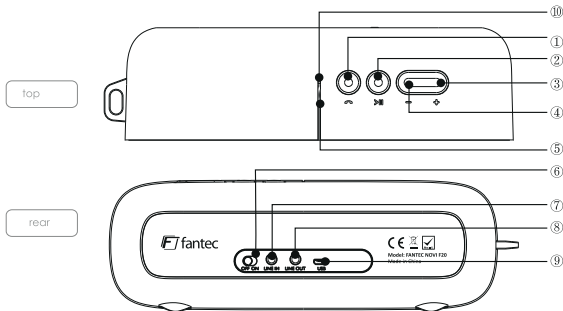

Charging


The battery of the speaker is partially charged at the factory. Please make sure that you fully charge it before using it for the first time.

 To charge the unit, simply connect the speaker to any active USB port or adapter using the USB charging cable. The speaker can be fully charged in around 4 hours. When fully charged, the red LED will turn off.



- * If the battery is running low, there will be a voice prompt every 20 seconds, then the speaker turns off automatically, please recharge the battery according to the instructions above.

 Note: The speaker will automatically enter into pairing mode with blue and red LED flashing alternately when charging even if you slide the power switch to "OFF". This is normal. The LED indicator will turn to solid red within 10 minutes.

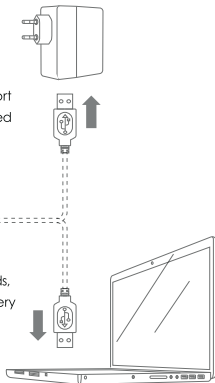

Pairing (for mobile phones, tablets, computer)

1. Bring the NOVI F20 Wireless Portable speaker to within 1m (3ft) of your device.
2. Turn the power switch to "ON", then you will hear a crisp sound and the speaker will automatically go into pairing mode with the blue and red LED lights flashing alternately.
3. Bring your device into pairing mode and search for the speaker.
4. Once the speaker has been located by your device you should see "NOVI F20", simply select the device name to connect.
5. When devices are successfully paired, you will hear a short beep, then the Blue LED light will flashing slowly. On some devices, you might have to select "Use as Audio Device (stereo)" or similar on the device's audio menu.

Note:

1. If pairing is not completed within 3 minutes, please turn off the speaker and try again.
2. When bringing the device last connected into pairing mode, the speaker will automatically connect to it.
3. If using with computer, please make sure you have downloaded the latest bluetooth driver for your operating system.

4. Maximum operating range for the NOVI F20 speaker is 33ft (10m). If you move out of range, the speaker will lose connection. You will need to move back to within range and reconnect to your audio device.

Playing Audio via LINE-IN

Turn on the NOVI F20 Wireless Portable speaker and connect it with your PC or notebook via the 3.5mm Line in jack on the speaker by using the 3.5mm audio cable attached.

Note:

1. The connection on your speaker will be disconnected when there is an audio cable attached to Line-in as this mode has higher priority.
2. When playing audio through Line-in, you can adjust the volume of the speaker, but selecting the previous/next track is disabled.
3. For some computers, you may need to visit the audio control panel to manually set the speaker as the default audio device.

Functions Introduction

Turning the speaker on / off

Slide the power switch to the "ON" or "OFF" position to turn the speaker on or off.

Adjust the Volume

Long press the volume +/- button to increase or decrease the volume.

Music Control

Short Press the +/- button to move to next /previous track.

Press the ">||" button once to pause, and press it again to resume.

Answering a call

Press the  button once to answer a call, or answer directly from your phone.

Ending a call

During a call, press the  button once to end the call. You can also end the call directly from your phone.

Rejecting an incoming call

When a call is incoming, hold and press the  button for 2 seconds to reject the incoming call.

LED Indicator Instruction

Status of the speaker	LED Indicator
Pairing mode	The Blue and Red LED lights flash alternately
Connected to a device	The Blue LED flashes slowly
Charging	Solid red LED
Fully charged	Red LED turns off

FAQ and Trouble Shooting

Q: Why isn't my speaker pairing with my bluetooth device?

A: Please make sure that your NOVI F20 speaker is powered on and in pairing mode (blue and red light flashes alternately). Also, make sure to bring your bluetooth into pairing mode.

Q: Why can't my speaker play audio via LINE-IN?

A: Please make sure you plug the Line in jack on the speaker and try connecting and disconnecting the 3.5mm audio cable a few times. Make sure the speaker is turned on. Sometimes, computer system may not recognize the device at first. For some computers, you may need to visit the audio control panel to manually set the speaker as the default audio device.

Q: Can I use the speaker while it is charging?

A: Yes, definitely! But in order to ensure the long-term performance of the battery, we recommend that you try to avoid using the speaker while charging.

Q: The music sometimes cuts off while playing.

A: The operation range of the speaker may be influenced by obstructions, such as walls, pillars, etc. To ensure a stable connection, we recommend avoiding such obstructions whenever possible and/or shortening the distance during use.

Q: I turn on the speaker, but I cannot see any LED lights coming on?

A: Please make sure that the unit is charged. If it is fully charged and still nothing happens or if you are not able to charge the unit, please contact our customer support for warranty cover.

Warranty and Support

Customer Support

If you need any assistance or support, please email service@fantec.de with details. We will do our best to provide you with a viable solution.

Warranty

We warrant this device for 18 MONTHS from date of the original purchase for manufacturer defects. If the device fails due to a manufacturing defect, please contact seller directly to initiate return and warranty process.

Please do not return the product without seller's copy of invoice for authorization.

Statement

We can only provide after sales service for products purchased directly from Fantec or Fantec authorized distributor. If you have purchased from a different seller, please contact them for any exchange or request.