 


Quick reference guide

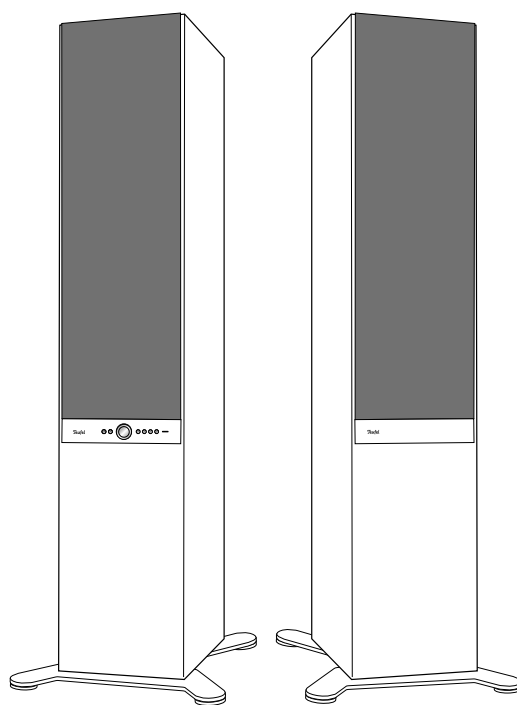

Teufel Stereo L

POWERED BY  RAUMFELD



For detailed online documentation,
please visit
<http://manual.teufelaudio.com>

Teufel

Contents

General Notes and Information	2	Getting Started	7
Unpacking	3	Operation	8
Preparations	6	Troubleshooting	10
Setup	6	Declaration Of Conformity	11

General Notes and Information

Proper use

The speakers are designed for the playback of music and speech transmitted via cable or wirelessly.

Only use the speakers as described in this quick reference guide and the online documentation. Any other use will be deemed as not in accordance with the instructions and may lead to damage of property or even persons.

The manufacturer accepts no liability for damage caused by improper use.

The speakers are intended for domestic use.

Safety notes

The enclosed brochure “Important product information” contains general safety notes which you should always observe to protect yourself and third parties. Also be sure to observe any warning notes contained in this quick reference guide.

 
 
 
 


Before operating the product, please first read the safety notes, this quick reference guide and the online documentation carefully. Only in this way, can you ensure that all functions are used in a safe and reliable manner. Keep the enclosed documents in a safe place and also be sure to pass it on to any subsequent owner.

Unpacking

Package contents


- (1) Active speaker
 - (2) Passive speaker
 - (3) Speaker stand (4x)
 - (4) Screw (12x)
 - (5) Speaker cable (5 m)
 - (4) Mains cord
 - (7) Brochure “Important product information”
- Check that all items have been delivered and that nothing is damaged. If you find any damage, do not operate the device; instead contact our customer service department (see back side).
 - Please keep the packaging for the duration of the warranty period.

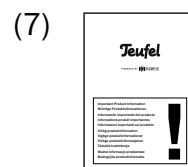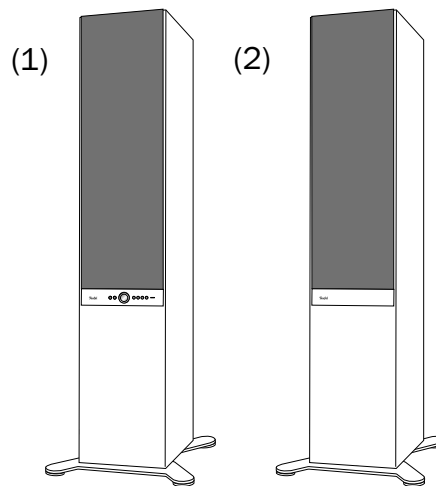

Active speaker


Front side

 - (8) Skip track forward/back.
- (9) Turn: Adjust the volume. Tap: Pause/play. Push and hold: Standby
- (10) Preset buttons
 - Push and hold: save current playback. Tap: play saved music.
- (11) Control button
 - Tap to switch to the input LINE IN (13).
 - Refer to the online documentation for more possibilities to assign the control button:
<http://manual.teufelaudio.com/controlbutton>.
- (12) Control LED

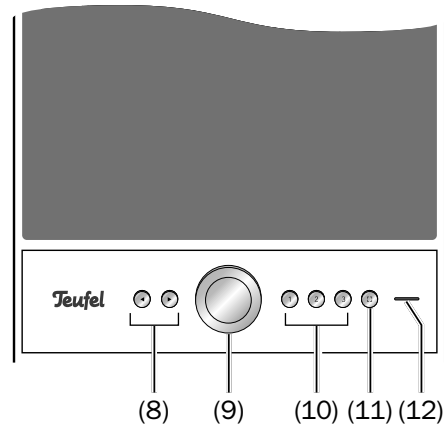


Back side top

 
- (13) RCA audio input for external players via LINE-IN.
- (14) Network connection (LAN)
- (15) Reset button: hold for 8 seconds while the device is on to reset the speaker to the factory default settings.
- (16) USB 2.0 jack: for restoring the firmware and for sharing music *).
- (17) Setup button: push during the setup process once asked to do so.
- (18) Bluetooth pairing button: push briefly to set the speaker to pairing mode.

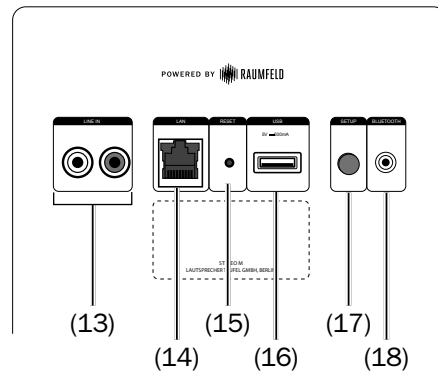

*) Music saved on a USB stick is made available under “My music” if the stick is connected to the USB port of the host device. In the network settings, you can see which device acts as a host in your system.


Back side bottom

 - (19) Speaker cable connector jack to the passive speaker
- (20) Mains connector jack
- (21)  Fuse T 2 A / 250 V
- (22) Main power switch

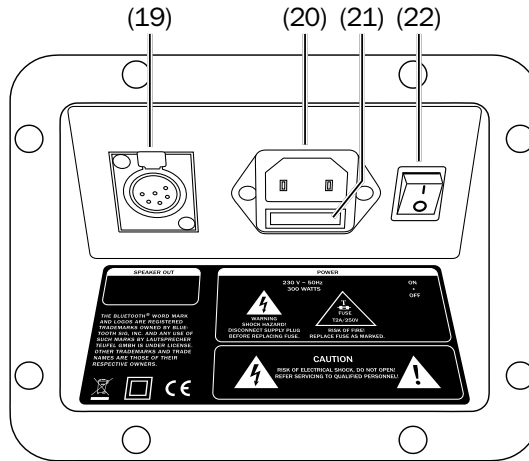

Passive speaker

 - (23) Speaker cable connector jack to the active speaker

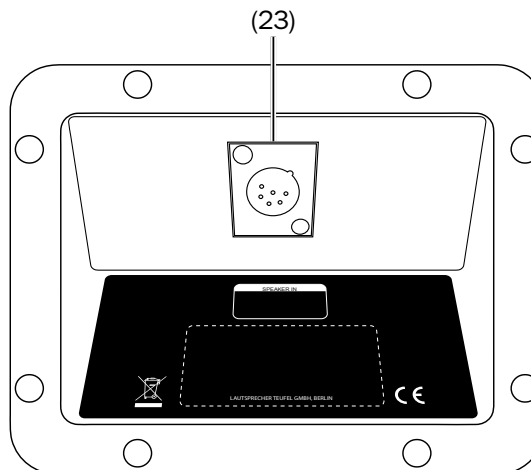

Preparations

 
Wi-Fi recommendations

To be able to integrate Teufel Streaming products with Raumfeld technology in your network and to ensure smooth operation, we recommend an up-to-date, high performance router with a broadband Internet connection.

Make sure that the Wi-Fi router is active, has the latest firmware and is able to access the Internet.

To the extent possible, the router should be positioned in the middle of your home in order to ensure an adequate Wi-Fi signal throughout your home.


Mounting the speaker stands

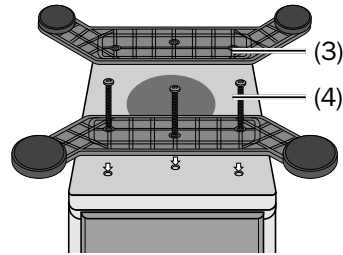

1. Flip the speaker over and place it head first on a blanket or the like to prevent the sensitive surface from being damaged.
2. Screw the speaker stands (3) onto the underside of the speaker housing using the screws (4). Once mounted, turn the speaker over again.

Setup

 - Connect both speakers with the enclosed cable (5).
- Place the speakers in the desired location. You can freely select whether the active speaker is on the left or right.
- Use the mains cord (4) to connect the active speaker to the mains supply. Then set the mains switch (22) on the back side of the device to ON.

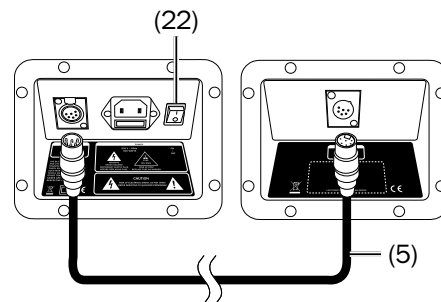

Getting Started

- Make sure that your smartphone or tablet is registered in your home Wi-Fi.
- Have the Wi-Fi password for your router ready.
- Load the TEUFEL RAUMFELD APP from the Play Store/App Store.
- Once you have started the app, the setup wizard will guide you through the setup process.
- You can find more information about setting up your Teufel streaming system at <http://manual.teufelaudio.com/setup>. The tips in chapter „Troubleshooting“ on page 10 should also be helpful.



TEUFEL RAUMFELD APP
IN THE APPLE APP STORE



TEUFEL RAUMFELD APP
IN THE GOOGLE PLAY STORE



Integration of other devices in an existing Teufel streaming system:

- You do not have to set up the entire system again. You can use the app to add new devices (under “Settings”).

Operation

Standby

The Stereo L switches to standby mode after a few minutes of inactivity have elapsed. The timespan leading up to the beginning of the standby mode can be configured in the settings menu within the app. To manually send the device into standby mode, simply hold down the play/pause button (7) for about 2 seconds.

Preset buttons

Your Stereo L have 3 programmable preset buttons (10). They allow you to access your favourite radio station, a playlist or any other music with just the push of a button.

Programming preset buttons

1. Make sure that the Stereo L are operational.
2. Use the Teufel Raumfeld app to play any music on your Stereo L (e.g. a radio station, an album, a playlist or all tracks for an artist).
3. As soon as the music is played back, push a preset button and hold it until you hear a signal tone. The played back music will be saved for this preset button.

Accessing saved content

- Tap the preset button to access saved music with just the push of a button; it will then play back on the Stereo L.

Control button

Various functions can be assigned to the control button (11) using the Teufel Raumfeld app. For a detailed description of the available functions as well as instructions on how to assign functions to buttons visit: <http://manual.teufelaudio.com/controlbutton>.

Spotify Connect

- Use your phone, tablet or computer as a remote control for Spotify. Go to spotify.com/connect to learn how.

Connecting via Bluetooth®

 
You can connect compatible devices such as most smartphones and tablets to your Stereo L via Bluetooth® (pairing). The sound of the smart device is then played by the Stereo L.

1. Turn on the Bluetooth® function on your smart device.
 2. Tap the Bluetooth pairing button (18) on the back side of the speaker. The Bluetooth LED in the button will now blink until pairing is complete (no more than 60 seconds).
 3. Let your smartphone search for Bluetooth® devices (you can find more information in the user manual of your smart device). "Teufel Stereo L" should also appear in the list of devices found after the search run.
 4. Select "Teufel Stereo L" from the list of detected devices. If your smart device requires the entry of a PIN code, enter the PIN code "0000" set by factory default.
 5. Pairing is now complete and the smart device is linked to the Stereo L. The Stereo L will now play back all sounds that would otherwise be played by your smart device.
- To terminate the Bluetooth® connection, switch the Bluetooth® function on your smart device off.

Troubleshooting

The following advice should help you to solve problems. If this does not work, our online documentation will provide help:

<http://manual.teufelaudio.com>

Problem	Possible cause/solution
The control LED (12) is not illuminated.	<p>Make sure that power is supplied. Check to make sure that the mains cord is securely seated. Check whether the mains switch (22) on the back side is switched on.</p> <p>The fuse in the active speaker is defective. To replace the fuse:</p>  <ol style="list-style-type: none"> 1. Remove the mains cord. 2. Carefully pull the fuse holder on the mains connector jack out. 3. Push the old fuse down and out. Insert a new fuse (T 1.25 A / 250 V). 4. Push the holder back.
Setup fails.	<p>Restart your router and your smartphone or tablet.</p> <p>Set up the device near your router and switch any repeaters off for the duration of the setup process. If your router provides guest access, do not use it to connect your Teufel streaming devices.</p> <p>Read the notes in our online documentation at: http://manual.teufelaudio.com/setup.</p>
The app is not connected or fails to locate the configured streaming devices.	<p>Make sure that the Teufel streaming devices and the smart device are operated with the Teufel Raumfeld App on the same Wi-Fi. Restart your router. Briefly disconnect your Teufel streaming devices from the power supply and then start them again.</p> <p>You can find more information in our online documentation: http://manual.teufelaudio.com.</p>

<p>Music playback skips or is interrupted.</p>	<p>It is possible that one or more Teufel device(s) do not have a Wi-Fi signal or it is too weak.</p> <p>Place the devices closer to the router, try alternative setup locations or connect devices, which are set up far away, with an Ethernet cable. In the event of problems with multi-room systems with three or more devices, we recommend connecting at least one of the devices with an Ethernet cable and setting it as the host.</p> <p>As a test, refrain from using repeaters. If applicable, use an audio stream with low resolution.</p> <p>Also visit the website of the router manufacturer for tips on how to improve your Wi-Fi.</p> <p>You can find more information in our online documentation: http://manual.teufelaudio.com.</p>
<p>I would like to reset the device.</p>	<p>Notice: By resetting the device, all system configuration settings will also be reset.</p> <p>Resetting the device: When the device is switched on, use a paper clip that has been bent straight to push the reset button (15) and hold it down until the device restarts (for at least 8 seconds).</p>

Declaration Of Conformity

CE Lautsprecher Teufel GmbH hereby declares that this product complies with the requirements of the directives 2014/30/EU, 2014/35/EU and 2014/53/EU to the extent they are installed and used in accordance with the instructions of the manufacturer. The full text of the EU declaration of conformity is available at the following Internet address:

www.teufelaudio.com/declaration-of-conformity.html

The following radio frequency bands and radio transmitting powers are used in this product:

Radio network	Frequency band in MHz	Max. transmission power in mW/dBm
Bluetooth & BLE	2402–2480	2,5/4
Wi-Fi 2.4 GHz	2412–2472	40/16
Wi-Fi 5 GHz	5180–5320; 5500–5700; 5745–5825	25/14

You can find further technical data about the product on our website.

Teufel

Please contact our customer service department with any questions, suggestions, or complaints:

Lautsprecher Teufel GmbH
BIKINI Berlin
Budapester Str. 44
10787 Berlin (Germany)

Great Britain: +44 33 08 08 04 89

Other countries: 00800 200 300 40

Online support: <http://manual.teufelaudio.com>

Contact form: www.teufelaudio.com/contact

No responsibility is assumed for the correctness of this information.
Technical changes, typographical errors and other errors reserved.

Manual no. 195475_GB_20190920