 


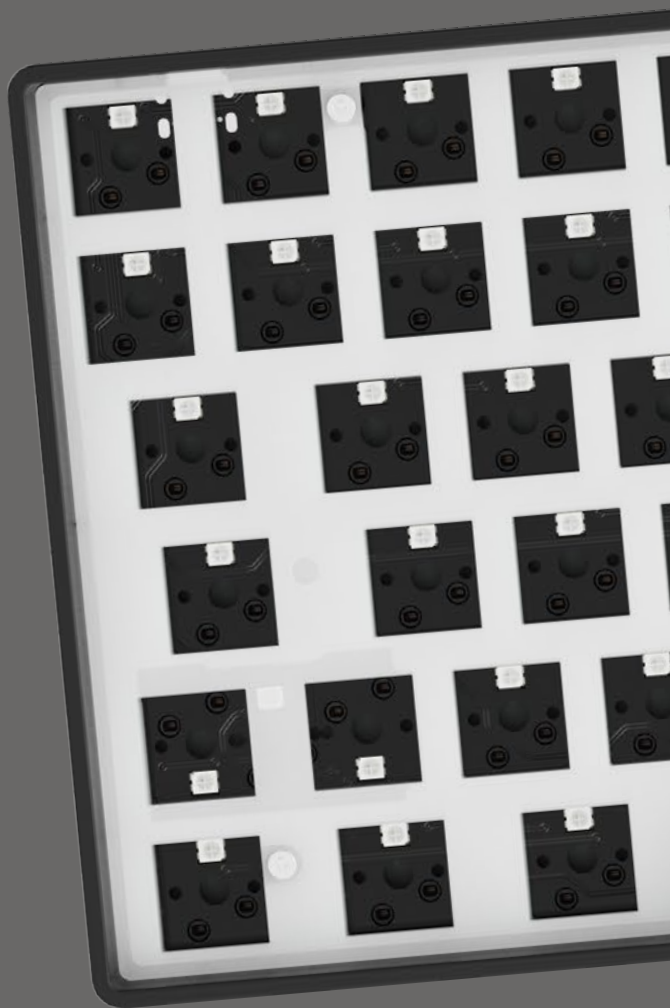

SGK50 S2

BAREBONE

SKILLER



Manual

Specifications

General

■ Type	Gaming Keyboard
■ Number of Keys	101 ISO / 100 ANSI
■ Illumination	RGB
■ Adjustable Illumination	✓
■ Lighting Effect	✓
■ Max. Polling Rate	1,000 Hz
■ Form Factor	96 % Layout
■ Onboard Memory for Game Profiles	✓
■ Capacity of Onboard Memory	256 kB
■ Detachable Cable	✓
■ Weight incl. Cable	675 g
■ Weight without Cable	605 g
■ Dimensions (L x W x H)	368 x 121 x 50 mm
■ Supported Operating Systems	Windows
■ Supported Operating Systems	Windows

Key Properties

■ N-Key Rollover Support	✓
■ On-The-Fly Macro Recording	✓


Cable and Connectors

■ Connector	USB Type-C
■ Textile-Braided Cable	✓
■ Coiled Cable	✓
■ Cable Length	150 cm
■ Gold-Plated USB Plug	✓

Package Contents






■ SKILLER SGK50 S2 Barebone, Keycap Puller Tool, Switch Puller Tool, USB Cable (150 cm)

 Install Switches

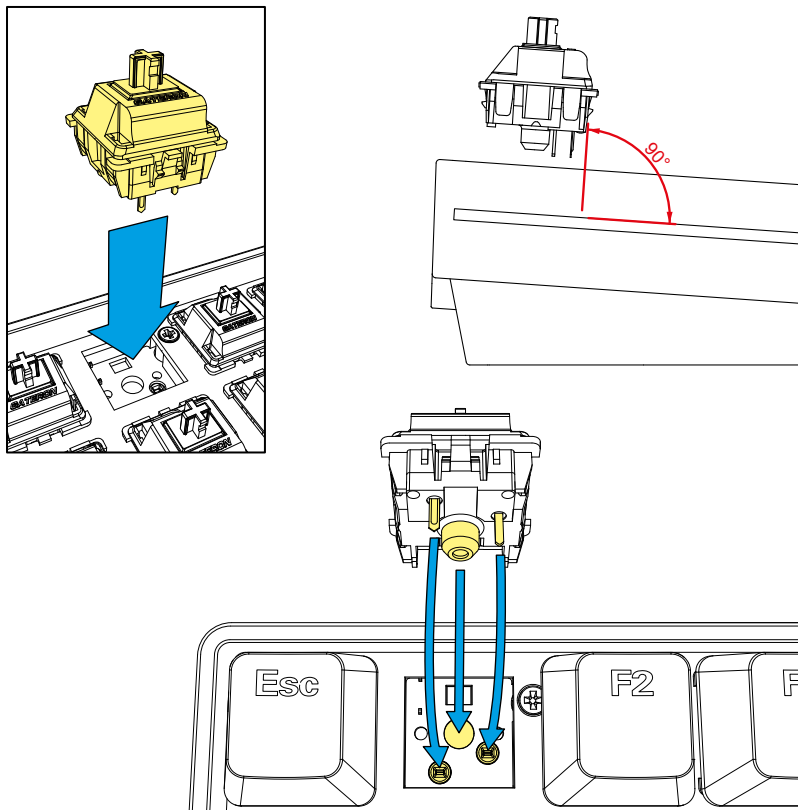


To install the switches, position the switch so that one tab is at the front and the other tab is at the back. Each pin on the underside of the switch should be pointing exactly to its relevant contact in the keyboard socket. Make sure that the switch is led vertically into the socket opening (at a 90-degree angle to the socket). Installing the switch incorrectly can lead to damage or malfunction of the switch. After you have placed the switch in its socket, push very gently on the switch to secure it in place. Make sure that you do not use too much force, as this can damage or destroy fragile components.

     Remove Switches

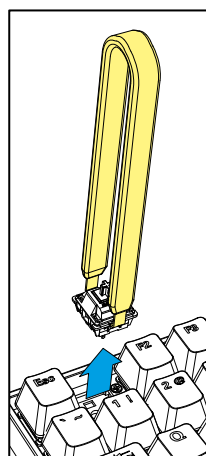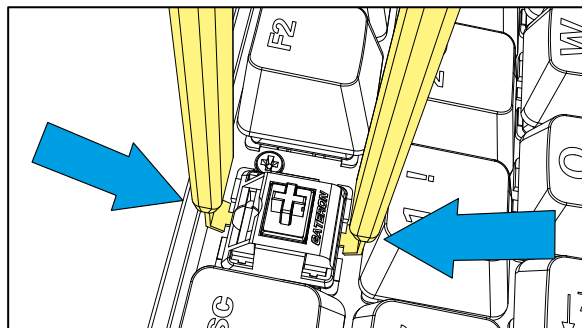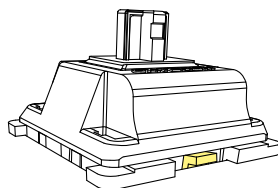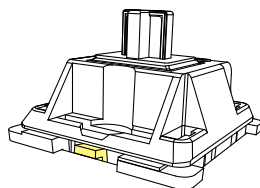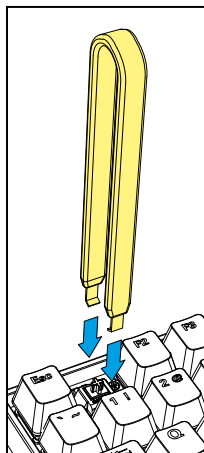




Position the switch puller tool correctly on the tabs of the switch. These are positioned to the front and the back of the switch. Before pulling out the switch, make sure that both tabs are securely pressed with the switch puller tool and that the switch can be removed from the socket without resistance. If necessary, remove the adjacent keycaps to allow the switch puller tool sufficient freedom of movement. Press both tabs of the switch with the switch puller tool and then slowly pull the switch out of the socket. Be sure to always pull vertically from the socket with a straight, upward direction. Avoid pulling in a slanted direction, as this can result in damage.

 Install Keycaps

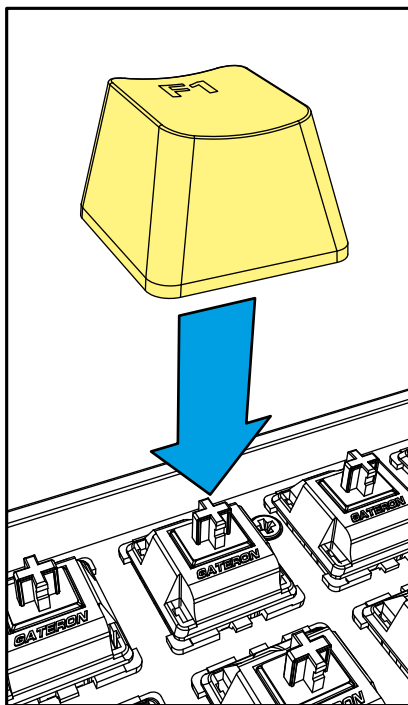


To install a keycap, first place it over the installed switch. Make sure that the keycap's symbol or character is positioned the right way round. Now carefully press the keycap onto the switch until the keycap locks into place. Do not use excessive force, as this can damage the keycap and the switch! After the correct installation, the switch and keycap should behave as when used for normal typing.

   Remove Keycaps

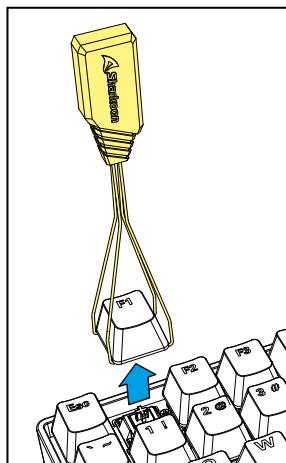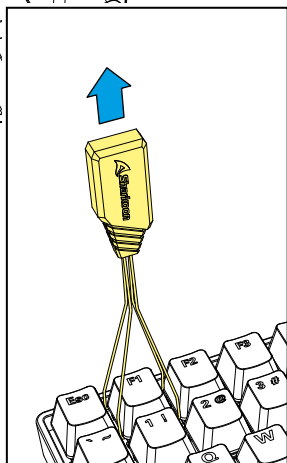
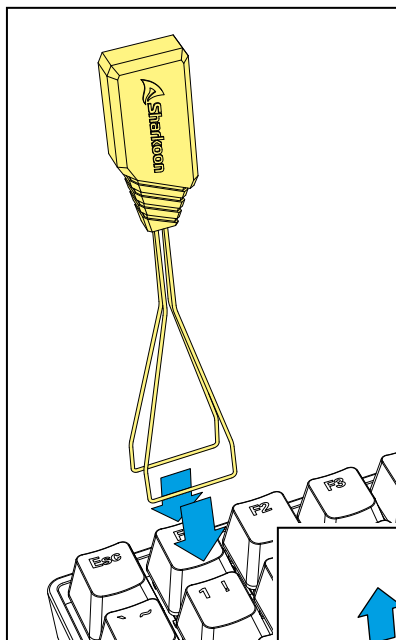


 To remove a keycap, place the arms of the keycap puller tool either to the left and right or to the top and bottom of the keycap, and then pull the keycap upwards with careful but constant pressure. Whenever possible, avoid pulling the keycaps from the switch directly with your fingers, as this may damage the switch.

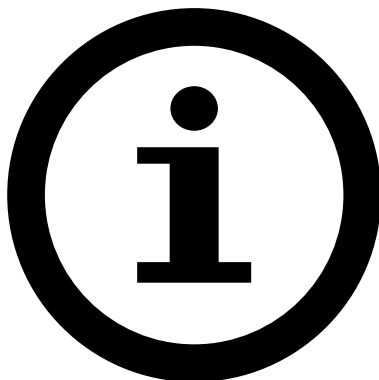


If VIA configuration is not possible through the website at <https://usevia.app/>, please then use the alternative website at <https://via.evove.top/>.

  
Macro Keys

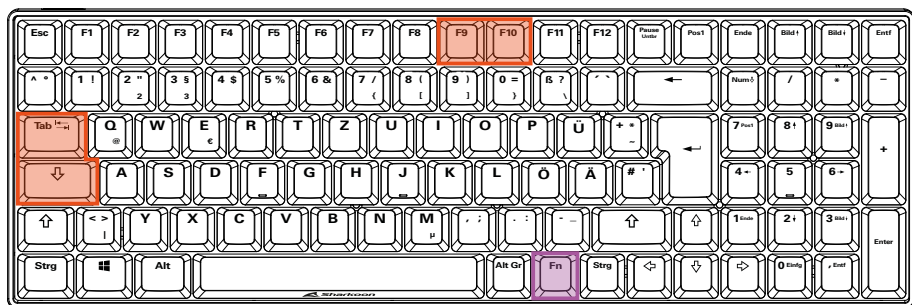


Macro

 


Start Recording

 

Stop Recording

 

Macro Key 1


 


Macro Key 2


Record Macros

To record macros, first press and hold down the function key and then press the tab key. Once you have done this, the macro keys F9–F10 will start flashing. Press and hold down the function key and press one of these two macro keys to select it for macro recording. In the next step, first press and hold down the function key and then press Caps Lock key. The macro key you selected will now start to light up continuously. You can now start entering your macro actions. You can enter up to 16 individual actions. When you have reached the maximum number of actions, the selected macro key starts to flash and the recording is automatically ended. However, if you would like to end the recording before all 16 available macro actions have been entered, first press and hold down the function key and then press the Caps Lock key to end the recording.

  
Lighting Effects

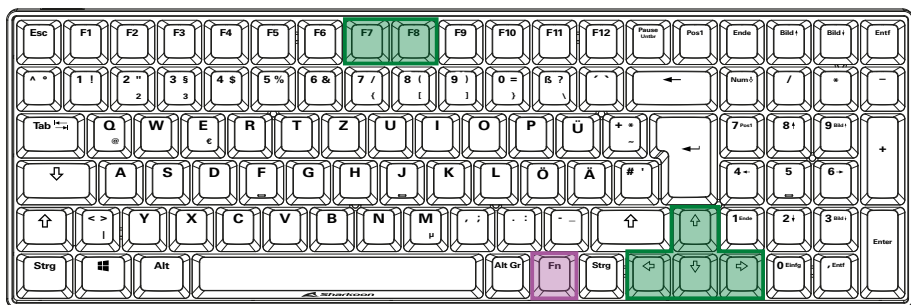


Brightness +

 


Brightness -

 


Change Lighting Effect

 

Change Color of Lighting Effect


 


Frequency -

 

Frequency +

  
Additional Functions

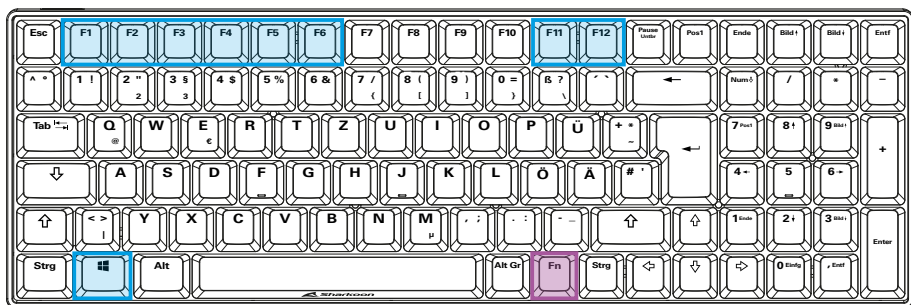

Play/Pause



 
Previous Track



Next Track



 
Mute



Volume –



 
Volume +



Print Scr



 
Scroll Lock



Windows Key Locked



 Choose ISO or ANSI Positioning Plate

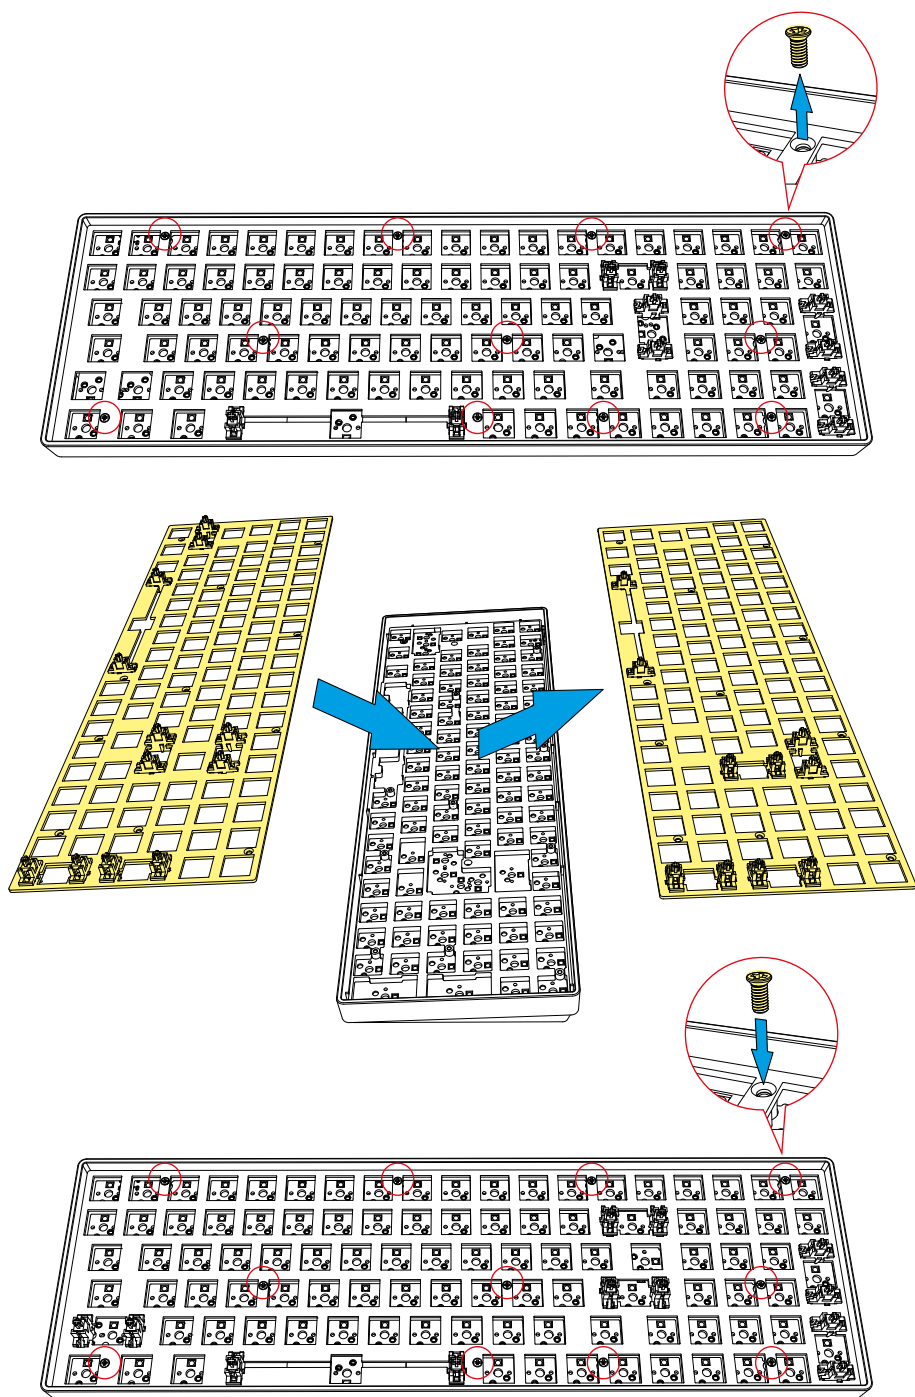

Legal Disclaimer

For potential loss of data, especially due to inappropriate handling, Sharkoon assumes no liability.

All named products and descriptions are trademarks and/or registered trademarks of the respective manufacturers and are accepted as protected.

As a continuing policy of product improvement at Sharkoon, the design and specifications are subject to change without prior notice. National product specifications may vary.

All rights reserved especially (also in extracts) for translation, reprinting, reproduction by copying or other technical means. Infringements will lead to compensation. All rights reserved especially in case of assignation of patent or utility patent. Means of delivery and technical modifications reserved.

Disposal of your old products

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2012/19/EU.

Please be informed about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences to the environment and human health.

Follow us on social media!



Facebook



Instagram



YouTube



TikTok



X

Sharkoon Technologies GmbH

Grüniger Weg 48

35415 Pohlheim

Germany

© **Sharkoon Technologies 2024**



D39507
RoHS

