


CCC-FC-400X

【operating manual】

A Package details


 x14	 x8	 x8
 x2	 x3	
Main board screw	The power screw	HDD screws
Hard disk slidaway screws	Copper pillar	

B Schematic diagram of wire interface

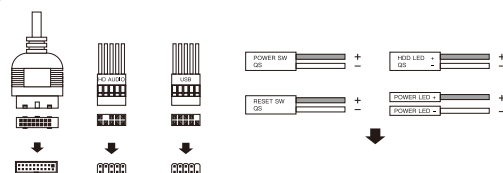


Please refer to the manual that came with your motherboard for any specific connection instructions


C Product size

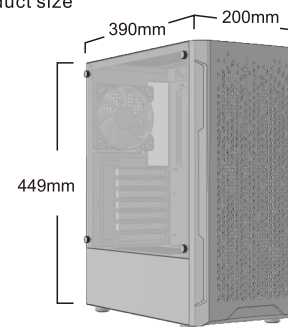


D IO panel introduction

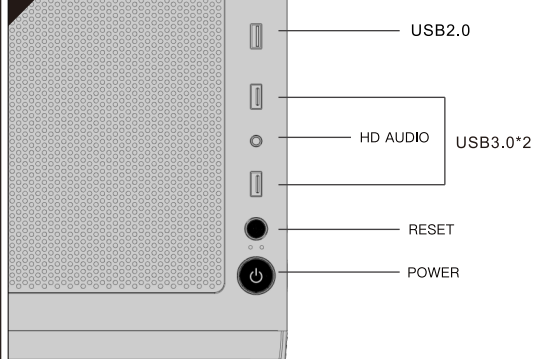


E Machine overview

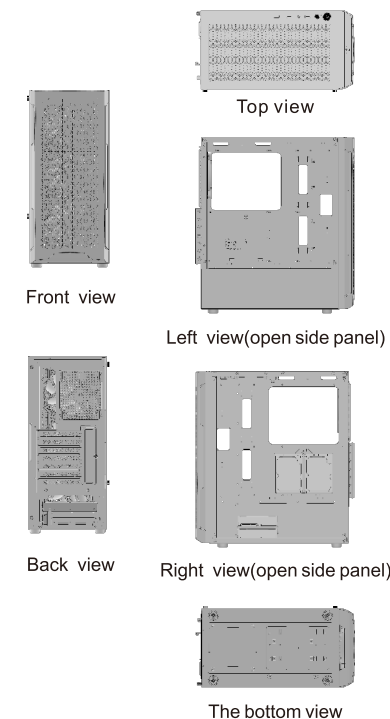

F Chassis disassembly diagram

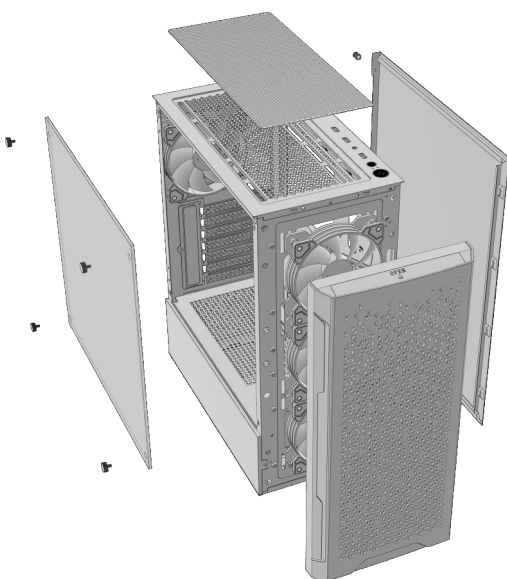


G Remove and install glass side panels

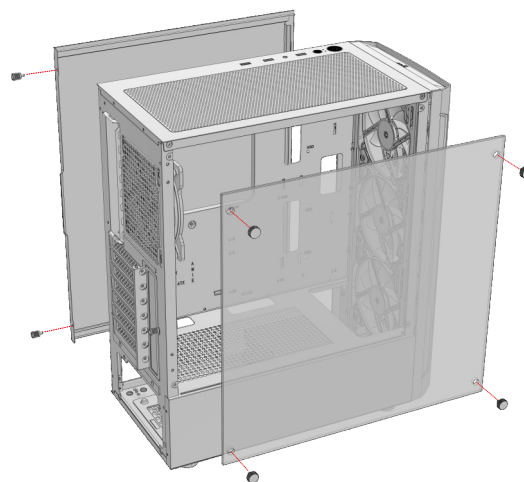

Glass side panel installation: fix the glass side panel with 4 screws (as shown above)


Metal side plate installation: buckle the side plate and fix it with two screws

H The power supply installation

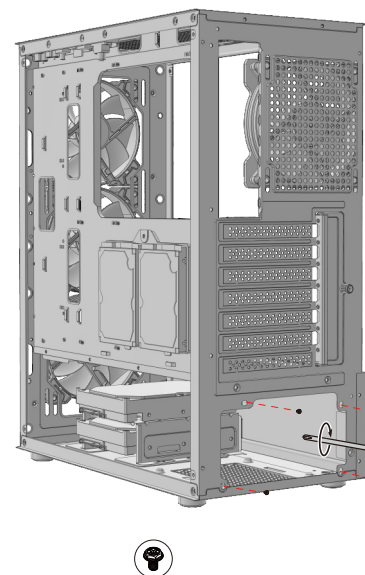


The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different, take the actual object as the standard.

I Motherboard installation

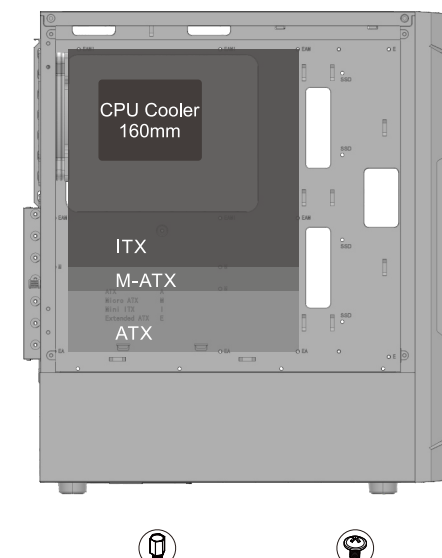


According to the motherboard type (ATX/M-ATX/ITX), the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Height limit: 160mm

J

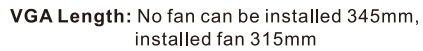


K

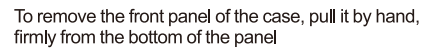

L



 11

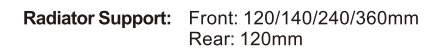

N



First fix the hole position with the hard disk cushioning pad, then fix it with SSD screws .

C



- 1 Remove the hard disk rack and secure the hard disk with screws.
- 2 Lock the two slide rail screws on the left side of the HDD, slide them into the hard disk rack, and secure the right side of the hard disk with screws.

F



5



The auxiliary fan is connected in series and finally connected to the male head of the main fan.

* Change LED lights via Reset button from Case and Motherboard