

## Table of Content

Table of Content .....	1
Safety Precautions .....	2
Conformity .....	5
Listening Cautions .....	6
Support.....	7
Appropriate use .....	7
Cleaning .....	7
Feature Summary.....	8
Accessories .....	8
Buttons & Ports .....	9
Using the keyboard .....	11
Charging Battery .....	13
Installing Memory Card.....	14
Transferring Files.....	15
Turning On/Off.....	15
Screen Lock .....	15
Using the Screen.....	16
Customize Home Screen .....	20
Bluetooth Connection .....	21
Access Internet - Wifi .....	22
Using the Web Browser.....	24
Sending/Receiving E-Mails .....	26
Photo Playback .....	28
Camera usage .....	30
One Drive - File Explorer .....	31
Windows Desktop.....	32
System Settings .....	33
Troubleshooting .....	34
Specifications .....	36
Warranty Conditions .....	38

## Safety Precautions

- Do not subject the device to severe impact or drop it from heights.
- Do not use the device in extreme hot or cold, dusty or damp conditions. Do not expose it to direct sunlight.
- Avoid using the device near strong magnetic fields.
- Keep the device away from water and other liquids. In the event that water or other liquids enter the device, power off the product immediately and clean the device.
- Do not use chemicals to clean the device in order to avoid corrosion. Clean it with a dry cloth.
- We are not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
- Do not attempt to disassemble, repair or modify the product. This will invalidate the warranty.
- If the device will not be used for an extended period of time, please charge the battery at least once per month to maintain battery life.
- Charge the battery if:
  - a) The battery level icon displays □ (An empty battery)
  - b) The device powers off automatically when restarted.
  - c) There is no response when pressing keys with keys unlocked and battery full.
- When the device is being formatted or transferring a file, do not interrupt the connection. Otherwise, data may be corrupted or lost.
- When the device is used as a portable HD, please use only per the instructions. Otherwise, permanent data loss could occur.
- Please use and install data using the attachments/accessories provided and only according to the manufacturer's instruction.
- Please refer to the information on the bottom of the device for electrical and safety information before installing data or operating the device.
- To reduce the risk of fire or electric shock, do not expose this device to rain or moisture. The device should not be exposed to dripping or splashing. Never place objects filled with liquids, such as vases, on the device.
- There is danger of explosion if the battery is replaced incorrectly.

Replace only with the same or equivalent type.

- The battery (battery or batteries or battery pack) should not be exposed to excessive heat such as sunlight, fire or the like.
- Please follow responsible procedures for battery disposal.
- If the power adaptor is disconnected from the device, the device will remain operable as long as the battery has sufficient charge.
- The power adaptor is a CLASS II apparatus with double insulation, and no external ground is provided.
- Safety symbol explanation:



- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- To reduce the risk of electric shock, do not remove the cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the device.
- Do not leave the device on in a confined space such as a book case or similar. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains, etc.
- No open flames, such as lighted candles, should be placed on the device.
- Use the device in moderate climates.
- Never disconnect the USB cable from your e-book reader to the PC during a data transfer or formatting. Correctly disconnect the device from the operating system. Information loss and malfunctions can occur.



### Note

Please only charge the battery while the device is turned off. The charging time will be shorter and the lifetime of the battery will be enlarged. Please fully charge the battery before first use.



### Note

Please note that the internal battery can only be replaced by qualified personnel.

If necessary please contact to the ODYS customer service at [www.odys.de](http://www.odys.de).



### Disposal

Correct disposal of this product. This marking indicates that this product should not be disposed of with other household waste in the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To dispose of your used device, please use the return and collection systems available in your area or contact the retailer where the product was purchased. They can take this product for safe environmental recycling.

## Conformity



We, Axdia International GmbH, hereby declare that this Windows device corresponds to the basic requirements and relevant regulations outlined in guideline 1999/5/EG, 2004/18/EC, 2006/96/EC.

The CE declaration of conformity for this product may be found on the following link:

[www.odys.de](http://www.odys.de) – Service – Downloads

([http://www.odys.de/web/downloads\\_de.html](http://www.odys.de/web/downloads_de.html))

This device uses a non-harmonized frequency and is suitable for operation in the following European countries:

Germany, Belgium, Netherlands, Luxembourg, Austria, Switzerland, France, Spain, Portugal, Italy, Greece, Norway, Sweden, Finland, Denmark, Liechtenstein

Within the European Union, operation of the WLAN/Bluetooth function in buildings is not restricted. Operation outside of buildings is restricted.

## Listening Cautions



### Hearing Safety

Listen at a moderate volume: Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss. Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there. To establish a safe volume level: Set your volume control at a low setting. Slowly increase the sound until you can hear it comfortably and clearly, without distortion. Listen for reasonable periods of time: prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss. Be sure to use your equipment reasonably and take appropriate breaks. Be sure to observe the following guidelines when using your headphones. Listen at reasonable volumes for reasonable periods of time. Be careful not to adjust the volume as your hearing adapts. Do not turn up the volume so high that you can't hear what's around you. You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

## Support

<http://www.odys.de>

[support@odys.de](mailto:support@odys.de)

On our website you will find the latest information about this product, other products of our enterprise, our company itself and valid warranty terms. The latter you will find under Service - Downloads. Firmware upgrades for this device are also offered on our website. For questions or problems read our FAQs on our website or contact our after sales service.

## Manufacturer

Axdia International GmbH

Formerweg 9

D-47877 Willich (Germany)

Tel: +49(0) 2154 / 8826-0

Fax: +49(0) 2154 / 8826-100

Web: [www.odys.de](http://www.odys.de)

**Support-Hotline: +49 (0)2154 / 8826-101**

**E-Mail:** [info@axdia.de](mailto:info@axdia.de)

## Appropriate use

Device is designed for playing music and video files in commonly used formats, showing photos and access internet functions using the build in Wi-Fi function. It is exclusively meant for this purpose and must only be used for the same.

This also includes paying attention to all information contained in this operating manual, especially in the safety instructions. Any other usage is considered to be improper and may lead to material damages and even personal injuries. Moreover it will result in the immediate loss of guarantee. The manufacturer does not bear any liability for damages caused due to improper use.

**This manual may not reflect your actual device's operation. All information is subject to change without prior notification. Please follow your actual device's operational procedures.**

## Cleaning

- Please only clean the device using a cloth.
- Please don't use any chemicals or solvents.

## Feature Summary

### Wi-Fi Connectivity

With the latest Wi-Fi technology, this device can connect you to the Internet wherever you are.

### Third-party Application Support

With the built-in Windows<sup>TM</sup> OS, you can install a large number of third-party applications in this device. **Please note that you need to insert a Micro SD-Card for it.**


### Entertainment

You can enjoy music, movies, pictures and e-books with the Netbook.

## Accessories

- Power Adaptor
- Quick start


# Buttons & Ports

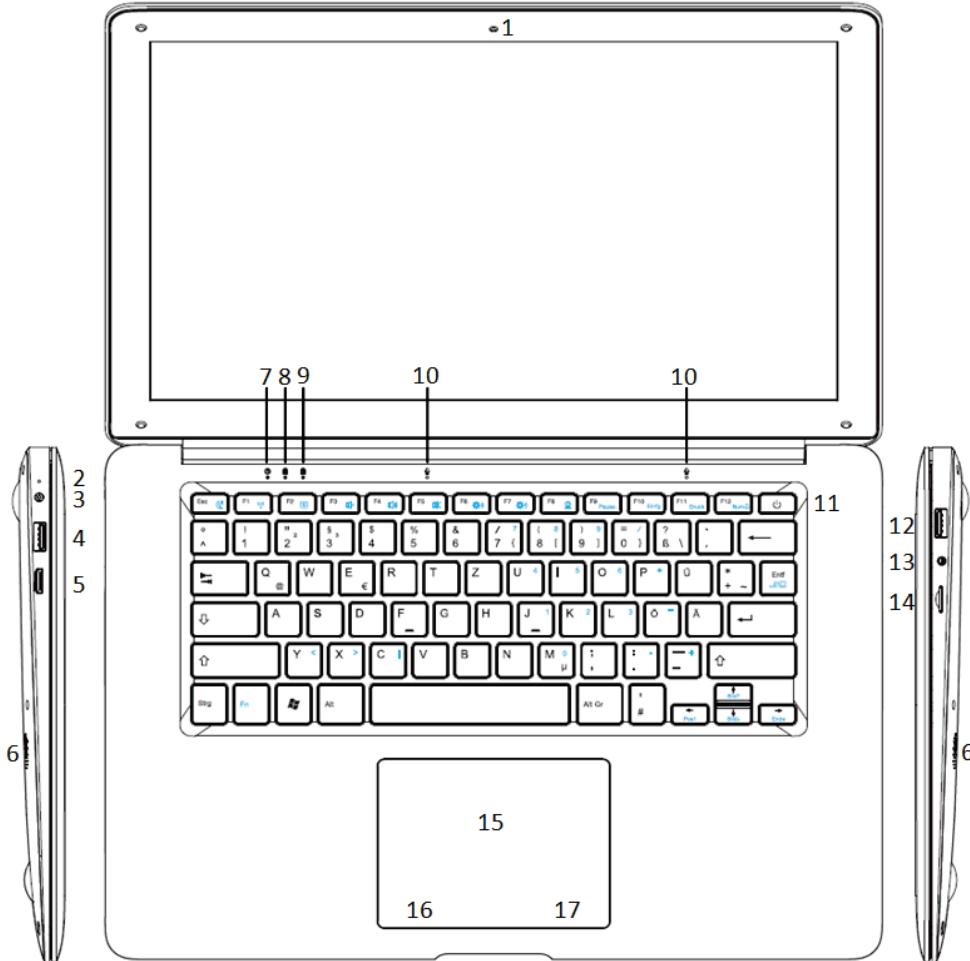

- 1. Front Camera** Front-facing camera for taking avatar pictures
- 2. Indicator** Stays red if connected to power
- 3. Power jack** Charge and power the device with the included power adapter.
- 4. USB 3.0** Support for USB stick or Surf stick
- 5. Mini HDMI** Connect to a TV or other display.
- 6. Speaker**
- 7. Status Indicator** Stays green when turned on.
- 8. Caps Lock** Indicates enabled capital letters

<b>9. Num Lock</b>	Indicates if the Numeric keypad is enabled
<b>10. Microphone</b>	
<b>11. Power Button</b>	Press and hold the power switch to turn on or off the device; Briefly press the switch to turn the screen on or off.
<b>12. USB 2.0</b>	Support for USB stick or Surf stick
<b>13. Headphone jack</b>	Audio output connection for head-phones <b>Note:</b> Speaker output is automatically disabled when headphones are connected to the player.
<b>14. Micro SD Card Slot</b>	Accommodates any micro SD/SDHC memory card.
<b>15. Touchpad</b>	
<b>16. Left Mouse Key</b>	
<b>17. Right Mouse Key</b>	

# Using the keyboard

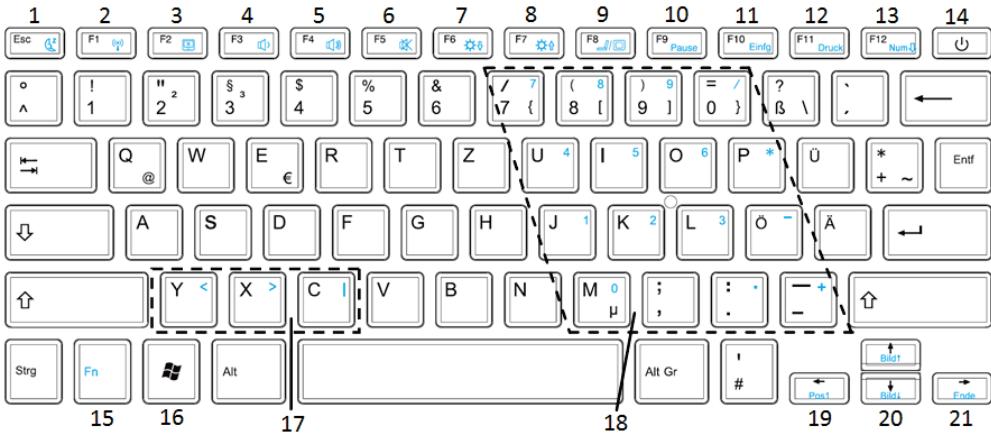

## Note:

When the device overlaps on the keyboard, the display will be turned off; as soon as it is erect, the display will be turned on again.

## Keyboard parts

**Note:** Some keys have several different assignments!

Important key combinations can be found at the chart below.

(1)	Fn + Esc: Turn screen off/on		(12)	Fn + F11: Print
(2)	Fn + F1: Activate airplane mode		(13)	Fn + F12: To activate the NumLock.
(3)	Fn + F2: Lock/unlock touchpad		(14)	On/Off Key
(4)	Fn + F3: Decrease the volume		(15)	Fn Function key
(5)	Fn + F4: Increase the volume		(16)	Windows Key
(6)	Fn + F5: Mute		(17)	Fn + y to input < Fn + x to input > Fn + c to input
(7)	Fn + F6: Decrease the brightness		(18)	Numeric keypad when active
(8)	Fn + F7: Increase the brightness		(19)	Fn + ←: Move to the top of the page
(9)	Fn + F8: Toggle screen		(20)	Fn + ↑: Page up Fn + ↓: Page down
(10)	Fn + F9: Pause		(21)	Fn + →: Move to the end of the page
(11)	Fn + F10: Insert			

## Charging Battery

The device has a built-in rechargeable battery. No extra battery installation is required. Just charge the device when it indicates low battery.


**To charge the battery**, connect the device to any standard wall outlet using the power adaptor. It takes about 5 hours to fully charge the battery.

### **Note:**

- a. We advice to use only the delivered power adapter with this netbook.
- b. You can operate the device even when it is being charged. But for extended battery life, it is suggested NOT to use the device when it is charging.
- c. It is recommended to charge the battery before you use the device for the first time.
- d. For maximum performance, lithium-ion batteries need to be used often. If you don't use the device often, be sure to recharge the battery at least once per month.
- e. Should the rechargeable battery of the device discharge completely, connect the device to the main power source for approximately 5-10 minutes before attempting normal operation.
- f. In some cases devices, which have been charged for longer periods of time, may not be able to be switched back on. Should this occur, reset the device.

## Installing Memory Card

- To use a memory card, find the card slot at the side of the device and then insert the memory card into the slot in the correct orientation as shown. Check that the Micro SD card is in the correct position with the contact pin facing downwards directed to the screen as illustrated. You may damage the card and the reader if Micro SD card is not inserted in correct position.
- Push the Micro SD card into the card slot until it clicks.
- To access the files stored in the memory card, enter the Explorer mode by clicking the Explorer icon and select the “SD Card” directory.
- To remove Micro SD card, push the card once again until it clicks.

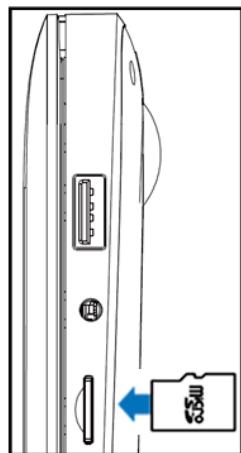

**Note:** We recommend using only Micro SD or SDHC cards up to 128GB capacity.

- When a Micro SD card is inserted in or ejected from the device, it may take few seconds for the device to update the content.
- Please avoid inserting or ejecting Micro SD card when other operation is running as this may cause the system hang.
- Do NOT remove the card if the content inside the card is being played. This will halt the operation of the device and might cause a system hang.
- Please use your fingernails to properly insert or remove the card.

## Transferring Files

Before reading or playing back the files, these must be transferred from the Internet or from a computer to the device. To do this, use a Micro SD card or USB memory as usual.

### **Please note:**

*A direct USB connection with another PC is unfortunately not possible.*

## Turning On/Off

**To turn on the device**, press and hold the **Power** button on the unit until you see the boot-up screen then release. It may take a few minutes to start up the system, please wait before you proceed.

**To turn off the device**, press and hold the **[Power]** button until you see the turn off picture. Drag down the picture as indicated.

**Tip:** This device will sleep with the screen off if it stays inactive for a few seconds. You can briefly press the **Power** button to turn on the screen and wake it up.

## Screen Lock

After the system start-up, the start screen appears.

The individual icons provide quick access to the applications that you use most. The display can be adapted to suit your needs.

Examples are including Internet Explorer or applications for e-mail, photos and contacts.

### **Caution!**

This view may vary and could show different or less elements at your device.

# Using the Screen

Once started, the initial display will be displayed. Each tile offers quick access to the most commonly used applications.

## Elements of the initial display

### Start Menu



### Tiles



### To Power OFF





### List of Programs



### Start Menu

Click the menu symbol, it will open the Start Menu.

Here you will find user information, documents last used and a link to the system's file explorer and system settings.

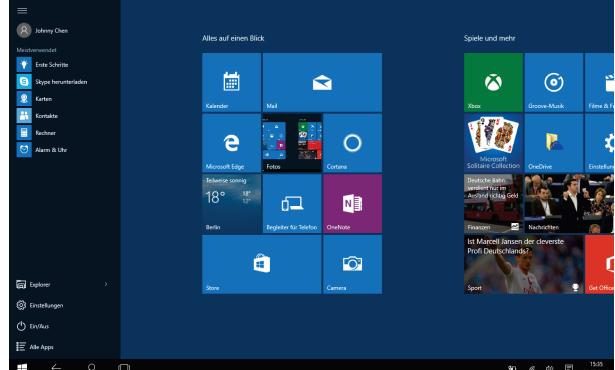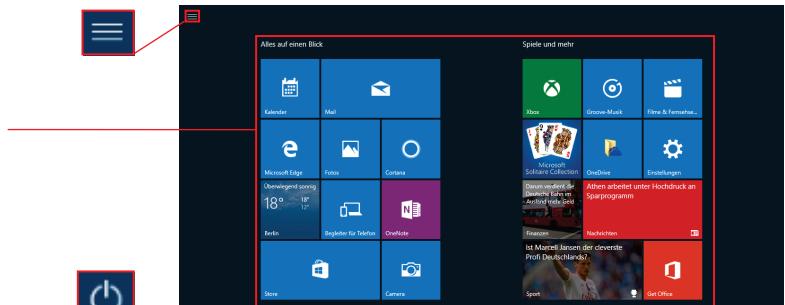


### Tiles

Each tile offers a quick link to its respective application. The order in which each tile is displayed may be altered to suite your specific needs.

### List of Programs

Click this tile to show a list of all installed programs.

The list will be displayed on the left edge of the display in alphabetical order.

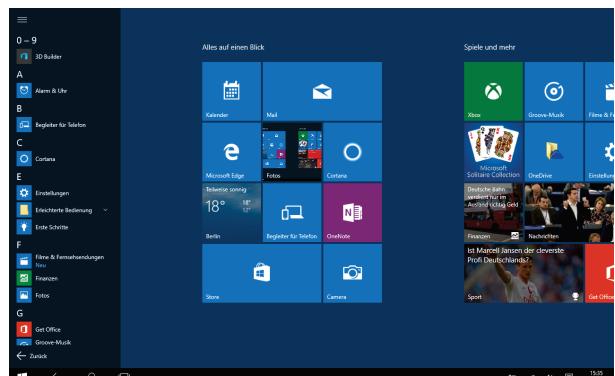


## Elements of the Task Bar


### Search

Search for device settings or installed apps. Search certain terms on the internet c

**Windows Key**  
to return to the initial display.

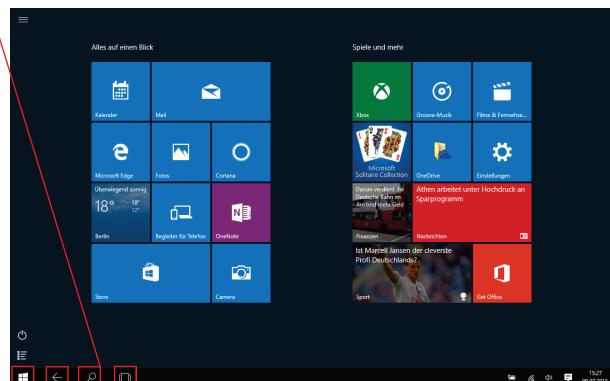

Click this symbol to display all opened applications next to another or to display the active application in the foreground.  
**NOTICE:** This function is only available when at least one application is running.

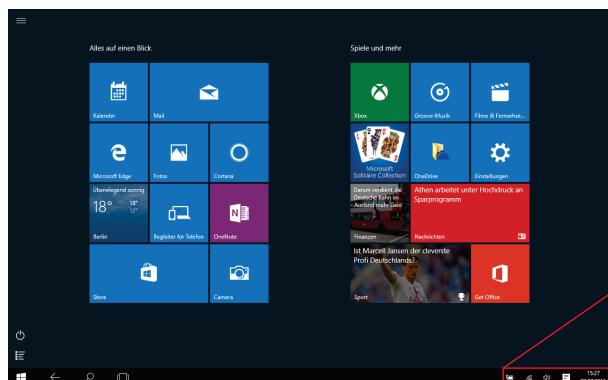

Important settings or background applications may be found here.



Battery Status and Settings



Wireless Network Settings



Volume Settings




Open the Function Bar (See below)

## Function Bar



Clicking the appropriate icon on the Taskbar to open the function bar like this. Here you may find important information and settings.

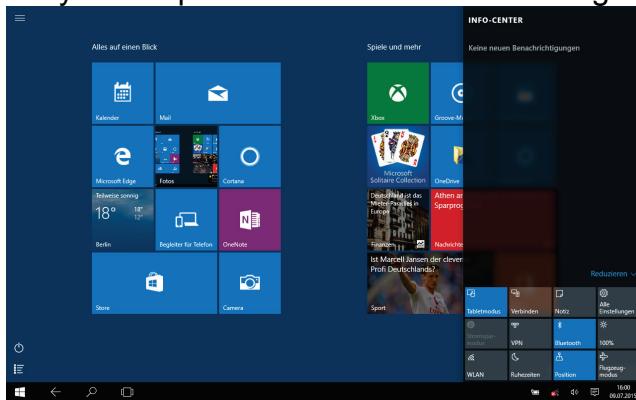

## Elements of the Function Bar

	To switch between the tablet mode with tiles and the PC mode with desktop.		Activate or deactivate the Bluetooth function
	Establish Bluetooth connections with other devices		Display brightness setting
	Open the notes program „One Note“		Activate or deactivate WiFi Functions
	To enter the System Settings		Activate predefined idle periods
	Activate or deactivate energy savings mode		Turn position identification on or off
	Establish or manage VPN Connections		Activate the Airplane mode. <b>Attention!</b> All wireless connections will be disabled.

## **Display all Applications**

The device supports most of popular third-party applications. It has many useful pre-installed applications such as music player, video player, photo viewer, alarm clock, calculator, etc. Furthermore, you can add more applications to the device by installing them manually. To display a list of all installed applications, refer to the above instructions.

**Note:** You cannot uninstall the pre-installed applications.

*Some of the applications developed for Windows mobile might not run properly on the device. Please consult the respective software developer for further information or support.*

**Note:** Installed on this unit are various third-party applications (Apps), whose author is not Axdia International. All rights and obligations remain the sole responsibility of the author of these applications.

Axdia accepts no liability for any malfunction of third-party apps. For support or license inquiries please contact the respective owners directly.

*Contact information may usually be found within the application.*


**Caution!** Please note that the installation of third-party application occurs on your own risk! Any up normal behavior or damage that is caused by installing third-party applications will not be an integral part of the warranty

# Customize Home Screen

## Change existing view

To move an icon on the home screen , click on it and hold it down.

Move the icon like this to the desired location.

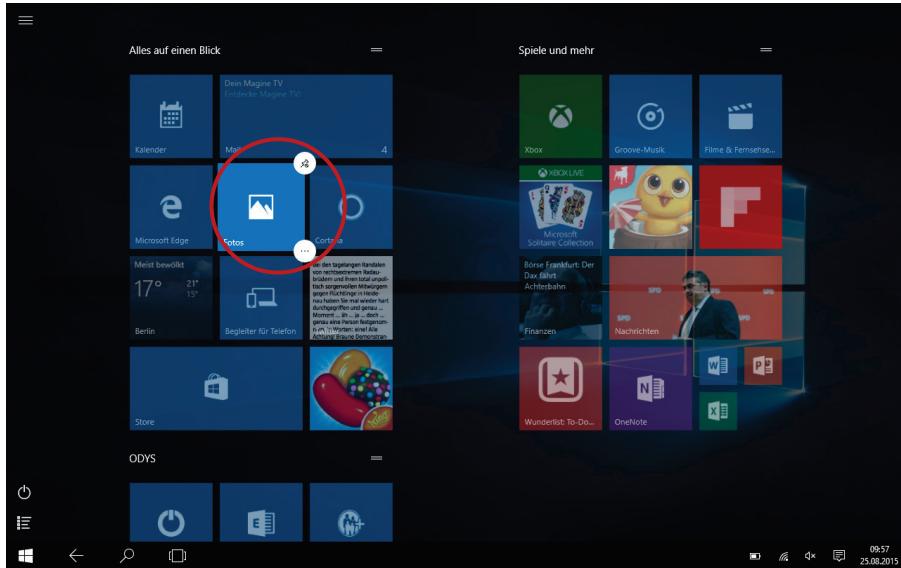

- Click right on an icon on the home screen and then release to work on it.  
The selected application will be marked and two symbols will appear in the corners.
- Click the above menu to pin the selected application to the task bar.
- Click the menu to display further functions
- Press and hold the tile of an application to move it to another location

## Place programme icons on the home page

Open the list of program as defined above.

Click right on a programme and then release to work on it.

## Bluetooth Connection

Your device is equipped with an integrated Bluetooth technology to enable your device be connected with other Bluetooth devices such as tablets, mobile phones, headsets or Bluetooth keyboards.

### Pair other devices

- (1) Open the function bar.
- (2) Click at the icon  and then on "**Devices**" .
- (3) Now click on "**Bluetooth**" in the list on the left.
- (4) Slide the switch to the right to turn on the Bluetooth feature.  
"Bluetooth ON" is displayed.
- (5) Select the device you want to pair with from the list.
- (6) Follow the pairing wizard. You may have typed on both or only one of the devices for a PIN code.

**Please note:** Depending on the device, another procedure code can be applied. For some devices you will find a four digit pin number in the manual of this device. Newer devices will be shown the code to be used on one or both devices.

## Access Internet - Wifi

Your device features built-in Wi-Fi technology so that you can access the internet via Wi-Fi network.

First of all you need to configure a Wi-Fi network. For the Wi-Fi configuration procedure to work, you need to be in a Wi-Fi zone that will allow you to connect to it. Every time your device is in range of a network that you have already configured once, it will attempt to make a connection.

**Note:** In order to establish a Wi-Fi connection, it is required to know the encryption password of the desired Wi-Fi network.

Be sure that you are allowed to use this network and that no other settings of this network like MAC address filter will deny the connection.

### Connect to a WPS capable router

This device also supports Wi-Fi Protected Setup (WPS). If your router is WPS capable, you can use **WPS** button to connect this player to your router.

#### Note:

- Consult the user manual of the router and learn how to add a WPS device to the router.
- Please use the manual setup if WPS does not work.

(1) Press the **WPS** button on the wireless router.

**Note:** Some router use the WLAN key also for WPS Connections. Please press the WLAN-Key of your Router for 6 Seconds in these cases.

(2) Open the function bar.

(3) Click at the icon  and on “Network and Internet” .

(4) Wait until the pairing is complete.

## **Manual WIFI Configuring**

(1) Open the function bar.

(2) Click at the icon  and then “Network and Internet” .

(3) The list of available networks will be shown at the right side

(4) Click on the network you want to connect to, enter the required network information (password) and then tap on “Connect”.

Your device will now attempt to establish a connection to that WiFi hot spot with the network parameters you entered. If the connection is successful, the message Connected to XXX will appear under the WIFI setting.

### **Note:**

The available network list is constantly refreshed automatically.

When the Wi-Fi is enabled, your device will connect automatically to your configured networks when they are in range.

If your device finds a network that has never been configured, it will display a notification icon.


## Using the Web Browser

Open Internet Explorer to view web sites.

The pages will be displayed in the full screen.



- To open a link, simply click it.
- You can open several web pages at a time, view them all at once on the screen, and then click one of them to view it in full screen.
- To go back directly to the Home screen, click the Home icon A small blue square icon containing a white stylized 'e' symbol, which is the Windows Home icon.
- Depending on where you are in the web browser, holding down on an item will give you access to more options.
- To fill in a text field, click in the field, then use the keyboard to type in the required text.

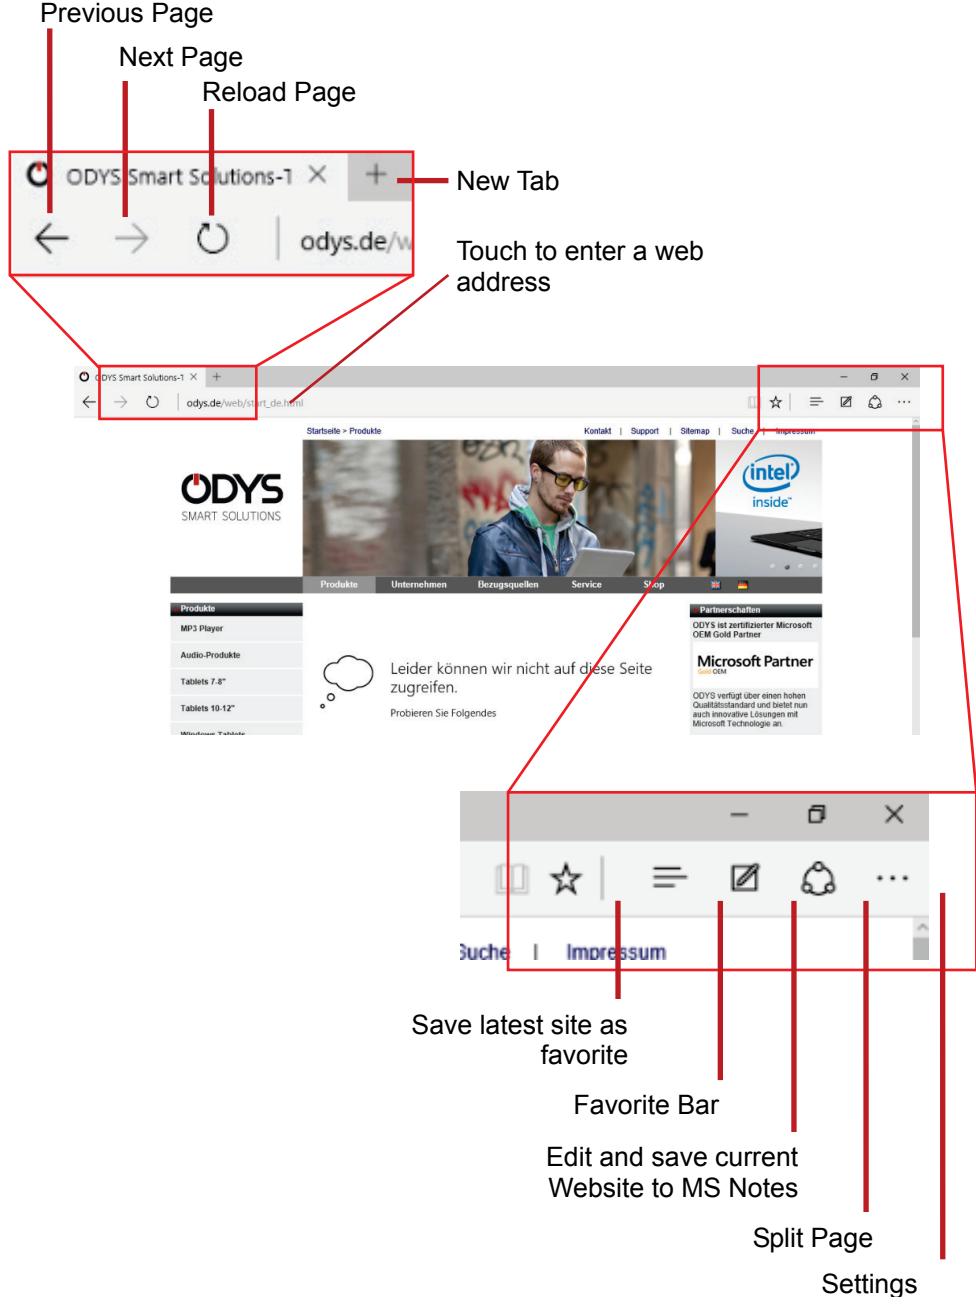


# Sending/Receiving E-Mails

This device has an email app pre-installed. You can send or receive emails via the Internet. Make sure that you have an Internet connection before using the email service.

Click the email icon to access the email app. Alternatively, tap on the app shortcut to display all apps and then click on the email icon to launch the email app.


The mailbox of the E-mail address is indicated during setup is displayed.

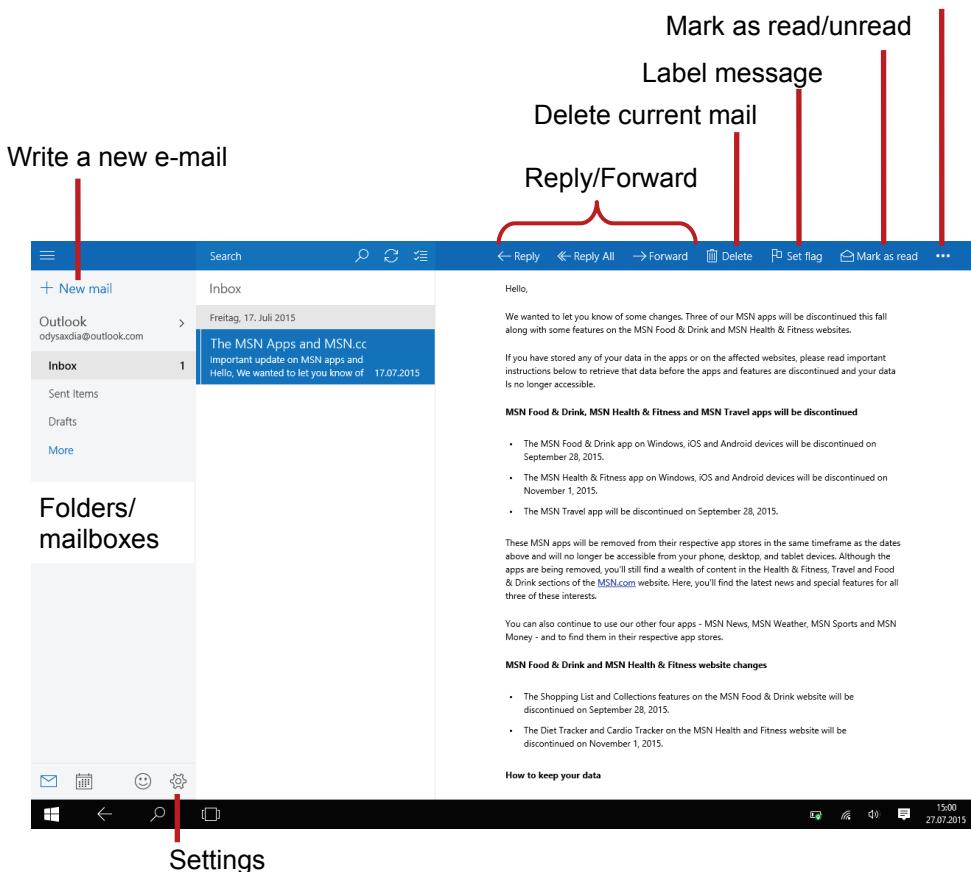

## Write e-mails

Click to write an e-mail.

Click in the corresponding field for the recipient (To), the subject and the text in order to make each input.

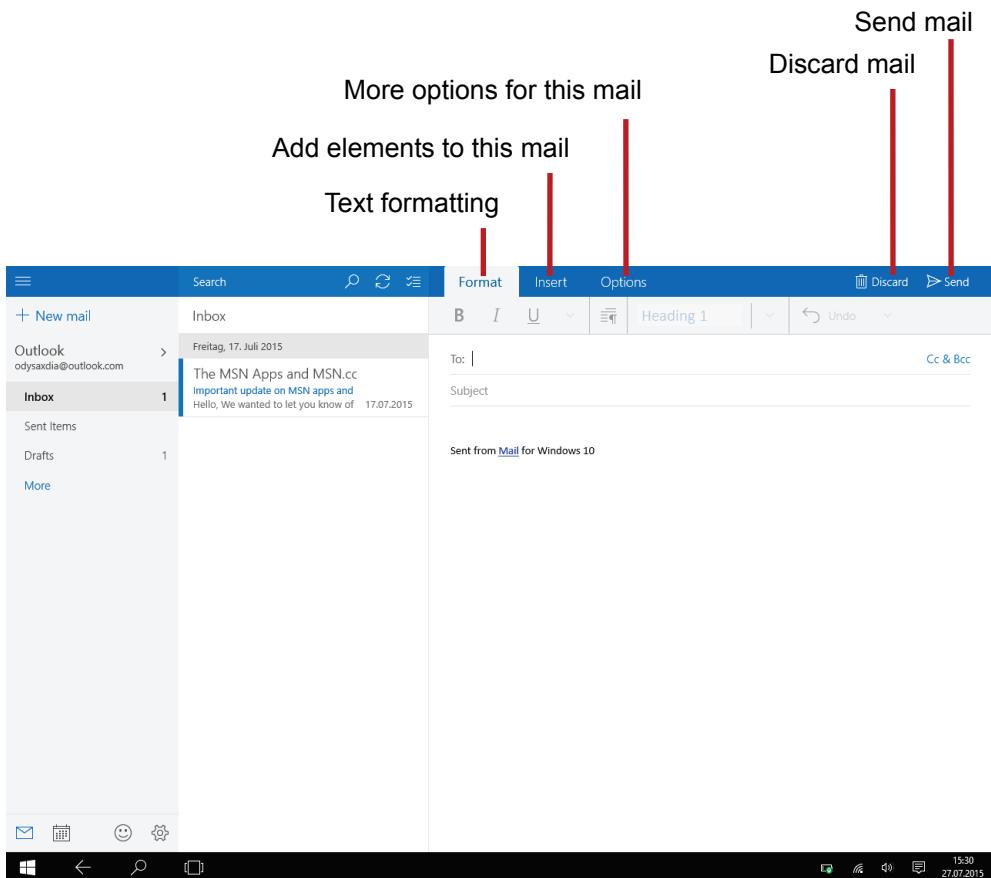

## Photo Playback

Open the list of all programs as instructed above.

Then click at the photo icon to access the photo mode.



### thumbnails

The first screen in photo mode shows all photos/videos and sub folders in the device or on memory card as thumbnails.

Click on a photo thumbnail to view the photo in full screen mode.

Open the sub folder if the photo is stored in a sub folder to display the photo/video contents as thumbnails.

### View Photo

- Click on a photo to display it.
- To scroll just use the arrow keys.
- Place a double click to enlarge the page.

More settings

Delete picture

Rotate picture

Post-production functions for the selected photo

Start slide show

Share picture




**Note:** The dia show can only be started if four pictures at minimum are in the current folder.

All pictures from this folder will be repeated continuously.

## Camera usage

The camera can be used for capturing photos or videos or for internet video calls.

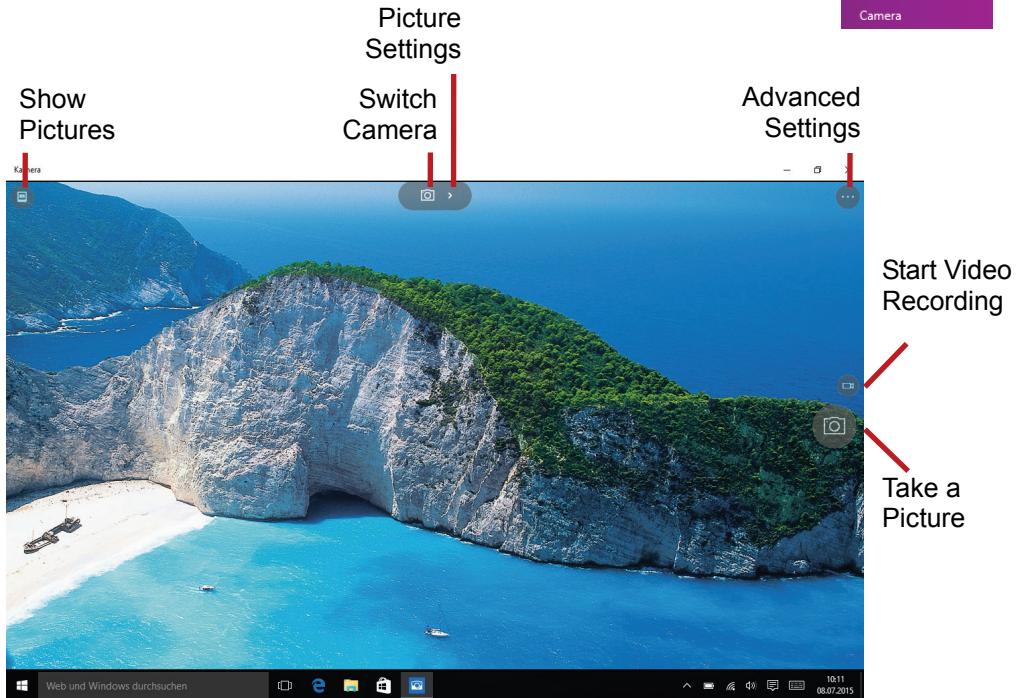

### Record



	Click this icon to start a video recording.
	A photo is taken by clicking on the camera.

# One Drive - File Explorer

Open the list of all programs as instructed above.

Now open the "OneDrive" programme.

## Screen elements

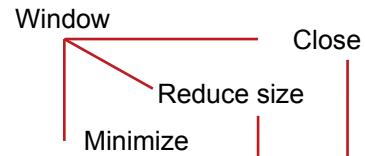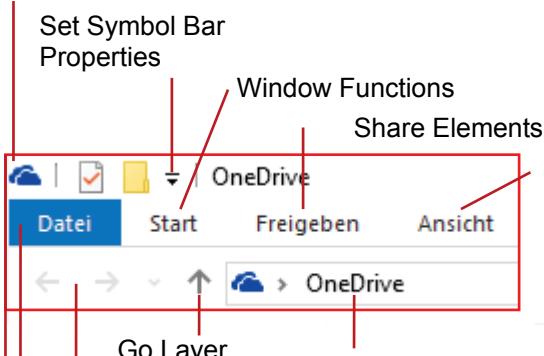

## Edit File

File

Drives

'OneDrive' durchsuchen


Name	Änderungsdatum	Typ
Bilder	31.07.2015 13:05	Dateiordner
Documents	31.07.2015 13:05	Dateiordner
Neuer Ordner	31.07.2015 13:33	Dateiordner
Pictures	31.07.2015 13:05	Dateiordner



## Windows Desktop

Open the functions bar as instructed above and deactivate the tablet mode.

The desktop is displayed and provides the familiar interface of other versions of Windows.

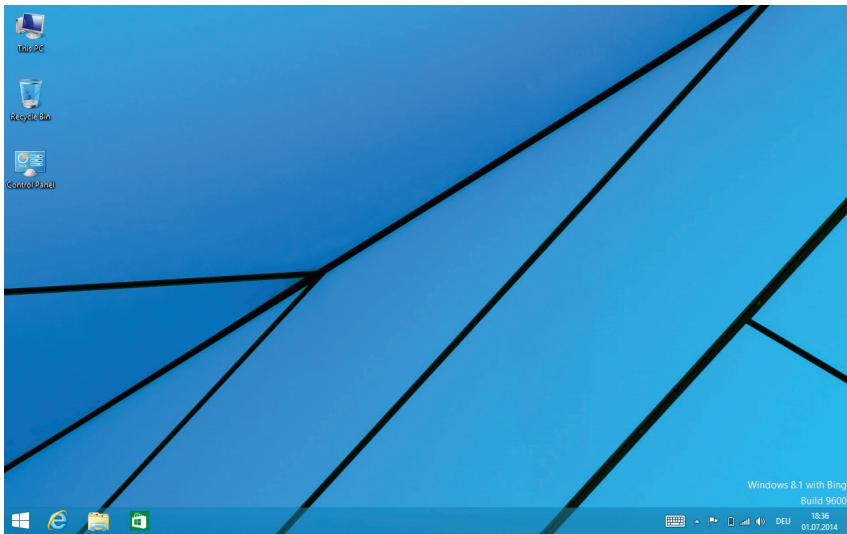

# System Settings

Open the function bar as decribed above.

Now open the "PC Settings" programme .  
• Click the desired function to modify settings.

## Activate Windows

To activate your version of Windows.

### Note:

You will only have all features available without restrictions after activating your version.



## Troubleshooting

### No sound from earphones

- Ensure that the volume setting is not too low and that the connection is OK. Ensure that the earphones are clean. Corrupted MP3 files can cause different noise or cannot be played. Ensure that the files are not damaged. Try different earphones. Ensure that the Wi-Fi function is enabled and that a wireless network is within range.

### Characters are corrupted

- Ensure that the language is set properly.

### No Wi-Fi connection

- Ensure that the Wi-Fi function is enabled and that a wireless network is within range.
- Enter the correct password. Observe special characters and case sensitivity. Characters must be entered accordingly.
- Follow the hints on the next page.

## Solve Wi-Fi connection problems

1. Open Wi-Fi settings.
2. Select and remove Wi-Fi.
3. Tick “Display Password” and enter password.
4. Look out for status messages below the network name:

<b>Problem</b>	<b>Status messages</b> (below network name in Wi-Fi settings)	<b>Possible cause</b>	<b>Solution</b>
Network not found	Network not found	- SSID not visible - Wi-Fi too weak	- Enable SSID in router configuration - Decrease distance to router - Firmware update or change channel
No Internet	-> Connecting -> Not connected	- MAC filter active	- Deactivate filter in router configuration
No Internet	-> Connecting -> Authentication... -> Not connected	- Password wrong or wrong spelling	- Check and re-enter password
No Internet	-> Connecting -> Authentication... -> Retrieving IP address... -> Not connected	- Router configuration faulty or - Wi-Fi too weak - DHCP server off	- Delete list of connected devices on router - Decrease distance to router - Activate DHCP in router configuration

## Specifications

Configurations	
CPU	1,84 GHz Quad Core Processor Intel Atom X5-Z8300
DDR	2GB DDRIII Ram
Built-in operating system	Microsoft Windows 10
Internal Memory	32 GB Flash HDD
Memory Card	Micro SD card: up to 128GB(SDHC)
Features	
Output Port	3.5mm earphone port, built-in speaker
	Built in microphone
E-book Format	PDF
Audio	MP3 (MPEG1/2/2.5 Audio Layer 1/2/3); WAV (MS-ADPCM, IMA-ADPCM, PCM) APE (Version 3.95,3.97,3.98,3.99,normal and fast except high and extra high) FLAC (FLAC Audio)
Video Format	AVI (Xvid, Divx 4/5/6 except GMC&QPEL, Divx for License, Audio Codec: MP3, AC3) MKV (H.264, MPEG4, XVID, DIVX4/5/6) MOV (MPEG4, H.264, Audio Codec:MP3) 3GP/MP4(H.264/H.263/MPEG4/XVID/DIVX4/5/6)
Photo Format	JPEG, BMP, GIF(static), PNG

<b>Technical Parameter</b>	
Audio Bit Rate	MP3: 8~320Kbps OGG: 16~320 Kbit/s WAV: 8~48 kHz
Video Resolution	AVI (Max.1280X720); (Max.1280X720); MKV (Max. 1280X720); MOV (Max. 1280X720)
Video Bit rate	Max. 6Mbps (MPEG4, XVID, DIVX4/5/6); Max. 2.5Mbps (H.264, Real video 8/9/10); Max. 2Mbps (Sorenson H.263).
Photo Resolution	JPEG (Baseline) (Max.8000*8000), GIF(Static) (Max.1000*1000)
Network Connection Media	Wi-Fi (802.11 b/g/n)
Battery Charge Time	About 6 hours
Battery Life	About 6-8 hours
Display	14.1" TFT LED, 1366 x 768 pixels.
SNR	65dB above
Frequency Response Range	20Hz—20KHz
Power Supply	Rechargeable lithium-ion polymer battery; AC Adapter: AC Input 100-240V~50/60Hz, DC Output 5V/2A
<b>Physical Parameters</b>	
Storage Temp.	-20°C ~ +65°C
Ambient Temp.	0°C ~ +50°C
Operation Relative Humidity	20% ~ 90% (40°C)
Storage Relative Humidity	20% ~ 93% (40°C)

## **Warranty Conditions**

The following conditions comprise the requirements and scope of our warranty conditions and do not affect our legal and contractual warranty obligations.

**We offer a warranty on our products in accordance with the following conditions:**

1. We will resolve damages or defects on our products free of charge within 12 months of the purchase date under the following warranty conditions. For any damage or defect determined later than 12 months after the purchase date, proof of a manufacturing fault must be submitted for repair under warranty.

The warranty does not cover batteries, rechargeable batteries and other parts, which are considered consumables, parts that break easily such as glass or plastic or defects based on normal wear and tear. There is no warranty obligation in the event of marginal differences compared to the target appearance and workmanship provided these have a negligible effect on the product's fitness for use, in the event of damage caused by chemical or electrochemical effects, by water or generally from abnormal conditions. Damage that is brought about by disregard of the user manual or other improper handling, unauthorized interventions in the installed system or the installation of additional software, is also excluded.

2. The warranty will be performed in such a way that we shall decide whether to repair the defective parts or to replace them with working parts free of charge. AXDIA reserves the right to exchange the product for a replacement product of equal value if the product that is sent in cannot be repaired within a reasonable time or at reasonable cost. The product can also be exchanged for a different model of the same value. Requests cannot be made for repairs to be carried out on site. Parts that have been replaced or exchanged become our property.

3. The warranty claim does not apply if repairs or other work is carried out by unauthorized persons or if our products are equipped with additional parts or accessories that are not approved for our products.
4. Warranties that have been activated do not cause the warranty period to be extended, nor do they trigger a new warranty period. The warranty period for any replacement parts installed ends with the warranty period for the entire product.
5. Any other or further claims are excluded, especially those for replacement due to damage caused outside of the product, provided there is no obligatory legal liability. We therefore accept no liability for accidental, indirect or other consequential damage of any kind, which leads to usage restrictions, data loss, loss of earnings or interruption to business.
6. If the device has built-in data storage, the customer is responsible for backing up the data before sending back the device. Axdia is not liable for data loss from clients' devices that are sent in. Axdia reserves the right to restore the factory settings on devices that are sent in. Please therefore make a note of your personal settings where appropriate.
7. This warranty does not affect your legal warranty rights and is subject to the laws of the country in which the first purchase of the product was made by the end-user.

## **Asserting a warranty claim**

1. To make use of the warranty service, you must contact the AXDIA Service Center by e-mail, fax or phone (see below for contact details). You can also use the service form on our website or on the back of the warranty conditions.
2. AXDIA Service Center will try to diagnose and solve your problem. If it is determined that a warranty claim exists, you will be given an RMA number (Return Material Authorization) and you will be asked to send the product to AXDIA.

### **IMPORTANT:** ‘

**Unfortunately the guarantee is not valid unless a proof of purchase is presented!**

**AXDIA will only accept parcels that have an RMA number.**

Please observe the following when sending the product:

1. The shipment should be sent in with sufficient postage and insurance, and suitable for transport. The original accessories, such as USB cable and mains adaptor for example, must be enclosed with the product unless otherwise specified by the AXDIA Service Centre.
2. 2. Mark the RMA number on the outside of the package in such a way that it is visible and clearly legible.
3. 3. You must enclose a copy of the sales slip as proof of purchase.
4. 4. Once AXDIA has received the product, it will meet its warranty obligations in accordance with the warranty conditions and will return the product to the sender with carriage and insurance paid.

## **Service outside of warranty**

AXDIA can refuse any service claim made that is not covered by the warranty. If AXDIA agrees to provide a service outside the warranty, the customer will be invoiced for all repair and transport costs.

AXDIA will not accept any packages that have not first been approved by AXDIA by means of an RMA (Return Material Authorization).

