


Package Contents

- MasterSet 121 Keyboard and Mouse
- Quick Start Guide

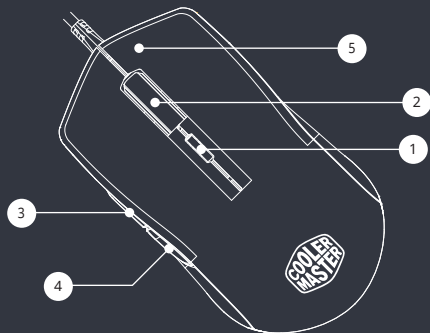

EN

- 1 **DPI**
- 2 **DPI + Wheel Click**
Static Color
Color Cycle Mode Switching
- 3 **DPI + Forward Button**
Adjust Speed of Color Cycle Mode
(3 levels)
- 4 **DPI + Backward Button**
Static Color Cycle (8 colors)
- 5 **DPI+ Right Click**
Turn On/Off light

DE

- 1 **DPI Zyklus Taste**
- 2 **DPI + Scrollrad Klick**
Ändern der statischen Farbe
(8 Farben)
- 3 **DPI + Forward Knopf**
Statische Farbe
Farbzyklus-Modus
- 4 **DPI + Backward Knopf**
Schnelligkeit des Farbzyklus
(3 Stufen)
- 5 **DPI+ Rechter Klick**
Beleuchtung An/Aus

IT

- 1 **Tasto Cycle DPI**
- 2 **DPI + Click Rotella**
Colore Statico (8 colori)
- 3 **DPI + Tasto Avanti**
Colore Statico
Cambio modalità del ciclo colore
- 4 **DPI + Tasto Indietro**
Regolazione velocità del ciclo dei colori (3 livelli)
- 5 **DPI+ Click Destro**
Luce On/Off

RU

- 1 **Кнопка цикла DPI**
- 2 **DPI + клик колеса**
Статический цветовой цикл
(8 цветов)
- 3 **DPI + Кнопка Вперед**
Статический цвет
Переключение режима цветового цикла
- 4 **DPI + Кнопка Назад**
Настроить скорость цветового режима (3 уровня)
- 5 **DPI + правый щелчок**
включение/выключение света

FR

- 1 **Bouton de cycle DPI**
- 2 **DPI + Click sur la molette**
Cycle de couleur statique (8 couleurs)
- 3 **DPI+ Bouton Avant**
Bascule Couleur statique
Cycle de couleurs
- 4 **DPI + Bouton Arrière**
Réglage de la vitesse du mode cycle de couleurs (3 niveaux)
- 5 **DPI+ Clic Droit**
Activation/Désactivation de l'éclairage

JP

- 1 **DPI切り替えボタン**
- 2 **DPI + ホイールクリック**
全面単色切替 (8色)
- 3 **DPI + 進むボタン**
全面単色
色サイクルモード切替
- 4 **DPI + 戻るボタン**
色サイクルモードのスピード調整 (3段階)
- 5 **DPI + 右クリック**
ライト オン/オフ

ES

- 1 **Botón ciclo DPI**
- 2 **DPI + Clic Rueda**
Ciclo estático del color (8 colores)
- 3 **DPI + Botón de avance**
Color Estático
Cambio de modo de ciclo de color
- 4 **DPI + Botón de retroceso**
Ajuste la velocidad del modo de ciclo de color (3 niveles)
- 5 **DPI+ Clic derecho**
Tencender/Apagar Luz

PT

- 1 **Botão do Ciclo de DPI's**
- 2 **DPI + botão da roda**
Ciclo de Cores Estático (8 Cores)
- 3 **DPI + Botão traseiro**
Cor estática
Mudança ciclo cores
- 4 **DPI + Botão frontal**
Ajuste da Velocidade do Ciclo de Cores (3 níveis)
- 5 **DPI+ Clic Direito**
Liga/Desliga a iluminação

Cooler Master Products: Limited Warranty

This document describes the warranty terms for all Cooler Master product sold in Australia

For Australia only:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. (Cooler Master Technology Inc., 8F, No. 768-1, Zhongzheng Rd., Zhonghe Dist., New Taipei City 23986, Taiwan (R.O.C.),)
Telephone: +886-2-2225-3517 (standard international call charges apply.)

Who the Warranty Protects:

This Warranty is valid to the original purchaser only.

What the warranty protects:

This warranty is valid only for the Cooler Master Products distributed by authorized dealer(s) in Australia. Please contact Cooler Master for warranty information and services:

- Cooler Master Support: account.coolermaster.com

What Is and Is Not Covered

It is important to note that our warranty is not an unconditional guarantee for the duration of the Program. Any replaced parts become the property of Cooler Master. The Program does not apply to the software component of a product or a product which has been damaged due to accident, misuse, abuse, improper installation, usage not in accordance with product specifications and instructions, natural or personal disaster, or unauthorized alterations, repairs or modifications.

The Program does not cover any events such as below:

- Any damages unrelated to manufacturing defects.
- Any unsuitable environment or use of the product in Cooler Master Opinion.
- Any product which has been modified without official permission from Cooler Master, or on which the serial number or warranty sticker has been defaced, modified, or removed.

Damage, deterioration or malfunction resulting from:

- Accident, abuse, misuse, neglect, fire, water, lightning, or other acts of nature, commercial or industrial use, unauthorized product modification or failure to follow instructions included with the product.
- Third party products using Cooler Master Components will not be covered by warranty. See your vendor or the manufacturer for information about servicing.
- Repair or attempted repair by anyone not authorized by Cooler Master, Inc.
- Any shipment damages (claims must be made with the carrier).
- Unauthorized repairs to a Cooler Master product will void the warranty offered by the Program. Cooler Master reserves the right to refuse to service any product which has been altered, modified or repaired by non-Cooler Master Service personnel.
- Cooler Master does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purposes.
- Removal or installation charges.
- You are responsible for the cost of shipping the product to Cooler Master. Cooler Master pays the cost of returning a product to you.
- Cooler Master reserves the right to replace the product with a service product at their sole discretion at any time.
- Product malfunction or damage resulting from liquids or moisture.
- All accessories that malfunction due to physical damage such as: USB cables, extension cables, adapter cables, adapters, power cords, screws, retention brackets, ear cups, and all other similar accessories.

Limitation of implied warranties:

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Exclusion of damages

COOLER MASTER'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. COOLER MASTER SHALL NOT BE LIABLE FOR:
• DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECT IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THEIR POSSIBILITY OF SUCH DAMAGES.
• ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE
• ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY

Warranty Information:

If the goods is found with reasonable defect within the period of (refer to Table A.) starting on the first day of purchase (with proof of invoice), this is what you must do, to claim the warranty from the above address.

Procedures:

1. Consumers should return to the shop where he/she has bought the goods. After confirming with the shop with a valid invoice, they may approach the distributor for RMA claim.
2. After confirmed by the distributor that the goods was damaged due to natural causes, replacement and repair will be done by distributor (including brand new or refurbished goods)
3. All faulty goods must return to the distributor, expenses for returning the faulty goods will be covered by the consumer, and distributor will cover the cost involved in the transporting of parts or repaired goods to the consumer.

Regarding all the expenses incurred in making the claim, and this is how you would claim:

1. Within the valid warranty date, starting from the first day of issuing invoice, Retail shops will assist in confirmation with distributor for the consumer for the following:
 - A. If the damage was caused by the consumer, then the consumer should cover all expenses in fixing the product, if the product still can't be fixed, we would suggest consumer in buying a brand new product.
 - B. Product defect caused under natural use, expenses will be covered by the distributor.
2. Faulty products with expired warranty dates, we would suggest consumer to purchase a brand new products, without undergoing for repairs.

Table A:

Cooler Master Products

Please check your user manual for the exact warranty period terms for products that are not shown below.

For more warranty information, please visit our official website: <http://www.coolermaster.com/service/warranty.html>

Cooler Master Gaming Peripherals products warranty	
Product Name	Warranty Term
MasterSet MS121	2 years

For the most updated information, please visit our official website:

www.coolermaster.com

Cooler Master Support: <https://account.coolermaster.com/>



Make It Yours.



MASTERSET MS121

RGB Gaming Keyboard and Mouse Combo with Mem-chnical Clicky Switches
Combo Clavier et Souris Gaming avec interrupteurs mem-caniques

EN



FN + ESC = On/Off Backlight
*Press and Hold for 10 seconds to reset to default



FN + F1 = Quick Pick 10 Different Colors
FN + F2 (Red+) = Red Color Levels (0-5)
FN + F3 (Green+) = Green Color Levels (0-5)
FN + F4 (Blue+) = Blue Color Levels (0-5)



FN + F5 = LED Lighting Mode
FN + F6 = Lighting Zones and Direction
FN + F7 = Lighting Speed Adjust

RU

FN + ESC = Вкл./Выкл. Подсветки
*Нажмите и удерживайте в течение 10 секунд, чтобы сбросить настройки по умолчанию

FN + F1 = Быстрый выбор 10 различных цветов
FN + F2 (красный +) = уровни красного цвета (0-5)
FN + F3 (зеленый +) = уровни зеленого цвета (0-5)
FN + F4 (синий +) = уровни синего цвета (0-5)

FN + F5 = Режим светодиодной подсветки
FN + F6 = Зоны и направление подсветки
FN + F7 = Регулировка скорости подсветки

ES

FN + ESC = Encender/ Apagar Luz de fondo
*Presione y sostenga por 10 segundos para regresar a modo predeterminado

FN + F1 = Selección rápida de 10 colores
FN + F2 (Red+) = Niveles de Color Rojo (0-5)
FN + F3 (Green +) = Niveles de Color Verde (0-5)
FN + F4 (Blue+) = Niveles de Color Azul (0-5)

FN + F5 = Modo de iluminación LED
FN + F6 = Zonas de iluminación y dirección
FN + F7 = Ajuste de velocidad de iluminación

DE

FN+ESC = Hintergrundbeleuchtung An/Aus
*Drücken und für 10 Sekunden halten für ein Reset zur Werk-Einstellung

FN+F1 = Schnell und einfach zwischen 10 vorgewählten Farben wählen
FN+F2 (Rot +) = Farbstufen rot (0-5)
FN+F3 (Green +) = Farbstufen grün (0-5)
FN+F4 (Blue +) = Farbstufen blau (0-5)

FN+F5 = LED Modus
FN+F6 = Beleuchtung: Zone und Richtung
FN+F7 = Beleuchtung: Einstellung der Schnelligkeit



FN + F9 = Normal Mode (1X)
FN + F10 = Turbo Mode (8X)
FN + F11 = Full keyboard Lock/Unlock
FN + F12 = Windows Key Lock / Unlock



FN + Ins = Play/Pause
FN + Home = Next Track
FN + Page Up = Volume Up



FN + Del = Stop
FN + End = Previous Track
FN + Page Down = Volume Down

FN + F9 = Normalный режим (1x)

FN + F10 = Турборежим (8x)
FN + F11 = Полная блокировка/разблокировка клавиатуры
FN + F12 = Блокировка клавиш Windows

FN + INS = Воспроизведение/Пауза
FN + HOME = Следующий трек
FN + Page Up = Увеличение громкости

FN + Del = Стоп
FN + End = Предыдущий трек
FN + Page Down = Уменьшение громкости

FN + F9 = Modo Normal (1X)

FN + F10 = Modo Turbo (8X)
FN + F11 = Bloqueo/Desbloqueo de teclado
FN + F12 = Bloqueo/ Desbloqueo de tecla de Windows

FN + Ins = Reproducir/Pausar
FN + Home = Siguiente pista
FN + Page Up = Subir volumen

FN + Del = Detener
FN + End = Pista anterior
FN + Page Down = Bajar volumen

FN+F9 = Normaler Modus (1x Wiederholrate)

FN+F10 = Turbo Modus (8x)
FN+F11 = Sperren/Entsperren der Tastatur
FN+F12 = Sperren/Entsperren der Windows-Taste

FN+EINFG = Abspielen/Pause
FN+POS1 = Nächster Titel
FN+BILD OBEN = Lautstärke +

FN+ENTF = Stop
FN+ENDE = Vorheriger Titel
FN+BILD UNTEN = Lautstärke -

FR

FN+ESC = Rétroéclairage activé/désactivé
*Pressez et maintenez durant 10 secondes pour réinitialiser

FN+F1 = Sélection rapide de 10 couleurs différentes
FN+F2 (Rouge+) = Niveaux de couleur rouge (0-5)
FN+F3 (Vert+) = Niveaux de couleur verte (0-5)
FN+F4 (Bleu+) = Niveaux de couleur bleue (0-5)

FN+F5 = Mode d'éclairage LED
FN+F6 = Zones d'éclairage et direction
FN+F7 = Réglage de la vitesse d'éclairage

PT

FN+ESC = Liga/Desliga a Retro-iluminação
* pressione 10 segundos para reset fabrica

FN+F1 = Escolhe 10 Cores Diferetes
FN+F2 (Vermelho +) = Níveis da Cor Vermelha (0-5)
FN+F3 (Verde+) = Níveis da Cor Verde (0-5)
FN+F4 (Azul +) = Níveis da Cor Azul (0-5)

FN+F5 = Modos de Iluminação LED
FN+F6 = Zonas de Iluminação e Direcção
FN+F7 = Ajuste da Velocidade da Iluminação

IT

FN+ESC = Retroilluminazione On/off
*Premere e mantenere per 10 secondi per resettare a default

FN+F1 = Prendere velocemente 10 colori diversi
FN+F2 (Rosso +) = Livelli colore Rosso (0-5)
FN+F3 (Verde +) = Livelli colore Verde (0-5)
FN+F4 (Blue +) = Livelli Colore BLUE (0-5)

FN+F5 = Modalità illuminazione a LED
FN+F6 = Zone di Illuminazione e direzione
FN+F7 = Regolazione velocità di illuminazione

JP

FN+ESC = バックライト オン/オフ
*10秒間押すと、デフォルトにリセット

FN+F1 = 10種類の色に変換
FN+F2 (Red +) = 赤色レベル調整 (0-5)
FN+F3 (Green +) = 緑色レベル調整 (0-5)
FN+F4 (Blue +) = 青色レベル調整 (0-5)

FN+F5 = LEDライティングモード
FN+F6 = ライティング効果方向変更
FN+F7 = ライティング スピード調整

CHT

FN + ESC = 背光開啟/關閉
*長按10秒回到出廠預設狀態

FN + F1 = 快速切換10組预设顏色
FN + F2 (紅色 +) = 紅色 (0-5)
FN + F3 (綠色 +) = 綠色 (0-5)
FN + F4 (藍色 +) = 藍色 (0-5)

FN + F5 = LED 背光模式
FN + F6 = 背光區域與方向調整
FN + End = 上一首
FN + Page Down = 音量降低

FN+F9 = Mode normal (1x)
FN+F10 = Mode Turbo (8x)
FN+F11 = Activation/Désactivation clavier complet
FN+F12 = Activation de la touche Windows

FN+INS = Lecture/Pause
FN+HOME = Piste suivante
FN+Page Up = Augmentation du volume

FN+Del = Stop
FN+END = Piste précédente
FN+Page Down = Diminution du volume

FN+F9 = Modo Normal (1x)
FN+F10 = Modo Turbo (8x)
FN+F11 = Bloqueo/Desbloqueo do Teclado
FN+F12 = Tecla Bloqueio Windows

FN+INS = Play/Pausa
FN+HOME = Próxima faixa
FN+Page Up = Aumento do Volume

FN+Del = Parar
FN+End = Faixa anterior
FN+Page Down = Baixar o Volume

FN+F9 = Modalità Normale (1x)
FN+F10 = Modalità Turbo(8x)
FN+F11 = Full keyboard bloccare/sbloccare
FN+F12 = Bloccare tasto Windows

FN+INS = Play/Pausa
FN+HOME = Traccia Successiva
FN+Page Up = Volume Su

FN+Del = Stop
FN+End = Traccia precedente
FN+Page Down = Volume Giù

FN+F9 = ノーマルモード (1x)
FN+F10 = ターボモード (8x)
FN+F11 = キーボードロック/解除
FN+F12 = Windowsキーロック


FN+INS = 再生一時停止
FN+HOME = 次のトラック
FN+Page Up = 音量を上げる

FN+Del = 停止
FN+End = 前のトラック
FN+Page Down = 音量を下げる

FN + F9 = 一般速度 (1X)
FN + F10 = 加速 (8X)
FN + F11 = 全鍵鎖鎖/解鎖
FN + F12 = Window按鍵鎖/解鎖

FN + Ins = 播放/暫停
FN + Home = 下一首
FN + Page Up = 音量增加

FN + Del = 停止
FN + End = 上一首
FN + Page Down = 音量降低

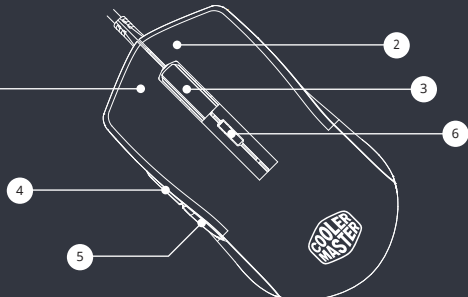

EN

- 1 Left Click
- 2 Right Click
- 3 Wheel Click
- 4 Forward Button
- 5 Backward Button
- 6 DPI Cycle Button

DE

- 1 Linker Klick
- 2 Rechter Klick
- 3 Scrollrad Klick
- 4 Forward Seitentaste
- 5 Backward Seitentaste
- 6 DPI Zyklus Taste

IT

- 1 Click Sinistro
- 2 Click Destro
- 3 Click Rotella
- 4 Tasto Avanti
- 5 Tasto Indietro
- 6 Tasto Cycle DPI

部件名称	有毒有害物質或元素					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
结构壳体	X	○	○	○	○	○
开关元件 PCB/USB	X	○	○	○	○	○
线材	X	○	○	○	○	○
螺丝	X	○	○	○	○	○

○ 表示該項有毒有害物質或元素在該項材料中的含量符合RoHS 2006/66/EC指令所規定的限制要求
X 表示該項有毒有害物質或元素在該項材料中的含量不符合RoHS 2006/66/EC指令所規定的限制要求
注：本產品中不含鉛、汞、鎘、六价铬、多溴联苯、多溴二苯醚等有毒有害物質或元素，但可能含有鉛、汞、鎘、六价铬、多溴联苯、多溴二苯醚等有毒有害物質或元素，其含量符合RoHS 2006/66/EC指令所規定的限制要求

RU

- 1 Щелчок левой кнопкой мыши
- 2 Щелчок правой кнопкой мыши
- 3 Щелчок колесиком
- 4 Кнопка Вперед
- 5 Кнопка Назад
- 6 Кнопка цикла DPI

FR

- 1 Clic gauche
- 2 Clic droit
- 3 Clic sur la molette
- 4 Bouton avant
- 5 Bouton arrière
- 6 Bouton de cycle DPI

JP

- 1 左クリック
- 2 右クリック
- 3 ホイールクリック
- 4 進むボタン
- 5 戻るボタン
- 6 DPI切り替えボタン

Asia Pacific - Cooler Master Technology Inc.
#F: No. 788-F1, Zhongzheng Rd., Zhonghe Dist.,
New Taipei City 22556, Taiwan (R.O.C.)
Tel: +886-2-2225-3517

North America - Cooler Master NA
4820 Schaefer Ave. Chino CA, 91710, USA
Tel: +1-888-624-6929

Europe - Cooler Master Europe B.V.
Lodewijkstraat 1b, 5652AC Eindhoven,
The Netherlands
Tel: +31-040-702-9900

China - Cooler Master China
Room 206Z, Floor 6, No. 421, Weiqing Rd.,
Jinqiao District, Shanghai City, China
Tel: +86-21-51872177

© 2017 Cooler Master Technology Inc. All Rights Reserved.

All trademarks are registered to their respective owners.

Ver 1.0: 2017/06/512000370-GP

