



CONGRATULATIONS!

You're holding the ROCCAT™ Kova[+] Max Performance Gaming Mouse – the tuned-up successor to the famous Kova Gaming Mouse. Whether you're left- or right-handed, the Ergo-Stealth design of the Kova[+] fits the way you play. The Kova[+] also features an extensive driver package that includes the world-famous Macro Manager software, macro presets and revolutionary Easy-Shift[+]™ technology.

ROCCAT™ Driver & Easy-Shift[+]™

The Kova[+] is enhanced by a feature-rich driver system. Along with award-winning Macro Manager software – which includes macro presets for gaming, multimedia and office apps – the Kova[+] also features the innovative Easy-Shift[+]™ button that lets you double the number of mouse functions.

ROCCAT™ GripTech Side Areas

The ROCCAT™ Kova[+] features enlarged GripTech side areas for left- and right-handers alike. These stabilize mouse handling and boost grip effectiveness. Along with the side areas, the mouse's upper body surface also features an advanced, non-slip coating.

Customizable Lighting System

Use the driver to change colors or the light effects quickly and easily. Get your Kova[+] to light up in a variety of attractive colors. The discreetly integrated LEDs on the sides of the mouse cast an atmospheric aura over the desktop, particularly when you activate the “breathing” function.



SPECIFICATIONS

PACKAGE CONTAINS

- ROCCAT™ Kova[+] Max Performance Gaming Mouse
- Quick-Installation Guide


SYSTEM REQUIREMENTS

- Windows® XP, Windows Vista® 32/64 bit, Windows® 7 32/64 bit
- USB 2.0 Port
- Internet connection (for driver installation)

TECH SPECS

- 3200dpi optical gaming sensor
- 130 inches per second maximum speed
- 30G acceleration
- 1000Hz polling rate
- 16-bit data channel
- 2m USB cable

ORGANIZE YOUR DESKTOP WITH ROCCAT™ SDMS
MORE INFO ON ROCCAT.ORG/SDMS

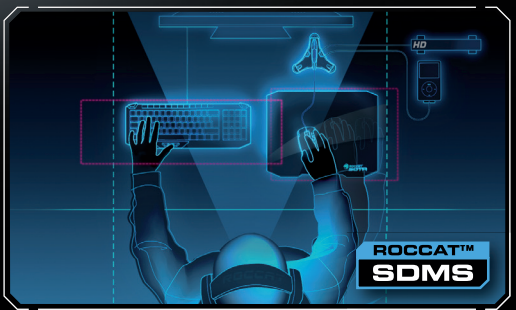


QUICK-INSTALLATION GUIDE

IMPORTANT
DOCUMENT

© 2012 ROCCAT GmbH. All rights reserved. Any product names mentioned in this manual may be trademarks or registered trademarks and are the property of their respective owners. Information contained herein is subject to change without notice. ROCCAT GmbH shall not be made liable for any errors that may appear in this manual. This publication or parts of it may not be reproduced without the express consent of the publisher.

ROCCAT GmbH
Otto von Bahrenpark, Paul-Dessau-Str. 3G, 22761 Hamburg, Germany

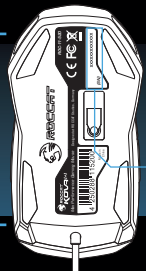

PLEASE USE YOUR PRODUCT'S SERIAL NUMBER
(LOCATED ON THE BOTTOM LABEL) FOR
REGISTRATION. SIGN IN AT:
ROCCAT.ORG/REGISTER



ROCCAT.ORG/SUPPORT

Our support team is ready to help with any technical questions.
Just send an e-mail to support@roccat.org. Or visit our website at:

Should you need assistance ...

A

DEFAULT BUTTON ASSIGNMENT
(no driver installed)

1 = Left mouse button

2 = Right mouse button

3 = Middle mouse button & universal scroll

4 = Page forward (browser)

5 = Easy-Shift[+]™ button

6 = Disabled by default
(Install the driver to assign a function.)

7 = Disabled by default
(Install the driver to assign a function.)

8 = Mouse wheel up

9 = Mouse wheel down

ROCCAT™ EASY-SHIFT[+]™
THE DUAL ASSIGNMENT FUNCTION FOR MOUSE BUTTONS

EASY-SHIFT[+]™: ASSIGN DUAL FUNCTIONS TO THE MOUSE BUTTONS

Easy-Shift[+]™ lets you assign an extra function to your mouse buttons and scroll-wheel (including mouse wheel directions: up, down, depressed) – which effectively doubles the amount of functions you can perform.

The Easy-Shift[+]™ button works just like the shift key on a keyboard: Hold it down while pressing one of the other standard mouse buttons and you execute a second function.

PRACTICAL MACRO CONTROLS

The advantage of using the Easy-Shift[+]™ secondary button assignment feature is evident, for example, when using the driver's macro controls. Here you'll find functions that let you launch and control your media player using just the mouse. For instance, the mouse wheel, in conjunction with the Easy-Shift[+]™ button, can be used to control volume level. You can also assign Previous track/Next track functions to the left and right mouse buttons in combination with the Easy-Shift[+]™ button.

In fact, shortcuts like these became so valuable to our beta testers, that after only a short while they told us they couldn't live without the Easy-Shift[+]™ button! Top ergonomics and maximum functionality have finally found a home in the Kova[+].

Easy-Shift[+]™ WoW:

5 + 1 = Mount up

5 + 2 = Dismount

5 + 3 = Autorun

5 + 4 = Use trinket

5 + 6 = Your macro #1

5 + 7 = Your macro #2

5 + 8 = Pet attack

5 + 9 = Pet follow

Easy-Shift[+]™ CS:

5 + 1 = Throw HE

5 + 2 = Throw flash

5 + 3 = Throw smoke

5 + 4 = Show scores

5 + 6 = Buy CT equipment

5 + 7 = Buy T equipment

5 + 8 = Primary weapon

5 + 9 = Secondary weapon

Easy-Shift[+]™ Multimedia:

5 + 1 = Previous track

5 + 2 = Next track

5 + 3 = Mute volume

5 + 4 = Switch to full screen

5 + 6 = Play or pause

5 + 7 = Stop playback

5 + 8 = Volume up

5 + 9 = Volume down

Easy-Shift[+]™ Browser:

5 + 1 = Page back

5 + 2 = Page forward

5 + 3 = New tab

5 + 4 = Add bookmark

5 + 6 = New window

5 + 7 = Print page

5 + 8 = Switch to next tab

5 + 9 = Switch to previous tab

B

DEFAULT BUTTON ASSIGNMENT: EASY-SHIFT[+]™
(no driver installed)

5 + 1 = Page back (browser)

5 + 2 = Page forward (browser)

5 + 3 = Mute volume

5 + 4 = Disabled by default
(Install the driver to assign a function.)

5 + 6 = Disabled by default
(Install the driver to assign a function.)

5 + 7 = Disabled by default
(Install the driver to assign a function.)

5 + 8 = Volume up

5 + 9 = Volume down

DE

ANLEITUNG

1. Verbinde den USB-Stecker der ROCCAT™ Kova[+] mit einer freien USB-Schnittstelle.

2. Starte deinen Computer und stelle eine Verbindung mit dem Internet her.

3. Gebe in die Adresszeile deines Webbrowsers die folgende URL ein „roccat.org/support“ und drücke Enter.

4. Klicke in der linken Navigationsleiste auf den Punkt „ROCCAT Kova[+]“. Lade dir auf der sich öffnenden Seite die neueste Treiber-Software herunter.

5. Starte die Treiber-Installation und folge bitte den weiteren Anweisungen auf dem Bildschirm.

DK

INSTRUKTIONER

1. Forbind ROCCAT™ Kova[+] ,s USB-stik med et ledigt USB-interface.

2. Start din computer og forbind den med Internettet.

3. Indtast følgende URL i adresselinjen af din webbrowser „roccat.org/support“ og tryk så Enter.

4. Klik i venstre navigationslinje på punkt „ROCCAT Kova[+]“. Fra den åbnede side overfører du den nyeste driversoftware.

5. Start driver-installationen og følg anvisningerne på billedskærmen.

EN

INSTRUCTIONS

1. Plug the ROCCAT™ Kova[+]’s USB connector into any free USB port.

2. Boot your computer and connect to the internet.

3. Enter ‘roccat.org/support’ in your browser and hit the return key.

4. In the navigation bar on the left, go to ‘ROCCAT Kova[+]’. Download the latest driver from the webpage that opens.

5. Start the driver installation process and follow the on-screen instructions.

ES

INSTRUCCIONES

1. Enchufa el conector USB del ROCCAT™ Kova[+] a un puerto libre USB.

2. Inicia tu ordenador y establece la conexión de Internet.

3. Escribe en tu navegador Web la siguiente URL: roccat.org/support y pulsa Enter.

4. En la barra izquierda de navegación haz clic en el punto “ROCCAT Kova[+]”. En la página que se abre a continuación descárga el software de controlador más actualizado.

5. Inicia la instalación del controlador y sigue las instrucciones que aparecen en pantalla.

FI

OHJEET

1. Liitä ROCCAT™ Kova[+]’n USB-pistoke vapaaseen USB-liitäntään.

2. Käynnistä tietokoneesi ja luo Internet-yhteys.

3. Kirjoita verkkoselaimesi osoiteriville seuraava URL-osoite „roccat.org/support“ ja paina Enter.

4. Napsauta vasemmassa navigaatiopalkissa kohtaa „ROCCAT Kova[+]“. Lataa avautuvalla sivulla uusin ajuriohjelmisto.

5. Käynnistä ajurin asennus ja noudata näytöllä näkyviä lisäohjeita.

FR

INSTRUCTIONS

1. Relie la fiche USB de la souris ROCCAT™ Kova[+] à une prise USB libre.

2. Démarre ton ordinateur et connecte-toi à Internet.

3. Entre dans la barre d'adresse de ton navigateur l'URL « roccat.org/support » et appuie sur Enter.

4. Clique dans le menu de navigation de gauche sur « ROCCAT Kova[+] ». Télécharge la dernière version du pilote sur la page qui s'ouvre alors.

5. Lance l'installation du pilote et suis les instructions qui s'affichent à l'écran.

PL

INSTRUKCJA

1. Podłącz wtyk USB ROCCAT™ Kova[+] do wolnego złącza USB.

2. Uruchom komputer i nawiąż połączenie z Internetem.

3. W wierszu adresowym przeglądarki wpisz adres URL „roccat.org/support“ i naciśnij Enter.

4. W lewym pasku nawigacji kliknij punkt „ROCCAT Kova[+]“. Z nowo otwartej strony pobierz najnowsze sterowniki.

5. Rozpocznij instalację sterowników i postępuj zgodnie z instrukcjami na ekranie.

RU

ИНСТРУКЦИИ

1. Соедини USB-штекер ROCCAT™ Kova[+] со свободным USB-портом.

2. Запусти компьютер и выйди в интернет.

3. Введи в адресной строке браузера адрес „roccat.org/support“ и нажми Enter.

4. Нажми на левой навигационной панели пункт „ROCCAT Kova[+]“. Загрузи с открывшейся страницы самые последние драйвера.

5. Запусти инсталляцию драйвера и следуй дальнейшим указаниям на экране.

SE

INSTRUKTIONER

1. Sätt ROCCAT™ Kova[+] USB-kontakt i en ledig USB-port.

2. Starta datorn och koppla upp dig på Internet.

3. Skriv in följande URL i adressfältet på din webbläsare: roccat.org/support. Tryck på Enter.

4. Klicka på ROCCAT Kova[+] i det vänstra navigationsfältet. Ladda ner den senaste programvaran med drivrutin på den sida som öppnas.

5. Starta installationen av drivrutin och följ anvisningarna på skärmen.

TR

TALIMATLAR

1. ROCCAT™ Kova[+] USB fişini boş bir USB girişine tak.

2. Bilgisayarı başlat ve internete bağlan.

3. Web tarayıcının adres satırına "roccat.org/support" URL adresini gir ve Enter tuşuna bas.

4. Sol navigasyon çubuğundaki "ROCCAT Kova[+]" üzerine tıkla. Açılan sayfadan en yeni sürücü yazılımını indir.

5. Sürücü kurulumunu başlat ve ekrandaki diğer talimatları takip et.