

STRONG



Google TV

4K STREAMING TV STICK LEAP-AIR



Picture similar

User manual

19/02/2025/12:16

SERVICE CENTER			
AT	 support_at@strong-eu.com  0620 400 150 (K 0,12/Min. österr. Festnetz)	HU	 support_hu@strong-eu.com  +36 1 445 26 10
BG	 support_bg@strong-eu.com  +359 32 634451	IT	 support_it@strong-eu.com
CZ	 support_cz@strong-eu.com  844 44 44 90	NL	 support_nl@strong-eu.com
DE	 support_de@strong-eu.com  0800 7788 787 (Gebührenfrei)	PL	 support_pl@strong-eu.com  801 702 017
DK	 support_dk@strong-eu.com	PT	 support_pt@strong-eu.com  +351 2 100 06 125
ES	 support_es@strong-eu.com  +34 91 119 61 76	SK	 support_sk@strong-eu.com  0850 15 05 50
FR	 support_fr@strong-eu.com	SL	 +386 1 828 08 58
HR	 +385 1 344 57 66	UA	 support_ua@strong-eu.com  +380 (44) 238 61 50

Supplied by STRONG Austria
 Represented by STRONG Ges.m.b.H.
 Teinfaltstraße 8/4. Stock
 1010 Vienna, Austria
 Email: support_at@strong-eu.com

Licenses

This product contains one or more programs protected under international and U.S. copyright laws as unpublished works. They are confidential and proprietary to Dolby Laboratories. Their reproduction or disclosure, in whole or in part, or the production of derivative works therefrom without the express permission of Dolby Laboratories is prohibited. Copyright 2003-2009 by Dolby Laboratories. All rights reserved.

SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, STRONG declares that the devices LEAP-AIR are in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <https://eu.strong-eu.com/downloads/>

Subject to alterations. In consequence of continuous research and development technical specifications, design and appearance of products may change. Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories. The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. Wi-Fi is a registered trademark of Wi-Fi Alliance®. Netflix is a registered trademark of Netflix, Inc. YouTube™ is a trademark of Google Inc. All product names are trademarks or registered trademarks of their respective owners.

TABLE OF CONTENT




1.0 INTRODUCTION	3
1.1 SAFETY INSTRUCTIONS	3
1.2 STORAGE	3
1.3 PACKAGE CONTENT	4
2.0 TV STICK PANEL	4
2.1 PANEL	4
2.2 REMOTE CONTROL	5
2.3 INSTALLING THE BATTERIES	6
3.0 CONNECTION GUIDE	6
4.0 SETTING UP YOUR DEVICE	7
5.0 SETTINGS	14
6.0 DOWNLOADING APPS	18
7.0 GOOGLE CAST	18
8.0 GOOGLE ASSISTANT	18
9.0 SIMPLE TROUBLESHOOTING	19
10.0 TECHNICAL SPECIFICATIONS	20

1.0 INTRODUCTION

Thank you for choosing the 4K Ultra HD Google TV Stick supplied by STRONG. It has been produced with the latest new technology and offers extensive entertainment and great versatility. We wish you many hours of new great experiences exploring the Google world!

1.1 SAFETY INSTRUCTIONS


Read all of the instructions before operating the set. Keep these instructions well for later use.

- Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery etc.).
- Please refer to the information on the exterior back enclosure for electrical and safety information before installing or operating the apparatus.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspaper, table-cloths, curtains, etc.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The mark  indicates a risk of electric shock. The external wires must be installed by an instructed person or ready-made leads or cords must be used.
- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent types.
- The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Listening to music at high volume levels and for extended durations can damage one's hearing.
- In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels.
- The mains plug or appliance coupler is used as disconnect device, it shall remain readily operable. When not in use and during movement, please take care of the power cord set, e.g. tie up the power cord set with cable tie or something like that. It shall be free from sharp edges or similar which can cause abrasion of the power cord set. When put into use again, please make sure the power cord is not damaged. In case of damages, please get the power cord replaced by a similar one with the same specifications. The absence of a light indication on the apparatus does not mean that it is fully disconnected from the mains. To disconnect the apparatus completely, the mains plug must be pulled out.
- Attention should be drawn to environmental aspects of battery disposal.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
-  To prevent the spread of fire, keep candles or other open flames away from this product at all times.
- A USB terminal can provide a maximum of 500 mA.
-  Equipment with this symbol is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Operating Environment

- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not use the set near damp, and cold areas, protect the set from overheating.
- Keep away from direct sunlight.
- Do not use the set near dust place.
- Do not attach candle to accessible opening area, to avoid flammable foreign material from entering the TV.

WEEE Directive

 Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environment-safe recycling.

1.2 STORAGE

Please follow the instructions below:

This user manual provides complete instructions for installing and using this product. The symbols will serve as follows:

- | | |
|----------|------------------------------------------------------------------|
| WARNING: | Indicates warning information. |
| NOTE: | Indicates any other additional important or helpful information. |
| MENU | Represents a button on the remote control or the product. |
| Move to | Represents a menu item within a window. |

1.3 PACKAGE CONTENT

- 1x Google TV-Stick
- 1x Voice Enabled Remote
- 1x 5V/1A-Power USB Adaptor
- 2x AAA-Batteries
- 1x Installation instructions


WARNING : The batteries should not be recharged, disassembled, electrically short-circuited, be mixed or used with other types of batteries. If rechargeable accumulators instead of batteries are going to be used (e.g. NiMH), we recommend using types with low self-discharge to ensure long time operation of your remote control.

NOTE : Only use the original USB power adaptor of 1 Ampere. Other adaptors only use 0,5 Ampere which is not enough to supply this Google TV Stick.

2.0 TV STICK PANEL


2.1 PANEL

 Fig. 1

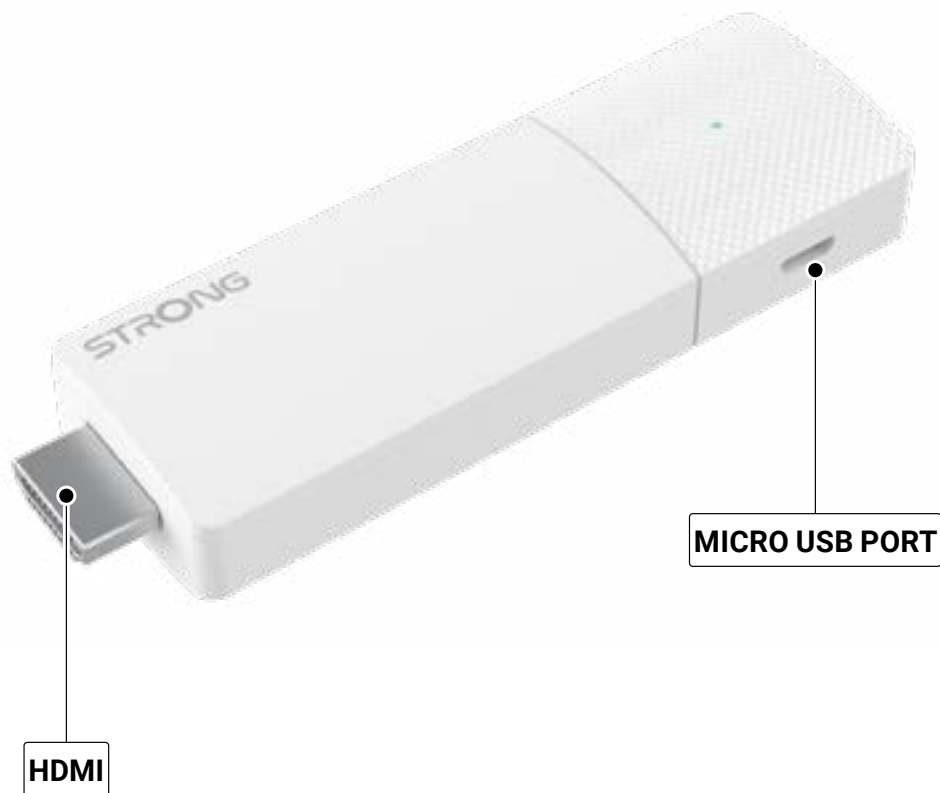

2.2 REMOTE CONTROL

 Fig. 2

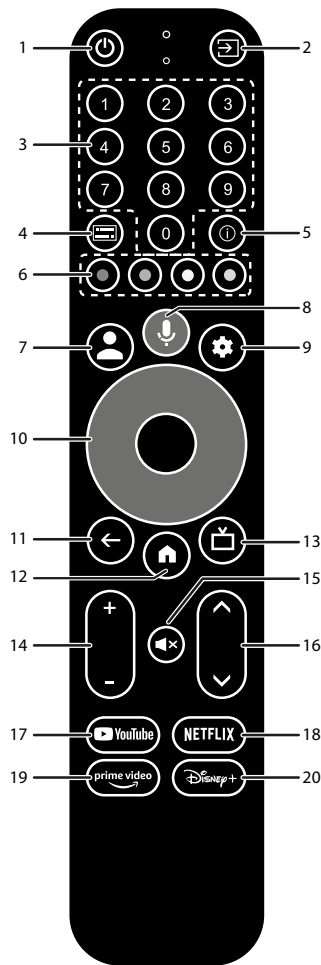

- | | |
|----------------------------|-----------------------------------------------------------|
| 1. | Press to turn the TV/ Box to On, Standby or deep Standby. |
| 2. | Select TV inputs after setup remote button configuration |
| 3. 0 to 9 | Choose channel directly. |
| 4. | Subtitles selection |
| 5. INFO | Display information about the current source. |
| 6. COLOURED BUTTONS | Press to execute the prompt function in Live TV mode. |
| 7. | Call account menu to select between accounts. |
| 8. | Press to activate the voice control function*. |
| 9. | Direct access to settings menu. |
| 10. | Navigate the menu. Confirm the selection. |
| 11. | Press to Exit. In menu: step back to previous menu. |
| 12. | Enter the home desktop. |
| 13. | Press to access the TV settings. |
| 14. VOL +/- | Adjust the volume up or down. |
| 15. | Press to mute or restore the volume. |
| 16. | Change programs up or down. |
| 17. YouTube | Press for direct access to YouTube. |
| 18. NETFLIX | Press for direct access to Netflix** |
| 19. prime video | Press for direct access to prime video***. |
| 20. Disney+ | Press for direct access to Disney+****. |

 
*Voice control and some other functions could work only when this RCU paired with your TV.

** Membership is not included. Netflix is available in selected countries. Streaming Netflix requires to set up an account. Broadband Internet required. See www.netflix.com/TermsOfUse for details.

*** Membership is not included. Prime is available in selected countries. Streaming prime video requires to set up an account. Broadband Internet required. See www.primevideo.com for details.

**** Membership is not included. Disney+ is available in selected countries. Streaming Disney+ requires to set up an account. Broadband Internet required. See www.disneyplus.com for details.

2.3 INSTALLING THE BATTERIES

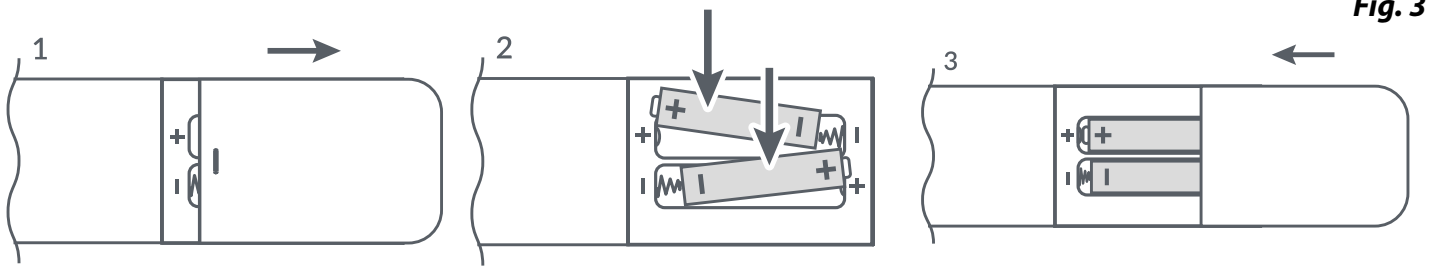

Open the cover on the remote control and insert 2x AAA batteries into the compartment. The correct position of batteries polar diagram is shown inside the batteries compartment.

 
1. Open the cover.
2. Insert the batteries.
3. Close the lid.

WARNING: The batteries should not be recharged, disassembled, electrically short-circuited, be mixed or used with other types of batteries.

3.0 CONNECTION GUIDE

Refer to the diagram below for connecting your Google TV Stick to the TV.

NOTE: Before getting started, please turn off all devices to be connected.


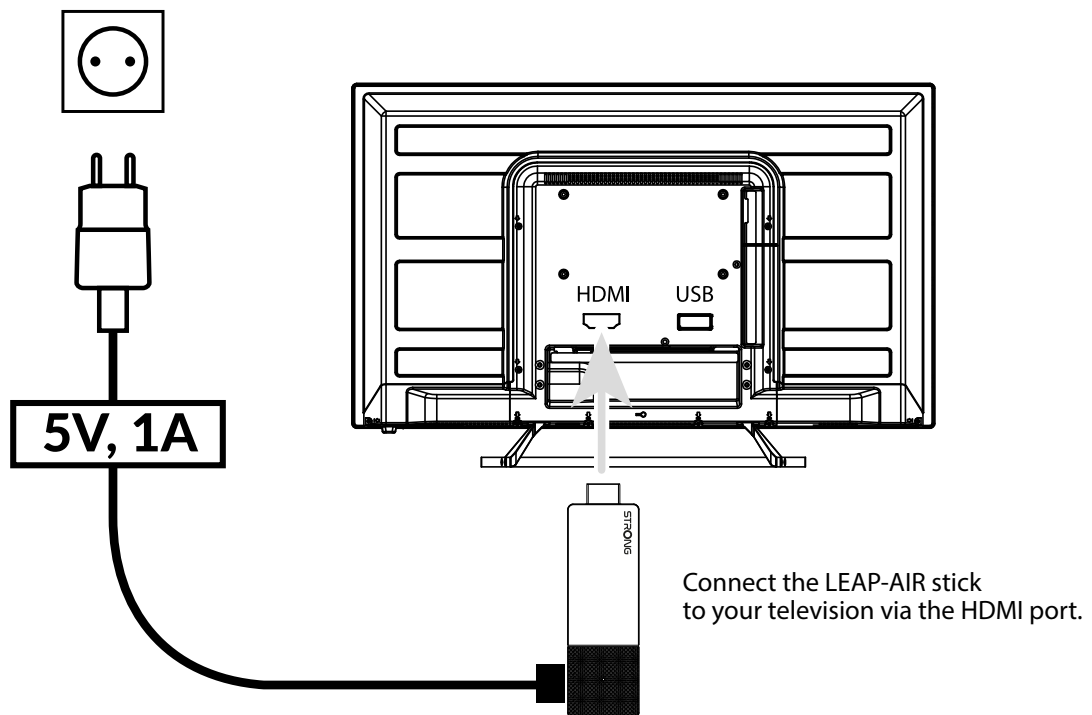


NOTE: The LEAP-AIR stick supports Wi-Fi 2.4GHz and 5 GHz. To connect, go to Settings -> Network.



NOTE: Before turning on your device, please switch the signal input of the TV to the correct source

4.0 SETTING UP YOUR DEVICE

  
You may turn on your TV stick after properly connecting all hardware. To be able to use Google Assistant on your remote, you must first pair your Bluetooth Remote to your TV Stick. Follow the pairing instruction on the screen.

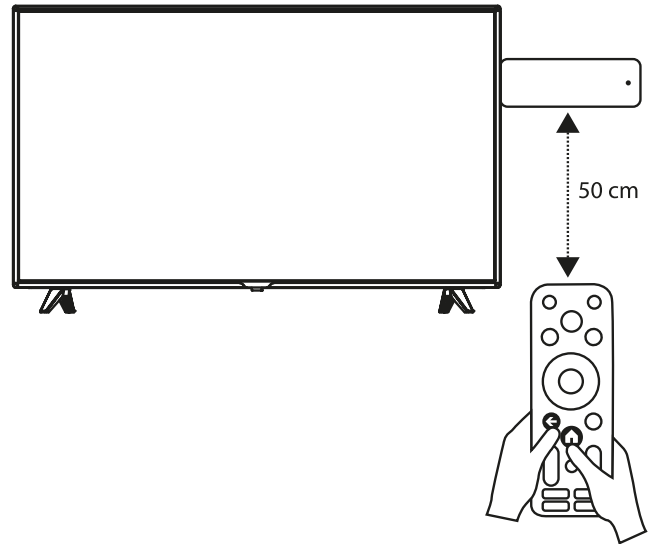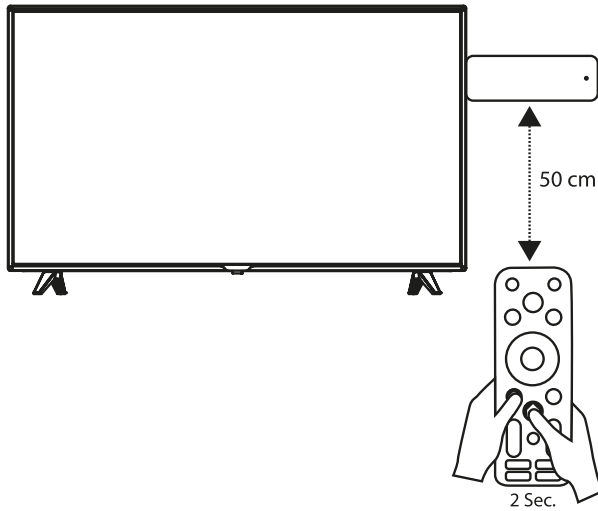

  To be able to use Google Assistant on your remote, please pair the remote to your TV Stick.

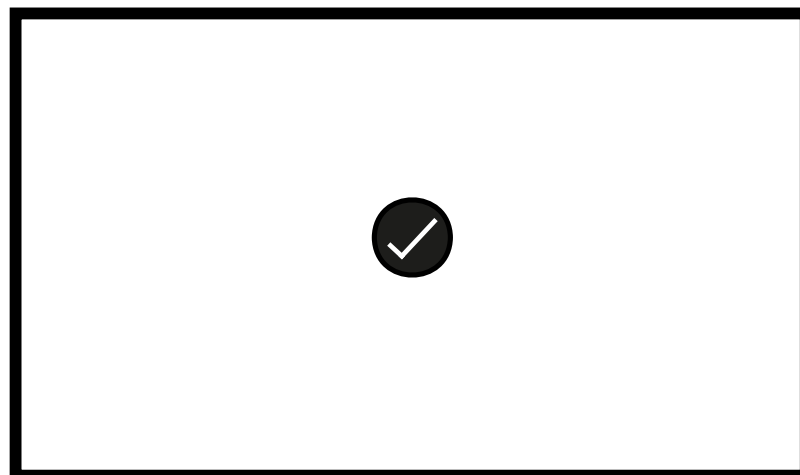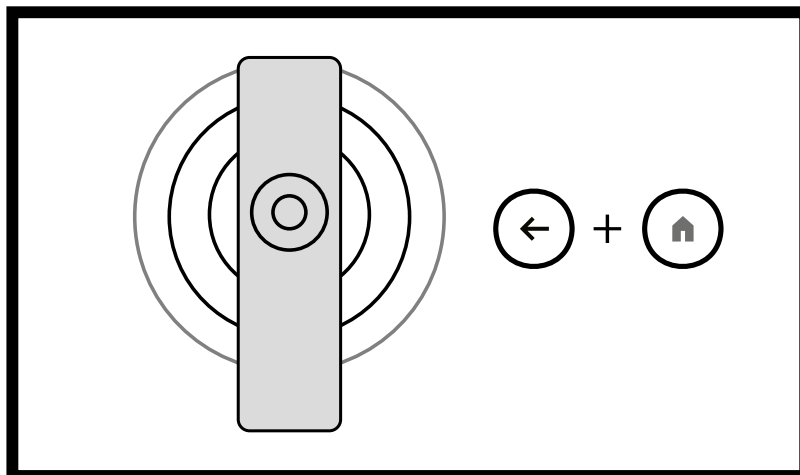

 Step 1: Language

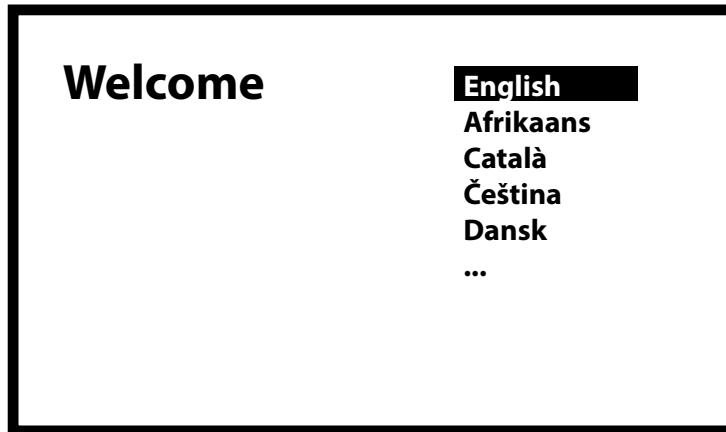


Select your preferred language on the Welcome Page.

Step 2: Location Settings




Choose whether to allow Google to use your location to improve the experience.

 Step 3: Set up Google TV

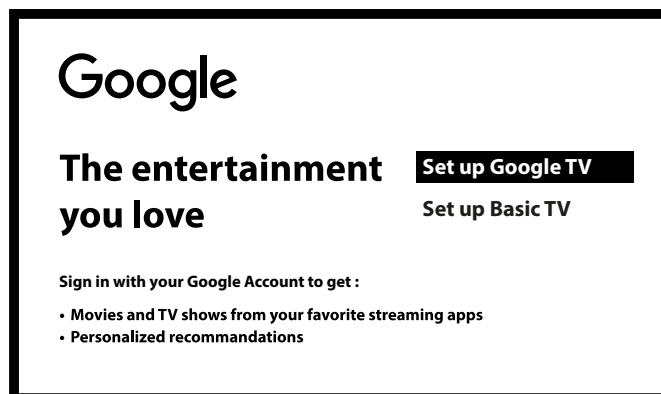


Select set up Google TV to configure the apps that will be installed on your TV and linked to your Google Account.

 Step 4: Set up with the Google Home App

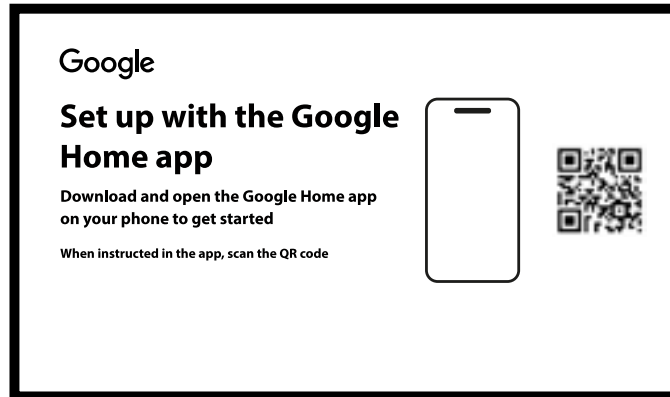


Set up the TV stick by downloading / opening the Google Home app on your phone. Please, scan the QR code on your phone and follow the instructions to start this Google home.

 Alternatively, start the setup directly on the TV screen by pressing the down button to begin manual entry. Please, follow the instructions on your TV screen.

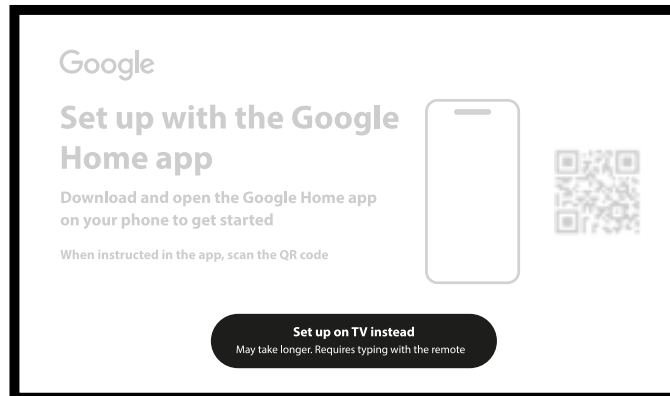

 Step 5: Wi-Fi

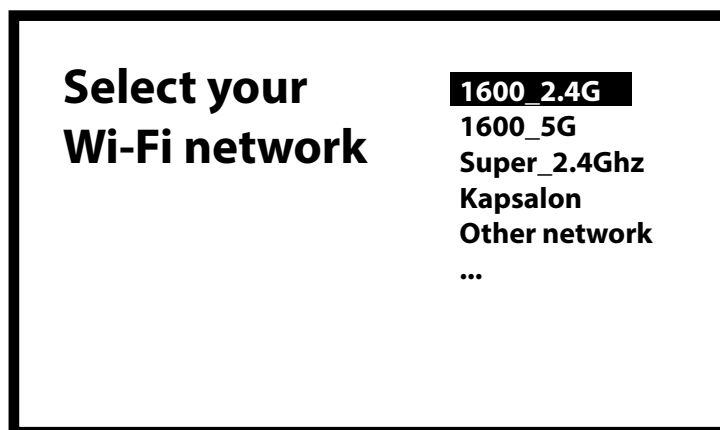



Select your Wi-Fi Network from the list and enter its password.

Enter password
for 1600_2.4G

Hide password

 Select ✓ to continue

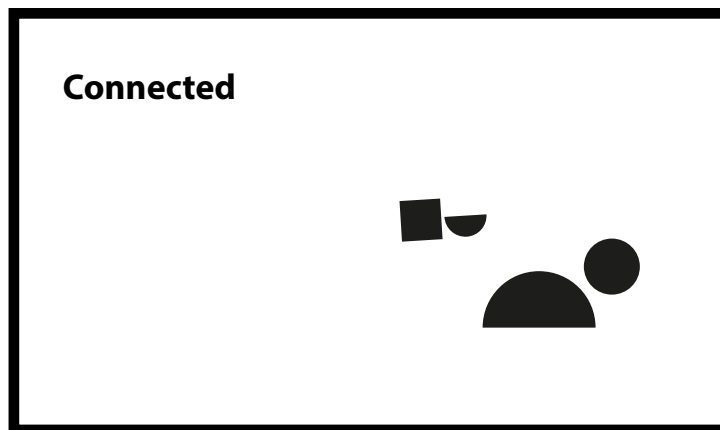

Step 6: Google Account

Google

 
Sign in
use your google account

Email or phone


[Forgot your email?](#)

Sign in with your Google Account.

Step 7: Terms of Service & Privacy Policy

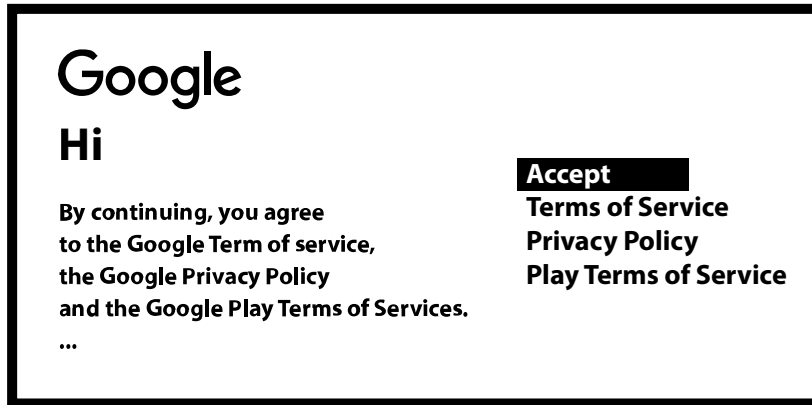


 Read and accept the Terms of Services & Privacy Policy.


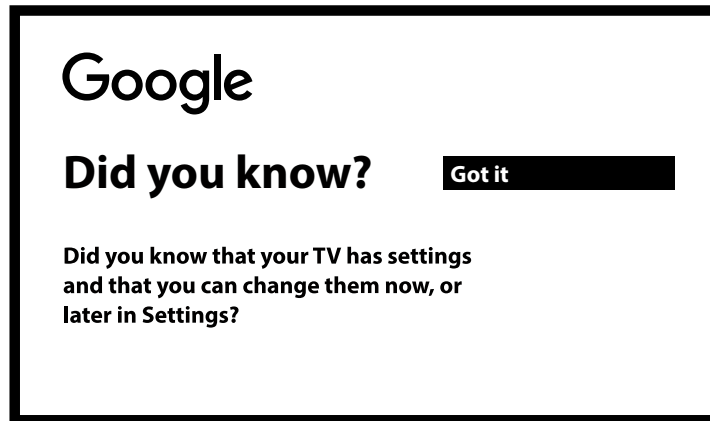


Select Got it.

 Step 8: Google Services

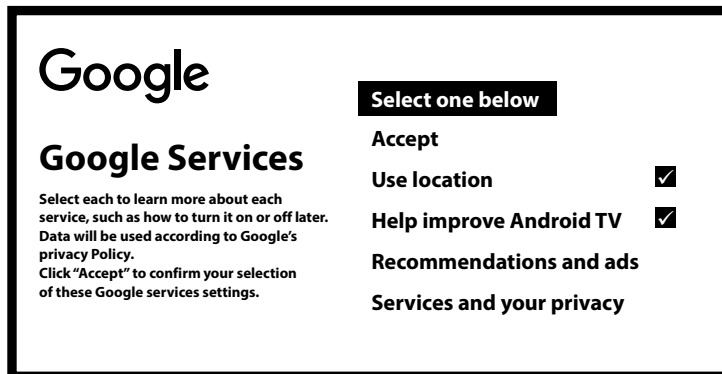


  Select the services that you want to configure from the list. Select turn off for the features that you want to deactivate.

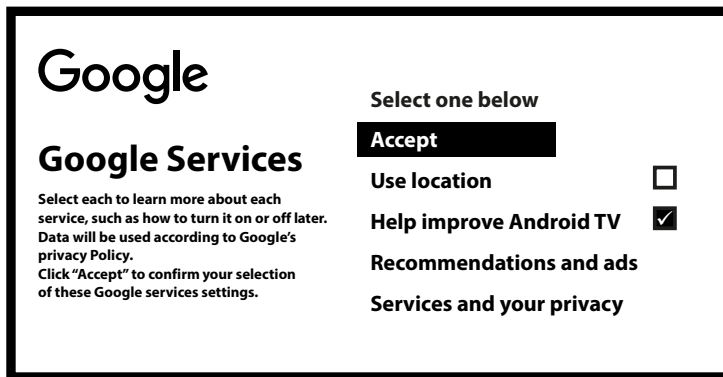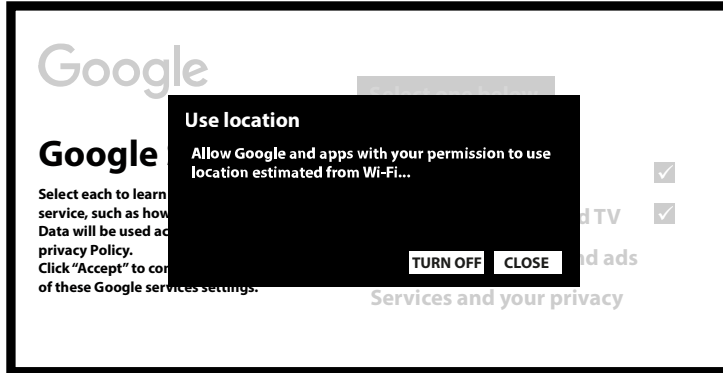

Select Accept.

 Step 9: Meet your Google Assistant

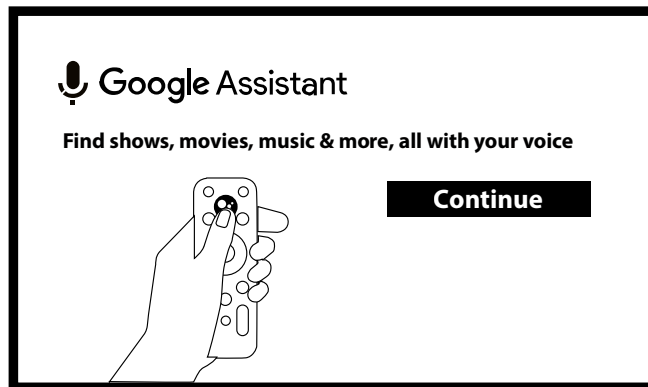

Turn on the Google Assistant function for the functionality to work on your remote.

 
Step 10: Search across your TV apps



Select an option from the list




Step 11: Select your subscriptions

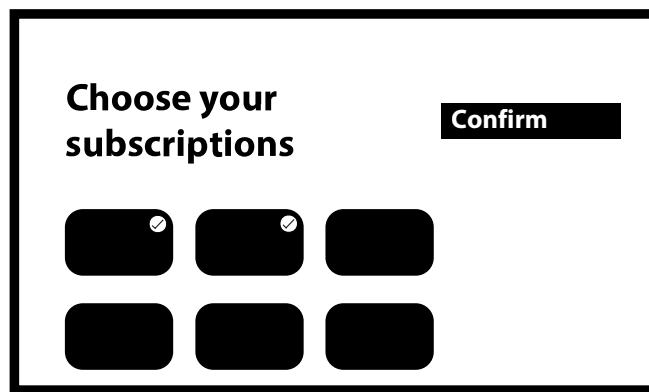


Select the apps for which you want to receive recommendations. These apps will be installed as well as the main streaming services from your area. Select confirm to launch the installation of your apps.

 Step 12: Wait for your apps to be installed

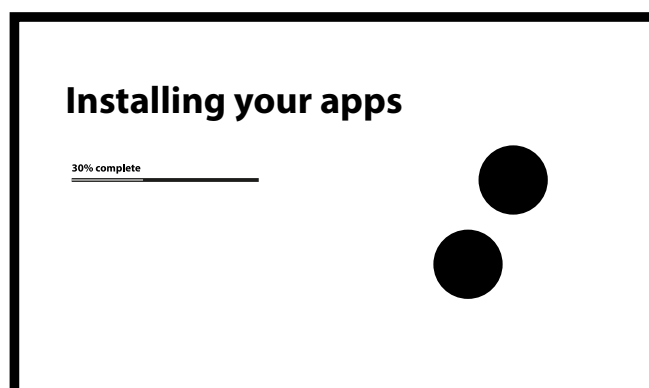

 Step 13: Select options that suit your needs

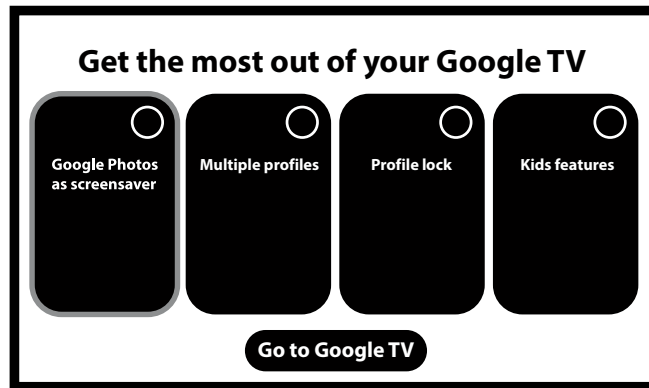


Select the option that suits your needs if you have to restrict the access to certain types of contents. And follow the steps on your screen. If you don't need to restrict access to certain types of content, select "Go to Google TV". Explore the features of your device in this walkthrough. Click "DONE" to complete it and start using your device. You're all set!

5.0 SETTINGS


Press the setting button to open Settings

 
Select Settings to check the device information, add/remove accounts and make changes to the system settings.

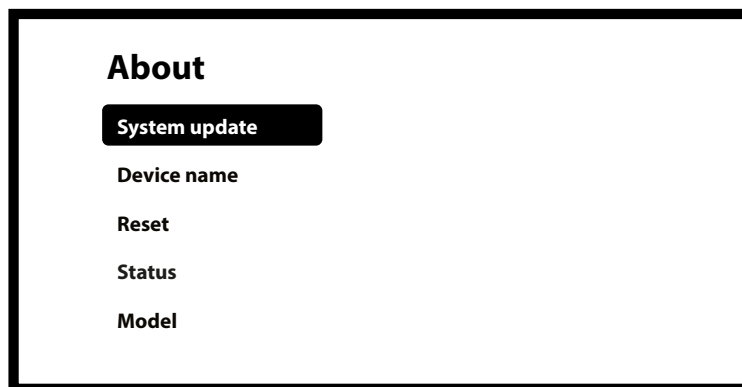

Wi-Fi Settings

 
 
Under Network Settings, select and enable Wi-Fi in order to connect to the network. Once the device scans and lists nearby Wi-Fi networks, select the appropriate network name, if required put in the password and select Connect.

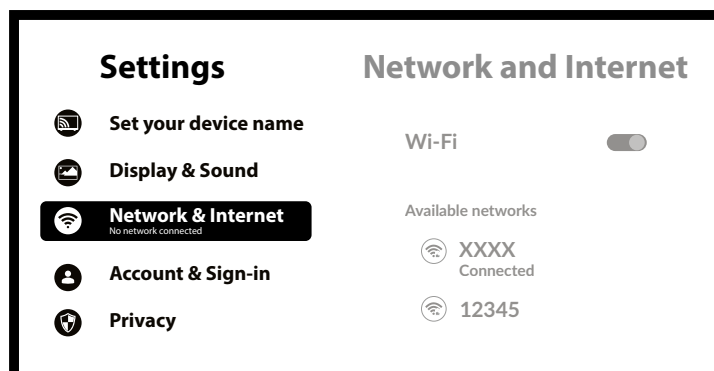

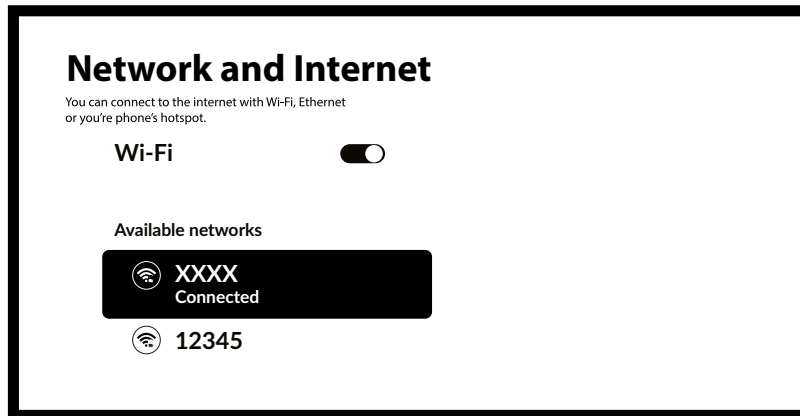

Language Settings

  Under Settings > System select Language to change the language previously set.

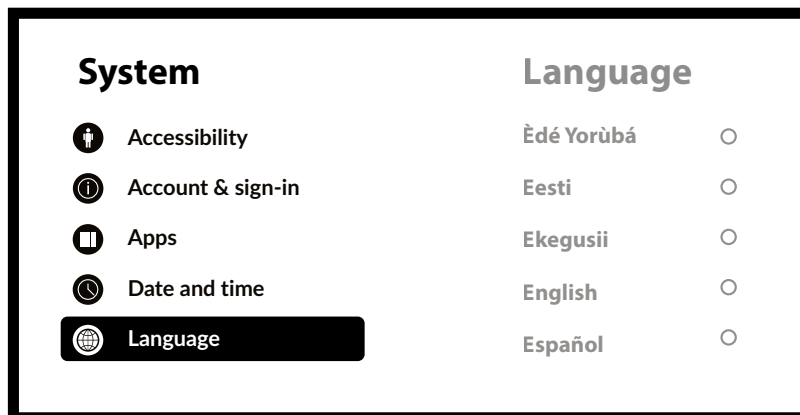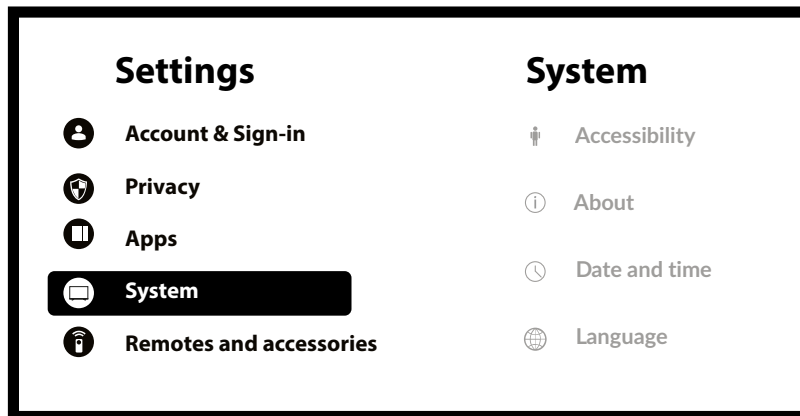

Bluetooth Pairing

 
 
Select Settings in the Menu Launcher, click "Add accessory" and select the device you want to connect. Make sure that the device you want to pair is in pairing mode.

Remove a Bluetooth Device

Select Settings from the Menu Launcher. From the Remote & Accessories menu, select the Bluetooth device you want to remove. Click "Forget" to remove this device.

Adding Accounts



For new Google users: sign up for a new Google account using the TV for easier login and payment security. Add an account or switch accounts under Accounts in the Settings Menu.

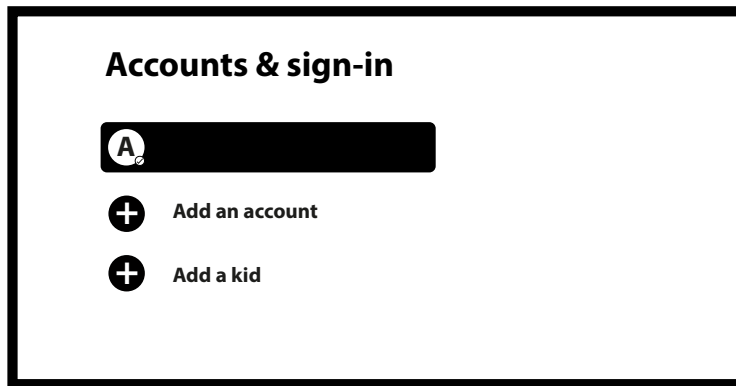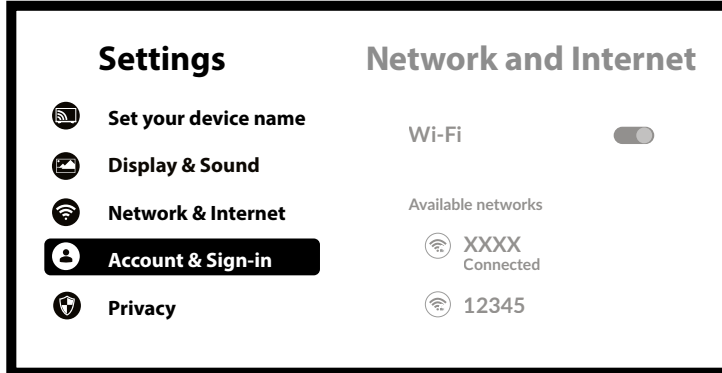


Factory Reset



Under Settings, select System > About > Reset

   Click Factory data reset to erase everything. Once this option has been selected, all manually installed apps and user data information will be deleted.

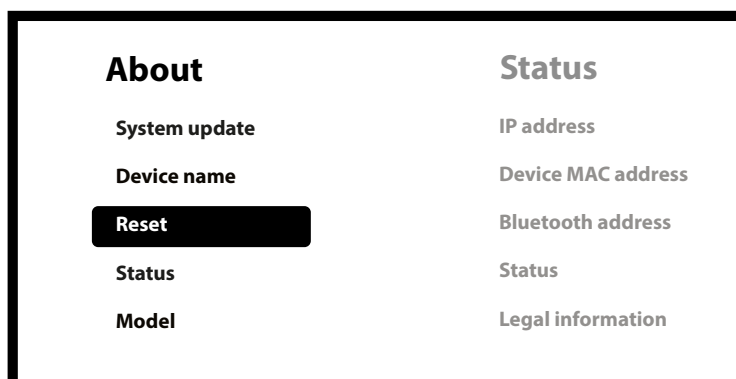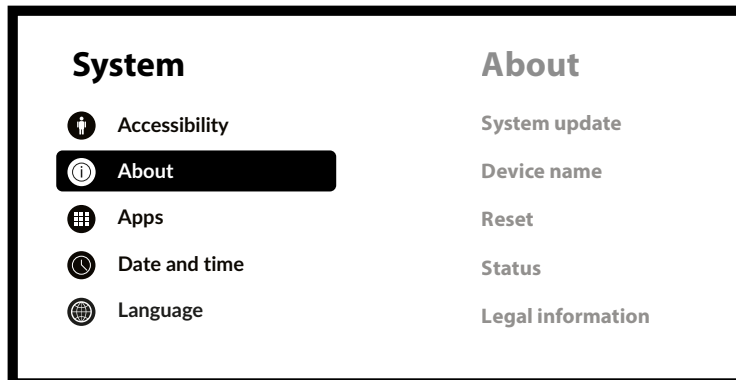

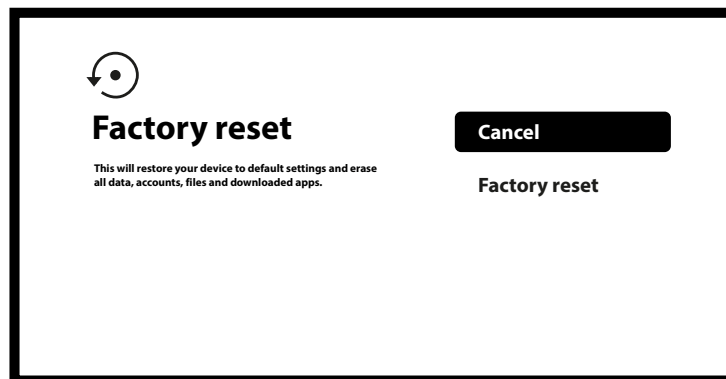

  About
You can check information about your device by clicking on ABOUT in the Settings Menu. This panel will show you the model of your device, version, firmware version and more. You can also update your system by clicking on System update from this menu.

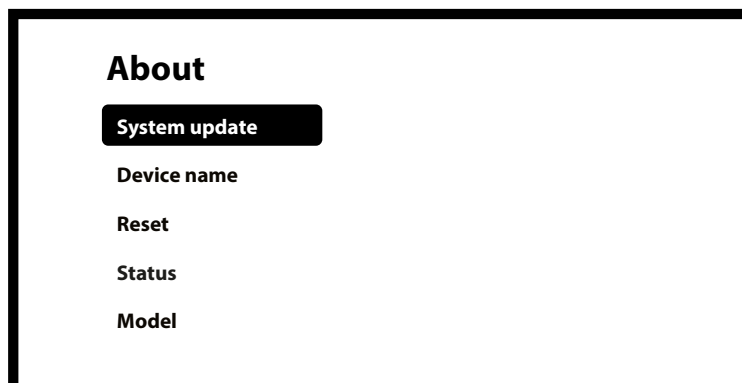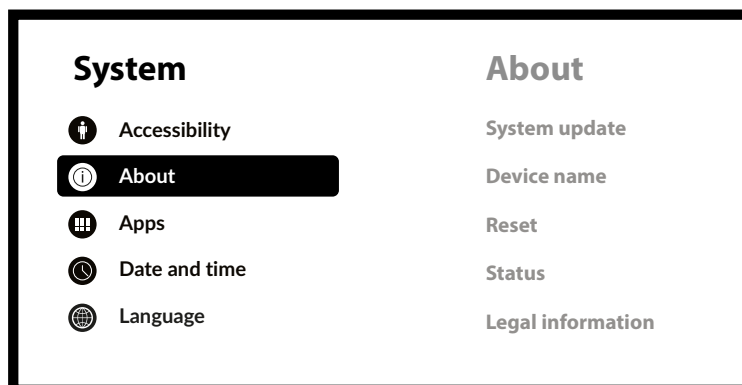

6.0 DOWNLOADING APPS

Apps are available for download on the Google Play Store. Select "Search" and type name or press microphone and tell name.

7.0 GOOGLE CAST

Cast from a Mobile Device

Certain apps allow you to cast to your TV. To cast, simply follow the following steps:

Open a Google cast compatible app on your mobile device

Navigate to the screen you wish to cast

Cast from Google Chrome

This device has Google Cast built-in. To cast from Google Chrome, click the Settings icon []: located on the top right corner of the browser, then click "Cast".

8.0 GOOGLE ASSISTANT

Say it to Play it

Ask it to play your favorite show, video, or music. Or find the latest blockbuster to enjoy.

Movies & TV shows:

Play Stranger Things on Netflix. Video clips: Play cat videos. Apps: Open YouTube. Search: Search for sitcoms.

Info: Tell me about Game of Thrones.

Control

Playback: Pause. Stop. Resume Volume: Louder. Softer. Power: Turn off.

Play music, news, or podcasts

Music: Play music by Sia. (Learn how to choose your music service provider.)

News: Play the news. What's the latest news from BBC?

Ask Google

 
Sports: How did the Patriots do? When is the next Warriors game?

Calculations: What's 20% of 80?

Dictionary: What does "ludic" mean?

Find answers: How far away is the moon? How do you remove stains in arug?

Unit conversions: How many teaspoons in a cup?

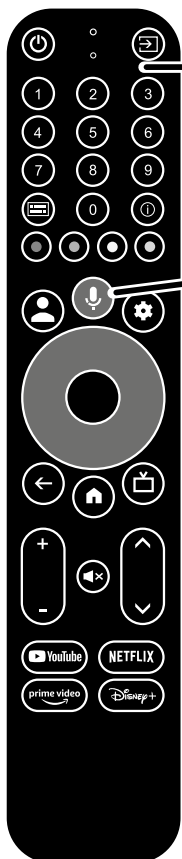

Speak into the microphone of your Voice Search remote.
Learn more about the Google Assistant on assistant.google.com or say "What can you do?" Just ask question like: "How is the weather in Paris?"

To get started, press the Google Assistant button on your remote.

NOTE: To be able to use Google Assistant on your remote, you must first pair your Bluetooth Remote to your TV Stick.

9.0 SIMPLE TROUBLESHOOTING

Issue	Possible Reason	Solution
No LED of menu display after power on	The power adapter is not properly connected	Make Sure the device is connected to the power
No Sound	The Tv is on Mute or volume is low. The device is on Mute or the volume is too low.	1. Press the mute button to restore the sound and increase the volume.
Failed to connect to network	Wi-Fi is turned off or the signal is too weak.	Restart the Wi-Fi or adjust the position of the device closer to the router.
Remote Control Failure	Remote control is broken or the batteries are low in power. Lost pairing	Replace batteries or send the device to the local maintenance service station for checking. Wait until pair screen appears, pair.
No Picture on Screen	Wrong TV HDMI input.	Make sure that correct HDMI is selected as your TV input
Voice search on remote is not working	Remote is not paired to the Google TV Stick	See the Pairing Bluetooth Device section in this guide
No Audio	Audio Settings not configured correctly for your TV	Settings> Display & Sound > Advanced sound settings

10.0 TECHNICAL SPECIFICATIONS

Video decoder

Aspect ratio:	16:9, Auto/Full screen
Video resolution:	2160p, 1080p, 720p, 4Kp60 10-bit H.265, 4Kp60 VP9 Profile 2, 4Kp30 H.264
Video format	HDR, HDR10, HDR10+, HLG, H.264/AVC, H.265/HEVC, AV1, VP9 Profile-2

Audio decoder

Audio decoding:	MPEG Audio Layers 1, 2 & 3, MPEG-4 Audio, AAC LC, AAC LC + SBR Level 2, AAC 5.1, HE AAC Level 2 & Level 4, Dolby Digital MS12, Dolby ATMOS Passthrough
-----------------	--------------------------------------------------------------------------------------------------------------------------------------------------------

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

System & Memory

Operation system:	Android™ 11 for Google TV™
Chipset:	Amlogic S905X2
CPU:	Quad Core ARM Cortex-A53, 1.8 GHz
GPU:	Quad Core ARM Mali-G31@1800 MHz
SDRAM:	DDR4: 2 GB
Flash:	eMMC: 8 GB

Connectors

HDMI
Micro USB port

General data

Wi-Fi:	IEEE 802.11b/g/n, 2.4 GHz IEEE 802.11a/n/ac, 5 GHz
Bluetooth:	5
Power supply:	AC 100 - 240 V AC, 50/60 Hz
Input voltage:	DC 5 V, 1 A
Power consumption working:	3 W (max.)
Operating temperature range:	0 ~ +45 °C
Storage temperature:	-10 ~ +70 °C
Dimensions (W x D x H) in mm:	98x30x15
Weight:	44 g

Data Protection:

Please be aware that STRONG, its manufacturing partners, the application providers and the providers of the services may collect and use technical data and related information, including but not limited to technical information about this device, system and application software and peripherals. STRONG, its manufacturing partners, the application providers and the providers of the services may use such information to improve its products or to provide services or technologies to you, as long as it is in a form that does not personally identify you.

Additionally, please keep in mind that some services provided - already in the device or installed by you - may request a registration for which you have to provide personal data.

Beside that, please be aware that some services which are not pre-installed but can be installed may collect personal data even without providing additional warnings and that STRONG cannot be held liable for a possible breach of data protection by services not pre-installed.

* Availability of apps depending on the country. STRONG cannot be held liable for services by third parties. Offers by third parties may be changed or removed at any time, may not be available in all regions and may require a separate subscription.