


STEP 1 CABLE SETUP

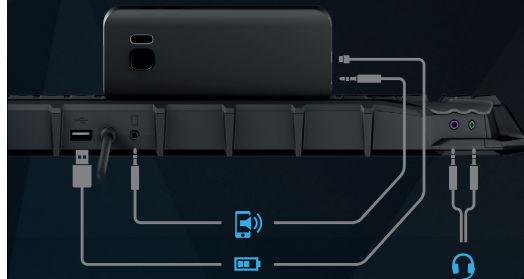

EASY DEVICE INTEGRATION

HANDLE CALLS *Works via audio cable*

Take smartphone calls through your headset with the call button.

MANAGE AUDIO

Hop between receiving PC and device audio through your connected headset.

TYPE TO DEVICE *Works via Bluetooth*

Quickly switch back and forth between PC and device input typing.

OPEN / CLOSE SWARM

Hit the Swarm button to quicklaunch the feature-rich Swarm software in an instant.

WHAT'S ROCCAT® SWARM?



Swarm provides computer to smartphone integration for Skeltr. PC side it offers a software suite and an overview of all your ROCCAT® device settings. Smartphone side it's an extension of the computer software, letting you quicklaunch games, configure illumination options, check your APM, your GPU/CPU temperatures – and more.



STEP 2 CONNECT YOUR DEVICE



Press the button and hold for 2s.
The Bluetooth status LED will start flashing and the Skeltr will be visible on your smartphone or tablet as an available Bluetooth device to connect to.



DE ANLEITUNG

1. Schließe beide USB-Stecker der Skeltr an zwei USB-Anschlüsse Deines PC's an.
2. Schließe die Audiokabel der Skeltr an Deinen PC an.
3. Starte Deinen Rechner und stelle eine Internetverbindung her.
4. Rufe im Browser www.roccat.org/swarm auf und lade die neueste Swarm-Version herunter.
5. Installiere Swarm mithilfe des Installationsprogramms.

DK INSTRUKTIONER

1. Sæt Skeltr'ens to USB-stik i to ledige USB-porte i pc'en.
2. Slut Skeltr'ens lyd kabler til pc'en.
3. Tænd computeren, og opret forbindelse til nettet.
4. Gå til www.roccat.org/swarm i browseren, og download den nyeste version af Swarm.
5. Installer Swarm ved at følge fremgangsmåden trin for trin.

EN INSTRUCTIONS

1. Plug the Skeltr's two USB connectors into any two free USB ports on your PC.
2. Connect the Skeltr's audio cables to your PC.
3. Start your computer and connect to the internet.
4. Navigate to www.roccat.org/swarm in your browser and download the latest version of Swarm.
5. Install Swarm by following the installer's step-by-step instructions.

ES INSTRUCCIONES

1. Enchufa los 2 conectores USB del Skeltr a 2 puertos USB cualesquiera de tu PC.
2. Conecta los cables de audio del Skeltr a tu PC.
3. Enciende tu equipo y conéctate a Internet.
4. Dirígete a www.roccat.org/swarm en tu navegador y descarga la última versión de Swarm.
5. Instala Swarm siguiendo las instrucciones paso a paso del instalador.

FI OHJEET

1. Liitä Skeltrin kaksi USB-liitäntä PC:n vapaana oleviin USB-portteihin.
2. Liitä Skeltrin audiokaapelit PC:hen.
3. Käynnistä tietokoneesi ja yhdistä internetiin.
4. Mene osoitteeseen www.roccat.org/swarm ja lataa viimeisin Swarm-ohjelmisto.
5. Asenna Swarm-ohjelmisto seuraamalla asennusohjelman ohjeita.

FR INSTRUCTIONS

1. Branchez les deux connecteurs USB du Skeltr sur deux ports USB libres de votre PC.
2. Connectez les câbles audio du Skeltr à votre PC.
3. Démarrez votre ordinateur et connectez-vous à Internet.
4. Rendez-vous sur www.roccat.org/swarm via votre navigateur, et téléchargez la dernière version de Swarm.
5. Installez Swarm en suivant les instructions pas-à-pas du programme d'installation.

PL INSTRUKCJA

1. Podłącz dwa złącza USB urządzenia Skeltr do dowolnych dwóch gniazd USB w komputerze.
2. Podłącz przewód audio urządzenia Skeltr do komputera.
3. Włącz komputer i połącz się z internetem.
4. Przeglądaj na stronie www.roccat.org/swarm i pobierz najnowszą wersję oprogramowania Swarm.
5. Zainstaluj oprogramowanie Swarm, postępując zgodnie ze wskazówkami programu instalacyjnego.

PT INSTRUÇÕES

1. Liga os dois conectores USB do Skeltr a duas portas USB do teu PC.
2. Liga os cabos áudio do Skeltr ao teu PC.
3. Inicia o teu computador e liga-te à Internet.
4. Vai até www.roccat.org/swarm no teu navegador e transfere a mais recente versão do Swarm.
5. Segue as instruções passo a passo para instalares o Swarm.

RU ИНСТРУКЦИИ

1. Подключите два разъема USB Skeltr к любым свободным USB-портам вашего ПК.
2. Подключите звуковые кабели Skeltr к ПК.
3. Включите компьютер и подключитесь к сети интернет.
4. Откройте адрес www.roccat.org/swarm в вашем браузере и загрузите последнюю версию Swarm.
5. Установите Swarm, следуя инструкциям мастера установки.

SE INSTRUKTIONER

1. Anslut Skeltrns två USB-kontakter till två lediga USB-portar på din dator.
2. Anslut Skeltrns ljudkablar till datorn.
3. Starta datorn och anslut till den Internet.
4. Gå till www.roccat.org/swarm i webbläsaren och ladda ner den senaste versionen av Swarm.
5. Installera Swarm genom att följa installationsprogrammet.



CONGRATULATIONS!

You are now the proud owner of a ROCCAT® Skeltr! The Skeltr smart communication RGB gaming keyboard significantly expands your command power by putting your smartphone or tablet right at the heart of your gameplay experience. No longer does your phone lie on your desk unused while you're busy gaming, the Skeltr seamlessly integrates its wealth of powerful features into your computer usage, leaving you wondering how you gamed without it.

MANAGE AUDIO AND CALLS

Use the included audio cable to plug your smartphone into the Skeltr, then hook up your favorite headset, and you're good to go. Take calls through your headset and toggle PC/device audio rapidly.

TYPE TO DEVICE VIA BLUETOOTH

Tired of picking up your phone to respond to a WhatsApp message while you're gaming? Connect your phone to the Skeltr via Bluetooth and respond to messages with your keyboard – no stress.

ROCCAT® SWARM

Swarm is the software incarnation of ROCCAT's future ready philosophy. It'll cover you for all relevant gaming platforms and devices. It's the next-gen system that keeps on top all games, apps and ROCCAT products in one place.



QUICK-INSTALLATION GUIDE IMPORTANT DOCUMENT

MASTER WORLDS.



ROC-12-2XX-BK / ROC-12-2XX-GY / ROC-12-2XX-WE



© 2015 ROCCAT GmbH. All rights reserved. Any product names mentioned in this manual may be trademarks or registered trademarks and are the property of their respective owners. Information contained herein is subject to change without notice. ROCCAT GmbH shall not be made liable for any errors that may appear in this manual. This publication or parts of it may not be reproduced without the express consent of the publisher.

ROCCAT GmbH
Paul-Deussau-Str. 3G, 22761 Hamburg, Germany

SPECIFICATIONS

PACKAGE CONTAINS

- ROCCAT® Skeltr – Smart Communication RGB Gaming Keyboard
- 1 × adapter cable for audio/mic
- 1 × micro-USB to USB for phone data/charging
- ROCCAT® Sticker
- Quick-installation guide
- Disposal information

SYSTEM REQUIREMENTS

- Windows® 7 32/64 bit
- Windows® 8
- Windows® 10
- USB 2.0 port (or better)
- Internet connection (for driver installation)


TECH SPECS

- 3 thumbster keys + 5 macro keys
- Macro live! Recording
- EasyShift[+]™ with 20-key EasyZone
- ROCCAT® Talk™
- Media & hotkeys
- Bluetooth V3.0
- 1.8m braided cable
- 512kB memory + 32-bit Arm IC
- 1000Hz Polling
- Membrane keys (anti-ghosting optimized)

Federal Communication Commission Interference statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

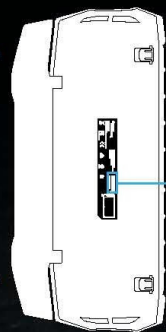

PLEASE USE YOUR PRODUCT'S SERIAL NUMBER
(LOCATED ON THE BOTTOM LABEL)
TO CHECK ITS AUTHENTICITY AT:
WWW.ROCCAT.ORG/SUPPORT/AUTHENTICITY-CHECK

WWW.ROCCAT.ORG/SUPPORT

Our support team is ready to help with any technical questions.
Just send an e-mail to support@roccat.org. Or visit our website at:

Should you need assistance ...

