


4.1. System Disassembly Procedures

Please refer to the disassembly procedures of the GM7BG0M




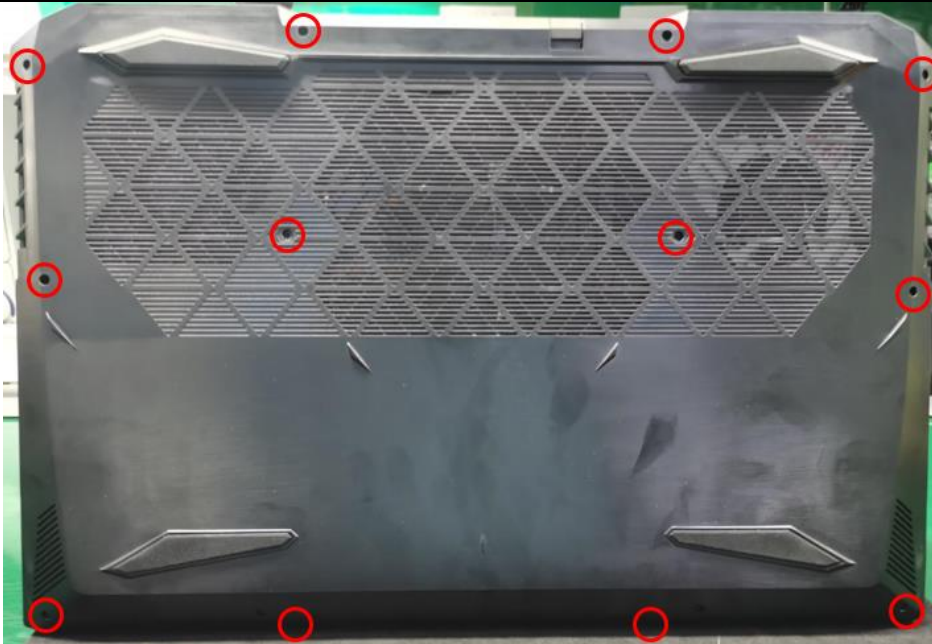

1. Unfasten twelve screws and take out the bottom cabinet.

electric screw driver torq values:
2.0±0.2 kgf.cm
1# screwdriver bit



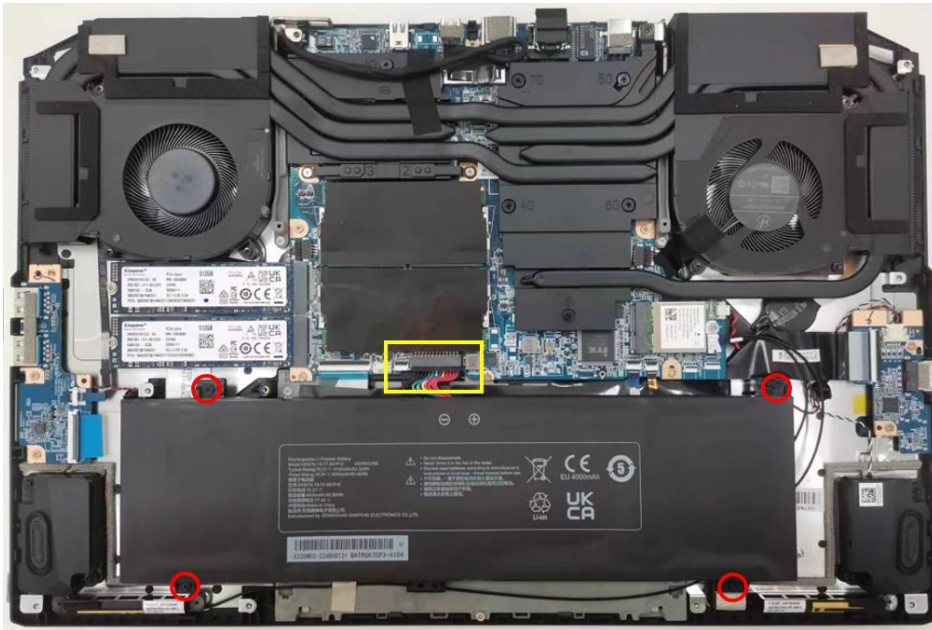

2. Unfasten Battery cable and Unfasten four battery screws then pull out the battery.

electric screw driver torq values:
2.0±0.2 kgf.cm
1# screwdriver bit




3. Unfasten three screws disconnect the wlan antenna. take out the SSD,WLAN

electric screw driver torq values:
1.6±0.2 kgf.cm
1# screwdriver bit




4. Unlock the RAM and take out the RAM. Unfasten fourteen screws of the FAN and the thermal module. Disconnect the cable of the Fan then remove them

electric screw driver torq values:
2.0±0.2 kgf.cm
1# screwdriver bit

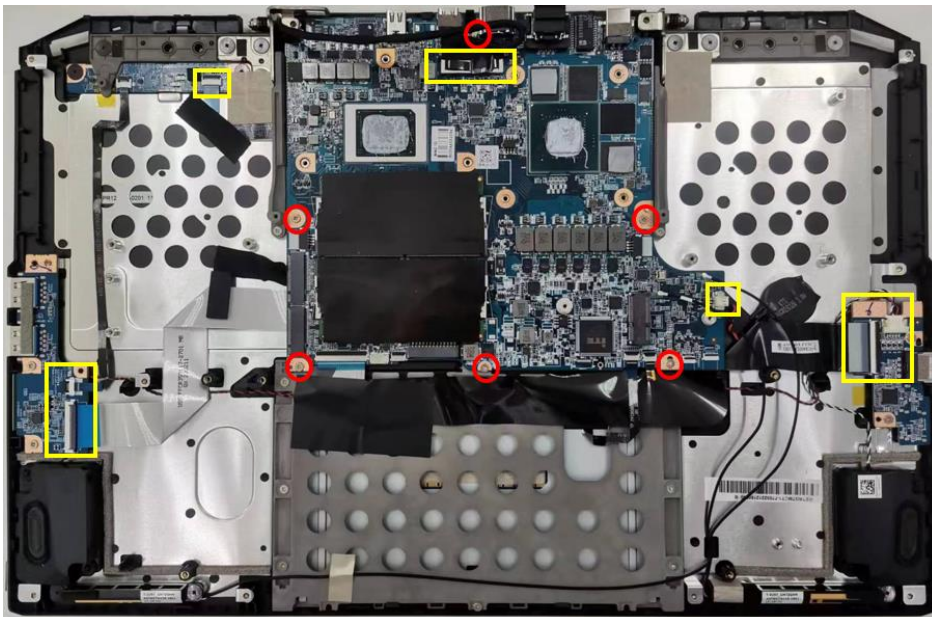


5. Unfasten six screws & cable, take out the M/B

electric screw driver torq values:
1.6±0.2 kgf.cm
1# screwdriver bit

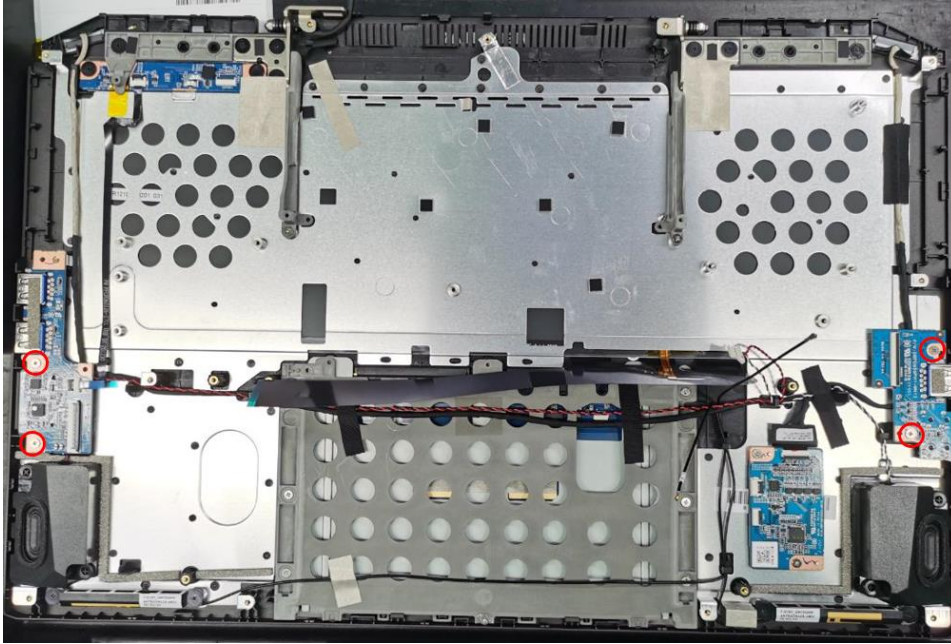

6. Unfasten four screws & cable. Then take out the USB board & audio board

electric screw driver torq values:
1.6±0.2 kgf.cm
1# screwdriver bit

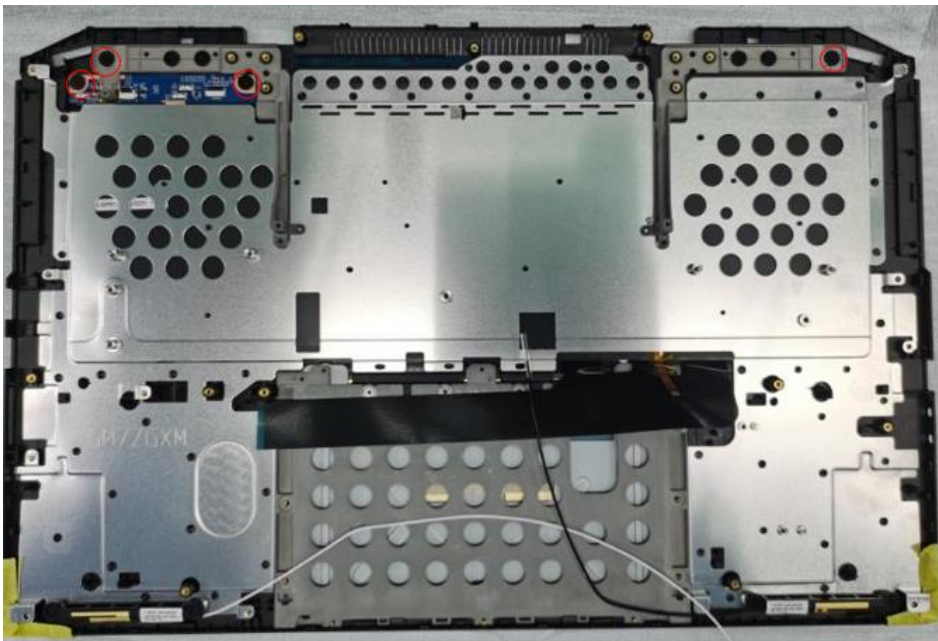

7. Unfasten four screws & cable. Then take out the Power board

electric screw driver torq values:
2.0±0.2 kgf.cm
1# screwdriver bit