



**THE DISPLAY CHOICE
OF PROFESSIONALS™**

displays.agneovo.com

PM-48 LED-Backlit Display
User Manual

TABLE OF CONTENTS

SAFETY INFORMATION	1
Federal Communications Commission (FCC) Notice (U.S. Only)	1
CE	1
Polish Center for Testing and Certification Notice	2
Electric, Magnetic and Electromagnetic Fields ("EMF")	2
Information for U.K. only	3
North Europe (Nordic Countries) Information	4
End-of-Life Disposal	5
Waste Electrical and Electronic Equipment-WEEE	5
Turkey RoHS	6
Ukraine RoHS	6
PRECAUTIONS	7
Cautions When Setting Up	7
Cautions When Using	8
Cleaning and Maintenance	8
Notice for the LCD Display	9
CHAPTER 1: PRODUCT DESCRIPTION.....	10
1.1 Unpacking	10
1.2 Package Contents	10
1.3 Preparing for the Installation	11
1.4 Wall Mounting Installation.....	11
1.4.1 VESA Grid	12
1.4.2 Ventilation Requirements for Enclosure Locating.....	12
1.5 Using the Remote Sensor and Power Status Indicator	13
1.6 LCD Display Overview	14
1.6.1 Control Panel.....	14
1.6.2 Input/Output Terminals	15
1.7 Remote Control	16
1.7.1 General Functions	16
1.7.2 Inserting the Batteries in the Remote Control	17
1.7.3 Handling the Remote Control	17
1.7.4 Operating Range of the Remote Control.....	17
CHAPTER 2: MAKING CONNECTIONS.....	18
2.1 Connecting the Power	18
2.2 Connecting a Computer	19
2.2.1 Using VGA Input	19
2.2.2 Using DVI Input	19
2.2.3 Using HDMI Input	20
2.3 Connecting External Equipment (DVD/VCR/VCD).....	21
2.3.1 Using COMPONENT Video Input	21
2.3.2 Using Video Source Input.....	21
2.3.3 Using HDMI Video Input	22

TABLE OF CONTENTS

2.4 Connecting Audio Equipment	22
2.4.1 Connecting an External Audio Device	22
2.5 Connecting Multiple Displays in a Daisy-chain Configuration	23
2.5.1 Display Control Connection	23
2.6 IR Connection	24
2.7 IR Pass-Through Connection	24
2.8 Connecting to Wired Network	25
CHAPTER 3: USING THE LCD DISPLAY	26
3.1 Turning on the Power	26
3.2 Selecting the Input Source Signal	26
3.3 Adjusting the Volume	27
3.4 Changing the Picture Format	27
3.5 Choosing Your Preferred Picture Settings	28
3.6 Choosing Your Preferred Sound Settings	28
3.7 Playing Multimedia Files via Local Area Network	29
3.7.1 Set Up the Network	29
3.7.2 How to Use DLNA-DMP	30
3.7.3 How to Use DLNA-DMR from PC	31
3.8 Playing Multimedia Files from USB Device	32
3.9 Play Options	34
3.9.1 Playing Music Files	34
3.9.2 Playing Movie Files	35
3.9.3 Playing Photo Files	36
CHAPTER 4: ON SCREEN DISPLAY MENU	37
4.1 Using the OSD Menu	37
4.2 OSD Menu Tree	39
CHAPTER 5: ADJUSTING THE LCD DISPLAY	41
5.1 Picture Settings	41
5.2 Sound Settings	45
5.3 General Settings	46
5.4 Network Settings	52
CHAPTER 6: APPENDIX	54
6.1 Warning Messages	54
6.2 USB Device Compatibility	55
6.3 Supported Resolution	58
6.4 Cleaning	59
6.5 Troubleshooting	60
CHAPTER 7: SPECIFICATIONS	61
7.1 Display Specifications	61
7.2 Display Dimensions	62
7.2.1 PM-48 Dimensions	62

SAFETY INFORMATION

Federal Communications Commission (FCC) Notice (U.S. Only)



This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Use only an RF shielded cable that was supplied with the display when connecting this display to a computer device.

To prevent damage which may result in fire or shock hazard, do not expose this appliance to rain or excessive moisture.

THIS CLASS A DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE CAUSING EQUIPMENT REGULATIONS.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CE



WARNING: This equipment is compliant with Class A of EN55032/CISPR 32. In a residential environment this equipment may cause radio interference.

SAFETY INFORMATION

Polish Center for Testing and Certification Notice

The equipment should draw power from a socket with an attached protection circuit (a three-prong socket). All equipment that works together (computer, display, printer, and so on) should have the same power supply source.

The phasing conductor of the room's electrical installation should have a reserve short-circuit protection device in the form of a fuse with a nominal value no larger than 16 amperes (A).

To completely switch off the equipment, the power supply cable must be removed from the power supply socket, which should be located near the equipment and easily accessible.

A protection mark "B" confirms that the equipment is in compliance with the protection usage requirements of standards PN-93/T-42107 and PN-89/E-06251.

Wymagania Polskiego Centrum Badań i Certyfikacji

Urządzenie powinno być zasilane z gniazda z przyłączonym obwodem ochronnym (gniazdo z kołkiem). Współpracujące ze sobą urządzenia (komputer, monitor, drukarka) powinny być zasilane z tego samego źródła.

Instalacja elektryczna pomieszczenia powinna zawierać w przewodzie fazowym rezerwową ochronę przed zwarciami, w postaci bezpiecznika o wartości znamionowej nie większej niż 16A (amperów).

W celu całkowitego wyłączenia urządzenia z sieci zasilania, należy wyjąć wtyczkę kabla zasilającego z gniazda, które powinno znajdować się w pobliżu urządzenia i być łatwo dostępne.

Znak bezpieczeństwa "B" potwierdza zgodność urządzenia z wymaganiami bezpieczeństwa użytkowania zawartymi w PN-93/T-42107 i PN-89/E-06251.

Pozostałe instrukcje bezpieczeństwa

- Nie należy używać wtyczek adapterowych lub usuwać kołka obwodu ochronnego z wtyczki. Jeżeli konieczne jest użycie przedłużacza to należy użyć przedłużacza 3-żyłowego z prawidłowo połączonym przewodem ochronnym.
- System komputerowy należy zabezpieczyć przed nagłymi, chwilowymi wzrostami lub spadkami napięcia, używając eliminatora przepięć, urządzenia dopasowującego lub bezzakłóceńowego źródła zasilania.
- Należy upewnić się, aby nie leżało na kablach systemu komputerowego, oraz aby kable nie były umieszczone w miejscu, gdzie można byłoby na nie nadeptywać lub potykać się o nie.
- Nie należy rozlewać napojów ani innych płynów na system komputerowy.
- Nie należy wpychać żadnych przedmiotów do otworów systemu komputerowego, gdyż może to spowodować pożar lub porażenie prądem, poprzez zwarcie elementów wewnętrznych.
- System komputerowy powinien znajdować się z dala od grzejników i źródeł ciepła. Ponadto, nie należy blokować otworów wentylacyjnych. Należy unikać kładzenia luźnych papierów pod komputer oraz umieszczania komputera w ciasnym miejscu bez możliwości cyrkulacji powietrza wokół niego.


Electric, Magnetic and Electromagnetic Fields ("EMF")

- We manufacture and sell many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.
- One of our leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.
- We are committed to develop, produce and market products that cause no adverse health effects.
- We confirm that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.
- We play an active role in the development of international EMF and safety standards, enabling us to anticipate further developments in standardization for early integration in its products.

SAFETY INFORMATION

Information for U.K. only

WARNING - THIS APPLIANCE MUST BE EARTHED.

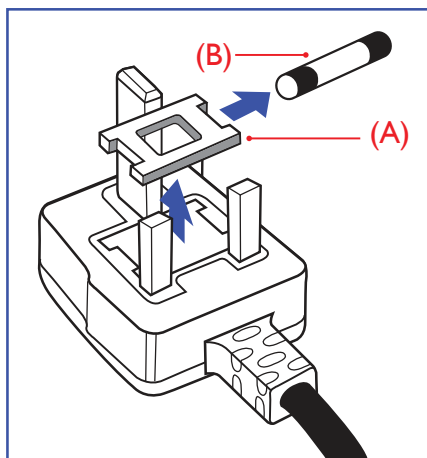

Important:

This apparatus is supplied with an approved moulded 13A plug. To change a fuse in this type of plug proceed as follows:

- 1 Remove fuse cover and fuse.
- 2 Fit new fuse which should be a BS 1362 5A, A.S.T.A. or BSI approved type.
- 3 Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate 3-pin plug fitted in its place.


If the mains plug contains a fuse, this should have a value of 5A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.



Note:

The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

SAFETY INFORMATION

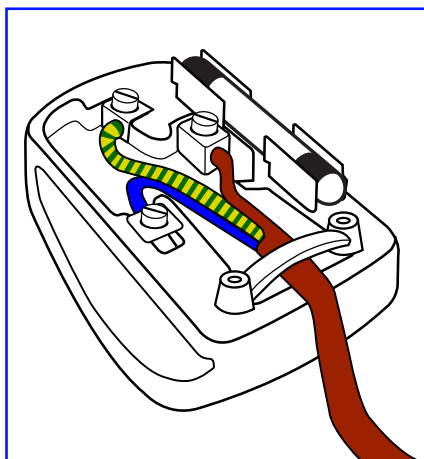

How to connect a plug

The wires in the mains lead are coloured in accordance with the following code:

BLUE - "NEUTRAL" ("N")

BROWN - "LIVE" ("L")

GREEN & YELLOW - "EARTH" ("E")

- The GREEN & YELLOW wire must be connected to the terminal in the plug which is marked with the letter "E" or by the Earth symbol or coloured GREEN or GREEN & YELLOW.
- The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
- The BROWN wire must be connected to the terminal which marked with the letter "L" or coloured RED.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the three wires.

North Europe (Nordic Countries) Information

Placering/Ventilation

VARNING: FÖRSÄKRA DIG OM ATT HUVUDBRYTARE OCH UTTAG ÄR LÄTÅTKOMLIGA, NÄR DU STÄLLER DIN UTRUSTNING PÅ PLATS.

Placering/Ventilation

ADVARSEL: SØRG VED PLACERINGEN FOR, AT NETLEDNINGENS STIK OG STIKKONTAKT ER NEMT TILGÆNGELIGE.

Paikka/Ilmankierto

VAROITUS: SIJOITA LAITE SITEN, ETTÄ VERKKOJOHTO VOIDAAN TARVITTAESSA HELPOSTI IRROTTAA PISTORASIESTA.

Plassering/Ventilasjon

ADVARSEL: NÅR DETTE UTSTYRET PLASSERES, MÅ DU PASSE PÅ AT KONTAKTENE FOR STØMTILFØRSEL ER LETTE Å NÅ.

SAFETY INFORMATION

End-of-Life Disposal

Your new Public Information Display contains materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount to be disposed of.


Please find out about the local regulations on how to dispose of your old display from your local dealer.

(For customers in Canada and U.S.A.)

This product may contain lead and/or mercury. Dispose of in accordance to local-state and federal regulations. For additional information on recycling contact www.eia.org (Consumer Education Initiative).

Waste Electrical and Electronic Equipment-WEEE

Attention users in European Union private households

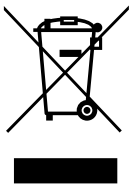

This marking on the product or on its packaging illustrates that, under European Directive 2012/19/EU governing used electrical and electronic appliances, this product may not be disposed of with normal household waste. You are responsible for disposal of this equipment through a designated waste electrical and electronic equipment collection. To determine the locations for dropping off such waste electrical and electronic, contact your local government office, the waste disposal organization that serves your household or the store at which you purchased the product.

Attention users in United States:

Please dispose of according to all Local, State and Federal Laws. For the disposal or recycling information, contact: www.mygreenelectronics.com or www.eiae.org.

End of Life Directives-Recycling



Your new Public Information Display contains several materials that can be recycled for new users.


Please dispose of according to all Local, State, and Federal laws.

Restriction on Hazardous Substances statement (India)

This product complies with the "India E-waste Rule 2011" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

SAFETY INFORMATION

E-Waste Declaration for India

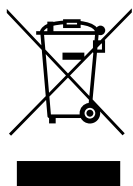

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

Batteries



For EU: The crossed-out wheeled bin implies that used batteries should not be put to the general household waste! There is a separate collection system for used batteries, to allow proper treatment and recycling in accordance with legislation.

Please contact your local authority for details on the collection and recycling schemes.

For Switzerland: The used battery is to be returned to the selling point.

For other non-EU countries: Please contact your local authority for correct method of disposal of the used battery.

According to EU directive 2006/66/EC, the battery can't be disposed improperly. The battery shall be separated to collect by local service.

Turkey RoHS

Türkiye Cumhuriyeti: EEE Yönetmeliğine Uygundur.

Ukraine RoHS

Обладнання відповідає вимогам Технічного регламенту щодо обмеження використання деяких небезпечних речовин в електричному та електронному обладнанні, затвердженого постановою Кабінету Міністрів України від 3 грудня 2008 № 1057.

PRECAUTIONS



Symbols used in this manual

	This icon indicates the existence of a potential hazard that could result in personal injury or damage to the product.
	This icon indicates important operating and servicing information.

Notice

- Read this User Manual carefully before using the LCD display and keep it for future reference.
- The product specifications and other information provided in this User Manual are for reference only. All information is subject to change without notice. Updated content can be downloaded from our web site at displays.agneovo.com.
- To register online, go to displays.agneovo.com.
- To protect your rights as a consumer, do not remove any stickers from the LCD display. Doing so may affect the determination of the warranty period.

Cautions When Setting Up

- Do not place the LCD display near heat sources, such as a heater, exhaust vent, or in direct sunlight.
- Do not cover or block the ventilation holes in the housing.
- Place the LCD display on a stable area. Do not place the LCD display where it may subject to vibration or shock.
- Place the LCD display in a well-ventilated area.
- Do not place the LCD display outdoors.
- To avoid the risk of shock or permanent damage to the set, do not expose the display to dust, rain, water or an excessively moist environment.
- Do not spill liquid or insert sharp objects into the LCD display through the ventilation holes. Doing so may cause accidental fire, electric shock or damage the LCD display.

PRECAUTIONS

Cautions When Using

- Use only the power cord supplied with the LCD display.
- The power outlet should be installed near the LCD display and be easily accessible.
- If an extension cord is used with the LCD display, ensure that the total current consumption plugged into the power outlet does not exceed the ampere rating.
- Do not allow anything to rest on the power cord. Do not place the LCD display where the power cord may be stepped on.
- If the LCD display will not be used for an indefinite period of time, unplug the power cord from the power outlet.
- To disconnect the power cord, grasp and pull by the plug head. Do not tug on the cord; doing so may cause fire or electric shock.
- Do not unplug or touch the power cord with wet hands.
- When turning off the display by detaching the power cord, wait 6 seconds before re-attaching the power cord for normal operation.
- Do not knock or drop the display during operation or transportation.

Cleaning and Maintenance

- To protect your display from possible damage, do not put excessive pressure on the LCD panel. When moving your display, grasp the frame to lift; do not lift the display by placing your hand or fingers on the LCD panel.
- Unplug the display if you need to clean it with a slightly damp cloth. The screen may be wiped with a dry cloth when the power is off. However, never use organic solvent, such as, alcohol, or ammonia-based liquids to clean your display.
- If your display becomes wet, wipe it with dry cloth as soon as possible.
- If a foreign substance or water gets in your display, turn the power off immediately and disconnect the power cord. Then remove the foreign substance or water, and send the unit to the maintenance center.
- In order to maintain the best performance of your display and ensure a longer lifetime, we strongly recommend using the display in a location that falls within the following temperature and humidity ranges.
 - ◆ Temperature: 5-40°C (41-104°F)
 - ◆ Humidity: 20-80% RH



Warning:



Unplug the power cord from the power outlet and refer to qualified service

personnel under the following conditions:

- ◆ When the power cord is damaged.
- ◆ If the LCD display has been dropped or the housing has been damaged.
- ◆ If the LCD display emits smoke or a distinct odor.

PRECAUTIONS

Notice for the LCD Display

- In order to maintain the stable luminous performance, it is recommended to use low brightness setting.
- Due to the lifespan of the lamp, it is normal that the brightness quality of the LCD display may decrease with time.
- When static images are displayed for long periods of time, the image may cause an imprint on the LCD display. This is called image retention or burn-in.
 - ◆ To prevent image retention, do any of the following:
 - Set the LCD display to turn off after a few minutes of being idle.
 - Use a screen saver that has moving graphics or a blank white image.
 - Execute the ANTI-BURN-IN function of the LCD display. See “General Settings, ANTI-BURN-IN” section.
 - Switch desktop backgrounds regularly.
 - Adjust the LCD display to low brightness settings.
 - Turn off the LCD display when the system is not in use.
 - ◆ Things to do when the LCD display shows image retention:
 - Turn off the LCD display for extended periods of time. It can be several hours or several days.
 - Use a screen saver and run it for extended periods of time.
 - Use a black and white image and run it for extended periods of time.
- There are millions of micro transistors inside the LCD display. It is normal for a few transistors to be damaged and to produce spots. This is acceptable and is not considered a failure.
- **IMPORTANT:** Always activate a moving screen saver program when you leave your display unattended. Always activate a periodic screen refresh application if the unit will display unchanging static content. Uninterrupted display of still or static images over an extended period may cause “burn in”, also known as “after-imaging” or “ghost imaging”, on your screen. This is a well-known phenomenon in LCD panel technology. In most cases, the “burned in” or “after-imaging” or “ghost imaging” will disappear gradually over a period of time after the power has been switched off.
- **WARNING:** Severe “burn-in” or “after-image” or “ghost image” symptoms will not disappear and cannot be repaired. This is also not covered under the terms of your warranty.

CHAPTER 1: PRODUCT DESCRIPTION

1.1 Unpacking

- This product is packed in a packaging box which contains standard accessories.
- Any other optional accessories will be packed separately.
- Considering the size and weight of the display, it is recommended that this product is carried out by two persons.
- After opening the packaging box, ensure that the included items are in good condition and complete.


1.2 Package Contents

When unpacking, check if the following items are included in the package. If any of them is missing or damaged, contact your dealer.


☐ LCD Display




☐ User Manual

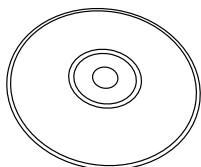


☐ Remote control

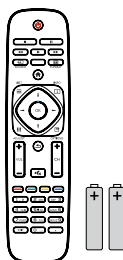


☐ Power cord

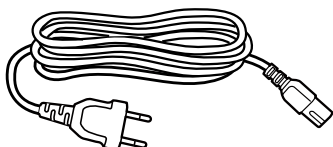


☐ RS232 daisy-chain cable

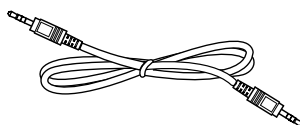

☐ RS232 cable

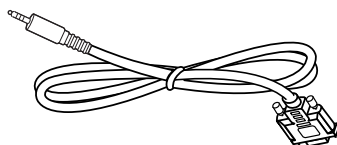

 ☐ Video signal cable (D-SUB to D-SUB cable)



Note:

- ◆ Remote control is shipped with the supplied AAA batteries.
- ◆ For all other regions, apply a power cord that conforms to the AC voltage of the power socket and has been approved by and complies with the safety regulations of the particular country.
- ◆ You might like to save the package box and packing material for shipping the display.
- ◆ The pictures are for reference only. Actual items may vary upon shipment.

PRODUCT DESCRIPTION


1.3 Preparing for the Installation

- Due to the high power consumption, always use the plug exclusively designed for this product. If an extended line is required, please consult your service agent.
- The product should be installed on a flat surface to avoid tipping. The distance between the back of the product and the wall should be maintained for proper ventilation. Avoid installing the product in the kitchen, bathroom or any other places with high humidity so as not to shorten the service life of the electronic components.
- The product can normally operate only under 5000m in altitude. In installations at altitudes above 3000m, some abnormalities may be experienced.

1.4 Wall Mounting Installation

To mount this display to a wall, you will have to obtain a standard wall-mounting kit (commercially available). We recommend using a mounting interface that complies with TUV-GS and/or UL1678 standard in North America.

To wall-mount the LCD display, screw the mounting bracket to the VESA holes at the rear of the LCD display.

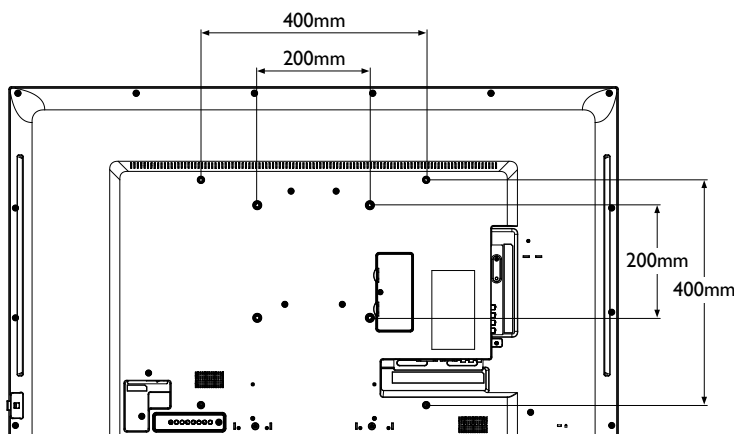

Warning:

- ◆ Do not press too hard on the LCD panel or edge of the frame, as this may cause the device to malfunction.

Note:

- ◆ Avoid the wall-mounting kit to block the ventilation holes on the back of the display.
- ◆ Secure the LCD display on a solid wall strong enough to bear its weight.
- ◆ Lay a protective sheet on a table, which was wrapped around the display when it was packaged, beneath the screen surface so as not to scratch the screen face.
- ◆ Ensure you have all accessories for mounting this display (wall mount, ceiling mount, etc).
- ◆ Follow the instructions that come with the base mounting kit. Failure to follow correct mounting procedures could result in damage to the equipment or injury to the user or installer. Product warranty does not cover damage caused by improper installation.

PRODUCT DESCRIPTION

1.4.1 VESA Grid

Model Name	VESA Grid
PM-48	200(W) x 200(H)mm / 400(W) x 400(H)mm

Caution:

To prevent the display from falling:


- ◆ For wall or ceiling installation, we recommend installing the display with metal brackets which are commercially available. For detailed installation instructions, refer to the guide received with the respective bracket.
- ◆ To lessen the probability of injury and damage resulting from fall of the display in case of earthquake or other natural disaster, be sure to consult the bracket manufacturer for installation location.

Note:

- ◆ For the wall-mounting kit, use M6 mounting screws (having a length 10 mm longer than the thickness of the mounting bracket) and tighten them securely.
- ◆ Unit without base weight=11.5 kg. The equipment and its associated mounting means still remain secure during the test. For use only with UL Listed Wall Mount Bracket with minimum weight/load: 16.7 kg.

1.4.2 Ventilation Requirements for Enclosure Locating


To allow heat to disperse, leave space between surrounding objects as shown in the diagram below.

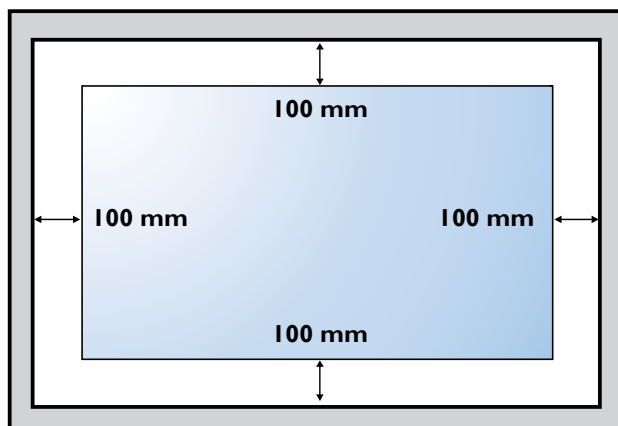


PRODUCT DESCRIPTION

1.5 Using the Remote Sensor and Power Status Indicator

- If you want to obtain a better reception of remote control function, please adjust the indicator location to easily check the power status indicator.
- If the display is mounting on the wall, please push the indicator switch inward before installation.
- When adjusting the indicator location, make sure to push/pull the indicator switch firmly until it clicks into place.

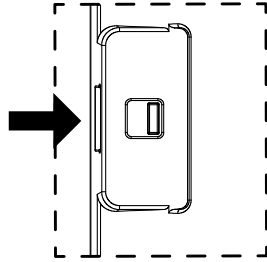

Push inward to hide the indicator

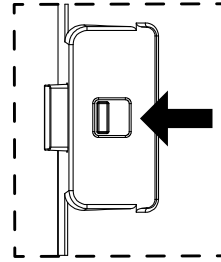


Push outward to reveal the indicator

PRODUCT DESCRIPTION

1.6 LCD Display Overview

1.6.1 Control Panel

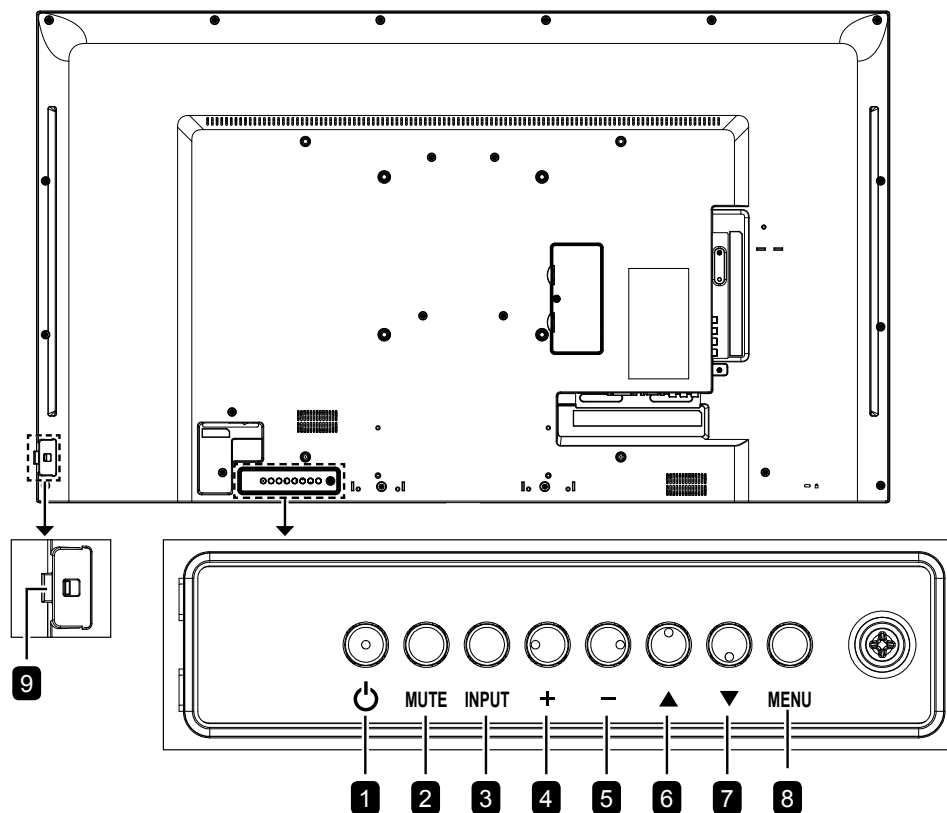

1 [Power] **Power**

Turn the display on or put the display to standby.

2 **MUTE**

Switch the audio mute ON/OFF.

3 **INPUT**

Choose the input source.

4 [++] **Increase**

- Move the highlight bar up to select an option or increase the adjustment while OSD menu is on.
- Increase the audio output level while OSD menu is off.

5 [--] **Decrease**

- Move the highlight bar down to select an option or decrease the adjustment while OSD menu is on.
- Decrease the audio output level while OSD menu is off.

6 [▲] **Up**

Confirm a selection and enter its submenu while OSD menu is on.

7 [▼] **Down**

Return to the previous menu while OSD menu is on.

8 **MENU**


- Activate the OSD menu when OSD menu is off.
- Hide the OSD menu while OSD menu is on.

9 **Remote control sensor and power status indicator**

- Receive command signals from the remote control.
- Indicate the operating status of the display:
 - Lights green when the display is turned on
 - Lights red when the display is in standby mode
 - Lights off when the main power of the display is turned off

PRODUCT DESCRIPTION

1.6.2 Input/Output Terminals

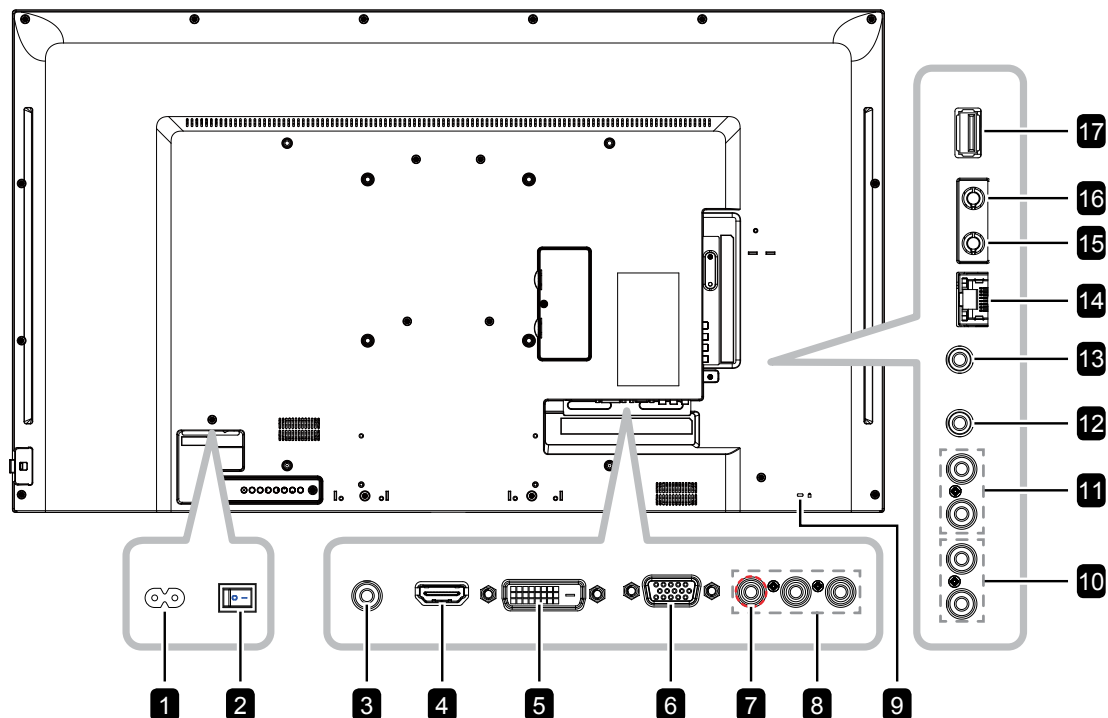

1 AC IN

AC power input from the wall outlet.

2 Main power switch

Switch the main power on/off.

3 PC LINE IN

Audio input for PC source (3.5mm stereo phone).

4 HDMI IN

HDMI video/audio input.

5 DVI IN

DVI-D video input.

6 VGA IN (D-Sub)

VGA video input.

7 Y/CVBS

Video source input.

8 COMPONENT IN

Component YPbPr video source input.

9 SECURITY LOCK

Used for security and theft prevention.

10 AUDIO IN

Audio input from external AV device (RCA).

11 AUDIO OUT

Audio output to external AV device.

12 IR IN/ IR OUT

& IR signal input / output for the loop-through function.

Note:

- ◆ This display's remote control sensor will stop working if the [IR IN] jack is connected.
- ◆ To remotely control your A/V device via this display, refer to page 24 for IR Pass-Through connection.

14 RJ45

LAN control function for the use of remote control signal from the control center.

15 RS232 IN/ RS232 OUT

& RS232 network output / input for the loop-through function.


17 USB PORT

Connect your USB storage device.

PRODUCT DESCRIPTION

1.7 Remote Control

1.7.1 General Functions

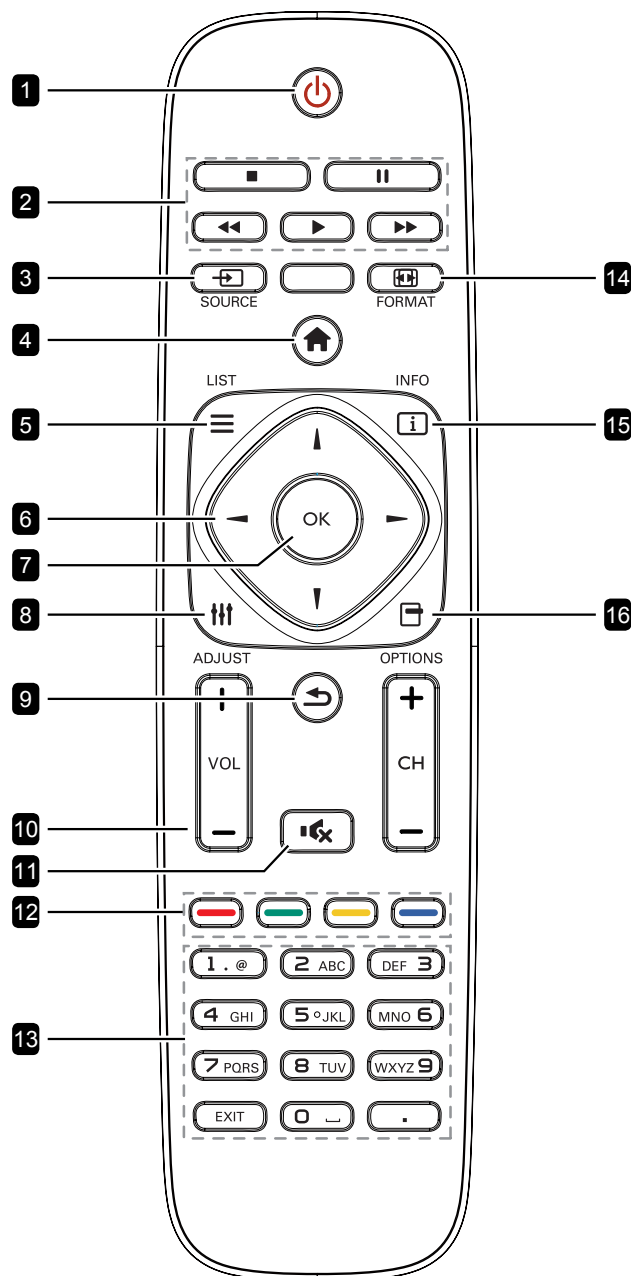

1 [POWER] POWER

Turn the display on or to put the display into standby mode.

2 [PLAY] PLAY

Control playback in multimedia mode.

3 [SOURCE] SOURCE

Choose input source. Press the ▲ or ▼ button to choose from USB, Network, HDMI, DVI, YPbPr, AV, or VGA. Press the OK button to confirm and exit.

4 [HOME] HOME

Access the OSD menu.

5 [LIST] LIST

No function.

6 [NAVIGATION] NAVIGATION buttons

Navigate through menus and choose items.

7 [OK] OK

Confirm an entry or selection.

8 [ADJUST] ADJUST

Access currently available picture and sound menus.

9 [BACK] BACK

Return to the previous menu or exit from the previous function.

10 [VOLUME] VOLUME

Adjust the volume level.

11 [MUTE] MUTE

Turn the mute function on/off.

12 [COLOUR] COLOUR

Used for USB Device or Options.

- Red: Press to play all songs in the playlist.
- Green: Press to sort the playlist.
- Yellow: Press to view the USB device.
- Blue: No function

13 [Number]

Enter text for network setting.

14 [FORMAT] FORMAT

Change the aspect ratio.

15 [INFO] INFO

View the information about the display.

16 [OPTIONS] OPTIONS

Access currently available options, picture, and sound menus.


PRODUCT DESCRIPTION

1.7.2 Inserting the Batteries in the Remote Control

The remote control is powered by two 1.5V AAA batteries.

To install or replace batteries:

- 1 Press and then slide the cover to open it.
- 2 Align the batteries according to the (+) and (-) indications inside the battery compartment.
- 3 Replace the cover.

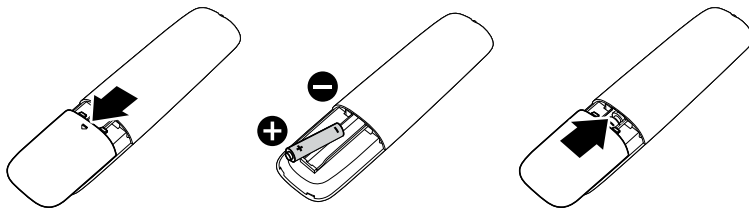


1.7.3 Handling the Remote Control

- Do not subject to strong shock.
- Do not allow water or other liquid to splash the remote control. If the remote control gets wet, wipe it dry immediately.
- Avoid exposure to heat and steam.
- Other than to install the batteries, do not open the remote control.

1.7.4 Operating Range of the Remote Control

Point the top of the remote control toward the display's remote control sensor (on the left or right side) when pressing a button.

When using the remote control, the distance from the remote control to the sensor on the display should be less than 5m/16 inches, and the horizontal and vertical angles should be less than 30°.

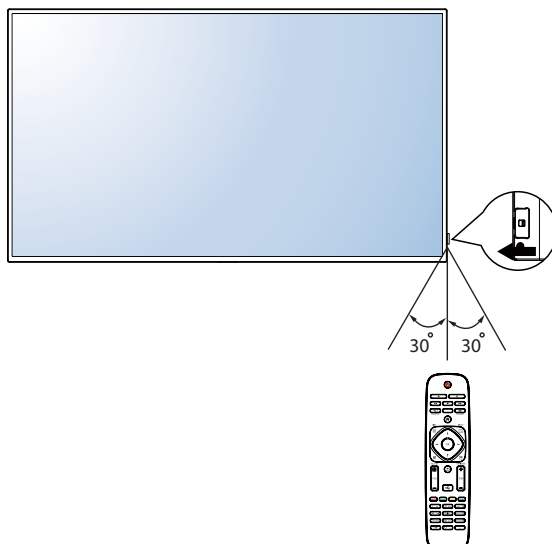

Caution:

The incorrect use of batteries can result in leaks or bursting. Be sure to follow these instructions:

- ◆ Place “AAA” batteries matching the (+) and (-) signs on each battery to the (+) and (-) signs of the battery compartment.
- ◆ Do not mix battery types.
- ◆ Do not combine new batteries with used ones. It causes shorter life or leakage of batteries.
- ◆ Remove the dead batteries immediately to prevent them from liquid leaking in the battery compartment. Don't touch exposed battery acid, as it can damage your skin.


Note:

- ◆ If you do not intend to use the remote control for a long period, remove the batteries.
- ◆ The remote control may not function properly when the remote control sensor on this display is under direct sunlight or strong illumination, or when there is an obstacle in the path of signal transmission.

CHAPTER 2: MAKING CONNECTIONS

2.1 Connecting the Power

- 1 Connect one end of the power cord to the AC IN connector at the rear of the LCD display.
- 2 Connect the other end of the power cord to a power outlet or a power supply.
- 3 Set the **Main Power** switch to ON.

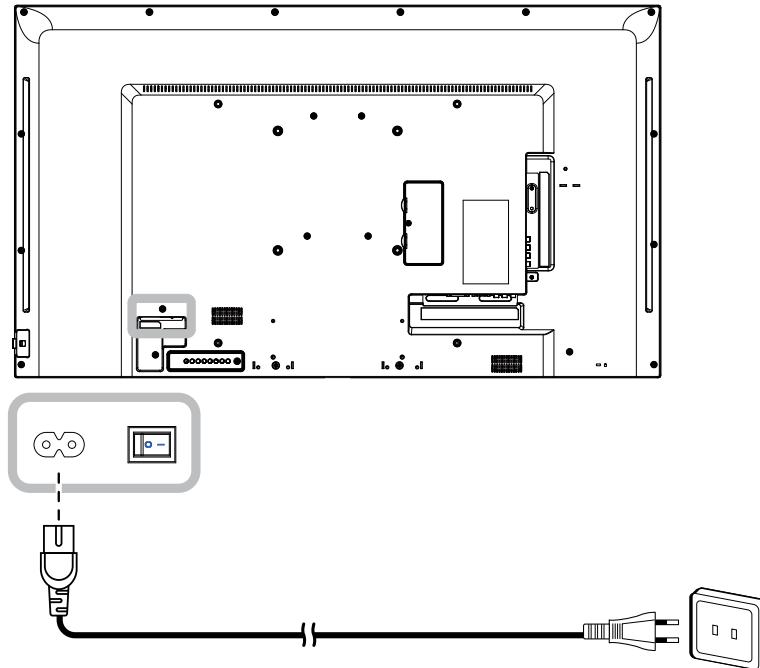

Caution:

- ◆ Make sure that the LCD display is not connected to the power outlet before making any connections. Connecting cables while the power is ON may cause electric shock or personal injury.
- ◆ When unplugging the power cord, hold the power cord by the plug head. Never pull by the cord.


MAKING CONNECTIONS

2.2 Connecting a Computer

2.2.1 Using VGA Input


Connect one end of a D-sub cable to the VGA IN connector of the LCD display and the other end of a D-sub cable to the VGA OUT (D-Sub) connector of the computer.

For audio input, connect one end of an audio cable to the AUDIO IN connector of the LCD display and the other end of an audio cable to the AUDIO OUT connector of the computer.

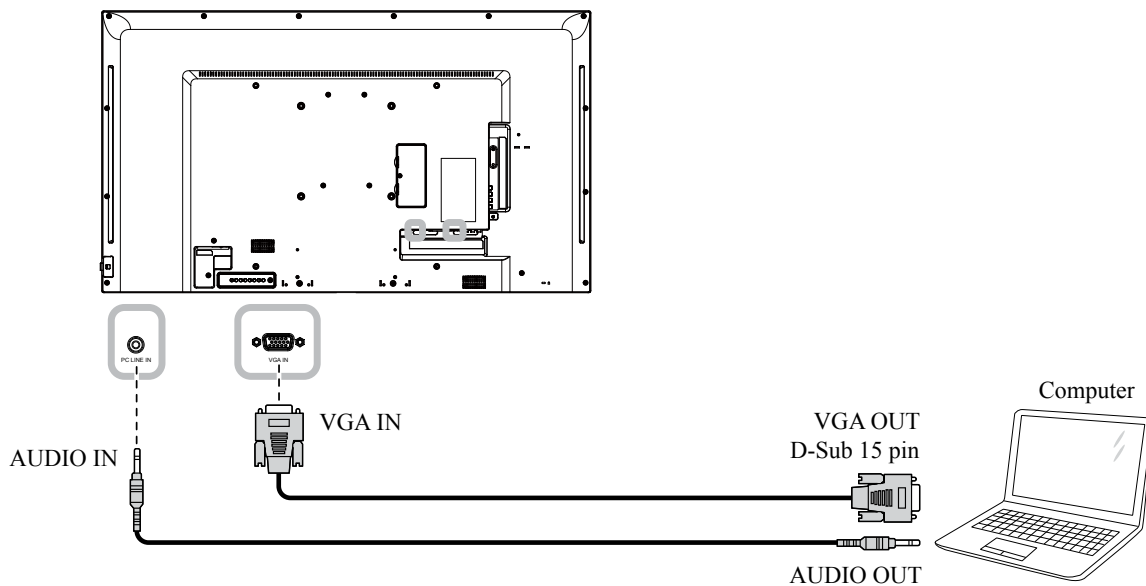

2.2.2 Using DVI Input


Connect one end of a DVI cable to the DVI IN connector of the LCD display and the other end of a DVI cable to the DVI connector of the computer.

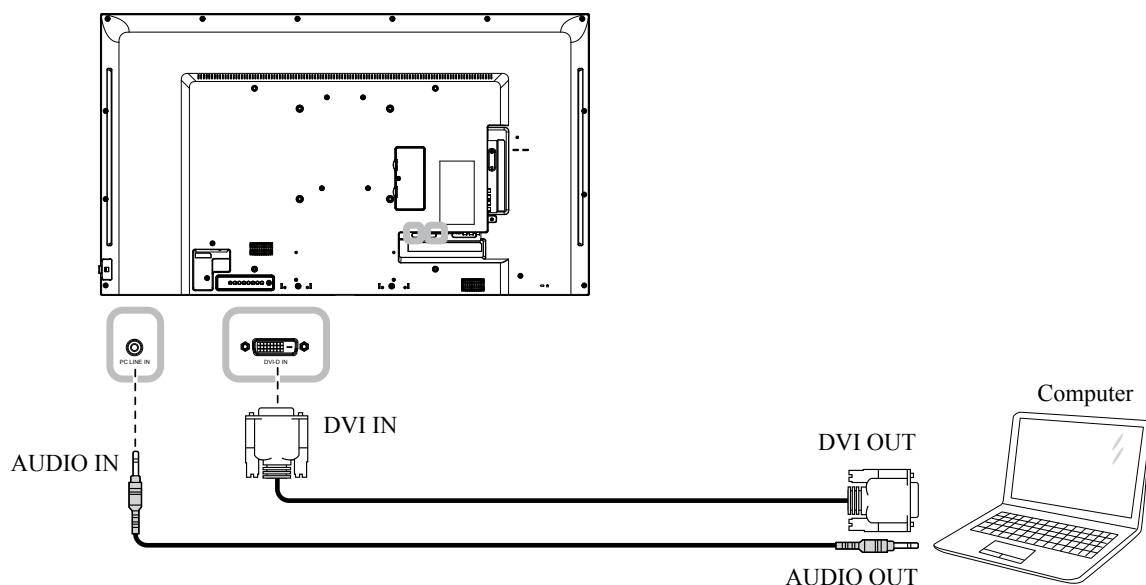

MAKING CONNECTIONS

2.2.3 Using HDMI Input

Connect one end of an HDMI cable to the HDMI IN connector of the LCD display and the other end of an HDMI cable to the HDMI OUT connector of the computer.

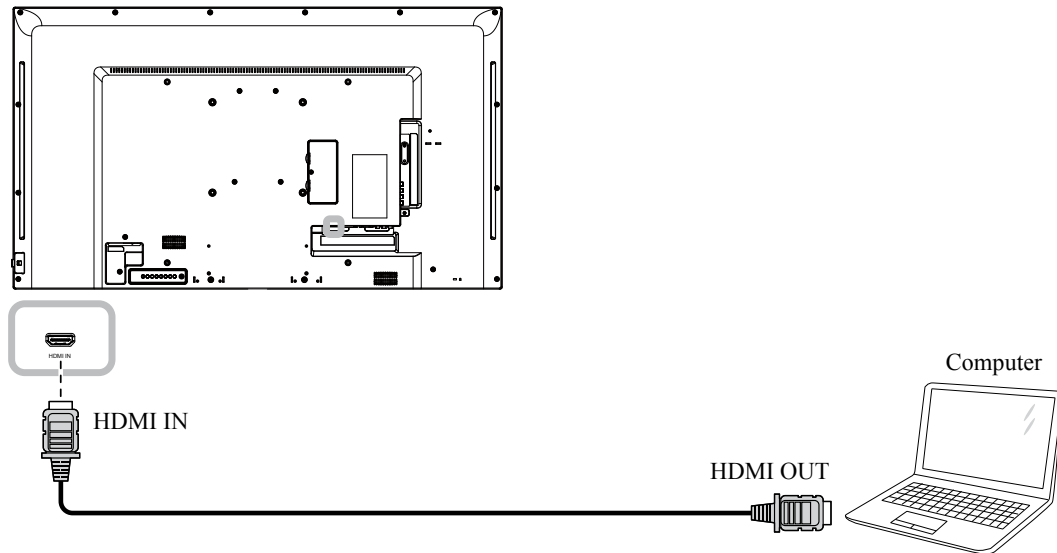


MAKING CONNECTIONS

2.3 Connecting External Equipment (DVD/VCR/VCD)

2.3.1 Using COMPONENT Video Input

Connect one end of a component cable to the COMPONENT IN connector of the LCD display and the other end of a component cable to the COMPONENT OUT connectors of the video player (DVR/VCR/VCD).


For audio input, connect one end of an audio cable to the AUDIO IN connectors of the LCD display and the other end of an audio cable to the AUDIO OUT connectors of the video player (DVR/VCR/VCD).

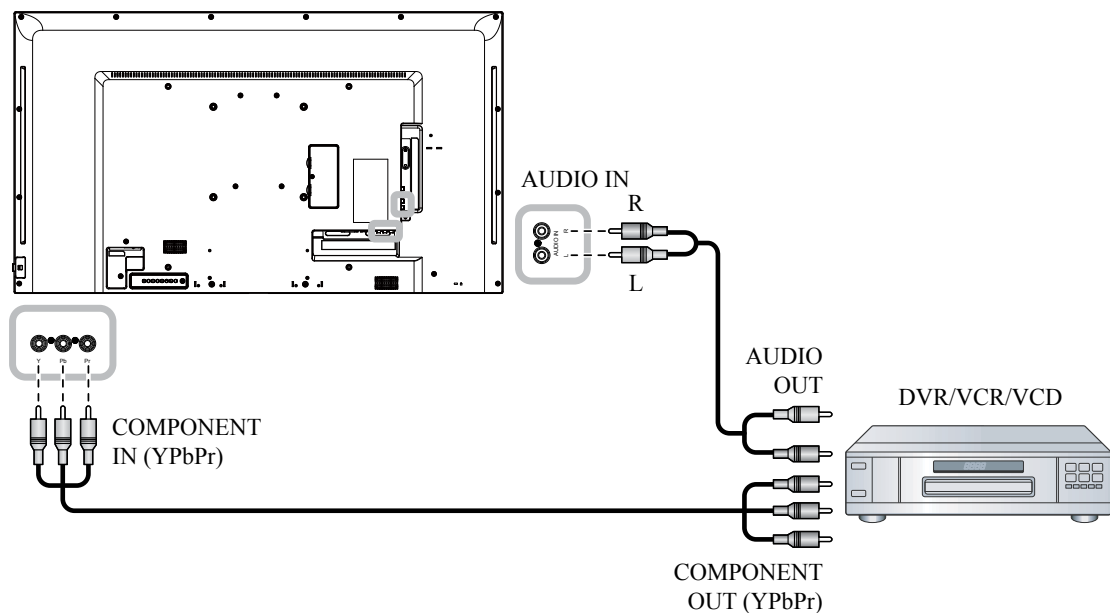

2.3.2 Using Video Source Input

Connect one end of a video cable to the Y/CVBS in port of the LCD display and the other end of a video cable to the Y/CVBS out port of the the video player (DVR/VCR/VCD).


For audio input, connect one end of an audio cable to the AUDIO IN connectors of the LCD display and the other end of an audio cable to the AUDIO OUT connectors of the video player (DVR/VCR/VCD).

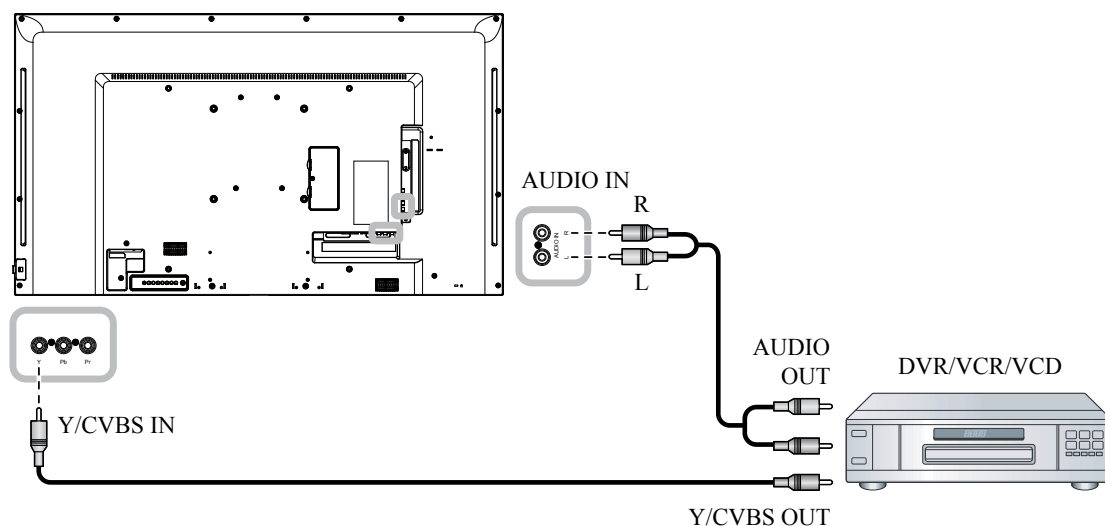

MAKING CONNECTIONS

2.3.3 Using HDMI Video Input


Connect one end of an HDMI cable to the HDMI IN connector of the LCD display and the other end of an HDMI cable to the HDMI OUT connector of the video player (DVR/VCR/VCD).

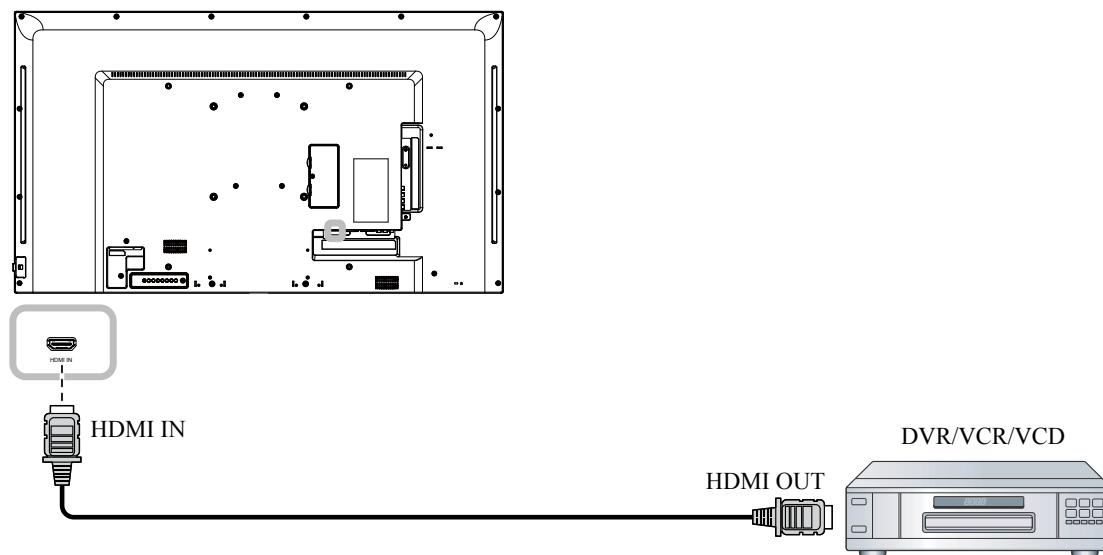

2.4 Connecting Audio Equipment

2.4.1 Connecting an External Audio Device

Connect one end of an audio cable to the AUDIO OUT connectors of the LCD display and the other end of an audio cable to the AUDIO IN connectors of the audio device.

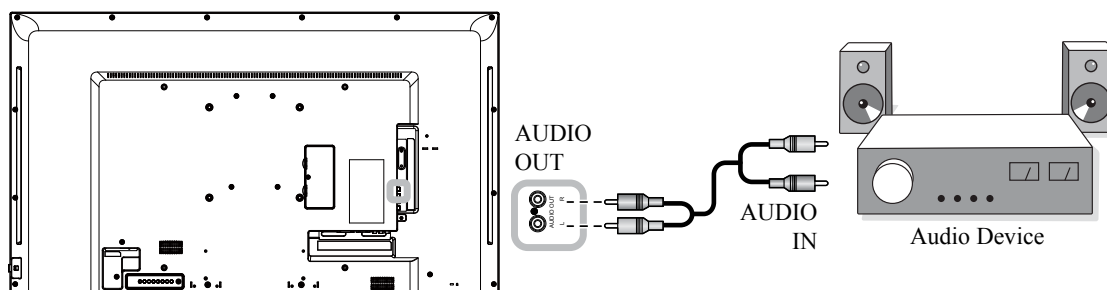


MAKING CONNECTIONS

2.5 Connecting Multiple Displays in a Daisy-chain Configuration

You can interconnect multiple displays to create a daisy-chain configuration for applications such as a video wall.


Caution:

To avoid unnecessary strain on the bezel, it is highly recommended to keep a minimum space of 0.5mm in which a business card is able to slip between all displays on all sides.

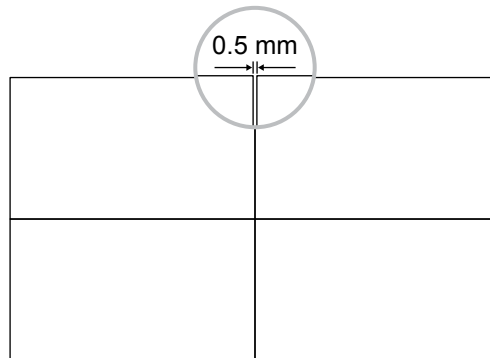

2.5.1 Display Control Connection


Connect the RS232 OUT connector of DISPLAY 1 to the RS232 IN connector of DISPLAY 2.

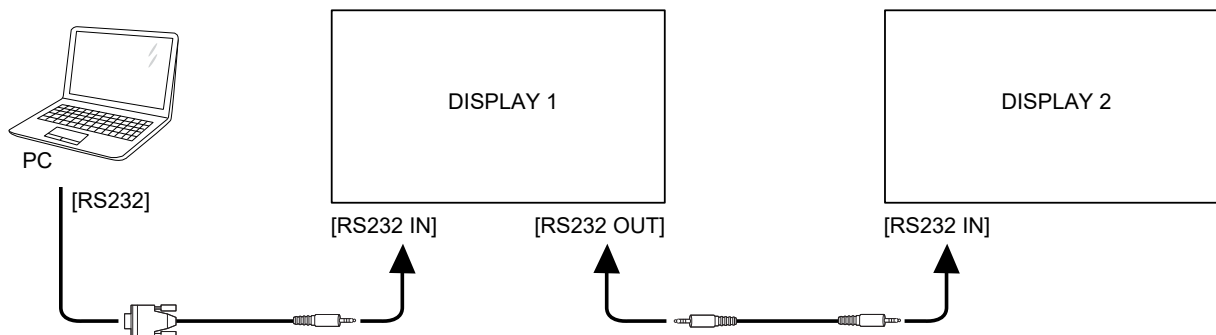

MAKING CONNECTIONS

2.6 IR Connection

Connect the IR sensor cable to the IR IN connector of the LCD display.

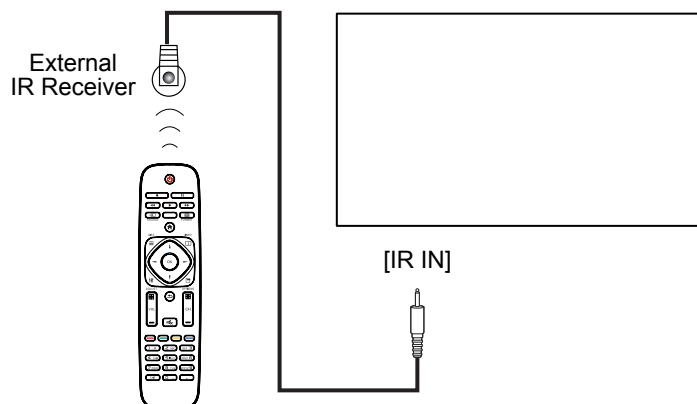


Note:

- ◆ This display's remote control sensor will stop working if the [IR IN] is connected.

2.7 IR Pass-Through Connection


Connect one end of an IR extender cable to the IR OUT connector of the LCD display and the other end of an IR extender cable to the IR IN connector of the video player (DVR/VCR/VCD).

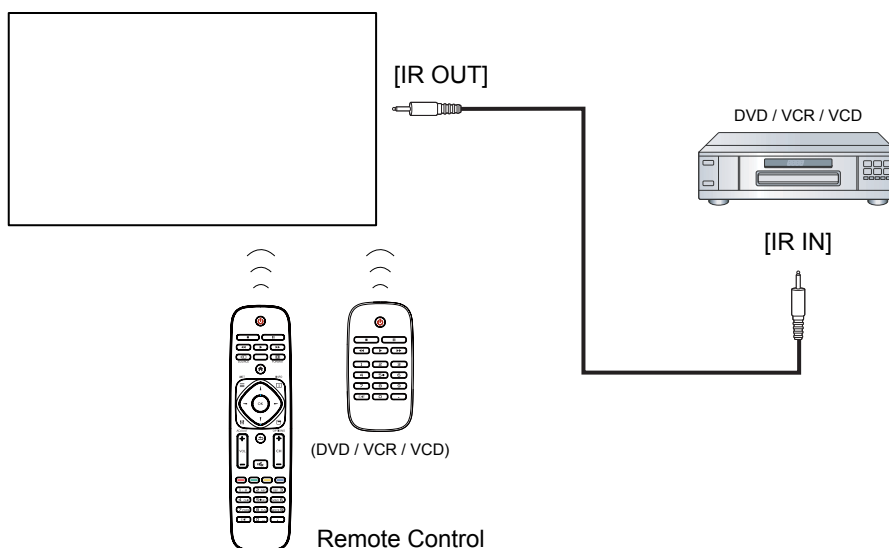

MAKING CONNECTIONS

2.8 Connecting to Wired Network

If you connect this LCD display to a home network, you can play photos, music, and videos from your computer.

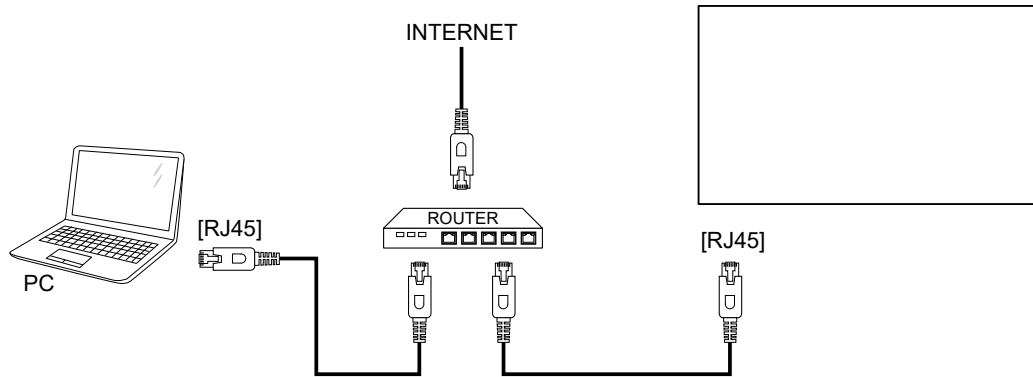

To setup the network:


- 1 Switch on the router and switch on its DHCP setting.
- 2 Connect the router to the LCD display with an Ethernet cable.
- 3 Press the **HOME** button to display the OSD menu.
- 4 Press the **▲** or **▼** button to select **Network settings**. Press the **OK** button to enter its submenu.
- 5 Press the **▲** or **▼** button to select **Network configuration**. Press the **OK** to enter its submenu.
- 6 Press the **▲** or **▼** button to select **DHCP & Auto IP**. Press the **OK** button to confirm.

Note:

- ◆ Connecting with a shielded CAT-5 Ethernet cable to comply with the EMC directive.
- ◆ To manually configure the network parameters, set the **Network configuration** setting to **Static IP**.

CHAPTER 3: USING THE LCD DISPLAY

3.1 Turning on the Power

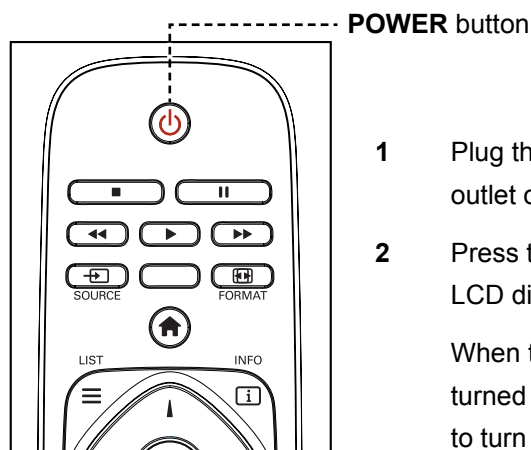


- 1 Plug the power cord to a power outlet or power supply.
- 2 Press the  button to turn the LCD display on.

When the LCD display is turned on, press the  button to turn off the LCD display.

Note:

- ◆ The LCD display still consumes power as long as the power cord is connected to the power outlet. Disconnect the power cord to completely cut off power.


3.2 Selecting the Input Source Signal

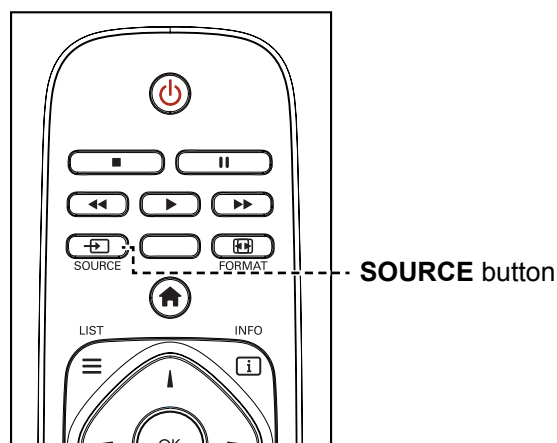

- 1 Press the  button.
- 2 Press the  or  button to choose a device, then press the OK button.

Note:

- ◆ After pressing the  button, a menu with available input sources will be displayed on the screen.

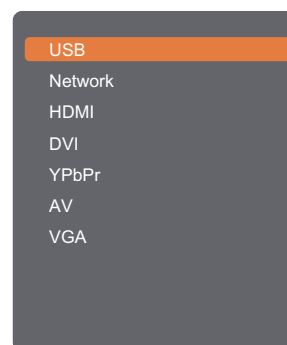


- ◆ If the selected input source signal is not connected to the LCD display or is turned off, the no signal message is displayed on the screen.

 No signal

USING THE LCD DISPLAY

3.3 Adjusting the Volume

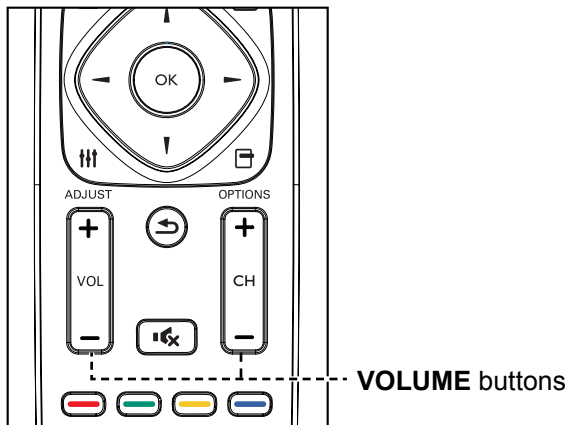

Press the — or + button to adjust the volume.


Note:

- ◆ After pressing the — or + button, the volume icon is displayed on the screen automatically.




- ◆ Press the  button to mute the audio.

3.4 Changing the Picture Format

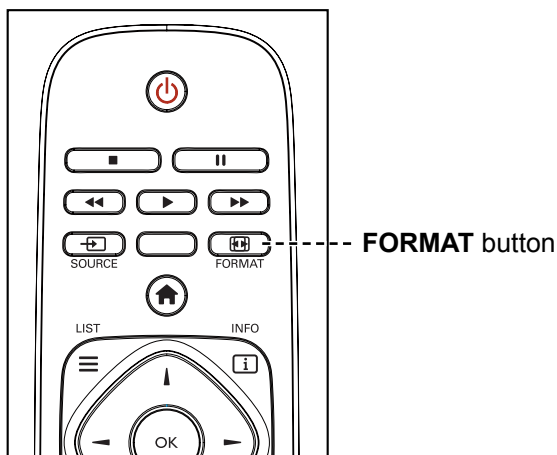

- 1 Press the  button.

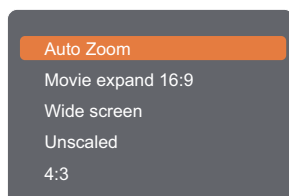

- 2 Press the ▲ or ▼ button to choose a picture format, then press the OK button.


Note:

The available picture formats include:

- ◆ **Auto zoom:** Enlarge the picture to fill the screen. Recommended for minimal screen distortion but not for HD or PC.
- ◆ **Movie expand 16:9:** Scale 4:3 format to 16:9. Not recommended for HD or PC.
- ◆ **Wide screen:** Shows wide screen format content unstretched. Not recommended for HD or PC.
- ◆ **Unscaled:** Provide maximum detail for PC. Only available when PC mode is selected in the Picture menu.
- ◆ **4:3:** Display the classic 4:3 format.

USING THE LCD DISPLAY

3.5 Choosing Your Preferred Picture Settings

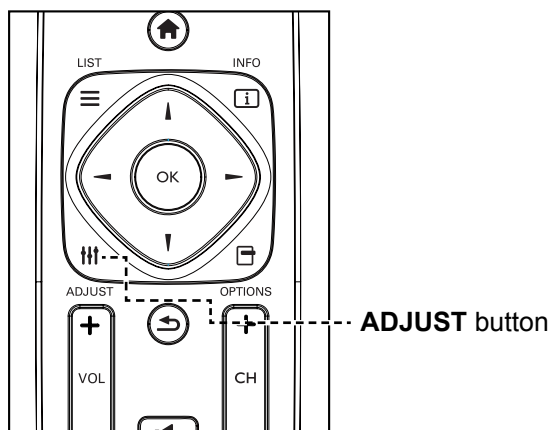

- 1 While this display is playing video source, press the button.
- 2 Press the or button to choose **Picture style**, then press the OK button.
- 3 Press the or button to choose an option, then press the OK button.


Personal
Vivid
Natural
Standard
Movie
Photo
Energy saving

Note:

The available picture styles include:

- ◆ **Personal:** Apply your personalised picture settings.
- ◆ **Vivid:** Rich and dynamic settings, ideal for daytime viewing.
- ◆ **Natural:** Natural picture settings.
- ◆ **Standard:** Default settings that suit most environments and types of video.
- ◆ **Movie:** Ideal settings for movies.
- ◆ **Photo:** Ideal settings for photos.
- ◆ **Energy saving:** Settings that conserve the most energy.

3.6 Choosing Your Preferred Sound Settings

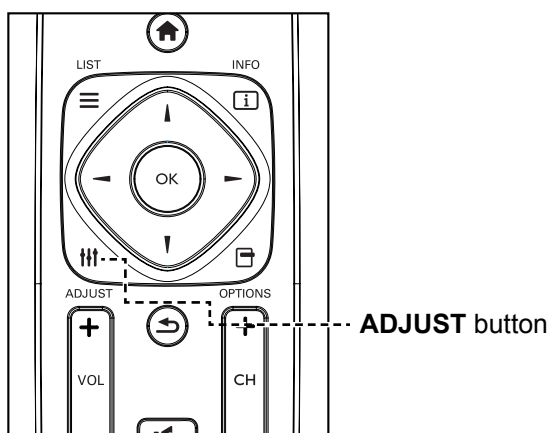

- 1 While this display is playing video source, press the button.
- 2 Press the or button to choose **Sound style**, then press the OK button.
- 3 Press the or button to choose an option, then press the OK button.

Personal
Original
Movie
Music
Game
News

Note:

The available sound settings include:

- ◆ **Personal:** Apply your personalised sound settings.
- ◆ **Original:** Settings that suit most environments and types of audio.
- ◆ **Movie:** Ideal settings for movies.
- ◆ **Music:** Ideal settings for listening to music.
- ◆ **Game:** Ideal settings for games.
- ◆ **News:** Ideal settings for spoken audio, such as the news.

USING THE LCD DISPLAY


3.7 Playing Multimedia Files via Local Area Network

To play files via Local Area Network, you will need:


- A wired home network, connected with a Universal Plug and Play (uPnP) router.
- Optional: A LAN cable that connects your display to your home network.
- A media server running on your computer.
- Appropriate settings on your computer firewall to allow you to run the media server.

3.7.1 Set Up the Network

- 1 Connect your display and the computer to the same home network. See illustration below to connect your display to a network.
- 2 Switch on your computer and the router.
 - Single display setup:

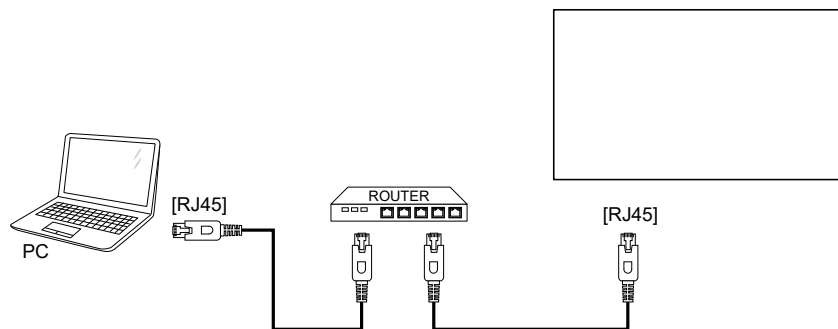

- Multiple display setup:

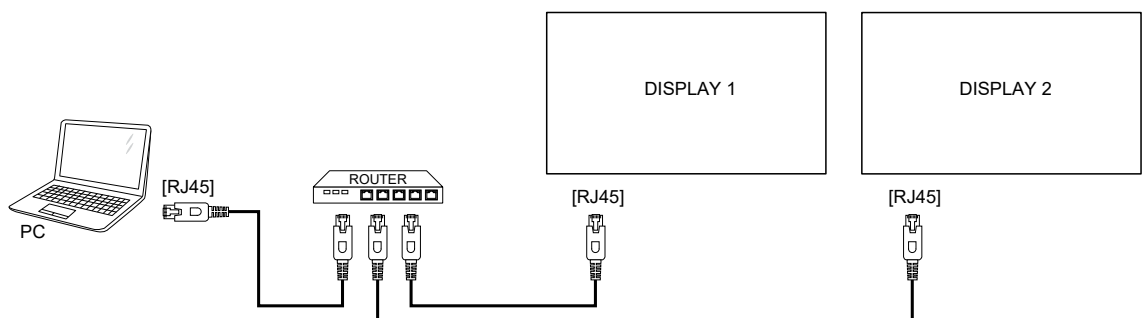

Note:

- ♦ If the apparatus does not return to DLNA mode due to external electrical disturbances (e.g. electrostatic discharge), user intervention is required.

USING THE LCD DISPLAY

Set Up Media Sharing


- 1 Install a media server on your computer to share media files. These are some media servers:
 - For PC: Windows Media Player 11 (or higher) or TVersity
 - For Mac: Twonky
- 2 Switch on media sharing on your computer using the media server. For more information on how to set up the media server, refer to the website of the media server.

3.7.2 How to Use DLNA-DMP

- 1 Please connect display and your PC to the same router via RJ45.
- 2 Run windows media player. Set stream handling as public sharing.

Play Files from Display

- 1 Press the  button, choose network and press the OK button.

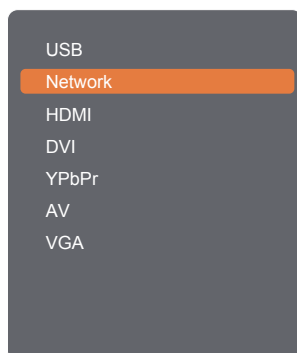


- 2 Now, you can see all the PC's connected to the same router on the screen. Choose the right one.
- 3 Press the  or  button to choose the directory and files to play.
- 4 You can connect up to 4 displays to the same PC and play same media stream.

We suggest to use DLNA-DMP function via wired network for the sake of higher security and sufficient network bandwidth.


USING THE LCD DISPLAY

3.7.3 How to Use DLNA-DMR from PC



- 1 Press the  button. Then choose **Network settings** and press the OK button.

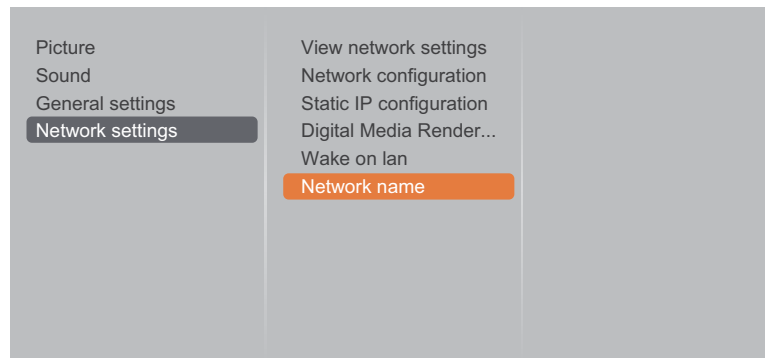

- 2 Set the **Digital Media Renderer -DMR** setting to **On**.

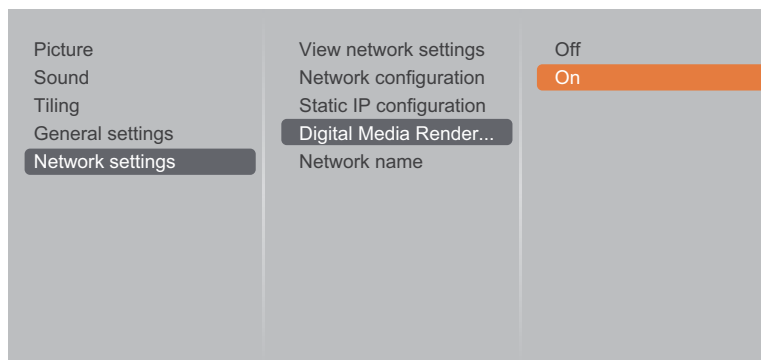

- 3 Set the name of your display.

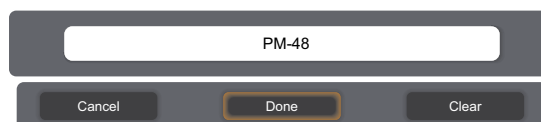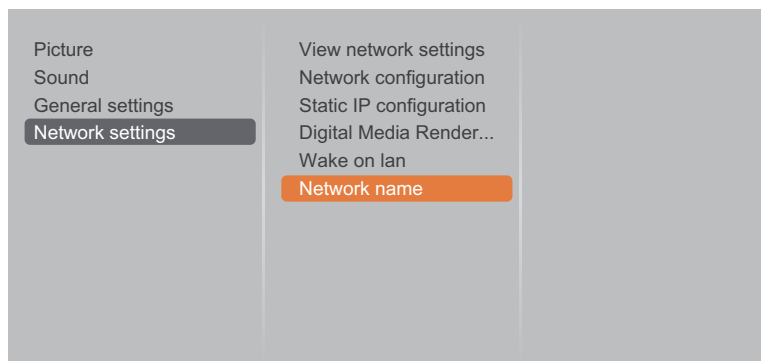

- 4 Press the  button, choose **Network** and press the OK button.
- 5 On your PC, go to **Network and Sharing Center**, and click **Choose homegroup and sharing options**.
- 6 Check the media formats. Then, click **Choose media streaming options.....**
- 7 Go to **Advanced sharing settings**, and check **Turn on network discovery**.

USING THE LCD DISPLAY

- 8 Now, go to the directory of your media files. Choose the media file by right click. On the submenu from **Play To**, You can find all displays connected to your network. Choose the display, and click the media file to play.

Play Files


- 1 Press the  button. Then choose **Network** and press the OK button.
- 2 Choose a file from the content browser, and press the OK button to start playing.
- 3 Press the **PLAY** buttons (, , , , ) on the remote control to control the media playback.

Tips:

- Choose the top bar to filter your files by type.
- Choose **Sort** to arrange the files by album name, artist, or other fields.
- To clear the list of offline media servers, press the  button. Then, choose **Clear offline servers** and press the OK button.

3.8 Playing Multimedia Files from USB Device

- 1 Connect your USB device to the USB connector on the LCD display.

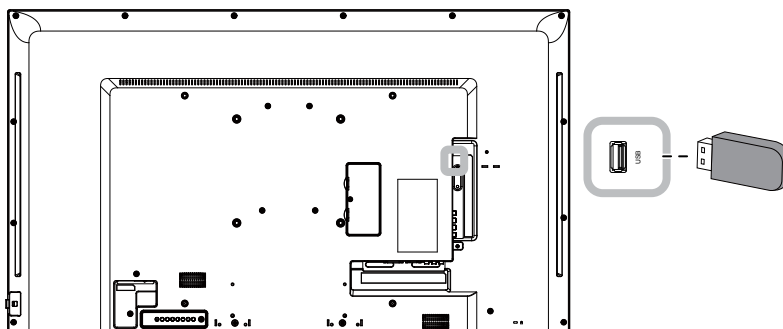


- 2 Press the  button. Then choose **USB**, and press the OK button.




USING THE LCD DISPLAY

- 3 Press the OK button to enter the USB mode.

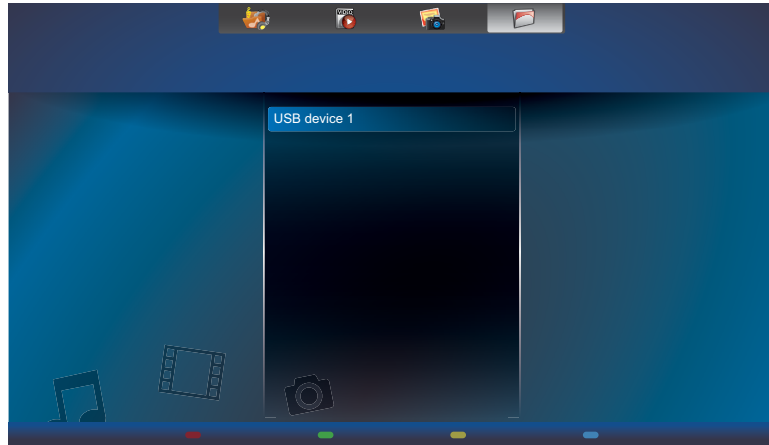

- 4 By default, it displays the files in Folder view.

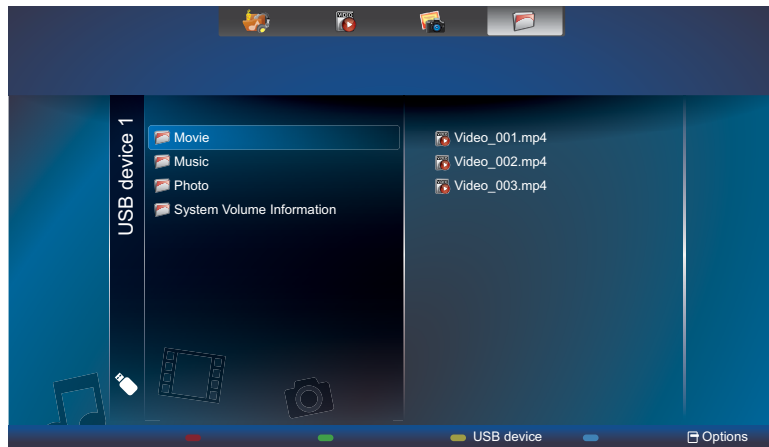

Press the **▲** button to go up the top layer in the screen. Then press the **◀** or **▶** button to select the desired file type:  Music,  Movie, and  Photo.

- 5 Press the OK button to enter its play list.
- 6 Choose the file you want. Press the OK button to start playing.
- 7 Follow the on-screen instructions to control the play option.
- 8 Press the **PLAY** buttons (**◀◀**, **▶**, **▶▶**, **■**, **||**) on the remote control to control the media playback.

USING THE LCD DISPLAY


3.9 Play Options

3.9.1 Playing Music Files

- 1 Choose  **Music** in the top bar.



- 2 Choose one music track, and press the OK button.

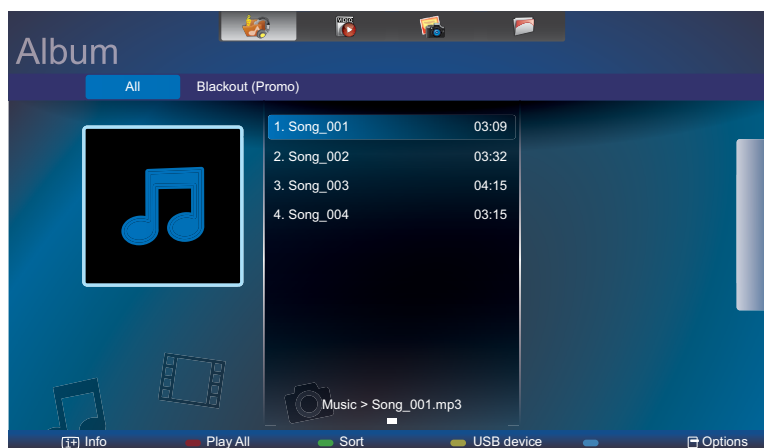

- To play all the tracks in a folder, choose one music file. Then, press the  button to **Play All**.
- To view USB device, press the  button.
- To skip to the next or previous track, press the  or  button.
- To pause the track, press the OK or  button. Press the OK or  button again to resume playback.
- To skip backward or forward 10 seconds, press the  or  button.
- To search backward or forward, press the  or  button, press repeatedly to toggle between different speeds.
- To stop the music, press the  button.

Music options

While you play music, press the  button, then use the , , , or  to choose an option. Then press the OK button to select an option:

- **Shuffle**: Enable or disable random play of tracks.
- **Repeat**: Choose **Repeat** to play a track or an album repeatedly, or choose **Play Once** to play a track once.

Note:

- ♦ To view information about a song (for example, title, artist or duration), choose the song, then press the  button. To hide the information, press the  button again.


USING THE LCD DISPLAY

3.9.2 Playing Movie Files

- 1 Choose  **Movie** in the top bar.



- 2 Choose a video, and press the OK button.

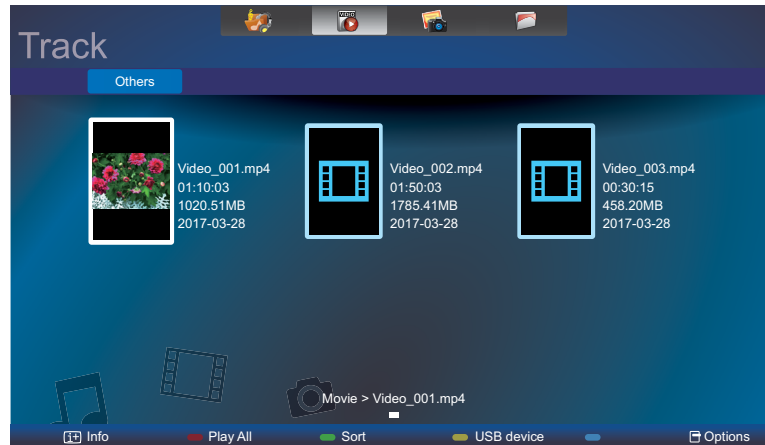

- To play all the videos in a folder, choose one video file. Then, press the  button to **Play All**.
- To view USB device, the  button.
- To pause the video, press the OK or  button. Press the OK or  button again to resume playback.
- To skip backward or forward 10 seconds, press the  or  button.
- To search backward or forward, press the  or  button, press repeatedly to toggle between different speeds.
- To stop the video, press the  button.

Movie options

While playing video, press the  button, then use , , , or  to choose an option. Then press the OK button to select an option:

- **Subtitles:** Choose the available subtitle settings.
- **Subtitle language:** Choose the language for subtitles if available.
- **Character set:** Choose a correct character set for the subtitle.
- **Audio language:** Choose an audio language.
- **Shuffle:** Enable or disable random play of video files.
- **Repeat:** Choose **Repeat** to play the video file repeatedly or **Play Once** to play the video file once.
- **Status:** To view information about a video (for example, title, size, date, or sound mode).

USING THE LCD DISPLAY

Note:

- ♦ To view information about a video (for example, play position, duration, title or date), choose the video, then press the  button. To hide the information, press the  button again.

3.9.3 Playing Photo Files

- 1 Choose  **Photo** in the top bar.



- 2 Choose a photo thumbnail, then press the OK button.



Start a Slideshow

If there are multiple photos in a folder, choose a photo. Then, press the  button to **Play All**.

- To skip to the previous or next photo, press the  or  button, and then press the OK button.
- To stop the slideshow, press the  button.




Slideshow options

While you play a slideshow, press the  button, then press the OK button to choose an option:

- **Shuffle**: Enable or disable random display of pictures in the slideshow.
- **Repeat**: Choose **Repeat** to watch a slideshow repeatedly or **Play Once** to watch once.
- **Slideshow Time**: Choose the displaying time for each photo in the slideshow.
- **Slideshow Transitions**: Choose the transition from one photo to the next.

CHAPTER 4: ON SCREEN DISPLAY MENU

4.1 Using the OSD Menu
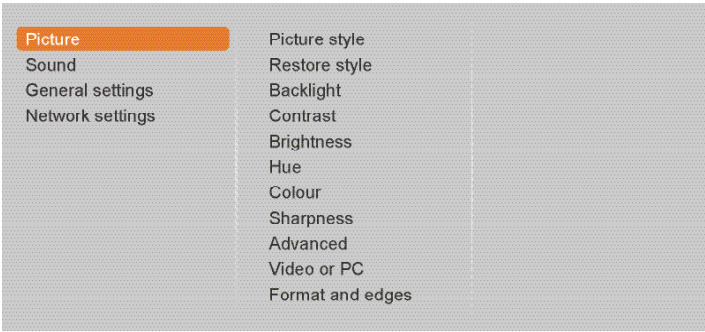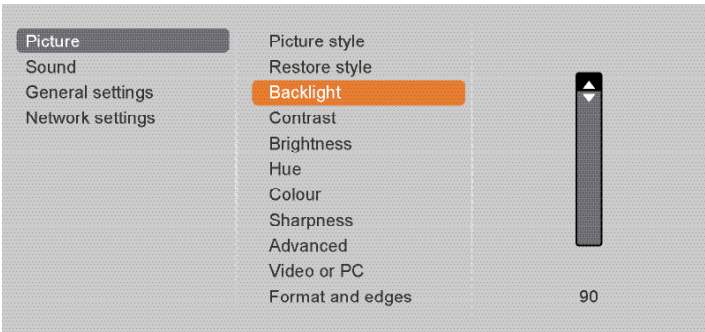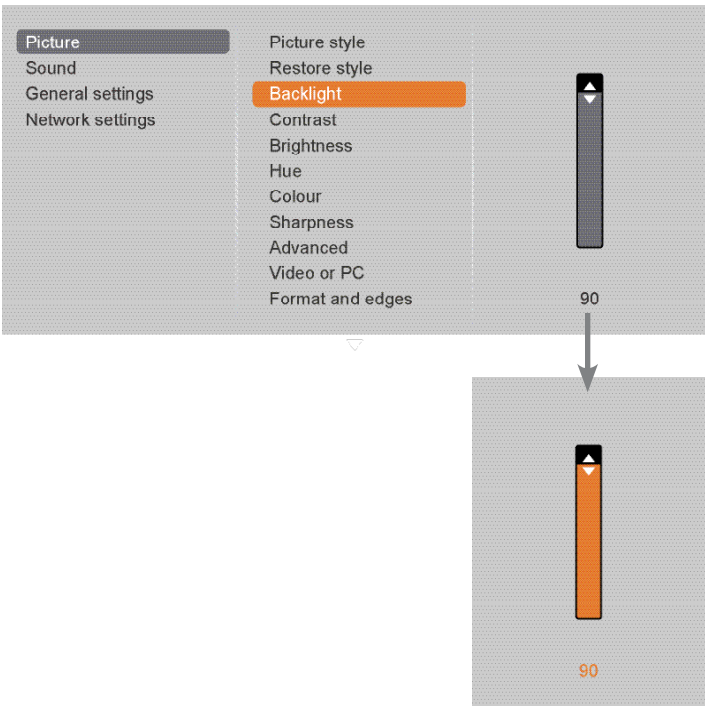
#	Menu Navigation	Operation	
		Control Panel	Remote Control
1	Display the main menu screen. 	Press the MENU button.	Press the  button.
2	Enter the submenu.  The highlighted item (orange) indicates the active submenu.	1 Press the + or - button to select the menu item. 2 Press the  button to enter the submenu.	1 Press the  or  button to select the menu item. 2 Press the  or  button to enter the submenu.
3	Adjust the settings. The highlighted item indicates the active submenu. For example: 	1 Press the + or - button to adjust the value of the menu item. 2 Press the  or MENU button to confirm.	1 Press the  or  button to adjust the value of the menu item. 2 Press the  button to confirm.

ON SCREEN DISPLAY MENU

#	Menu Navigation	Operation	
		Control Panel	Remote Control
4	Exit the submenu.	Press the  button to return to the previous menu.	Press the  or  button to return to the previous menu.
5	Close the OSD window.	Press the MENU button again.	Press the  button again.

When settings are modified, all changes are saved when the user does the following:


- Proceeds to the another menu.
- Exits the OSD menu.
- Waits for the OSD menu to disappear.

Note:

- ♦ Availability of some menu items depend on the input source signal. If the menu is not available, it is disabled and grayed out.

ON SCREEN DISPLAY MENU

4.2 OSD Menu Tree

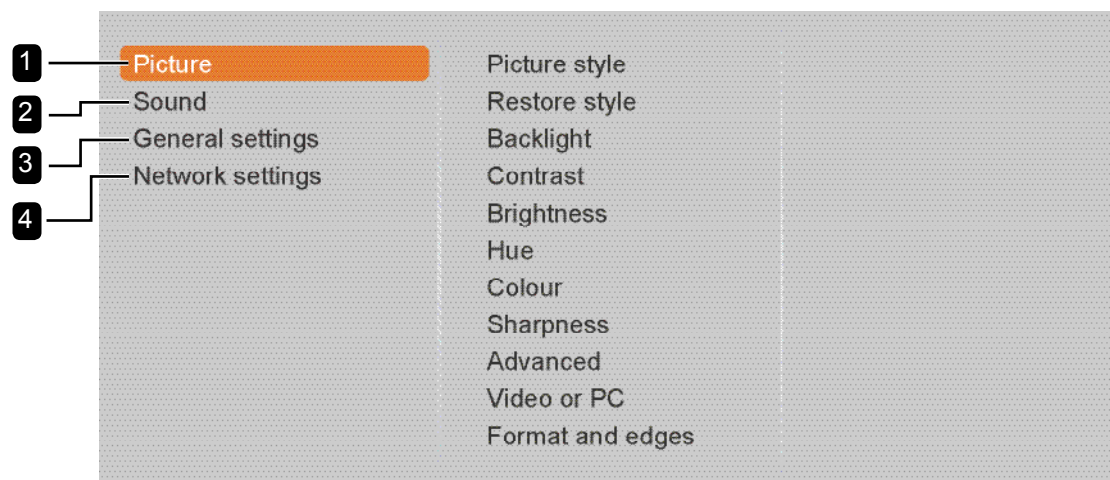


Main Menu	Submenu	Remarks
1. Picture	• Picture style • Restore style • Backlight • Contrast • Brightness • Hue • Colour • Sharpness • Advanced • Video or PC • Format and edges	See page 41.
2. Sound	• Sound style • Restore style • Bass • Treble • Audio out • Advanced	See page 45.

ON SCREEN DISPLAY MENU




Main Menu	Submenu	Remarks
3. General settings	• Menu language • Monitor id • Eco mode • Auto search • Clock • Scheduling • Sleep timer • Auto switch off • Auto adjust • Anti-burn-in • Control settings • Display logo • Factory settings	See page 46.
4. Network settings	• View network settings • Network configuration • Static IP configuration • Digital Media Renderer - DMR • Wake on lan • Network name	See page 52.

CHAPTER 5: ADJUSTING THE LCD DISPLAY





5.1 Picture Settings

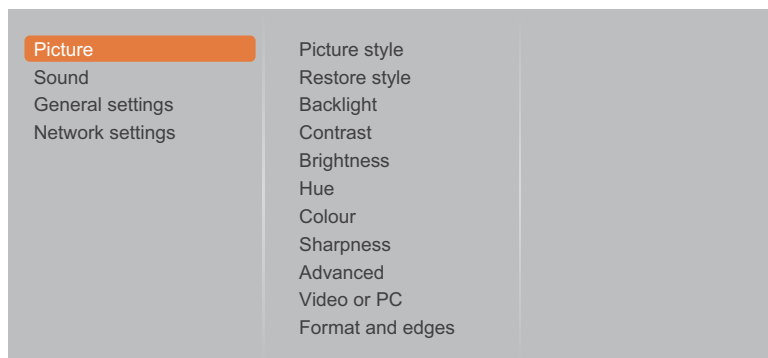

- 1 Press the **MENU** button on the control panel or the **⬆** button on the remote control to call out the OSD window.
- 2 Select **Picture**, then press the **▲** button on the control panel or the **OK** button on the remote control.
- 3 Press the **+/-** button on the control panel or the **⏮** button on the remote control to select an option.

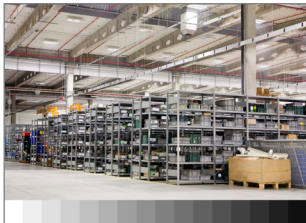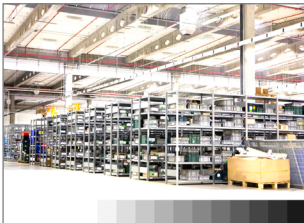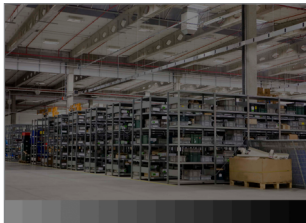Item	Function	Operation	Range
Picture style	Choose a predefined picture setting. Note: The default value is Standard .	Press the +/- button on the control panel or the ⏮ button on the remote control to select the setting.	Personal Vivid Natural Standard Movie Photo Energy saving
Restore style	Restore the last-selected predefined picture setting.	Press the ▲/▼ button on the control panel or the ⬅/➡ button on the remote control to select the setting.	Yes No
Backlight	Adjust the brightness of this display's backlight. Note: The default value is 90.	Press the +/- button on the control panel or the ⏮ button on the remote control to adjust the value.	0 to 100
Contrast	Adjust the difference between the black level and the white level. Note: The default value is 100.	Press the +/- button on the control panel or the ⏮ button on the remote control to adjust the value.	0 to 100
	Original Setting High Setting Low Setting   		

ADJUSTING THE LCD DISPLAY

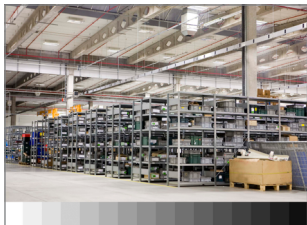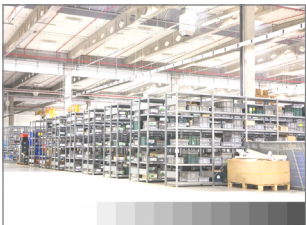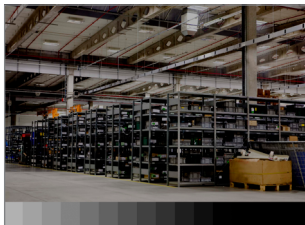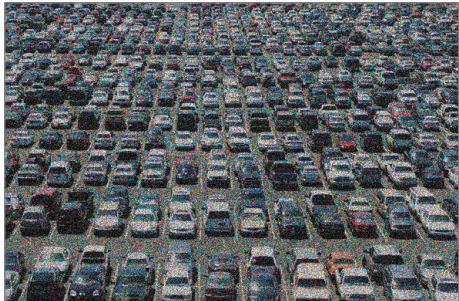Item	Function	Operation	Range
Brightness	Adjust the luminance of the screen image. Note: The default value is 50.	Press the $\pm$ button on the control panel or the $\swarrow/\searrow$ button on the remote control to adjust the value.	0 to 100
	Original Setting  High Setting  Low Setting 		
Hue	Adjust the colour saturation of the picture. Note: The default value is 0.	Press the $\pm$ button on the control panel or the $\swarrow/\searrow$ button on the remote control to adjust the value.	-50 to 50
Colour	Adjust the colour saturation of the picture. Note: The default value is 50.	Press the $\pm$ button on the control panel or the $\swarrow/\searrow$ button on the remote control to adjust the value.	0 to 100
Sharpness	Adjust the clarity and focus of the screen image. Note: The default value is 10.	Press the $\pm$ button on the control panel or the $\swarrow/\searrow$ button on the remote control to adjust the value.	0 to 20
Advanced	Access advanced settings such as noise reduction, gamma, colour temp., advanced sharpness, dynamic contrast, dynamic backlight, and colour enhancement.		
	Noise reduction: Adjust the noise reduction to help remove noise from images. This helps produce clearer and crisper images. Note: The default value is Minimum.	Press the $\pm$ button on the control panel or the $\swarrow/\searrow$ button on the remote control to select the setting.	Off Minimum Medium Maximum
	Noise Reduction Off 	Noise Reduction On 	
	Gamma: Adjust the non-linear setting for picture luminance and contrast. Note: The default value is 0.	Press the $\pm$ button on the control panel or the $\swarrow/\searrow$ button on the remote control to adjust the value.	-4 to +4

ADJUSTING THE LCD DISPLAY

Item	Function	Operation	Range
Advanced (continued)	• Colour temp.: Change the colour balance. » Cool: Applies a bluish tint for cooler colours. » Normal: commonly used for normal lighting conditions. » Warm: Applies a reddish tint for warmer colours. » Custom: When selected, the user can adjust manually the values of Cool, Normal, and Warm in Custom colour temp. menu. Note: The default value is Normal.	Press the +/- button on the control panel or the M button on the remote control to select the setting.	Cool Normal Warm Custom
	• Custom colour temp.: Customise colour balance setting. Only available if Colour temp. setting is set to Custom.	Press the +/- button on the control panel or the M button on the remote control to adjust the value.	0 to 255
	• Advanced sharpness: Enable superior sharpness, especially on lines and contours in the picture. Note: The default value is Off.	Press the +/- button on the control panel or the M button on the remote control to select the setting.	Off On
	• Dynamic contrast: Enable superior sharpness, especially on lines and contours in the picture. Note: The default value is Minimum.	Press the +/- button on the control panel or the M button on the remote control to select the setting.	Off Minimum Medium Maximum
	• Dynamic backlight: Adjust a backlight brightness to optimize the dynamic power consumption and screen contrast. Note: The default value is Standard.	Press the +/- button on the control panel or the M button on the remote control to select the setting.	Off Standard Best Power Best Picture
	• Colour enhancement: Dynamically enhance the vividness and details of colours. Note: The default value is Minimum.	Press the +/- button on the control panel or the M button on the remote control to select the setting.	Off Minimum Medium Maximum

ADJUSTING THE LCD DISPLAY

Item	Function	Operation	Range
Video or PC	• Video: Choose when viewing content from a connected game console. • PC: Choose when a computer is connected through HDMI. Make sure that Format and edges > Picture format > Unscaled is selected so as to view maximum detail. Note: The default value is Off.	Press the +/- button on the control panel or the 1/1 button on the remote control to select the setting.	Off Video PC
Format and edges	• Picture format: Choose the picture format depending on the displayed content. Note: The default value is Auto zoom.	Press the +/- button on the control panel or the 1/1 button on the remote control to select the setting.	Auto zoom Movie expand 16:9 Wide screen Unscaled 4:3
	• Screen edges: Change the picture size. Note: The default value is 0.	Press the +/- button on the control panel or the 1/1 button on the remote control to adjust the value.	0 to 10
	• Picture shift: Adjust the picture position.	Press the ▲/▼/+/- button on the control panel or the 1/1/←/→ button on the remote control to adjust the setting.	N/A

ADJUSTING THE LCD DISPLAY

5.2 Sound Settings




- 1 Press the **MENU** button on the control panel or the button on the remote control to call out the OSD window.
- 2 Select **Sound**, then press the **▲** button on the control panel or the **OK** button on the remote control.
- 3 Press the **+/-** button on the control panel or the button on the remote control to select an option.

Item	Function	Operation	Range
Sound style	Choose the sound style for the audio content. Note: The default value is Personal .	Press the +/- button on the control panel or the button on the remote control to select the setting.	Personal Original Movie Music Game News
Restore style	Restore the last-selected predefined sound setting.	Press the ▲/▼ button on the control panel or the ←/→ button on the remote control to select the setting.	Yes No
Bass	Adjust to increase or decrease lower-pitched sounds. Note: The default value is 0.	Press the +/- button on the control panel or the button on the remote control to adjust the value.	-8 to +8
Treble	Adjust to increase or decrease higher-pitched sounds. Note: The default value is 0.	Press the +/- button on the control panel or the button on the remote control to adjust the value.	-8 to +8
Audio out	Adjust audio output volume. Note: The default value is 25.	Press the +/- button on the control panel or the button on the remote control to adjust the value.	0 to 60
Advanced	• Auto volume leveling: Enable the reduction of sudden volume changes. Note: The default value is On.	Press the +/- button on the control panel or the button on the remote control to select the setting.	Off On
	• Speaker: Turn on or off the internal speakers. Note: The default value is On.	Press the +/- button on the control panel or the button on the remote control to select the setting.	Off On
	• Clear sound: Enhance sound quality. Note: The default value is Off.	Press the +/- button on the control panel or the button on the remote control to select the setting.	Off On

ADJUSTING THE LCD DISPLAY

5.3 General Settings

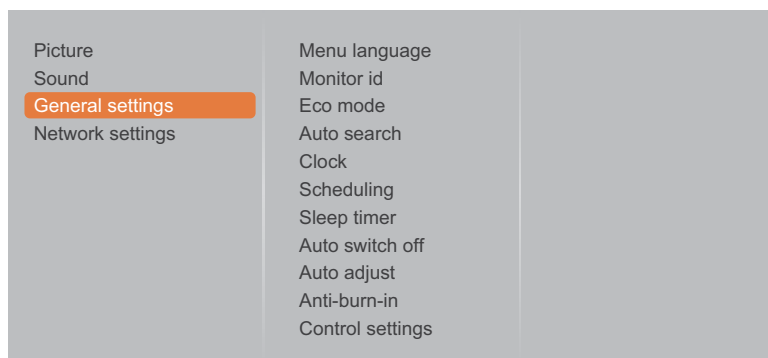

- 1 Press the **MENU** button on the control panel or the button on the remote control to call out the OSD window.
- 2 Select **General settings**, then press the button on the control panel or the **OK** button on the remote control.
- 3 Press the **+/-** button on the control panel or the button on the remote control to select an option.

Item	Function	Operation	Range
Menu language	Choose the language used for OSD menus.	Press the +/- button on the control panel or the button on the remote control to select the setting.	English German French Italian Spanish Russian Polish Turkish Simplified Chinese
Monitor id	Adjust the ID number for controlling the display via the RS232 connection. Each display must have a unique ID number when multiple sets of this display are connected. Note: The default value is 1.	Press the +/- button on the control panel or the button on the remote control to adjust the value.	1 to 255
Eco mode	Set the LCD display to reduce the power consumption automatically. Note: The default value is Low power standby .	Press the +/- button on the control panel or the button on the remote control to select the setting.	Normal Low power standby
Auto search	Choose to let this display detect and display available signal sources automatically. Note: The default value is Off .	Press the +/- button on the control panel or the button on the remote control to select the setting.	Off On


ADJUSTING THE LCD DISPLAY

Item	Function	Operation	Range
Clock	Set the current date and time for the display's internal clock.		
	• Daylight saving: Choose the daylight saving time. Note: The default value is Standard time.	Press the $\pm$ button on the control panel or the $\mathbb{M}$ button on the remote control to select the setting.	Daylight saving time Standard time
	• Date: Set current date.	• Press the $\pm$ button on the control panel or the $\mathbb{M}$ button on the remote control to set month, day, and year. • Press the $\blacktriangle/\blacktriangledown$ button on the control panel or the $\leftarrow/\rightarrow$ button on the remote control to navigate between month, day, and year fields.	Cancel Done
	• Time: Set current time.	• Press the $\pm$ button on the control panel or the $\mathbb{M}$ button on the remote control to set hours and minutes. • Press the $\blacktriangle/\blacktriangledown$ button on the control panel or the $\leftarrow/\rightarrow$ button on the remote control to navigate between hours and minutes fields.	Cancel Done
Scheduling	This function allows you to program up to 3 different scheduled time intervals for this display to activate. You can set: • Which input source the display will use for each scheduled activation period. • The time for the display to turn on and turn off. • The days in a week for the display to activate. Note: ◆ We recommend you to set up current date and time in the Clock menu before using this function. ◆ After changing the Clock option in the General settings menu, you need to set this Scheduling again.		

ADJUSTING THE LCD DISPLAY

Item	Function	Operation	Range
Scheduling (continued)	• Status: Enable or disable the schedule. Note: The default value is Off.	Press the $\pm$ button on the control panel or the $\mathbb{M}$ button on the remote control to select the setting.	Off On
	• Source: Choose the source for the schedule.	Press the $\pm$ button on the control panel or the $\mathbb{M}$ button on the remote control to select the setting.	USB HDMI DVI YPbPr AV VGA
	• On time: Set time when the schedule is turned on.	• Press the $\pm$ button on the control panel or the $\mathbb{M}$ button on the remote control to set hours and minutes. • Press the $\blacktriangle/\blacktriangledown$ button on the control panel or the $\leftarrow/\rightarrow$ button on the remote control to navigate between hours and minutes fields.	Cancel Done
	• Off time: Set time when the schedule is turned off.	• Press the $\pm$ button on the control panel or the $\mathbb{M}$ button on the remote control to set hours and minutes. • Press the $\blacktriangle/\blacktriangledown$ button on the control panel or the $\leftarrow/\rightarrow$ button on the remote control to navigate between hours and minutes fields.	Cancel Done
	• Repeat modes: Choose the days in a week when the schedule is activated. Note: The default value is No repeat.	• Press the $\pm$ button on the control panel or the $\mathbb{M}$ button on the remote control to select the item. • Press the $\blacktriangle$ button on the control panel or the OK button on the remote control to confirm the selection.	No repeat Every Sunday Every Monday Every Tuesday Every Wednesday Every Thursday Every Friday Every Saturday

ADJUSTING THE LCD DISPLAY

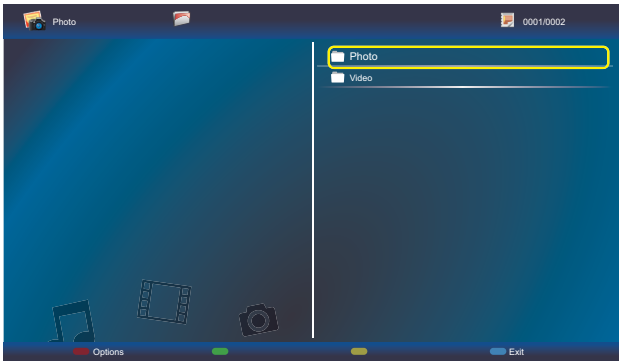Item	Function	Operation	Range
Scheduling (continued)	• Playlist setting: Choose the file to be included in the playlist. Note: ◆ Each playlist supports up to 30 files. ◆ Playlist will not be cleared after Factory settings. You have to manually remove the files or delete <code>usb_schedulinglist.txt</code> on the USB disk drive.	• Press the ▲/▼ button on the control panel or the M button on the remote control to choose the file. • Press the INPUT button on the control panel or the OK button on the remote control to set or clear the playlist. Playlist View  • Press the  button on the remote control, then select Save list to save the playlist. • Press the  button on the remote control to exit Playlist and return to the OSD menu. Save List 	
Sleep timer	Switch off the display after a specified time. Note: The default value is 0 mins.	Press the +/– button on the control panel or the M button on the remote control to select the setting.	0 mins 5 mins 10 mins 15 mins ... 180 mins

ADJUSTING THE LCD DISPLAY


Item	Function	Operation	Range
Auto switch off	Set the countdown timer interval to let the display to automatically power off when no signal is detected. Press any key on the remote control to disable this function. Note: The default value is Off.	Press the +/- button on the control panel or the M/M button on the remote control to select the setting.	Off 30 mins 60 mins 120 mins 240 mins
Auto adjust	Use this function to automatically optimize the display of VGA input image. Note: This option is available only if the input source is VGA.	Press the ▲/▼ button on the control panel or the ←/→ button on the remote control to select the setting.	Cancel Start
Anti-burn-in	For video input sources, enable Anti-burn-in function to protect the display from “burn-in” or “after-image” symptoms when the display is not being in use for 30 seconds. Note: The default value is Off.	Press the +/- button on the control panel or the M/M button on the remote control to select the setting.	Off On
Control settings	• Local KB lock: Choose to enable or disable the keyboard (control panel buttons) function of the LCD display. » Unlock: Enable the keyboard function. » Lock all: Lock all keyboard function. » Lock but volume: Disable all the keyboard function except the + or - button. » Lock but power: Disable all the keyboard function except the ⏻ button. Note: ♦ To disable the Local KB lock function, press the ⬆ button and buttons 1 9 9 8 on the remote control. ♦ The default value is Unlock.	Press the +/- button on the control panel or the M/M button on the remote control to select the setting.	Unlock Lock all Lock but volume Lock but power

ADJUSTING THE LCD DISPLAY

Item	Function	Operation	Range
Control settings (continued)	• RC lock: Choose to enable or disable the button function of the remote control. » Unlock: Enable the button function of the remote control. » Lock all: Lock all button functions of the remote control. » Lock but volume: Disable all the button functions except the — or + button. » Lock but power: Disable all the button functions except the  button. Note: ♦ To disable the RC lock function, press the  button and buttons 1 9 9 8 on the remote control. ♦ The default value is Unlock.	Press the +/- button on the control panel or the  button on the remote control to select the setting.	Unlock Lock all Lock but volume Lock but power
Display logo	When enabled, the AG Neovo logo will be shown on the startup screen. Note: The default value is On .	Press the +/- button on the control panel or the  button on the remote control to select the setting.	Off On
Factory settings	Reset all your customized settings to the factory defaults.	Press the  button on the control panel or the  button on the remote control to select the setting.	OK Cancel

ADJUSTING THE LCD DISPLAY

5.4 Network Settings

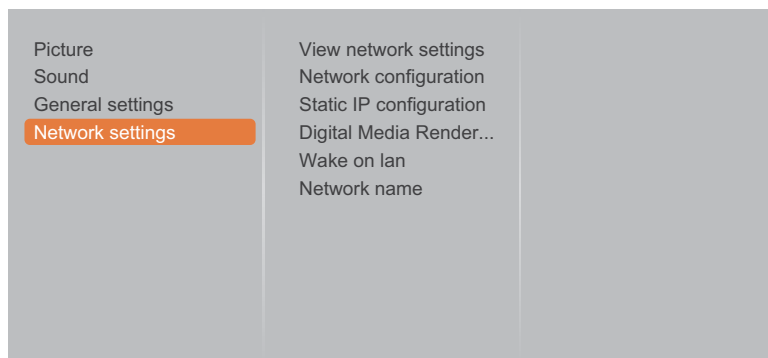

- 1 Press the **MENU** button on the control panel or the **⬆** button on the remote control to call out the OSD window.
- 2 Select **Network settings**, then press the **▲** button on the control panel or the **OK** button on the remote control.
- 3 Press the **+/-** button on the control panel or the **⬅/➡** button on the remote control to select an option.

Item	Function	Operation	Range
View network settings	View connected network status.	Press the MENU button on the control panel or the OK button on the remote control.	Cancel
Network configuration	Choose how the LCD display should assign addresses to the network resources.	Press the +/- button on the control panel or the ⬅/➡ button on the remote control to select the setting.	DHCP & Auto IP Static IP
Static IP configuration	Configure the network parameters, such as IP address, Netmask, Gateway, DNS 1, and DNS 2. Note: This function can be only configured when the Network configuration setting is set to Static IP .	• Press the +/- button on the control panel or the ⬅/➡ button on the remote control to select the item. Then press the ▲ button on the control panel or the OK button on the remote control to confirm the selection. • Use the digit numbers [0] ~ [9] on the remote control to configure the network parameters. • When the setting is complete, press the ▲/▼ button on the control panel or the ⬅/➡ button on the remote control to select Done. Then press the MENU button on the control panel or the OK button on the remote control to save the setting.	N/A
Digital Media Renderer - DMR	Enable this function to allow the display to receive multimedia files from the connected device from the network. Note: The default value is Off .	Press the +/- button on the control panel or the ⬅/➡ button on the remote control to select the setting.	Off On

ADJUSTING THE LCD DISPLAY

Item	Function	Operation	Range
Wake on lan	Enable this feature to allow the display to be switched on over the network. Note: The default value is Off.	Press the +/- button on the control panel or the M/V button on the remote control to select the setting.	Off On
Network name	In the multiple-display connection, you can rename each display for easy identification.	- Press the MENU button on the control panel or the OK button on the remote control on the network name field to open the on-screen keyboard. - Use the on-screen keyboard to enter the name. When done, select Done and press the MENU button on the control panel or the OK button on the remote control. - When the setting is complete, press the ▲/▼ button on the control panel or the ←/→ button on the remote control to select Done. Then press the MENU button on the control panel or the OK button on the remote control to save the setting.	N/A

CHAPTER 6: APPENDIX

6.1 Warning Messages

Warning Messages	Cause	Solution
 Cannot display this video mode	The resolution or the refresh rate of the graphics card of the computer is set too high.	• Change the resolution or the refresh rate of the graphics card.
 No signal	The LCD display cannot detect the input source signal.	• Check if the input source is turned ON. • Check if the signal cable is properly connected. • Check if any pin inside the cable connector is twisted or broken.
 Local KB lock	The operation using the control panel buttons has been locked by the user.	• Disable the Local KB lock function. Refer to page 50.
 RC lock	The operation using the remote control buttons has been locked by the user.	• Disable the RC lock function. Refer to page 51.

APPENDIX

6.2 USB Device Compatibility

USB Video Subtitle Formats (for language subtitles, etc.).

File Extensions	Container	Video Codec	Maximum Resolution	Max. Frame Rate (fps)	Max. Bit Rate (Mbps)	Audio Codec
.mpg mpeg .vob	PS	MPEG-1	1920x1080	25p,30p,50i,60i	30	MPEG-1(L1&L2), MPEG-1,2,2.5 L3, AAC/HE-AAC(v1&v2), DVD-PCM, AC3
		MPEG-2	1920x1080	25p,30p,50i,60i	30	
		MPEG-4 ASP	1920x1080	25p,30p,50i,60i	30	
		H.264	1920x1080	25p,30p,50p,60p,60i	30	
.ts	TS	MPEG-2	1920x1080	25p,30p,50i,60i	30	MPEG-1(L1&L2), MPEG-1,2,2.5 L3, AAC/HE-AAC (v1&v2), AC3, E-AC3, Dolby Pulse
		MPEG-4 ASP	1920x1080	25p,30p,50i,60i	30	
		H.264	1920x1080	25p,30p,50p,60p,60i	30	
		MVC	1,920x1,080i, field rate=50, 60Hz 1,920x1,080p, frame rate=24, 25,30Hz 1,280x720p, frame rate=50, 60Hz	-	30	
.ts .m2ts .mts .mt2	MaTS TTS	MPEG-2	1920x1080	25p,30p,50i,60i	30	MPEG-1(L1&L2), MPEG-1,2,2.5 L3, AAC/HE-AAC (v1&v2), AC3, E-AC3, Dolby Pulse
		MPEG-4 ASP	1920x1080	25p,30p,50i,60i	30	
		H.264	1920x1080	25p,30p,50p,60p,60i	30	
		MVC	1,920x1,080i @ field rate=50, 60Hz 1,920x1,080p @ frame rate=24, 25, 30Hz 1,280x720p @ frame rate=50, 60Hz	-	30	
.ts .m2ts .mts	AVCHD	MPEG-2	1920x1080	25p,30p,50i,60i	30	MPEG-1(L1&L2), MPEG-1,2,2.5 L3, AAC/HE-AAC (v1&v2), AC3, E-AC3, Dolby Pulse
		MPEG-4 ASP	1920x1080	25p,30p,50i,60i	30	
		H.264	1920x1080	25p,30p,50p,60p,60i	30	
.ts .m2ts .mts	AVCHD	MVC	1,920x1,080i, field rate=50, 60Hz 1,920x1,080p, frame rate=24, 25,30Hz 1,280x720p @ frame rate=50, 60Hz	-	30	MPEG-1(L1&L2), MPEG-1,2,2.5 L3, AAC/HE-AAC (v1&v2), AC3, E-AC3, Dolby Pulse

APPENDIX

File Extensions	Container	Video Codec	Maximum Resolution	Max. Frame Rate (fps)	Max. Bit Rate (Mbps)	Audio Codec
.m4v	M4V	H.264	1920x1080	25p,30p,50p,60p,60i	30	AAC
.ism/ Manifest .mpd	frag MP4	H.264	1920x1080	25p,30p,50p,60p,60i	30	AAC/HE-AAC (v1&v2), AC3, EAC3, WMA, WMA-PRO
		MVC	1,920x1,080i, field rate=50, 60Hz 1,920x1,080p, frame rate=24, 25,30Hz 1,280x720p @ frame rate=50, 60Hz	-	30	
.mp4	MP4	MPEG-4 ASP	1920x1080	25p,30p,50i,60i	30	AAC/HE-AAC (v1&v2), AC3, EAC3, WMA, WMA-PRO
		H.264	1920x1080		30	
		MVC	1,920x1,080i, field rate=50, 60Hz 1,920x1,080p, frame rate=24, 25,30Hz 1,280x720p @ frame rate=50, 60Hz	-	30	
		WMV9/VC1	1920x1080	30p,60i	30	
.mkv .mk3d	MKV	MPEG-4 ASP	1920x1080	25p,30p,50i,60i	30	MPEG-1(L1&L2), MPEG-1,2,2.5 L3, AAC/HE-AAC (v1&v2), AC3, E-AC3, WMA, WMA-PRO
		H.264	1920x1080		30	

APPENDIX

USB Multimedia Formats

File Extensions	Container	Video Codec	Maximum Resolution	Frequency (kHz)	Max. Bit Rate (Mbps)	Audio Codec
.mp3	MP3	-	-	48	384	MPEG-1,2,2.5 L3
.wma .asf	WMA (V2 up to V9.2)	-	-	48	192	WMA
.wma	WMA Pro	-	-	96	768	WMA, WMA Pro
.wav(PC)	LPCM	-	-	192	768	LPCM
.aif(mac) .aiff(mac)	LPCM	-	-	192	768	LPCM
.aac .mp4 .m4a	AAC	-	-	48	1024	AAC, HE-AAC(v1&v2)
.pls .m3u	Play list	-	-	-	-	-
.m4a	M4A	-	-	48	1024	AAC, HE-AAC(v1&v2)

USB Photo Formats

File Extensions	Container	Video Codec	Maximum Resolution	Frequency (kHz)	Max. Bit Rate (Mbps)	Audio Codec
jpg/jpeg	JPEG	-	Base line: Colour mode = 444, Size <=32768x16128 Colour mode = 422v, Size <= 16384x16128 Colour mode = Others, not supported	-	-	-
bmp	BMP	-	4096x3072_4bit, 2730x2500_8bit, 2048x1536_16bit, 1500x1200_32bit	-	-	-
png	PNG	-	4096x3072_4bit, 2730x2500_8bit, 2048x1536_16bit, 1500x1200_32bit	-	-	-
gif	GIF	-	4096x3072_4bit, 2730x2500_8bit, 2048x1536_16bit, 1500x1200_32bit	-	-	-

Note:

- ◆ Sound or video may not work if the contents have a standard bit rate/frame rate above the compatible Frame/sec listed in the table above.
- ◆ Video content with a Bit rate or Frame rate larger than the rate specified in the table above can cause choppy video during playback.

APPENDIX

6.3 Supported Resolution

VGA Resolution:

Standard Resolution	Active Resolution		Refresh Rate	Pixel Rate	Aspect Ratio	Stand for Mode
	Horizontal Pixels	Vertical Lines				
VGA	640	480	60 Hz	25.175 MHz	4:3	Video Graphic Array
			72 Hz	31.5 MHz		
			75 Hz	31.5 MHz		
WVGA	720	400	70 Hz	33.75 MHz	16:9	Wide Video Graphic Array
SVGA	800	600	60 Hz	40 MHz	4:3	Super VGA
			75 Hz	49.5 MHz		
XGA	1024	768	60 Hz	65 MHz	4:3	Extended Graphic Array
			75 Hz	78.75 MHz		
WXGA	1280	768	60 Hz	79.5 MHz	5:3	Wide XGA
WXGA	1280	800	60 Hz	79.5 MHz	16:10	Wide XGA
SXGA	1280	960	60 Hz	108 MHz	4:3	Super XGA
SXGA	1280	1024	60 Hz	108 MHz	5:4	Super XGA
WXGA	1360	768	60 Hz	85.5 MHz	16:9	Wide XGA
WXGA	1366	768	60 Hz	85.5 MHz	16:9	Wide XGA
UXGA	1600	1200	60 Hz	162 MHz	4:3	Super XGA
HD1080	1920	1080	60 Hz	148.5 MHz	16:9	HD1080

SDTV Resolution:

Standard Resolution	Active Resolution		Refresh Rate	Pixel Rate	Aspect Ratio	Stand for Mode
	Horizontal Pixels	Vertical Lines				
480i	720	480	29.97 Hz	13.5 MHz	4:3	Modified NTSC Standard
480p			59.94 Hz	27 MHz		
576i	720	576	25 Hz	13.5 MHz	4:3	Modified PAL Standard
576p			50 Hz	27 MHz		

HDTV Resolution:

Standard Resolution	Active Resolution		Refresh Rate	Pixel Rate	Aspect Ratio	Stand for Mode
	Horizontal Pixels	Vertical Lines				
720p	1280	720	50 Hz	74.25 MHz	16:9	Normally DVB Mode
			60 Hz			
1080i	1920	1080	25 Hz	74.25 MHz	16:9	Normally ATSC Mode
			30 Hz			
1080p	1920	1080	50 Hz	148.5 MHz	16:9	Normally ATSC Mode
			60 Hz			

General guidelines:

- The PC text quality is optimum in HD 1080 mode (1920 x 1080, 60Hz).
- Your PC display screen might appear different depending on the manufacturer (and your particular version of Windows).

APPENDIX

- Check your PC instruction book for information about connecting your PC to a display.
- If a vertical and horizontal frequency-select mode exists, select 60Hz (vertical) and 31.5KHz (horizontal). In some cases, abnormal signals (such as stripes) might appear on the screen when the PC power is turned off (or if the PC is disconnected). If so, press the [INPUT] button to enter the video mode. Also, make sure that the PC is connected.
- When horizontal synchronous signals seem irregular in RGB mode, check PC power saving mode or cable connections.
- The display settings table complies to the IBM/VESA standards, and based on the analog input.
- The DVI support mode is regarded as same to the PC support mode.
- The best timing for the vertical frequency to each mode is 60Hz.

6.4 Cleaning

Caution When Using the Display

- Do not bring your hands, face or objects close to the ventilation holes of the display. The top of the display is usually very hot due to the high temperature of exhaust air being released through the ventilation holes. Burns or personal injuries may occur if any body parts are brought too close. Placing any object near the top of the display could also result in heat related damage to the object as well as the display itself.
- Be sure to disconnect all cables before moving the display. Moving the display with its cables attached may damage the cables and thus cause fire or electric shock.
- Disconnect the power plug from the wall outlet as a safety precaution before carrying out any type of cleaning or maintenance procedure.

Front Panel Cleaning Instructions

- The front of the display has been specially treated. Wipe the surface gently using only a cleaning cloth or a soft, lint-free cloth.
- If the surface becomes dirty, soak a soft, lint-free cloth in a mild detergent solution. Wring the cloth to remove excess liquid. Wipe the surface of the display to remove dirt. Then use a dry cloth of the same type to dry.
- Do not scratch or hit the surface of the panel with fingers or hard objects of any kind.
- Do not use volatile substances such as insect sprays, solvents and thinners.

Cabinet Cleaning Instructions

- If the cabinet becomes dirty, wipe the cabinet with a soft, dry cloth.
- If the cabinet is extremely dirty, soak a lint-free cloth in a mild detergent solution. Wring the cloth to remove as much moisture as possible. Wipe the cabinet. Use another dry cloth to wipe over until the surface is dry.
- Do not allow any water or detergent to come into contact with the surface of the display. If water or moisture gets inside the unit, operating problems, electrical and shock hazards may result.
- Do not scratch or hit the cabinet with fingers or hard objects of any kind.
- Do not use volatile substances such as insect sprays, solvents and thinners on the cabinet.
- Do not place anything made from rubber or PVC near the cabinet for any extended periods of time.

APPENDIX

6.5 Troubleshooting

Symptom	Possible Cause	Remedy
No picture is displayed	- The power cord has been disconnected. - The main power switch on the back of the display is not switched on. - The selected input has no connection. - The display is in standby mode.	1 Plug in the power cord. 2 Make sure the power switch is switched on. 3 Connect a signal connection to the display.
Interference displayed on the display or audible noise is heard	Caused by surrounding electrical appliances or fluorescent lights.	Move the display to another location to see if the interference is reduced.
Colour is abnormal	The signal cable is not connected properly.	Make sure that the signal cable is attached firmly to the back of the display.
Picture is distorted with abnormal patterns	- The signal cable is not connected properly. - The input signal is beyond the capabilities of the display.	- Make sure that the signal cable is attached firmly. - Check the video signal source to see if it is beyond the range of the display. Please verify its specifications with this display's specification section.
Display image doesn't fill up the full size of the screen	The picture format is not set correctly.	Press the  button and select Auto zoom .
Can hear sound, but no picture	Improperly connected source signal cable.	Make sure that both video inputs and sound inputs are correctly connected.
Can see picture but no sound is heard	- Improperly connected source signal cable. - Volume is turned all the way down. MUTE function is turned on. - No external speaker connected.	- Make sure that both video and sound inputs are correctly connected. - Press the + or - button to hear the sound. - Switch the MUTE function off by using the  button. - Connect the external speakers and adjust the volume to a suitable level.
Some picture elements do not light up	Some pixels of the display may not turn on.	This display is manufactured using an extremely high level of precision technology; however, sometimes some pixels of the display may not display. This is not a malfunction.
After-Images can still be seen on the display after the display is powered off. (Examples of still pictures include logos, video games, computer images, and images displayed in 4:3 normal mode)	A still picture is displayed for an over extended period of time.	Do not allow a still image to be displayed for an extended period of time as this can cause a permanent after-image to remain on the display.

CHAPTER 7: SPECIFICATIONS

7.1 Display Specifications

PM-48		
Panel	Panel Type	LED-Backlit TFT LCD (VA Technology)
	Panel Size	47.6"
	Max. Resolution	FHD 1920 x 1080
	Pixel Pitch	0.549 mm
	Brightness	350 cd/m ²
	Contrast Ratio	20,000,000:1 (DCR)
	Viewing Angle (H/V)	178°/178°
	Display Colour	1.07B
	Response Time	5 ms
Frequency (H/V)	H Freq.	31 kHz-92 kHz
	V Freq.	48 Hz-85 Hz
Input	HDMI	1.3b x 1
	DVI	24-Pin DVI-D
	VGA	15-Pin D-Sub x 1
	Component	RCA x 1
	Composite	RCA x 1 (Share with Component-Y)
External Control	IR In/Out	3.5 mm Phone Jack
	RS232 In/Out	2.5 mm Phone Jack
	LAN (RJ45)	Yes
Other Connectivity	USB	2.0 x 1 (Service Port / Media Playback)
Audio	Audio In	Stereo Audio Jack (3.5 mm) x 1 Stereo Audio Jack (RCA) x 1
	Audio Out	Stereo Audio Jack (RCA) x 1
	Internal Speakers	10W x 2
Power	Power Supply	Internal
	Power Requirements	AC 100-240V, 50/60 Hz
	On Mode	102W (On)
	Stand-by Mode	< 0.5W
	Off Mode	< 0.5W
Operating Conditions	Temperature	5°C-40°C (41°F-104°F)
	Humidity	20%-80% (non-condensing)
Storage Conditions	Temperature	-20°C-60°C (-4°F-140°F)
	Humidity	5%-90% (non-condensing)
Mounting	VESA FPMPI	Yes (400 x 400 mm & 200 x 200 mm)
Security	Kensington Security Slot	Yes
Dimensions	Product w/o Base (W x H x D)	1081.8 x 623.4 x 59.9 mm (42.6" x 24.5" x 2.4")
	Packaging (W x H x D)	1192.0 x 773.0 x 171.0 mm (46.9" x 30.4" x 6.7")
Weight	Product w/o Base	11.5 kg (25.4 lb)
	Packaging	16.4 kg (36.2 lb)


Note:

- ♦ All specifications are subject to change without prior notice.

SPECIFICATIONS

7.2 Display Dimensions

7.2.1 PM-48 Dimensions

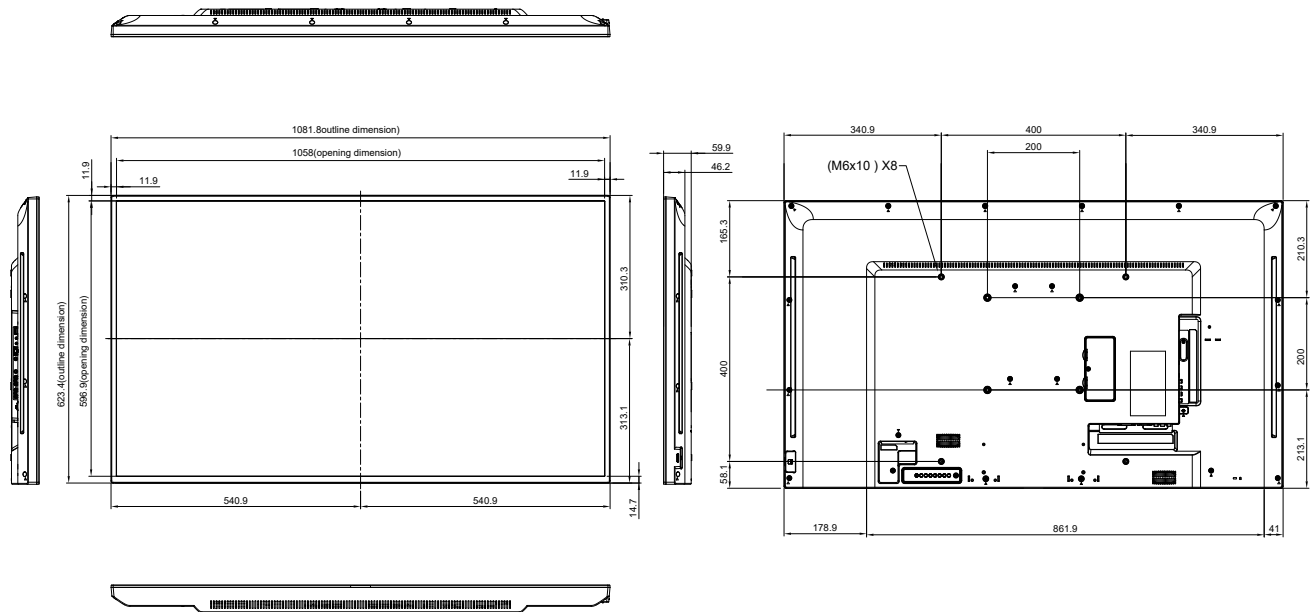

AG Neovo

Company Address: 5F-1, No. 3-1, Park Street, Nangang District, Taipei, 11503, Taiwan.

Copyright © 2019 AG Neovo. All rights reserved.

PM48A0_UM_V013