

GS-5424LX

User Manual

08-2022 / v1.0

Edimax Technology Co., Ltd.

No. 278, Xinhua 1st Rd., Neihu Dist., Taipei City, Taiwan

Email: support@edimax.com.tw

Edimax Technology Europe B.V.

Fijenhof 2, 5652 AE Eindhoven, The Netherlands

Email: support@edimax.nl

Edimax Computer Company

530 Technology Drive Suite 100, Irvine, CA 92618, USA

Email: support@edimax.us

Contents

I	Product Information	1
I-1	Package Content.....	2
I-2	Hardware Overview	2
I-3	LED Status.....	3
II	Installation.....	4
II-1	Mounting the Switch	4
II-1-1	Placement Tips.....	4
II-1-2	Rack Mounting.....	5
III	Getting Started	6
III-1	Power	6
III-1-1	Connecting to Power	6
III-1-2	Connecting to Network.....	7
III-1-3	Starting the Web-based Configuration Utility	7
III-1-4	Logging In.....	8
III-1-5	Logging Out.....	9
IV	Web-based Switch Configuration.....	10
IV-1	Status.....	10
IV-1-1	System Information	10
IV-1-2	Logging Message.....	11
IV-1-3	Port	12
IV-1-3-1	Statistics	12
IV-1-3-2	Error Disabled.....	13
IV-1-3-3	Bandwidth Utilization	13
IV-1-4	Link Aggregation	14
IV-1-5	MAC Address Table.....	15
IV-1-6	IP Address	16
IV-1-7	System Time	17
IV-2	Port.....	19
IV-2-1	Port Setting.....	19
IV-2-2	Error Disable	21
IV-2-3	Link Aggregation	22
IV-2-3-1	Group.....	22
A.	Static Link Aggregation Setting Steps	24

B.	LACP Link Aggregation Control Protocol Setting Steps.....	26
	IV-2-3-2 Port Setting of Link Aggregation	27
	IV-2-3-3 LACP.....	29
	IV-2-3-4 EEE	31
	IV-2-4 Jumbo Frame	32
IV-3	VLAN	33
	IV-3-1 VLAN	33
	IV-3-1-1 Create VLAN	33
	IV-3-1-2 VLAN Configuration	34
	IV-3-1-3 Membership	36
	IV-3-1-4 Port Setting.....	38
	IV-3-2 Voice VLAN	40
	IV-3-2-1 Property.....	40
	IV-3-2-2 Voice OUI.....	42
	IV-3-3 MAC VLAN	43
	IV-3-3-1 MAC Group.....	43
	IV-3-3-2 Group Binding	44
	IV-3-4 Surveillance VLAN.....	46
	IV-3-4-1 Property.....	46
	IV-3-4-2 Surveillance OUI	47
IV-4	MAC Address Table	48
	IV-4-1 Dynamic Address	48
	IV-4-2 Static Address	49
	IV-4-3 Filtering Address	49
IV-5	Spanning Tree.....	50
	IV-5-1 Property.....	50
	IV-5-2 Port Setting of STP	52
	IV-5-3 MST Instance	54
	IV-5-4 MST Port Setting.....	55
	IV-5-5 Statistics.....	58
IV-6	Discovery	60
	IV-6-1 LLDP	60
	IV-6-1-1 Property.....	60
	IV-6-1-2 Port Setting OfLLDP	62
	IV-6-1-3 Packet View	64
	IV-6-1-4 Local Information	67
	IV-6-1-5 Neighbor.....	70
	IV-6-1-6 Statistics	74
IV-7	Multicast	76
	IV-7-1 General	76

	IV-7-1-1	Property.....	76
	IV-7-1-2	Group Address.....	77
	IV-7-1-3	Router Port.....	79
	IV-7-2	IGMP Snooping.....	81
	IV-7-2-1	Property.....	81
	IV-7-2-2	Querier.....	84
	IV-7-2-3	Statistics.....	86
	IV-7-3	MVR.....	88
	IV-7-3-1	Property.....	88
	IV-7-3-2	Port Setting.....	89
	IV-7-3-3	Group Address.....	91
IV-8		Security.....	93
	IV-8-1	RADIUS.....	93
	IV-8-2	Management Access.....	96
	IV-8-2-1	Management VLAN.....	96
	IV-8-2-2	Management Service.....	96
	IV-8-2-3	Management ACL.....	98
	IV-8-2-4	Management ACE.....	98
	IV-8-3	Authentication Manager.....	103
	IV-8-3-1	Property.....	103
	IV-8-3-2	Port Setting.....	108
	IV-8-3-3	Sessions.....	111
	IV-8-4	Port Security.....	113
	IV-8-5	Traffic Segmentation.....	115
	IV-8-6	Storm Control.....	116
	IV-8-7	DoS.....	118
	IV-8-7-1	Property.....	119
	IV-8-7-2	Port Setting.....	121
	IV-8-8	DHCP Snooping.....	122
	IV-8-8-1	Property.....	122
	IV-8-8-2	Statistics.....	124
	IV-8-8-3	Option82 Property.....	126
	IV-8-8-4	Option82 Circuit ID.....	128
	IV-8-9	IP Source Guard.....	130
	IV-8-9-1	Port Setting.....	130
	IV-8-9-2	IMPV Binding.....	132
	IV-8-9-3	Save Database.....	134
IV-9		ACL.....	135
	IV-9-1	MAC ACL.....	135
	IV-9-2	MAC ACE.....	136
	IV-9-3	IPv4 ACL.....	138

	IV-9-4	IPv4 ACE	139
	IV-9-5	ACL Binding	143
IV-10		QoS	145
	IV-10-1	General	145
	IV-10-1-1	Property	146
	IV-10-1-2	Queue Scheduling	149
	IV-10-1-3	CoS Mapping	150
	IV-10-1-4	IP Precedence Mapping	151
	IV-10-2	Rate Limit	153
	IV-10-2-1	Ingress/Egress Port	153
IV-11		Diagnostics	156
	IV-11-1	Logging	156
	IV-11-1-1	Property	156
	IV-11-1-2	Remote Server	157
	IV-11-2	Mirroring	158
	IV-11-3	Ping	160
	IV-11-4	Traceroute	161
	IV-11-5	Copper Test	162
	IV-11-6	Fiber Module	163
	IV-11-7	UDLD	164
	IV-11-7-1	Property	164
	IV-11-7-2	Neighbor	166
IV-12		Management	167
	IV-12-1	User Account	167
	IV-12-2	Firmware	169
	IV-12-2-1	Upgrade / Backup	169
	IV-12-2-2	Active Image	173
	IV-12-3	Configuration	174
	IV-12-3-1	Upgrade / Backup	174
	IV-12-3-2	Save Configuration	178
	IV-12-4	SNMP	178
	IV-12-4-1	View	178
	IV-12-4-2	Group	179
	IV-12-4-3	Community	181
	IV-12-4-4	User	183
	IV-12-4-5	Engine ID	186
	IV-12-4-6	Trap Event	188
	IV-12-4-7	Notification	188
	IV-12-5	RMON	192

I Product Information

The EDIMAX GS-5424LX long-range web-smart switch comes with a web based user interface, equipped with 24 Gigabit PoE+ ports, and SFP+ ports for 10 Gigabit uplinks and long-range copper or optical connections.

The 10 GbE connectivity fully utilizes the power of your office networking for demanding tasks, such as data backup, video conferencing, IP surveillance, high volume transaction processing, large file transferring, and more.

You can find all supporting documents from the link below or via QR Code:

<https://www.edimax.com/download>




(Once you've visited the Edimax official website, please enter the model no. "GS-5424LX" into the search box to search for your product.)

Download


To select your product and find related download materials, enter the model number into the search box on the right side or follow the simple steps below:

*Feel free to contact us anytime if you need help or if you can't find your product.

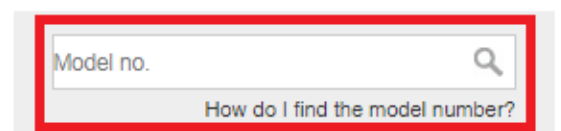A screenshot of a web search interface. It features a light gray rectangular box containing a search input field with the placeholder text "Model no." and a magnifying glass icon on the right. Below the input field, the text "How do I find the model number?" is displayed in a smaller font. The entire search area is highlighted with a red rectangular border.

I-1 Package Content

 
Before start using this product, please check if there is anything missing in the package, and contact your dealer to claim the missing item(s):



GS-5424LX



Power Cord

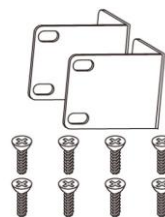

Rack-Mount Kit




Console Cable



QIG

I-2 Hardware Overview

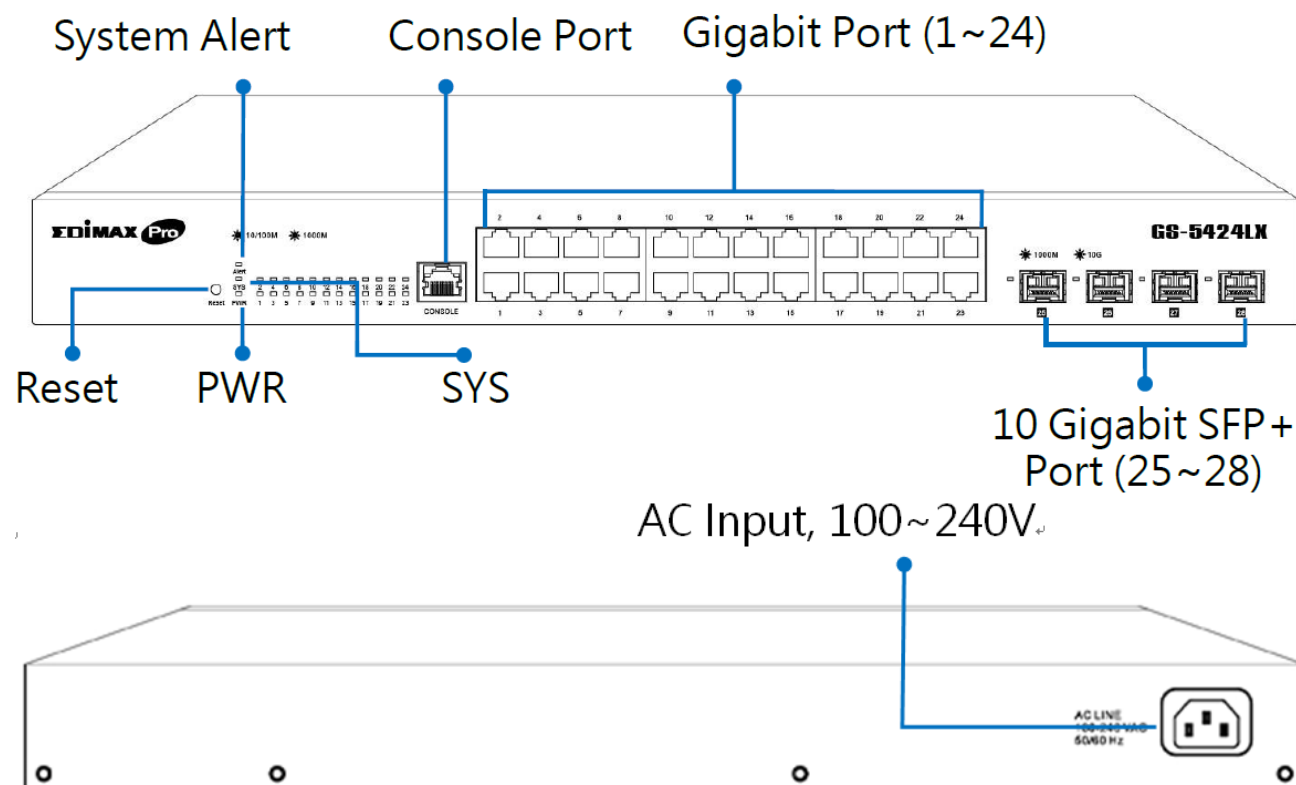

I-3 LED Status

Function	Status	Description
PWR	On (Green)	Power on
	Off	Power off
Alert	On (Red)	System fault detected. (System failure due to overheating of switch or wrong voltage)
	Off	No faults detected
Link/ACT (1-24 port)	On (Green)	Link at 1000M
	On (Amber)	Link at 10/100M
	Blinking	Sending or receiving data
	Off	Port disconnected or link fail
SFP+ (25-28 port)	On (Blue)	10G link
	On (Green)	1000M link
	Blinking	Data transmitting
	Off	Port disconnected or link fail

II Installation

This chapter describes how to install and connect your Edimax Switch. Read the following topics and perform the procedures in the correct order. Incorrect installation may cause damage to the product.

II-1 Mounting the Switch

There are two ways to physically set up the switch.

- Place the switch on a flat surface. To place the switch on a desktop, install the four rubber feet (included) on the bottom of the switch.
- Mount the switch in a standard rack (1 rack unit high).

II-1-1 Placement Tips

- Ambient Temperature — To prevent the switch from overheating, do not operate it in an area that exceeds an ambient temperature of 122°F (50°C).
- Air Flow — Be sure that there is adequate air flow around the switch.
- Mechanical Loading — Be sure that the switch is level and stable to avoid any hazardous conditions.
- Circuit Overloading — Adding the switch to the power outlet must not overload that circuit.

Follow these guidelines to install the switch securely.

- Put the switch in a stable place such as a desktop, to avoid it falling.
- Ensure the switch works in the proper AC input range and matches the voltage labeled.
- Ensure there is proper heat dissipation from and adequate ventilation around the switch.
- Ensure the switch's location can support the weight of the switch and its accessories.

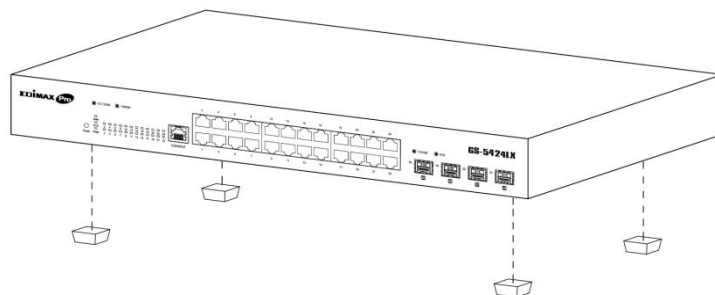


Figure 4 - Desktop Installation

II-1-2 Rack Mounting

You can mount the switch in any standard size, 19-inch (about 48 cm) wide rack. The switch requires 1 rack unit (RU) of space, which is 1.75 inches (44.45 mm) high.


For stability, load the rack from the bottom to the top, with the heaviest devices on the bottom. A top-heavy rack is likely to be unstable and may tip over.

When mounting smaller switch products into a standard 19-inch rack, a pair of extension brackets (sometimes referred to as ears) are needed to adapt the switch to the rack size.

These extension brackets are mounted on the switch using the screws provided in the kit, and have two holes that are used to then screw the switch into the rack.

An example of one type of these extension brackets is shown in the following figure.

1. Align the mounting brackets with the mounting holes on the switch's side panels and secure the brackets with the screws provided.
2. Secure the switch on the equipment rack with the screws provided.

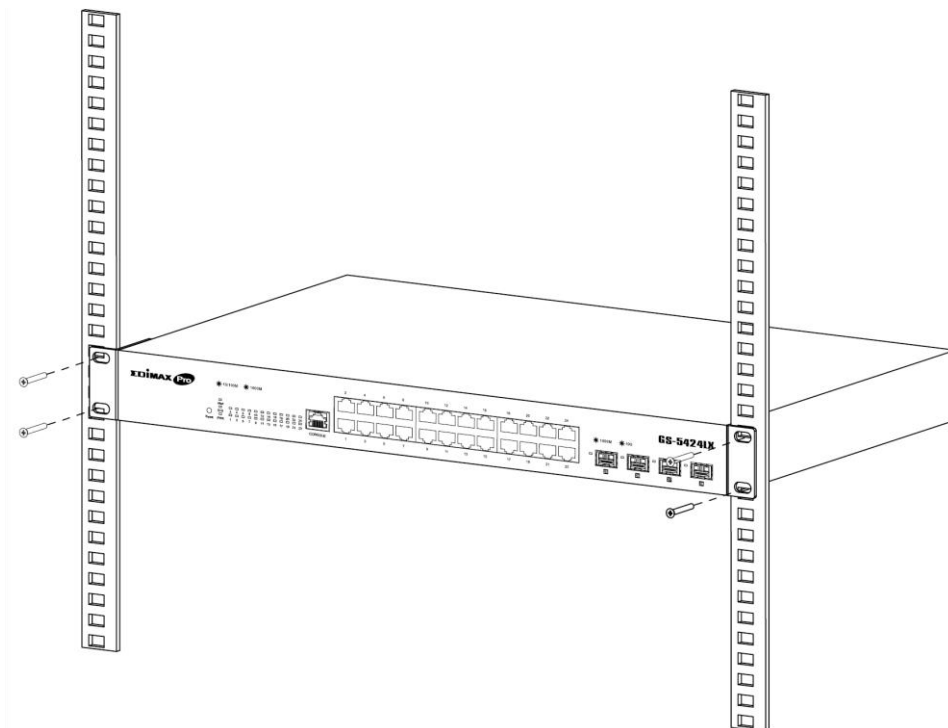

III *Getting Started*

This section provides an introduction to the web-based configuration utility, and covers the following topics:

- Powering on the device
- Connecting to the network
- Starting the web-based configuration utility

III-1 Power

III-1-1 Connecting to Power

Power down and disconnect the power cord before servicing or wiring a switch.

Do not disconnect modules or cabling unless the power is first switched off. The device only supports the voltage outlined in the type plate. Do not use any other power components except those specifically designated for the switch.

Disconnect the power cord before installation or cable wiring.

The switch is powered by the AC 100-240 V 50/60Hz internal high-performance power supply. It is recommended to connect the switch with a single-phase three-wire power source with a neutral outlet, or a multifunctional computer professional source. Connect the AC power connector on the back panel of the switch to the external power source with the included power cord, and check the power LED is on.



Rear View AC Power Socket

III-1-2 Connecting to Network


To connect the switch to the network:

1. Connect an Ethernet cable to the Ethernet port of a computer
2. Connect the other end of the Ethernet cable to one of the numbered Ethernet ports of the switch. The LED of the port lights if the device connected is active.
3. Repeat Step 1 and Step 2 for each device to connect to the switch.

We strongly recommend using CAT-5E or better cable to connect network devices.

Connect the switch to end nodes using a standard Cat 5/5e Ethernet cable (UTP/STP) to connect the switch to end nodes as shown in the illustration below.

Switch ports will automatically adjust to the characteristics (MDI/MDI-X, speed, duplex) of the device to which the switch is connected.

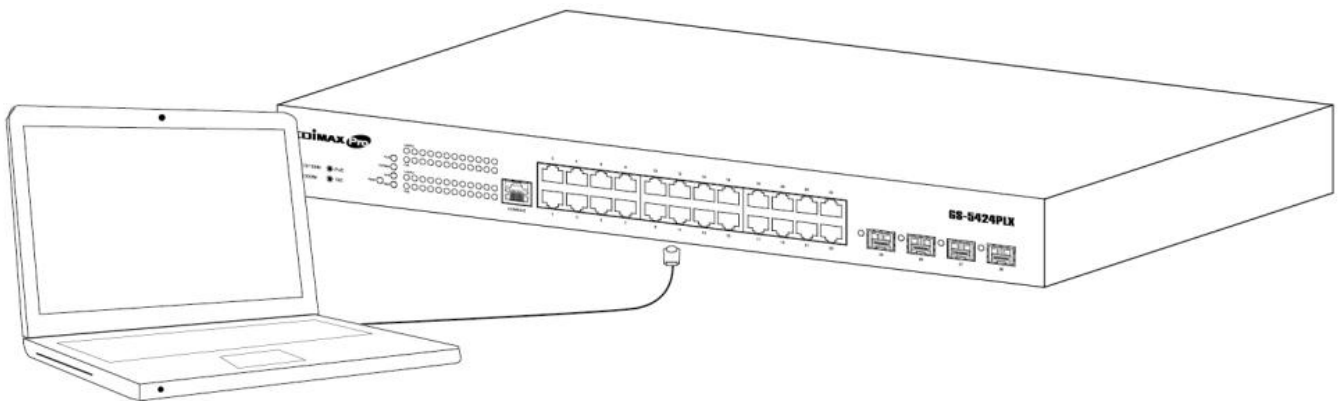

Connect to PC

III-1-3 Starting the Web-based Configuration Utility

This section describes how to navigate the web-based switch configuration utility.

Be sure to disable any pop-up blocker.

Browser Restrictions

- If you are using older versions of Internet Explorer, you cannot directly use an IPv6 address to access the device. You can, however, use the DNS (Domain Name System) server to create a domain name that contains the IPv6 address, and then use that domain name in the address bar in place of the IPv6 address.
- If you have multiple IPv6 interfaces on your management station, use the IPv6 global address instead of the IPv6 link local address to access the device from your browser.


Launching the Configuration Utility

To open the web-based configuration utility:


1. Open a Web browser.
2. Enter the IP address of the device you are configuring in the address bar on the browser (factory default IP address is 192.168.2.1) and then press Enter.

When the device is using the factory default IP address, its power LED flashes continuously. When the device is using a DHCP assigned IP address or an administrator-configured static IP address, the power LED is lit a solid color. Your computer's IP address must be in the same subnet as the switch. For example, if the switch is using the factory default IP address, your computer's IP address can be in the following range: 192.168.2.x (whereas x is a number from 2 to 254).

After a successful connection, the login window displays.

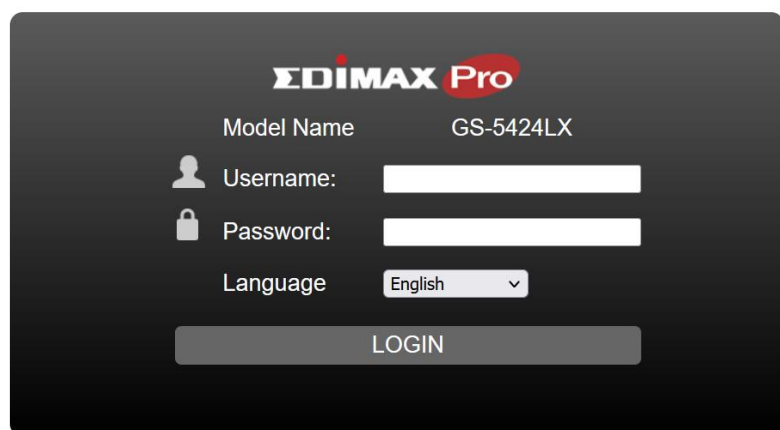

The login screen for EDIMAX Pro features a dark background. At the top center is the EDIMAX Pro logo. Below it, the model name 'GS-5424LX' is displayed. The login fields include a 'Username' field with a user icon, a 'Password' field with a lock icon, and a 'Language' dropdown menu currently set to 'English'. A 'LOGIN' button is positioned at the bottom center.

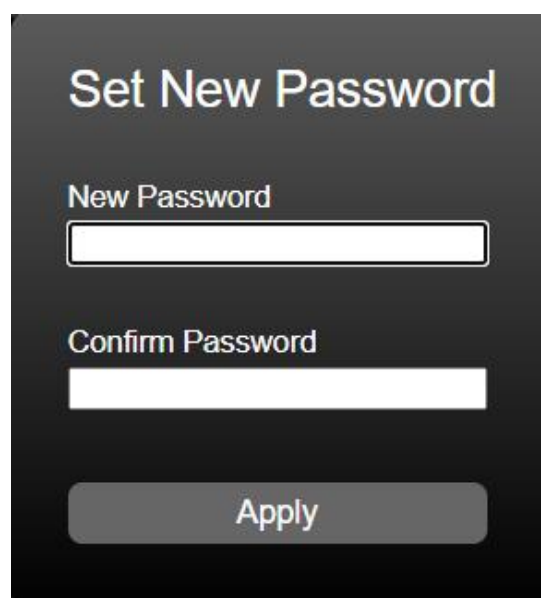

The 'Set New Password' screen has a dark background. It contains two input fields: 'New Password' and 'Confirm Password'. An 'Apply' button is located at the bottom center.

III-1-4 Logging In

The default username is admin and the default password is admin. The first time that you log in with the default username and password, you are required to enter a new password.

To log in to the device configuration utility:

1. Enter the default user ID (admin) and the default password (admin).
2. If this is the first time that you logged on with the default user ID (admin) and the default password (admin) it is recommended that you change your password immediately. See "4.9.3. Administrator" for additional information.

When the login attempt is successful, the System Information window displays.

Status >> System Information

- Status
 - System Information**
 - Logging Message
- Port
 - Link Aggregation
 - MAC Address Table
- Network
- Port
- VLAN
- MAC Address Table
- Spanning Tree
- Discovery
- Multicast
- Security
- ACL
- QoS
- Diagnostics
- Management

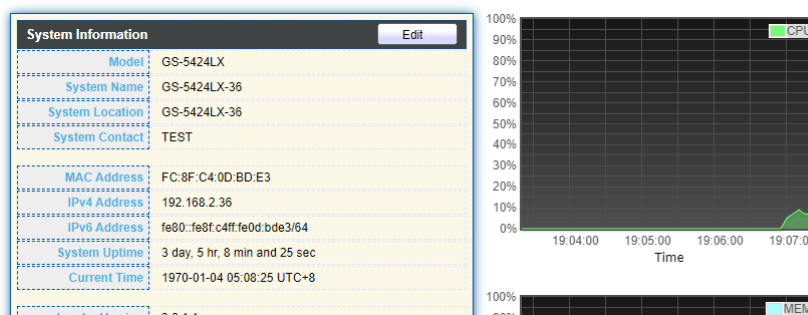
 


Figure III-1 - System Information

If you entered an incorrect username or password, an error message appears and the Login page remains displayed on the window. If you are having problems logging in, please see the Launching the Configuration Utility section in the Administration Guide for additional information.

III-1-5 Logging Out

By default, the application logs out after ten minutes of inactivity.

To manually logout, click Logout in the top right corner of any page.

When a timeout occurs or you intentionally log out of the system, a message appears and the Login page appears, with a message indicating the logged-out state. After you log in, the application returns to the initial page.

IV Web-based Switch Configuration

GS-5424LX provides rich Layer 2 functionality for switches in your networks. This chapter describes how to use the web-based management interface (Web UI) to configure the switch's features.

For the purposes of this manual, the user interface is separated into four sections, as shown in the following figure:

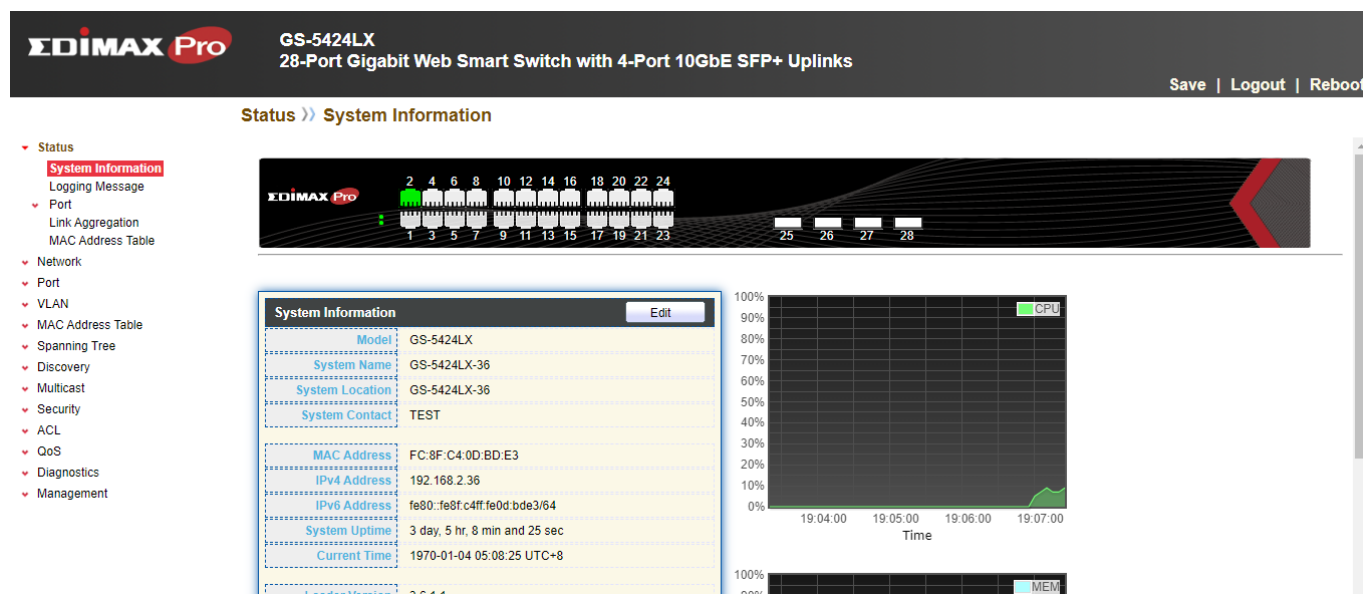


Figure IV-1 -User Interface

IV-1 Status

Use the Status pages to view system information and status.

IV-1-1 System Information

This page shows switch panel, CPU utilization, Memory utilization and other system current information. It also allows user to edit some system information.

To display the Device Information web page, click **Status > System Information**.

Click "Edit" button on the table title to edit following system information.

Edit System Information

System Name: Switch

System Location: Default

System Contact: Default

Apply Close

Figure IV - Status > System Information > Edit System Information

Item	Description
System Name	System name of the switch.
System Location	Location information of the switch.
System Contact	Contact information of the switch.

IV-1-2 Logging Message

To view the logging messages stored on the RAM and Flash, click **Status > Logging Message**.

Logging Message Table

Viewing: RAM

Showing: All entries

Showing 1 to 4 of 4 entries

Log ID	Time	Severity	Description
1	Jan 01 2000 00:01:19	notice	New http connection for user admin, source 192.168.2.22 ACCEPTED
2	Jan 01 2000 00:01:01	notice	GigabitEthernet28 link up
3	Jan 01 2000 00:00:58	notice	RESTART: System restarted - Cold Start
4	Jan 01 2000 00:00:58	notice	Logging is enabled

Clear Refresh

First Previous 1 Next Last

Figure IV-2 - Status > Logging Message

Item	Description
Log ID	The log identifier.
Time	The time stamp for the logging message.
Severity	The severity for the logging message.
Description	The description of logging message.
Viewing	The logging view including: - RAM: Show the logging messages stored on the RAM. - Flash: Show the logging messages stored on the Flash.
Clear	Clear the logging messages.
Refresh	Refresh the logging messages.

IV-1-3 Port

IV-1-3-1 Statistics

Interfaces and Ethernet-like counters display errors on the traffic passing through each port.

RMON counters provide a total count of different frame types and sizes passing through each port.

The “**Clear**” button will clear counter of current selected port.

To display the Port Flow Chart web page, click **Status > Port > Statistics**.


Status >> Port >> Statistics

Interface	
ifInOctets	5956468
ifInUcastPkts	29448
ifInNUcastPkts	5347
ifInDiscards	0
ifOutOctets	12340356
ifOutUcastPkts	29924
ifOutNUcastPkts	3448
ifOutDiscards	0
ifInMulticastPkts	4738
ifInBroadcastPkts	609
ifOutMulticastPkts	3448
ifOutBroadcastPkts	0

Figure IV-3 - Status > Port > Statistics

IV-1-3-2 Error Disabled

To display the Error Disabled web page, click **Status > Port > Error Disabled**.

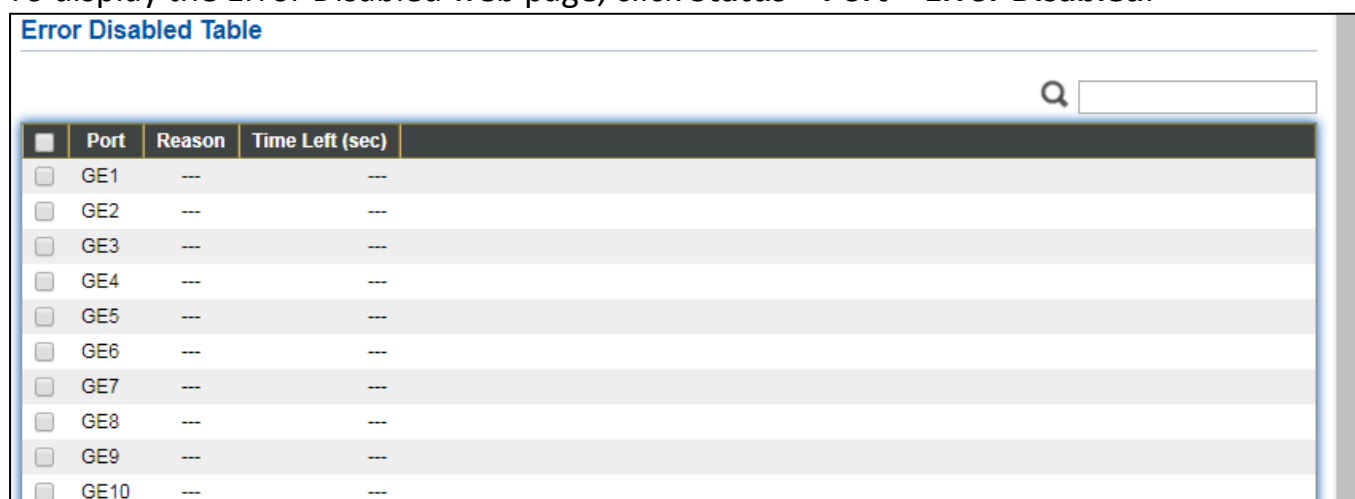

	Port	Reason	Time Left (sec)
☐	GE1	---	---
☐	GE2	---	---
☐	GE3	---	---
☐	GE4	---	---
☐	GE5	---	---
☐	GE6	---	---
☐	GE7	---	---
☐	GE8	---	---
☐	GE9	---	---
☐	GE10	---	---

Figure IV-4- Status > Port > Error Disabled

Item	Description
☐	Select one or more port to operate.
Port	Interface or port number.
Reason	Port will be disabled by one of the following error reason: ● BPDU Guard ● UDLD ● Self Loop ● Broadcast Flood ● Unknown Multicast Flood ● Unicast Flood ● ACL ● Port Security Violation ● DHCP rate limit ● ARP rate limit
Time Left (sec)	The time left in second for the error recovery.
Refresh	Refresh the current page.
Recover	Recover the selected port status.

IV-1-3-3 Bandwidth Utilization

This page allow user to browse ports' bandwidth utilization in real time. This page will refresh automatically in every refresh period.

To display Bandwidth Utilization web page, click **Status > Port > Bandwidth Utilization**.

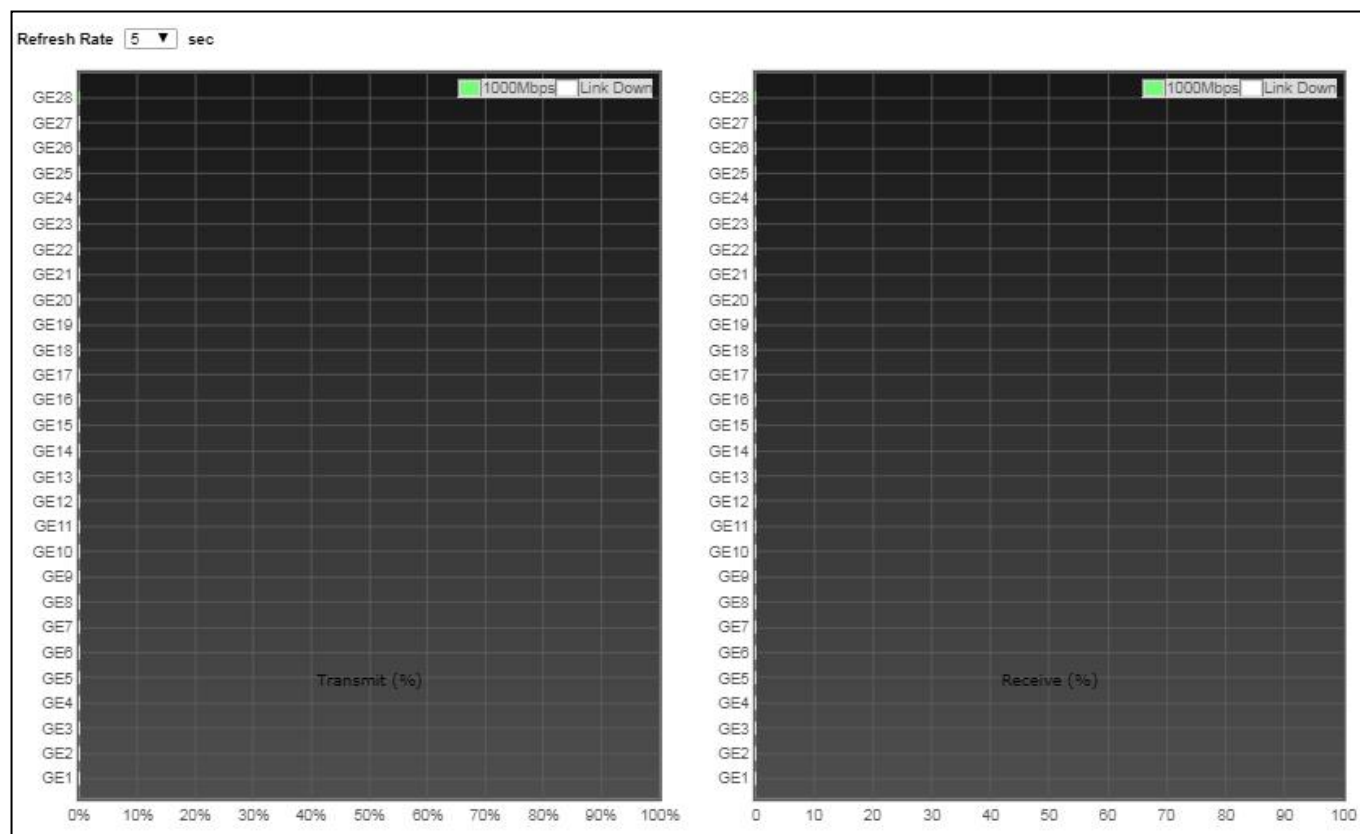


Figure IV-5 - Status > Port > Bandwidth Utilization

Item	Description
Refresh Rate	Refresh the web page every period of seconds to get new bandwidth utilization data.

IV-1-4 Link Aggregation

To display the Link Aggregation web page, click **Status > Link Aggregation**.

Status >> Link Aggregation

- ▼ Status
 - System Information
 - Logging Message
 - ▼ Port
 - Link Aggregation**
 - MAC Address Table
 - ▼ Network
 - ▼ Port
 - ▼ VLAN
 - ▼ MAC Address Table
 - ▼ Spanning Tree
 - ▼ Discovery
 - ▼ Multicast
 - ▼ Security
 - ▼ ACL
 - ▼ QoS

Link Aggregation Table

LAG	Name	Type	Link Status	Active Member	Inactive Member
LAG 1	Port23-24	LACP	Down		GE23-GE24
LAG 2		---	---		
LAG 3		---	---		
LAG 4		---	---		
LAG 5		---	---		
LAG 6		---	---		
LAG 7		---	---		
LAG 8		---	---		

Figure IV-6 - Status > Link Aggregation

Item	Description
LAG	LAG Name.
Name	LAG port description.
Type	The type of the LAG. ● Static: The group of ports assigned to a static LAG are always active members. ● LACP: The group of ports assigned to dynamic LAG are candidate ports. LACP determines which candidate ports are active member ports.
Link Status	LAG port link status.
Active Member	Active member ports of the LAG.
Inactive Member	Inactive member ports of the LAG.

IV-1-5 MAC Address Table

The MAC address table page displays all MAC address entries on the switch including static MAC address created by administrator or auto learned from hardware. The “Clear” button will clear all dynamic entries and “Refresh” button will retrieve latest MAC address entries and show them on page.

To display the MAC Address Table web page, click **Status > MAC Address Table**.

MAC Address Table				
Showing All entries		Showing 1 to 2 of 2 entries		
VLAN	MAC Address	Type	Port	
1	74:DA:38:17:6E:7A	Management	CPU	
1	B8:6B:23:6D:C1:14	Dynamic	GE28	
Clear Refresh		First Previous 1 Next Last		

Figure IV-7 - Status > MAC Address Table

Item	Description
VLAN	VLAN ID of the MAC address.
MAC Address	MAC address.
Type	The type of MAC address ● Management: DUT’s base MAC address for management Purpose. ● Static: Manually configured by administrator ● Dynamic: Auto learned by hardware.
Port	The type of Port ● CPU: DUT’s CPU port for management purpose. ● Other: Normal switch port.

Network

Use the Network pages to configure settings for the switch network interface and how the switch connects to a remote server to get services.

IV-1-6 IP Address

This section allows you to edit the IP address, Subnet Mask, Gateway and DNS server of the switch.

To view the IP Address menu, navigate to **Network > IP Address**.

IPv4 Address

Address Type

☒ Static

☐ Dynamic

IP Address

192.168.2.1

Subnet Mask

255.255.255.0

Default Gateway

192.168.2.254

DNS Server 1

168.95.1.1

DNS Server 2

168.95.192.1

IPv6 Address

Auto Configuration

☒ Enable

DHCPv6 Client

☐ Enable

IPv6 Address

Prefix Length

0 (0 - 128)

IPv6 Gateway

DNS Server 1

DNS Server 2

Operational Status

IPv4 Address

192.168.2.1

IPv4 Default Gateway

192.168.2.254

IPv6 Address

fe80::76da:38ff:fe17:6e7a/64

IPv6 Gateway

::

Link Local Address

fe80::76da:38ff:fe17:6e7a/64

Apply

Figure IV-8- Network > IP Address

Item	Description
Address Type	The address type of switch IP configuration including ● Static: Static IP configured by users will be used. ● Dynamic: Enable the DHCP to obtain the IP address from a DHCP server.

IP Address	Specify the switch static IP address on the static configuration.
Subnet Mask	Specify the switch subnet mask on the static configuration.
Default Gateway	Specify the default gateway on the static configuration. The default gateway must be in the same subnet with switch IP address configuration.
DNS Server 1	Specify the primary user-defined IPv4 DNS server configuration.
DNS Server 2	Specify the secondary user-defined IPv4 DNS server configuration.

Table 3-2: IPv6 Address fields

IPv4 Address	The operational IPv4 address of the switch.
IPv4 Gateway	The operational IPv4 gateway of the switch.
IPv6 Address v6	The operational IPv6 address of the switch.
IPv6 Gateway	The operational IPv6 gateway of the switch.
Link Local Address	The IPv6 link local address for the switch.

IV-1-7 System Time

This page allow user to set time source, static time, time zone and daylight saving settings. Time zone and daylight saving takes effect both static time or time from SNTP server.

To display System Time page, click **Network > System Time**.

Source

☐ SNTP
☐ From Computer
☒ Manual Time

Time Zone

UTC +8:00

SNTP

Address Type

☒ Hostname
☐ IPv4

Server Address

Server Port

123 (1 - 65535, default 123)

Manual Time

Date

2000-01-01 YYYY-MM-DD

Time

00:15:47 HH:MM:SS

Daylight Saving Time

Type

☒ None
☐ Recurring
☐ Non-recurring
☐ USA
☐ European

Offset

60 Min (1 - 1440, default 60)

Recurring

From:

Day Sun Week First Month Jan Time

To:

Day Sun Week First Month Jan Time

Non-recurring

From:

YYYY-MM-DD HH:MM

To:

YYYY-MM-DD HH:MM

Operational Status

Current Time

2000-01-01 00:15:47 UTC+8

Apply

Figure IV-9 - Network > System Time

Item	Description
Source	Select the time source. ● SNTP: Time sync from NTP server. ● From Computer: Time set from browser host. ● Manual Time: Time set by manually configure.
Time Zone	Select a time zone difference from listing district.
SNTP	
Address Type	Select the address type of NTP server. This is enabled when time source is SNTP.
Server Address	Input IPv4 address or hostname for NTP server. This is enabled when time source is SNTP.
Server Port	Input NTP port for NTP server. Default is 123. This is enabled when time source is SNTP.
Manual Time	
Date	Input manual date. This is enabled when time source is manual.
Time	Input manual time. This is enabled when time source is manual.
Daylight Saving Time	
Type	Select the mode of daylight saving time. ● Disable: Disable daylight saving time. ● Recurring: Using recurring mode of daylight saving time. ● Non-Recurring: Using non-recurring mode of daylight saving time. ● USA: Using daylight saving time in the United States that starts on the second Sunday of March and ends on the first Sunday of November. ● European: Using daylight saving time in the Europe that starts on the last Sunday in March and ending on the last Sunday in October.
Offset	Specify the adjust offset of daylight saving time.
Recurring From	Specify the starting time of recurring daylight saving time. This field available when selecting "Recurring" mode.
Recurring To	Specify the ending time of recurring daylight saving time. This field available when selecting "Recurring" mode.
Non-recurring From	Specify the starting time of non-recurring daylight saving time. This field available when selecting "Non-Recurring" mode.
Non-recurring To	Specify the ending time of recurring daylight saving time. This field available when selecting "Non-Recurring" mode.
Non-recurring From	Specify the starting time of non-recurring daylight saving time. This field available when selecting "Non-Recurring" mode.
Non recurring To	Specify the ending time of recurring daylight saving time. This field available when selecting "Non-Recurring" mode.

IV-2 Port

Use the Port pages to configure settings for switch port related features.

IV-2-1 Port Setting

This page shows port current status and allow user to edit port configurations. Select port entry and click “**Edit**” button to edit port configurations.

To display Port Setting web page, click **Port > Port Setting**.

Port Setting Table										
										
☐	Entry	Port	Type	Description	State	Link Status	Speed	Duplex	Flow Control	
☐	1	GE1	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	2	GE2	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	3	GE3	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	4	GE4	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	5	GE5	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	6	GE6	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	7	GE7	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	8	GE8	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	9	GE9	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	10	GE10	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	11	GE11	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	12	GE12	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	13	GE13	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	14	GE14	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	15	GE15	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	16	GE16	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	17	GE17	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	18	GE18	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	19	GE19	1000M Copper		Enabled	Down	Auto	Auto	Disabled	
☐	20	GE20	1000M Copper		Enabled	Down	Auto	Auto	Disabled	

Figure IV-10 - Port > Port Setting

Item	Description
Port	Port Name.
Type	Port media type.
Description	Port Description.
State	Port admin state ● Enabled: Enable the port. ● Disabled: Disable the port.
Link Status	Current port link status ● Up: Port is link up. ● Down: Port is link down.
Speed	Current port speed configuration and link speed status.

Duplex	Current port duplex configuration and link duplex status.
Flow Control	Current port flow control configuration and link flow control status.

Click “**Edit**” button to edit Port Setting menu

Edit Port Setting

Port
GE1

Description

State
☒ Enable

Speed

☒ Auto
☐ 10M

☐ Auto - 10M
☐ 100M

☐ Auto - 100M
☐ 1000M

☐ Auto - 1000M

☐ Auto - 10M/100M

Duplex

☒ Auto

☐ Full

☐ Half

Flow Control

☐ Auto

☐ Enable

☒ Disable

Apply
Close

Figure IV-11- Port > Port Setting > Port Setting

Item	Description
Port	Selected Port list.
Description	Port media type.
State	Port admin state. ● Enabled: Enable the port. ● Disabled: Disable the port.
Speed	Port speed capabilities. ● Auto: Auto speed with all capabilities. ● Auto-10M: Auto speed with 10M ability only. ● Auto-100M: Auto speed with 100M ability only. ● Auto-1000M: Auto speed with 1000M ability only. ● Auto-10M/100M: Auto speed with 10M/100M abilities. ● 10M: Force speed with 10M ability. ● 100M: Force speed with 100M ability. ● 1000M: Force speed with 1000M ability.
Duplex	Port duplex capabilities.

	● Auto: Auto duplex with all capabilities. ● Half: Auto speed with 10M and 100M ability only. ● Full: Auto speed with 10M/100M/1000M ability only.
Flow Control	Port flow control. ● Auto: Auto flow control by negotiation. ● Enabled: Enable flow control ability. ● Disabled: Disable flow control ability.

IV-2-2 Error Disable

To display Error Disabled web page, click **Port > Error Disabled**

Figure IV-12 - Port > Error disable

Item	Description
Recover Interval	Auto recovery after this interval for error disabled port.
BPDU Guard	Enabled to auto shutdown port when BPDU Guard reason occur. This reason caused by STP BPDU Guard mechanism.
UDLD	Enabled to auto shutdown port when UDLD violation occur.
Self Loop	Enabled to auto shutdown port when Self Loop reason occur.
Broadcast Flood	Enabled to auto shutdown port when Broadcast Flood reason occur. This reason caused by broadcast rate exceed broadcast storm control rate.
Unknown Multicast Flood	Enabled to auto shutdown port when Unknown Multicast Flood reason occur. This reason caused by unknown multicast rate exceed unknown multicast storm control rate.
Unicast Flood	Enabled to auto shutdown port when Unicast Flood reason occur. This reason caused by unicast rate exceed unicast storm control rate.

ACL	Enabled to auto shutdown port when ACL shutdown port reason occur. This reason caused packet match the ACL shutdown port action.
Port Security	Enabled to auto shutdown port when Port Security Violation reason occur. This reason caused by violation port security rules.
DHCP rate limit	Enabled to auto shutdown port when DHCP rate limit reason occur. This reason caused by DHCP packet rate exceed DHCP rate limit.
ARP rate limit	Enabled to auto shutdown port when ARP rate limit reason occur. This reason caused by DHCP packet rate exceed ARP rate limit.

IV-2-3 Link Aggregation

Link aggregation refers to various methods of aggregating multiple network connections in parallel in order to increase throughput beyond what a single connection could sustain, and to provide redundancy in case one of the links should fail.

A link aggregation group (LAG) is the collection of physical ports combined together.

IV-2-3-1 Group

This page allow user to configure link aggregation group load balance algorithm and group member.

To view the Group menu, navigate to **Port > Link Aggregation > Group**

Load Balance Algorithm

☒ MAC Address
☐ IP-MAC Address

Apply

Link Aggregation Table

LAG	Name	Type	Link Status	Active Member	Inactive Member
☐ LAG 1		---	---		
☐ LAG 2		---	---		
☐ LAG 3		---	---		
☐ LAG 4		---	---		
☐ LAG 5		---	---		
☐ LAG 6		---	---		
☐ LAG 7		---	---		
☐ LAG 8		---	---		

Edit

Figure IV-13 - Port > Link Aggregation > Group

Item	Description
Load Balance Algorithm	LAG load balance distribution algorithm ● MAC address: Based on MAC address. ● IP-MAC address: Based on MAC address and IP address.
LAG	LAG Name.
Name	LAG port description.
Type	The type of the LAG ● Static: The group of ports assigned to a static LAG are always active members. ● LACP: The group of ports assigned to dynamic LAG are candidate ports. LACP determines which candidate ports are active member ports.
Link Status	LAG port link status
Active Member	Active member ports of the LAG.
Inactive Member	Inactive member ports of the LAG.

Select One of “**LAG**”(Link Aggregation Group) and press “**Edit**” button.

Static Link Aggregation and LACP (Aggregation Control Protocol)

Link Aggregation

MAC Address Table

Network

IP Address

System Time

Port

Port Setting

Error Disabled

Link Aggregation

Group

Port Setting

LACP

EEE

Jumbo Frame

VLAN

MAC Address Table

Link Aggregation Table

	LAG	Name	Type	Link Status	Active Member	Inactive Member
☒	LAG 1	Port23-24	LACP	Down		GE23-GE24
☐	LAG 2		---	---		
☐	LAG 3		---	---		
☐	LAG 4		---	---		
☐	LAG 5		---	---		
☐	LAG 6		---	---		
☐	LAG 7		---	---		
☐	LAG 8		---	---		

Edit

GS-5424LX supports two primary types of LAG for different networking scenarios.

Static Link Aggregation and LACP (Aggregation Control Protocol)

A. *Static* Link Aggregation Setting Steps

Step 1 Go to Port>>Link Aggregation >>**Static**

Step2. Select **Static** and press  to select the Available Port to put in the LAG (Link Aggregation Group), Then press “**Apply**” button

Edit Link Aggregation Group

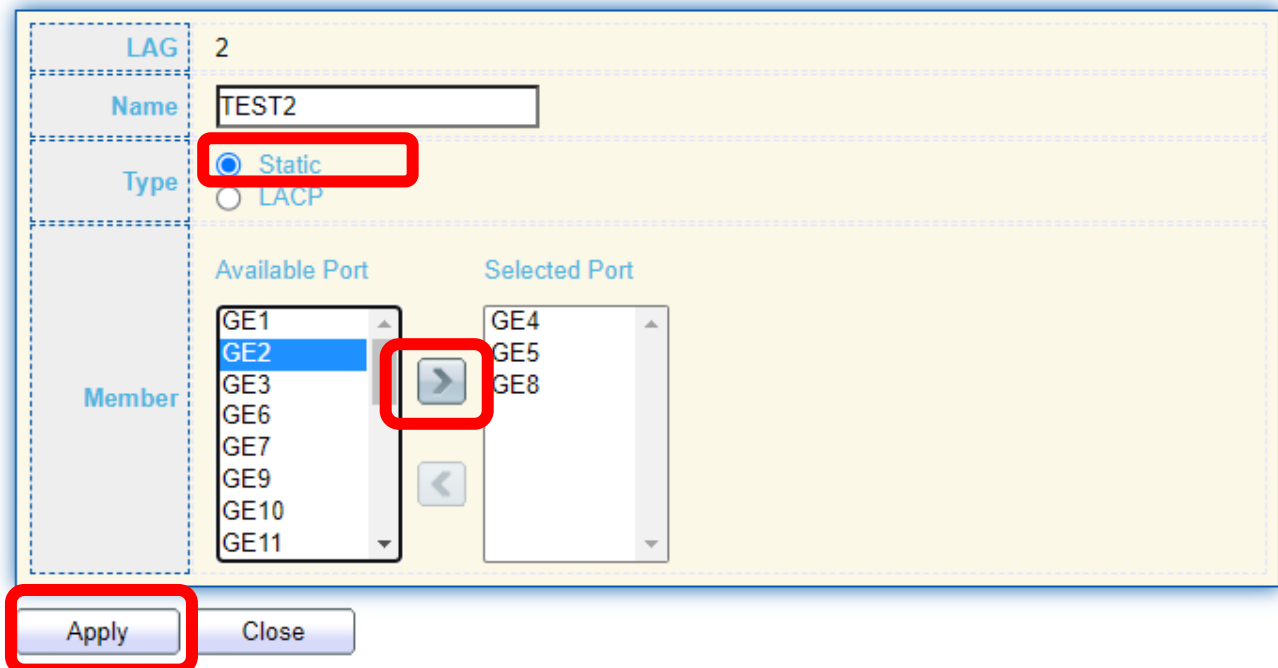


Figure IV-14 - Port > Link Aggregation > Group > Edit Link Aggregation Group

Item	Description
LAG	Selected LAG group ID.
Name	LAG port description.
Type	The type of the LAG ● Static: The group of ports assigned to a static LAG are always active members. ● LACP: The group of ports assigned to LACP are candidate ports. LACP determines which candidate ports are active member ports. The non-active candidate ports are standby ports ready to replace any failing active member ports.



1. Edimax Switch Default IP address: 192.168.2.1

Please modify IP address (Must be different IP address) before configuring another Switch for completing Link aggregation settings

2. Another Switch (Switch B) must be set as “*Static*” Type, too.

For IP Address Modification, please refer to

Network >> IP Address

Status

System Information

Logging Message

Port

Link Aggregation

MAC Address Table

Network

IP Address

System Time

Port

IPv4 Address

Address Type

☒ Static

☐ Dynamic

IP Address

192.168.2.1

Subnet Mask

255.255.255.0

Default Gateway

192.168.2.254

You can check the status of “Link aggregation Table” to make sure LAG has been created or not.

Status >> Link Aggregation

Status

System Information

Logging Message

Port

Link Aggregation

MAC Address Table

Network

Port

PoE

VLAN

MAC Address Table

Spanning Tree

Link Aggregation Table


LAG	Name	Type	Link Status	Active Member	Inactive Member
LAG 1	Port 1-4	Static	Up	GE2	GE1,GE3-GE4
LAG 2		---	---		
LAG 3		---	---		
LAG 4		---	---		
LAG 5		---	---		
LAG 6		---	---		

B. **LACP** Link Aggregation Control Protocol Setting Steps

Step 1 Go to Port>>Link Aggregation >>**LACP**



Step 2. Select **Static** and press  to select the Available Port to put in the LAG (Link Aggregation Group), Then press “**Apply**” button

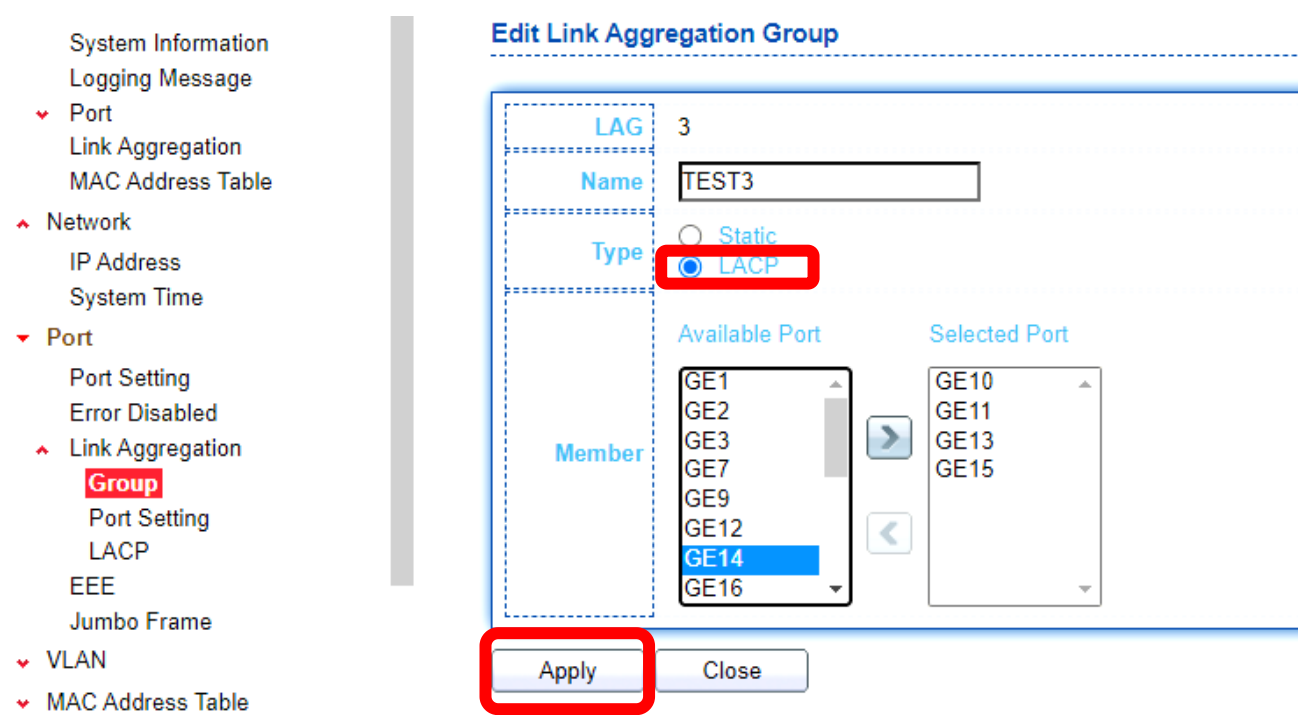

Item	Description
LAG	Selected LAG group ID.
Name	LAG port description.
Type	The type of the LAG ● Static: The group of ports assigned to a static LAG are always active members. ● LACP: The group of ports assigned to LACP are candidate ports. LACP determines which candidate ports are active member ports. The non-active candidate ports are standby ports ready to replace any failing active member ports.



1. Edimax Switch Default IP address: 192.168.2.1

Please modify IP address (Must be different IP address) before configuring another Switch for completing Link aggregation settings

2. Another Switch (Switch B) must be set as “**LACP**” Type, too.

IV-2-3-2 Port Setting of Link Aggregation

This page shows LAG port current status and allow user to edit LAG port configurations. Select LAG entry and click “**Edit**” button to edit LAG port configurations.

To display LAG Port Setting web page, click **Port > Link Aggregation > Port Setting**.

Port Setting Table									
Q									
☐	LAG	Type	Description	State	Link Status	Speed	Duplex	Flow Control	
☐	LAG 1			Enabled	Down	Auto	Auto	Disabled	
☐	LAG 2			Enabled	Down	Auto	Auto	Disabled	
☐	LAG 3			Enabled	Down	Auto	Auto	Disabled	
☐	LAG 4			Enabled	Down	Auto	Auto	Disabled	
☐	LAG 5			Enabled	Down	Auto	Auto	Disabled	
☐	LAG 6			Enabled	Down	Auto	Auto	Disabled	
☐	LAG 7			Enabled	Down	Auto	Auto	Disabled	
☐	LAG 8			Enabled	Down	Auto	Auto	Disabled	
Edit									

Item	Description
LAG	LAG Port Name.
Type	LAG Port media type.
Description	LAG Port description.
State	LAG Port admin state ● Enabled: Enable the port. ● Disabled: Disable the port.
Link Status	Current LAG port link status ● Up: Port is link up. ● Down: Port is link down.
Speed	Current LAG port speed configuration and link speed status.
Duplex	Current LAG port duplex configuration and link duplex status.
Flow Control	Current LAG port flow control configuration and link flow control status.

Click “**Edit**” to view Edit Port Setting menu.

Port

LAG1

Description

State

☒ Enable

Speed

☒ Auto
☐ 10M
☐ 100M
☐ 1000M
☐ Auto - 10M
☐ Auto - 100M
☐ Auto - 1000M
☐ Auto - 10M/100M

Flow Control

☐ Auto
☐ Enable
☒ Disable

Apply

Close

Item	Description
Port	Selected Port list.
Description	Port description.
State	Port admin state ● Enabled: Enable the port. ● Disabled: Disable the port.
Speed	Port speed capabilities ● Auto: Auto speed with all capabilities. ● Auto-10M: Auto speed with 10M ability only. ● Auto-100M: Auto speed with 100M ability only. ● Auto-1000M: Auto speed with 1000M ability only. ● Auto-10M/100M: Auto speed with 10M/100M abilities. ● 10M: Force speed with 10M ability. ● 100M: Force speed with 100M ability. ● 1000M: Force speed with 1000M ability.
Flow Control	Port flow control ● Auto: Auto flow control by negotiation. ● Enabled: Enable flow control ability. ● Disabled: Disable flow control ability.

IV-2-3-3 LACP

This page allow user to configure LACP global and port configurations. Select ports and click “**Edit**” button to edit port configuration.

To display the LACP Setting web page, click **Port > Link Aggregation > LACP**.

Port >> Link Aggregation >> LACP

Error Disabled

Bandwidth Utilization

Link Aggregation

MAC Address Table

Network

IP Address

System Time

Port

Port Setting

Error Disabled

Link Aggregation

Group

Port Setting

LACP

EEE

Jumbo Frame

VLAN

MAC Address Table

System Priority

32768

(1 - 65535, default 32768)

Apply

LACP Port Setting Table

	Entry	Port	Port Priority	Timeout
☐	1	GE1	1	Long
☐	2	GE2	1	Long
☐	3	GE3	1	Long
☐	4	GE4	1	Long
☐	5	GE5	1	Long
☐	6	GE6	1	Long

Item	Description
System Priority	Configure the system priority of LACP. This decides the system priority field in LACP PDU.
Port	Port Name.
Port Priority	LACP priority value of the port.
Timeout	The periodic transmissions type of LACP PDUs. ● Long: Transmit LACP PDU with slow periodic (30s). ● Short: Transmit LACPP DU with fast periodic (1s).

Click "**Edit**" button to view Edit LACP Port Setting menu.

Edit LACP Port Setting

Port	GE1	
Port Priority	1	(1 - 65535, default 1)
Timeout	☒ Long ☐ Short	

Item	Description
Port	Selected port list.
Port Priority	Enter the LACP priority value of the port
Timeout	The periodic transmissions type of LACP PDUs. ● Long: Transmit LACP PDU with slow periodic (30s). ● Short: Transmit LACPP DU with fast periodic (1s).

IV-2-3-4 EEE

This page allow user to configure Energy Efficient Ethernet settings.

To display the EEE web page, click **Port > EEE**.

EEE Setting Table				
Q				
☐	Entry	Port	State	Operational Status
☐	1	GE1	Disabled	Disabled
☐	2	GE2	Disabled	Disabled
☐	3	GE3	Disabled	Disabled
☐	4	GE4	Disabled	Disabled
☐	5	GE5	Disabled	Disabled
☐	6	GE6	Disabled	Disabled
☐	7	GE7	Disabled	Disabled
☐	8	GE8	Disabled	Disabled
☐	9	GE9	Disabled	Disabled
☐	10	GE10	Disabled	Disabled
☐	11	GE11	Disabled	Disabled
☐	12	GE12	Disabled	Disabled
☐	13	GE13	Disabled	Disabled
☐	14	GE14	Disabled	Disabled
☐	15	GE15	Disabled	Disabled
☐	16	GE16	Disabled	Disabled
☐	17	GE17	Disabled	Disabled
☐	18	GE18	Disabled	Disabled
☐	19	GE19	Disabled	Disabled
☐	20	GE20	Disabled	Disabled

Item	Description
Port	Port Name.
State	Port EEE admin state ● Enabled: EEE is enabled. ● Disabled: EEE is disabled.
Operational Status	Port EEE operational status ● Enabled: EEE is operating. ● Disabled: EEE is no operating.

Click **“Edit”** to edit the EEE menu.

Edit EEE Setting

Port

GE1

State

☐ Enable

Apply

Close


Figure 33 - Port > EEE > Edit EEE Setting

Item	Description
Port	Port Name
State	Port EEE admin state ● Enabled: EEE is enabled. ● Disabled: EEE is disabled.

IV-2-4 Jumbo Frame

This page allow user to configure switch jumbo frame size.

To display Jumbo Frame web page, click **Port > Jumbo Frame**.

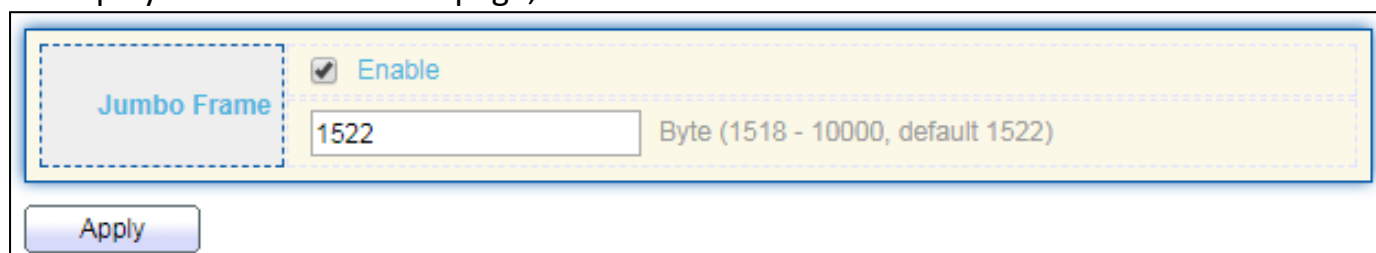

Item	Description
Jumbo Frame	Enable or disable jumbo frame. When jumbo frame is enabled, switch max frame size is allowed to configure. When jumbo frame is disabled, default frame size 1522 will be used.

IV-3 VLAN

A virtual local area network, virtual LAN or VLAN, is a group of hosts with a common set of requirements that communicate as if they were attached to the same broadcast domain, regardless of their physical location. A VLAN has the same attributes as a physical local area network (LAN), but it allows for end stations to be grouped together even if they are not located on the same network switch. VLAN membership can be configured through software instead of physically relocating devices or connections.

IV-3-1 VLAN

Use the VLAN pages to configure settings of VLAN.

IV-3-1-1 Create VLAN

This page allows user to add or delete VLAN ID entries and browser all VLAN entries that add statically or dynamic learned by GVRP. Each VLAN entry has a unique name, user can edit VLAN name in edit page.

To display Create VLAN page, click **VLAN > VLAN > Create VLAN**.

Available VLAN

VLAN 2
VLAN 3
VLAN 4
VLAN 5
VLAN 6
VLAN 7
VLAN 8
VLAN 9

Created VLAN

VLAN 1

Apply

VLAN Table

Showing All entries Showing 1 to 1 of 1 entries

VLAN	Name	Type
1	default	Default

Edit Delete

First Previous 1 Next Last

Item	Description
Available VLAN	VLAN has not created yet. Select available VLANs from left box then move to right box to add.
Created VLAN	VLAN had been created.

	Select created VLANs from right box then move to left box to delete
VLAN	The VLAN ID.
Name	The VLAN Name.
Type	The VLAN Type. ● Static: Port base VLAN. ● Dynamic: 802.1q VLAN.

Click “**Edit**” button to view Edit VLAN Name menu.

Edit VLAN Name

Name
VLAN0002

Apply
Close

Item	Description
Name	Input VLAN name.

IV-3-1-2 VLAN Configuration

This page allow user to configure the membership for each port of selected VLAN.

To display VLAN Configuration page, click **VLAN > VLAN > VLAN Configuration**.

VLAN Configuration Table

VLAN default ▼

Entry	Port	Mode	Membership				PVID
1	GE1	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
2	GE2	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
3	GE3	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
4	GE4	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
5	GE5	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
6	GE6	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
7	GE7	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
8	GE8	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
9	GE9	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
10	GE10	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
11	GE11	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
12	GE12	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
13	GE13	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
14	GE14	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
15	GE15	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
16	GE16	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
17	GE17	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
18	GE18	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
19	GE19	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
20	GE20	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
21	GE21	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
22	GE22	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
23	GE23	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒
24	GE24	Trunk	☐ Excluded	☐ Forbidden	☐ Tagged	☒ Untagged	☒

Figure 43 - VLAN > VLAN > VLAN Configuration

Item	Description
VLAN	Select specified VLAN ID to configure VLAN configuration.
Port	Display the interface of port entry.
Mode	Display the interface VLAN mode of port.
Membership	Select the membership for this port of the specified VLAN ID. ● Forbidden: Specify the port is forbidden in the VLAN. ● Excluded: Specify the port is excluded in the VLAN. ● Tagged: Specify the port is tagged member in the VLAN. ● Untagged: Specify the port is untagged member in the VLAN.
PVID	Display if it is PVID of interface.

IV-3-1-3 Membership

This page allow user to view membership information for each port and edit membership for specified interface.

To display Membership page, click **VLAN > VLAN > Membership**.

Membership Table					
Q					
	Entry	Port	Mode	Administrative VLAN	Operational VLAN
☐	1	GE1	Trunk	1UP	1UP
☐	2	GE2	Trunk	1UP	1UP
☐	3	GE3	Trunk	1UP	1UP
☐	4	GE4	Trunk	1UP	1UP
☐	5	GE5	Trunk	1UP	1UP
☐	6	GE6	Trunk	1UP	1UP
☐	7	GE7	Trunk	1UP	1UP
☐	8	GE8	Trunk	1UP	1UP
☐	9	GE9	Trunk	1UP	1UP
☐	10	GE10	Trunk	1UP	1UP
☐	11	GE11	Trunk	1UP	1UP
☐	12	GE12	Trunk	1UP	1UP
☐	13	GE13	Trunk	1UP	1UP
☐	14	GE14	Trunk	1UP	1UP
☐	15	GE15	Trunk	1UP	1UP
☐	16	GE16	Trunk	1UP	1UP
☐	17	GE17	Trunk	1UP	1UP
☐	18	GE18	Trunk	1UP	1UP
☐	19	GE19	Trunk	1UP	1UP
☐	20	GE20	Trunk	1UP	1UP
☐	21	GE21	Trunk	1UP	1UP
☐	22	GE22	Trunk	1UP	1UP
☐	23	GE23	Trunk	1UP	1UP
☐	24	GE24	Trunk	1UP	1UP
☐	25	GE25	Trunk	1UP	1UP
☐	26	GE26	Trunk	1UP	1UP
☐	27	GE27	Trunk	1UP	1UP
☐	28	GE28	Trunk	1UP	1UP
☐	29	LAG1	Trunk	1UP	1UP
☐	30	LAG2	Trunk	1UP	1UP

Figure 44 - VLAN > VLAN > Membership

Item	Description
Port	Display the interface of port entry.
Mode	Display the interface VLAN mode of port.
Administrative VLAN	Display the administrative VLAN list of this port.

Operational VLAN	Display the operational VLAN list of this port. Operational VLAN means the VLAN status that really runs in device. It may different to administrative VLAN.
------------------	---

Click "**Edit**" button to view the Edit Port Setting menu

Edit Port Setting

Port

GE1

Mode

Trunk

Membership

2

1UP

Forbidden

Excluded

Tagged

Untagged

PVID

Apply

Close

Figure 45 - VLAN > VLAN > Membership > Edit Port Setting

Item	Description
Port	Display the interface.
Mode	Display the VLAN mode of interface.
Membership	Select VLANs of left box and select one of following membership then move to right box to add membership. Select VLANs of right box then move to left box to remove membership. Tagging membership may not choose in differ VLAN port mode. Select the time source. ● Forbidden: Set VLAN as forbidden VLAN. ● Excluded: This option is always disabled. ● Tagged: Set VLAN as tagged VLAN. ● Untagged: Set VLAN as untagged VLAN. ● PVID: Check this checkbox to select the VLAN ID to be the port-based VLAN ID for this port. PVID may auto select or can't select in differ settings.

IV-3-1-4 Port Setting

This page allow user to configure ports VLAN settings such as VLAN port mode, PVID etc...The attributes depend on different VLAN port mode.

To display Port Setting page, click **VLAN > VLAN > Port Setting**.

Port Setting Table									
									
☐	Entry	Port	Mode	PVID	Accept Frame Type	Ingress Filtering	Uplink	TPID	
☐	1	GE1	Trunk	1	All	Enabled	Disabled	0x8100	
☐	2	GE2	Trunk	1	All	Enabled	Disabled	0x8100	
☐	3	GE3	Trunk	1	All	Enabled	Disabled	0x8100	
☐	4	GE4	Trunk	1	All	Enabled	Disabled	0x8100	
☐	5	GE5	Trunk	1	All	Enabled	Disabled	0x8100	
☐	6	GE6	Trunk	1	All	Enabled	Disabled	0x8100	
☐	7	GE7	Trunk	1	All	Enabled	Disabled	0x8100	
☐	8	GE8	Trunk	1	All	Enabled	Disabled	0x8100	
☐	9	GE9	Trunk	1	All	Enabled	Disabled	0x8100	
☐	10	GE10	Trunk	1	All	Enabled	Disabled	0x8100	
☐	11	GE11	Trunk	1	All	Enabled	Disabled	0x8100	
☐	12	GE12	Trunk	1	All	Enabled	Disabled	0x8100	
☐	13	GE13	Trunk	1	All	Enabled	Disabled	0x8100	
☐	14	GE14	Trunk	1	All	Enabled	Disabled	0x8100	
☐	15	GE15	Trunk	1	All	Enabled	Disabled	0x8100	
☐	16	GE16	Trunk	1	All	Enabled	Disabled	0x8100	
☐	17	GE17	Trunk	1	All	Enabled	Disabled	0x8100	
☐	18	GE18	Trunk	1	All	Enabled	Disabled	0x8100	
☐	19	GE19	Trunk	1	All	Enabled	Disabled	0x8100	
☐	20	GE20	Trunk	1	All	Enabled	Disabled	0x8100	
☐	21	GE21	Trunk	1	All	Enabled	Disabled	0x8100	
☐	22	GE22	Trunk	1	All	Enabled	Disabled	0x8100	
☐	23	GE23	Trunk	1	All	Enabled	Disabled	0x8100	
☐	24	GE24	Trunk	1	All	Enabled	Disabled	0x8100	

Item	Description
Port	Display the interface.
Mode	Display the VLAN mode of interface.
PVID	Display the Port-based VLAN ID of port.
Accept Frame Type	Display accept frame type of port.
Ingress Filtering	Display ingress filter status of port.
Uplink	Display uplink status.
TPID	Display TPID used of interface.

Click **“Edit”** button to Edit Port Setting menu.

Edit Port Setting

Port
GE1

Mode

☐ Hybrid
☐ Access
☒ Trunk
☐ Tunnel

PVID

1
(1 - 4094)

Accept Frame Type

☒ All
☐ Tag Only
☐ Untag Only

Ingress Filtering
☒ Enable

Uplink
☐ Enable

TPID
0x8100

Apply
Close

Item	Description
Port	Display selected port to be edited.
Mode	Select the VLAN mode of the interface. ● Forbidden: Set VLAN as forbidden VLAN. ● Hybrid: Support all functions as defined in IEEE 802.1Q specification. ● Access: Accepts only untagged frames and join an untagged VLAN. ● Trunk: An untagged member of one VLAN at most, and is a tagged member of zero or more VLANs.
PVID	Specify the port-based VLAN ID (1-4094). It's only available with Hybrid and Trunk mode.
Accepted Type	Specify the acceptable-frame-type of the specified interfaces. It's only available with Hybrid mode.
Ingress Filtering	Set checkbox to enable/disable ingress filtering. It's only available with Hybrid mode.
Uplink	Set checkbox to enable/disable uplink mode. It's only available with trunk mode.
TPID	Select TPID used of interface. It's only available with trunk mode.

IV-3-2 Voice VLAN

Use the Voice VLAN pages to configure settings of Voice VLAN.

IV-3-2-1 Property

This page allow user to configure global and per interface settings of voice VLAN.

To display Property Web page, click **VLAN> Voice VLAN> Property**.

State

☐ Enable

VLAN

None ▼

CoS / 802.1p
Remarking

☐ Enable

6 ▼

Aging Time

1440

Sec (30 - 65536, default 1440)

Apply

Port Setting Table

Q

	Entry	Port	State	Mode	QoS Policy
☐	1	GE1	Disabled	Auto	Voice Packet
☐	2	GE2	Disabled	Auto	Voice Packet
☐	3	GE3	Disabled	Auto	Voice Packet
☐	4	GE4	Disabled	Auto	Voice Packet
☐	5	GE5	Disabled	Auto	Voice Packet
☐	6	GE6	Disabled	Auto	Voice Packet
☐	7	GE7	Disabled	Auto	Voice Packet
☐	8	GE8	Disabled	Auto	Voice Packet
☐	9	GE9	Disabled	Auto	Voice Packet
☐	10	GE10	Disabled	Auto	Voice Packet
☐	11	GE11	Disabled	Auto	Voice Packet
☐	12	GE12	Disabled	Auto	Voice Packet
☐	13	GE13	Disabled	Auto	Voice Packet
☐	14	GE14	Disabled	Auto	Voice Packet
☐	15	GE15	Disabled	Auto	Voice Packet
☐	16	GE16	Disabled	Auto	Voice Packet
☐	17	GE17	Disabled	Auto	Voice Packet
☐	18	GE18	Disabled	Auto	Voice Packet
☐	19	GE19	Disabled	Auto	Voice Packet
☐	20	GE20	Disabled	Auto	Voice Packet

Item	Description
State	Set checkbox to enable or disable voice VLAN function.
VLAN	Select Voice VLAN ID. Voice VLAN ID cannot be default VLAN.
Cos/802.1p	Select a value of VPT. Qualified packets will use this VPT value as inner priority.
Remarking	Set checkbox to enable or disable 1p remarking. If enabled, qualified packets will be remark by this value.
Aging Time	Input value of aging time. Default is 1440 minutes. A voice VLAN entry will be age out after this time if without any packet pass through.
Port Setting Table	
Port	Display port entry.
State	Display enable/disabled status of interface.
Mode	Display voice VLAN mode.
QoS Policy	Display voice VLAN remark will effect which kind of packet.

Click “**Edit**” button to view Edit Port Setting menu.

Figure - VLAN > Voice VLAN > Property > Edit Port Setting

Item	Description
Port	Display selected port to be edited.
State	Set checkbox to enable/disabled voice VLAN function of interface.
Mode	Select port voice VLAN mode ● Auto: Voice VLAN auto detect packets that match OUI table and add received port into voice VLAN ID tagged member. ● Manual: User need add interface to VLAN ID tagged member manually.
QoS Policy	Select port QoS Policy mode ● Voice Packet: QoS attributes are applied to packets with OUIs in the source MAC address. ● All: QoS attributes are applied to packets that are classified to Voice VLAN.

IV-3-2-2 Voice OUI

This page allow user to add, edit or delete OUI MAC addresses. Default has 8 pre-defined OUI MAC.

To display the Voice OUI Web page, click **VLAN > Voice VLAN > Voice OUI**.

Voice OUI Table

Showing All entries Showing 1 to 8 of 8 entries

☐	OUI	Description
☐	00:E0:BB	3COM
☐	00:03:6B	Cisco
☐	00:E0:75	Veritel
☐	00:D0:1E	Pingtel
☐	00:01:E3	Siemens
☐	00:60:B9	NEC/Philips
☐	00:0F:E2	H3C
☐	00:09:6E	Avaya

Figure - VLAN > Voice VLAN > Voice OUI

Item	Description
OUI	Display OUI MAC address.
Description	Display description of OUI entry.

Click “Add” or “Edit” button to Add/Edit Voice OUI menu.

Add Voice OUI

OUI: : :

Description:

Edit Voice OUI

OUI: 00:03:6B

Description: Cisco

Figure - VLAN > Voice VLAN > Voice OUI > Add/Edit Voice OUI

Item	Description
OUI	Input OUI MAC address. Can't be edited in edit dialog.
Description	Input description of the specified MAC address to the voice VLAN OUI table.

IV-3-3 MAC VLAN

Use the MAC VLAN pages to configure settings of MAC VLAN.

IV-3-3-1 MAC Group

This page allow user to add or edit groups settings of MAC VLAN.

To display the MAC page , click **VLAN > MAC VLAN > MAC Group**.

Figure - VLAN > MAC VLAN > MAC Group

Item	Description
Group ID	Display group ID of entry.
MAC Address	Display mac address of entry.
Mask	Display mask of mac address for classified packet.

Click **"Add"** button or **"Edit"** button to view Add/Edit MAC menu.

Add MAC Group

Group ID

MAC Address

Mask

Edit MAC Group

Group ID

MAC Address

Mask

Figure - VLAN > MAC VLAN > MAC Group > Add/Edit MAC

Item	Description
Group ID	Input group ID that is a unique ID of mac group entry. The range from 1 to 2147483647. Only available on Add Dialog.
MAC Address	Input mac address for classifying packets.
Mask	Input mask of mac address.

IV-3-3-2 Group Binding

This page allow user to bind MAC VLAN group to each port with VLAN ID.

To display Group Binding page, click **VLAN> MAC VLAN > Group Binding**.

Group Binding Table

Showing All entries
Showing 0 to 0 of 0 entries

☐	Port	Group ID	VLAN
0 results found.			

Figure - VLAN > MAC VLAN > Group Binding

Item	Description
Port	Display port ID that binding with MAC group entry.
Group ID	Display group ID that port binding with.
VLAN	Display VLAN ID that assign to packets which match MAC group.

Click “Add” or “Edit” button to view the Add/Edit Group Binding menu.

Add Group Binding

Port

Group ID

VLAN

Available Port

Selected Port

Note: Only VLAN Hybrid port can be set MAC VLAN

None ▼

(1 - 4094)

Apply

Close

Edit Group Binding

Port

Group ID

VLAN

(1 - 4094)

Apply

Close

Figure - VLAN > MAC VLAN > Add/Edit Group Binding

Item	Description
Port	Select ports in left box then move to right to binding with MAC group. Or select ports in right box then move to left to unbind with MAC group. Only interface has hybrid VLAN mode can be selected and bound with protocol group. Only available on Add dialog.
Group ID	Select a Group ID to associate with port. Only available on Add dialog.
VLAN	Input VLAN ID that will assign to packets which match MAC group.

IV-3-4 Surveillance VLAN

Use the Surveillance VLAN pages to configure settings of Surveillance VLAN.

IV-3-4-1 Property

State

VLAN

CoS / 802.1p
Remarking

Port Aging Time

☒ Enable

VLAN0003

☒ Enable

6

1440

Min (30 - 65536, default 1440)

Note: Aging Time = Port Aging Time + OUI Aging Time(30 mins)

Apply

Port Setting Table

Entry	Port	State	Mode	QoS Policy
☐	1 GE1	Disabled	Auto	Video Packet
☐	2 GE2	Disabled	Auto	Video Packet
☐	3 GE3	Disabled	Auto	Video Packet
☐	4 GE4	Disabled	Auto	Video Packet
☐	5 GE5	Disabled	Auto	Video Packet
☐	6 GE6	Disabled	Auto	Video Packet
☐	7 GE7	Disabled	Auto	Video Packet
☐	8 GE8	Enabled	Auto	Video Packet
☐	9 GE9	Disabled	Auto	Video Packet
☐	10 GE10	Disabled	Auto	Video Packet
☐	11 GE11	Disabled	Auto	Video Packet
☐	12 GE12	Disabled	Auto	Video Packet
☐	13 GE13	Disabled	Auto	Video Packet
☐	14 GE14	Disabled	Auto	Video Packet
☐	15 GE15	Disabled	Auto	Video Packet
☐	16 GE16	Disabled	Auto	Video Packet
☐	17 GE17	Disabled	Auto	Video Packet
☐	18 GE18	Disabled	Auto	Video Packet
☐	19 GE19	Disabled	Auto	Video Packet
☐	20 GE20	Disabled	Auto	Video Packet
☐	21 GE21	Disabled	Auto	Video Packet
☐	22 GE22	Disabled	Auto	Video Packet
☐	23 GE23	Disabled	Auto	Video Packet
☐	24 GE24	Disabled	Auto	Video Packet
☐	25 XGE1	Disabled	Auto	Video Packet
☐	26 XGE2	Disabled	Auto	Video Packet
☐	27 XGE3	Disabled	Auto	Video Packet
☐	28 XGE4	Disabled	Auto	Video Packet
☐	29 LAG1	Disabled	Auto	Video Packet
☐	30 LAG2	Disabled	Auto	Video Packet
☐	31 LAG3	Disabled	Auto	Video Packet
☐	32 LAG4	Disabled	Auto	Video Packet
☐	33 LAG5	Disabled	Auto	Video Packet
☐	34 LAG6	Disabled	Auto	Video Packet
☐	35 LAG7	Disabled	Auto	Video Packet
☐	36 LAG8	Disabled	Auto	Video Packet

Edit

Item	Description
State	Enable/Disable
VLAN	Choose none or indicate VLAN
CoS/802.1p Remarking	The 802.1p standard defines seven levels of CoS from 0 through to 7 (highest priority). 802.1p is a sub-set of the 802.1q standard which added additional fields into the header of a standard Ethernet frame allowing it to contain VLAN identifiers as well as the priority values.
Port Aging Time	When aging is configured on an interface that's using port security, all the dynamically learned secure addresses age out when the aging time expire

To display Port Setting page, click the “Edit” button.

Edit Port Setting

Port

GE1

State

☐ Enable

Mode

☒ Auto
☐ Manual

QoS Policy

☒ Video Packet
☐ All

Apply

Close

Item	Description
Port	Display port entry.
State	Display enable/disabled status of interface.
Mode	Display voice VLAN mode.
QoS Policy	Display voice VLAN remark will effect which kind of packet.

IV-3-4-2 Surveillance OUI

Surveillance OUI Table

Showing All entries Showing 1 to 2 of 2 entries

	Description	OUI	OUI Mask
☐	DAHua	74-DA-38:00:00:00	FF-FF-FF-00:00:00
☐	DH IP cam	50-DE-19:00:00:00	FF-FF-FF-00:00:00

Item	Description
OUI	An organizationally unique identifier (OUI) is a 24-bit number that uniquely identifies a vendor, manufacturer, or other organization. ... In MAC addresses, the OUI is combined with a 24-bit number (assigned by the assignee of the OUI) to form the address.
OUI Mask	Specifies a set of MAC addresses using a bit mask to indicate the bits of the MAC addresses that must fit to the specified MAC address attribute.

To change the description of your IP camera, click the “Edit” button.

Edit Surveillance OUI

OUI

74:DA:38:00:00:00

Description

DAhua

Apply

Close

IV-4 MAC Address Table

Use the MAC Address Table pages to show dynamic MAC table and configure settings for static MAC entries.

IV-4-1 Dynamic Address

To display the Dynamic Address web page, click **MAC Address Table > Dynamic Address**.

Aging Time

300

Sec (10 - 630, default 300)

Apply

Dynamic Address Table

Showing All entries
Showing 1 to 1 of 1 entries

	VLAN	MAC Address	Port
☐	1	B8:6B:23:6D:C1:14	GE28

Clear

Refresh

Add Static Address

First

Previous

1

Next

Last

Figure - MAC Address Table > Dynamic Address

Item	Description
Aging Time	The time in seconds that an entry remains in the MAC address table. Its valid range is from 10 to 630 seconds, and the default value is 300 seconds.

IV-4-2 Static Address

To display the Static Address web page, click **MAC Address Table > Static Address**.

Figure 57 - MAC Address Table > Static Address.

Item	Description
MAC Address	The MAC address to which packets will be statically forwarded.
VLAN	Specify the VLAN to show or clear MAC entries.
Port	Interface or port number.

IV-4-3 Filtering Address

To display the Filtering Address web page, click **MAC Address Table > Filtering Address**.

Figure 58 - MAC Address Table > Filtering Address.

Item	Description
MAC Address	Specify unicast MAC address in the packets to be dropped.
VLAN	Specify the VLAN to show or clear MAC entries.

IV-5 Spanning Tree

The Spanning Tree Protocol (STP) is a network protocol that ensures a loop-free topology for any bridged Ethernet local area network.

IV-5-1 Property

To display the Property web page, click **Spanning Tree > Property**.

State	☐ Enable
Operation Mode	☐ STP ☒ RSTP ☐ MSTP
Path Cost	☒ Long ☐ Short
BPDU Handling	☐ Filtering ☒ Flooding
Priority	32768 (0 - 61440, default 32768)
Hello Time	2 Sec (1 - 10, default 2)
Max Age	20 Sec (6 - 40, default 20)
Forward Delay	15 Sec (4 - 30, default 15)
Tx Hold Count	6 (1 - 10, default 6)
Region Name	74:DA:38:17:6E:7A
Revision	0 (0 - 65535, default 0)
Max Hop	20 (1 - 40, default 20)
Operational Status	
Bridge Identifier	32768-74:DA:38:17:6E:7A
Designated Root Bridge	0-00:00:00:00:00:00
Root Port	N/A
Root Path Cost	0
Topology Change Count	0
Last Topology Change	0D/0H/0M/0S

Figure - Spanning Tree > Property

Item	Description
State	Enable/disable the STP on the switch.
Operation Mode	Specify the STP operation mode. ● STP: Enable the Spanning Tree (STP) operation. ● RSTP: Enable the Rapid Spanning Tree (RSTP) operation. ● MSTP: Enable the Multiple Spanning Tree (MSTP) operation.
Path Cost	Specify the path cost method. ● Long: Specifies that the default port path costs are within the range: 1-200,000,000. ● Short: Specifies that the default port path costs are within the range: 1-65,535.
BPDU Handling	Specify the BPDU forward method when the STP is disabled. ● Filtering: Filter the BPDU when STP is disabled. ● Flooding: Flood the BPDU when STP is disabled.
Priority	Specify the bridge priority. The valid range is from 0 to 61440, and the value should be the multiple of 4096. It ensures the probability that the switch is selected as the root bridge, and the lower value has the higher priority for the switch to be selected as the root bridge of the topology.
Hello Time	Specify the STP hello time in second to broadcast its hello message to other bridges by Designated Ports. Its valid range is from 1 to 10 seconds.
Max Age	Specify the time interval in seconds for a switch to wait the configuration messages, without attempting to redefine its own configuration.
Forward Delay	Specify the STP forward delay time, which is the amount of time that a port remains in the Listening and Learning states before it enters the Forwarding state. Its valid range is from 4 to 10 seconds.
TX Hold Count	Specify the tx-hold-count used to limit the maximum numbers of packets transmission per second. The valid range is from 1 to 10.
Region Name	The MSTP instance name. Its maximum length is 32 characters. The default value is the MAC address of the switch.
Revision	The MSTP revision number. Its valid range is from 0 to 65535.
Max Hop	Specify the number of hops in an MSTP region before the BPDU is discarded. The valid range is 1 to 40.
Operational Status	
Bridge Identifier	Bridge identifier of the switch.
Designated Root Identifier	Bridge identifier of the designated root bridge.
Root Port	Operational root port of the switch.
Root Path Cost	Operational root path cost.
Topology Change Count	Numbers of the topology changes.

Last Topology Change	The last time for the topology change.
----------------------	--

IV-5-2 Port Setting of STP

To configure and display the STP port settings, click **STP > Port Setting**.

Port Setting Table

Q

	Entry	Port	State	Path Cost	Priority	BPDU Filter	BPDU Guard	Operational Edge	Operational Point-to-Point	Port Role	Port State	Designated Bridge	Designated Port ID	Designated Cost
☐	1	GE1	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-1	20000
☐	2	GE2	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-2	20000
☐	3	GE3	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-3	20000
☐	4	GE4	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-4	20000
☐	5	GE5	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-5	20000
☐	6	GE6	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-6	20000
☐	7	GE7	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-7	20000
☐	8	GE8	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-8	20000
☐	9	GE9	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-9	20000
☐	10	GE10	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-10	20000
☐	11	GE11	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-11	20000
☐	12	GE12	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-12	20000
☐	13	GE13	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-13	20000
☐	14	GE14	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-14	20000
☐	15	GE15	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-15	20000
☐	16	GE16	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-16	20000
☐	17	GE17	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-17	20000
☐	18	GE18	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-18	20000
☐	19	GE19	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-19	20000
☐	20	GE20	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-20	20000
☐	21	GE21	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-21	20000
☐	22	GE22	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-22	20000
☐	23	GE23	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-23	20000
☐	24	GE24	Enabled	20000	128	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	0-00:00:00:00:00:00	128-24	20000

Figure - Spanning Tree > Port Setting

Item	Description
Port	Specify the interface ID or the list of interface IDs.
State	The operational state on the specified port.
Path Cost	STP path cost on the specified port.
Priority	STP priority on the specified port.
BPDU Filter	The states of BPDU filter on the specified port.
BPDU Guard	The states of BPDU guard on the specified port.
Operational Edge	The operational edge port status on the specified port.
Operational Point-to-Point	The operational point-to-point status on the specified port.
Port Role	The current port role on the specified port. The possible values are: "Disabled", "Master", "Root", "Designated", "Alternative", and "Backup".
Port State	The current port state on the specified port. The possible values are: "Disabled", "Discarding", "Learning", and "Forwarding".
Designated Bridge	The bridge ID of the designated bridge.
Designated Port ID	The designated port ID on the switch.
Designated Cost	The path cost of the designated port on the switch.

Protocol Migration Check	Restart the Spanning Tree Protocol (STP) migration process (re-negotiate with its neighborhood) on the specific interface.
--------------------------	--

Click "**Edit**" button to view Edit Port Setting menu.

Edit Port Setting

Port	GE1
State	☒ Enable
Path Cost	0 (0 - 200000000) (0 = Auto)
Priority	128 ▼
Edge Port	☐ Enable
BPDU Filter	☐ Enable
BPDU Guard	☐ Enable
Point-to-Point	☒ Auto ☐ Enable ☐ Disable
Port State	Disabled
Designated Bridge	0-00:00:00:00:00:00
Designated Port ID	128-1
Designated Cost	20000
Operational Edge	False
Operational Point-to-Point	False

Apply
Close

Figure- Spanning Tree > Port Setting > Edit Port Setting

Item	Description
Port	Selected port ID.
State	Enable/Disable the STP on the specified port.
Path Cost	Specify the STP path cost on the specified port.
Priority	Specify the STP path cost on the specified port.
Edge Port	Specify the edge mode. ● Enable: Force to true state (as link to a host). ● Disable: Force to false state (as link to a bridge). In the edge mode, the interface would be put into the Forwarding state immediately upon link up. If the edge mode is enabled for the interface and there are BPDUs received on the interface, the loop might be occurred in the short time before

	the STP state change.
BPDU Filter	The BPDU Filter configuration avoids receiving / transmitting BPDU from the specified ports. ● Enable: Enable BPDU filter function. ● Disable: Disable BPDU filter function.
BPDU Guard	The BPDU Guard configuration to drop the received BPDU directly. ● Enable: Enable BPDU guard function. ● Disable: Disable BPDU guard function.
Point-to-Point	Specify the Point-to-Point port configuration: ● Auto: The state is depended on the duplex setting of the port ● Enable: Force to true state. ● Disable: Force to false state

IV-5-3 MST Instance

To configure MST instance setting, click **STP > MST Instance**.

MST Instance Table									
	MSTI	Priority	Bridge Identifier	Designated Root Bridge	Root Port	Root Path Cost	Remaining Hop	VLAN	
☐	0	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0	1-4094	
☐	1	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0		
☐	2	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0		
☐	3	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0		
☐	4	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0		
☐	5	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0		
☐	6	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0		
☐	7	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0		
☐	8	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0		
☐	9	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0		
☐	10	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0		
☐	11	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0		
☐	12	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0		
☐	13	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0		
☐	14	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0		
☐	15	32768	32768-74:DA:38:17:6E:7A	0-00:00:00:00:00:00	N/A	0	0		
Edit									

Figure 62 - Spanning Tree > MST Instance

Item	Description
MSTI	Designated port number.
Priority	The bridge priority on the specified MSTI.

Bridge Identifier	The bridge identifier on the specified MSTI.
Designated Root Bridge	The designated root bridge identifier on the specified MSTI.
Root Port	The designated root port on the specified MSTI.
Root Path Cost	The designated root path cost on the specified MSTI.
Remaining Hop	The configuration of remaining hop on the specified MSTI.
VLAN	The VLAN configuration on the specified MSTI.

Click "**Edit**" button to view Edit MST Instance menu.

Edit MST Instance Setting

MSTI

1

VLAN

Available VLAN

1
2
3
4
5
6
7
8

>

Selected VLAN

<

Priority

(0 - 61440, default 32768)

Bridge Identifier

32768-74:DA:38:17:6E:7A

Designated Root Bridge

0-00:00:00:00:00:00

Root Port

Root Path Cost

0

Remaining Hop

0

Apply

Close

Figure - Spanning Tree > MST Instance > Edit MST Instance Setting

Item	Description
VLAN	Select the VLAN list for the specified MSTI.
Priority	Specify the bridge priority on the specified MSTI. The valid range is from 0 to 61440, and the value must be the multiple of 4096. It ensures the probability that the switch is selected as the root bridge, and the lower values has the higher priority for the switch to be selected as the root bridge of the STP topology.

IV-5-4 MST Port Setting

To configure and display MST port setting, click **STP > MST Port Setting**.

MST Port Setting Table													
MSTI		0											
	Entry	Port	Path Cost	Priority	Port Role	Port State	Mode	Type	Designated Bridge	Designated Port ID	Designated Cost	Remaining Hop	
☐	1	GE1	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-1	20000	20	
☐	2	GE2	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-2	20000	20	
☐	3	GE3	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-3	20000	20	
☐	4	GE4	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-4	20000	20	
☐	5	GE5	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-5	20000	20	
☐	6	GE6	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-6	20000	20	
☐	7	GE7	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-7	20000	20	
☐	8	GE8	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-8	20000	20	
☐	9	GE9	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-9	20000	20	
☐	10	GE10	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-10	20000	20	
☐	11	GE11	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-11	20000	20	
☐	12	GE12	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-12	20000	20	
☐	13	GE13	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-13	20000	20	
☐	14	GE14	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-14	20000	20	
☐	15	GE15	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-15	20000	20	
☐	16	GE16	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-16	20000	20	
☐	17	GE17	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-17	20000	20	
☐	18	GE18	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-18	20000	20	
☐	19	GE19	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-19	20000	20	
☐	20	GE20	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-20	20000	20	
☐	21	GE21	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-21	20000	20	
☐	22	GE22	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-22	20000	20	
☐	23	GE23	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-23	20000	20	
☐	24	GE24	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-24	20000	20	
☐	25	GE25	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-25	20000	20	
☐	26	GE26	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-26	20000	20	
☐	27	GE27	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-27	20000	20	
☐	28	GE28	20000	128	Disabled	Forwarding	RSTP	Boundary	0-00:00:00:00:00:00	128-28	20000	20	
☐	29	LAG1	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-29	20000	20	
☐	30	LAG2	20000	128	Disabled	Disabled	RSTP	Boundary	0-00:00:00:00:00:00	128-30	20000	20	

Figure 64 - Spanning Tree > MST Port Setting

Item	Description
MSTI	Specify the port setting on the specified MSTI.
Port	Specify the interface ID or the list of interface IDs.
Path Cost	The port path cost on the specified MSTI.
Priority	The port priority on the specified MSTI.
Port Role	The current port role on the specified port. The possible values are: "Disabled", "Master", "Root", "Designated", "Alternative", and "Backup".
Port State	The current port state on the specified port. The possible values are: "Disabled", "Discarding", "Learning", and "Forwarding".
Mode	The operational STP mode on the specified port.
Type	The possible value for the port type are: - Boundary: The port attaching an MST Bridge to a LAN that is not in the same region. - Internal: The port attaching an MST Bridge to a LAN that is not in the same region.
Designated Bridge	The bridge ID of the designated bridge.

Designated Port ID	The designated port ID on the switch.
Designated Cost	The path cost of the designated port on the switch.
Remaining Hop	The remaining hops count on the specified port.

Click "**Edit**" button to view Edit MST Port Setting menu.

Edit MST Port Setting

MSTI	0
Port	GE1
Path Cost	0 (0 - 200000000) (0 = Auto)
Priority	128 ▼
Port Role	Disabled
Port State	Disabled
Mode	RSTP
Type	Boundary
Designated Bridge	0-00:00:00:00:00:00
Designated Port ID	128-1
Designated Cost	20000
Remaining Hop	20

Apply
Close

Figure 65 - Spanning Tree > MST Port Setting > Edit MST Port Setting

Item	Description
Path Cost	Specify the STP port path cost on the specified MSTI.
Priority	Specify the STP port priority on the specified MSTI.

IV-5-5 Statistics

To display the STP statistics, click **STP > Statistics**.

Statistics Table

Refresh Rate sec

	Entry	Port	Receive BPDU			Transmit BPDU		
			Config	TCN	MSTP	Config	TCN	MSTP
☐	1	GE1	0	0	0	0	0	0
☐	2	GE2	0	0	0	0	0	0
☐	3	GE3	0	0	0	0	0	0
☐	4	GE4	0	0	0	0	0	0
☐	5	GE5	0	0	0	0	0	0
☐	6	GE6	0	0	0	0	0	0
☐	7	GE7	0	0	0	0	0	0
☐	8	GE8	0	0	0	0	0	0
☐	9	GE9	0	0	0	0	0	0
☐	10	GE10	0	0	0	0	0	0
☐	11	GE11	0	0	0	0	0	0
☐	12	GE12	0	0	0	0	0	0
☐	13	GE13	0	0	0	0	0	0
☐	14	GE14	0	0	0	0	0	0
☐	15	GE15	0	0	0	0	0	0
☐	16	GE16	0	0	0	0	0	0
☐	17	GE17	0	0	0	0	0	0
☐	18	GE18	0	0	0	0	0	0
☐	19	GE19	0	0	0	0	0	0
☐	20	GE20	0	0	0	0	0	0
☐	21	GE21	0	0	0	0	0	0
☐	22	GE22	0	0	0	0	0	0
☐	23	GE23	0	0	0	0	0	0
☐	24	GE24	0	0	0	0	0	0
☐	25	GE25	0	0	0	0	0	0
☐	26	GE26	0	0	0	0	0	0
☐	27	GE27	0	0	0	0	0	0
☐	28	GE28	0	0	0	0	0	0
☐	29	LAG1	0	0	0	0	0	0

Figure - Spanning Tree > Statistics

Item	Description
Refresh Rate	The option to refresh the statistics automatically.
Receive BPDU (Config)	The counts of the received CONFIG BPDU.
Receive BPDU (TCN)	The counts of the received TCN BPDU.
Receive BPDU (MSTP)	The counts of the received MSTP BPDU.
Transmit BPDU (Config)	The counts of the transmitted CONFIG BPDU.
Transmit BPDU (TCN)	The counts of the transmitted TCN BPDU.
Transmit BPDU (MSTP)	The counts of the transmitted MSTP BPDU.
Clear	Clear the statistics for the selected interfaces
View	View the statistics for the interface.

Click "**View**" button to view the STP Port Statistic menu.

STP Port Statistic

Port

GE1

Refresh Rate

☒ None

☐ 5 sec

☐ 10 sec

☐ 30 sec

Receive BPDU

Config

0

TCN

0

MSTP

0

Transmit BPDU

Config

0

TCN

0

MSTP

0

Refresh

Clear

Close

Figure - Spanning Tree > Statistics > STP Port Statistic

Item	Description
Refresh Rate	The option to refresh the statistics automatically.
Clear	Clear the statistics for the selected interfaces.

IV-6 Discovery

Use this section to configure LLDP.

IV-6-1 LLDP

LLDP is a one-way protocol; there are no request/response sequences. Information is advertised by stations implementing the transmit function, and is received and processed by stations implementing the receive function. The LLDP category contains LLDP and LLDP-MED pages.

IV-6-1-1 Property

To display LLDP Property Setting web page, click **Discovery > LLDP > Property**.

LLDP

State ☒ Enable

LLDP Handling

☐ Filtering

☐ Bridging

☒ Flooding

TLV Advertise Interval 30 Sec (5 - 32767, default 30)

Hold Multiplier 4 (2 - 10, default 4)

Reinitializing Delay 2 Sec (1 - 10, default 2)

Transmit Delay 2 Sec (1 - 8191, default 2)

LLDP-MED

Fast Start Repeat Count 3 (1 - 10, default 3)

Apply

Figure - Discovery > LLDP > Property

Item	Description
State	Enable/ Disable LLDP protocol on this switch.
LLDP Handling	Select LLDP PDU handling action to be filtered, bridging or flooded when LLDP is globally disabled. ● Filtering: Deletes the packet. ● Bridging: (VLAN-aware flooding) Forwards the packet to all VLAN members. ● Flooding: Forwards the packet to all ports
TLV Advertise	Select the interval at which frames are transmitted. The default is 30

Interval	seconds, and the valid range is 5–32767 seconds.
Holdtime Multiplier	Select the multiplier on the transmit interval to assign to TTL (range 2–10, default = 4).
Reinitialization Delay	Select the delay before a re-initialization (range 1–10 seconds, default = 2).
Transmit Delay	Select the delay after an LLDP frame is sent (range 1–8191 seconds, default = 3).
Fast Start Repeat Count	Select fast start repeat count when port link up (range 1–10, default = 3).

IV-6-1-2 Port Setting Of LLDP

To display LLDP Port Setting, click **Discovery > LLDP > Port Setting**.

Port Setting Table

☐	Entry	Port	Mode	Selected TLV
☐	1	GE1	Normal	802.1 PVID
☐	2	GE2	Normal	802.1 PVID
☐	3	GE3	Normal	802.1 PVID
☐	4	GE4	Normal	802.1 PVID
☐	5	GE5	Normal	802.1 PVID
☐	6	GE6	Normal	802.1 PVID
☐	7	GE7	Normal	802.1 PVID
☐	8	GE8	Normal	802.1 PVID
☐	9	GE9	Normal	802.1 PVID
☐	10	GE10	Normal	802.1 PVID
☐	11	GE11	Normal	802.1 PVID
☐	12	GE12	Normal	802.1 PVID
☐	13	GE13	Normal	802.1 PVID
☐	14	GE14	Normal	802.1 PVID
☐	15	GE15	Normal	802.1 PVID
☐	16	GE16	Normal	802.1 PVID
☐	17	GE17	Normal	802.1 PVID
☐	18	GE18	Normal	802.1 PVID
☐	19	GE19	Normal	802.1 PVID
☐	20	GE20	Normal	802.1 PVID
☐	21	GE21	Normal	802.1 PVID
☐	22	GE22	Normal	802.1 PVID
☐	23	GE23	Normal	802.1 PVID
☐	24	GE24	Normal	802.1 PVID
☐	25	GE25	Normal	802.1 PVID
☐	26	GE26	Normal	802.1 PVID
☐	27	GE27	Normal	802.1 PVID
☐	28	GE28	Normal	802.1 PVID

Edit

Figure 69 - Discovery > LLDP > Port Setting

Item	Description
Port	Port Name.
Mode	The port LLDP mode.
Selectde TLV	The Selected LLDP TLV.

Click "**Edit**" button to view Edit Port Setting menu.

Figure 70 - Discovery > LLDP > Port Setting > Edit Port Setting

Item	Description
Port	Select specified port or all ports to configure LLDP state.
Mode	Select the transmission state of LLDP port interface. ● Disable: Disable the transmission of LLDP PDUs. ● RX Only: Receive LLDP PDUs only. ● TX Only: Transmit LLDP PDUs only. ● TX And RX: Transmit and receive LLDP PDUs both.
Optional TLV	Select the LLDP optional TLVs to be carried (multiple selection is allowed). ● System Name ● Port Description ● System Description ● System Capability ● 802.3 MAC-PHY ● 802.3 Link Aggregation ● 802.3 Maximum Frame Size ● Management Address ● 802.1 PVID.

802.1 VLAN Name	Select the VLAN Name ID to be carried (multiple selection is allowed).
-----------------	--

IV-6-1-3 Packet View

To display LLDP Overloading, click **Discovery > LLDP > Packet View**.

Packet View Table						
						
	Entry	Port	In-Use (Bytes)	Available (Bytes)	Operational Status	
☐	1	GE1	48	1440	Not Overloading	
☐	2	GE2	48	1440	Not Overloading	
☐	3	GE3	48	1440	Not Overloading	
☐	4	GE4	48	1440	Not Overloading	
☐	5	GE5	48	1440	Not Overloading	
☐	6	GE6	48	1440	Not Overloading	
☐	7	GE7	48	1440	Not Overloading	
☐	8	GE8	48	1440	Not Overloading	
☐	9	GE9	48	1440	Not Overloading	
☐	10	GE10	49	1439	Not Overloading	
☐	11	GE11	49	1439	Not Overloading	
☐	12	GE12	49	1439	Not Overloading	
☐	13	GE13	49	1439	Not Overloading	
☐	14	GE14	49	1439	Not Overloading	
☐	15	GE15	49	1439	Not Overloading	
☐	16	GE16	49	1439	Not Overloading	
☐	17	GE17	49	1439	Not Overloading	
☐	18	GE18	49	1439	Not Overloading	
☐	19	GE19	49	1439	Not Overloading	
☐	20	GE20	49	1439	Not Overloading	
☐	21	GE21	49	1439	Not Overloading	
☐	22	GE22	49	1439	Not Overloading	
☐	23	GE23	49	1439	Not Overloading	
☐	24	GE24	49	1439	Not Overloading	
☐	25	GE25	49	1439	Not Overloading	
☐	26	GE26	49	1439	Not Overloading	
☐	27	GE27	49	1439	Not Overloading	
☐	28	GE28	49	1439	Not Overloading	
Detail						

Figure 71 - Discovery > LLDP > Packet View

Item	Description
Port	Port Name.
In-Use (Bytes)	Total number of bytes of LLDP information in each packet.
Available (Bytes)	Total number of available bytes left for additional LLDP information in each packet.
Operational Status	Overloading or not.

Click "**Detail**" button to view Packet View Detail menu.

Packet View Detail	
Port	GE1
Mandatory TLVs	
Size (Bytes)	21
Operational Status	Transmitted
MED Capabilities	
Size (Bytes)	9
Operational Status	Transmitted
MED Location	
Size (Bytes)	0
Operational Status	Transmitted
MED Network Policy	
Size (Bytes)	10
Operational Status	Transmitted
MED Inventory	
Size (Bytes)	0
Operational Status	Transmitted
MED Extended Power via MDI	
Size (Bytes)	0
Operational Status	Transmitted
802.3 TLVs	
Size (Bytes)	0
Operational Status	Transmitted

Optional TLVs	
Size (Bytes)	0
Operational Status	Transmitted
802.1 TLVs	
Size (Bytes)	8
Operational Status	Transmitted
Total	
In-Use (Bytes)	48
Available (Bytes)	1440

Figure 72 - Discovery > LLDP > Packet View > Packet View Detail

Item	Description
Port	Port Name.
Mandatory TLVs	Total mandatory TLV byte size. Status is sent or overloading.
MED Capabilities	Total MED Capabilities TLV byte size. Status is sent or overloading.
MED Location	Total MED Location byte size. Status is sent or overloading.
MED Network Policy	Total MED Network Policy byte size. Status is sent or overloading.
MED Inventory	Total MED Inventory byte size. Status is sent or overloading.
MED Extended Power via MDI	Total MED Extended Power via MDI byte size. Status is sent or overloading.
802.3 TLVs	Total 802.3 TLVs byte size. Status is sent or overloading.
Optional TLVs	Total Optional TLV byte size. Status is sent or overloading.
802.1 TLVs	Total 802.1 TLVs byte size. Status is sent or overloading.
Total	Total number of bytes of LLDP information in each packet.

IV-6-1-4 Local Information

Use the LLDP Local Information to view LLDP local device information.

To display LLDP Local Device, click **Discovery > LLDP > Local Information**.

Device Summary

Chassis ID Subtype	MAC address
Chassis ID	74:DA:38:17:6E:7A
System Name	Switch
System Description	24-Port Gigabit PoE+ Smart Managed Switch with 4 RJ45/SFP Combo Ports
Supported Capabilities	Bridge
Enabled Capabilities	Bridge
Port ID Subtype	Local

Port Status Table

	Entry	Port	LLDP State	LLDP-MED State
☐	1	GE1	Normal	Enabled
☐	2	GE2	Normal	Enabled
☐	3	GE3	Normal	Enabled
☐	4	GE4	Normal	Enabled
☐	5	GE5	Normal	Enabled
☐	6	GE6	Normal	Enabled
☐	7	GE7	Normal	Enabled
☐	8	GE8	Normal	Enabled
☐	9	GE9	Normal	Enabled
☐	10	GE10	Normal	Enabled
☐	11	GE11	Normal	Enabled
☐	12	GE12	Normal	Enabled
☐	13	GE13	Normal	Enabled
☐	14	GE14	Normal	Enabled
☐	15	GE15	Normal	Enabled
☐	16	GE16	Normal	Enabled
☐	17	GE17	Normal	Enabled
☐	18	GE18	Normal	Enabled
☐	19	GE19	Normal	Enabled
☐	20	GE20	Normal	Enabled
☐	21	GE21	Normal	Enabled
☐	22	GE22	Normal	Enabled
☐	23	GE23	Normal	Enabled
☐	24	GE24	Normal	Enabled
☐	25	GE25	Normal	Enabled
☐	26	GE26	Normal	Enabled
☐	27	GE27	Normal	Enabled
☐	28	GE28	Normal	Enabled

Detail

Figure - Discovery > LLDP > Local Information

Item	Description
Chassis ID Subtype	Type of chassis ID, such as the MAC address.
Chassis ID	Identifier of chassis. Where the chassis ID subtype is a MAC address, the MAC address of the switch is displayed.
System Name	Name of switch.
System Description	Description of the switch.
Capabilities	Primary functions of the device, such as Bridge, WLAN AP, or Router.

Supported	
Capabilities Enabled	Primary enabled functions of the device.
Port ID Subtype	Type of the port identifier that is shown.
LLDP Status	LLDP Tx and Rx abilities.
LLDP Med Status	LLDP MED enable state.

Click “**Detail**” button on the page to view detail information of the selected port.

Local Information Detail

Chassis ID Subtype	MAC address
Chassis ID	74:DA:38:17:6E:7A
System Name	Switch
System Description	24-Port Gigabit PoE+ Smart Managed Switch with 4 RJ45/SFP Combo Ports
Supported Capabilities	Bridge
Enabled Capabilities	Bridge
Port ID	GE1
Port ID Subtype	Local
Port Description	

Management Address Table

Address Subtype	Address	Interface Subtype	Interface Number
0 results found.			

MAC/PHY Detail

Auto-Negotiation Supported	N/A
Auto-Negotiation Enabled	N/A
Auto-Negotiation Advertised Capabilities	N/A
Operational MAU Type	N/A

802.3 Detail

802.3 Maximum Frame Size	N/A
--------------------------	-----

802.3 Link Aggregation

Aggregation Capability	N/A
Aggregation Status	N/A
Aggregation Port ID	N/A

MED Detail	
Capabilities Supported	Capabilities , Network policy
Current Capabilities	Capabilities , Network policy
Device Class	Network Connectivity
PoE Device Type	N/A
PoE Power Source	N/A
PoE Power Priority	N/A
PoE Power Value	N/A
Hardware Revision	N/A
Firmware Revision	N/A
Software Revision	N/A
Serial Number	N/A
Manufacturer Name	N/A
Model Name	N/A
Asset ID	N/A

Location Information	
Civic	N/A
Coordinate	N/A
ECS ELIN	N/A

Network Policy Table				
Application Type	VLAN	VLAN Type	Priority	DSCP
0 results found.				

Close

Figure- Discovery > LLDP > Local Information > Detail

IV-6-1-5 Neighbor

Use the LLDP Neighbor page to view LLDP neighbors information.

To display LLDP Remote Device, click **Discovery > LLDP > Neighbor**.

Neighbor Table							
Showing All entries		Showing 0 to 0 of 0 entries					
☐	Local Port	Chassis ID Subtype	Chassis ID	Port ID Subtype	Port ID	System Name	Time to Live
0 results found.							
Clear		Refresh		Detail		First Previous 1 Next Last	

Figure 75 - Discovery > LLDP > Neighbor

Item	Description
Local Port	Number of the local port to which the neighbor is connected.
Chassis ID Subtype	Type of chassis ID (for example, MAC address).
Port ID Subtype	Type of the port identifier that is shown.
Port ID	Identifier of port.
System Name	Published name of the switch.
Time to Live	Time interval in seconds after which the information for this neighbor is deleted.

Click “**detail**” to view selected neighbor detail information

Neighbor Information Detail

Local Port

Basic Detail

Chassis ID Subtype	Unknown
Chassis ID	
Port ID Subtype	Unknown
Port ID	
Port Description	
System Name	
System Description	
Supported Capabilities	N/A
Enabled Capabilities	N/A

Management Address Table

Address Subtype	Address	Interface Subtype	Interface Number
-----------------	---------	-------------------	------------------

0 results found.

MAC/PHY Detail

Auto-Negotiation Supported	N/A
Auto-Negotiation Enabled	N/A
Auto-Negotiation Advertised Capabilities	N/A
Operational MAU Type	N/A

802.3 Power via MDI

MDI Power Support Port Class	N/A
PSE MDI Power Support	N/A
PSE MDI Power State	N/A
PSE Power Pair Control Ability	N/A
PSE Power Pair	N/A
PSE Power Class	N/A
Power Type	N/A
Power Source	N/A
Power Priority	N/A
PD Request Power Value	N/A
PSE Allocated Power Value	N/A

802.3 Detail

802.3 Maximum Frame Size	N/A
--------------------------	-----

802.3 Link Aggregation	
Aggregation Capability	N/A
Aggregation Status	N/A
Aggregation Port ID	N/A

802.1 VLAN and Protocol	
PVID	
VLAN Name	N/A

MED Detail	
Capabilities Supported	N/A
Current Capabilities	N/A
Device Class	N/A
PoE Device Type	N/A
PoE Power Source	N/A
PoE Power Priority	N/A
PoE Power Value	N/A
Hardware Revision	N/A
Firmware Revision	N/A
Software Revision	N/A
Serial Number	N/A
Manufacturer Name	N/A
Model Name	N/A
Asset ID	N/A

Location Information	
Civic	N/A
Coordinate	N/A
ECS ELIN	N/A

Network Policy Table				
Application Type	VLAN	VLAN Type	Priority	DSCP
0 results found.				

Close

Figure -LLDP Neighbor Detail Page

IV-6-1-6

Statistics

The Link Layer Discovery Protocol (LLDP) Statistics page displays summary and per-port information for LLDP frames transmitted and received on the switch.

To display LLDP Statistics status, click **Discovery > LLDP > Statistics**.

Global Statistics

Insertions

Deletions

Drops

AgeOuts

0

0

0

0

Clear

Refresh

Statistics Table

	Entry	Port	Transmit Frame	Receive Frame			Receive TLV		Neighbor Timeout	
			Total	Total	Discard	Error	Discard	Unrecognized		
☐	1	GE1	0	0	0	0	0	0	0	
☐	2	GE2	0	0	0	0	0	0	0	
☐	3	GE3	0	0	0	0	0	0	0	
☐	4	GE4	0	0	0	0	0	0	0	
☐	5	GE5	0	0	0	0	0	0	0	
☐	6	GE6	0	0	0	0	0	0	0	
☐	7	GE7	0	0	0	0	0	0	0	
☐	8	GE8	0	0	0	0	0	0	0	
☐	9	GE9	0	0	0	0	0	0	0	
☐	10	GE10	0	0	0	0	0	0	0	
☐	11	GE11	0	0	0	0	0	0	0	
☐	12	GE12	0	0	0	0	0	0	0	
☐	13	GE13	0	0	0	0	0	0	0	
☐	14	GE14	0	0	0	0	0	0	0	
☐	15	GE15	0	0	0	0	0	0	0	
☐	16	GE16	0	0	0	0	0	0	0	
☐	17	GE17	0	0	0	0	0	0	0	
☐	18	GE18	0	0	0	0	0	0	0	
☐	19	GE19	0	0	0	0	0	0	0	
☐	20	GE20	0	0	0	0	0	0	0	
☐	21	GE21	0	0	0	0	0	0	0	
☐	22	GE22	0	0	0	0	0	0	0	
☐	23	GE23	0	0	0	0	0	0	0	
☐	24	GE24	0	0	0	0	0	0	0	

Figure - Discovery > LLDP > Statistics

Item	Description
Insertions	The number of times the complete set of information advertised by a particular MAC Service Access Point (MSAP) has been inserted into tables associated with the remote systems.
Deletions	The number of times the complete set of information advertised by MSAP has been deleted from tables associated with the remote systems.
Drops	The number of times the complete set of information advertised by MSAP could not be entered into tables associated with the remote systems because of insufficient resources.
Age Outs	The number of times the complete set of information advertised by MSAP has been deleted from tables associated with the remote systems because the information timeliness interval has expired.
Statistics Table	
Port	Interface or port number.
Transmit Frame Total	Number of LLDP frames transmitted on the corresponding port.
Receive Frame Total	Number of LLDP frames received by this LLDP agent on the corresponding port, while the LLDP agent is enabled.
Receive Frame Discard	Number of LLDP frames discarded for any reason by the LLDP agent on the corresponding port.
Receive Frame Error	Number of invalid LLDP frames received by the LLDP agent on the corresponding port, while the LLDP agent is enabled.
Receive TLV Discard	Number of TLVs of LLDP frames discarded for any reason by the LLDP agent on the corresponding port.
Receive TLV Unrecognized	Number of TLVs of LLDP frames that are unrecognized while the LLDP agent is enabled.
Neighbor Timeout	Number of age out LLDP frames.

IV-7 Multicast

Use this section to configure Multicast.

IV-7-1 General

Use the General pages to configure settings of IGMP and MLD common function.

IV-7-1-1 Property

To display multicast general property setting web page, click **Multicast> General> Property**.

Unknown Multicast Action

☒ Flood
☐ Drop
☐ Forward to Router Port

Multicast Forward Method

IPv4

☒ DMAC-VID
☐ DIP-VID

IPv6

☒ DMAC-VID
☐ DIP-VID

Apply

Figure 78 - Multicast > General > Property

Item	Description
Unknown Multicast Action	Set the unknown multicast action ● Flood: flood the unknown multicast data. ● Drop: drop the unknown multicast data. ● Router port: forward the unknown multicast data to router port.
IPv4	Set the ipv4 multicast forward method. ● MAC-VID: forward method dmac+vid. ● DIP-VID: forward method dip+vid.
IPv6	Set the ipv6 multicast forward method. ● MAC-VID: forward method dmac+vid. ● DIP-VID: forward method dip+vid(dip is ipv6 low 32 bit).

IV-7-1-2 Group Address

This page allow user to browse all multicast groups that dynamic learned or statically added.

To display Multicast General Group web page, click **Multicast> General > Group Address**.

The screenshot shows a web interface titled "Group Address Table". At the top, there is a dropdown menu for "IP Version" set to "IPv4". Below it, a "Showing" section indicates "All" entries, and a status bar shows "Showing 0 to 0 of 0 entries". A search bar with a magnifying glass icon is on the right. The main area contains a table with columns: "VLAN", "Group Address", "Member", "Type", and "Life (Sec)". Below the table header, it states "0 results found.". At the bottom, there are buttons for "Add", "Edit", "Delete", and "Refresh". On the right side of the table, there are pagination controls: "First", "Previous", "1" (highlighted), "Next", and "Last".

Figure - Multicast > General > Group Address

Item	Description
IP Version	IP Version ● IPv4: ipv4 multicast group ● IPv6: ipv6 multicast group
VLAN	The VLAN ID of group.
Group Address	The group IP address.
Member	The member ports of group.
Type	The type of group. Static or Dynamic.
Life(Sec)	The life time of this dynamic group.

Click “**Add**” or “**Edit**” button to view Add or Edit Group Address menu.

Add Group Address

VLAN

1 ▼

IP Version

IPv4 ▼

Group Address

Member

Available Port

GE1
GE2
GE3
GE4
GE5
GE6
GE7
GE8

>
<

Selected Port

Apply

Close

Edit Group Address

VLAN

1

Group Address

225.0.0.1

Member

Available Port

GE2
GE3
GE4
GE5
GE6
GE7
GE8
GE9

>
<

Selected Port

GE1

Apply

Close

Figure - Multicast > General > Group Address > Add/Edit Group Address

Item	Description
VLAN	The VLAN ID of group.
IP Version	IP Version ● IPv4: ipv4 multicast group ● IPv6: ipv6 multicast group
Group Address	The group IP address.
Member	The member ports of group.

	● Available Port: Optional port member ● Selected Port: Selected port member
--	---

IV-7-1-3 Router Port

This page allow user to browse all router port information. The static and forbidden router port can set by user.

To display multicast router port table web page, click **Multicast > General > Router Port**.

Figure - Multicast > General > Router Port

Item	Description
IP Version	IP Version ● IPv4: ipv4 multicast router ● IPv6: ipv6 multicast router
VLAN	The VLAN ID router entry.
Member	Router Port member (include static and learned port member).
Static Port	Static router port member.
Forbidden Port	Forbidden router port member.
Life (Sec)	The expiry time of the router entry.

Click "Add" or "Edit" button to view Add/Edit Router Port menu.

Add Router Port

VLAN	Available VLAN	Selected VLAN
	1	
IP Version	IPv4	
Type	☒ Static ☐ Forbidden	
Port	Available Port	Selected Port
	GE1 GE2 GE3 GE4 GE5 GE6 GE7 GE8	

ApplyClose

Edit Router Port

VLAN	1	
IP Version	IPv4	
Type	☒ Static ☐ Forbidden	
Port	Available Port	Selected Port
	GE2 GE3 GE4 GE5 GE6 GE7 GE8 GE9	GE1

ApplyClose

Figure - Multicast > General > Router Port > Add/Edit Router Port

Item	Description
VLAN	The VLAN ID for router entry ● Available VLAN: Optional VLAN member ● Selected VLAN: Selected VLAN member.
IP Version	IP Version ● IPv4: ipv4 multicast router ● IPv6: ipv6 multicast router
Type	The router port type ● Static: static router port ● Forbidden: forbidden router port, can't learn dynamic router port member
Port	The member ports of router entry. ● Available Port: Optional router port member ● Selected Port: Selected router port member

IV-7-2 IGMP Snooping

Use the IGMP Snooping pages to configure settings of IGMP snooping function.

IV-7-2-1 Property

This page allow user to configure global settings of IGMP snooping and configure specific VLAN settings of IGMP Snooping.

To display IGMP Snooping global setting and VLAN Setting web page, click **Multicast > IGMP Snooping > Property**.

VLAN	Operational Status	Router Port Auto Learn	Query Robustness	Query Interval	Query Max Response Interval	Last Member Query Counter	Last Member Query Interval	Immediate Leave
1	Disabled	Enabled	2	125	10	2	1	Disabled

Figure - Multicast > IGMP Snooping > Property

Item	Description
State	Set the enabling status of IGMP Snooping functionality Enable: If Checked Enable IGMP Snooping, else is Disabled IGMP Snooping.
Version	Set the igmp snooping version ● IGMPv2: Only support process igmp v2 packet. ● IGMPv3: Support v3 basic and v2.
Report Suppression	Set the enabling status of IGMP v2 report suppression Enable: If Checked Enable IGMP Snooping v2 report suppression, else Disable the report suppression function.
VLAN	The IGMP entry VLAN ID.
Operation Status	The enable status of IGMP snooping VLAN functionality.
Router Port Auto Learn	The enabling status of IGMP snooping router port auto learning.
Query Robustness	The Query Robustness allows tuning for the expected packet loss on a subnet.
Query Interval	The interval of querier to send general query.
Query Max Response Interval	In Membership Query Messages, it specifies the maximum allowed time before sending a responding report in units of 1/10 second.
Last Member Query count	The count that Querier-switch sends Group-Specific Queries when it receives a Leave Group message for a group.
Last Member Query Interval	The interval that Querier-switch sends Group-Specific Queries when it receives a Leave Group message for a group.
Immediate leave	The immediate leave status of the group will immediate leave when receive IGMP Leave message.

Click "**Edit**" button to Edit VLAN Setting menu.

Edit VLAN Setting

VLAN	1
State	☐ Enable
Router Port Auto Learn	☒ Enable
Immediate leave	☐ Enable

Query Robustness	2 (1 - 7, default 2)
Query Interval	125 Sec (30 - 18000, default 125)
Query Max Response Interval	10 Sec (5 - 20, default 10)

Last Member Query Counter	2 (1 - 7, default 2)
Last Member Query Interval	1 Sec (1 - 25, default 1)

Operational Status

Status	Disabled
Query Robustness	2
Query Interval	125 (Sec)
Query Max Response Interval	10 (Sec)
Last Member Query Counter	2
Last Member Query Interval	1 (Sec)

Apply
Close

Figure- Multicast > IGMP Snooping > Property >Edit VLAN Setting

Item	Description
VLAN	The selected VLAN List.
State	Set the enabling status of IGMP Snooping VLAN functionality Enable: If Checked Enable IGMP Snooping VLAN, else is Disabled IGMP Snooping VLAN.
Router Port Auto Learn	Set the enabling status of IGMP Snooping router port learning Enable: If checked Enable learning router port by query and PIM, DVRMP, else Disable the learning router port.
Immediate leave	Immediate Leave the group when receive IGMP Leave message. Enable: If checked Enable immediate leave, else disable immediate leave.
Query Robustness	The Admin Query Robustness allows tuning for the expected packet loss on a subnet.

Query Interval	The Admin interval of querier to send general query.
Query Max Response Interval	The Admin query max response interval , In Membership Query Messages, it specifies the maximum allowed time before sending a responding report in units of 1/10 second.
Last Member Query Counter	The Admin last member query count that Querier-switch sends Group-Specific Queries when it receives a Leave Group message for a group.
Last Member Query Interval	The Admin last member query interval that Querier-switch sends Group-Specific Queries when it receives a Leave Group message for a group.
Operational Status	
Status	Operational IGMP snooping status , must both IGMP snooping global and IGMP snooping enable the status will be enable.
Query Robustness	Operational Query Robustness.
Query Interval	Operational Query Interval.
Query Max Response Interval	Operational Query Max Response Interval
Last Member Query Counter	Operational Last Member Query Count.
Last Member Query Interval	Operational Last Member Query Interval.

IV-7-2-2 Querier

This page allow user to configure querier settings on specific VLAN of IGMP Snooping.

To display IGMP Snooping Querier Setting web page, click **Multicast > IGMP Snooping > Querier**.

Querier Table						
☐	VLAN	State	Operational Status	Version	Querier Address	
☐	1	Disabled	Disabled			
Edit						

Figure - Multicast > IGMP Snooping > Querier

Item	Description
VLAN	IGMP Snooping querier entry VLAN ID.
State	The IGMP Snooping querier Admin State.
Operational Status	The IGMP Snooping querier operational status.
Querier Version	The IGMP Snooping querier operational version.
Querier IP	The operational Querier IP address on the VLAN.

Click "**Edit**" button to view Edit Querier menu.

Figure 86 - Multicast > IGMP Snooping > Querier > Edit Querier

Item	Description
VLAN	The Selected Edit IGMP Snooping querier VLAN List.
State	Set the enabling status of IGMP Querier Election on the chose VLANs Enabled: if checked Enable IGMP Querier else Disable IGMP Querier.
Version	Set the query version of IGMP Querier Election on the chose VLANs ● IGMPv2: Querier version 2. ● IGMPv3: Querier version 3. (IGMP Snooping version should be IGMPv3)

IV-7-2-3 Statistics

This page allow user to clear IGMP snooping statics.

To display IGMP Snooping Statistics, click **Multicast > IGMP Snooping > Statistics**.

Receive Packet		
Total	91	
Valid	8	
InValid	83	
Other	0	
Leave	0	
Report	0	
General Query	0	
Special Group Query	0	
Source-specific Group Query	0	
Transmit Packet		
Leave	0	
Report	0	
General Query	0	
Special Group Query	0	
Source-specific Group Query	0	
Clear Refresh		

Figure - Multicast > IGMP Snooping > Statistics

Item	Description
Receive Packet	
Total	Total RX igmp packet, include ipv4 multicast data to CPU.
Valid	The valid igmp snooping process packet.
InValid	The invalid igmp snooping process packet.
Other	The ICMP protocol is not 2, and is not ipv4 multicast data packet.
Leave	IGMP leave packet.
Report	IGMP join and report packet.
General Query	IGMP General Query packet.
Special Group Query	IGMP Special Group General Query packet.
Source-specific	IGMP Special Source and Group General Query packet.

Group Query	
Transmit Packet	
Leave	IGMP leave packet
Report	IGMP join and report packet
General Query	IGMP general query packet include querier transmit general query packet.
Special Group Query	IGMP special group query packet include querier transmit special group query packet.
Source-specific Group Query	IGMP Special Source and Group General Query packet.

IV-7-3 MVR

Use the MVR pages to configure settings of MVR function.

IV-7-3-1 Property

To display multicast MVR property Setting web page, click **Multicast > MVR > Property**.

The screenshot shows the 'Multicast > MVR > Property' configuration page. It features several configuration fields: 'State' with an 'Enable' checkbox, 'VLAN' with a dropdown menu set to '1', 'Mode' with radio buttons for 'Compatible' (selected) and 'Dynamic', 'Group Start' with a text input '0.0.0.0', 'Group Count' with a text input '1' and a range '(1 - 128)', and 'Query Time' with a text input '1' and a range 'Sec (1 - 10)'. Below these is an 'Operational Group' section with a black header, containing 'Maximum' (128) and 'Current' (0) values. An 'Apply' button is located at the bottom left.

Figure 88 - Multicast > MVR > Property

Item	Description
State	Enable: if checked enable the MVR state, else disable the MVR state.
VLAN	The MVR VLAN ID.
Mode	Set the MVR mode ● Compatible: compatible mode. ● Dynamic: learn group member on source port.
Group Start	MVR group range start.
Group Count	MVR group continue count.
Query Time	MVR query time when receive MVR leave MVR group packet.
Maximum	The max number of MVR group database.
Current	The learned MVR group current time

IV-7-3-2 Port Setting

This page allow user to configure port role and port immediate leave.

To display MVR port role and immediate leave state setting web page, click **Multicast > MVR > Port Setting**.

Port Setting Table					
					
☐	Entry	Port	Role	Immediate Leave	
☐	1	GE1	None	Disabled	
☐	2	GE2	None	Disabled	
☐	3	GE3	None	Disabled	
☐	4	GE4	None	Disabled	
☐	5	GE5	None	Disabled	
☐	6	GE6	None	Disabled	
☐	7	GE7	None	Disabled	
☐	8	GE8	None	Disabled	
☐	9	GE9	None	Disabled	
☐	10	GE10	None	Disabled	
☐	11	GE11	None	Disabled	
☐	12	GE12	None	Disabled	
☐	13	GE13	None	Disabled	
☐	14	GE14	None	Disabled	
☐	15	GE15	None	Disabled	
☐	16	GE16	None	Disabled	
☐	17	GE17	None	Disabled	
☐	18	GE18	None	Disabled	
☐	19	GE19	None	Disabled	
☐	20	GE20	None	Disabled	
☐	21	GE21	None	Disabled	
☐	22	GE22	None	Disabled	
☐	23	GE23	None	Disabled	
☐	24	GE24	None	Disabled	
☐	25	GE25	None	Disabled	
☐	26	GE26	None	Disabled	
☐	27	GE27	None	Disabled	
☐	28	GE28	None	Disabled	
☐	29	LAG1	None	Disabled	
☐	30	LAG2	None	Disabled	

Figure 89 - Multicast > MVR > Port Setting

Item	Description
Entry	Entry of number.
Port	Port Name.
Role	Port Role for MVR, the type is None/Receiver/Source.
Immediate Leave	Status of immediate leave.

Click "**Edit**" button to view Edit Port Setting menu.

The screenshot shows the 'Edit Port Setting' dialog box. It contains the following fields and controls:

- Port:** A text field containing the value 'GE1'.
- Role:** Three radio buttons are present: 'None' (which is selected), 'Receiver', and 'Source'.
- Immediate Leave:** A checkbox labeled 'Enable'.
- Buttons:** 'Apply' and 'Close' buttons are located at the bottom of the dialog.

Figure - Multicast > MVR > Port Setting > Edit Port Setting

Item	Description
Port	Display the selected port list.
Role	MVR port role ● None: port role is none. ● Receiver: port role is receiver. ● Source: port role is source.
Immediate Leave	MVR Port immediate leave Enable: if checked is enable immediate leave, else disable immediate leave.

IV-7-3-3 Group Address

This page allow user to browse all multicast MVR groups that dynamic learned or statically added.

To display Multicast MVR Group web page, click **Multicast > MVR > Group Address**.

The screenshot shows the 'Group Address Table' interface. At the top, it says 'Showing All entries' and 'Showing 0 to 0 of 0 entries'. There is a search bar on the right. Below this is a table with columns: VLAN, Group Address, Member, Type, and Life (Sec). The table is currently empty, showing '0 results found.' At the bottom, there are buttons for 'Add', 'Edit', 'Delete', and 'Refresh'. On the right side of the table, there are pagination controls: 'First', 'Previous', '1' (selected), 'Next', and 'Last'.

Figure - Multicast > MVR > Group Address

Item	Description
VLAN	The VLAN ID of MVR group.
Group Address	The MVR group IP address.
Member	The member ports of MVR group.
Type	The type of MVR group. Static or Dynamic.
Life(Sec)	The life time of this dynamic MVR group.

Click "**Add**" button to view Add/Edit Group Address Table menu.

The screenshot shows the 'Add Group Address' form. It has a yellow background. The form is divided into sections: 'VLAN' with a value of '1', 'Group Address' with a text input field and a range '(0.0.0.0 - 0.0.0.0)', and 'Member' which is a large empty box. Below the 'Member' box, there are two columns: 'Available Port' and 'Selected Port', each with a list box and a button to move items between them. At the bottom, there are 'Apply' and 'Close' buttons.

Figure- Multicast > MVR > Group Address > Add Group Address

Item	Description
VLAN	The VLAN ID of MVR group.
Group Address	The MVR group IP address.
Member	The member ports of MVR group. ● Available Port: Optional port member, it is only receiver port when MVR mode is compatible, it include source port when mode is dynamic. ● Selected Port: Selected port member

IV-8 Security

Use the Security pages to configure settings for the switch security features.

IV-8-1 RADIUS

This page allow user to add, edit or delete RADIUS server settings and modify default parameter of RADIUS server.

To display RADIUS web page, click **Security > RADIUS**.

Use Default Parameter

Retry	3	(1 - 10, default 3)
Timeout	3	Sec (1 - 30, default 3)
Key String		

RADIUS Table

Showing entries Showing 0 to 0 of 0 entries

☐	Server Address	Server Port	Priority	Retry	Timeout	Usage
0 results found.						

Figure - Security > RADIUS

Item	Description
Retry	Set default Retry number.
Timeout	Set default timeout value.
Key String	Set default RADIUS key string
RADIUS Table	
Server Address	RADIUS server address.
Server Port	RADIUS server port.
Priority	RADIUS server priority (smaller value has higher priority). RADIUS session will try to establish with the server setting which has highest priority. If failed, it will try to connect to the server with next higher priority.
Retry	RADIUS server retry value. If it is fail to connect to server, it will keep trying until timeout with retry times.
Timeout	RADIUS server timeout value. If it is fail to connect to server, it will

	keep trying until timeout.
Usage	RADIUS server usage type Login: For login authentication. 802.1x: For 802.1x authentication. All: For all types.

Click "**Add**" or "**Edit**" button to view Add/Edit RADIUS Server menu.

Add RADIUS Server

Address Type	☒ Hostname ☐ IPv4 ☐ IPv6
Server Address	
Server Port	1812 (0 - 65535, default 1812)
Priority	(0 - 65535)
Key String	☒ Use Default
Retry	☒ Use Default 3 (1 - 10, default 3)
Timeout	☒ Use Default 3 Sec (1 - 30, default 3)
Usage	☐ Login ☐ 802.1X ☒ All

Apply
Close

Edit RADIUS Server

Server Address

undefined

Server Port

0

(0 - 65535, default 1812)

Priority

-1

(0 - 65535)

Key String

☐ Use Default

Retry

☐ Use Default

0

(1 - 10, default 3)

Timeout

☐ Use Default

0

Sec (1 - 30, default 3)

Usage

☒ Login
☐ 802.1X
☐ All

Apply

Close


Figure - Security > RADIUS > Add/Edit RADIUS Server

Item	Description
Address Type	In add dialog, user need to specify server Address Type ● Hostname: Use domain name as server address. ● IPv4: Use IPv4 as server address. ● IPv6: Use IPv6 as server address.
Server Address	In add dialog, user need to input server address based on address type. In edit dialog, it shows current edit server address.
Server Port	Set RADIUS server port.
Priority	Set RADIUS server priority (smaller value has higher priority). RADIUS session will try to establish with the server setting which has highest priority. If failed, it will try to connect to the server with next higher priority.
Retry	Set RADIUS server retry value. If it is fail to connect to server, it will keep trying until timeout with retry times.
Timeout	Set RADIUS server timeout value. If it is fail to connect to server, it will keep trying until timeout.
Usage	Set RADIUS server usage type ● Login: For login authentification. ● 802.1x: For 802.1x authentication. ● All: For all types.

IV-8-2 Management Access

Use the Management Access pages to configure settings of management access.

IV-8-2-1 Management VLAN

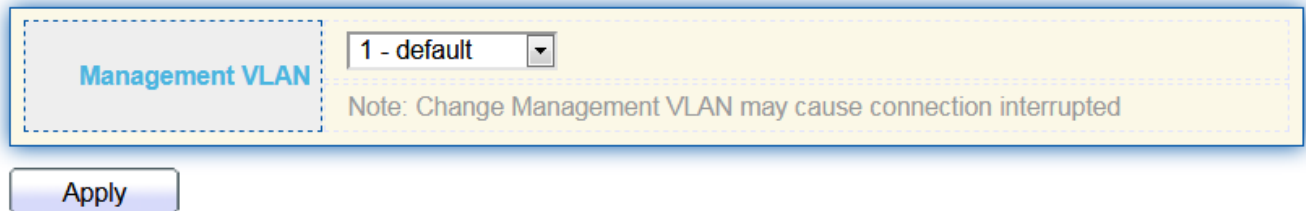

The image shows a configuration interface for the Management VLAN. It features a light yellow background with a dashed blue border. On the left, the text "Management VLAN" is displayed in blue. To its right is a dropdown menu showing "1 - default" with a small downward arrow. Below the dropdown, a note in a smaller font reads: "Note: Change Management VLAN may cause connection interrupted". At the bottom left of the interface is a blue button with the word "Apply" in white.

Note: Change Management VLAN may cause connection interrupted

IV-8-2-2 Management Service

This page allow user to change management services related configurations.

To display Management Service click **Security > Management Access > Management Service**.

Management Service		
Telnet	☐	Enable
SSH	☐	Enable
HTTP	☒	Enable
HTTPS	☐	Enable
SNMP	☒	Enable

Session Timeout		
Console	10	Min (0 - 65535, default 10)
Telnet	10	Min (0 - 65535, default 10)
SSH	10	Min (0 - 65535, default 10)
HTTP	10	Min (0 - 65535, default 10)
HTTPS	10	Min (0 - 65535, default 10)

Password Retry Count		
Console	3	(0 - 120, default 3)
Telnet	3	(0 - 120, default 3)
SSH	3	(0 - 120, default 3)

Silent Time		
Console	0	Sec (0 - 65535, default 0)
Telnet	0	Sec (0 - 65535, default 0)
SSH	0	Sec (0 - 65535, default 0)

Figure - Security > Management Access > Management Service

Item	Description
Management Service	Management service admin state. ● Telnet: Connect CLI through telnet. ● SSH: Connect CLI through SSH. ● HTTP: Connect WEBUI through HTTP. ● HTTPS: Connect WEBUI through HTTPS. ● SNMP: Manage switch through SNMP.
Session Timeout	Set session timeout minutes for user access to user interface. 0 minutes means never timeout.
Password Retry	Retry count is the number which CLI password input error

Count	tolerance count. After input error password exceeds this count, the CLI will freeze after silent time.
Silent Time	After input error password exceeds password retry count, the CLI will freeze after silent time.

IV-8-2-3 Management ACL

This page allow user to add or delete management ACL rule. A rule cannot be deleted if under active.

To display Management ACL page, click **Security > Management Access > Management ACL**.

Figure 96 - Security > Management Access > Management ACL

Item	Description
ACL Name	Input MAC ACL name.
Management ACL	
ACL Name	Display Management ACL name.
State	Display Management ACL whether active.
Rule	Display the number Management ACE rule of ACL.

IV-8-2-4 Management ACE

This page allow user to add, edit or delete ACE rule. An ACE rule cannot be edited or deleted if ACL under active. New ACE cannot be added if ACL under active

To display Management ACE page, click **Security > Management Access > Management ACE**.

Management ACE Table

ACL Name

Showing entries Showing 0 to 0 of 0 entries

☐	Priority	Action	Service	Port	Address / Mask
0 results found.					

Figure - Security > Management Access > Management ACE

Item	Description
ACL Name	Select the ACL name to which an ACE is being added.
Priority	Display the priority of ACE.
Action	Display the action of ACE.
Service	Display the service ACE
Port	Display the port list of ACE
Address / Mask	Display the source IP address and mask of ACE.

Click "Add" or "Edit" button to view Add/Edit Management ACE menu.

Add Management ACE

ACL Name	manage		
Priority	1	(1 - 65535)	
Service	☐ All ☐ Http ☐ Https ☒ Snmp ☐ SSH ☐ Telnet		
Action	☐ Permit ☒ Deny		
Port	Available PortSelected Port GE1GE2GE3GE4GE5GE6GE7GE8		
IP Version	☒ All ☐ IPv4 ☐ IPv6		
IPv4	/ 255.255.255.255		
IPv6	/ 128 (1 - 128)		

Apply

Close

Edit Managemet ACE

ACL Name

manage

Priority

1

Service

☐ All
☐ Http
☐ Https
☒ Snmp
☐ SSH
☐ Telnet

Action

☐ Permit
☒ Deny

Port

Available Port

GE2
GE3
GE4
GE5
GE6
GE7
GE8
GE9

Selected Port

GE1

IP Version

☒ All
☐ IPv4
☐ IPv6

IPv4

/ 255.255.255.255

IPv6

/ 128 (1 - 128)

Apply

Close

Figure - Security > Management Access > Add/Edit Management ACE

Item	Description
ACL Name	Display the ACL name to which an ACE is being added.
Priority	Specify the priority of the ACE. ACEs with higher sequence are processed first (1 is the highest priority). Only available on Add Dialog.
Service	Select the type service of rule. ● All: All services. ● HTTP: Only HTTP service. ● HTTPS: Only HTTPS service ● SNMP: Only SNMP service. ● SSH: Only SSH service. ● Telnet: Only Telnet service
Action	Select the action after ACE match packet. ● Permit: Forward packets that meet the ACE criteria.

	● Deny: Drop packets that meet the ACE criteria.
Port	Select ports which will be matched.
IP Version	Select the type of source IP address. ● All: All IP addresses can access. ● IPv4: Specify IPv4 address ca access. ● IPv6: Specify IPv6 address ca access.
IPv4	Enter the source IPv4 address value and mask to which will be matched.
IPv6	Enter the source IPv6 address value and mask to which will be matched.

IV-8-3 Authentication Manager

IV-8-3-1 Property

This page allow user to edit authentication global settings and some port mods' configurations.

To display authentication manager Property web page, click **Security > Authentication Manager > Property**.

The top configuration section includes:

- Authentication Type:** Three checkboxes for 802.1x, MAC-Based, and WEB-Based.
- Guest VLAN:** A dropdown menu currently showing '1'.
- MAC-Based User ID Format:** A text input field containing 'XXXXXXXXXXXX'.
- Apply** button.

The **Port Mode Table** contains 19 rows of port configurations. Each row has a checkbox, an entry number, a port name (GE1-GE19), and columns for Authentication Type (802.1x, MAC-Based, WEB-Based), Host Mode, Order, Method, Guest VLAN, and VLAN Assign Mode.

	Entry	Port	Authentication Type			Host Mode	Order	Method	Guest VLAN	VLAN Assign Mode
			802.1x	MAC-Based	WEB-Based					
☐	1	GE1	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	2	GE2	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	3	GE3	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	4	GE4	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	5	GE5	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	6	GE6	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	7	GE7	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	8	GE8	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	9	GE9	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	10	GE10	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	11	GE11	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	12	GE12	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	13	GE13	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	14	GE14	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	15	GE15	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	16	GE16	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	17	GE17	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	18	GE18	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static
☐	19	GE19	Disabled	Disabled	Disabled	Multiple Authentication	802.1x	RADIUS	Disabled	Static

Figure - Security > Authentication Manager > Property

Item	Description
Authentication Type	Set checkbox to enable/disable following authentication types ● 802.1x: Use IEEE 802.1x to do authentication ● MAC-Based: Use MAC address to do authentication ● WEB-Based: Prompt authentication web page for user to do

	authentication
Guest VLAN	Set checkbox to enable/disable guest VLAN, if guest VLAN is enabled, you need to select one available VLAN ID to be guest VID.
MAC-Based User ID Format	Select mac-based authentication RADIUS username/password ID format. ● XXXXXXXXXXXXX ● Xxxxxxxxxxxxxx ● XX:XX:XX:XX:XX:XX ● xx:xx:xx:xx:xx:xx ● XX-XX-XX-XX-XX-XX ● xx-xx-xx-xx-xx-xx ● XX.XX.XX.XX.XX.XX ● xx.xx.xx.xx.xx.xx ● XXXX:XXXX:XXXX ● xxxx:xxxx:xxxx ● XXXX-XXXX-XXXX ● XXXX-XXXX-XXXX ● XXXX.XXXX.XXXX ● XXXX.XXXX.XXXX ● XXXXXX:XXXXXX ● XXXXXX:XXXXXX ● XXXXXX-XXXXXX ● XXXXXX-XXXXXX
Port Mode Table	
Port	Port Name.
Authentication Type (802.1X)	802.1X authentication type state ● Enabled: 802.1X is enabled. ● Disabled: 802.1X is disabled.
Authentication Type (MAC-Based)	MAC-Based authentication type state ● Enabled: MAC-Based authentication is enabled ● Disabled: MAC-Based authentication is disabled
Authentication Type (WEB-Based)	WEB-Based authentication type state ● Enabled: WEB-Based authentication is enabled ● Disabled: WEB-Based authentication is disabled
Host Mode	Authenticating host mode ● Multiple Authentication: In this mode, every client need to pass authenticate procedure individually. ● Multiple Hosts: In this mode, only one client need to be authenticated and other clients will get the same access accessibility. Web-auth cannot be enabled in this mode. ● Single Host: In this mode, only one host is allowed to be authenticated. It is the same as Multi-auth mode with max hosts number configure to be 1.

Order	Support following authentication type order combinations. Web Authentication should always be the last type. The authentication manager will go to next type if current type is not enabled or authenticated fail. ● 802.1x ● MAC-Based ● WEB-Based ● 802.1x MAC-Based ● 802.1x WEB-Based ● MAC-Based 802.1x ● WEB-Based 802.1x ● 802.1x MAC-Based WEB-Based ● 802.1x WEB-Based MAC-Based
Method	Support following authentication method order combinations. These orders only available on MAC-Based authentication and WEB-Based authentication. 802.1x only support Radius method. ● Local: Use DUT's local database to do authentication ● Radius: Use remote RADIUS server to do authentication ● Local Radius ● Radius Local
Guest VLAN	Port guest VLAN enable state ● Enabled: Guest VLAN is enabled on port. ● Disabled: Guest VLAN is disabled on port.
VLAN Assign Mode	Support following VLAN assign mode and only apply when source is RADIUS ● Disable: Ignore the VLAN authorization result and keep original VLAN of host. ● Reject: If get VLAN authorized information, just use it. However, if there is no VLAN authorized information, reject the host and make it unauthorized. ● Static: If get VLAN authorized information, just use it. If there is no VLAN authorized information, keep original VLAN of host.

Click **“Edit”** button to view the Edit Port Mode menu.

Port

GE1

Authentication Type

☐ 802.1x
☐ MAC-Based
☐ WEB-Based

Host Mode

☒ Multiple Authentication
☐ Multiple Hosts
☐ Single Host

Order

Available Type

MAC-Based

WEB-Based

Select Type

802.1x

Method

Available Method

Local

Select Method

RADIUS

Guest VLAN

☐ Enable
☐ Disable
☐ Reject
☒ Static

VLAN Assign Mode

Apply

Close

Figure - Security > Authentication Manager > Property > Edit Port Mode

Item	Description
Port	Selected port list.
Authentication Type	Set checkbox to enable/disable authentication types.
Host Mode	Select authenticating host mode - Multiple Authentication: In this mode, every client need to pass authenticate procedure individually. - Multiple Hosts: In this mode, only one client need to be authenticated and other clients will get the same access accessibility. Web-auth cannot be enabled in this mode. - Single Host: In this mode, only one host is allowed to be authenticated. It is the same as Multi-auth mode with max hosts number configure to be 1.

Order	Support following authentication type order combinations. Web Authentication should always be the last type. The authentication manager will go to next type if current type is not enabled or authenticated fail. ● 802.1x ● MAC-Based ● WEB-Based ● 802.1x MAC-Based ● 802.1x WEB-Based ● MAC-Based 802.1x ● WEB-Based 802.1x ● 802.1x MAC-Based WEB-Based ● 802.1x WEB-Based MAC-Based
Method	Support following authentication method order combinations. These orders only available on MAC-Based authentication and WEB-Based authentication. 802.1x only support Radius method. ● Local: Use DUT's local database to do authentication. ● Radius: Use remote RADIUS server to do authentication. ● Local Radius. ● Radius Local.
Guest VLAN	Set checkbox to enable/disable guest VLAN.
VLAN Assign Mode	Support following VLAN assign mode and only apply when source is RADIUS ● Disable: Ignore the VLAN authorization result and keep original VLAN of host. ● Reject: If get VLAN authorized information, just use it. However, if there is no VLAN authorized information, reject the host and make it unauthorized. ● Static: If get VLAN authorized information, just use it. If there is no VLAN authorized information, keep original VLAN of host.

IV-8-3-2 Port Setting

This page allow user to configure authentication manger port settings

To display the authentication manager Port Setting web page, click **Security > Authentication Manager > Port Setting**.

Port Setting Table

Figure - Security > Authentication Manager > Port Setting

Item	Description
Port	Port
Port Control	Support following authentication port control types. ● Disable: Disable authentication function and all clients have network accessibility. ● Force Authorized: Port is force authorized and all clients have network accessibility. ● Force Unauthorized: Port is force unauthorized and all clients have no network accessibility. ● Auto: Need passing authentication procedure to get network accessibility.
Reauthentication	Reautheticate state ● Enabled: Host will be reauthenticated after reauthentication period. ● Disabled: Host will not be reauthenticated after reauthentication period.

Max Hosts	In Multiple Authentication mode, total host number cannot not exceed max hosts number.
Common Timer (Reauthentication)	After re-authenticate period, host will return to initial state and need to pass authentication procedure again.
Common Timer (Inactive)	If no packet from the authenticated host, the inactive timer will increase. After inactive timeout, the host will be unauthorized and corresponding session will be deleted. In multi-host mode, the packet is counting on the authorized host only.
Common Timer (Quiet)	When port is in Locked state after authenticating fail several times, the host will be locked in quiet period. After this quiet period, the host is allowed to authenticate again.
802.1X Params (TX Period)	Number of seconds that the device waits for a response to an Extensible Authentication Protocol (EAP) request/identity frame from the supplicant (client) before resending the request.
802.1X Params (Supplicant Timeout)	The maximum number of EAP requests that can be sent. If a response is not received after the defined period (supplicant timeout), the authentication process is restarted.
802.1X Params (Server Timeout)	Number of seconds that lapses before EAP requests are resent to the supplicant.
802.1X Params (Max Request)	Number of seconds that lapses before the device resends a request to the authentication server.
Web-Based Param (Max Login)	Allow user login fail number. After login fail number exceed, the host will enter Lock state and is not able to authenticate until quiet period exceed.

Click "**Edit**" button to view Edit Port Setting menu.

Port

GE1

Port Control

☒ Disabled
☐ Force Authorized
☐ Force Unauthorized
☐ Auto

Reauthentication

☐ Enable

Max Hosts

(1 - 256, default 256)

Common Timer

Reauthentication

Sec (300 - 4294967294, default 3600)

Inactive

Sec (60 - 65535, default 60)

Quiet

Sec (0 - 65535, default 60)

802.1x Parameters

TX Period

Sec (1 - 65535, default 30)

Supplicant Timeout

Sec (1 - 65535, default 30)

Server Timeout

Sec (1 - 65535, default 30)

Max Request

(1 - 10, default 2)

Web-Based Parameters

Max Login

☐ Infinite
 (3 - 10, default 3)

Apply

Close

Figure 102 - Security > Authentication Manager > Port Setting > Edit Port Setting

Item	Description
Port	Port Name.
Port Control	Support following authentication port control types. ● Disable: Disable authentication function and all clients have network accessibility. ● Force Authorized: Port is force authorized and all clients have network accessibility. ● Force Unauthorized: Port is force unauthorized and all clients have no network accessibility. ● Auto: Need passing authentication procedure to get network accessibility.
Reauthentication	Set checkbox to enable/disable reauthentication.

Max Hosts	In Multiple Authentication mode, total host number cannot not exceed max hosts number.
Common Timer	
Reauthentication	After re-authenticate period, host will return to initial state and need to pass authentication procedure again.
Inactive	If no packet from the authenticated host, the inactive timer will increase. After inactive timeout, the host will be unauthorized and corresponding session will be deleted. In multi-host mode, the packet is counting on the authorized host only and not all packets on the port.
Quiet	When port is in Locked state after authenticating fail several times, the host will be locked in quiet period. After this quiet period, the host is allowed to authenticate again.
802.1X Params	
TX Period	Number of seconds that the device waits for a response to an Extensible Authentication Protocol (EAP) request/identity frame from the supplicant (client) before resending the request.
Supplicant Timeout	The maximum number of EAP requests that can be sent. If a response is not received after the defined period (supplicant timeout), the authentication process is restarted.
Server Timeout	Number of seconds that lapses before EAP requests are resent to the supplicant.
Max Request	Number of seconds that lapses before the device resends a request to the authentication server.
Web-Based Param	
Max Login	Set checkbox to set max login number to be infinite or specify max login number.

IV-8-3-3 Sessions

This page show all detail information of authentication sessions and allow user to select specific session to delete by clicking “Clear ” button.

To display Sessions web page, click **Security > Authentication Manger > Sessions**.

Sessions Table

Showing All entries

Showing 0 to 0 of 0 entries

Q

	Session ID	Port	MAC Address	Current Type	Status	Operational Information				Authorized Information		
						VLAN	Session Time	Inactivated Time	Quiet Time	VLAN	Reauthentication Period	Inactive Timeout
0 results found.												

Clear

Refresh

First

Previous

1

Next

Last

Figure - Security > Authentication Manager > Sessions

Item	Description
Session ID	Session ID is unique of each session.
Port	Port name which the host located.
MAC Address	Host MAC address.
Current Type	Show current authenticating type ● 802.1x: Use IEEE 802.1X to do authenticating ● MAC-Based: Use MAC-Based authentication to do authenticating. ● WEB-Based: Use WEB-Based authentication to do authenticating.
Status	Show host authentication session status IP version (IPv4, IPv6) ● Disable: This session is ready to be deleted ● Running: Authentication process is running ● Authorized: Authentication is passed and getting network accessibility. ● Unauthorized: Authentication is not passed and not getting network accessibility. ● Locked: Host is locked and do not allow to do authenticating until quiet period. ● Guest: Host is in the guest VLAN.
Operational (VLAN)	Shows host operational VLAN ID.
Operational (Session Time)	In “Authorized” state, it shows total time after authorized.
Operational (Inactived)	In “Authorized” state, it shows how long the host do not send any packet.
Operational (Quiet Time)	In “Locked” state, it shows total time after locked.
Authorized (VLAN)	Shows VLAN ID given from authorized procedure.
Authorized (Reauthentication Period)	Shows reauthentication period given from authorized procedure.
Authorized (Inactive Timeouts)	Shows inactive timeout given from authorized procedure.

IV-8-4 Port Security

This page allow user to configure port security settings for each interface. When port security is enabled on interface, action will be perform once learned MAC address over limitation.

To display Port Security web page, click **Security > Port Security**.

State ☐ Enable

Apply

Port Security Table

☐	Entry	Port	State	MAC Address	Action
☐	1	GE1	Disabled	1	Discard
☐	2	GE2	Disabled	1	Discard
☐	3	GE3	Disabled	1	Discard
☐	4	GE4	Disabled	1	Discard
☐	5	GE5	Disabled	1	Discard
☐	6	GE6	Disabled	1	Discard
☐	7	GE7	Disabled	1	Discard
☐	8	GE8	Disabled	1	Discard
☐	9	GE9	Disabled	1	Discard
☐	10	GE10	Disabled	1	Discard
☐	11	GE11	Disabled	1	Discard
☐	12	GE12	Disabled	1	Discard
☐	13	GE13	Disabled	1	Discard
☐	14	GE14	Disabled	1	Discard
☐	15	GE15	Disabled	1	Discard
☐	16	GE16	Disabled	1	Discard
☐	17	GE17	Disabled	1	Discard
☐	18	GE18	Disabled	1	Discard
☐	19	GE19	Disabled	1	Discard
☐	20	GE20	Disabled	1	Discard
☐	21	GE21	Disabled	1	Discard
☐	22	GE22	Disabled	1	Discard
☐	23	GE23	Disabled	1	Discard
☐	24	GE24	Disabled	1	Discard
☐	25	GE25	Disabled	1	Discard

Figure - Security > Port Security

Item	Description
State	Enable/Disable the port security function.
Port	Select one or multiple ports to configure.
State	Select the status of port security ● Disable: Disable port security function. ● Enable: Enable port security function.
MAC Address	Specify the number of how many mac addresses can be learned.
Action	Select the action if learned mac addresses ● Forward: Forward this packet whose SMAC is new to system and exceed the learning-limit number. ● Discard: Discard this packet whose SMAC is new to system and exceed the learning-limit number. ● Shutdown: Shutdown this port when receives a packet whose SMAC is new to system and exceed the learning limit number.

Click "**Edit**" button to view Edit Port Security menu.

Figure - Security > Port Security > Edd Port Security

Item	Description
Port	Select one or multiple ports to configure.
State	Select the status of port security Disable: Disable port security function. Enable: Enable port security function.
MAC Address	Specify the number of how many mac addresses can be learned.
Action	Select the action if learned mac addresses ● Forward: Forward this packet whose SMAC is new to system and exceed the learning-limit number. ● Discard: Discard this packet whose SMAC is new to system and exceed the learning-limit number. ● Shutdown: Shutdown this port when receives a packet whose SMAC is new to system and exceed the learning limit number.

IV-8-5 Traffic Segmentation

Traffic Segmentation prohibits ports to communicate with each other directly, on other manufacturers' switches

Traffic Segmentation Settings

Port List (e.g. GE1,GE2-5,XGE1-2)		☐ All Ports
Forward Port List (e.g. GE1,GE2-5,XGE1-2)		☐ All Ports

Apply

Traffic Segmentation Table

Q

Entry	Port	Forward Port List
1	GE1	GE21-24,XGE1-4
2	GE2	GE21-24,XGE1-4
3	GE3	GE21-24,XGE1-4
4	GE4	GE21-24,XGE1-4
5	GE5	GE21-24,XGE1-4
6	GE6	GE21-24,XGE1-4
7	GE7	GE21-24,XGE1-4
8	GE8	GE21-24,XGE1-4
9	GE9	GE21-24,XGE1-4
10	GE10	GE21-24,XGE1-4
11	GE11	GE21-24,XGE1-4
12	GE12	GE21-24,XGE1-4
13	GE13	GE21-24,XGE1-4
14	GE14	GE21-24,XGE1-4
15	GE15	GE21-24,XGE1-4
16	GE16	GE21-24,XGE1-4
17	GE17	GE21-24,XGE1-4
18	GE18	GE21-24,XGE1-4
19	GE19	GE21-24,XGE1-4
20	GE20	GE21-24,XGE1-4
21	GE21	GE1-24,XGE1-4
22	GE22	GE1-24,XGE1-4
23	GE23	GE1-24,XGE1-4
24	GE24	GE1-24,XGE1-4
25	XGE1	GE1-24,XGE1-4
26	XGE2	GE1-24,XGE1-4
27	XGE3	GE1-24,XGE1-4
28	XGE4	GE1-24,XGE1-4

IV-8-6 Storm Control

To display Storm Control global setting web page, click **Security > Storm Control**.

Mode

☐ Packet / Sec
☒ Kbits / Sec

IFG

☒ Exclude
☐ Include

Port Setting Table

Entry	Port	State	Broadcast		Unknown Multicast		Unknown Unicast		Action
			State	Rate (Kbps)	State	Rate (Kbps)	State	Rate (Kbps)	
☐	1	GE1	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	2	GE2	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	3	GE3	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	4	GE4	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	5	GE5	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	6	GE6	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	7	GE7	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	8	GE8	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	9	GE9	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	10	GE10	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	11	GE11	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	12	GE12	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	13	GE13	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	14	GE14	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	15	GE15	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	16	GE16	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	17	GE17	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	18	GE18	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	19	GE19	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	20	GE20	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	21	GE21	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	22	GE22	Disabled	10000	Disabled	10000	Disabled	10000	Drop
☐	23	GE23	Disabled	10000	Disabled	10000	Disabled	10000	Drop

Figure - Security > Storm Control

Item	Description
Mode(Unit)	Select the unit of storm control ● Packet / Sec: storm control rate calculates by packet-based ● Kbits / Sec: storm control rate calculates by octet-based.
IFG	Select the rate calculates w/o preamble & IFG (20 bytes) ● Excluded: exclude preamble & IFG (20 bytes) when count ingress storm control rate. ● Included: include preamble & IFG (20 bytes) when count ingress storm control rate.

Click "**Edit**" button to view Edit Port Setting menu.

Port

GE1

State

☐ Enable

Broadcast

☐ Enable

Kbps (16 - 1000000, default 10000)

Unknown Multicast

☐ Enable

Kbps (16 - 1000000, default 10000)

Unknown Unicast

☐ Enable

Kbps (16 - 1000000, default 10000)

Action

☒ Drop
☐ Shutdown

Apply

Close

Figure - Security > Storm Control > Edit Port Setting

Item	Description
Port	Select the setting ports.
State	Select the state of setting Enable: Enable the storm control function.
Broadcast	Enable: Enable the storm control function of Broadcast packet. Value of storm control rate, Unit: pps (packet per-second, range 1- 262143) or Kbps (Kbits per-second, range16 - 1000000) depends on global mode setting.
Unknown Multicast	Enable: Enable the storm control function of Unknown multicast packet. Value of storm control rate, Unit: pps (packet per-second, range 1- 262143) or Kbps (Kbits per-second, range16 - 1000000) depends on global mode setting.
Unknown Unicast	Enable: Enable the storm control function of Unknown unicast packet. Value of storm control rate, Unit: pps (packet per-second, range 1 - 262143) or Kbps (Kbits per-second, range16 - 1000000) depends on global mode setting.
Action	Select the state of setting ● Drop: Packets exceed storm control rate will be dropped. ● Shutdown: Port will be shutdown when packets exceed storm control rate.

IV-8-7 DoS

A Denial of Service (DoS) attack is a hacker attempt to make a device unavailable to its users. DoS attacks saturate the device with external communication requests, so that it cannot respond to legitimate traffic. These attacks usually lead to a device CPU overload.

The DoS protection feature is a set of predefined rules that protect the network from malicious attacks. The DoS Security Suite Settings enables activating the security suite.

IV-8-7-1 Property

To display Dos Global Setting web page, click **Security > Dos > Property**.

POD	☒ Enable
Land	☒ Enable
UDP Blat	☒ Enable
TCP Blat	☒ Enable
DMAC = SMAC	☒ Enable
Null Scan Attack	☒ Enable
X-Mas Scan Attack	☒ Enable
TCP SYN-FIN Attack	☒ Enable
TCP SYN-RST Attack	☒ Enable
ICMP Fragment	☒ Enable
TCP-SYN	☒ Enable Note: Source Port < 1024
TCP Fragment	☒ Enable Note: Offset = 1
Ping Max Size	☒ Enable IPv4 ☒ Enable IPv6 512 Byte (0 - 65535, default 512)
TCP Min Hdr size	☒ Enable 20 Byte (0 - 31, default 20)
IPv6 Min Fragment	☒ Enable 1240 Byte (0 - 65535, default 1240)
Smurf Attack	☒ Enable 0 Netmask Length (0 - 32, default 0)

Apply

Figure - Security > DoS > Property

Item	Description
POD	Avoids ping of death attack.
Land	Drops the packets if the source IP address is equal to the destination IP address.
UDP Blat	Drops the packets if the UDP source port equals to the UDP

	destination port.
TCP Blat	Drops the packages if the TCP source port is equal to the TCP destination port.
DMAC = SMAC	Drops the packets if the destination MAC address is equal to the source MAC address.
Null Scan Attack	Drops the packets with NULL scan.
X-Mas Scan Attack	Drops the packets if the sequence number is zero, and the FIN, URG and PSH bits are set.
TCP SYN-FIN Attack	Drops the packets with SYN and FIN bits set.
TCP SYN-RST Attack	Drops the packets with SYN and RST bits set
ICMP Fragment	Drops the fragmented ICMP packets.
TCP SYN (SPORT<1024)	Drops SYN packets with sport less than 1024.
TCP Fragment (Offset = 1)	Drops the TCP fragment packets with offset equals to one.
Ping Max Size	Specify the maximum size of the ICMPv4/ICMPv6 ping packets. The valid range is from 0 to 65535 bytes, and the default value is 512 bytes.
IPv6 Min Fragment	Checks the minimum size of IPv6 fragments, and drops the packets smaller than the minimum size. The valid range is from 0 to 65535 bytes, and default value is 1240 bytes.
Smurf Attack	Avoids smurf attack. The length range of the netmask is from 0 to 323 bytes, and default length is 0 bytes.

IV-8-7-2 Port Setting

To configure and display the state of DoS protection for interfaces, click **Security > DoS > Port Setting**.

Port Setting Table

☐	Entry	Port	State
☐	1	GE1	Disabled
☐	2	GE2	Disabled
☐	3	GE3	Disabled
☐	4	GE4	Disabled
☐	5	GE5	Disabled
☐	6	GE6	Disabled
☐	7	GE7	Disabled
☐	8	GE8	Disabled
☐	9	GE9	Disabled
☐	10	GE10	Disabled
☐	11	GE11	Disabled
☐	12	GE12	Disabled
☐	13	GE13	Disabled
☐	14	GE14	Disabled
☐	15	GE15	Disabled
☐	16	GE16	Disabled
☐	17	GE17	Disabled
☐	18	GE18	Disabled
☐	19	GE19	Disabled
☐	20	GE20	Disabled
☐	21	GE21	Disabled
☐	22	GE22	Disabled
☐	23	GE23	Disabled
☐	24	GE24	Disabled
☐	25	GE25	Disabled
☐	26	GE26	Disabled
☐	27	GE27	Disabled
☐	28	GE28	Disabled

Edit

Figure - Security > DoS > Port Setting

Item	Description
Port	Interface or port number.
State	Enable/Disable the DoS protection on the interface.

IV-8-8 DHCP Snooping

Use the DHCP Snooping pages to configure settings of DHCP Snooping.

IV-8-8-1 Property

This page allow user to configure global and per interface settings of DHCP Snooping.

To display property page, click **Security > DHCP Snooping > Property**.

State ☐ Enable

VLAN

Available VLAN: VLAN 1

Selected VLAN:

Apply

Port Setting Table

	Entry	Port	Trust	Verify Chaddr	Rate Limit
☐	1	GE1	Disabled	Disabled	Unlimited
☐	2	GE2	Disabled	Disabled	Unlimited
☐	3	GE3	Disabled	Disabled	Unlimited
☐	4	GE4	Disabled	Disabled	Unlimited
☐	5	GE5	Disabled	Disabled	Unlimited
☐	6	GE6	Disabled	Disabled	Unlimited
☐	7	GE7	Disabled	Disabled	Unlimited
☐	8	GE8	Disabled	Disabled	Unlimited
☐	9	GE9	Disabled	Disabled	Unlimited
☐	10	GE10	Disabled	Disabled	Unlimited
☐	11	GE11	Disabled	Disabled	Unlimited
☐	12	GE12	Disabled	Disabled	Unlimited
☐	13	GE13	Disabled	Disabled	Unlimited
☐	14	GE14	Disabled	Disabled	Unlimited
☐	15	GE15	Disabled	Disabled	Unlimited
☐	16	GE16	Disabled	Disabled	Unlimited
☐	17	GE17	Disabled	Disabled	Unlimited
☐	18	GE18	Disabled	Disabled	Unlimited
☐	19	GE19	Disabled	Disabled	Unlimited

Figure - Security > DHCP Snooping > Property

Item	Description
State	Set checkbox to enable/disable DHCP Snooping function.
VLAN	Select VLANs in left box then move to right to enable DHCP Snooping. Or select VLANs in right box then move to left to disable DHCP Snooping.
Port Setting Table	
Port	Display port ID.
Trust	Display enable/disabled trust attribute of interface.
Verify Chaddr	Display enable/disabled chaddr validation attribute of interface.
Rate Limit	Display rate limitation value of interface.

Click "**Edit**" button to view Edit Port Setting menu.

Edit Port Setting

Port	GE1
Trust	☐ Enable
Verify Chaddr	☐ Enable
Rate Limit	0 pps (0 - 300, default 0), 0 is Unlimited

Apply Close

Figure - Security > DHCP Snooping > Property > Edit Port Setting

Item	Description
Port	Display selected port to be edited
Trust	Set checkbox to enable/disabled trust of interface. All DHCP packet will be forward directly if enable trust. Default is disabled.
Verify Chaddr	Set checkbox to enable or disable chaddr validation of interface. All DHCP packets will be checked whether client hardware mac address is same as source mac in Ethernet header if enable chaddr validation. Default is disabled.
Rate Limit	Input rate limitation of DHCP packets. The unit is pps. 0 means unlimited. Default is unlimited.

IV-8-8-2 Statistics

This page allow user to browse all statistics that recorded by DHCP snooping function.

To view the Statistics menu, navigate to **Security > DHCP Snooping > Statistics**.

Statistics Table

☐	Entry	Port	Forward	Chaddr Check Drop	Untrust Port Drop	Untrust Port with Option82 Drop	Invalid Drop
☐	1	GE1	0	0	0	0	0
☐	2	GE2	0	0	0	0	0
☐	3	GE3	0	0	0	0	0
☐	4	GE4	0	0	0	0	0
☐	5	GE5	0	0	0	0	0
☐	6	GE6	0	0	0	0	0
☐	7	GE7	0	0	0	0	0
☐	8	GE8	0	0	0	0	0
☐	9	GE9	0	0	0	0	0
☐	10	GE10	0	0	0	0	0
☐	11	GE11	0	0	0	0	0
☐	12	GE12	0	0	0	0	0
☐	13	GE13	0	0	0	0	0
☐	14	GE14	0	0	0	0	0
☐	15	GE15	0	0	0	0	0
☐	16	GE16	0	0	0	0	0
☐	17	GE17	0	0	0	0	0
☐	18	GE18	0	0	0	0	0
☐	19	GE19	0	0	0	0	0
☐	20	GE20	0	0	0	0	0
☐	21	GE21	0	0	0	0	0
☐	22	GE22	0	0	0	0	0
☐	23	GE23	0	0	0	0	0
☐	24	GE24	0	0	0	0	0
☐	25	GE25	0	0	0	0	0
☐	26	GE26	0	0	0	0	0
☐	27	GE27	0	0	0	0	0
☐	28	GE28	0	0	0	0	0
☐	29	LAG1	0	0	0	0	0

Figure 114 - Security > DHCP Snooping > Statistics

Item	Description
Port	Display port ID.
Forwarded	Display how many packets forwarded normally.

Chaddr Check Drop	Display how many packets dropped by chaddr validation.
Untrusted Port Drop	Display how many DHCP server packets that are received by untrusted port dropped.
Untrusted Port with Option82 Drop	Display how many packets dropped by untrusted port with option82 checking.
Invalid Drop	Display how many packets dropped by invalid checking.

IV-8-8-3 Option82 Property

This page allow user to set string of DHCP option82 remote ID filed. The string will attach in option82 if option inserted.

To display Option82 Property page, click **Security > DHCP Snooping > Option82 Property**.

Remote ID ☐ User Defined

Operational Status

Remote ID 74:da:38:17:6e:7a (Switch Mac in Byte Order)

Apply

Port Setting Table

	Entry	Port	State	Allow Untrust
☐	1	GE1	Disabled	Drop
☐	2	GE2	Disabled	Drop
☐	3	GE3	Disabled	Drop
☐	4	GE4	Disabled	Drop
☐	5	GE5	Disabled	Drop
☐	6	GE6	Disabled	Drop
☐	7	GE7	Disabled	Drop
☐	8	GE8	Disabled	Drop
☐	9	GE9	Disabled	Drop
☐	10	GE10	Disabled	Drop
☐	11	GE11	Disabled	Drop
☐	12	GE12	Disabled	Drop
☐	13	GE13	Disabled	Drop
☐	14	GE14	Disabled	Drop
☐	15	GE15	Disabled	Drop
☐	16	GE16	Disabled	Drop
☐	17	GE17	Disabled	Drop
☐	18	GE18	Disabled	Drop
☐	19	GE19	Disabled	Drop
☐	20	GE20	Disabled	Drop
☐	21	GE21	Disabled	Drop
☐	22	GE22	Disabled	Drop

Figure - Security > DHCP Snooping > Option82 Property

Item	Description
User Defined	Set checkbox to enable user-defined remote-ID. By default, remote ID is switch mac in byte order.

Remote ID	Input user-defined remote ID. Only available when enable user-define remote ID.
Port Setting Table	
Port	Display port ID.
State	Display option82 enable/disable status of interface.
Allow untrusted	Display allow untrusted action of interface.

Click "**Edit**" button to view Edit Port Setting menu.

Figure- DHCP Snooping > Option82 Property > Edit Port Setting

Item	Description
Port	Display selected port to be edited
State	Set checkbox to enable/disable option82 function of interface.
Allow untrusted	Select the action perform when untrusted port receive DHCP packet has option82 filed. Default is drop. ● Keep: Keep original option82 content. ● Replace: Replace option82 content by switch setting ● Drop: Drop packets with option82

IV-8-8-4 Option82 Circuit ID

This page allow user to set string of DHCP option82 circuit ID filed. The string will attach in option82 if option inserted.

To display Option82 Circuit ID page, click **Security > DHCP Snooping > Option82 Circuit ID**.

Figure - Security > DHCP Snooping > Option82 Circuit ID

Item	Description
Port	Display port ID of entry.
VLAN	Display associate VLAN of entry.
Circuit ID	Display circuit ID string of entry.

Click **"Add"** button or **"Edit"** button to view the Add/Edit Option82 Circuit ID menu.

Figure - Security > DHCP Snooping > Option82 Circuit ID > Add/Edit Option82 Circuit ID

Item	Description
------	-------------

Port	Select port from list to associate to CID entry. Only available on Add dialog.
VLAN	Input VLAN ID to associate to circuit ID entry. VLAN ID is not mandatory. Only available on Add dialog.
Circuit ID	Input String as circuit ID. Packets match port and VLAN will be inserted circuit ID.

IV-8-9 IP Source Guard

Use the IP Source Guard pages to configure settings of IP Source Guard.

IV-8-9-1 Port Setting

Use the IP Source Guard pages to configure settings of IP Source Guard.

To display Port Setting page, click **Security > IP Source Guard > Port Setting**.

Port Setting Table

☐	Entry	Port	State	Verify Source	Current Entry	Max Entry
☐	1	GE1	Disabled	IP	0	Unlimited
☐	2	GE2	Disabled	IP	0	Unlimited
☐	3	GE3	Disabled	IP	0	Unlimited
☐	4	GE4	Disabled	IP	0	Unlimited
☐	5	GE5	Disabled	IP	0	Unlimited
☐	6	GE6	Disabled	IP	0	Unlimited
☐	7	GE7	Disabled	IP	0	Unlimited
☐	8	GE8	Disabled	IP	0	Unlimited
☐	9	GE9	Disabled	IP	0	Unlimited
☐	10	GE10	Disabled	IP	0	Unlimited
☐	11	GE11	Disabled	IP	0	Unlimited
☐	12	GE12	Disabled	IP	0	Unlimited
☐	13	GE13	Disabled	IP	0	Unlimited
☐	14	GE14	Disabled	IP	0	Unlimited
☐	15	GE15	Disabled	IP	0	Unlimited
☐	16	GE16	Disabled	IP	0	Unlimited
☐	17	GE17	Disabled	IP	0	Unlimited
☐	18	GE18	Disabled	IP	0	Unlimited
☐	19	GE19	Disabled	IP	0	Unlimited
☐	20	GE20	Disabled	IP	0	Unlimited
☐	21	GE21	Disabled	IP	0	Unlimited
☐	22	GE22	Disabled	IP	0	Unlimited
☐	23	GE23	Disabled	IP	0	Unlimited
☐	24	GE24	Disabled	IP	0	Unlimited
☐	25	GE25	Disabled	IP	0	Unlimited
☐	26	GE26	Disabled	IP	0	Unlimited
☐	27	GE27	Disabled	IP	0	Unlimited
☐	28	GE28	Disabled	IP	0	Unlimited
☐	29	LAG1	Disabled	IP	0	Unlimited
☐	30	LAG2	Disabled	IP	0	Unlimited
☐	31	LAG3	Disabled	IP	0	Unlimited

Figure - Security > IP Source Guard > Port Setting

Item	Description
Port	Display port ID.
State	Display IP Source Guard enable/disable status of interface.
Verify Source	Display mode of IP Source Guard verification
Current Binding Entry	Display current binding entries of a interface.
Max Binding Entry	Display the number of maximum binding entry of interface.

Click "**Edit**" button to view the Edit Port Setting menu.

Figure - Security > IP Source Guard > Port Setting > Edit Port Setting

Item	Description
Port	Display selected port to be edited.
Status	Set checkbox to enable or disable IP Source Guard function. Default is disabled.
Verify Source	Select the mode of IP Source Guard verification ● IP: Only verify source IP address of packet. ● IP-MAC: Verify source IP and source MAC address of packet.
Max Entry	Input the maximum number of entries that a port can be bounded. Default is un-limited on all ports. No entry will be bound if limitation reached.

IV-8-9-2 IMPV Binding

This page allow user to add static IP source guard entry and browse all IP source guard entries that learned by DHCP snooping or statically create by user.

To display IPMV Binding page, click **Security > IP Source Guard > IMPV Binding**.

IP-MAC-Port-VLAN Binding Table

Showing All entries Showing 0 to 0 of 0 entries

Port	VLAN	MAC Address	IP Address	Binding	Type	Lease Time
0 results found.						

Add Edit Delete

First Previous 1 Next Last

Figure - Security > IP Source Guard > IMPV Binding

Item	Description
Port	Display port ID of entry.
VLAN	Display VLAN ID of entry.
MAC Address	Display MAC address of entry. Only available of IP-MAC binding entry.
IP Address	Display IP address of entry. Mask always to be 255.255.255.255 for IP-MAC binding. IP binding entry display user input.
Binding	Display binding type of entry.
Type	Type of existing binding entry ● Static: Entry added by user. ● Dynamic: Entry learned by DHCP snooping.
Lease Time	Lease time of DHCP Snooping learned entry. After lease time entry will be deleted. Only available of dynamic entry.

Click "**Add**" or "**Edit**" button to view the Add/Edit IP-MAC-Port-VLAN Binding menu.

Add IP-MAC-Port-VLAN Binding

Port	GE1 ▾
VLAN	(1 - 4094)
Binding	☒ IP-MAC-Port-VLAN ☐ IP-Port-VLAN
MAC Address	
IP Address	/ 255.255.255.255

Edit IP-MAC-Port-VLAN Binding

Port	GE1 ▾
VLAN	20
Binding	IP-MAC-Port-VLAN
MAC Address	00:11:22:33:44:55
IP Address	192.168.2.33 / 255.255.255.255

Figure - Security > IP Source Guard > Add/Edit IP-MAC-Port-VLAN Binding

Item	Description
Port	Select port from list of a binding entry.
VLAN	Specify a VLAN ID of a binding entry.
Binding	Select matching mode of binding entry IP-MAC-Port-VLAN: packet must match IP address 、 MAC address 、 Port and VLAN ID. IP-Port-VLAN: packet must match IP address or subnet 、 Port and VLAN ID.
MAC Address	Input MAC address. Only available on IP-MAC-Port-VLAN mode.
IP Address	Input IP address and mask. Mask only available on IP-MAC-Port mode.

IV-8-9-3 Save Database

This page allow user to configure DHCP snooping database which can backup and restore dynamic DHCP snooping entries.

To display Save Database page, click **Security > DHCP Snooping > Save Database**.

The screenshot shows the 'Save Database' configuration page. It features a yellow background and a blue border. The configuration fields are as follows:

- Type:** Radio buttons for 'None' (selected), 'Flash', and 'TFTP'.
- Filename:** A text input field.
- Address Type:** Radio buttons for 'Hostname' (selected) and 'IPv4'.
- Server Address:** A text input field.
- Write Delay:** A text input field containing '300', with a range 'Sec (15 - 86400, default 300)'.
- Timeout:** A text input field containing '300', with a range 'Sec (0 - 86400, default 300)'.

An 'Apply' button is located at the bottom left of the form.

Figure- Security > IP Source Guard > Save Database

Item	Description
Type	Select the type of database agent. ● None: Disable database agent service. ● Flash: Save DHCP dynamic binding entries to flash. ● TFTP: Save DHCP dynamic binding entries to remote TFTP server.
Filename	Input filename for backup file. Only available when selecting type "flash" and "TFTP".
Address Type	Select the type of TFTP server. ● Hostname: TFTP server address is hostname. ● IPv4: TFTP server address is IPv4 address
Server Address	Input remote TFTP server hostname or IP address. Only available when selecting type "TFTP"
Write Delay	Input delay timer for doing backup after change happened. Default is 300 seconds.
Timeout	Input aborts timeout for doing backup failure. Default is 300 seconds.

IV-9 ACL

Use the ACL pages to configure settings for the switch ACL features..

IV-9-1 MAC ACL

This page allow user to add or delete ACL rule. A rule cannot be deleted if under binding.

To display MAC ACL page, click **ACL > MAC ACL**.

ACL Name

Apply

ACL Table

Showing All ▾ entries Showing 0 to 0 of 0 entries

☐	ACL Name	Rule	Port
0 results found.			

Delete

First Previous 1 Next Last

Figure- ACL > MAC ACL

Item	Description
ACL Name	Input MAC ACL name.
ACL Name	Display MAC ACL name.
Rule	Display the number ACE rule of ACL.
Port	Display the port list that bind this ACL.

IV-9-2 MAC ACE

This page allow user to add, edit or delete ACE rule. An ACE rule cannot be edited or deleted if ACL under binding. New ACE cannot be added if ACL under binding.

To display MAC ACE page, click **ACL > MAC ACE**.

ACE Table

ACL Name None ▾

Showing All ▾ entries Showing 0 to 0 of 0 entries

	Sequence	Action	Source MAC		Destination MAC		Ethertype	VLAN	802.1p	
			Address	Mask	Address	Mask			Value	Mask
0 results found.										

First Previous 1 Next Last

Figure - ACL > MAC ACE

Item	Description
ACL Name	Select the ACL name to which an ACE is being added.
Sequence	Display the sequence of ACE.
Action	Display the action of ACE.
Source MAC	Display the source MAC address and mask of ACE.
Destination MAC	Display the destination MAC address and mask of ACE.
Ethertype	Display the Ethernet frame type of ACE.
VLAN ID	Display the VLAN ID of ACE.
802.1p Value	Display the 802.1p value of ACE.
802.1p Mask	Display the 802.1p mask of ACE.

Click **“Edit”** button to view the Edit ACE menu.

Edit ACE

ACL Name	666
Sequence	555
Action	☒ Permit ☐ Deny ☐ Shutdown
Source MAC	☒ Any / (Address / Mask)
Destination MAC	☒ Any / (Address / Mask)
Ethertype	☒ Any 0x (0x600 ~ 0xFFFF)
VLAN	☒ Any (1 - 4094)
802.1p	☒ Any / (Value / Mask) (0 - 7)

Apply
Close

Figure - ACL > Edit ACE

Item	Description
ACL Name	Display the ACL name to which an ACE is being added..
Sequence	Specify the sequence of the ACE. ACEs with higher sequence are processed first (1 is the highest priority). Only available on Add Dialog.
Action	Select the action after ACE match packet. ● Permit: Forward packets that meet the ACE criteria. ● Deny: Drop packets that meet the ACE criteria. ● Shutdown: Drop packets that meet the ACE criteria, and disable the port from where the packets were received. Such ports can be reactivated from the Port Settings page.
Source MAC	Select the type for source MAC address. ● Any: All source addresses are acceptable. ● User Defined: Only a source address or a range of source addresses which users define are acceptable. Enter the source MAC address and mask to which will be matched.
Destination MAC	Select the type for Destination MAC address.

	- Any: All destination addresses are acceptable. - User Defined: Only a destination address or a range of destination addresses which users define are acceptable. Enter the destination MAC address and mask to which will be matched.
Ethertype	Select the type for Ethernet frame type. - Any: All Ethernet frame type is acceptable. - User Defined: Only an Ethernet frame type which users define is acceptable. Enter the Ethernet frame type value to which will be matched.
VLAN	Select the type for VLAN ID. - Any: All VLAN ID is acceptable. - User Defined: Only a VLAN ID which users define is acceptable. Enter the VLAN ID to which will be matched.
802.1p	Select the type for 802.1p value. - Any: All 802.1p value is acceptable. - User Defined: Only an 802.1p value or a range of 802.1p value which users define is acceptable. Enter the 802.1p value and mask to which will be matched.

IV-9-3 IPv4 ACL

This page allow user to add or delete IPv4 ACL rule. A rule cannot be deleted if under binding.

To display IPv4 ACL page, click **ACL > IPv4 ACL**.

ACL Name

Apply

ACL Table

Showing All ▼ entries Showing 0 to 0 of 0 entries

	ACL Name	Rule	Port
0 results found.			

Delete

First Previous 1 Next Last

Figure - ACL > IPv4 ACL

Item	Description
ACL Name	Input IPv4 ACL name.
ACL Name	Display IPv4 ACL name.
Rule	Display the number ACE rule of ACL.
Port	Display the port list that bind this ACL.

IV-9-4 IPv4 ACE

This page allow user to add, edit or delete ACE rule. An ACE rule cannot be edited or deleted if ACL under binding. New ACE cannot be added if ACL under binding.

To display IPv4 ACE page, click **ACL > IPv4 ACE**.

Figure - ACL > IPv4 ACE

Item	Description
ACL Name	Select the ACL name to which an ACE is being added.
Sequence	Display the sequence of ACE.
Action	Display the action of ACE.
Protocol	Display the protocol value of ACE.
Source IP	Display the source IP address and mask of ACE.
Destination IP	Display the destination IP address and mask of ACE.
Source Port	Display single source port or a range of source ports of ACE. Only available when protocol is TCP or UDP.
Destination Port	Display single destination port or a range of destination ports of ACE. Only available when protocol is TCP or UDP.
TCP Flags	Display the TCP flag value if ACE. Only available when protocol is TCP.
Type of Service	Display the ToS value of ACE which could be DSCP or IP Precedence.
ICMP	Display the ICMP type and code of ACE. Only available when protocol is ICMP.

Click "Add" or "Edit" button to view the Add/Edit ACE menu.

Edit ACE

ACL Name	777
Sequence	888
Action	☒ Permit ☐ Deny ☐ Shutdown
Protocol	☒ Any ☐ Select ICMP ☐ Define (0 - 255)
Source IP	☒ Any / (Address / Mask)
Destination IP	☒ Any / (Address / Mask)
Type of Service	☒ Any ☐ DSCP (0 - 63) ☐ IP Precedence (0 - 7)
Source Port	☒ Any ☐ Single (0 - 65535) ☐ Range - (0 - 65535)
Destination Port	☒ Any ☐ Single (0 - 65535) ☐ Range - (0 - 65535)
TCP Flags	Urg: ☐ Set ☐ Unset ☒ Don't care Ack: ☐ Set ☐ Unset ☒ Don't care Psh: ☐ Set ☐ Unset ☒ Don't care Rst: ☐ Set ☐ Unset ☒ Don't care Syn: ☐ Set ☐ Unset ☒ Don't care Fin: ☐ Set ☐ Unset ☒ Don't care
ICMP Type	☒ Any ☐ Select Echo Reply ☐ Define (0 - 255)
ICMP Code	☒ Any ☐ Define (0 - 255)

Apply
Close

Figure - ACL > Add/Edit ACE

Item	Description
ACL Name	Display the ACL name to which an ACE is being added.
Sequence	Specify the sequence of the ACE. ACEs with higher sequence are processed first (1 is the highest sequence). Only available on Add dialog.
Action	Select the action for a match. ● Permit: Forward packets that meet the ACE criteria. ● Deny: Drop packets that meet the ACE criteria. ● Shutdown: Drop packets that meet the ACE criteria, and disable the port from where the packets were received. Such ports can be reactivated from the Port Settings page.
Protocol	Select the type of protocol for a match. ● Any (IP): All IP protocols are acceptable. ● Select from list: Select one of the following protocols from the drop-down list. ICMP/IPinIP/TCP/EGP/IGP/UDP/HMP/RDP/IPV6/IPV6:ROUT/IPV6:F RAG/ RSVP/IPV6:ICMP/OSPF/PIM/L2TP ● Protocol ID to match: Enter the protocol ID.
Source IP	Select the type for source IP address. ● Any: All source addresses are acceptable. ● User Defined: Only a source address or a range of source addresses which users define are acceptable. Enter the source IP address value and mask to which will be matched.
Destination IP	Select the type for destination IP address. ● Any: All destination addresses are acceptable. ● User Defined: Only a destination address or a range of destination addresses which users define are acceptable. Enter the destination IP address value and mask to which will be matched.
Source Port	Select the type of protocol for a match. Only available when protocol is TCP or UDP. ● Any: All source ports are acceptable. ● Single: Enter a single TCP/UDP source port to which packets are matched. ● Range: Select a range of TCP/UDP source ports to which the packet is matched. There are eight different port ranges that can be configured (shared between source and destination ports). TCP and UDP protocols each have eight port ranges.
Destination Port	Select the type of protocol for a match. Only available when protocol is TCP or UDP. ● Any: All source ports are acceptable. ● Single: Enter a single TCP/UDP source port to which packets are matched. ● Range: Select a range of TCP/UDP source ports to which the packet is matched. There are eight different port ranges that can be

	configured (shared between source and destination ports). TCP and UDP protocols each have eight port ranges.
TCP Flags	Select one or more TCP flags with which to filter packets. Filtered packets are either forwarded or dropped. Filtering packets by TCP flags increases packet control, which increases network security. Only available when protocol is TCP.
Type of Service	Select the type of service for a match. ● Any: All types of service are acceptable. ● DSCP to match: Enter a Differentiated Services Code Point (DSCP) to match. ● IP Precedence to match: Enter a IP Precedence to match.
ICMP Type	Either select the message type by name or enter the message type number. Only available when protocol is ICMP. ● Any: All message types are acceptable. ● Select from list: Select message type by name. ● Protocol ID to match: Enter the number of message type.
ICMP Code	Select the type for ICMP code. Only available when protocol is ICMP. ● Any: All codes are acceptable. ● User Defined: Enter an ICMP code to match.

IV-9-5 ACL Binding

This page allow user to bind or unbind ACL rule to or from interface. IPv4 and Ipv6 ACL cannot be bound to the same port simultaneously.

To display ACL Binding page, click **ACL > ACL Binding**.

☐	Entry	Port	MAC ACL	IPv4 ACL	IPv6 ACL
☐	1	GE1			
☐	2	GE2			
☐	3	GE3			
☐	4	GE4			
☐	5	GE5			
☐	6	GE6			
☐	7	GE7			
☐	8	GE8			
☐	9	GE9			
☐	10	GE10			
☐	11	GE11			
☐	12	GE12			
☐	13	GE13			
☐	14	GE14			
☐	15	GE15			
☐	16	GE16			
☐	17	GE17			
☐	18	GE18			
☐	19	GE19			
☐	20	GE20			
☐	21	GE21			
☐	22	GE22			
☐	23	GE23			
☐	24	GE24			
☐	25	GE25			
☐	26	GE26			
☐	27	GE27			
☐	28	GE28			
☐	29	LAG1			
☐	30	LAG2			
☐	31	LAG3			
☐	32	LAG4			
☐	33	LAG5			
☐	34	LAG6			
☐	35	LAG7			
☐	36	LAG8			

Figure - ACL > ACL Binding

Item	Description
Port	Display port entry ID.
MAC ACL	Display mac ACL name that bound of interface. Empty means no rule bound.
IPv4 ACL	Display ipv4 ACL name that bound of interface. Empty means no rule bound.
IPv6 ACL	Display ipv6 ACL name that bound of interface. Empty means no rule bound.

Click “**Edit**” button to view the Edit ACL Binding menu.

Add ACL Binding

Port	GE1
Note: ACL without any rules cannot be bound	
MAC ACL	None ▼
IPv4 ACL	None ▼
IPv6 ACL	None ▼

Apply Close

Figure 131 - ACL > Edit ACL Binding

Item	Description
Port	Display port entry ID.
MAC ACL	Select mac ACL name from list to bind.
IPv4 ACL	Select IPv4 ACL name from list to bind.
IPv6 ACL	Select IPv6 ACL name from list to bind.

IV-10 QoS

Use the QoS pages to configure settings for the switch QoS interface.

IV-10-1 General

Use the QoS general pages to configure settings for general purpose.

IV-10-1-1 Property

To display Property web page, click **QoS > General > Property**.

State

☐ Enable

Trust Mode

☒ CoS
☐ DSCP
☐ CoS-DSCP
☐ IP Precedence

Port Setting Table

	Entry	Port	CoS	Trust	Remarking		
					CoS	DSCP	IP Precedence
☐	1	GE1	0	Enabled	Disabled	Disabled	Disabled
☐	2	GE2	0	Enabled	Disabled	Disabled	Disabled
☐	3	GE3	0	Enabled	Disabled	Disabled	Disabled
☐	4	GE4	0	Enabled	Disabled	Disabled	Disabled
☐	5	GE5	0	Enabled	Disabled	Disabled	Disabled
☐	6	GE6	0	Enabled	Disabled	Disabled	Disabled
☐	7	GE7	0	Enabled	Disabled	Disabled	Disabled
☐	8	GE8	0	Enabled	Disabled	Disabled	Disabled
☐	9	GE9	0	Enabled	Disabled	Disabled	Disabled
☐	10	GE10	0	Enabled	Disabled	Disabled	Disabled
☐	11	GE11	0	Enabled	Disabled	Disabled	Disabled
☐	12	GE12	0	Enabled	Disabled	Disabled	Disabled
☐	13	GE13	0	Enabled	Disabled	Disabled	Disabled
☐	14	GE14	0	Enabled	Disabled	Disabled	Disabled
☐	15	GE15	0	Enabled	Disabled	Disabled	Disabled
☐	16	GE16	0	Enabled	Disabled	Disabled	Disabled
☐	17	GE17	0	Enabled	Disabled	Disabled	Disabled
☐	18	GE18	0	Enabled	Disabled	Disabled	Disabled
☐	19	GE19	0	Enabled	Disabled	Disabled	Disabled
☐	20	GE20	0	Enabled	Disabled	Disabled	Disabled
☐	21	GE21	0	Enabled	Disabled	Disabled	Disabled
☐	22	GE22	0	Enabled	Disabled	Disabled	Disabled
☐	23	GE23	0	Enabled	Disabled	Disabled	Disabled
☐	24	GE24	0	Enabled	Disabled	Disabled	Disabled
☐	25	GE25	0	Enabled	Disabled	Disabled	Disabled
☐	26	GE26	0	Enabled	Disabled	Disabled	Disabled
☐	27	GE27	0	Enabled	Disabled	Disabled	Disabled
☐	28	GE28	0	Enabled	Disabled	Disabled	Disabled

Figure - QoS > General > Property

Item	Description
State	Set checkbox to enable/disable QoS.
Trust	Select QoS trust mode ● CoS: Traffic is mapped to queues based on the CoS field in the VLAN tag, or based on the per-port default CoS value (if there is no VLAN tag on the incoming packet), the actual mapping of the CoS to queue can be configured on port setting dialog. ● CoS-DSCP: Uses the trust CoS mode for non-IP traffic and trust DSCP mode for IP traffic. ● IP Precedence: Traffic is mapped to queues based on the IP precedence. The actual mapping of the IP precedence to queue can be configured on the IP Precedence mapping page.
Port Setting Table	
Port	Port name
CoS	Port default CoS priority value for the selected ports.
Trust	Port trust state ● Enabled: Traffic will follow trust mode in global setting ● Disabled: Traffic will always use best efforts
Remarking (CoS)	Set checkbox to enable/disable port CoS remarking. ● Enabled: CoS remarking is enabled ● Disabled: CoS remarking is disabled
Remarking (IP Precedence)	Set checkbox to enable/disable port IP Precedence remarking. ● Enabled: DSCP remarking is enabled ● Disabled: DSCP remarking is disabled

Click "**Edit**" button to view the Edit Port Setting menu.

Edit Port Setting

Port

GE1

CoS

0 (0 - 7)

Trust

☒ Enable

Remarking

CoS

☐ Enable

DSCP

☐ Enable

IP Precedence

☐ Enable

Apply

Close

Figure - Qos > General > Property

Item	Description
Port	Selected port list.
CoS	Set default CoS/802.1p priority value for the selected ports.
Trust	Set checkbox to enable/disable port trust state.
Remarking (CoS)	Set checkbox to enable/disable port CoS remarking.
Remarking (IP Precedence)	Set checkbox to enable/disable port IP Precedence remarking.

IV-10-1-2 Queue Scheduling

The switch supports eight queues for each interface. Queue number 8 is the highest priority queue.

Queue number 1 is the lowest priority queue. There are two ways of determining how traffic in queues is handled, Strict Priority (SP) and Weighted Round Robin (WRR).

- **Strict Priority (SP)**—Egress traffic from the highest priority queue is transmitted first. Traffic from the lower queues is processed only after the highest queue has been transmitted, which provide the highest level of priority of traffic to the highest numbered queue.
- **Weighted Round Robin (WRR)**—In WRR mode the number of packets sent from the queue is proportional to the weight of the queue (the higher the weight, the more frames are sent).

The queuing modes can be selected on the Queue page. When the queuing mode is by Strict Priority, the priority sets the order in which queues are serviced, starting with queue_8 (the highest priority queue) and going to the next lower queue when each queue is completed.

When the queuing mode is Weighted Round Robin, queues are serviced until their quota has been used up and then another queue is serviced. It is also possible to assign some of the lower queues to WRR, while keeping some of the higher queues in Strict Priority. In this case traffic for the SP queues is always sent before traffic from the WRR queues. After the SP queues have been emptied, traffic from the WRR queues is forwarded. (The relative portion from each WRR queue depends on its weight).

To display Queue Scheduling web page, click **QoS > General > Queue Scheduling**

Queue Scheduling Table

Queue	Method			
	Strict Priority	WRR	Weight	WRR Bandwidth (%)
1	☒	☐	1	
2	☒	☐	2	
3	☒	☐	3	
4	☒	☐	4	
5	☒	☐	5	
6	☒	☐	9	
7	☒	☐	13	
8	☒	☐	15	

Figure 134 - QoS > General > Queue Scheduling

Item	Description
Queue	Queue ID to configure.
Strict Priority	Set queue to strict priority type.
WRR	Set queue to Weight round robin type.
Weight	If the queue type is WRR, set the queue weight for the queue.
WRR Bandwidth	Percentage of WRR queue bandwidth.

IV-10-1-3 CoS Mapping

The CoS to Queue table determines the egress queues of the incoming packets based on the 802.1p priority in their VLAN tags. For incoming untagged packets, the 802.1p priority will be the default CoS/802.1p priority assigned to the ingress ports. Use the Queues to CoS table to remark the CoS/802.1p priority for egress traffic from each queue.

To display CoS Mapping web page, click **QoS > General > CoS Mapping**.

CoS to Queue Mapping

CoS	Queue
0	2 ▼
1	1 ▼
2	3 ▼
3	4 ▼
4	5 ▼
5	6 ▼
6	7 ▼
7	8 ▼

Apply

Queue to CoS Mapping

Queue	CoS
1	1 ▼
2	0 ▼
3	2 ▼
4	3 ▼
5	4 ▼
6	5 ▼
7	6 ▼
8	7 ▼

Apply

Figure - QoS > General > Cos Mapping

Item	Description
CoS to Queue Mapping	
CoS	CoS value.
Queue	Select queue id for the CoS value.
Queue to CoS Mapping	
Queue	Queue ID
CoS	Select CoS value for the queue id.

IV-10-1-4 IP Precedence Mapping

This page allow user to configure IP Precedence to Queue mapping and Queue to IP Precedence mapping.

To display IP Precedence Mapping web page, click **QoS > General > IP Precedence Mapping**.

IP Precedence to Queue Mapping

IP Precedence	Queue
0	1 ▼
1	2 ▼
2	3 ▼
3	4 ▼
4	5 ▼
5	6 ▼
6	7 ▼
7	8 ▼

Apply

Queue to IP Precedence Mapping

Queue	IP Precedence
1	0 ▼
2	1 ▼
3	2 ▼
4	3 ▼
5	4 ▼
6	5 ▼
7	6 ▼
8	7 ▼

Apply

Figure - QoS > General > IP Precedence Mapping

Item	Description
IP Precedence to Queue Mapping	
IP Precedence	IP Precedence value.
Queue	Queue value which IP Precedence is mapped.
Queue to IP Precedence Mapping	
Queue	Queue ID.
IP Precedence	IP Precedence value which queue is mapped.

IV-10-2 Rate Limit

Use the Rate Limit pages to define values that determine how much traffic the switch can receive and send on specific port or queue.

IV-10-2-1 Ingress/Egress Port

This page allow user to configure ingress port rate limit and egress port rate limit. The ingress rate limit is the number of bits per second that can be received from the ingress interface. Excess bandwidth above this limit is discarded.

To display Ingress / Egress Port web page, click **QoS > Rate Limit > Ingress / Egress Port**.

Ingress / Egress Port Table

	Entry	Port	Ingress		Egress	
			State	Rate (Kbps)	State	Rate (Kbps)
☐	1	GE1	Disabled		Disabled	
☐	2	GE2	Disabled		Disabled	
☐	3	GE3	Disabled		Disabled	
☐	4	GE4	Disabled		Disabled	
☐	5	GE5	Disabled		Disabled	
☐	6	GE6	Disabled		Disabled	
☐	7	GE7	Disabled		Disabled	
☐	8	GE8	Disabled		Disabled	
☐	9	GE9	Disabled		Disabled	
☐	10	GE10	Disabled		Disabled	
☐	11	GE11	Disabled		Disabled	
☐	12	GE12	Disabled		Disabled	
☐	13	GE13	Disabled		Disabled	
☐	14	GE14	Disabled		Disabled	
☐	15	GE15	Disabled		Disabled	
☐	16	GE16	Disabled		Disabled	
☐	17	GE17	Disabled		Disabled	
☐	18	GE18	Disabled		Disabled	
☐	19	GE19	Disabled		Disabled	
☐	20	GE20	Disabled		Disabled	
☐	21	GE21	Disabled		Disabled	
☐	22	GE22	Disabled		Disabled	
☐	23	GE23	Disabled		Disabled	
☐	24	GE24	Disabled		Disabled	
☐	25	GE25	Disabled		Disabled	
☐	26	GE26	Disabled		Disabled	
☐	27	GE27	Disabled		Disabled	
☐	28	GE28	Disabled		Disabled	

Edit

Figure - QoS > Rate Limit > Ingress / Egress Port

Item	Description
Port	Port name.
Ingress (State)	Port ingress rate limit state ● Enabled: Ingress rate limit is enabled ● Disabled: Ingress rate limit is disabled
Ingress (Rate)	Port ingress rate limit value if ingress rate state is enabled.
IP Precedence	IP Precedence value which queue is mapped.
Egress (State)	Port egress rate limit state

	● Enabled: Egress rate limit is enabled ● Disabled: Egress rate limit is disabled
Egress (Rate)	Port egress rate limit value if egress rate state is enabled.

Click "**Edit**" button to view the Ingress / Egress Port menu.

Edit Ingress / Egress Port

Port	GE1	
Ingress	☐ Enable	1000000 Kbps (16 - 1000000)
Egress	☐ Enable	1000000 Kbps (16 - 1000000)

Figure - QoS > Rate Limit > Ingress / Egress Port

Item	Description
Port	Select port list.
Ingress	Set checkbox to enable/disable ingress rate limit. If ingress rate limit is enabled, rate limit value need to be assigned.
Egress	Set checkbox to enable/disable egress rate limit. If egress rate limit is enabled, rate limit value need to be assigned.

IV-11 Diagnostics

Use the Diagnostics pages to configure settings for the switch diagnostics feature or operating diagnostic utilities.

IV-11-1 Logging

IV-11-1-1 Property

To enable/disable the logging service, click **Diagnostic > Logging > Property**.

The screenshot displays the 'Diagnostics > Logging > Property' configuration interface. It features four main sections: Global, Console Logging, RAM Logging, and Flash Logging. Each section contains a 'State' checkbox and a 'Minimum Severity' dropdown menu. The 'State' for Global, Console, and RAM is checked (Enabled), while for Flash it is unchecked (Disabled). All 'Minimum Severity' dropdowns are set to 'Notice'. A note below each dropdown lists the severity levels: Emergency, Alert, Critical, Error, Warning, Notice. An 'Apply' button is located at the bottom of the page.

Section	State	Minimum Severity	Note
Global	☒ Enable	Notice	Note: Emergency, Alert, Critical, Error, Warning, Notice
Console Logging	☒ Enable	Notice	Note: Emergency, Alert, Critical, Error, Warning, Notice
RAM Logging	☒ Enable	Notice	Note: Emergency, Alert, Critical, Error, Warning, Notice
Flash Logging	☐ Enable	Notice	Note: Emergency, Alert, Critical, Error, Warning, Notice

Figure - Diagnostics > Logging > Property

Item	Description
State	Enable/Disable the global logging services. When the logging service is enabled, logging configuration of each destination rule can be individually configured. If the logging service is disabled, no messages will be sent to these destinations.
Console Logging	
State	Enable/Disable the console logging service
Minimum Severity	The minimum severity for the console logging.
RAM Logging	
State	Enable/Disable the RAM logging service.
Minimum Severity	The minimum severity for the RAM logging.
Flash Logging	

State	Enable/Disable the flash logging service.
Minimum Severity	The minimum severity for the flash login.

IV-11-1-2 Remote Server

To configure the remote logging server, click **Diagnostic > Logging > Remote Server**.

Remote Server Table

Search:

Entry	Server Address	Server Port	Facility	Minimum Severity
0 results found.				

Figure - Diagnostics > Logging > Remote Server

Item	Description
Server Address	The IP address of the remote logging server.
Server Ports	The port number of the remote logging server.
Facility	The facility of the logging messages. It can be one of the following values: local0, local1, local2, local3, local4, local5, local6, and local7.
Minimum Severity	● Emergence: System is not usable. ● Alert: Immediate action is needed. ● Critical: System is in the critical condition. ● Error: System is in error condition ● Warning: System warning has occurred ● Notice: System is functioning properly, but a system notice has occurred. ● Informational: Device information. ● Debug: Provides detailed information about an event.

IV-11-2 Mirroring

To display Port Mirroring web page, click **Diagnostics > Mirroring**.

Mirroring Table

Q

	Session ID	State	Monitor Port	Ingress Port	Egress Port
☐	1	Disabled	---	---	---
☐	2	Disabled	---	---	---
☐	3	Disabled	---	---	---
☐	4	Disabled	---	---	---

*** Allow the monitor port to send or receive normal packets

Figure - Diagnostics > Mirroring

Item	Description
Session ID	Select mirror session ID.
State	Select mirror session state : port-base mirror or disable ● Enabled: Enable port based mirror ● Disabled: Disable mirror.
Monitor Port	Select mirror session monitor port, and select whether normal packet could be sent or received by monitor port.
Ingress port	Select mirror session source rx ports.
Egress port	Select mirror session source tx ports.

Click "**Edit**" button to view the Edit Mirroring menu.

Edit Mirroring

Session ID: 1

State: ☐ Enable

Monitor Port: GE1 ▼

☐ Send or Receive Normal Packet

Ingress Port

Available Port: GE1, GE2, GE3, GE4, GE5, GE6, GE7, GE8

Selected Port:

Egress Port

Available Port: GE1, GE2, GE3, GE4, GE5, GE6, GE7, GE8

Selected Port:

Apply Close

Figure 142 - Diagnostics > Mirroring > Edit Mirroring

Item	Description
Session ID	Selected mirror session ID.
State	Select mirror session state : port-base mirror or disable ● Enabled: Enable port based mirror ● Disabled: Disable mirror.
Monitor Port	Select mirror session monitor port, and select whether normal packet could be sent or received by monitor port.
Ingress port	Select mirror session source rx ports.
Egress port	Select mirror session source tx ports.

IV-11-3 Ping

For the ping functionality, click **Diagnostic > Ping**.

Address Type

☒ Hostname
☐ IPv4
☐ IPv6

Server Address

Count

☐ User Defined

4 Sec (1 - 65535)

Ping **Stop**

Ping Result

Packet Status	
Status	N/A
Transmit Packet	0
Receive Packet	0
Packet Lost	0%

Round Trip Time	
Min	0.0 ms
Max	0.0 ms
Average	0.0 ms

Figure - Diagnostics > Ping

Item	Description
Address Type	Specify the address type to “Hostname” or “IPv4”.
Server Address	Specify the Hostname/IPv4 address for the remote logging server.
Count	Specify the numbers of each ICMP ping request.

IV-11-4 Traceroute

For trace route functionality, click **Diagnostic > Traceroute**.

Address Type ☒ Hostname ☐ IPv4

Server Address

Time to Live ☐ User Defined (2 - 255, default 30)

Apply **Stop**

Traceroute Result

Figure- Diagnostics > Traceroute

Item	Description
Address Type	Specify the address type to “Hostname” or “IPv4”.
Server Address	Specify the Hostname/IPv4 address for the remote logging server.
Time to Live	Specify the max hops of hosts for traceroute.

IV-11-5 Copper Test

For copper length diagnostic, click **Diagnostic > Copper Test**.

Port GE1 ▼

Copper Test

Copper Test Result

Cable Status	
Port	N/A
Result	N/A
Length	N/A

Figure - Diagnostics > Logging>Copper Test

Item	Description
Port	Specify the interface for the copper test.
Copper Test Result	
Port	The interface for the copper test.
Result	The status of copper test. It include: ● OK: Correctly terminated pair. ● Short Cable: Shorted pair. ● Open Cable: Open pair, no link partner. ● Impedance Mismatch: Terminating impedance is not in the reference range.
Length	Distance in meter from the port to the location on the cable where the fault was discovered.

IV-11-6 Fiber Module

The Optical Module Status page displays the operational information reported by the Small Form-factor Pluggable (SFP) transceiver. Some information may not be available for SFPs without the supports of digital diagnostic monitoring standard SFF-8472.

To display the Optical Module Diagnostic page, click **Diagnostic > Fiber Module**.

Fiber Module Table								
								
	Port	Temperature (C)	Voltage (V)	Current (mA)	Output Power (mW)	Input Power (mW)	OE Present	Loss of Signal
☐	GE25	N/A	N/A	N/A	N/A	N/A	Remove	Loss
☐	GE26	N/A	N/A	N/A	N/A	N/A	Remove	Loss
☐	GE27	N/A	N/A	N/A	N/A	N/A	Remove	Loss
☐	GE28	N/A	N/A	N/A	N/A	N/A	Remove	Loss
Refresh Detail								

Figure - Diagnostics > Logging>Fiber Module

Item	Description
Port	Interface or port number.
Temperature	Internally measured transceiver temperature.
Voltage	Internally measured supply voltage.
Current	Measured TX bias current.
Output Power	Measured TX output power in milliwatts.
Input Power	Measured RX received power in milliwatts.
Transmitter Fault	State of TX fault.
OE Present	Indicate transceiver has achieved power up and data is ready.
Loss of Signal	Loss of signal.
Refresh	Refresh the page.
Detail	The detail information on the specified port.

Click "**Detail**" button to view the Fiber Module Status menu

Fiber Module Status	
Port	GE25
OE Present	N/A
Loss of Signal	N/A
Transceiver Type	N/A
Connector Type	N/A
Ethernet Compliance Code	N/A
Transmission Media	N/A
Wavelength	N/A
Bitrate	N/A
Vendor OUI	N/A
Vendor Name	N/A
Vendor PN	N/A
Vendor Revision	N/A
Vendor SN	N/A
Date Code	N/A
Temperature (C)	N/A
Voltage (V)	N/A
Current (mA)	N/A
Output Power (mW)	N/A
Input Power (mW)	N/A

Refresh

Close

Figure - Diagnostics > Logging>Fiber Module>Fiber Module Status

IV-11-7 UDLD

Use the UDLD pages to configure settings of UDLD function.

IV-11-7-1 Property

This page allow user to configure global and per interface settings of UDLD.

To display Property page, click **Diagnostics > UDLD > Property**.

Message Time

Sec (1 - 90, default 15)

Port Setting Table

Q

☐	Entry	Port	Mode	Bidirectional State	Operational Status	Neighbor
☐	1	GE1	Disabled	Unknown		0
☐	2	GE2	Disabled	Unknown		0
☐	3	GE3	Disabled	Unknown		0
☐	4	GE4	Disabled	Unknown		0
☐	5	GE5	Disabled	Unknown		0
☐	6	GE6	Disabled	Unknown		0
☐	7	GE7	Disabled	Unknown		0
☐	8	GE8	Disabled	Unknown		0
☐	9	GE9	Disabled	Unknown		0
☐	10	GE10	Disabled	Unknown		0
☐	11	GE11	Disabled	Unknown		0
☐	12	GE12	Disabled	Unknown		0
☐	13	GE13	Disabled	Unknown		0
☐	14	GE14	Disabled	Unknown		0
☐	15	GE15	Disabled	Unknown		0
☐	16	GE16	Disabled	Unknown		0
☐	17	GE17	Disabled	Unknown		0
☐	18	GE18	Disabled	Unknown		0
☐	19	GE19	Disabled	Unknown		0
☐	20	GE20	Disabled	Unknown		0
☐	21	GE21	Disabled	Unknown		0
☐	22	GE22	Disabled	Unknown		0
☐	23	GE23	Disabled	Unknown		0
☐	24	GE24	Disabled	Unknown		0
☐	25	GE25	Disabled	Unknown		0
☐	26	GE26	Disabled	Unknown		0
☐	27	GE27	Disabled	Unknown		0
☐	28	GE28	Disabled	Unknown		0

Figure - Diagnostics > UDLD>Property

Item	Description
Message Time	Input the interval for sending message. Range is 1 -90 seconds.
Port	Display port ID of entry.
Mode	Display UDLD running mode of interface.
Bidirectional State	Display bidirectional state of interface.
Operational Status	Display operational status of interface.
Neighbor	Display the number of neighbor of interface.

Click "**Edit**" button to view the Fiber Module Status menu

Figure - Diagnostics > UDLD>Property>Edit

Item	Description
Port	Display selected port to be edited.
Mode	Select UDLD running mode of interface. ● Disabled: Disable UDLD function. ● Normal: Running on normal mode that port goes to Link Up One phase after last neighbor ages out. ● Aggressive: Running on aggressive mode that port goes to Re-Establish phase after last neighbor ages out.

IV-11-7-2 Neighbor

To display Neighbor page, click **Diagnostics > UDLD > Neighbor**

Figure - Diagnostics > UDLD> Neighbor

Item	Description
Entry	Display entry index.
Expiration Time	Display expiration time before age out.
Current Neighbor State	Display neighbor current state.
Device ID	Display neighbor device ID.
Device Name	Display neighbor device name.
Port ID	Display neighbor port ID that connected.
Message Interval	Display neighbor message interval.
Timeout Interval	Display neighbor timeout interval.

IV-12 Management

Use the Management pages to configure settings for the switch management features.

IV-12-1 User Account

The default username/password is admin/admin. And default account is not able to be deleted.

Use this page to add additional users that are permitted to manage the switch or to change the passwords of existing users.

To display User Account web page, click **Management > User Account**.

The screenshot shows the 'User Account' management interface. At the top, it says 'Showing All entries' and 'Showing 1 to 1 of 1 entries'. Below this is a table with columns 'Username' and 'Privilege'. The table contains one row with 'admin' and 'Admin'. Below the table are buttons for 'Add', 'Edit', and 'Delete'. To the right of the table are navigation buttons: 'First', 'Previous', '1' (highlighted), 'Next', and 'Last'. A search bar is located at the top right.

Figure - Management > User Account

Item	Description
Username	User name of the account.
Privilege	Select privilege level for new account. ● Admin: Allow to change switch settings. Privilege value equals to 15. ● User: See switch settings only. Not allow to change it. Privilege level equals to 1.

Click "**Add**" or "**Edit**" button to view the Add/Edit User Account menu.

Add User Account

Username	
Password	
Confirm Password	
Privilege	☒ Admin ☐ User

Edit User Account

Username	admin
Password	
Confirm Password	
Privilege	☒ Admin ☐ User

Figure - Management > User Account > Add/Edit User Account

Item	Description
Username	User name of the account.
Password	Set password of the account.
Confirm Password	Set the same password of the account as in "Password" field.
Privilege	Select privilege level for new account. ● Admin: Allow to change switch settings. Privilege value equals to 15. ● User: See switch settings only. Not allow to change it. Privilege level equals to 1.

IV-12-2 Firmware

IV-12-2-1 Upgrade / Backup

This page allow user to upgrade or backup firmware image through HTTP or TFTP server.

To display firmware upgrade or backup web page, click **Management > Firmware > Upgrade/Backup**.

The screenshot shows a web interface for firmware management. It features a yellow background with a blue border. On the left, there are three dashed boxes labeled 'Action', 'Method', and 'Filename'. The 'Action' section has two radio buttons: 'Upgrade' (selected) and 'Backup'. The 'Method' section has two radio buttons: 'TFTP' and 'HTTP' (selected). The 'Filename' section has a 'Choose File' button and a text box displaying 'No file chosen'. Below these sections is an 'Apply' button.

Figure - Management > Firmware > Upgrade/Backup

Item	Description
Action	Firmware operations ● Upgrade: Upgrade firmware from remote host to DUT. ● Backup: Backup firmware image from DUT to remote host.
Method	Firmware upgrade / backup method. ● TFTP: Using TFTP to upgrade/backup firmware. ● HTTP: Using WEB browser to upgrade/backup firmware.
Filename	Use browser to upgrade firmware, you should select firmware image file on your host PC.

To display firmware upgrade or backup web page, click **Management > Firmware > Upgrade/Backup**.

Active Image

☐ Image0
☒ Image1

Note: the image was selected for the next boot

Active Image	
Firmware	Image1
Version	1.00.07
Name	Edimax_PG28CB_V1.00.07_r380_vmlinux_web.bix
Size	6417775 Bytes
Created	2017-11-21 14:54:59

Backup Image	
Firmware	Image0
Version	1.00.06
Name	Edimax_PG28CB_V1.00.06_r373_vmlinux_web.bix
Size	6413996 Bytes
Created	2017-11-08 20:00:06

Apply

Figure- Management > Firmware > Upgrade/Backup

Item	Description
Action	Firmware operations ● Upgrade: Upgrade firmware from remote host to DUT ● Backup: Backup firmware image from DUT to remote host
Method	Firmware upgrade / backup method ● TFTP: Using TFTP to upgrade/backup firmware. ● HTTP: Using WEB browser to upgrade/backup firmware.
Address Type	Specify TFTP server address type ● Hostname: Use domain name as server address ● IPv4: Use IPv4 as server address ● IPv6: Use IPv6 as server address
Server Address	Specify TFTP server address.
Filename	Firmware image file name on remote TFTP server

To display firmware upgrade or backup web page, click **Management > Firmware > Upgrade/Backup**.

The screenshot shows a web interface for configuring firmware operations. It features three sections: 'Action' with radio buttons for 'Upgrade' and 'Backup' (selected); 'Method' with radio buttons for 'TFTP' and 'HTTP' (selected); and 'Firmware' with radio buttons for 'Image0' and 'Image1' (selected). An 'Apply' button is located at the bottom left.

Figure - Management > Firmware > Upgrade/Backup

Item	Description
Action	Firmware operations ● Upgrade: Upgrade firmware from remote host to DUT ● Backup: Backup firmware image from DUT to remote host
Method	Firmware upgrade / backup method ● TFTP: Using TFTP to upgrade/backup firmware. ● HTTP: Using WEB browser to upgrade/backup firmware.
Firmware	Firmware partition need to backup ● Image0: Firmware image in flash partition 0 ● Image1: Firmware image in flash partition 1

To display the Firmware Upgrade/Backup web page, click **Management > Firmware > Upgrade/Backup**.

The screenshot shows a more detailed web interface for configuring firmware operations. It includes sections for 'Action' (Upgrade/Backup), 'Method' (TFTP/HTTP), 'Firmware' (Image0/Image1), 'Address Type' (Hostname/IPv4/IPv6), 'Server Address' (text input), and 'Filename' (text input). An 'Apply' button is at the bottom left.

Figure - Management > Firmware > Upgrade/Backup

Item	Description
Action	Firmware operations ● Upgrade: Upgrade firmware from remote host to DUT ● Backup: Backup firmware image from DUT to remote host
Method	Firmware upgrade / backup method ● TFTP: Using TFTP to upgrade/backup firmware. ● HTTP: Using WEB browser to upgrade/backup firmware.
Firmware	Firmware partition need to backup ● Image0: Firmware image in flash partition 0. ● Image1: Firmware image in flash partition 1.
Address Type	Specify TFTP server address type ● Hostname: Use domain name as server address. ● IPv4: Use IPv4 as server address. ● IPv6: Use IPv6 as server address.
Server Address	Specify TFTP server address address.
Filename	File name saved on remote TFTP server.

IV-12-2-2 Active Image

This page allow user to select firmware image on next booting and show firmware information on both flash partitions.

To display the Active Image web page, click **Management > Firmware > Active Image**.

Active Image

☐ Image0
☒ Image1

Note: the image was selected for the next boot

Active Image	
Firmware	Image1
Version	1.00.07
Name	Edimax_PG28CB_V1.00.07_r380_vmlinux_web.bix
Size	6417775 Bytes
Created	2017-11-21 14:54:59

Backup Image	
Firmware	Image0
Version	1.00.06
Name	Edimax_PG28CB_V1.00.06_r373_vmlinux_web.bix
Size	6413996 Bytes
Created	2017-11-08 20:00:06

Apply

Figure - Management > Firmware > Active Image

Item	Description
Active Image	Select firmware image to use on next booting
Firmware	Firmware flash partition name.
Version	Firmware version.
Name	Firmware name.
Size	Firmware image size.
Created	Firmware image created date.

IV-12-3 Configuration

IV-12-3-1 Upgrade / Backup

This page allow user to upgrade or backup configuration file through HTTP or TFTP server.

To display firmware upgrade or backup web page, click **Management > Configuration > Upgrade/Backup**.

The screenshot shows a web interface for configuration management. It features a yellow background with a blue border. The interface is divided into four main sections, each with a label on the left and a list of options on the right. The 'Action' section has 'Upgrade' selected. The 'Method' section has 'HTTP' selected. The 'Configuration' section has 'Running Configuration' selected. The 'Filename' section has a 'Choose File' button and a text box showing 'No file chosen'. An 'Apply' button is located at the bottom left of the form.

Figure - Management > Configuration > Upgrade/Backup

Item	Description
Action	Configuration operations ● Upgrade: Upgrade firmware from remote host to DUT ● Backup: Backup firmware image from DUT to remote host
Method	Configuration upgrade / backup method ● TFTP: Using TFTP to upgrade/backup firmware ● HTTP: Using WEB browser to upgrade/backup firmware
Configuration	Configuration types ● Running Configuration: Merge to current running configuration file ● Startup Configuration: Replace startup configuration file ● Backup Configuration: Replace backup configuration file
Filename	Use browser to upgrade configuration, you should select configuration file on your host PC.

To display firmware upgrade or backup web page, click **Management > Configuration > Upgrade/Backup**.

The screenshot shows a web interface for configuring firmware upgrade or backup. It features a sidebar with navigation links: Action, Method, Configuration, Address Type, Server Address, and Filename. The main content area contains radio button selections for each category. The 'Action' section has 'Upgrade' selected. The 'Method' section has 'TFTP' selected. The 'Configuration' section has 'Running Configuration' selected. The 'Address Type' section has 'Hostname' selected. Below these are two text input fields for 'Server Address' and 'Filename'. An 'Apply' button is at the bottom left.

Figure - Management > Configuration > Upgrade/Backup

Item	Description
Action	Configuration operations ● Upgrade: Upgrade firmware from remote host to DUT ● Backup: Backup firmware image from DUT to remote host
Method	Configuration upgrade / backup method ● TFTP: Using TFTP to upgrade/backup firmware ● HTTP: Using WEB browser to upgrade/backup firmware
Configuration	Configuration types ● Running Configuration: Merge to current running configuration file ● Startup Configuration: Replace startup configuration file ● Backup Configuration: Replace backup configuration file
Address Type	Specify TFTP server address type ● Hostname: Use domain name as server address ● IPv4: Use IPv4 as server address ● IPv6: Use IPv6 as server address
Server Address	Specify TFTP server address address
Filename	File name saved on remote TFTP server

To display firmware upgrade or backup web page, click **Management > Configuration > Upgrade/Backup**.

The screenshot shows a web interface for configuring firmware upgrade or backup. It is divided into three main sections: **Action**, **Method**, and **Configuration**. Each section contains a set of radio buttons. In the **Action** section, 'Backup' is selected. In the **Method** section, 'HTTP' is selected. In the **Configuration** section, 'Running Configuration' is selected. An 'Apply' button is located at the bottom left of the configuration area.

Figure - Management > Configuration > Upgrade/Backup

Item	Description
Action	Configuration operations ● Upgrade: Upgrade firmware from remote host to DUT ● Backup: Backup firmware image from DUT to remote host
Method	Configuration upgrade / backup method ● TFTP: Using TFTP to upgrade/backup firmware ● HTTP: Using WEB browser to upgrade/backup firmware
Configuration	Configuration types ● Running Configuration: Backup running configuration file. ● Startup Configuration: Backup start configuration file. ● Backup Configuration: Backup backup configuration file. ● RAM Log: Backup log file stored in RAM. ● Flash Log: Backup log files store in Flash.

To display firmware upgrade or backup web page, click **Management > Configuration > Upgrade/Backup**

The screenshot shows a web interface for configuring firmware upgrade or backup. It includes sections for Action, Method, Configuration, Address Type, Server Address, and Filename, each with a set of radio buttons or text input fields. The 'Apply' button is located at the bottom left.

Figure- Management > Configuration > Upgrade/Backup

Item	Description
Action	Configuration operations ● Upgrade: Upgrade firmware from remote host to DUT ● Backup: Backup firmware image from DUT to remote host
Method	Configuration upgrade / backup method ● TFTP: Using TFTP to upgrade/backup firmware ● HTTP: Using WEB browser to upgrade/backup firmware
Configuration	Configuration types ● Running Configuration: Backup running configuration file. ● Startup Configuration: Backup start configuration file. ● Backup Configuration: Backup backup configuration file. ● RAM Log: Backup log file stored in RAM. ● Flash Log: Backup log files store in Flash.
Address Type	Specify TFTP server address type ● Hostname: Use domain name as server address ● IPv4: Use IPv4 as server address ● IPv6: Use IPv6 as server address
Server Address	Specify TFTP server address address.
Filename	File name saved on remote TFTP server.

IV-12-3-2 Save Configuration

This page allow user to manage configuration file saved on DUT and click “**Restore Factory Default**” button to restore factory defaults.

To display the Save Configuration web page, click **Management > Configuration > Save Configuration**.

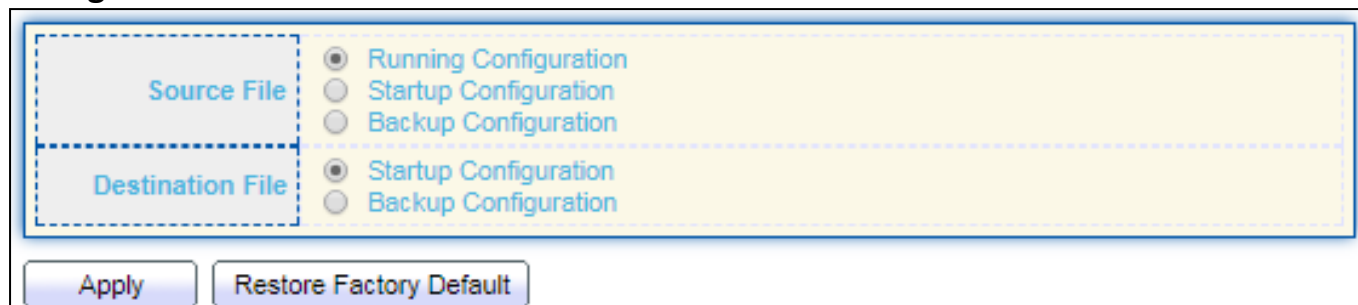


Figure 162 - Management > Configuration > Save Configuration

Item	Description
Source File	Source file types ● Running Configuration: Copy running configuration file to destination. ● Startup Configuration: Copy startup configuration file to destination. ● Backup Configuration: Copy backup configuration file to destination
Destination File	Destination file ● Startup Configuration: Save file as startup configuration. ● Backup Configuration: Save file as backup configuration.

IV-12-4 SNMP

IV-12-4-1 View

To configure and display the SNMP view table, click **Management > SNMP > View**.

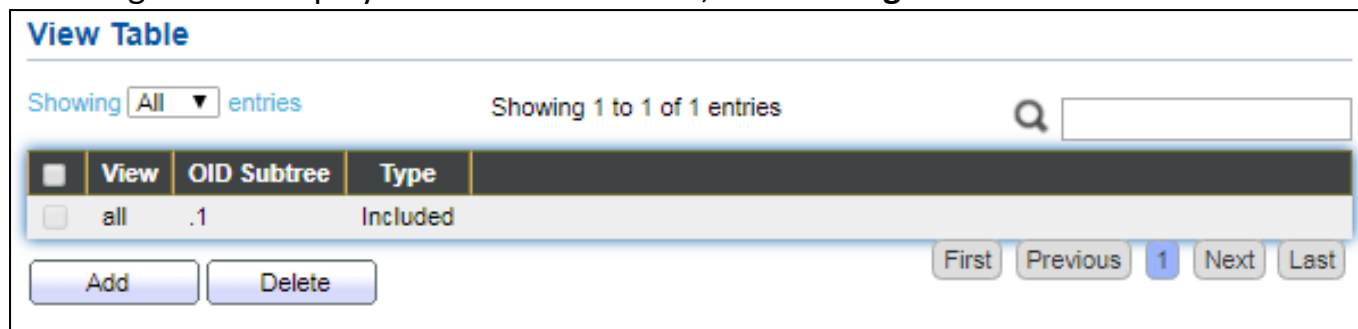


Figure - Management > SNMP > View

Item	Description
View	The SNMP view name. Its maximum length is 30 characters
OID Subtree	Specify the ASN.1 subtree object identifier (OID) to be included or excluded from the SNMP view
Type	Include or exclude the selected MIBs in the view

IV-12-4-2 Group

To configure and display the SNMP group settings, click **Management > SNMP > Group**.

Group Table

Showing **All** entries Showing 0 to 0 of 0 entries

	Group	Version	Security Level	View		
				Read	Write	Notify
0 results found.						

First Previous **1** Next Last

Configure **SNMP View** to associate a non-default view with a group.

Figure - Management > SNMP > Group

Item	Description
Group	Specify SNMP group name, and the maximum length is 30 characters.
Version	Specify SNMP version ● SNMPv1: SNMP Version 1. ● SNMPv2: Community-based SNMP Version 2. ● SNMPv3: User security model SNMP version 3.
Security Level	Specify SNMP security level ● No Security: Specify that no packet authentication is performed. ● Authentication: Specify that no packet authentication without encryption is performed. ● Authentication and Privacy: Specify that no packet authentication with encryption is performed.
View	
Read	Group read view name.
Write	Group write view name.
Notify	The view name that sends only traps with contents that is included in SNMP view selected for notification.

Click "Add" or "Edit" button to view the Add/Edit Group menu.

Add Group

Group

Version

SNMPv1

SNMPv2

SNMPv3

Security Level

No Security

Authentication

Authentication and Privacy

View

☒

Read

all ▼

☐

Write

all ▼

☐

Notify

all ▼

Apply

Close

Edit Group

Group

1

Version

SNMPv1

SNMPv2

SNMPv3

Security Level

No Security

Authentication

Authentication and Privacy

View

☒

Read

all ▼

☐

Write

all ▼

☐

Notify

all ▼

Apply

Close

Figure - Management > SNMP > Group > Add/Edit Group

Item	Description
Group	Specify SNMP group name, and the maximum length is 30 characters.
Version	Specify SNMP version ● SNMPv1: SNMP Version 1.

	● SNMPv2: Community-based SNMP Version 2. ● SNMPv3: User security model SNMP version 3.
Security Level	Specify SNMP security level ● No Security : Specify that no packet authentication is performed. ● Authentication: Specify that no packet authentication without encryption is performed. ● Authentication and Privacy: Specify that no packet authentication with encryption is performed.
View	
Read	Select read view name if Read is checked.
Write	Select write view name, if Write is checked.
Notify	Select notify view name, if Notify is checked.

IV-12-4-3 Community

To configure and display the SNMP community settings, click **Management > SNMP > Community**.

Community Table

Showing **All** entries Showing 1 to 1 of 1 entries

☐	Community	Group	View	Access
☐	public	all		Read-Write

First Previous 1 Next Last

The access right of a community is defined by a group under advanced mode.
Configure [SNMP Group](#) to associate a group with a community.

Add Edit Delete

Figure 166 - Management > SNMP > Community

Item	Description
Community	The SNMP community name. Its maximum length is 20 characters.
Group	Specify the SNMP group configured by the command snmp group to define the object available to the community.
View	Specify the SNMP view to define the object available to the community.
Access	SNMP access mode ● Read-Only: Read only. ● Read-Write: Read and write.

Click **"Add"** or **"Edit"** button to view the Add/Edit Community menu.

Add Community

Community

Type

☒ Basic
☐ Advanced

View

all ▼

Access

☒ Read-Only
☐ Read-Write

Group

1 ▼

Apply

Close

Edit Community

Community

public

Type

☒ Basic
☐ Advanced

View

all ▼

Access

☐ Read-Only
☒ Read-Write

Group

1 ▼

Apply

Close

Figure - Management > SNMP > Group > Add/Edit Community

Item	Description
Community	The SNMP community name. Its maximum length is 20 characters.
Type	SNMP Community mode ● Basic: SNMP community specifies view and access right. ● Advanced: SNMP community specifies group.
View	Specify the SNMP view to define the object available to the community.
Access	SNMP access mode ● Read-Only: Read only. ● Read-Write: Read and write.
Group	Specify the SNMP group configured by the command snmp group to define the object available to the community.

IV-12-4-4 User

To configure and display the SNMP users, click **Management > SNMP > User**.

User Table

Showing **All** entries Showing 0 to 0 of 0 entries

Search:

User	Group	Security Level	Authentication Method	Privacy Method
0 results found.				

First Previous 1 Next Last

Configure [SNMP Group](#) to associate an SNMPv3 group with an SNMPv3 user.

[Add](#) [Edit](#) [Delete](#)

Figure 168 - Management > SNMP > User

Item	Description
User	Specify the SNMP user name on the host that connects to the SNMP agent. The max character is 30 characters. For the SNMP v1 or v2c, the user name must match the community name.
Group	Specify the SNMP group to which the SNMP user belongs.
Security Level	SNMP privilege mode ● No Security: Specify that no packet authentication is performed. ● Authentication: Specify that no packet authentication without encryption is performed. ● Authentication and Privacy: Specify that no packet authentication with encryption is performed.
Authentication Method	Authentication Protocol which is available when Privilege Mode is Authentication or Authentication and Privacy. ● None: No authentication required. ● MD5: Specify the HMAC-MD5-96 authentication protocol. ● SHA: Specify the HMAC-SHA-96 authentication protocol
Privacy Method	Encryption Protocol ● None: No privacy required. ● DES: DES algorithm

Click "Add" or "Edit" button to view Add/Edit User menu.

Add User

User

Group

Security Level

11 ▼

☒ No Security

☐ Authentication

☐ Authentication and Privacy

Authentication

Method

Password

☒ None

☐ MD5

☐ SHA

Privacy

Method

Password

☒ None

☐ DES

Apply

Close

Edit User

User

Group

Security Level

22

11 ▼

☒ No Security

☐ Authentication

☐ Authentication and Privacy

Authentication

Method

Password

☒ None

☐ MD5

☐ SHA

Privacy

Method

Password

☒ None

☐ DES

Apply

Close

Figure - Management > SNMP > User > Add/Edit User

Item	Description
User	Specify the SNMP user name on the host that connects to the SNMP agent. The max character is 30 characters.
Group	Specify the SNMP group to which the SNMP user belongs.
Security Level	SNMP privilege mode ● No Security: Specify that no packet authentication is performed. ● Authentication: Specify that no packet authentication without encryption is performed. ● Authentication and Privacy: Specify that no packet authentication with encryption is performed.
Authentication	
Method	Authentication Protocol which is available when Privilege Mode is Authentication or Authentication and Privacy. ● None: No authentication required. ● MD5: Specify the HMAC-MD5-96 authentication protocol. ● SHA: Specify the HMAC-SHA-96 authentication protocol.
Password	The authentication password, The number of character range is 8 to 32 characters.
Privacy	
Method	Encryption Protocol ● None: No privacy required. ● DES: DES algorithm
Password	The privacy password, The number of character range is 8 to 64 characters.

IV-12-4-5 Engine ID

To configure and display SNMP local and remote engine ID, click Management > SNMP > Engine ID.

Local Engine ID

☐ User Defined

Engine ID: 80006a920374da38176e7 (10 - 64 Hexadecimal Characters)

Apply

Remote Engine ID Table

Showing All entries Showing 0 to 0 of 0 entries


Server Address	Engine ID
0 results found.	

Add Edit Delete First Previous 1 Next Last

Figure - Management > SNMP > Engine ID

Item	Description
Local Engine ID	
Engine ID	If checked "User Defined", the local engine ID is configure by user, else use the default Engine ID which is made up of MAC and Enterprise ID. The user defined engine ID is range 10 to 64 hexadecimal characters, and the hexadecimal number must be divided by 2.
Remote Engine ID Table	
Server Address	Remote host.
Engine ID	Specify Remote SNMP engine ID. The engine ID is range10 to 64 hexadecimal characters, and the hexadecimal number must be divided by 2.

Click "**Add**" button to view Add Remote Engine ID menu.

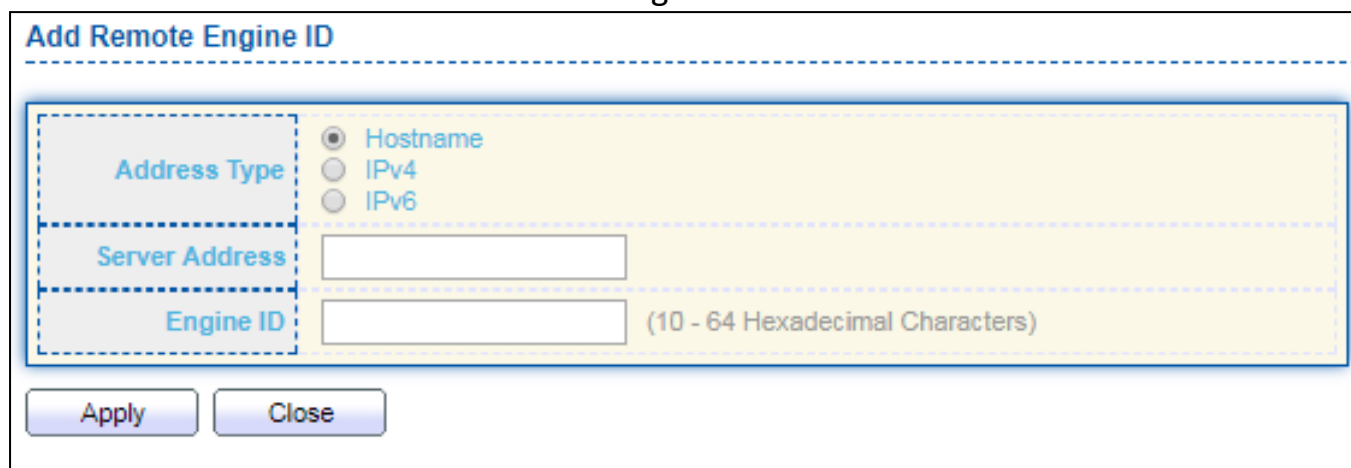


The dialog box is titled "Add Remote Engine ID". It contains three input fields: "Address Type" with radio buttons for "Hostname" (selected), "IPv4", and "IPv6"; "Server Address" with an empty text box; and "Engine ID" with an empty text box and a note "(10 - 64 Hexadecimal Characters)". At the bottom are "Apply" and "Close" buttons.

Figure - Management > SNMP > Add Engine ID

Item	Description
Address Type	Remote host address type for Hostname/IPv4/IPv6.
Server Address	Remote host.
Engine ID	Specify Remote SNMP engine ID. The engine ID is range10 to 64 hexadecimal characters, and the hexadecimal number must be divided by 2.

Click "**Edit**" button to view Edit Remote Engine ID menu.

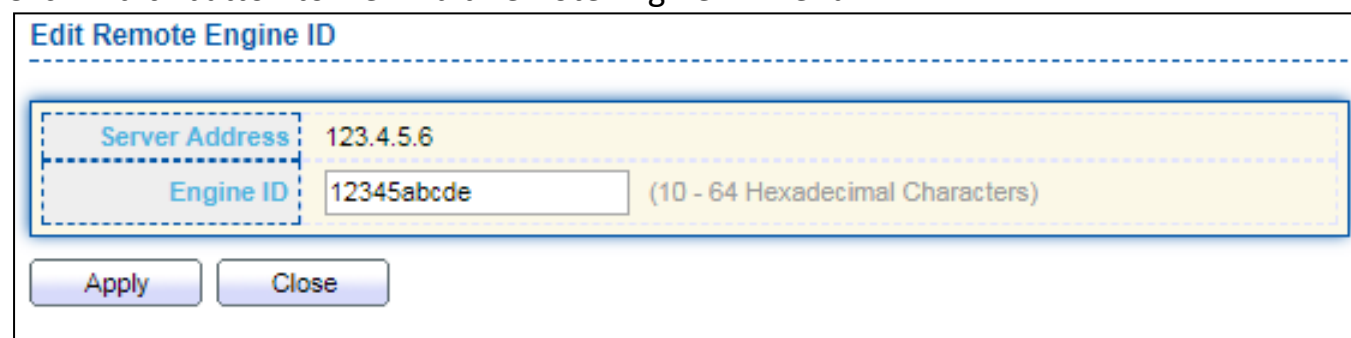


The dialog box is titled "Edit Remote Engine ID". It contains two input fields: "Server Address" with the value "123.4.5.6" and "Engine ID" with the value "12345abcde" and a note "(10 - 64 Hexadecimal Characters)". At the bottom are "Apply" and "Close" buttons.

Figure - Management > SNMP > Edit Engine ID

Item	Description
Server Address	Edit Remote host address
Engine ID	Specify Remote SNMP engine ID. The engine ID is range10 to 64 hexadecimal characters, and the hexadecimal number must be divided by 2.

IV-12-4-6 Trap Event

To configure and display SNMP trap event, click **Management > SNMP > Trap Event**.

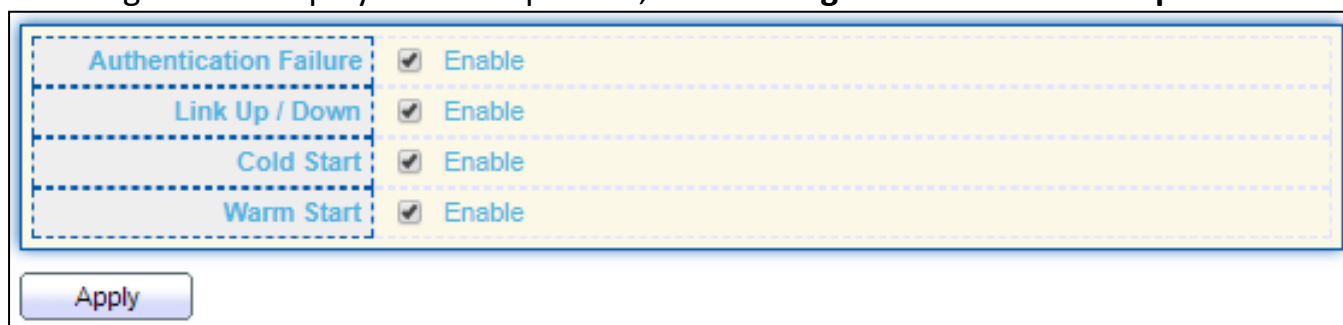

Authentication Failure	☒ Enable
Link Up / Down	☒ Enable
Cold Start	☒ Enable
Warm Start	☒ Enable


Apply

Figure - Management > SNMP > Trap Event

Item	Description
Authentication Failure	SNMP authentication failure trap, when community not match or user authentication password not match.
Link Up/Down	Port link up or down trap.
Cold Start	Device reboot configure by user trap.
Warm Start	Device reboot by power down trap.

IV-12-4-7 Notification

To configure the hosts to receive SNMPv1/v2/v3 notification, click **Management > SNMP > Notification**.

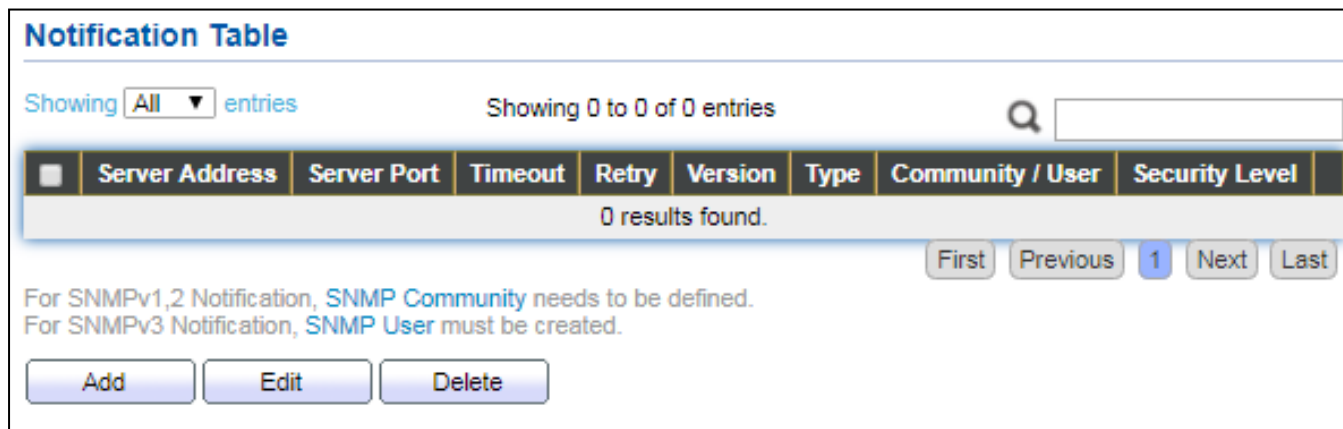

Notification Table

Showing All entries Showing 0 to 0 of 0 entries

	Server Address	Server Port	Timeout	Retry	Version	Type	Community / User	Security Level
0 results found.								

First Previous 1 Next Last

For SNMPv1,2 Notification, [SNMP Community](#) needs to be defined.
For SNMPv3 Notification, [SNMP User](#) must be created.

Add Edit Delete

Figure - Management > SNMP > Notification

Item	Description
Server Address	IP address or the hostname of the SNMP trap recipients.
Server Port	Recipients server UDP port number.
Timeout	Specify the SNMP informs timeout.
Retry	Specify the retry counter of the SNMP informs.
Version	Specify SNMP notification version ● SNMPv1: SNMP Version 1 notification.

	● SNMPv2: SNMP Version 2 notification. ● SNMPv3: SNMP Version 3 notification.
Type	Notification Type ● Trap: Send SNMP traps to the host. ● Inform: Send SNMP informs to the host.
Community/User	SNMP community/user name for notification. If version is SNMPv3 the name is user name, else is community name.
UDP Port	Specify the UDP port number.
Timeout	Specify the SNMP informs timeout.
Security Level	SNMP trap packet security level ● No Security: Specify that no packet authentication is performed. ● Authentication: Specify that no packet authentication without encryption is performed. ● Authentication and Privacy: Specify that no packet authentication with encryption is performed.

Click **"Add"** button to view the Notification menu.

Add Notification

Address Type

☒ Hostname
☐ IPv4
☐ IPv6

Server Address

Version

☒ SNMPv1
☐ SNMPv2
☐ SNMPv3

Type

☒ Trap
☐ Inform

Community / User

public ▼

Security Level

☒ No Security
☐ Authentication
☐ Authentication and Privacy

Server Port

☒ Use Default

162 (1 - 65535, default 162)

Timeout

☒ Use Default

15 Sec (1 - 300, default 15)

Retry

☒ Use Default

3 (1 - 255, default 3)

Apply

Close

Figure - Management > SNMP > Notification > Add Notification

Item	Description
Address Type	Notify recipients host address type.
Server Address	IP address or the hostname of the SNMP trap recipients.
Version	Specify SNMP notification version ● SNMPv1: SNMP Version 1 notification. ● SNMPv2: SNMP Version 2 notification. ● SNMPv3: SNMP Version 3 notification.
Type	Notification Type ● Trap: Send SNMP traps to the host. ● Inform: Send SNMP informs to the host.(version 1 have no inform)
Community/User	SNMP community/user name for notification. If version is SNMPv3 the name is user name, else is community name.
Security Level	SNMP notification packet security level, the security level must less than or equal to the community/user name ● No Security: Specify that no packet authentication is performed. ● Authentication: Specify that no packet authentication without encryption is performed. ● Authentication and Privacy: Specify that no packet authentication with encryption is performed.
Server Port	Recipients server UDP port number, if “use default” checked the value is 162, else user configure.
Timeout	Specify the SNMP informs timeout, if “use default” checked the value is 15, else user configure.
Retry	Specify the SNMP informs retry count, if “use default” checked the value is 3, else user configure.

Click "**Edit**" button to view the Edit Notification menu.

Edit Notification

Server Address

123.4.5.6

Version

☒ SNMPv1
☐ SNMPv2
☐ SNMPv3

Type

☒ Trap
☐ Inform

Community / User

public ▼

Security Level

☒ No Security
☐ Authentication
☐ Authentication and Privacy

Server Port

☒ Use Default

162 (1 - 65535, default 162)

Timeout

☒ Use Default

15 Sec (1 - 300, default 15)

Retry

☒ Use Default

3 (1 - 255, default 3)

Apply

Close

Figure - Management > SNMP > Notification > Edit Notification

Item	Description
Server Address	Edit SNMP notify recipients address
Version	Specify SNMP notification version ● SNMPv1: SNMP Version 1 notification. ● SNMPv2: SNMP Version 2 notification. ● SNMPv3: SNMP Version 3 notification.
Type	Notification Type ● Trap: Send SNMP traps to the host. ● Inform: Send SNMP informs to the host.(version 1 have no inform)
Community/User	SNMP community/user name for notification. If version is SNMPv3 the name is user name, else is community name.
Community Level	SNMP notification packet security level, the security level must less than or equal to the community/user name ● No Security: Specify that no packet authentication is performed. ● Authentication: Specify that no packet authentication without encryption is performed. ● Authentication and Privacy: Specify that no packet authentication with encryption is performed.

Server Port	Recipients server UDP port number, if “use default” checked the value is 162, else user configure.
Timeout	Specify the SNMP informs timeout, if “use default” checked the value is 15, else user configure.
Retry	Specify the SNMP informs retry count, if “use default” checked the value is 3, else user configure.

IV-12-5 RMON

RMON (Remote Networking Monitoring) enables an SNMP agent in the device to proactively monitor traffic statistics over a given period and send traps to an SNMP manager. The local SNMP agent compares actual, real-time counters against predefined thresholds and generates alarms, without the need for polling by a central SNMP management platform. This is an effective mechanism for proactive management, provided that you have set the correct thresholds relative to your network’s base line.

RMON Statistics

The Statistics page displays detailed information regarding packet sizes and information regarding physical layer errors. The information is displayed according to the RMON standard.

Management >> RMON >> Statistics

- ▼ Port
 - Link Aggregation
 - MAC Address Table
- ▼ Network
- ▼ Port
- ▼ VLAN
- ▼ MAC Address Table
- ▼ Spanning Tree
- ▼ Discovery
- ▼ Multicast
- ▼ Security
- ▼ ACL
- ▼ QoS
- ▼ Diagnostics
- ▼ **Management**
 - User Account
 - ▼ Firmware
 - ▼ Configuration
 - ▼ SNMP
 - ▲ **RMON**
 - Statistics**
 - History
 - Event
 - Alarm

☐	20	GE20	0	0	0
☐	21	GE21	0	0	0
☐	22	GE22	0	0	0
☐	23	GE23	0	0	0
☐	24	GE24	18135	0	141
☐	25	10GE1	0	0	0
☐	26	10GE2	0	0	0
☐	27	10GE3	0	0	0
☐	28	10GE4	0	0	0
☒	29	LAG1	18135	0	141
☐	30	LAG2	0	0	0
☐	31	LAG3	0	0	0
☐	32	LAG4	0	0	0
☐	33	LAG5	0	0	0
☐	34	LAG6	0	0	0
☐	35	LAG7	0	0	0
☐	36	LAG8	0	0	0

Clear

Refresh

View

To view the RMON Statistics table, please click the "**View**" button.
You can click on the "**Clear**" button to clear the RMON Statistics.
or click on "**Refresh**" button to get Up-to-Data RMON Statistics table.

RMON History

The History page defines the sampling frequency, amount of samples to store and the port from which to gather the data.

After the data is sampled and stored, it appears in the History Table that can be viewed by clicking "**View**" button.

Also History Table

-can be added by clicking "**Add**" button.

-can be viewed by clicking "**Edit**" button.

-can be deleted by clicking "**Delete**" button.

Management >> RMON >> History

History Table

Showing All entries Showing 1 to 1 of 1 entries

	Entry	Port	Interval	Owner	Sample	
					Maximum	Current
☐	1	GE2	1800		50	50

Add Edit Delete View

Add History

Entry 2

Port GE1

Max Sample 50 (1 - 50, default 50)

Interval 1800 (1 - 3600, default 1800)

Owner

Apply Close

Edit History

Entry 1

Port GE2

Max Sample 50 (1 - 50, default 50)

Interval 1800 (1 - 3600, default 1800)

Owner

Apply Close

RMON Event

The RMON Events group controls the generation and notification of events from a device.

Event Table

Showing **All** entries Showing 1 to 3 of 3 entries

☐	Entry	Community	Description	Notification	Time	Owner
☐	1	Default Community	Default Description	Event Log and Trap	(0) 0:00:00.00	
☐	2	Community	Default Description	Trap	(0) 0:00:00.00	
☐	3	Default Community	Default Description	Trap	(0) 0:00:00.00	

Add **Edit** **Delete** **View**

Also RMON Event Table

-can be added by clicking “**Add**” button.

-can be viewed by clicking “**Edit**” button.

-can be deleted by clicking “**Delete**” button.

RMON Alarm

The RMON Alarm group periodically takes statistical samples from variables in a probe and compares them with previously configured thresholds.

Management >> RMON >> Alarm

Alarm Table

Showing **All** entries Showing 1 to 3 of 3 entries

☐	Entry	Port	Counter		Sampling	Interval	Owner	Trigger	Rising		Falling	
			Name	Value					Threshold	Event	Threshold	Event
☒	1	GE1	DropEvents	0	Absolute	100		Rising	100	Default Description	20	Default Description
☐	2	GE1	Octets	0	Absolute	100		Rising	100	Default Description	20	Default Description
☐	3	GE1	DropEvents	0	Delta	100		Falling	100	Default Description	20	Default Description

Add **Edit** **Delete**

Select a Port and Click “ **Add** ” to configure the Alarm criteria.

Add Alarm

Entry	4
Port	GE1
Counter	Drop Events
Sampling	☒ Absolute ☐ Delta
Interval	100 Sec (1 - 2147483647, default 100)
Owner	
Trigger	☒ Rising ☐ Falling ☐ Rising and Falling

Rising

Threshold	100 (0 - 2147483647, default 100)
Event	1 - Default Description

Falling

Threshold	20 (0 - 2147483647, default 20)
Event	1 - Default Description

Select a Port and Click “ **Edit** ” to configure the Alarm criteria.

Edit Alarm

Entry	1
Port	GE1
Counter	Drop Events
Sampling	☒ Absolute ☐ Delta
Interval	100 Sec (1 - 2147483647, default 100)
Owner	
Trigger	☒ Rising ☐ Falling ☐ Rising and Falling

Rising

Threshold	100 (0 - 2147483647, default 100)
Event	1 - Default Description

Falling

Threshold	20 (0 - 2147483647, default 20)
Event	1 - Default Description

COPYRIGHT

Copyright © Edimax Technology Co., Ltd. all rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission from Edimax Technology Co., Ltd.

Edimax Technology Co., Ltd. makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability, or fitness for any particular purpose. Any software described in this manual is sold or licensed as is. Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Edimax Technology Co., Ltd. reserves the right to revise this publication and to make changes from time to time in the contents hereof without the obligation to notify any person of such revision or changes.

The product you have purchased and the setup screen may appear slightly different from those shown in this QIG. The software and specifications are subject to change without notice. Please visit our website www.edimax.com for updates. All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

R&TTE Compliance Statement

This equipment complies with all the requirements of DIRECTIVE 2014/30/EU OF THE EUROPEAN PARLIAMENT AND THE COUNCIL of March 9, 1999 on radio equipment and telecommunication terminal equipment and the mutual recognition of their conformity (R&TTE). The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) As of April 8, 2000.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

EU Countries Intended for Use

The ETSI version of this device is intended for home and office use in Austria, Belgium, Bulgaria, Croatia, Cyprus, Czech, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Turkey, and United Kingdom. The ETSI version of this device is also authorized for use in EFTA member states: Iceland, Liechtenstein, Norway, and Switzerland.

EU Countries Not Intended for Use

None

EU Declaration of Conformity

- English:** This equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/30/EU.
- Français:** Cet équipement est conforme aux exigences essentielles et autres dispositions de la directive 2014/30/EU.
- Čeština:** Toto zařízení je v souladu se základními požadavky a ostatními příslušnými ustanoveními směrnic 2014/30/EU.
- Polski:** Urządzenie jest zgodne z ogólnymi wymaganiami oraz szczególnymi warunkami określonymi Dyrektywą UE 2014/30/EU.
- Română:** Acest echipament este în conformitate cu cerințele esențiale și alte prevederi relevante ale Directivei 2014/30/EU.
- Русский:** Это оборудование соответствует основным требованиям и положениям Директивы 2014/30/EU.
- Magyar:** Ez a berendezés megfelel az alapvető követelményeknek és más vonatkozó irányelveknek (2014/30/EU).
- Türkçe:** Bu cihaz 2014/30/EU. direktifleri zorunlu istekler ve diğer hükümlerle ile uyumludur.
- Українська:** Обладнання відповідає вимогам і умовам директиви 2014/30/EU.
- Slovenčina:** Toto zariadenie spĺňa základné požiadavky a ďalšie príslušné ustanovenia smerníc 2014/30/EU.
- Deutsch:** Dieses Gerät erfüllt die Voraussetzungen gemäß den Richtlinien 2014/30/EU.
- Español:** El presente equipo cumple los requisitos esenciales de la Directiva 2014/30/EU.
- Italiano:** Questo apparecchio è conforme ai requisiti essenziali e alle altre disposizioni applicabili della Direttiva 2014/30/EU.
- Nederlands:** Dit apparaat voldoet aan de essentiële eisen en andere van toepassing zijnde bepalingen van richtlijn 2014/30/EU.
- Português:** Este equipamento cumpre os requisitos essenciais da Directiva 2014/30/EU.
- Norsk:** Dette utstyret er i samsvar med de viktigste kravene og andre relevante regler i Direktiv 2014/30/EU.
- Svenska:** Denna utrustning är i överensstämmelse med de väsentliga kraven och övriga relevanta bestämmelser i direktiv 2014/30/EU.
- Dansk:** Dette udstyr er i overensstemmelse med de væsentligste krav og andre relevante forordninger i direktiv 2014/30/EU.
- suomen kieli:** Tämä laite täyttää direktiivien 2014/30/EU. oleelliset vaatimukset ja muut asiaankuuluvat määräykset.

FOR USE IN



WEEE Directive & Product Disposal



At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

Declaration of Conformity

We, Edimax Technology Co., Ltd., declare under our sole responsibility, that the equipment described below complies with the requirements of the European R&TTE directives.

Equipment: 28-Port Gigabit Web Smart Switch with 4-Port 10GbE SFP+ Ports
Model No.: GS-5424LX

The following European standards for essential requirements have been followed:

Directives 2014/30/EU

EMC : EN 55032:2015+AC:2016
EN 61000-3-2:2014 Class A
EN 61000-3-3:2013
EN 55035:2017

 
Directives 2014/35/EU

Safety (LVD) : EN 62368-1:2014+A11:2017

Edimax Technology Europe B.V.

Fijenhof 2,
5652 AE Eindhoven,
The Netherlands

Date & Place of Issue: 31/August/2022, Eindhoven

Signature: 

Printed Name: David Huang

Title: Director

a company of:

Edimax Technology Co., Ltd.
No. 278, Xinhua 1st Rd., Neihu Dist.,
Taipei City, Taiwan

Date & Place of Issue: 31/August/2022, Taipei

Signature: 

Printed Name: Hunter Chen

Title: Director



Declaration of Conformity

We, Edimax Technology Co., Ltd., declare under our sole responsibility, that the equipment described below complies with the requirements of the United Kingdom EMC and Safety directives.

Equipment: 28-Port Gigabit Web Smart Switch with 4-Port 10GbE SFP+ Ports
Model No.: GS-5424LX

The following European standards for essential requirements have been followed:

Electromagnetic Compatibility Regulations 2016 (S.I. 2016/1091)

EMC : EN 55032:2015+AC:2016
EN 61000-3-2:2014 Class A
EN 61000-3-3:2013
EN 55035:2017

Electrical Equipment (Safety) Regulations 2016 (S.I. 2016/1101)

Safety (LVD) : EN 62368-1:2014+A11:2017

Edimax Technology Europe B.V.

Fijenhof 2,
5652 AE Eindhoven,
The Netherlands

Date & Place of Issue: 31/August/2022, Eindhoven

Signature:



Printed Name: David Huang

Title: Director

a company of:

Edimax Technology Co., Ltd.
No. 278, Xinhua 1st Rd., Neihu Dist.,
Taipei City, Taiwan

Date & Place of Issue: 31/August/2022, Taipei

Signature:



Printed Name: Hunter Chen

Title: Director

