

User Manual

(en)

tiptel 9030 DECT



tiptel

Note: If you need manuals in other languages, instructions on how to install a tiptel 9030 DECT headset, on supported desk phones or technical specifications please visit <http://www.tiptel.com>

Package Contents



Headset



Base

Quick Installation Guide (en)
tiptel 9030 DECT



tiptel

User Manual




Power Adapter





Phone Cable

tiptel 9030 DECT Headset Overview

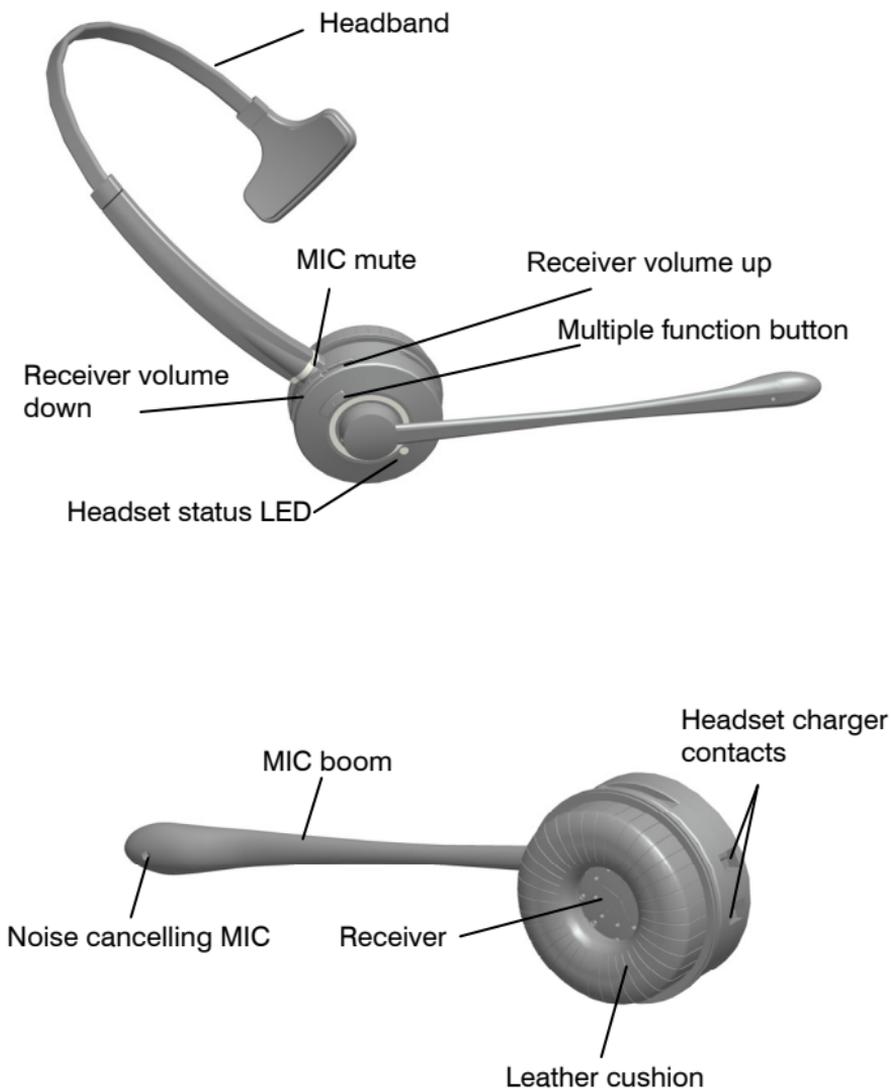

tiptel 9030 DECT Base Overview

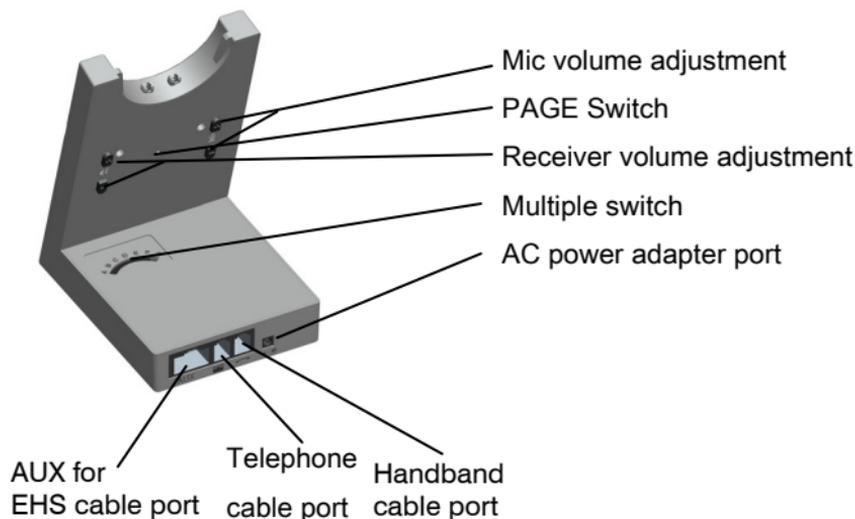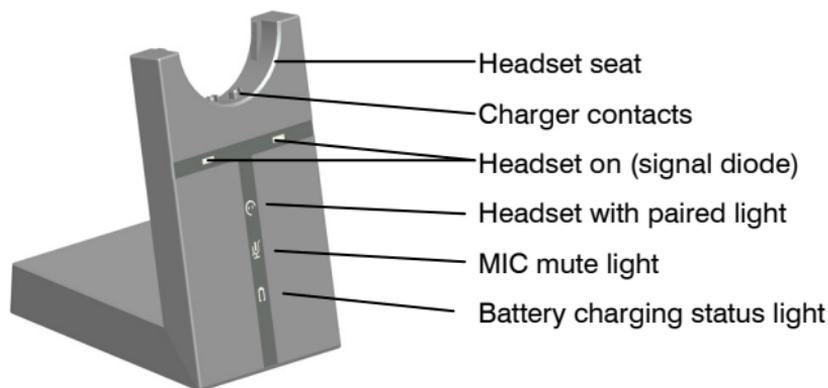

Visual Indicators on the Base

The DECT base has five LEDs to indicate the status of battery, calls and events.


Icon	Status
	Online
	Link between headset and base
	Searching for headset
	Microphone mute
	Battery charging
	Full battery
	Unknown battery status

Connecting to a Desk Phone

Visit <http://www.tiptel.com> for separate instructions on how to connect a tiptel 9030 DECT headset with desk phones.

Connect Power Supply to Base

1. Plug the power adapter into the port marked  on the base.
2. Connect the power adapter to the mains power socket.

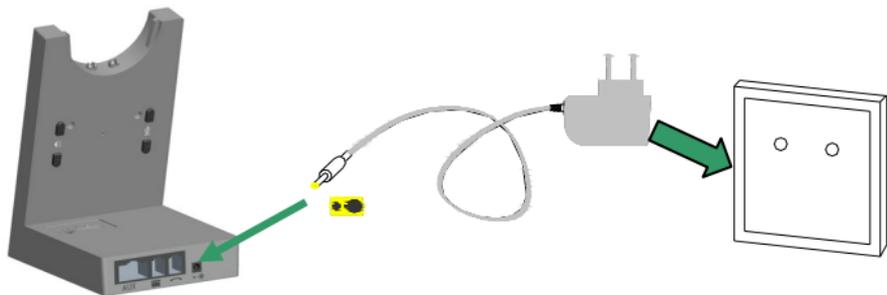

Pairing

To check the pairing press the multiple function button, the LED at headset will light up and the LED  will be lit when the headset is successfully paired with the base.


If this do not works you have to renew to pair the headset:

Consistently press the Page switch at the back side of base for 5 seconds, the LED indicating the pairing  will flash while searching the headset. Consistently press the headset mute button until the headset status LED flashes. Headset and base are successfully paired when the LED of headset and base station turns off.

To dispair the headset plug out the power adaptor. Then consistently press the microphone  + button at the back of the base and plug in power adaptor. When the battery charging status light flashes three times the headset and the base is dispaired.

Dock the Headset

Dock the headset to the headset seat. If there is an active call the call is terminated.

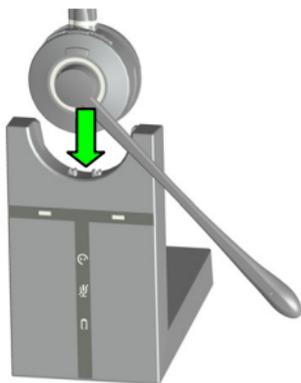


When docked correctly the headset battery will begin charging automatically, if needed (LED will flash when charging ). Charge for 20 minutes or until the battery indicator on the base  lights steady green.

Configuring the Audio Quality

Due to the large range of desk phone brands/models available, a clear dial tone must be set before using the tiptel 9030 DECT the first time. Setting the clear dial tone will enable the tiptel 9030 DECT to function correctly with your specific desk phone. Additionally it is also important to set the microphone volume for optimal sound quality.


Set a Clear Dial Tone

1. Put on the headset.
2. Get a dial tone by pressing the headset button on the desk phone, or by lifting the desk phone handset.
3. Locate the clear dial tone switch on the back of the tiptel 9030 DECT base, as illustrated, put the headset on to hear a clear dial tone, rotate the switch from A to G. Determine the best switch position. The dial tone should be strong, clear and undistorted.
4. When the clear dial tone is set, press the headset button on the desk phone, or return the desk phone handset to the receiver.

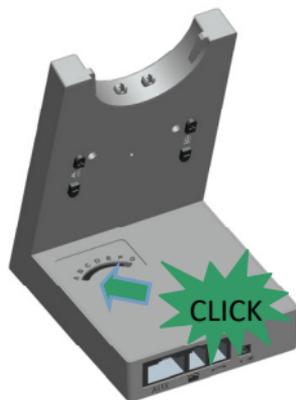

Set the Volume


1. Put on the headset.
2. Get a dial tone by pressing the headset button on the desk phone or by lifting the desk phone handset.
3. Make a test call to test your speaking volume. Ensure the listener does not adjust its own volume.

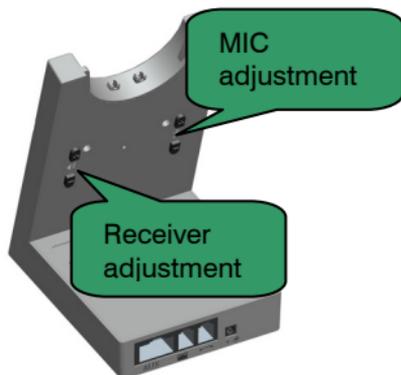

4. Adjust the microphone volume using the microphone  + / - volume buttons, as illustrated.
5. Adjust the receiver volume using the receiver  + / - volume buttons, as illustrated, for the listening volume.
6. When the microphone volume is set, end the call.

Headset Multi-Function Button


The multi-function button can answer and end calls and power the headset on and off.

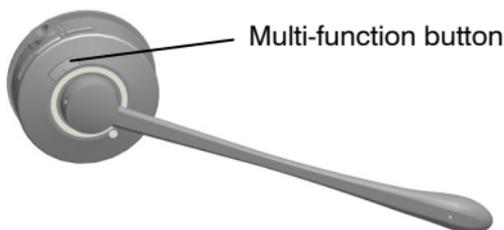

Tab the multi-function button to power on the headset. If powered on tab the multi-function button to answer and end a call. Press hold on the multi-function button to power off the headset.


Headset Speaker Volume Buttons

The speaker volume buttons adjust the headset speaker volume.

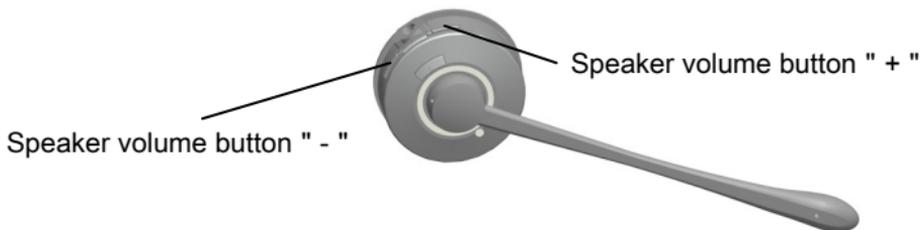

Headset Mute Button

The mute button mutes or unmutes the headset microphone and pairs the headset.

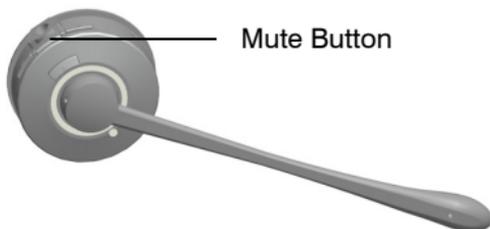

Tab mute button to mute and unmute the microphone.

For pairing press and hold mute button to start the pairing of the headset (see chapter “Pairing”).

Appendix

Warranty

Your point of contact for warranty obligation benefits is the specialist retailer where you acquired your device.

Warranty conditions are based upon the legal regulations of the country in which the device was purchased. Your specialist retailer will be glad to provide more information.

Guarantee

Tiptel provides a voluntary guarantee on the device, the conditions of which are published on <http://www.tiptel.com>. The guarantee conditions applicable at the time of purchase apply. The original sales slip (receipt, bill) with serial number and/or IMEI number is used as proof of purchase. Please keep these documents in a safe place.

Declaration of conformity

This device satisfies the requirements of the EU directive on radio and telecommunication terminal equipment and the mutual recognition of their conformity. The CE mark on the device confirms conformity with the above directive.

We hereby declare that the device satisfies all fundamental requirements of European directives.

For details on the declaration of conformity please visit <http://www.tiptel.com>.

Disposal

Packaging: Dispose of card and cardboard boxes in the used paper container and throw plastic parts into a recycling container.

Device disposal: Used electrical devices should not be disposed of in the household waste. Dispose of the device at your local collection points (scrap or recycling yards). Please contact your local authority for information on disposal sites.

(Rechargeable) batteries: (Rechargeable) Batteries may not be disposed of in the household waste. As a consumer, you have a legal obligation to return (rechargeable) batteries. Please contact your local authorities, or the specialist retailer from where you purchased the device, for information on disposal sites.



**Tiptel.com GmbH
Business Solutions**

Halskestraße 1
40880 Ratingen
Deutschland
Tel.: 02102 428 520
Internet: www.tiptel.de
E-Mail: info@tiptel.com
International: www.tiptel.com

Tiptel AG

Pumpwerkstrasse 40
8105 Regensdorf
Schweiz/Suisse/Svizzera
Tel.: 044 843 13 13
Fax: 044 843 13 23
E-Mail: tiptel@tiptel-online.ch
Internet: www.tiptel-online.ch

Tiptel NV/SA

Imperiastraat 10 B8
1930 Zaventem
Belgique/België
Tel.: 02 714 93 33
Fax: 02 714 93 34
E-Mail: tech@tiptel.be
Internet: www.tiptel.be

Tiptel GmbH

Ricoweg 30/B1
2351 Wiener Neudorf
Österreich
Tel.: 02236 677 464-0
Fax: 02236 677 464-22
E-Mail: office@tiptel.at
Internet: www.tiptel.at

Tiptel B.V.

Camerastraat 2
1322 BC Almere
Nederlands
Telefoon: 036 53 666 50
Fax: 036 53 678 81
e-mail: info@tiptel.nl
Internet: www.tiptel.nl

Tiptel s.a.r.l.

23, avenue René Duguay-Trouin
78960 Voisins-le-Bretonneux
France
Tél.: 01 39 44 63 30
Fax: 01 30 57 00 29
e-mail: support@tiptel.fr
Internet: www.tiptel.fr

(en) 06/2017

