

AUS GUTEM GRUND
GRUNDIG

VACUUM CLEANER
VCH 9530



EN





A

B

C

D

E

F

G

SAFETY

Please read this instruction manual thoroughly prior to using this appliance! Follow all safety instructions in order to avoid damages due to improper use!

Keep the instruction manual for future reference. Should this appliance be given to a third party, then this instruction manual must also be handed over.

- Always keep hair, clothing and any other utensils away from the appliance during operation in order to prevent injury and damages.
- The appliance is designed for domestic use only. Warranty will be voided if the appliance is used for industrial or commercial purposes.
- Observe these instructions in order to prevent damage to the appliance or danger arising from improper use.
- Do not use on wet surfaces and do not attempt to use on wet objects.
- Do not use the appliance in wet surroundings.
- Do not use the appliance with wet hands.
- This appliance is designed for vacuuming dirt and dust particles. Do not attempt to use it on large objects which could block and damage the appliance.
- Do not use to clean cigarette stubs, ash from a fireplace or matches. This could cause a fire.
- This appliance is not designed for cleaning people or animals.
- Do not insert any foreign objects into the suction intake. Always keep the suction intake free of all objects.
- Never operate the appliance without the filter.
- Clean the filter when necessary.
- Only use original GRUNDIG accessories when replacing parts.
- Check if the mains voltage on the rating label corresponds to your local mains supply.
- Always pull out the power cord after the charging process, before cleaning or carrying out any maintenance on the appliance or the charging unit.
- Avoid using extension cables or multipoint connectors. Plug the appliance directly in a wall socket if possible.

SAFETY

- For additional protection, this appliance should be connected to a household residual current device with a maximum rating of 30 mA. Consult your electrician for advice.
- Do not disconnect the plug by pulling on the cable.
- Never use the appliance if it or the power cord is visibly damaged. This also applies if the appliance has accidentally become wet. Please contact a service centre in this case.
- Our GRUNDIG Household Appliances meet all applicable safety standards; thus if the appliance or the power cord is damaged, it must be replaced by the dealer, a service centre or a similarly qualified and authorised service person to avoid any danger arising. Faulty or unqualified repair work may cause danger and risk to the user.
- Keep the appliance away from children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not dismantle the appliance under any circumstances. No warranty claims are accepted for damage resulting from improper handling.
- Do not use the appliance if the air duct and the ventilation slot are blocked. Always keep the air duct and ventilation slot free of dirt, hair and any other elements which could obstruct or block the air flow.
- Only use the power cord provided.

OVERVIEW

Dear Customer,

Congratulations on the purchase of your new GRUNDIG rechargeable stick vacuum cleaner VCH 9530.

Please read the following user notes carefully to ensure you can enjoy your quality GRUNDIG product for many years to come.

A responsible approach!



GRUNDIG focuses on contractually agreed social working conditions with fair wages for both internal employees and suppliers, as well as on the efficient use of raw materials with continual waste reduction of several tonnes of plastic each year – and availability of at least 5 years for all accessories.

For a future worth living.
For a good reason. Grundig.

HEPA filter

HEPA stands for High Efficiency Particulate Air. HEPA filters are particulate air filters, which filter more than 99.9% of all dust particles larger than 0.1 to 0.3 micrometres out of the air. Viruses, respirable dusts, mite eggs and mite excrement, pollen, smoke particles, asbestos, bacteria, diverse toxic dusts and aerosols are removed from the air.

Controls and parts


See the figure on Page 3.

- A** Handle
- B** On/Off button
- C** Handle folding button
- D** Body
- E** Power indicator LEDs
- F** Brush removal button
- G** Brush

PREPARATION


Installing the parts

Lift the handle **A** and bring it to the vertical position till it clicks.

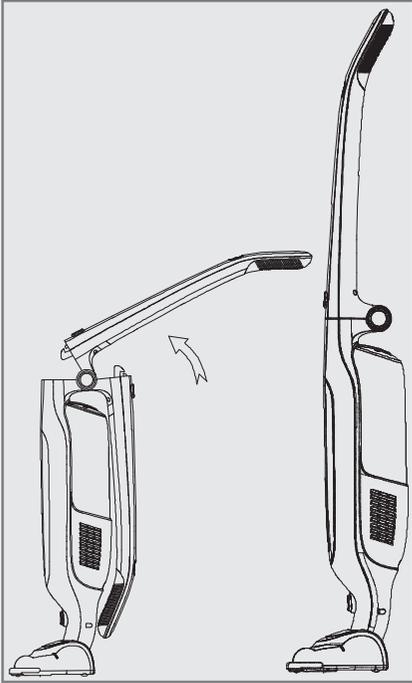

Place the body **D** in a way to match with the slot on the brush. Attach the brush till it clicks.

Press brush removal button to remove the body **D** from the brush.

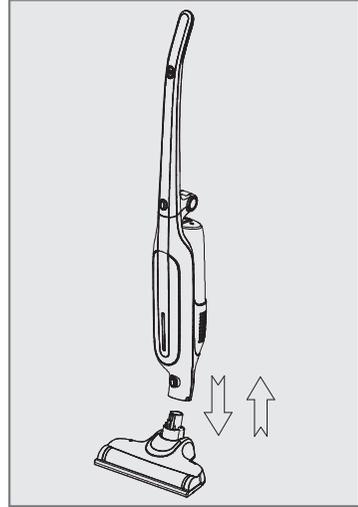

Charging the appliance


Note

- For the first 3 uses, charge the appliance for 12 hours.
- For the following uses, you can charge the appliance for 5 hours.
- When the vacuum cleaner is in power shortage, red light on the indicator board will be flashing. Appliance needs to be charged promptly.

PREPARATION

1 Attach the thin tip of the charging adapter to the charging port on the body **D** and then plug the charging adapter in the socket.

2 Remove the thin tip of the charging adapter and unplug it from the socket.

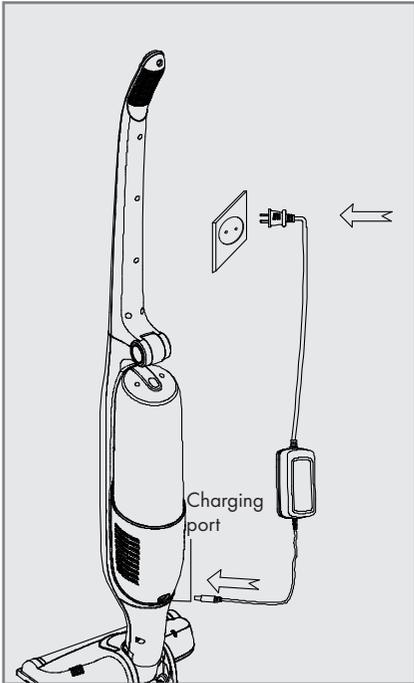

- Charge indicator LEDs **E** flash white.
- When the charge indicator LED **E** light white constantly, charging is completed.

OPERATION

Switching on and off your appliance

Press On/Off button **B** to switch on and off the appliance.

Note

- During operation the LEDs **E** on the body light up white, LED at the brush lights up blue.

Warning:

- While charging, the appliance will not start to operate even if you press On/Off button **B**.
- When a big object is trapped by the brush, the appliance is switched off automatically for your safety.

CLEANING AND MAINTENANCE

Cleaning the dust container


Notes

- It is recommended to clean the dust container after every use.


Warning

- Do not clean the appliance while it is running.


- 1 Press the dust container removal button to remove the dust container.

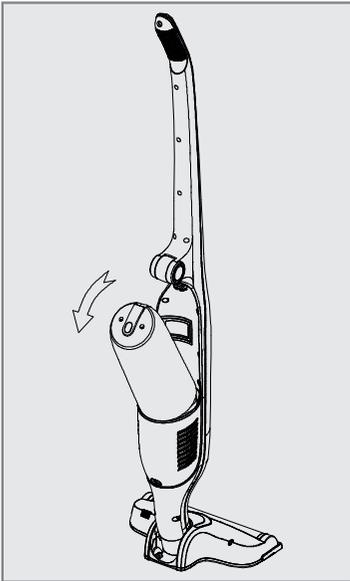

- 2 Remove the filter from the dust container.

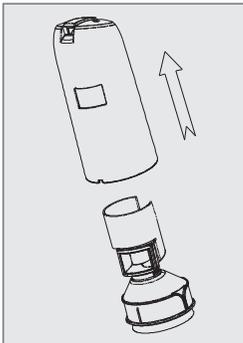


- 3 Empty the full dust container into a bin.
- 4 Separate HEPA filter, sponge filter and cyclone element.

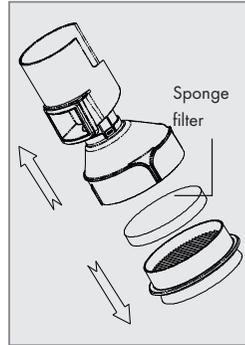

- 5 Clean the cyclonic filter, HEPA, sponge filter and dust container under the running water.
- 6 Clean the body  of the appliance with a soft damp cloth.
- 7 After all parts are dried, place the HEPA and sponge filter into the cyclonic filter.
- 8 Place the cyclonic filter into the dust container.
- 9 Place the dust container into the body of the appliance.


Cleaning the brush

- 1 Open the cover by using a screwdriver.

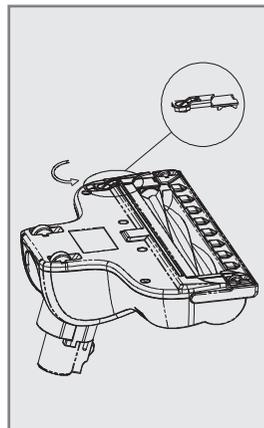

CLEANING AND MAINTENANCE

- 2 Remove the cover, pull out the brush and clean it.

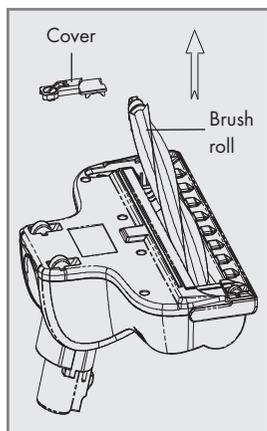


- 3 After cleaning and drying the brush roll, re-attach it and secure the cover again with a screwdriver.

Storage

Store the appliance in a vertical position or with its handle folded.

- 1 If you want to store the appliance with its handle folded, press the handle folding button  and fold the handle downwards.

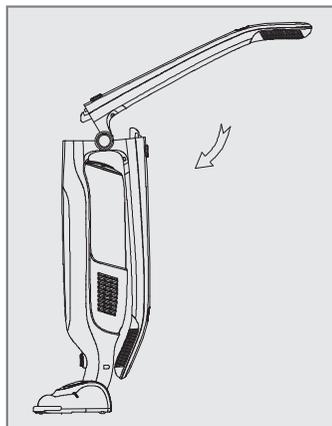

INFORMATION

Troubleshooting

Problem	Possible reason/cause	Solution
Appliance does not work.	The battery may be flat.	Charge it.
Suction power is getting weaker.	The dust container may be full.	Empty the dust container.
	HEPA filter may be blocked.	Clean or replace HEPA filter.
	Air vent or brush may be blocked.	Clean the brush.
The appliance is not charging.	The power cable may not be plugged in.	Plug in the power cord to the socket.
	You may have forgotten to attach the thin tip of the charging adapter to the charging port.	Attach the thin tip of the charging adapter to the charging port.
The appliance stays in operation for a very short time after being charged.	The appliance may not be charged enough.	Charge the appliance for 5 hours.
	Service life of the battery may be reduced.	Contact your GRUNDIG authorised service.

Environmental note

This product has been manufactured with high-quality parts and materials which can be re-used and are suitable for recycling.



Therefore, do not dispose of the product with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment, where the battery is taken out of the device and disposed separately. This is indicated by this symbol on the product, in the operating manual and on the packaging.

Please consult your local authorities to find out where the nearest collection point is.

Help protect the environment by recycling used products.

Technical data



This appliance complies with the European Directives 2004/108/EC, 2006/95/EC, 2009/125/EC and 2011/65/EU.

Power supply

Input: 100 - 240 V ~, 50/60 Hz 400mA

Adapter output: 47.5VDC 350mA

Charge duration: 5 hours

Operation time: Up to 40min.

Charger cable length: 2.9 m

Dust capacity: 0,65 L

Battery voltage: 36 V

Batteries: NiMH-AA 1500 mAh



Isolation class: II

Technical and design modifications reserved.

FOR A GOOD REASON

GRUNDIG

Grundig Intermedia GmbH
Beuthener Strasse 41
D-90471 Nürnberg

www.grundig.com
72011 909 7300 15/14