



Lenovo
IDEACENTRE

IdeaCentre AIO i (27", 11)

For Barcode Position Only

Printed in China
PN: SP41K69628

Lenovo

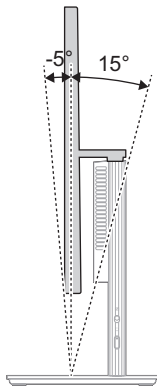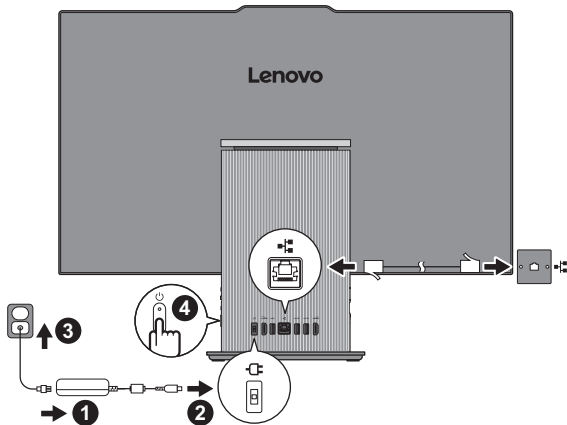


Turn to *User Guide* for USB transfer rates and more product information. |
請參閱使用手冊以了解 USB 傳輸率以及更多產品資訊。|
USB 転送速度および製品情報については、ユーザー・ガイドをご覧ください。|
USB 전송 속도 및 추가 제품 정보에 대해 알아보려면 *사용 설명서*를 참조하십시오.



Wireless charging*

無線充電* | ワイヤレス充電* | 무선 충전*

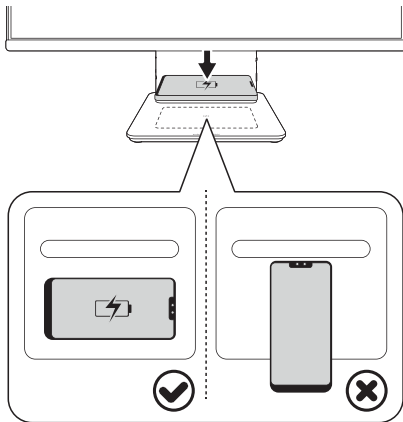

i

Place the phone horizontally on the center of the wireless charging pad to activate wireless charging. |

將手機水平放在無線充電墊的中央，以啟動無線充電。|

電話をワイヤレス充電パッドの中央に水平に置き、ワイヤレス充電をアクティブ化します。|

무선 충전을 활성화하려면 무선 충전 패드 중앙에 휴대폰을 수평으로 놓습니다.


★

For selected models | 選配 | 一部のモデル | 일부 모델의 경우



User Guide Access

使用手冊存取 | ユーザー・ガイドへのアクセス | 사용 설명서 액세스

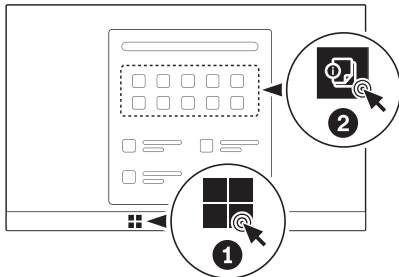

Reduce

Reuse

Recycle



For FSC Mix logo only

First Edition
(January 2026)

© Copyright Lenovo 2026.

Lenovo, the Lenovo logo, IdeaCentre, and the IdeaCentre logo are trademarks of Lenovo. The terms HDMI and HDMI High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.