 


QR-7103

Welcome to BarberBoss and congratulations on your new purchase! Secure your peace of mind by activating your 12-month warranty and claiming an extra 6 months for free at www.barberboss.co.uk/barberboss-product-warranty. Beyond our warranty, you are also covered by your country's legal consumer rights, ensuring complete protection for your purchase.

Product Structure and Accessories

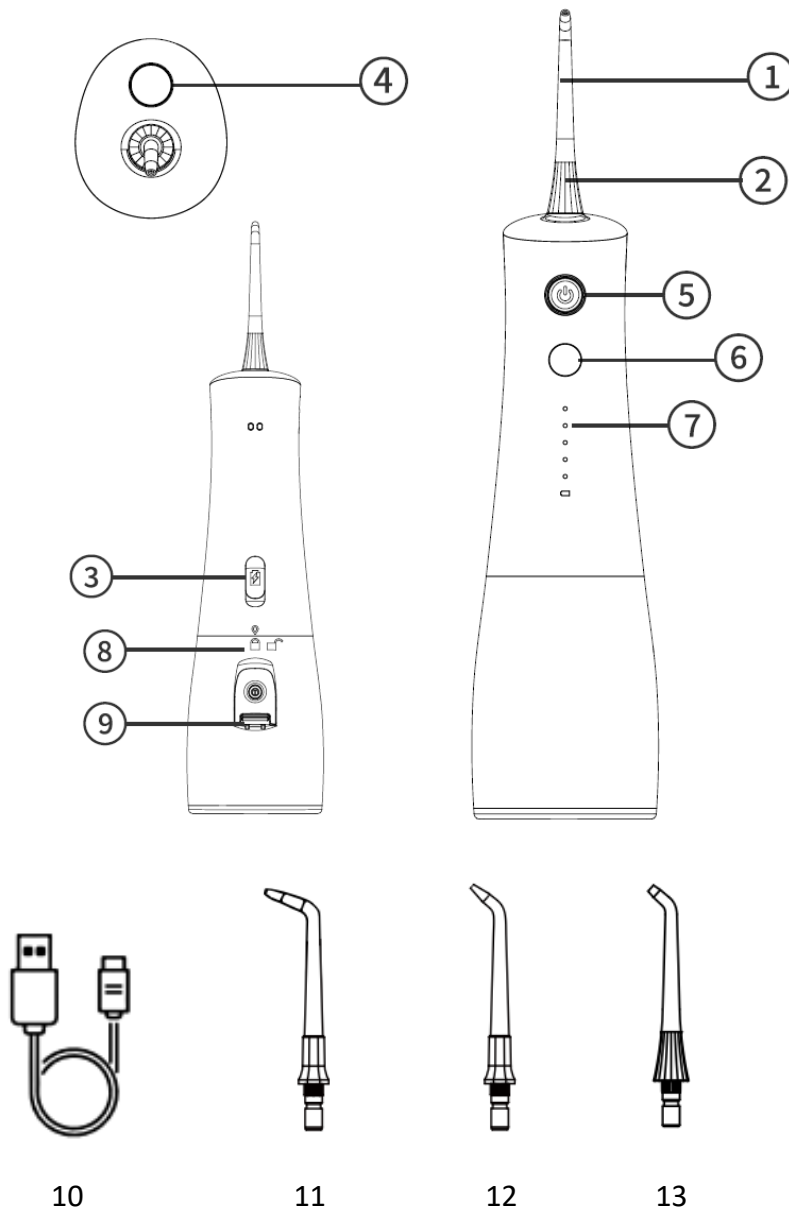

1. Nozzle
2. Nozzle Rotation Dial
3. USB Charging Port
4. Nozzle Release Button

- 5. Power Button
- 6. Mode Selection Button
- 7. Mode Indicator Lights
- 8. Water Tank
- 9. Water Inlet
- 10. USB Charging Cable
- 11. Orthodontic Tip
- 12. Periodontal Tip
- 13. Standard Tip

Product Details

Product Name	QR-7103 Oral Irrigator
Model Number	QR-7103
Charging Input	5V 1.0A
Water Tank Capacity	340ml
Charging Time	6 Hours
Usage Time	Up to 60 Days

What's Included

Water Flosser	x1
Standard Tip	x2
Orthodontic Tip	x1
Periodontal Tip	x1
Charging Cable	x1

Nozzle Tips: Function and Usage

Nozzle Type	Usage	Recommended Replacement Interval
Standard Tip	Ideal for everyday cleaning and removing food debris between teeth and gums.	Every 3 Months
Orthodontic Tip	Designed for cleaning around braces, brackets, and other orthodontic devices.	Every 3 Months
Periodontal Tip	Gently cleans deep below the gumline to treat gum disease and improve health.	Every 3 Months

Instructions For Use

1. Power On/Off:

- **Start Flossing:** Insert the tip, then press the power button to begin irrigating. The device has a 2-minute auto-stop timer or can be turned off manually by pressing the power button again.
- **Turn Off:** Once finished, press the power button to turn off the device.
- **Empty and Drain:** Empty any remaining water from the tank, then run the device for 2-3 seconds to drain residual water.

2. Inserting and Removing the Nozzle:

- Insert the nozzle into the top of the water flosser handle, pressing firmly until a clicking sound is heard, confirming it is securely inserted in place (Figure 1).
- To remove the nozzle, press the nozzle tip release button and gently pull the nozzle out (Figure 1).
- **Note:**
 - Do not press the tip release button while the device is operating.
 - If the nozzle head doesn't spray water immediately after turning on the device (particularly after first use or long periods of inactivity), follow steps:
1. Add a small amount of water to the tip insertion area (Figure 2). 2. Insert a new tip and press the power button to activate the device.

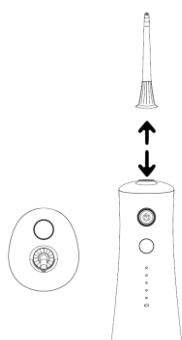


Figure 1

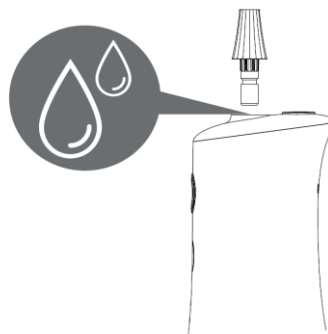


Figure 2

3. Installing and Filling the Water Tank:

- Open the water tank cap, fill with water, and close the cap securely (Figure 3).
- To detach or attach the water tank, simply twist it:
 - Place the device on a flat surface.
 - Hold the water tank with your left hand and twist the upper part to the right with your right hand to detach.
 - To reattach, twist in the opposite direction.
- **Note:** Use water or a dental professional-recommended solution only when filling the tank.

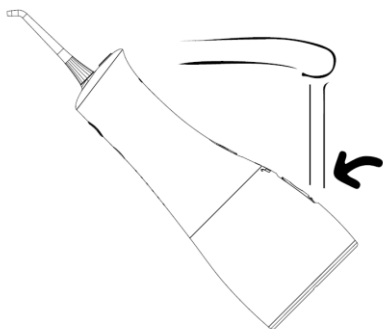


Figure 3

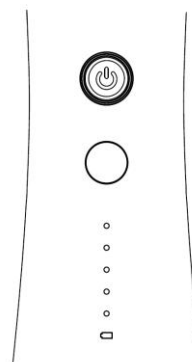


Figure 4

4. Pressure Mode Settings:

This water flosser offers 5 pressure modes, easily adjustable by pressing the Mode Selection button (Figure 4) below power button. The pressure settings are as follows:

- **Soft:** Ideal for beginners with gentle water pressure.
- **Medium:** Daily efficient cleaning.
- **Strong:** Strong water pressure for tough stains.
- **Custom:** Switch to Custom Mode, turn on the device, and hold the mode button until the indicator flashes. The water pressure will increase through 7 levels—release the button at your desired setting to save it.
- **Jet:** Easy to use, water flows only when pressing the on/off button.

Note: Check the set mode with the corresponding mode indicator light.

5. Travel Lock:

To enable or disable the travel lock, press and hold the power button for 5 seconds until all indicator lights flash once.

6. How To Charge:

Connect the provided USB cable directly to the device. Then plug the USB into a 5V1A USB adapter. The product must be charged via a laptop/computer/power bank/USB port (Figure 5). After charging remove the power plug from the USB outlet and then remove the USB out of the product.

- Charge the product fully before you use it for the first time and after a long period of disuse.
- Make sure the device is switched OFF before charging.
- The LED light will light up, confirming the charging process has begun.
- A full charge takes about 6 hours, providing up to 60 days of operation. For optimal performance, it's best to use the device when fully charged.

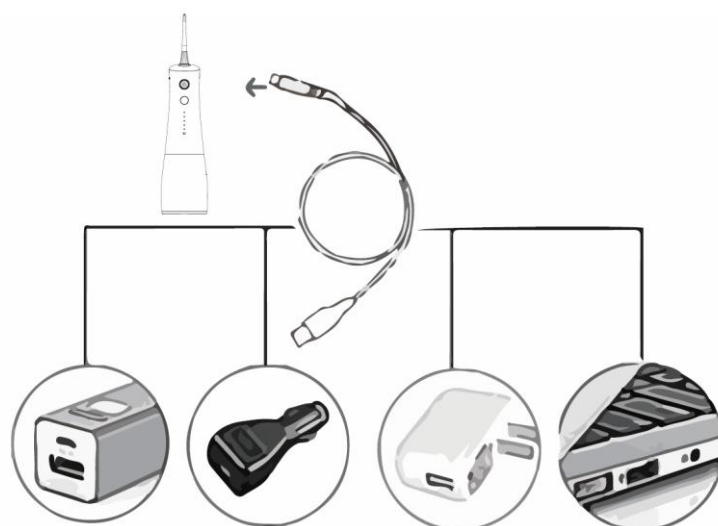 


Figure 5

Cleaning & Maintenance

Please note: Although this appliance is waterproof (IPX8 rating), do not submerge it in water or any other liquid for extended periods beyond the specified depth and duration. To maintain optimal performance and longevity, make sure that the product is cleaned and thoroughly dried before its next use.

- Before cleaning, ensure the device is switched OFF and disconnected from any charging cables.
- Empty the water tank after each use and run the device for 2-3 seconds to drain any remaining water and prevent bacteria buildup.
- Always use only water or neutral cleaning agents to clean the appliance. Never use caustic or abrasive substances (e.g., vinegar, limescale removers) as they may damage the device.
- Keep the appliance away from high temperatures and direct sunlight.
- Do not submerge the device in water or any other liquid for extended periods.
- Wipe the device with a soft cloth and mild, non-abrasive cleaner when necessary.
- Clean the water tank with soapy water, use a brush to remove any dirt, and wipe it dry.
- Ensure the water tank is completely dry before storing the device for long periods.

Precautions

Charging:

- Ensure the device is powered off before connecting the charging cable. Do not pull on the power cord or the device forcefully.
- Always connect the power cord to the product first, then plug it into the power outlet.
- If the USB cable accidentally falls into the water, unplug the adapter first before retrieving the product.
- Do not unplug the adapter with wet hands.

- Only use the device with the specified voltage system on the device or charger to prevent damage
- Prevent overcharging by unplugging the device once it reaches the designated charging time.
- Always keep the product away from water sources while charging. Avoid charging near baths, sinks, or any liquid containers.
- Do not charge the device on soft surfaces like beds or beddings, especially in enclosed spaces. Should the product overheat during charging, disconnect it immediately.
- Avoid charging in high-temperatures areas or near open flames to reduce fire risks.
- Do not damage, break, or modify the USB cable. Avoid excessive stretching, bending, or twisting, and do not place heavy objects on it or trap it between objects.
- If the power cord becomes damaged, replace it only with compatible cords or components from the original manufacturer.

Usage:

- This product is designed solely for cleaning gums and teeth. Do not use it for any other purpose.
- Do not use the product if you lose the nozzle and use only recommended tips and accessories.
- Avoid pressing the nozzle too firmly against teeth or gums to prevent injury.
- People suffering from tooth or gum pain may not be able to use the appliance and should consult their dentist before use.
- Do not use the device if you have open wounds in the mouth or on the tongue.
- Keep your mouth closed while using the device to prevent water splashing. Do not rinse teeth from a distance or direct water onto your body or face.
- Do not insert any foreign object into any opening on the product.
- Do not use the product outdoors, near aerosol sprays, or in areas where oxygen is being administered.
- Do not use iodine, saline (salt solution), or water insoluble concentrated essential oils in this product. Use of these can reduce performance and shorten lifespan of the product and may void warranty.
- Remove any oral jewellery prior to use of this product.
- If the device malfunctions or is damaged, immediately power it off and avoid unauthorised disassembly.
- This device is waterproof (IPX8 Rating) however do not submerge it in water or any other liquid for extended periods to prevent malfunctioning, fire, electric shock or explosion.
- Ensure the product is completely dry before storing it to maintain functionality.
- We recommend avoiding storage in damp, humid areas or high temperatures. Do not expose the product to fire or extreme heat.

Safety:

- This appliance can be used by children above 8 years of age however supervision is recommended to ensure safe operation. Always store the device out of reach of unsupervised children to prevent any accidental harm.
- Children should not play with the device as this appliance is not a toy.

- Do not direct water under the tongue, into the ear, nose or other delicate areas. This device is capable of producing high water pressure that may cause serious damage in these areas. Also, the deadly amoeba, naegleria fowleri, may be present in some tap water or non-chlorinated well water and could be fatal if directed into these areas.
- Keep the appliance, cable, nozzle out of reach of children under 8 years. The nozzle is small enough to be swallowed and can be lodged in the throat.
- To prevent the battery from heating up or releasing toxic and harmful substances, never open, modify, damage or disassemble the product or battery.

Troubleshooting:

Question	Causes	Solutions
Water tank leaks	Seal ring is abnormal	Remove the seal ring and reinstall
Low water pressure	Low battery	Recharge the device
	Nozzle head blocks	Replace with the new nozzle head
	Dirt or debris stuck in nozzle	
Lasts only few minutes even after full charge	Dead battery	Contact service centre for support
	Insufficient charging time	Charge the unit for at least 6 hours
	Charging cord damaged	Try charging the device with a new charging cable
	Adapter broken	Try the new adapter
Motor makes sound but water doesn't come out	Water tank is empty	Fill the water tank
	Suction valve dislocation	Keep device on, fill water to the hole where nozzle head goes into
	Nozzle head blocks	Replace with new tips
Motor doesn't make sound	Low Battery	Activate the battery by charging the unit for more than 16 hours
Product stopped working suddenly	Overheating protection is activated (continuously used 5 tanks of water with highest pressure)	Excessive heat will cause the device to stop. Switch off the device, cool for 2 hours, and restart
	Product 2-minute anti-mistouch design	Reboot to use

Environmental Protection and Recycling

Safe Appliance Disposal

This device contains a Lithium battery. At the end of its working life, the battery must not be disposed of as urban waste. It must be taken to a special authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal. This enables the constituent materials to be recovered to obtain significant savings in energy and resources.

As mentioned, the built-in rechargeable battery in this product contains substances that could be harmful to the environment. To ensure the responsible disposal and recycling of the device, please follow your country's rules for the separate collection of electrical products and batteries, or refer to the following steps:

1. Activate the device's power switch and let it run until it stops functioning, ensuring the battery is entirely drained.
2. Before disassembling the device and removing its battery, always ensure the device is powered off and disconnected from any power sources.
3. Once the battery has been extracted, never reconnect the device to its charger. Additionally, be cautious to avoid causing a short circuit between the battery's positive and negative terminals.
4. Then follow local authority guidelines to dispose of the removed battery.



Accessories

Need replacement parts? Lost something? Accessories can be purchased via our website www.barberboss.co.uk/shop.

Customer Service

For assistance visit our website: www.barberboss.co.uk or email us at care@barberboss.co.uk. You can also call or WhatsApp us on 0800 612 6688 (Or +44800 612 6688 If contact from outside the UK). Alternatively, head to our YouTube for some helpful tips/guides www.youtube.com/@BarberBossUK.

