

# Technical Manual



## MDT Energy Meter

EZ-0320.01

EZ-0363.01

### Further Documents:

**Datasheet:**

[https://www.mdt.de/EN\\_Downloads\\_Datasheets.html](https://www.mdt.de/EN_Downloads_Datasheets.html)

**Assembly and Operation Instructions:**

[https://www.mdt.de/EN\\_Downloads\\_Instructions.html](https://www.mdt.de/EN_Downloads_Instructions.html)

**Solution Proposals for MDT products:**

[https://www.mdt.de/EN\\_Downloads\\_Solutions.html](https://www.mdt.de/EN_Downloads_Solutions.html)

## 1 Content

|          |                                                     |           |
|----------|-----------------------------------------------------|-----------|
| <b>2</b> | <b>Overview .....</b>                               | <b>3</b>  |
| 2.1      | Overview devices .....                              | 3         |
| 2.2      | Special functions .....                             | 4         |
| 2.3      | Exemplary Circuit Diagram .....                     | 5         |
| 2.3.1    | Energy meter with direct measurement .....          | 5         |
| 2.3.2    | Energy meter with transformer measurement .....     | 5         |
| 2.4      | Structure & Handling .....                          | 6         |
| 2.5      | Commissioning .....                                 | 6         |
| <b>3</b> | <b>Communication objects .....</b>                  | <b>7</b>  |
| 3.1      | Standard settings of the communication objects..... | 7         |
| <b>4</b> | <b>Reference ETS-Parameter .....</b>                | <b>13</b> |
| 4.1      | General settings.....                               | 13        |
| 4.2      | Total consumption.....                              | 18        |
| 4.2.1    | Power measurement .....                             | 18        |
| 4.2.2    | Energy and cost meter .....                         | 22        |
| 4.3      | Total generated.....                                | 26        |
| 4.3.1    | Power measurement .....                             | 26        |
| 4.3.2    | Energy and yield meter .....                        | 30        |
| 4.4      | Consumption L1 ... L3 .....                         | 34        |
| 4.4.1    | Power measurement .....                             | 34        |
| 4.4.2    | Current measurement .....                           | 38        |
| 4.4.3    | Voltage measurement .....                           | 41        |
| 4.4.4    | Energy and cost meter .....                         | 44        |
| 4.5      | Generation L1 ... L3.....                           | 48        |
| 4.5.1    | Power measurement .....                             | 48        |
| 4.5.2    | Current measurement .....                           | 51        |
| 4.5.3    | Energy and yield meter .....                        | 54        |
| <b>5</b> | <b>Index.....</b>                                   | <b>58</b> |
| 5.1      | Register of illustrations.....                      | 58        |
| 5.2      | List of tables.....                                 | 59        |
| <b>6</b> | <b>Appendix .....</b>                               | <b>60</b> |
| 6.1      | Statutory requirements .....                        | 60        |
| 6.2      | Disposal .....                                      | 60        |
| 6.3      | Assembly .....                                      | 60        |
| 6.4      | History.....                                        | 60        |

## 2 Overview

### 2.1 Overview devices

The description refers to the following devices (order number in bold):

- **EZ-0320.01 Energy Meter 3-channel 20 A, direct measurement, 4SU MDRC, 230/400 V AC, 50 Hz**
  - Industrial version, direct current measurement up to 20 A
  - 3-phase bidirectional meter for active energy
  - Separate recording of energy consumption and fed-in energy
  - Main and intermediate counter, as well as operating hours counter
  
- **EZ-0363.01 Energy Meter 3-channel 63 A, transformer measurement, 4SU MDRC, 230/400 V AC, 50 Hz**
  - Industrial version, transformer measurement up to 63 A
  - 3-phase bidirectional meter for active energy
  - Separate recording of energy consumption and fed-in energy
  - Main and intermediate counter, as well as operating hours counter

## 2.2 Special functions

### Power measurement

The active power can be recorded in watts or kilowatts per channel and total and can be output via object. The measured active power is the basis for monitoring load exceedances and load undercuts, which can be further processed as 1-bit status objects. In addition to the active power, the output of the reactive power, apparent power and the power factor  $\cos \Phi$  can be activated.

### Current measurement

The current value can be output per channel in milliamperes or amperes. Current exceedances and undercuts can be monitored. The thresholds, hysteresis and minimum duration of the exceedances/undercuts are adjustable.

### Voltage measurement

The voltage is output per channel as a 4-byte object. Exceedances and undercuts of a voltage value can be monitored. The thresholds, hysteresis and minimum duration of the exceedances/undercuts are adjustable.

### Energy and cost meter/Yield meter

The balancing main and intermediate meters can be activated by channel - separately for consumption and generation - and can be set extensively. To determine costs and yields, the electricity and feed-in rates can either be entered as fixed values in euros or cents or transmitted as variable values via object (day and night rates). Switching between the day and night rates can be done via object or by time.

### Events

Up to two events can be activated in each meter. An event is triggered as soon as a selected condition is met. The condition can be a reached value of a (main) meter, certain costs of a (main) meter, a time, or an interval. The triggered event then performs functions such as sending and/or resetting a meter reading.

### Long Frame Support

The MDT Energy Meter supports "Long Frames" (longer telegrams). These contain more user data per telegram, which significantly reduces the programming time with the ETS.

## 2.3 Exemplary Circuit Diagram

### 2.3.1 Energy meter with direct measurement

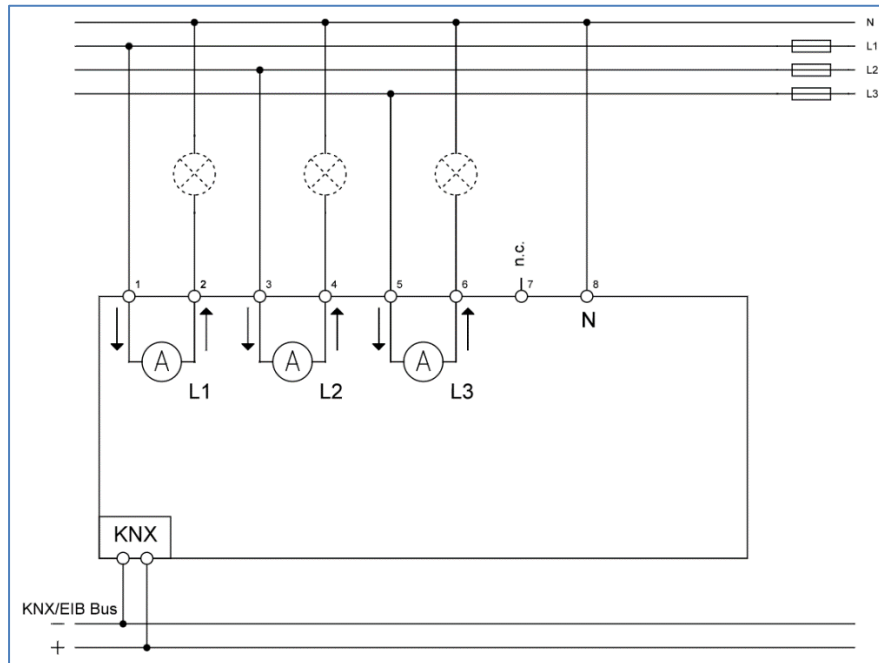


Figure 1: Exemplary circuit diagram EZ-0320.01

### 2.3.2 Energy meter with transformer measurement

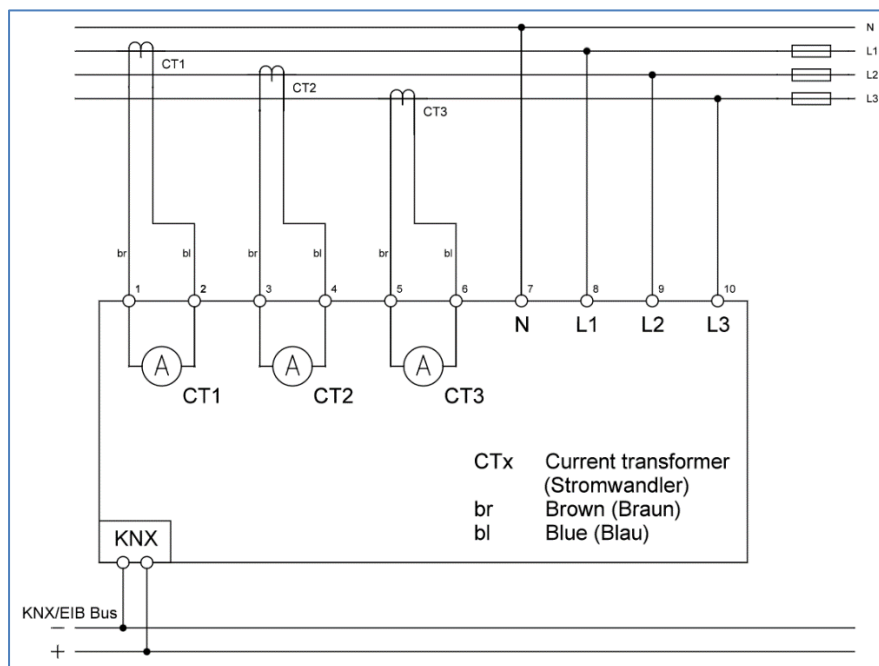
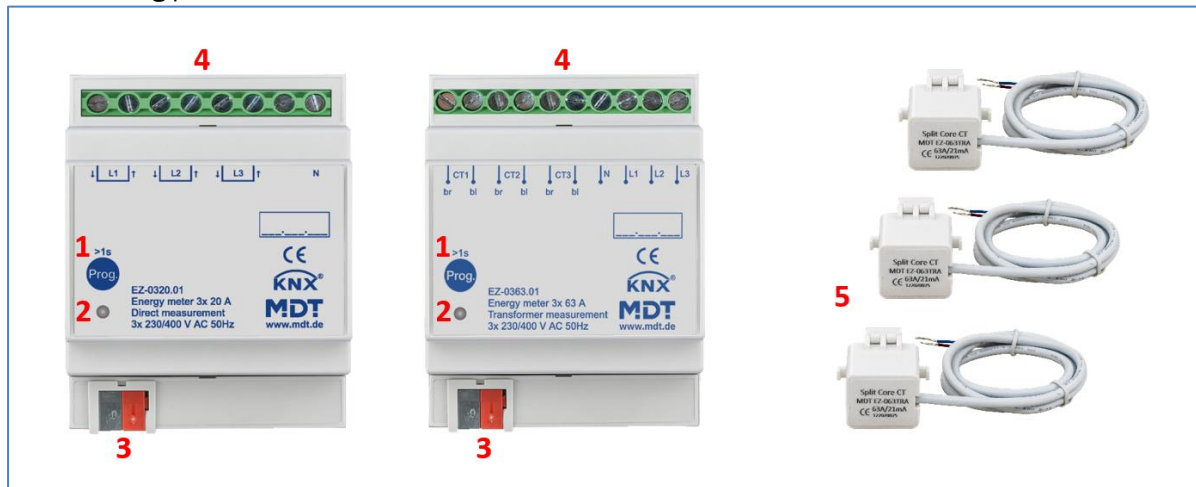


Figure 2: Exemplary circuit diagram EZ-0363.01

## 2.4 Structure & Handling

The following picture shows the structure of the device:



**Figure 3: Structure & Handling**

- |                             |                                          |
|-----------------------------|------------------------------------------|
| 1 – Programming button      | 4 – Connection terminals                 |
| 2 – Programming-LED         | 5 – Current transformer (for EZ-0363.01) |
| 3 – Bus connection terminal |                                          |

## 2.5 Commissioning

After wiring the unit, the physical address is assigned, and the application is programmed:

- (1) Connect the interface with the bus, e.g. MDT USB Interface.
- (2) Connect mains voltage.
- (3) Switch on bus voltage.
- (4) Press the programming button at the device >1s (red programming LED lights).
- (5) Loading of the physical address out of the ETS-Software by using the interface (red LED goes off as soon as this process was completed successfully).
- (6) Loading of the application, with requested parameterization.
- (7) If the device is enabled you can test the requested functions (also possible by using the ETS-Software).

## 3 Communication objects

### 3.1 Standard settings of the communication objects

| Standard settings – Central objects |                  |                     |        |   |   |   |   |   |
|-------------------------------------|------------------|---------------------|--------|---|---|---|---|---|
| No.                                 | Name             | Object function     | Length | C | R | W | T | U |
| 0                                   | Central function | Operation           | 1 Bit  | X | X |   | X |   |
| 1                                   | Central function | Day = 1 / Night = 0 | 1 Bit  | X |   | X | X | X |
| 1                                   | Central function | Day = 0 / Night = 1 | 1 Bit  | X |   | X | X | X |
| 2                                   | Central function | Time                | 3 Byte | X |   | X | X | X |
| 3                                   | Central function | Voltage error       | 1 Bit  | X |   |   | X |   |
| 4                                   | Dummy            |                     |        |   |   |   |   |   |

**Table 1: Communication objects – Central objects**

| Standard settings – Total consumption |                                       |                        |        |   |   |   |   |   |
|---------------------------------------|---------------------------------------|------------------------|--------|---|---|---|---|---|
| No.                                   | Name                                  | Object function        | Length | C | R | W | T | U |
| 5                                     | Total consumption                     | Active power (W)       | 4 Byte | X | X |   | X |   |
| 5                                     | Total consumption                     | Active power (kW)      | 2 Byte | X | X |   | X |   |
| 6                                     | Dummy                                 |                        |        |   |   |   |   |   |
| 7                                     | Dummy                                 |                        |        |   |   |   |   |   |
| 8                                     | Dummy                                 |                        |        |   |   |   |   |   |
| 9                                     | Total consumption                     | Load undercut          | 1 Bit  | X | X |   | X |   |
| 10                                    | Total consumption                     | Load exceedance 1      | 1 Bit  | X | X |   | X |   |
| 11                                    | Total consumption                     | Load exceedance 2      | 1 Bit  | X | X |   | X |   |
| 12                                    | Total consumption                     | Load exceedance 3      | 1 Bit  | X | X |   | X |   |
| 13                                    | Total consumption: Intermediate meter | Active energy (Wh)     | 4 Byte | X | X |   | X |   |
| 13                                    | Total consumption: Intermediate meter | Active energy (kWh)    | 4 Byte | X | X |   | X |   |
| 14                                    | Total consumption: Intermediate meter | Costs in Euro - Output | 2 Byte | X | X |   | X |   |
| 14                                    | Total consumption: Intermediate meter | Costs in Euro - Output | 4 Byte | X | X |   | X |   |
| 14                                    | Total consumption: Intermediate meter | Costs in Cent - Output | 2 Byte | X | X |   | X |   |
| 14                                    | Total consumption: Intermediate meter | Costs in Cent - Output | 4 Byte | X | X |   | X |   |
| 15                                    | Total consumption: Intermediate meter | Meter reading Day      | 4 Byte | X | X | X | X |   |

|    |                                       |                                   |        |   |   |   |   |  |
|----|---------------------------------------|-----------------------------------|--------|---|---|---|---|--|
| 16 | Total consumption: Intermediate meter | Meter reading Night               | 4 Byte | X | X | X | X |  |
| 17 | Total consumption: Intermediate meter | Reset                             | 1 Bit  | X |   | X |   |  |
| 18 | Total consumption: Main meter         | Active energy (kWh)               | 4 Byte | X | X |   | X |  |
| 19 | Total consumption: Main meter         | Costs in Euro - Output            | 2 Byte | X | X |   | X |  |
| 19 | Total consumption: Main meter         | Costs in Euro - Output            | 4 Byte | X | X |   | X |  |
| 19 | Total consumption: Main meter         | Costs in Cent - Output            | 2 Byte | X | X |   | X |  |
| 19 | Total consumption: Main meter         | Costs in Cent - Output            | 4 Byte | X | X |   | X |  |
| 20 | Total consumption: Main meter         | Meter reading Day                 | 4 Byte | X | X | X | X |  |
| 21 | Total consumption: Main meter         | Meter reading Night               | 4 Byte | X | X | X | X |  |
| 22 | Total consumption: Main meter         | Reset                             | 1 Bit  | X |   | X |   |  |
| 23 | Total consumption                     | Event A                           | 1 Bit  | X |   |   | X |  |
| 24 | Total consumption                     | Event B                           | 1 Bit  | X |   |   | X |  |
| 25 | Consumption: Electricity price Day    | Electricity rate in Euro - Input  | 2 Byte | X |   | X |   |  |
| 25 | Consumption: Electricity price Day    | Electricity rate in Euro - Input  | 4 Byte | X |   | X |   |  |
| 25 | Consumption: Electricity price Day    | Electricity rate in Cent - Input  | 2 Byte | X |   | X |   |  |
| 25 | Consumption: Electricity price Day    | Electricity rate in Cent - Input  | 4 Byte | X |   | X |   |  |
| 26 | Consumption: Electricity price Night  | Electricity rate in Euro - Input  | 2 Byte | X |   | X |   |  |
| 26 | Consumption: Electricity price Night  | Electricity rate in Euro - Input  | 4 Byte | X |   | X |   |  |
| 26 | Consumption: Electricity price Night  | Electricity rate in Cent - Input  | 2 Byte | X |   | X |   |  |
| 26 | Consumption: Electricity price Night  | Electricity rate in Cent - Input  | 4 Byte | X |   | X |   |  |
| 27 | Consumption: Actual electricity price | Electricity rate in Euro - Output | 2 Byte | X | X |   | X |  |
| 27 | Consumption: Actual electricity price | Electricity rate in Euro - Output | 4 Byte | X | X |   | X |  |
| 27 | Consumption: Actual electricity price | Electricity rate in Cent - Output | 2 Byte | X | X |   | X |  |
| 27 | Consumption: Actual electricity price | Electricity rate in Cent - Output | 4 Byte | X | X |   | X |  |

**Table 2: Communication objects – Total consumption**

### Standard settings – Total generated

| No. | Name                                | Object function                   | Length | C | R | W | T | U |
|-----|-------------------------------------|-----------------------------------|--------|---|---|---|---|---|
| 29  | Total generated                     | Active power (W)                  | 4 Byte | X | X |   | X |   |
| 29  | Total generated                     | Active power (kW)                 | 2 Byte | X | X |   | X |   |
| 30  | Total generated                     | Load undercut                     | 1 Bit  | X | X |   | X |   |
| 31  | Total generated                     | Load exceedance 1                 | 1 Bit  | X | X |   | X |   |
| 32  | Total generated                     | Load exceedance 2                 | 1 Bit  | X | X |   | X |   |
| 33  | Total generated                     | Load exceedance 3                 | 1 Bit  | X | X |   | X |   |
| 34  | Total generated: Intermediate meter | Active energy (Wh)                | 4 Byte | X | X |   | X |   |
| 34  | Total generated: Intermediate meter | Active energy (kWh)               | 4 Byte | X | X |   | X |   |
| 35  | Total generated: Intermediate meter | Actual yield in Euro              | 2 Byte | X | X |   | X |   |
| 35  | Total generated: Intermediate meter | Actual yield in Euro              | 4 Byte | X | X |   | X |   |
| 35  | Total generated: Intermediate meter | Actual yield in Cent              | 2 Byte | X | X |   | X |   |
| 35  | Total generated: Intermediate meter | Actual yield in Cent              | 4 Byte | X | X |   | X |   |
| 36  | Total generated: Intermediate meter | Meter reading Day                 | 4 Byte | X | X | X | X |   |
| 37  | Total generated: Intermediate meter | Meter reading Night               | 4 Byte | X | X | X | X |   |
| 38  | Total generated: Intermediate meter | Reset                             | 1 Bit  | X |   | X |   |   |
| 39  | Total generated: Main meter         | Active energy (kWh)               | 4 Byte | X | X |   | X |   |
| 40  | Total generated: Main meter         | Actual yield in Euro              | 2 Byte | X | X |   | X |   |
| 40  | Total generated: Main meter         | Actual yield in Euro              | 4 Byte | X | X |   | X |   |
| 40  | Total generated: Main meter         | Actual yield in Cent              | 2 Byte | X | X |   | X |   |
| 40  | Total generated: Main meter         | Actual yield in Cent              | 4 Byte | X | X |   | X |   |
| 41  | Total generated: Main meter         | Meter reading Day                 | 4 Byte | X | X | X | X |   |
| 42  | Total generated: Main meter         | Meter reading Night               | 4 Byte | X | X | X | X |   |
| 43  | Total generated: Main meter         | Reset                             | 1 Bit  | X |   | X |   |   |
| 44  | Total generated                     | Event A                           | 1 Bit  | X |   |   | X |   |
| 45  | Total generated                     | Event B                           | 1 Bit  | X |   |   | X |   |
| 46  | Generation: Yield Day               | Power supply rate in Euro - Input | 2 Byte | X |   | X |   |   |
| 46  | Generation: Yield Day               | Power supply rate in Euro - Input | 4 Byte | X |   | X |   |   |
| 46  | Generation: Yield Day               | Power supply rate in Cent - Input | 2 Byte | X |   | X |   |   |
| 46  | Generation: Yield Day               | Power supply rate in Cent - Input | 4 Byte | X |   | X |   |   |
| 47  | Generation: Yield Night             | Power supply rate in Euro - Input | 2 Byte | X |   | X |   |   |
| 47  | Generation: Yield Night             | Power supply rate in Euro - Input | 4 Byte | X |   | X |   |   |
| 47  | Generation: Yield Night             | Power supply rate in Cent - Input | 2 Byte | X |   | X |   |   |
| 47  | Generation: Yield Night             | Power supply rate in Cent - Input | 4 Byte | X |   | X |   |   |

|    |                                |                                    |        |   |   |  |   |  |
|----|--------------------------------|------------------------------------|--------|---|---|--|---|--|
| 48 | Generation: Actual yield price | Power supply rate in Euro - Output | 2 Byte | X | X |  | X |  |
| 48 | Generation: Actual yield price | Power supply rate in Euro - Output | 4 Byte | X | X |  | X |  |
| 48 | Generation: Actual yield price | Power supply rate in Cent - Output | 2 Byte | X | X |  | X |  |
| 48 | Generation: Actual yield price | Power supply rate in Cent - Output | 4 Byte | X | X |  | X |  |

**Table 3: Communication objects – Total generated**

| <b>Standard settings – Consumption L1 ... L3</b> |                                    |                        |               |          |          |          |          |          |
|--------------------------------------------------|------------------------------------|------------------------|---------------|----------|----------|----------|----------|----------|
| <b>No.</b>                                       | <b>Name</b>                        | <b>Object function</b> | <b>Length</b> | <b>C</b> | <b>R</b> | <b>W</b> | <b>T</b> | <b>U</b> |
| 50                                               | Consumption L1                     | Active power (W)       | 4 Byte        | X        | X        |          | X        |          |
| 50                                               | Consumption L1                     | Active power (kW)      | 2 Byte        | X        | X        |          | X        |          |
| 51                                               | Consumption L1                     | Current value (A)      | 4 Byte        | X        | X        |          | X        |          |
| 51                                               | Consumption L1                     | Current value (mA)     | 2 Byte        | X        | X        |          | X        |          |
| 52                                               | Consumption L1                     | Voltage value (V)      | 4 Byte        | X        | X        |          | X        |          |
| 53                                               | Consumption L1                     | Reactive power (W)     | 4 Byte        | X        | X        |          | X        |          |
| 53                                               | Consumption L1                     | Reactive power (kW)    | 2 Byte        | X        | X        |          | X        |          |
| 54                                               | Consumption L1                     | Apparent power (W)     | 4 Byte        | X        | X        |          | X        |          |
| 54                                               | Consumption L1                     | Apparent power (kW)    | 2 Byte        | X        | X        |          | X        |          |
| 55                                               | Consumption L1                     | Power factor cos Phi   | 4 Byte        | X        | X        |          | X        |          |
| 56                                               | Consumption L1                     | Load undercut          | 1 Bit         | X        | X        |          | X        |          |
| 57                                               | Consumption L1                     | Load exceedance        | 1 Bit         | X        | X        |          | X        |          |
| 58                                               | Consumption L1                     | Current undercut       | 1 Bit         | X        | X        |          | X        |          |
| 59                                               | Consumption L1                     | Current exceedance     | 1 Bit         | X        | X        |          | X        |          |
| 60                                               | Consumption L1                     | Voltage undercut       | 1 Bit         | X        | X        |          | X        |          |
| 61                                               | Consumption L1                     | Voltage exceedance     | 1 Bit         | X        | X        |          | X        |          |
| 62                                               | Consumption L1: Intermediate meter | Active energy (Wh)     | 4 Byte        | X        | X        |          | X        |          |
| 62                                               | Consumption L1: Intermediate meter | Active energy (kWh)    | 4 Byte        | X        | X        |          | X        |          |
| 63                                               | Consumption L1: Intermediate meter | Costs in Euro - Output | 2 Byte        | X        | X        |          | X        |          |
| 63                                               | Consumption L1: Intermediate meter | Costs in Euro - Output | 4 Byte        | X        | X        |          | X        |          |
| 63                                               | Consumption L1: Intermediate meter | Costs in Cent - Output | 2 Byte        | X        | X        |          | X        |          |
| 63                                               | Consumption L1: Intermediate meter | Costs in Cent - Output | 4 Byte        | X        | X        |          | X        |          |
| 64                                               | Consumption L1: Intermediate meter | Meter reading Day      | 4 Byte        | X        | X        | X        | X        |          |
| 65                                               | Consumption L1: Intermediate meter | Meter reading Night    | 4 Byte        | X        | X        | X        | X        |          |
| 66                                               | Consumption L1: Intermediate meter | Reset                  | 1 Bit         | X        |          | X        |          |          |
| 67                                               | Consumption L1: Main meter         | Active energy (kWh)    | 4 Byte        | X        | X        |          | X        |          |
| 68                                               | Consumption L1: Main meter         | Costs in Euro - Output | 2 Byte        | X        | X        |          | X        |          |
| 68                                               | Consumption L1: Main meter         | Costs in Euro - Output | 4 Byte        | X        | X        |          | X        |          |
| 68                                               | Consumption L1: Main meter         | Costs in Cent - Output | 2 Byte        | X        | X        |          | X        |          |
| 68                                               | Consumption L1: Main meter         | Costs in Cent - Output | 4 Byte        | X        | X        |          | X        |          |
| 69                                               | Consumption L1: Main meter         | Meter reading Day      | 4 Byte        | X        | X        | X        | X        |          |

|            |                            |                     |        |   |   |   |   |  |
|------------|----------------------------|---------------------|--------|---|---|---|---|--|
| 70         | Consumption L1: Main meter | Meter reading Night | 4 Byte | X | X | X | X |  |
| 71         | Consumption L1: Main meter | Reset               | 1 Bit  | X |   | X |   |  |
| 72         | Consumption L1: Meter      | Event A             | 1 Bit  | X |   |   | X |  |
| 73         | Consumption L1: Meter      | Event B             | 1 Bit  | X |   |   | X |  |
| 74         | Dummy                      |                     |        |   |   |   |   |  |
| 75         | Dummy                      |                     |        |   |   |   |   |  |
| <b>+25</b> | <b>next L</b>              |                     |        |   |   |   |   |  |

**Table 4: Communication objects – Consumption L1 ... L3**

| <b>Standard settings – Generation L1 ... L3</b> |                                   |                        |               |          |          |          |          |          |
|-------------------------------------------------|-----------------------------------|------------------------|---------------|----------|----------|----------|----------|----------|
| <b>No.</b>                                      | <b>Name</b>                       | <b>Object function</b> | <b>Length</b> | <b>C</b> | <b>R</b> | <b>W</b> | <b>T</b> | <b>U</b> |
| 125                                             | Generation L1                     | Active power (W)       | 4 Byte        | X        | X        |          | X        |          |
| 125                                             | Generation L1                     | Active power (kW)      | 2 Byte        | X        | X        |          | X        |          |
| 126                                             | Generation L1                     | Current value (A)      | 4 Byte        | X        | X        |          | X        |          |
| 126                                             | Generation L1                     | Current value (mA)     | 2 Byte        | X        | X        |          | X        |          |
| 127                                             | Dummy                             |                        |               |          |          |          |          |          |
| 128                                             | Dummy                             |                        |               |          |          |          |          |          |
| 129                                             | Dummy                             |                        |               |          |          |          |          |          |
| 130                                             | Dummy                             |                        |               |          |          |          |          |          |
| 131                                             | Generation L1                     | Load undercut          | 1 Bit         | X        | X        |          | X        |          |
| 132                                             | Generation L1                     | Load exceedance        | 1 Bit         | X        | X        |          | X        |          |
| 133                                             | Generation L1                     | Current undercut       | 1 Bit         | X        | X        |          | X        |          |
| 134                                             | Generation L1                     | Current exceedance     | 1 Bit         | X        | X        |          | X        |          |
| 135                                             | Dummy                             |                        |               |          |          |          |          |          |
| 136                                             | Dummy                             |                        |               |          |          |          |          |          |
| 137                                             | Generation L1: Intermediate meter | Active energy (Wh)     | 4 Byte        | X        | X        |          | X        |          |
| 137                                             | Generation L1: Intermediate meter | Active energy (kWh)    | 4 Byte        | X        | X        |          | X        |          |
| 138                                             | Generation L1: Intermediate meter | Actual yield in Euro   | 2 Byte        | X        | X        |          | X        |          |
| 138                                             | Generation L1: Intermediate meter | Actual yield in Euro   | 4 Byte        | X        | X        |          | X        |          |
| 138                                             | Generation L1: Intermediate meter | Actual yield in Cent   | 2 Byte        | X        | X        |          | X        |          |
| 138                                             | Generation L1: Intermediate meter | Actual yield in Cent   | 4 Byte        | X        | X        |          | X        |          |
| 139                                             | Generation L1: Intermediate meter | Meter reading Day      | 4 Byte        | X        | X        | X        | X        |          |
| 140                                             | Generation L1: Intermediate meter | Meter reading Night    | 4 Byte        | X        | X        | X        | X        |          |
| 141                                             | Generation L1: Intermediate meter | Reset                  | 1 Bit         | X        |          | X        |          |          |
| 142                                             | Generation L1: Main meter         | Active energy (kWh)    | 4 Byte        | X        | X        |          | X        |          |
| 143                                             | Generation L1: Main meter         | Actual yield in Euro   | 2 Byte        | X        | X        |          | X        |          |
| 143                                             | Generation L1: Main meter         | Actual yield in Euro   | 4 Byte        | X        | X        |          | X        |          |
| 143                                             | Generation L1: Main meter         | Actual yield in Cent   | 2 Byte        | X        | X        |          | X        |          |
| 143                                             | Generation L1: Main meter         | Actual yield in Cent   | 4 Byte        | X        | X        |          | X        |          |
| 144                                             | Generation L1: Main meter         | Meter reading Day      | 4 Byte        | X        | X        | X        | X        |          |
| 145                                             | Generation L1: Main meter         | Meter reading Night    | 4 Byte        | X        | X        | X        | X        |          |

|            |                           |         |       |   |  |   |   |  |
|------------|---------------------------|---------|-------|---|--|---|---|--|
| 146        | Generation L1: Main meter | Reset   | 1 Bit | X |  | X |   |  |
| 147        | Generation L1: Meter      | Event A | 1 Bit | X |  |   | X |  |
| 148        | Generation L1: Meter      | Event B | 1 Bit | X |  |   | X |  |
| 149        | Dummy                     |         |       |   |  |   |   |  |
| 150        | Dummy                     |         |       |   |  |   |   |  |
| <b>+25</b> | <b>next L</b>             |         |       |   |  |   |   |  |

**Table 5: Communication objects – Generation L1 ... L3**

The table above shows the preset default settings. The priority of the individual communications objects and the flags can be adjusted by the user as required. The flags assign the communication objects their respective tasks in programming, where C stands for communication, R for read, W for write, T for transmit and U for update.

## 4 Reference ETS-Parameter

### 4.1 General settings

The following picture shows the menu for the general settings (here for EZ-0363.01):

|                                                             |                                                                                                |       |
|-------------------------------------------------------------|------------------------------------------------------------------------------------------------|-------|
| Startup time                                                | 5                                                                                              | s     |
| Send "Operation" cyclically                                 | 10 min                                                                                         |       |
| Value for Day/Night                                         | <input checked="" type="radio"/> Day = 1 / Night = 0 <input type="radio"/> Day = 0 / Night = 1 |       |
| <b>Behaviour after bus power return:</b>                    |                                                                                                |       |
| Day/Night object                                            | <input type="radio"/> no request <input checked="" type="radio"/> request                      |       |
| Time object                                                 | <input type="radio"/> no request <input checked="" type="radio"/> request                      |       |
| <hr/>                                                       |                                                                                                |       |
| Current direction L1                                        | <input checked="" type="radio"/> normal <input type="radio"/> inverted                         |       |
| Current direction L2                                        | <input checked="" type="radio"/> normal <input type="radio"/> inverted                         |       |
| Current direction L3                                        | <input checked="" type="radio"/> normal <input type="radio"/> inverted                         |       |
| <hr/>                                                       |                                                                                                |       |
| Meter "Consumption": Change "Day" <-> "Night" controlled by | <input checked="" type="radio"/> "Day/Night" object <input type="radio"/> time                 |       |
| Meter "Generation": Change "Day" <-> "Night" controlled by  | <input checked="" type="radio"/> "Day/Night" object <input type="radio"/> time                 |       |
| <hr/>                                                       |                                                                                                |       |
| Meter "Consumption": Behaviour after programming            | no reset                                                                                       |       |
| Meter "Generation": Behaviour after programming             | no reset                                                                                       |       |
| Cost meter                                                  | <input type="radio"/> not active <input checked="" type="radio"/> active                       |       |
| <b>Cost meter "Consumption"</b>                             |                                                                                                |       |
| Calculate costs via                                         | a fixed value (Day)                                                                            |       |
| Electricity rate "Day"                                      | 0.22                                                                                           | €/kWh |
| DPT for object "Actual electricity price"                   | 4 Byte floating value [Cent]                                                                   |       |
| DPT for costs at intermediate and main meter                | 4 Byte floating value [Cent]                                                                   |       |
| <b>Cost meter "Generation"</b>                              |                                                                                                |       |
| Calculate yield via                                         | a variable value (Day)                                                                         |       |
| DPT for objects "Yield Day" and "Actual yield price"        | 4 Byte floating value [Cent]                                                                   |       |
| DPT for costs at intermediate and main meter                | 4 Byte floating value [Cent]                                                                   |       |

Figure 4: General settings

The following table shows the possible settings:

| ETS-Text                                                                                 | Dynamic range<br>[Default value]                                                                                                                                                               | Comment                                                                                                                                        |
|------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| Startup time                                                                             | 2 ... 240 s<br>[5 s]                                                                                                                                                                           | Sets the time between restart and functional start-up of the device.                                                                           |
| Send „Operation“ cyclically                                                              | not active, 1 min – 24 h<br>[10 min]                                                                                                                                                           | Activation of a cyclic "in operation" telegram.                                                                                                |
| Value for Day/Night                                                                      | <ul style="list-style-type: none"> <li>▪ <b>Day = 1 / Night = 0</b></li> <li>▪ Day = 0 / Night = 1</li> </ul>                                                                                  | Sets the polarity for the "Day/Night" object.                                                                                                  |
| Behaviour after bus power return:<br>Day/Night object<br>Time object                     | <ul style="list-style-type: none"> <li>▪ no request</li> <li>▪ <b>request</b></li> </ul>                                                                                                       | Setting whether the objects for "Time" and "Day/Night" are automatically requested after bus voltage recovery.                                 |
| Connection terminal –<br>channel L1/L2/L3                                                | <ul style="list-style-type: none"> <li>▪ <b>normal</b></li> <li>▪ inverted</li> </ul>                                                                                                          | Setting whether the current direction input is to be reversed.<br><b>Only for EZ-0320.01</b>                                                   |
| Current direction L1/L2/L3                                                               | <ul style="list-style-type: none"> <li>▪ <b>normal</b></li> <li>▪ inverted</li> </ul>                                                                                                          | Setting whether the current direction input is to be reversed.<br><b>Only for EZ-0363.01</b>                                                   |
| Meter „Consumption“:<br>Meter „Generation“:<br>Change „Day“ <-><br>„Night“ controlled by | <ul style="list-style-type: none"> <li>▪ „Day/Night“ object</li> <li>▪ time</li> </ul>                                                                                                         | Selection of how the switchover between "Day" and "Night" is to be carried out.                                                                |
| Time in hours switching from<br>„Day“ to „Night“                                         | 0 ... 23 h<br>[0]                                                                                                                                                                              | Setting of the respective switching time in hours and minutes when to switch between "Day" and "Night".<br><b>Only when "time" is selected</b> |
| Time in minutes switching from<br>„Day“ to „Night“                                       | 0 ... 59 min<br>[0]                                                                                                                                                                            |                                                                                                                                                |
| Time in hours switching from<br>„Night“ to „Day“                                         | 0 ... 23 h<br>[0]                                                                                                                                                                              |                                                                                                                                                |
| Time in minutes switching from<br>„Night“ to „Day“                                       | 0 ... 59 min<br>[0]                                                                                                                                                                            |                                                                                                                                                |
| Meter „Consumption“:<br>Meter „Generation“:<br>Behaviour after programming               | <ul style="list-style-type: none"> <li>▪ <b>no reset</b></li> <li>▪ reset intermediate meter</li> <li>▪ reset main and intermediate meter</li> </ul>                                           | Selection of whether the meters are to be reset after reprogramming the unit.                                                                  |
| Cost meter                                                                               | <ul style="list-style-type: none"> <li>▪ not active</li> <li>▪ <b>active</b></li> </ul>                                                                                                        | Activation of the cost meters for "Consumption" and "Generation".                                                                              |
| Cost meter „Consumption“ (visible if parameter "Cost meter" has been activated)          |                                                                                                                                                                                                |                                                                                                                                                |
| Calculate costs via                                                                      | <ul style="list-style-type: none"> <li>▪ a fixed value (Day)</li> <li>▪ two fixed values (Day /Night)</li> <li>▪ a variable value (Day)</li> <li>▪ two variable values (Day /Night)</li> </ul> | Setting of how the costs for consumption are to be calculated.                                                                                 |
| Electricity rate „Day“                                                                   | 0,000 ... 10,000 €/kWh<br>[0,22]                                                                                                                                                               | Setting the tariff for „Day“.<br><b>Only for "fixed" values.</b>                                                                               |
| Electricity rate „Night“                                                                 | 0,000 ... 10,000 €/kWh<br>[0,18]                                                                                                                                                               | Setting the tariff for „Night“.<br><b>Only for "two fixed" values.</b>                                                                         |

|                                                                                |                                                                                                                                                                                                |                                                                          |
|--------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------|
| DPT for object „Actual electricity price“                                      | <ul style="list-style-type: none"> <li>▪ 4Byte Floating [Cent]</li> <li>▪ 2Byte Floating [Cent]</li> <li>▪ 4Byte Floating [Euro]</li> <li>▪ 2Byte Floating [Euro]</li> </ul>                   | Specifying the datapoint type.<br><b>Only for "fixed" values.</b>        |
| DPT for object „Electricity price Day“ and „ Actual electricity price “        | <ul style="list-style-type: none"> <li>▪ 4Byte Floating [Cent]</li> <li>▪ 2Byte Floating [Cent]</li> <li>▪ 4Byte Floating [Euro]</li> <li>▪ 2Byte Floating [Euro]</li> </ul>                   | Specifying the datapoint type.<br><b>Only for „one variable value“.</b>  |
| DPT for object „Electricity price Day/Night“ and „ Actual electricity price “  | <ul style="list-style-type: none"> <li>▪ 4Byte Floating [Cent]</li> <li>▪ 2Byte Floating [Cent]</li> <li>▪ 4Byte Floating [Euro]</li> <li>▪ 2Byte Floating [Euro]</li> </ul>                   | Specifying the datapoint type.<br><b>Only for „two variable values“.</b> |
| DPT for costs at intermediate and main meter                                   | <ul style="list-style-type: none"> <li>▪ 4Byte Floating [Cent]</li> <li>▪ 2Byte Floating [Cent]</li> <li>▪ 4Byte Floating [Euro]</li> <li>▪ 2Byte Floating [Euro]</li> </ul>                   | Specifying the datapoint type.                                           |
| Cost meter „Generation“ (visible if parameter "Cost meter" has been activated) |                                                                                                                                                                                                |                                                                          |
| Calculate yield via                                                            | <ul style="list-style-type: none"> <li>▪ a fixed value (Day)</li> <li>▪ two fixed values (Day /Night)</li> <li>▪ a variable value (Day)</li> <li>▪ two variable values (Day /Night)</li> </ul> | Setting of how the yield for the generation is to be calculated.         |
| Power supply rate „Day“                                                        | 0,000 ... 10,000 €/KWh<br><b>[0,22]</b>                                                                                                                                                        | Setting the tariff for „Day“.<br><b>Only for "fixed" values.</b>         |
| Power supply rate „Night“                                                      | 0,000 ... 10,000 €/KWh<br><b>[0,18]</b>                                                                                                                                                        | Setting the tariff for „Night“.<br><b>Only for "two fixed" values.</b>   |
| DPT for object „Actual yield price“                                            | <ul style="list-style-type: none"> <li>▪ 4Byte Floating [Cent]</li> <li>▪ 2Byte Floating [Cent]</li> <li>▪ 4Byte Floating [Euro]</li> <li>▪ 2Byte Floating [Euro]</li> </ul>                   | Specifying the datapoint type.<br><b>Only for "fixed" values.</b>        |
| DPT for object „Yield Day“ and „Actual yield price“                            | <ul style="list-style-type: none"> <li>▪ 4Byte Floating [Cent]</li> <li>▪ 2Byte Floating [Cent]</li> <li>▪ 4Byte Floating [Euro]</li> <li>▪ 2Byte Floating [Euro]</li> </ul>                   | Specifying the datapoint type.<br><b>Only for „one variable value“.</b>  |
| DPT for object „Yield Day/Night“ and „Actual yield price“                      | <ul style="list-style-type: none"> <li>▪ 4Byte Floating [Cent]</li> <li>▪ 2Byte Floating [Cent]</li> <li>▪ 4Byte Floating [Euro]</li> <li>▪ 2Byte Floating [Euro]</li> </ul>                   | Specifying the datapoint type.<br><b>Only for „two variable values“.</b> |
| DPT for costs at intermediate and main meter                                   | <ul style="list-style-type: none"> <li>▪ 4Byte Floating [Cent]</li> <li>▪ 2Byte Floating [Cent]</li> <li>▪ 4Byte Floating [Euro]</li> <li>▪ 2Byte Floating [Euro]</li> </ul>                   | Specifying the datapoint type.                                           |

**Table 6: General settings**

### **Startup time**

This time defines when the unit "boots up" after a restart (reset, reprogramming, bus voltage recovery). This can be important if, for example, a bus reset is carried out. If there are many units on a line, all units would start at the same time and load the bus. With a variable time, the units can thus start differently.

### **„Operation“**

"In operation" is used to show on the bus that the unit is "alive". If activated, an ON telegram is sent cyclically.

### **Day/Night switchover**

By activating the "Day/Night" object, the polarity for Day/Night can be defined in the following. Regardless of this polarity, the unit always starts in "Day"-mode after reprogramming. Furthermore, it can be defined whether the object is to be actively queried after a bus voltage recovery.

### **Behaviour after bus power return**

It can be set whether the objects for Day/Night and/or Time are to be actively queried after bus voltage recovery.

### **Connection terminal channel L1 / L2 / L3 (only for EZ-0320.01)**

If the lines have been incorrectly mounted at the terminals, the current direction can be reversed with this parameter.

### **Current direction L1 / L2 / L3 (only for EZ-0363.01)**

Depending on the mounting of the current transformer on the line, the current direction can be reversed with this parameter.

### **Meter „Consumption“/“Generation“**

Here you can set whether the changeover from "Day" to "Night" operation or from "Night" to "Day" operation should take place at a fixed time (in hours and minutes) or whether the changeover is only controlled via the "Day/Night" object.

On the other hand, it can be defined whether the meters are to be reset after programming or whether the meter readings remain with the previous status.

### **Cost meter „Consumption“**

When calculating costs via fixed values, the corresponding tariff for "Day" respectively "Day" and "Night" is set in the ETS. When calculating via variable values, the tariffs are entered via objects. The currently valid electricity price is output via object 27 - "Consumption: current electricity price". The datapoint type for input and output can be defined via parameters.

### **Cost meter “Generation“**

When calculating the yield via fixed values, the corresponding tariff for "Day" respectively "Day" and "Night" is set in the ETS. When calculating via variable values, the tariffs are entered via objects. The currently valid yield price is output via object 48 - "Generation: current yield price". The datapoint type for input and output can be defined via parameters.

### **Important:**

The **central object 3 - "Voltage error"** is permanently displayed. It only sends an alarm if the voltage measurement is "active" in at least one menu "Consumption L1", "Consumption L2" or "Consumption L3"!

The table shows the general communications objects:

| Number | Name/Object function                                                              | Length | Usage                                                                              |
|--------|-----------------------------------------------------------------------------------|--------|------------------------------------------------------------------------------------|
| 0      | Central function – Operation                                                      | 1 Bit  | Sending a cyclic "In operation" telegram                                           |
| 1      | Central function – Day = 1 / Night = 0,<br>Day = 0 / Night = 1                    | 1 Bit  | Input of the value, whether "Day" or "Night"                                       |
| 2      | Central function – Time                                                           | 3 Byte | Receiving the time                                                                 |
| 3      | Central function – Voltage error                                                  | 1 Bit  | Sending an alarm                                                                   |
| 25     | Consumption: Electricity price Day –<br>Electricity rate in Cent/Euro - Input     |        | Receive the current electricity price.<br>DPT depending on parameter selection     |
| 26     | Consumption: Electricity price Night –<br>Electricity rate in Cent/Euro - Input   |        | Receive the current electricity price.<br>DPT depending on parameter selection     |
| 27     | Consumption: Actual electricity price –<br>Electricity rate in Cent/Euro - Output |        | Sending the current electricity price.<br>DPT depending on parameter selection     |
| 46     | Generation: Yield Day – Power supply<br>rate in Cent/Euro - Input                 |        | Receive the current yield price for Day.<br>DPT depending on parameter selection   |
| 47     | Generation: Yield Night – Power supply<br>rate in Cent/Euro - Input               |        | Receive the current yield price for Night.<br>DPT depending on parameter selection |
| 48     | Generation: Actual yield price – Power<br>supply rate in Cent/Euro - Output       |        | Sending the current yield price.<br>DPT depending on parameter selection           |

**Table 7: Communication objects – General settings**

## 4.2 Total consumption

### 4.2.1 Power measurement

The following settings are available for this menu:

|                                   |                                                                                                                                           |
|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Active power                      | <input type="radio"/> not active <input checked="" type="radio"/> active                                                                  |
| Object selection                  | <input checked="" type="radio"/> 4 Byte floating value in W (DPT 14.056)<br><input type="radio"/> 2 Byte floating value in kW (DPT 9.024) |
| Send value by change              | 10% ▼                                                                                                                                     |
| Send cyclically every ...         | 10 min ▼                                                                                                                                  |
| <hr/>                             |                                                                                                                                           |
| Monitoring of load exceedance     | <input type="radio"/> not active <input checked="" type="radio"/> active                                                                  |
| Value for switching threshold 1   | 100 ▲▼ W                                                                                                                                  |
| Hysteresis                        | 10 ▲▼ %                                                                                                                                   |
| Value when exceeded               | value "1" ▼                                                                                                                               |
| Value on withdrawal of exceedance | value "0" ▼                                                                                                                               |
| Minimum time of exceedance        | 0 ▲▼ s                                                                                                                                    |
| Send cyclically every ...         | not active ▼                                                                                                                              |
| <hr/>                             |                                                                                                                                           |
| Switching threshold 2             | <input checked="" type="radio"/> not active <input type="radio"/> active                                                                  |
| Switching threshold 3             | <input checked="" type="radio"/> not active <input type="radio"/> active                                                                  |
| <hr/>                             |                                                                                                                                           |
| Monitoring of load undercut       | <input type="radio"/> not active <input checked="" type="radio"/> active                                                                  |
| Value for switching threshold     | 10 ▲▼ W                                                                                                                                   |
| Hysteresis                        | 10 ▲▼ %                                                                                                                                   |
| Value when undercut               | value "1" ▼                                                                                                                               |
| Value on withdrawal of undercut   | value "0" ▼                                                                                                                               |
| Minimum time of undercutting      | 0 ▲▼ s                                                                                                                                    |
| Send cyclically every ...         | not active ▼                                                                                                                              |

Figure 5: Settings – Total consumption: Power measurement

The table shows the possible settings:

| ETS-Text                                                                                                                                                                                                                                                           | Dynamic range<br>[Default value]                                                                                                                  | Comment                                                                            |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| Active power                                                                                                                                                                                                                                                       | <ul style="list-style-type: none"> <li>not active</li> <li><b>active</b></li> </ul>                                                               | Activation of the menu for active power.                                           |
| Object selection                                                                                                                                                                                                                                                   | <ul style="list-style-type: none"> <li><b>4 Byte floating value in W (DPT 14.056)</b></li> <li>2 Byte floating value in kW (DPT 9.024)</li> </ul> | Setting of the datapoint type for the active power.                                |
| Send value by change                                                                                                                                                                                                                                               | not active, 5 – 75 %<br><b>[10 %]</b>                                                                                                             | Setting whether and at which change the value is sent.                             |
| Send cyclically every ...                                                                                                                                                                                                                                          | not active, 1 min – 24 h<br><b>[10 min]</b>                                                                                                       | Setting whether and at what interval the value is to be sent cyclically.           |
| Monitoring of load exceedance                                                                                                                                                                                                                                      | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                               | Activation of the function.                                                        |
| <b>Note:</b> When the function is activated, the parameters for switching threshold 1 are automatically displayed. Switching threshold 2 and 3 must be activated separately.                                                                                       |                                                                                                                                                   |                                                                                    |
| Value for switching threshold 1                                                                                                                                                                                                                                    | 10 ... 15000 W<br><b>[100 W]</b>                                                                                                                  | Setting range for threshold 1.<br><b>For EZ-0320.01</b>                            |
| Value for switching threshold 1                                                                                                                                                                                                                                    | 10 ... 43000 W<br><b>[100 W]</b>                                                                                                                  | Setting range for threshold 1.<br><b>For EZ-0363.01</b>                            |
| Hysteresis                                                                                                                                                                                                                                                         | 10 ... 100 %<br><b>[10 %]</b>                                                                                                                     | Setting range for the hysteresis.                                                  |
| Value when exceeded                                                                                                                                                                                                                                                | <ul style="list-style-type: none"> <li>not active</li> <li><b>value „1“</b></li> <li>value „0“</li> </ul>                                         | Value to be sent when the switching threshold is exceeded.                         |
| Value on withdrawal of exceedance                                                                                                                                                                                                                                  | <ul style="list-style-type: none"> <li>not active</li> <li>value „1“</li> <li><b>value „0“</b></li> </ul>                                         | Value that is to be sent if the value falls below the exceedance in the following. |
| Minimum time of exceedance                                                                                                                                                                                                                                         | 0 ... 30000 s<br><b>[0 s]</b>                                                                                                                     | Setting of the minimum time by which the value for exceedance must be overshoot.   |
| Send cyclically every ...                                                                                                                                                                                                                                          | <b>not active</b><br>1 min – 24 h                                                                                                                 | Setting whether and at what interval the actual values are to be sent cyclically.  |
| Switching threshold 2                                                                                                                                                                                                                                              | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                               | Activation of switching threshold 2.                                               |
| Switching threshold 3                                                                                                                                                                                                                                              | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                               | Activation of switching threshold 3.                                               |
| <b>Note:</b> When switching thresholds 2 and 3 are activated, the same parameters are displayed as for switching threshold 1. Only the default values differ:<br>Value for switching threshold 2 <b>[500 W]</b> ; value for switching threshold 3 <b>[800 W]</b> . |                                                                                                                                                   |                                                                                    |
| Monitoring of load undercut                                                                                                                                                                                                                                        | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                               | Activation of the function.                                                        |
| Value for switching threshold                                                                                                                                                                                                                                      | 10 ... 15000 W<br><b>[10 W]</b>                                                                                                                   | Setting range for the threshold.<br><b>For EZ-0320.01</b>                          |
| Value for switching threshold                                                                                                                                                                                                                                      | 10 ... 43000 W<br><b>[10 W]</b>                                                                                                                   | Setting range for the threshold.<br><b>For EZ-0363.01</b>                          |
| Hysteresis                                                                                                                                                                                                                                                         | 10 ... 100 %<br><b>[10 %]</b>                                                                                                                     | Setting range for the hysteresis.                                                  |

|                                 |                                                                                                           |                                                                                         |
|---------------------------------|-----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| Value when undercut             | <ul style="list-style-type: none"> <li>not active</li> <li><b>value „1“</b></li> <li>value „0“</li> </ul> | Value to be sent when the switching threshold is undercut.                              |
| Value on withdrawal of undercut | <ul style="list-style-type: none"> <li>not active</li> <li>value „1“</li> <li><b>value „0“</b></li> </ul> | Value to be sent if the undercut is subsequently exceeded.                              |
| Minimum time of undercutting    | 0 ... 30000 s<br><b>[0 s]</b>                                                                             | Setting of the time by which the value must at least fall below the value for undercut. |
| Send cyclically every ...       | <b>not active</b><br>1 min – 24 h                                                                         | Setting whether and at what interval the actual values are to be sent cyclically.       |

**Table 8: Settings – Total consumption: Power measurement**

The active power measurement enables the output of the real active power by simultaneous measurement of current and voltage. The output value is therefore no longer a "theoretical" power at nominal voltage, but the actual power.

#### Monitoring of load exceedance

3 switching thresholds can be defined at which certain actions are carried out after the condition is fulfilled. Switching threshold 1 is always active after activation of the monitoring. Switching threshold 2 and/or switching threshold 3 can be activated individually.

The "**Value for switching threshold**" describes the value above which the selected action "**Value when exceeded**" is to be carried out.

With the "**Hysteresis**", the switch-off threshold can be shifted. This threshold is calculated with a hysteresis of 10% for a load exceedance value of 100 W as follows:

Switch-on point = 100 W; reset when the load falls below 90 W (switch-on value minus hysteresis).

The "**Minimum time of exceedance**" indicates how long an exceedance must be measured before the action is triggered. For example, a minimum time of 10 s for a load exceedance value of 100 W means that a value above 100 W must be measured for 10 s before the exceedance action is triggered. The minimum time for exceedance works together with the hysteresis. So if an exceedance is measured, the power must fall below the set value minus hysteresis to stop the dwell time.

The "**Value on withdrawal of exceedance**" triggers a defined action, which is carried out when a load exceedance has fallen below again.

**Important:** After reset/reprogramming, the value for the switching threshold must be exceeded again in order to send the "value on withdrawal of exceedance"!

### Monitoring of load undercut

The "**Value for switching threshold**" describes the value below which the selected action "**Value when undercut**" is to be carried out.

The "**Hysteresis**" can be used to shift the switch-off threshold. This threshold is calculated with a hysteresis of 10% for a load undercut value of 100 W as follows:

Switch-on point = 100 W; reset when 110 W is exceeded (switch-on value plus hysteresis).

The "**Minimum time of undercutting**" indicates how long an undercut must be measured before the action is triggered. For example, a minimum time of 10 s for a load undercut value of 100 W means that a value below 100 W must be measured for 10 s before the undercut action is triggered. The minimum time for undercut works together with the hysteresis. So if an undercut is measured, the power must rise above the set value plus hysteresis to stop the dwell time.

The "**Value on withdrawal of undercut**" triggers a defined action, which is executed when a load undercut has been exceeded again.

**Important:** After reset/reprogramming, the value for undercut must be undercut again in order to send the "Value on withdrawal of undercut"!

The following table shows the available communication objects:

| Number | Name/Object function                  | Length           | Usage                                                                     |
|--------|---------------------------------------|------------------|---------------------------------------------------------------------------|
| 5      | Total consumption – Active power      | 2 Byte<br>4 Byte | Output of the measured active power. DPT according to "Object selection". |
| 9      | Total consumption – Load undercut     | 1 Bit            | Reporting a load undercut                                                 |
| 10     | Total consumption – Load exceedance 1 | 1 Bit            | Reporting a load exceedance for switching threshold 1                     |
| 11     | Total consumption – Load exceedance 2 | 1 Bit            | Reporting a load exceedance for switching threshold 2                     |
| 12     | Total consumption – Load exceedance 3 | 1 Bit            | Reporting a load exceedance for switching threshold 3                     |

**Table 9: Communication objects – Total consumption: Power measurement**

## 4.2.2 Energy and cost meter

**Important:**

To use the cost meter, the parameter "Cost meter" in "General settings" must be activated!

The following settings are available:

|                                         |                                                                                                              |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------|
| Meter: Consumption                      | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Main meter                              |                                                                                                              |
| Send meter reading by change            | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send meter reading every ...            | 1 kWh                                                                                                        |
| Send meter reading cyclically every ... | 30 min                                                                                                       |
| Cost meter                              | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send by change                          | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send actual costs every ...             | 10 €                                                                                                         |
| Send cyclically every ...               | not active                                                                                                   |
| Intermediate meter                      |                                                                                                              |
| Object selection                        | <input checked="" type="radio"/> Value in Wh (DPT 13.010)<br><input type="radio"/> Value in kWh (DPT 13.013) |
| Send meter reading by change            | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send meter reading every ...            | 10 Wh                                                                                                        |
| Send meter reading cyclically every ... | 30 min                                                                                                       |
| Cost meter                              | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send by change                          | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send actual costs every ...             | 10 €                                                                                                         |
| Send cyclically every ...               | not active                                                                                                   |
| Activate Event A with                   | not active                                                                                                   |
| Activate Event B with                   | not active                                                                                                   |

Figure 6: Settings – Total consumption: Energy and cost meter

The table shows the possible settings:

| ETS-Text                                                                   | Dynamic range<br>[Default value]                                                                                                                                                                                                                                    | Comment                                                                                               |
|----------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
| Meter: Consumption                                                         | <ul style="list-style-type: none"> <li>not active</li> <li><b>active</b></li> </ul>                                                                                                                                                                                 | Activation of the meter.<br><b>If "not active", no parameters appear in the following!</b>            |
| Main meter (is automatically active after activating "Meter: Consumption") |                                                                                                                                                                                                                                                                     |                                                                                                       |
| Send meter reading by change                                               | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                                                                                                                                                 | Setting whether the meter reading should be sent when changed.                                        |
| Send meter reading every ...                                               | 1 – 500 kWh<br>[1 kWh]                                                                                                                                                                                                                                              | Setting for which change the meter reading is to be sent.                                             |
| Send meter reading cyclically every ...                                    | not active, 1 min – 24 h<br>[30 min]                                                                                                                                                                                                                                | Setting whether and at what interval the meter reading is to be sent cyclically.                      |
| Intermediate meter                                                         |                                                                                                                                                                                                                                                                     |                                                                                                       |
| Intermediate meter                                                         | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                                                                                                                                                 | Activation of the intermediate meter.                                                                 |
| Object selection                                                           | <ul style="list-style-type: none"> <li><b>Value in Wh (DPT 13.010)</b></li> <li>Value in kWh (DPT 13.013)</li> </ul>                                                                                                                                                | Selection of the datapoint type for the intermediate meter.                                           |
| Send meter reading by change                                               | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                                                                                                                                                 | Setting whether the meter reading is to be sent when changed.                                         |
| Send meter reading every ...                                               | 10 – 50000 Wh<br>[10 Wh]                                                                                                                                                                                                                                            | Setting at which change the meter reading is to be sent.<br><b>With object selection „DPT 13.010“</b> |
| Send meter reading every ...                                               | 1 – 500 kWh<br>[1 kWh]                                                                                                                                                                                                                                              | Setting at which change the meter reading is to be sent.<br><b>With object selection „DPT 13.013“</b> |
| Send meter reading cyclically every ...                                    | not active, 1 min – 24 h<br>[30 min]                                                                                                                                                                                                                                | Setting whether and at what interval the meter reading is to be sent cyclically.                      |
| Cost meter (Settings are the same for main and intermediate meter)         |                                                                                                                                                                                                                                                                     |                                                                                                       |
| Cost meter                                                                 | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                                                                                                                                                 | Activation of the cost meter.<br><b>Only visible if "Cost meter" is active in "General settings"!</b> |
| Send by change                                                             | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                                                                                                                                                 | Setting whether the cost reading should be sent when it is changed.                                   |
| Send actual costs every ...                                                | 1 ... 255 €<br>[10 €]                                                                                                                                                                                                                                               | Setting for which change the cost reading is to be sent.                                              |
| Send cyclically every ...                                                  | <b>not active</b> ,<br>1 min – 24 h                                                                                                                                                                                                                                 | Setting whether and at what interval the cost reading is to be sent cyclically.                       |
| Event A / Event B                                                          |                                                                                                                                                                                                                                                                     |                                                                                                       |
| Activate Event A/B with                                                    | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>final value: intermediate meter</li> <li>final value: main meter</li> <li>final value: costs intermediate meter</li> <li>final value: costs main meter</li> <li>time</li> <li>interval</li> </ul> | Determination of the action with which an event is to be activated.                                   |

|                                       |                                                                                                                                                                                                                                                                      |                                                                                                                                                                                                                               |
|---------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Final value                           | 1 ... 4294967295 kWh/Wh<br><b>[200]</b>                                                                                                                                                                                                                              | Value from which the event is to be activated.<br><b>Visible when "Final value ..." is selected.</b><br><b>DPT for main meter is "kWh".</b><br><b>DPT for intermediate meter depends on the "Object selection" parameter.</b> |
| Final value                           | 1 ... 4294967295 €<br><b>[200]</b>                                                                                                                                                                                                                                   | Value from which the event is to be activated.<br><b>Visible when selecting "Final value: Costs ...".</b>                                                                                                                     |
| Hours                                 | 0 ... 23<br><b>[0]</b>                                                                                                                                                                                                                                               | Set<br>- the time at which the event is to be activated.<br>- the interval at which the event is to be activated.<br><b>If "time" or "interval" is selected</b>                                                               |
| Minutes                               | 0 ... 59<br><b>[0]</b>                                                                                                                                                                                                                                               |                                                                                                                                                                                                                               |
| Day                                   | <ul style="list-style-type: none"> <li>▪ <b>every day</b></li> <li>▪ Monday</li> <li>▪ Tuesday</li> <li>▪ Wednesday</li> <li>▪ Thursday</li> <li>▪ Friday</li> <li>▪ Saturday</li> <li>▪ Sunday</li> <li>▪ every working day</li> <li>▪ every weekend day</li> </ul> | Setting on which day(s) the event is to be activated.<br><b>Visible when "Time" is selected.</b>                                                                                                                              |
| Object „Event A“ /<br>“Event B” sends | <ul style="list-style-type: none"> <li>▪ <b>OFF</b></li> <li>▪ ON</li> </ul>                                                                                                                                                                                         | Value to be sent when the condition for activating the event is fulfilled.                                                                                                                                                    |
| All values of intermediate meter      | <ul style="list-style-type: none"> <li>▪ <b>do not send</b></li> <li>▪ send</li> </ul>                                                                                                                                                                               | Settings for which additional actions are to be carried out when the condition for activating the event is fulfilled.<br><br><b>The number of possible actions depends on the selection "Activate event X with".</b>          |
| Costs of intermediate meter           | <ul style="list-style-type: none"> <li>▪ <b>do not send</b></li> <li>▪ send</li> </ul>                                                                                                                                                                               |                                                                                                                                                                                                                               |
| Reset intermediate meter              | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>▪ active</li> </ul>                                                                                                                                                                              |                                                                                                                                                                                                                               |
| All values of main meter              | <ul style="list-style-type: none"> <li>▪ <b>do not send</b></li> <li>▪ send</li> </ul>                                                                                                                                                                               |                                                                                                                                                                                                                               |
| Costs of main meter                   | <ul style="list-style-type: none"> <li>▪ <b>do not send</b></li> <li>▪ send</li> </ul>                                                                                                                                                                               |                                                                                                                                                                                                                               |
| Reset main meter                      | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>▪ active</li> </ul>                                                                                                                                                                              |                                                                                                                                                                                                                               |

**Table 10: Settings – Total consumption: Energy and cost meter**

#### Main meter / Intermediate meter

The main meter always works with the datapoint type 13.013 (kWh). For the intermediate meter, the datapoint type can be set with the "**Object selection**" (Wh or kWh).

The setting "**Send meter reading by change**" can be used to set at which change the meter sends its actual meter reading. If the setting is "not active", the meter does not send a value, no matter how big the change is.

The setting "**Send meter reading cyclically every ...**" can be used to set the intervals at which the device sends its actual measured value. The cyclical sending function can be activated or deactivated independently of the setting "Send meter reading by change". Values are also sent if the meter has not recorded a change. If both parameters are deactivated, no value is ever sent.

#### Cost meter

The settings for sending the cost reading correspond to the settings as for the main and intermediate meter.

#### Event A / Event B

Two different events can be triggered if certain conditions are met. This is done via 1-bit objects.

- **final value: intermediate/main meter**  
Event is activated with a fixed value.
- **final value: costs intermediate/main meter**  
Event is activated when a certain cost level is reached.
- **time**  
Event is executed recurrently at a certain time. In addition to hours and minutes, it is also possible to set whether the event is to be activated on certain days.
- **interval**  
Event is activated recurrently at a defined interval (in hours and minutes).  
**Important:** The starting point and subsequent cyclical transmission repetition is always after reprogramming or when the bus voltage returns.

In addition to sending the object (Event A or Event B), other actions can be performed. These can be activated individually as required.

The associated communication objects are (Name is "Total consumption" in each case):

| Number | Name/Object function                        | Length | Usage                                                            |
|--------|---------------------------------------------|--------|------------------------------------------------------------------|
| 13     | Intermediate meter – Active energy          | 4 Byte | Sending the meter reading.<br>DPT depending on parameter setting |
| 14     | Intermediate meter – Costs in Cent - Output | 4 Byte | Sending the actual costs                                         |
| 15     | Intermediate meter – Meter reading Day      | 4 Byte | Sending the meter reading                                        |
| 16     | Intermediate meter – Meter reading Night    | 4 Byte | Sending the meter reading                                        |
| 17     | Intermediate meter – Reset                  | 1 Bit  | Resetting the intermediate meter                                 |
| 18     | Main meter – Active energy                  | 4 Byte | Sending the meter reading.                                       |
| 19     | Main meter – Costs in Cent - Output         | 4 Byte | Sending the actual costs                                         |
| 20     | Main meter – Meter reading Day              | 4 Byte | Sending the meter reading                                        |
| 21     | Main meter – Meter reading Night            | 4 Byte | Sending the meter reading                                        |
| 22     | Main meter – Reset                          | 1 Bit  | Resetting the main meter                                         |
| 23     | Event A                                     | 1 Bit  | Sending the value of Event A                                     |
| 24     | Event B                                     | 1 Bit  | Sending the value of Event B                                     |

**Table 11: Communication objects – Total consumption: Energy and cost meter**

## 4.3 Total generated

### 4.3.1 Power measurement

The following settings are available:

|                                   |                                                                                                                                           |
|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Active power                      | <input type="radio"/> not active <input checked="" type="radio"/> active                                                                  |
| Object selection                  | <input checked="" type="radio"/> 4 Byte floating value in W (DPT 14.056)<br><input type="radio"/> 2 Byte floating value in kW (DPT 9.024) |
| Send value by change              | 10% ▼                                                                                                                                     |
| Send cyclically every ...         | 10 min ▼                                                                                                                                  |
| <hr/>                             |                                                                                                                                           |
| Monitoring of load exceedance     | <input type="radio"/> not active <input checked="" type="radio"/> active                                                                  |
| Value for switching threshold 1   | 100 ▲▼ W                                                                                                                                  |
| Hysteresis                        | 10 ▲▼ %                                                                                                                                   |
| Value when exceeded               | value "1" ▼                                                                                                                               |
| Value on withdrawal of exceedance | value "0" ▼                                                                                                                               |
| Minimum time of exceedance        | 0 ▲▼ s                                                                                                                                    |
| Send cyclically every ...         | not active ▼                                                                                                                              |
| <hr/>                             |                                                                                                                                           |
| Switching threshold 2             | <input checked="" type="radio"/> not active <input type="radio"/> active                                                                  |
| Switching threshold 3             | <input checked="" type="radio"/> not active <input type="radio"/> active                                                                  |
| <hr/>                             |                                                                                                                                           |
| Monitoring of load undercut       | <input type="radio"/> not active <input checked="" type="radio"/> active                                                                  |
| Value for switching threshold     | 10 ▲▼ W                                                                                                                                   |
| Hysteresis                        | 10 ▲▼ %                                                                                                                                   |
| Value when undercut               | value "1" ▼                                                                                                                               |
| Value on withdrawal of undercut   | value "0" ▼                                                                                                                               |
| Minimum time of undercutting      | 0 ▲▼ s                                                                                                                                    |
| Send cyclically every ...         | not active ▼                                                                                                                              |

Figure 7: Settings – Total generated: Power measurement

The table shows the possible settings:

| ETS-Text                                                                                                                                                                                                                                                           | Dynamic range<br>[Default value]                                                                                                                  | Comment                                                                            |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| Active power                                                                                                                                                                                                                                                       | <ul style="list-style-type: none"> <li>not active</li> <li><b>active</b></li> </ul>                                                               | Activation of the menu for active power.                                           |
| Object selection                                                                                                                                                                                                                                                   | <ul style="list-style-type: none"> <li><b>4 Byte floating value in W (DPT 14.056)</b></li> <li>2 Byte floating value in kW (DPT 9.024)</li> </ul> | Setting of the datapoint type for the active power.                                |
| Send value by change                                                                                                                                                                                                                                               | not active, 5 – 75 %<br><b>[10 %]</b>                                                                                                             | Setting whether and at which change the value is sent.                             |
| Send cyclically every ...                                                                                                                                                                                                                                          | not active, 1 min – 24 h<br><b>[10 min]</b>                                                                                                       | Setting whether and at what interval the value is to be sent cyclically.           |
| Monitoring of load exceedance                                                                                                                                                                                                                                      | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                               | Activation of the function.                                                        |
| <b>Note:</b> When the function is activated, the parameters for switching threshold 1 are automatically displayed. Switching threshold 2 and 3 must be activated separately.                                                                                       |                                                                                                                                                   |                                                                                    |
| Value for switching threshold 1                                                                                                                                                                                                                                    | 10 ... 15000 W<br><b>[100 W]</b>                                                                                                                  | Setting range for threshold 1.<br><b>For EZ-0320.01</b>                            |
| Value for switching threshold 1                                                                                                                                                                                                                                    | 10 ... 43000 W<br><b>[100 W]</b>                                                                                                                  | Setting range for threshold 1.<br><b>For EZ-0363.01</b>                            |
| Hysteresis                                                                                                                                                                                                                                                         | 10 ... 100 %<br><b>[10 %]</b>                                                                                                                     | Setting range for the hysteresis.                                                  |
| Value when exceeded                                                                                                                                                                                                                                                | <ul style="list-style-type: none"> <li>not active</li> <li><b>value „1“</b></li> <li>value „0“</li> </ul>                                         | Value to be sent when the switching threshold is exceeded.                         |
| Value on withdrawal of exceedance                                                                                                                                                                                                                                  | <ul style="list-style-type: none"> <li>not active</li> <li>value „1“</li> <li><b>value „0“</b></li> </ul>                                         | Value that is to be sent if the value falls below the exceedance in the following. |
| Minimum time of exceedance                                                                                                                                                                                                                                         | 0 ... 30000 s<br><b>[0 s]</b>                                                                                                                     | Setting of the minimum time by which the value for exceedance must be overshoot.   |
| Send cyclically every ...                                                                                                                                                                                                                                          | <b>not active</b><br>1 min – 24 h                                                                                                                 | Setting whether and at what interval the actual values are to be sent cyclically.  |
| Switching threshold 2                                                                                                                                                                                                                                              | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                               | Activation of switching threshold 2.                                               |
| Switching threshold 3                                                                                                                                                                                                                                              | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                               | Activation of switching threshold 3.                                               |
| <b>Note:</b> When switching thresholds 2 and 3 are activated, the same parameters are displayed as for switching threshold 1. Only the default values differ:<br>Value for switching threshold 2 <b>[500 W]</b> ; value for switching threshold 3 <b>[800 W]</b> . |                                                                                                                                                   |                                                                                    |
| Monitoring of load undercut                                                                                                                                                                                                                                        | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                               | Activation of the function.                                                        |
| Value for switching threshold                                                                                                                                                                                                                                      | 10 ... 15000 W<br><b>[10 W]</b>                                                                                                                   | Setting range for the threshold.<br><b>For EZ-0320.01</b>                          |
| Value for switching threshold                                                                                                                                                                                                                                      | 10 ... 43000 W<br><b>[10 W]</b>                                                                                                                   | Setting range for the threshold.<br><b>For EZ-0363.01</b>                          |
| Hysteresis                                                                                                                                                                                                                                                         | 10 ... 100 %<br><b>[10 %]</b>                                                                                                                     | Setting range for the hysteresis.                                                  |

|                                 |                                                                                                           |                                                                                         |
|---------------------------------|-----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| Value when undercut             | <ul style="list-style-type: none"> <li>not active</li> <li><b>value „1“</b></li> <li>value „0“</li> </ul> | Value to be sent when the switching threshold is undercut.                              |
| Value on withdrawal of undercut | <ul style="list-style-type: none"> <li>not active</li> <li>value „1“</li> <li><b>value „0“</b></li> </ul> | Value to be sent if the undercut is subsequently exceeded.                              |
| Minimum time of undercutting    | 0 ... 30000 s<br><b>[0 s]</b>                                                                             | Setting of the time by which the value must at least fall below the value for undercut. |
| Send cyclically every ...       | <b>not active</b><br>1 min – 24 h                                                                         | Setting whether and at what interval the actual values are to be sent cyclically.       |

**Table 12: Settings – Total generated: Power measurement**

The active power measurement enables the output of the real active power by simultaneous measurement of current and voltage. The output value is therefore no longer a "theoretical" power at nominal voltage, but the actual power.

#### Monitoring of load exceedance

3 switching thresholds can be defined at which certain actions are carried out after the condition is fulfilled. Switching threshold 1 is always active after activation of the monitoring. Switching threshold 2 and/or switching threshold 3 can be activated individually.

The "**Value for switching threshold**" describes the value above which the selected action "**Value when exceeded**" is to be carried out.

With the "**Hysteresis**", the switch-off threshold can be shifted. This threshold is calculated with a hysteresis of 10% for a load exceedance value of 100 W as follows:

Switch-on point = 100 W; reset when the load falls below 90 W (switch-on value minus hysteresis).

The "**Minimum time of exceedance**" indicates how long an exceedance must be measured before the action is triggered. For example, a minimum time of 10 s for a load exceedance value of 100 W means that a value above 100 W must be measured for 10 s before the exceedance action is triggered. The minimum time for exceedance works together with the hysteresis. So, if an exceedance is measured, the power must fall below the set value minus hysteresis to stop the dwell time.

The "**Value on withdrawal of exceedance**" triggers a defined action, which is carried out when a load exceedance has fallen below again.

**Important:** After reset/reprogramming, the value for the switching threshold must be exceeded again in order to send the "value on withdrawal of exceedance"!

### Monitoring of load undercut

The "**Value for switching threshold**" describes the value below which the selected action "**Value when undercut**" is to be carried out.

The "**Hysteresis**" can be used to shift the switch-off threshold. This threshold is calculated with a hysteresis of 10% for a load undercut value of 100 W as follows:

Switch-on point = 100 W; reset when 110 W is exceeded (switch-on value plus hysteresis).

The "**Minimum time of undercutting**" indicates how long an undercut must be measured before the action is triggered. For example, a minimum time of 10 s for a load undercut value of 100 W means that a value below 100 W must be measured for 10 s before the undercut action is triggered. The minimum time for undercut works together with the hysteresis. So, if an undercut is measured, the power must rise above the set value plus hysteresis to stop the dwell time.

The "**Value on withdrawal of undercut**" triggers a defined action, which is executed when a load undercut has been exceeded again.

**Important:** After reset/reprogramming, the value for undercut must be undercut again in order to send the "Value on withdrawal of undercut"!

The following table shows the available communication objects:

| Number | Name/Object function                | Length           | Usage                                                                     |
|--------|-------------------------------------|------------------|---------------------------------------------------------------------------|
| 29     | Total generated – Active power      | 2 Byte<br>4 Byte | Output of the measured active power. DPT according to "Object selection". |
| 30     | Total generated – Load undercut     | 1 Bit            | Reporting a load undercut                                                 |
| 31     | Total generated – Load exceedance 1 | 1 Bit            | Reporting a load exceedance for switching threshold 1                     |
| 32     | Total generated – Load exceedance 2 | 1 Bit            | Reporting a load exceedance for switching threshold 2                     |
| 33     | Total generated – Load exceedance 3 | 1 Bit            | Reporting a load exceedance for switching threshold 3                     |

**Table 13: Communication objects – Total generated: Power measurement**

### 4.3.2 Energy and yield meter

**Important:**

To use the yield meter, the parameter "Cost meter" in "General settings" must be activated!

The following settings are available:

|                                         |                                                                                                              |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------|
| Meter "Generation"                      | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Main meter                              |                                                                                                              |
| Send meter reading by change            | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send meter reading every ...            | 1 kWh                                                                                                        |
| Send meter reading cyclically every ... | 30 min                                                                                                       |
| Yield meter                             |                                                                                                              |
| Send by change                          | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send yield every ...                    | 10 €                                                                                                         |
| Send cyclically every ...               | not active                                                                                                   |
| Intermediate meter                      |                                                                                                              |
| Object selection                        | <input checked="" type="radio"/> Value in Wh (DPT 13.010)<br><input type="radio"/> Value in kWh (DPT 13.013) |
| Send meter reading by change            | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send meter reading every ...            | 10 Wh                                                                                                        |
| Send meter reading cyclically every ... | 30 min                                                                                                       |
| Yield meter                             |                                                                                                              |
| Send by change                          | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send yield every ...                    | 10 €                                                                                                         |
| Send cyclically every ...               | not active                                                                                                   |
| Activate Event A with                   | not active                                                                                                   |
| Activate Event B with                   | not active                                                                                                   |

Figure 8: Settings – Total generated: Energy and yield meter

The table shows the possible settings:

| ETS-Text                                                                   | Dynamic range<br>[Default value]                                                                                                                                                                                                                                    | Comment                                                                                                |
|----------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|
| Meter "Generation"                                                         | <ul style="list-style-type: none"> <li>not active</li> <li><b>active</b></li> </ul>                                                                                                                                                                                 | Activation of the meter.<br><b>If "not active", no parameters appear in the following!</b>             |
| Main meter (is automatically active after activating "Meter: Consumption") |                                                                                                                                                                                                                                                                     |                                                                                                        |
| Send meter reading by change                                               | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                                                                                                                                                 | Setting whether the meter reading should be sent when changed.                                         |
| Send meter reading every ...                                               | 1 – 500 kWh<br>[1 kWh]                                                                                                                                                                                                                                              | Setting for which change the meter reading is to be sent.                                              |
| Send meter reading cyclically every ...                                    | not active, 1 min – 24 h<br>[30 min]                                                                                                                                                                                                                                | Setting whether and at what interval the meter reading is to be sent cyclically.                       |
| Intermediate meter                                                         |                                                                                                                                                                                                                                                                     |                                                                                                        |
| Intermediate meter                                                         | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                                                                                                                                                 | Activation of the intermediate meter.                                                                  |
| Object selection                                                           | <ul style="list-style-type: none"> <li><b>Value in Wh (DPT 13.010)</b></li> <li>Value in kWh (DPT 13.013)</li> </ul>                                                                                                                                                | Selection of the datapoint type for the intermediate meter.                                            |
| Send meter reading by change                                               | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                                                                                                                                                 | Setting whether the meter reading is to be sent when changed.                                          |
| Send meter reading every ...                                               | 10 – 50000 Wh<br>[10 Wh]                                                                                                                                                                                                                                            | Setting at which change the meter reading is to be sent.<br><b>With object selection „DPT 13.010“</b>  |
| Send meter reading every ...                                               | 1 – 500 kWh<br>[1 kWh]                                                                                                                                                                                                                                              | Setting at which change the meter reading is to be sent.<br><b>With object selection „DPT 13.013“</b>  |
| Send meter reading cyclically every ...                                    | not active, 1 min – 24 h<br>[30 min]                                                                                                                                                                                                                                | Setting whether and at what interval the meter reading is to be sent cyclically.                       |
| Yield meter (Settings are the same for main and intermediate meter)        |                                                                                                                                                                                                                                                                     |                                                                                                        |
| Yield meter                                                                | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                                                                                                                                                 | Activation of the yield meter.<br><b>Only visible if "Cost meter" is active in "General settings"!</b> |
| Send by change                                                             | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                                                                                                                                                 | Setting whether the yield should be sent when it is changed.                                           |
| Send yield every ...                                                       | 1 ... 255 €<br>[10 €]                                                                                                                                                                                                                                               | Setting at which change the yield is to be sent.                                                       |
| Send cyclically every ...                                                  | <b>not active</b> ,<br>1 min – 24 h                                                                                                                                                                                                                                 | Setting whether and at what interval the yield is to be sent cyclically.                               |
| Event A / Event B                                                          |                                                                                                                                                                                                                                                                     |                                                                                                        |
| Activate Event A/B with                                                    | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>final value: intermediate meter</li> <li>final value: main meter</li> <li>final value: costs intermediate meter</li> <li>final value: costs main meter</li> <li>time</li> <li>interval</li> </ul> | Determination of the action with which an event is to be activated.                                    |

|                                       |                                                                                                                                                                                                                                                                      |                                                                                                                                                                                                                               |
|---------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Final value                           | 1 ... 4294967295 kWh/Wh<br><b>[200]</b>                                                                                                                                                                                                                              | Value from which the event is to be activated.<br><b>Visible when "Final value ..." is selected.</b><br><b>DPT for main meter is "kWh".</b><br><b>DPT for intermediate meter depends on the "Object selection" parameter.</b> |
| Final value                           | 1 ... 4294967295 €<br><b>[200]</b>                                                                                                                                                                                                                                   | Value from which the event is to be activated.<br><b>Visible when selecting "Final value: Costs ...".</b>                                                                                                                     |
| Hours                                 | 0 ... 23<br><b>[0]</b>                                                                                                                                                                                                                                               | Set<br>- the time at which the event is to be activated.<br>- the interval at which the event is to be activated.<br><b>If "time" or "interval" is selected</b>                                                               |
| Minutes                               | 0 ... 59<br><b>[0]</b>                                                                                                                                                                                                                                               |                                                                                                                                                                                                                               |
| Day                                   | <ul style="list-style-type: none"> <li>▪ <b>every day</b></li> <li>▪ Monday</li> <li>▪ Tuesday</li> <li>▪ Wednesday</li> <li>▪ Thursday</li> <li>▪ Friday</li> <li>▪ Saturday</li> <li>▪ Sunday</li> <li>▪ every working day</li> <li>▪ every weekend day</li> </ul> | Setting on which day(s) the event is to be activated.<br><b>Visible when "Time" is selected.</b>                                                                                                                              |
| Object „Event A“ /<br>“Event B” sends | <ul style="list-style-type: none"> <li>▪ <b>OFF</b></li> <li>▪ ON</li> </ul>                                                                                                                                                                                         | Value to be sent when the condition for activating the event is fulfilled.                                                                                                                                                    |
| All values of intermediate meter      | <ul style="list-style-type: none"> <li>▪ <b>do not send</b></li> <li>▪ send</li> </ul>                                                                                                                                                                               | Settings for which additional actions are to be carried out when the condition for activating the event is fulfilled.<br><br><b>The number of possible actions depends on the selection "Activate event X with".</b>          |
| Costs of intermediate meter           | <ul style="list-style-type: none"> <li>▪ <b>do not send</b></li> <li>▪ send</li> </ul>                                                                                                                                                                               |                                                                                                                                                                                                                               |
| Reset of intermediate meter           | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>▪ active</li> </ul>                                                                                                                                                                              |                                                                                                                                                                                                                               |
| All values of main meter              | <ul style="list-style-type: none"> <li>▪ <b>do not send</b></li> <li>▪ send</li> </ul>                                                                                                                                                                               |                                                                                                                                                                                                                               |
| Costs of main meter                   | <ul style="list-style-type: none"> <li>▪ <b>do not send</b></li> <li>▪ send</li> </ul>                                                                                                                                                                               |                                                                                                                                                                                                                               |
| Reset of main meter                   | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>▪ active</li> </ul>                                                                                                                                                                              |                                                                                                                                                                                                                               |

**Table 14: Settings – Total generated: Energy and yield meter**

#### Main meter / Intermediate meter

The main meter always works with the datapoint type 13.013 (kWh). For the intermediate meter, the datapoint type can be set with the **"Object selection"** (Wh or kWh).

The setting **"Send meter reading by change"** can be used to set at which change the meter sends its actual meter reading. If the setting is "not active", the meter does not send a value, no matter how big the change is.

The setting "**Send meter reading cyclically every ...**" can be used to set the intervals at which the device sends its actual measured value. The cyclical sending function can be activated or deactivated independently of the setting "Send meter reading by change". Values are also sent if the meter has not recorded a change. If both parameters are deactivated, no value is ever sent.

### Yield meter

The settings for sending the yield correspond to the settings as for the main and intermediate meter.

### Event A / Event B

Two different events can be triggered if certain conditions are met. This is done via 1-bit objects.

- **final value: intermediate/main meter**  
Event is activated with a fixed value.
  - **final value: costs intermediate/main meter**  
Event is activated when a certain cost level is reached.
  - **time**  
Event is executed recurrently at a certain time. In addition to hours and minutes, it is also possible to set whether the event is to be activated on certain days.
  - **interval**  
Event is activated recurrently at a defined interval (in hours and minutes).
- Important:** The starting point and subsequent cyclical transmission repetition is always after reprogramming or when the bus voltage returns.

In addition to sending the object (Event A or Event B), other actions can be performed. These can be activated individually as required.

The associated communication objects are (Name is "Total generated" in each case):

| Number | Name/Object function                               | Length | Usage                                                            |
|--------|----------------------------------------------------|--------|------------------------------------------------------------------|
| 34     | Intermediate meter – Active energy                 | 4 Byte | Sending the meter reading.<br>DPT depending on parameter setting |
| 35     | Intermediate meter – Actual yield in Cent - Output | 4 Byte | Sending the actual yield                                         |
| 36     | Intermediate meter – Meter reading Day             | 4 Byte | Sending the meter reading                                        |
| 37     | Intermediate meter – Meter reading Night           | 4 Byte | Sending the meter reading                                        |
| 38     | Intermediate meter – Reset                         | 1 Bit  | Resetting the intermediate meter                                 |
| 39     | Main meter – Active energy                         | 4 Byte | Sending the meter reading.                                       |
| 40     | Main meter – Actual yield in Cent - Output         | 4 Byte | Sending the actual yield                                         |
| 41     | Main meter – Meter reading Day                     | 4 Byte | Sending the meter reading                                        |
| 42     | Main meter – Meter reading Night                   | 4 Byte | Sending the meter reading                                        |
| 43     | Main meter – Reset                                 | 1 Bit  | Resetting the main meter                                         |
| 44     | Event A                                            | 1 Bit  | Sending the value of Event A                                     |
| 45     | Event B                                            | 1 Bit  | Sending the value of Event B                                     |

**Table 15: Communication objects – Total generated: Energy and yield meter**

## 4.4 Consumption L1 ... L3

The chapter is described using the example of "Consumption L1". "Consumption L2" and "Consumption L3" behave accordingly.

### 4.4.1 Power measurement

The following settings are available for this menu:

|                               |                                                                                                                                           |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Active power                  | <input type="radio"/> not active <input checked="" type="radio"/> active                                                                  |
| Object selection              | <input checked="" type="radio"/> 4 Byte floating value in W (DPT 14.056)<br><input type="radio"/> 2 Byte floating value in kW (DPT 9.024) |
| Send value by change          | 10% ▼                                                                                                                                     |
| Send cyclically every ...     | 10 min ▼                                                                                                                                  |
| <hr/>                         |                                                                                                                                           |
| Monitoring of load exceedance | <input checked="" type="radio"/> not active <input type="radio"/> active                                                                  |
| <hr/>                         |                                                                                                                                           |
| Monitoring of load undercut   | <input checked="" type="radio"/> not active <input type="radio"/> active                                                                  |
| <hr/>                         |                                                                                                                                           |
| Reactive power                | <input type="radio"/> not active <input checked="" type="radio"/> active                                                                  |
| Object selection              | <input checked="" type="radio"/> 4 Byte floating value in W (DPT 14.056)<br><input type="radio"/> 2 Byte floating value in kW (DPT 9.024) |
| Send value by change          | 10% ▼                                                                                                                                     |
| Send cyclically every ...     | 10 min ▼                                                                                                                                  |
| <hr/>                         |                                                                                                                                           |
| Apparent power                | <input type="radio"/> not active <input checked="" type="radio"/> active                                                                  |
| Object selection              | <input checked="" type="radio"/> 4 Byte floating value in W (DPT 14.056)<br><input type="radio"/> 2 Byte floating value in kW (DPT 9.024) |
| Send value by change          | 10% ▼                                                                                                                                     |
| Send cyclically every ...     | 10 min ▼                                                                                                                                  |
| <hr/>                         |                                                                                                                                           |
| Power factor cos Phi          | <input type="radio"/> not active <input checked="" type="radio"/> active                                                                  |
| Send value by change          | 10% ▼                                                                                                                                     |
| Send cyclically every ...     | 10 min ▼                                                                                                                                  |

Figure 9: Settings – Consumption L1 ... L3: Power measurement

The table shows the possible settings:

| ETS-Text                          | Dynamic range<br>[Default value]                                                                                                                  | Comment                                                                                 |
|-----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| Active power                      | <ul style="list-style-type: none"> <li>not active</li> <li><b>active</b></li> </ul>                                                               | Activation of the menu for active power.                                                |
| Object selection                  | <ul style="list-style-type: none"> <li><b>4 Byte floating value in W (DPT 14.056)</b></li> <li>2 Byte floating value in kW (DPT 9.024)</li> </ul> | Setting of the datapoint type for the active power.                                     |
| Send value by change              | not active, 5 – 75 %<br>[10 %]                                                                                                                    | Setting whether and at which change the value is sent.                                  |
| Send cyclically every ...         | not active, 1 min – 24 h<br>[10 min]                                                                                                              | Setting whether and at what interval the value is to be sent cyclically.                |
| Monitoring of load exceedance     |                                                                                                                                                   |                                                                                         |
| Monitoring of load exceedance     | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                               | Activation of the function.                                                             |
| Value for load exceedance         | 0 ... 4600 W<br>[100 W]                                                                                                                           | Setting range for the threshold.<br><b>For EZ-0320.01</b>                               |
| Value for load exceedance         | 0 ... 15000 W<br>[100 W]                                                                                                                          | Setting range for the threshold.<br><b>For EZ-0363.01</b>                               |
| Hysteresis                        | 10 ... 100 %<br>[10 %]                                                                                                                            | Setting range for the hysteresis.                                                       |
| Value when exceeded               | <ul style="list-style-type: none"> <li>not active</li> <li><b>value „1“</b></li> <li>value „0“</li> </ul>                                         | Value to be sent when the switching threshold is exceeded.                              |
| Value on withdrawal of exceedance | <ul style="list-style-type: none"> <li>not active</li> <li>value „1“</li> <li><b>value „0“</b></li> </ul>                                         | Value that is to be sent if the value falls below the exceedance in the following.      |
| Minimum time of exceedance        | 0 ... 30000 s<br>[0 s]                                                                                                                            | Setting of the minimum time by which the value for exceedance must be overshoot.        |
| Send cyclically every ...         | <b>not active</b><br>1 min – 24 h                                                                                                                 | Setting whether and at what interval the actual values are to be sent cyclically.       |
| Monitoring of load undercut       |                                                                                                                                                   |                                                                                         |
| Monitoring of load undercut       | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                               | Activation of the function.                                                             |
| Value for load undercut           | 1 ... 4600 W<br>[5 W]                                                                                                                             | Setting range for the threshold.<br><b>For EZ-0320.01 and EZ-0363.01</b>                |
| Hysteresis                        | 10 ... 100 %<br>[10 %]                                                                                                                            | Setting range for the hysteresis.                                                       |
| Value when undercut               | <ul style="list-style-type: none"> <li>not active</li> <li><b>value „1“</b></li> <li>value „0“</li> </ul>                                         | Value to be sent when the switching threshold is undercut.                              |
| Value on withdrawal of undercut   | <ul style="list-style-type: none"> <li>not active</li> <li>value „1“</li> <li><b>value „0“</b></li> </ul>                                         | Value to be sent if the undercut is subsequently exceeded.                              |
| Minimum time of undercutting      | 0 ... 30000 s<br>[0 s]                                                                                                                            | Setting of the time by which the value must at least fall below the value for undercut. |
| Send cyclically every ...         | <b>not active</b><br>1 min – 24 h                                                                                                                 | Setting whether and at what interval the actual values are to be sent cyclically.       |

| Reactive power / Apparent power / Power factor cos Phi |                                                                                                                                                       |                                                                          |
|--------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------|
| Reactive power                                         | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                                                               | Activation of the function.                                              |
| Object selection                                       | <ul style="list-style-type: none"> <li>• <b>4 Byte floating value in W (DPT 14.056)</b></li> <li>• 2 Byte floating value in kW (DPT 9.024)</li> </ul> | Setting of the datapoint type for the reactive power.                    |
| Send value by change                                   | not active, 5 – 75 %<br><b>[10 %]</b>                                                                                                                 | Setting whether and at which change the value is sent.                   |
| Send cyclically every ...                              | not active, 1 min – 24 h<br><b>[10 min]</b>                                                                                                           | Setting whether and at what interval the value is to be sent cyclically. |
| Apparent power                                         | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                                                               | Activation of the function.                                              |
| Object selection                                       | <ul style="list-style-type: none"> <li>• <b>4 Byte floating value in W (DPT 14.056)</b></li> <li>• 2 Byte floating value in kW (DPT 9.024)</li> </ul> | Setting of the datapoint type for the apparent power.                    |
| Send value by change                                   | not active, 5 – 75 %<br><b>[10 %]</b>                                                                                                                 | Setting whether and at which change the value is sent.                   |
| Send cyclically every ...                              | not active, 1 min – 24 h<br><b>[10 min]</b>                                                                                                           | Setting whether and at what interval the value is to be sent cyclically. |
| Power factor cos Phi                                   | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                                                               | Activation of the function.                                              |
| Send value by change                                   | not active, 5 – 75 %<br><b>[10 %]</b>                                                                                                                 | Setting whether and at which change the value is sent.                   |
| Send cyclically every ...                              | not active, 1 min – 24 h<br><b>[10 min]</b>                                                                                                           | Setting whether and at what interval the value is to be sent cyclically. |

**Table 16: Settings – Consumption L1 ... L3: Power measurement**

#### Active power

The "**Object selection**" determines whether the values are to be output in "W" or "KW". With "**Send value by change**" it can be set at which change (in %) the corresponding value is to be sent on the bus. "**Send cyclically**" determines the constant intervals at which the current value is to be sent.

#### Monitoring of load exceedance

The "**Value for load exceedance**" describes the value above which the selected action "**Value when exceeded**" is to be carried out.

With the "**Hysteresis**", the switch-off threshold can be shifted. This threshold is calculated with a hysteresis of 10% for a load exceedance value of 100 W as follows:

Switch-on point = 100 W; reset when the load falls below 90 W (switch-on value minus hysteresis).

The "**Minimum time of exceedance**" indicates how long an exceedance must be measured before the action is triggered. For example, a minimum time of 10 s for a load exceedance value of 100 W means that a value above 100 W must be measured for 10 s before the exceedance action is triggered. The minimum time for exceedance works together with the hysteresis. So if an exceedance is measured, the power must fall below the set value minus hysteresis to stop the dwell time.

The "**Value on withdrawal of exceedance**" triggers a defined action, which is carried out when a load exceedance has fallen below again.

**Important:** After reset/reprogramming, the value for the switching threshold must be exceeded again in order to send the "Value on withdrawal of exceedance"!

### Monitoring of load undercut

The **"Value for load undercut"** describes the value below which the selected action **"Value when undercut"** is to be carried out.

The **"Hysteresis"** can be used to shift the switch-off threshold. This threshold is calculated with a hysteresis of 10% for a load undercut value of 100 W as follows:

Switch-on point = 100 W; reset when 110 W is exceeded (switch-on value plus hysteresis).

The **"Minimum time of undercutting"** indicates how long an undercut must be measured before the action is triggered. For example, a minimum time of 10 s for a load undercut value of 100 W means that a value below 100 W must be measured for 10 s before the undercut action is triggered. The minimum time for undercut works together with the hysteresis. So if an undercut is measured, the power must rise above the set value plus hysteresis to stop the dwell time.

The **"Value on withdrawal of undercut"** triggers a defined action, which is executed when a load undercut has been exceeded again.

**Important:** After reset/reprogramming, the value for undercut must be undercut again in order to send the "Value on withdrawal of undercut"!

### Reactive power / Apparent power / Power factor cos Phi

In addition to the active power, the calculated values of the reactive power, the apparent power and the power factor cos Phi can also be output. For the reactive and apparent power, the **"Object selection"** can be used to determine whether the values are to be output in "W" or "KW". With **"Send value by change"** it can be set at which change (in %) the corresponding value is to be sent on the bus. **"Send cyclically"** defines the constant intervals at which an actual value is to be sent.

The following table shows the available communication objects:

| Number | Name/Object function                     | Length           | Usage                                                                         |
|--------|------------------------------------------|------------------|-------------------------------------------------------------------------------|
| 50     | Consumption L1 – Active power            | 2 Byte<br>4 Byte | Output of the measured active power.<br>DPT according to "Object selection"   |
| 53     | Consumption L1 – Reactive power          | 2 Byte<br>4 Byte | Output of the measured reactive power.<br>DPT according to "Object selection" |
| 54     | Consumption L1 – Apparent power          | 2 Byte<br>4 Byte | Output of the measured apparent power.<br>DPT according to "Object selection" |
| 55     | Consumption L1 – Power factor<br>cos Phi | 4 Byte           | Output of the measured power factor                                           |
| 56     | Consumption L1 – Load undercut           | 1 Bit            | Reporting a load undercut                                                     |
| 57     | Consumption L1 – Load<br>exceedance      | 1 Bit            | Reporting a load exceedance                                                   |

**Table 17: Communication objects – Consumption L1 ... L3: Power measurement**

#### 4.4.2 Current measurement

The following settings are available for this menu:

|                                   |                                                                          |
|-----------------------------------|--------------------------------------------------------------------------|
| Current measurement               | <input type="radio"/> not active <input checked="" type="radio"/> active |
| Object selection                  | Value in mA (DPT 7.012) ▼                                                |
| Send value by change              | not active ▼                                                             |
| Send cyclically every ...         | 10 min ▼                                                                 |
| <hr/>                             |                                                                          |
| Monitoring of current exceedance  | <input type="radio"/> not active <input checked="" type="radio"/> active |
| Value for current exceedance      | 300 ▲▼ mA                                                                |
| Hysteresis                        | 10 ▲▼ %                                                                  |
| Value when exceeded               | value "1" ▼                                                              |
| Value on withdrawal of exceedance | value "0" ▼                                                              |
| Minimum time of exceedance        | 0 ▲▼ s                                                                   |
| Send cyclically every ...         | not active ▼                                                             |
| <hr/>                             |                                                                          |
| Monitoring of current undercut    | <input type="radio"/> not active <input checked="" type="radio"/> active |
| Value for current undercut        | 100 ▲▼ mA                                                                |
| Hysteresis                        | 10 ▲▼ %                                                                  |
| Value when undercut               | value "1" ▼                                                              |
| Value on withdrawal of undercut   | value "0" ▼                                                              |
| Minimum time of undercutting      | 0 ▲▼ s                                                                   |
| Send cyclically every ...         | not active ▼                                                             |

Figure 10: Settings – Consumption L1 ... L3: Current measurement

The table shows the possible settings:

| ETS-Text            | Dynamic range<br>[Default value]                                                                                                                                     | Comment                                                 |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------|
| Current measurement | <ul style="list-style-type: none"> <li>not active</li> <li><b>active</b></li> </ul>                                                                                  | Activation of the menu for the current measurement.     |
| Object selection    | <ul style="list-style-type: none"> <li><b>Value in mA (DPT 7.012)</b></li> <li>Floating value in mA (DPT 9.021)</li> <li>Floating value in A (DPT 14.019)</li> </ul> | Setting the datapoint type for the current measurement. |

|                                         |                                                                                                                 |                                                                                         |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| Send value by change                    | <b>not active</b><br>5 – 75 %                                                                                   | Setting whether and at which change the value is sent.                                  |
| Send cyclically every ...               | not active, 1 min – 24 h<br><b>[10 min]</b>                                                                     | Setting whether and at what interval the value is to be sent cyclically.                |
| <b>Monitoring of current exceedance</b> |                                                                                                                 |                                                                                         |
| Monitoring of current exceedance        | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                         | Activation of the function.                                                             |
| Value for current exceedance            | 3 ... 20000 mA<br><b>[300 mA]</b>                                                                               | Setting range of the threshold.<br><b>For EZ-0320.01</b>                                |
| Value for current exceedance            | 3 ... 63000 mA<br><b>[300 mA]</b>                                                                               | Setting range of the threshold.<br><b>For EZ-0363.01</b>                                |
| Hysteresis                              | 10 ... 100 %<br><b>[10 %]</b>                                                                                   | Setting range for the hysteresis.                                                       |
| Value when exceeded                     | <ul style="list-style-type: none"> <li>• not active</li> <li>• <b>value „1“</b></li> <li>• value „0“</li> </ul> | Value to be sent when the switching threshold is exceeded.                              |
| Value on withdrawal of exceedance       | <ul style="list-style-type: none"> <li>• not active</li> <li>• value „1“</li> <li>• <b>value „0“</b></li> </ul> | Value that is to be sent if the value falls below the exceedance in the following.      |
| Minimum time of exceedance              | 0 ... 30000 s<br><b>[0 s]</b>                                                                                   | Setting of the minimum time by which the value for exceedance must be overshoot.        |
| Send cyclically every ...               | <b>not active</b><br>1 min – 24 h                                                                               | Setting whether and at what interval the actual values are to be sent cyclically.       |
| <b>Monitoring of current undercut</b>   |                                                                                                                 |                                                                                         |
| Monitoring of current undercut          | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                         | Activation of the function.                                                             |
| Value for current undercut              | 3 ... 20000 mA<br><b>[100 mA]</b>                                                                               | Setting range of the threshold.<br><b>For EZ-0320.01</b>                                |
| Value for current undercut              | 3 ... 63000 mA<br><b>[100 mA]</b>                                                                               | Setting range of the threshold.<br><b>For EZ-0363.01</b>                                |
| Hysteresis                              | 10 ... 100 %<br><b>[10 %]</b>                                                                                   | Setting range for the hysteresis.                                                       |
| Value when undercut                     | <ul style="list-style-type: none"> <li>• not active</li> <li>• <b>value „1“</b></li> <li>• value „0“</li> </ul> | Value to be sent when the switching threshold is undercut.                              |
| Value on withdrawal of undercut         | <ul style="list-style-type: none"> <li>• not active</li> <li>• value „1“</li> <li>• <b>value „0“</b></li> </ul> | Value to be sent if the undercut is subsequently exceeded.                              |
| Minimum time of undercutting            | 0 ... 30000 s<br><b>[0 s]</b>                                                                                   | Setting of the time by which the value must at least fall below the value for undercut. |
| Send cyclically every ...               | <b>not active</b><br>1 min – 24 h                                                                               | Setting whether and at what interval the actual values are to be sent cyclically.       |

**Table 18: Settings – Consumption L1 ... L3: Current measurement**

### Current measurement

The **"Object selection"** determines whether the values are to be output in "A" or "mA". With **"Send value by change"** it can be set at which change (in %) the corresponding value is to be sent on the bus. **"Send cyclically"** determines the constant intervals at which the current value is to be sent.

### Monitoring of current exceedance

The **"Value for current exceedance"** describes the value above which the selected action **"Value when exceeded"** is to be carried out.

With the **"Hysteresis"**, the switch-off threshold can be shifted. This threshold is calculated with a hysteresis of 10% for a load exceedance value of 100 mA as follows:

Switch-on point = 100 mA; reset when the load falls below 90 mA (switch-on value minus hysteresis).

The **"Minimum time of exceedance"** indicates how long an exceedance must be measured before the action is triggered. For example, a minimum time of 10 s for a current exceedance value of 100 mA means that a value above 100 mA must be measured for 10 s before the exceedance action is triggered. The minimum time for exceedance works together with the hysteresis. So if an exceedance is measured, the current must fall below the set value minus hysteresis to stop the dwell time.

The **"Value on withdrawal of exceedance"** triggers a defined action, which is carried out when a current exceedance has fallen below again.

**Important:** After reset/reprogramming, the value for the switching threshold must be exceeded again in order to send the "Value on withdrawal of exceedance"!

### Monitoring of current undercut

The **"Value for current undercut"** describes the value below which the selected action **"Value when undercut"** is to be carried out.

The **"Hysteresis"** can be used to shift the switch-off threshold. This threshold is calculated with a hysteresis of 10% for a current undercut value of 100 mA as follows:

Switch-on point = 100 mA; reset when 110 mA is exceeded (switch-on value plus hysteresis).

The **"Minimum time of undercutting"** indicates how long undercutting must be measured before the action is triggered. For example, a minimum time of 10 s for a current undercut value of 100 mA means that a value below 100 mA must be measured for 10 s before the undercut action is triggered. The minimum time for undercut works together with the hysteresis. So if an undercut is measured, the current must rise above the set value plus hysteresis to stop the dwell time.

The **"Value on withdrawal of undercutting"** triggers a defined action, which is carried out when a current undercut has fallen below again.

**Important:** After reset/reprogramming, the value for the switching threshold must be exceeded again in order to send the "Value on withdrawal of exceedance"!

The following table shows the available communication objects:

| Number | Name/Object function                                      | Length           | Usage                                                                        |
|--------|-----------------------------------------------------------|------------------|------------------------------------------------------------------------------|
| 51     | Consumption L1 –<br>Current value (mA), Current value (A) | 2 Byte<br>4 Byte | Output of the measured current value.<br>DPT according to "Object selection" |
| 58     | Consumption L1 – Current undercut                         | 1 Bit            | Reporting a current undercut                                                 |
| 59     | Consumption L1 – Current<br>exceedance                    | 1 Bit            | Reporting a current exceedance                                               |

**Table 19: Communication objects – Consumption L1 ... L3: Current measurement**

### 4.4.3 Voltage measurement

The following settings are available for this menu:

|                                   |                                                                          |
|-----------------------------------|--------------------------------------------------------------------------|
| Voltage measurement               | <input type="radio"/> not active <input checked="" type="radio"/> active |
| Send value by change              | not active                                                               |
| Send cyclically every ...         | 10 min                                                                   |
| <hr/>                             |                                                                          |
| Monitoring of voltage exceedance  | <input type="radio"/> not active <input checked="" type="radio"/> active |
| Value for voltage exceedance      | 260 <span style="float: right;">V</span>                                 |
| Hysteresis                        | 10 %                                                                     |
| Value when exceeded               | value "1"                                                                |
| Value on withdrawal of exceedance | value "0"                                                                |
| Minimum time of exceedance        | 0 s                                                                      |
| Send cyclically every ...         | not active                                                               |
| <hr/>                             |                                                                          |
| Monitoring of voltage undercut    | <input type="radio"/> not active <input checked="" type="radio"/> active |
| Value for voltage undercut        | 200 <span style="float: right;">V</span>                                 |
| Hysteresis                        | 10 %                                                                     |
| Value when undercut               | value "1"                                                                |
| Value on withdrawal of undercut   | value "0"                                                                |
| Minimum time of undercutting      | 0 s                                                                      |
| Send cyclically every ...         | not active                                                               |

Figure 11: Settings – Consumption L1 ... L3: Voltage measurement

The table shows the possible settings:

| ETS-Text                          | Dynamic range<br>[Default value]                                                                          | Comment                                                                                 |
|-----------------------------------|-----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| Voltage measurement               | <ul style="list-style-type: none"> <li>not active</li> <li><b>active</b></li> </ul>                       | Activation of the menu for voltage measurement                                          |
| Send value by change              | <b>not active</b><br>5 – 75 %                                                                             | Setting whether and at which change the value is sent.                                  |
| Send cyclically every ...         | not active, 1 min – 24 h<br><b>[10 min]</b>                                                               | Setting whether and at what interval the value is to be sent cyclically.                |
| Monitoring of voltage exceedance  |                                                                                                           |                                                                                         |
| Monitoring of voltage exceedance  | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                       | Activation of the function.                                                             |
| Value for voltage exceedance      | 180 ... 300 V<br><b>[260 V]</b>                                                                           | Setting range for threshold.<br><b>For EZ-0320.01 and EZ-0363.01</b>                    |
| Hysteresis                        | 10 ... 100 %<br><b>[10 %]</b>                                                                             | Setting range for the hysteresis.                                                       |
| Value when exceeded               | <ul style="list-style-type: none"> <li>not active</li> <li><b>value „1“</b></li> <li>value „0“</li> </ul> | Value to be sent when the switching threshold is exceeded.                              |
| Value on withdrawal of exceedance | <ul style="list-style-type: none"> <li>not active</li> <li>value „1“</li> <li><b>value „0“</b></li> </ul> | Value that is to be sent if the value falls below the exceedance in the following.      |
| Minimum time of exceedance        | 0 ... 30000 s<br><b>[0 s]</b>                                                                             | Setting of the minimum time by which the value for exceedance must be overshoot.        |
| Send cyclically every ...         | <b>not active</b><br>1 min – 24 h                                                                         | Setting whether and at what interval the actual values are to be sent cyclically.       |
| Monitoring of voltage undercut    |                                                                                                           |                                                                                         |
| Monitoring of voltage undercut    | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                       | Activation of the function.                                                             |
| Value for voltage undercut        | 180 ... 300 V<br><b>[200 V]</b>                                                                           | Setting range for threshold.<br><b>For EZ-0320.01 and EZ-0363.01</b>                    |
| Hysteresis                        | 10 ... 100 %<br><b>[10 %]</b>                                                                             | Setting range for the hysteresis.                                                       |
| Value when undercut               | <ul style="list-style-type: none"> <li>not active</li> <li><b>value „1“</b></li> <li>value „0“</li> </ul> | Value to be sent when the switching threshold is undercut.                              |
| Value on withdrawal of undercut   | <ul style="list-style-type: none"> <li>not active</li> <li>value „1“</li> <li><b>value „0“</b></li> </ul> | Value to be sent if the undercut is subsequently exceeded.                              |
| Minimum time of undercutting      | 0 ... 30000 s<br><b>[0 s]</b>                                                                             | Setting of the time by which the value must at least fall below the value for undercut. |
| Send cyclically every ...         | <b>not active</b><br>1 min – 24 h                                                                         | Setting whether and at what interval the actual values are to be sent cyclically.       |

**Table 20: Settings – Consumption L1 ... L3: Voltage measurement**

### Voltage measurement

Use **"Send value by change"** to set the change (in %) at which the corresponding value is to be sent to the bus. **"Send cyclically every"** defines the constant intervals at which the current value is to be sent.

### Monitoring of voltage exceedance

The **"Value for voltage exceedance"** describes the value above which the selected action **"Value when exceeded"** is to be carried out.

With the **"Hysteresis"**, the switch-off threshold can be shifted. This threshold is calculated with a hysteresis of 10% for a load exceedance value of 200 V as follows:

Switch-on point = 200 V; reset when the load falls below 180 V (switch-on value minus hysteresis).

The **"Minimum time of exceedance"** indicates how long an exceedance must be measured before the action is triggered. For example, a minimum time of 10 s for a voltage exceedance value of 200 V means that a value above 200 V must be measured for 10 s before the exceedance action is triggered. The minimum time for exceedance works together with the hysteresis. So if an exceedance is measured, the power must fall below the set value minus hysteresis to stop the dwell time.

The **"Value on withdrawal of exceedance"** triggers a defined action, which is carried out when a voltage exceedance has fallen below again.

**Important:** After reset/reprogramming, the value for the switching threshold must be exceeded again in order to send the "Value on withdrawal of exceedance"!

### Monitoring of voltage undercut

The **"Value for voltage undercut"** describes the value below which the selected action **"Value when undercut"** is to be carried out.

The **"Hysteresis"** can be used to shift the switch-off threshold. This threshold is calculated with a hysteresis of 10% for a voltage undercut value of 200 V as follows:

Switch-on point = 200 V; reset when 220 V is exceeded (switch-on value plus hysteresis).

The **"Minimum time of undercutting"** indicates how long undercutting must be measured before the action is triggered. For example, a minimum time of 10 s for a voltage undercut value of 200 V means that a value below 200 V must be measured for 10 s before the undercut action is triggered. The minimum time for undercut works together with the hysteresis. So if an undercut is measured, the voltage must rise above the set value plus hysteresis to stop the dwell time.

The **"Value on withdrawal of undercut"** triggers a defined action, which is executed when a voltage undercut has been exceeded again.

**Important:** After reset/reprogramming, the value for undercut must be undercut again in order to send the "Value on withdrawal of undercut"!

The following table shows the available communication objects:

| Number | Name/Object function                | Length | Usage                                |
|--------|-------------------------------------|--------|--------------------------------------|
| 52     | Consumption L1 – Voltage value (V)  | 4 Byte | Output of the measured voltage value |
| 60     | Consumption L1 – Voltage undercut   | 1 Bit  | Reporting a voltage undercut         |
| 61     | Consumption L1 – Voltage exceedance | 1 Bit  | Reporting a voltage exceedance       |

**Table 21: Communication objects – Consumption L1 ... L3: Voltage measurement**

#### 4.4.4 Energy and cost meter

**Important:**

To use the cost meter, the parameter "Cost meter" in "General settings" must be activated!

The following settings are available:

|                                         |                                                                                                              |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------|
| Main and intermediate meter             | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Main meter                              |                                                                                                              |
| Send meter reading by change            | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send meter reading every ...            | 1 kWh                                                                                                        |
| Send meter reading cyclically every ... | 30 min                                                                                                       |
| Cost meter                              |                                                                                                              |
| Send by change                          | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send actual costs every ...             | 100 €                                                                                                        |
| Send cyclically every ...               | not active                                                                                                   |
| Intermediate meter                      |                                                                                                              |
| Object selection                        | <input checked="" type="radio"/> Value in Wh (DPT 13.010)<br><input type="radio"/> Value in kWh (DPT 13.013) |
| Send meter reading by change            | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send meter reading every ...            | 10 Wh                                                                                                        |
| Send meter reading cyclically every ... | not active                                                                                                   |
| Cost meter                              |                                                                                                              |
| Send by change                          | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send actual costs every ...             | 10 €                                                                                                         |
| Send cyclically every ...               | not active                                                                                                   |
| Activate Event A with                   | not active                                                                                                   |
| Activate Event B with                   | not active                                                                                                   |

Figure 12: Settings – Consumption L1 ... L3: Energy and cost meter

The table shows the possible settings:

| ETS-Text                                                                            | Dynamic range<br>[Default value]                                                                                                                                                                                                                                                  | Comment                                                                                               |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
| Main and intermediate meter                                                         | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                                                                                                                                                                                           | Activation of the meters.<br><b>If "not active", no parameters appear in the following!</b>           |
| Main meter (is automatically active after activating "Main and intermediate meter") |                                                                                                                                                                                                                                                                                   |                                                                                                       |
| Send meter reading by change                                                        | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                                                                                                                                                                                           | Setting whether the meter reading should be sent when changed.                                        |
| Send meter reading every ...                                                        | 1 – 500 kWh<br>[1 kWh]                                                                                                                                                                                                                                                            | Setting for which change the meter reading is to be sent.                                             |
| Send meter reading cyclically every ...                                             | not active, 1 min – 24 h<br>[30 min]                                                                                                                                                                                                                                              | Setting whether and at what interval the meter reading is to be sent cyclically.                      |
| Intermediate meter                                                                  |                                                                                                                                                                                                                                                                                   |                                                                                                       |
| Intermediate meter                                                                  | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                                                                                                                                                                                           | Activation of the intermediate meter.                                                                 |
| Object selection                                                                    | <ul style="list-style-type: none"> <li>• <b>Value in Wh (DPT 13.010)</b></li> <li>• Value in kWh (DPT 13.013)</li> </ul>                                                                                                                                                          | Selection of the datapoint type for the intermediate meter.                                           |
| Send meter reading by change                                                        | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                                                                                                                                                                                           | Setting whether the meter reading is to be sent when changed.                                         |
| Send meter reading every ...                                                        | 10 – 50000 Wh<br>[10 Wh]                                                                                                                                                                                                                                                          | Setting at which change the meter reading is to be sent.<br><b>With object selection „DPT 13.010“</b> |
| Send meter reading every ...                                                        | 1 – 500 kWh<br>[1 kWh]                                                                                                                                                                                                                                                            | Setting at which change the meter reading is to be sent.<br><b>With object selection „DPT 13.013“</b> |
| Send meter reading cyclically every ...                                             | <b>not active</b><br>1 min – 24 h                                                                                                                                                                                                                                                 | Setting whether and at what interval the meter reading is to be sent cyclically.                      |
| Cost meter (Settings are the same for main and intermediate meter)                  |                                                                                                                                                                                                                                                                                   |                                                                                                       |
| Cost meter                                                                          | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                                                                                                                                                                                           | Activation of the cost meter.<br><b>Only visible if "Cost meter" is active in "General settings"!</b> |
| Send by change                                                                      | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                                                                                                                                                                                           | Setting whether the cost reading should be sent when it is changed.                                   |
| Send actual costs every ...                                                         | 1 ... 255 €<br>[10 €]                                                                                                                                                                                                                                                             | Setting for which change the cost reading is to be sent.                                              |
| Send cyclically every ...                                                           | <b>not active</b> ,<br>1 min – 24 h                                                                                                                                                                                                                                               | Setting whether and at what interval the cost reading is to be sent cyclically.                       |
| Event A / Event B                                                                   |                                                                                                                                                                                                                                                                                   |                                                                                                       |
| Activate Event A/B with                                                             | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• final value: intermediate meter</li> <li>• final value: main meter</li> <li>• final value: costs intermediate meter</li> <li>• final value: costs main meter</li> <li>• time</li> <li>• interval</li> </ul> | Determination of the action with which an event is to be activated.                                   |

|                                       |                                                                                                                                                                                                                                                                      |                                                                                                                                                                                                                               |
|---------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Final value                           | 1 ... 4294967295 kWh/Wh<br><b>[200]</b>                                                                                                                                                                                                                              | Value from which the event is to be activated.<br><b>Visible when "Final value ..." is selected.</b><br><b>DPT for main meter is "kWh".</b><br><b>DPT for intermediate meter depends on the "Object selection" parameter.</b> |
| Final value                           | 1 ... 4294967295 €<br><b>[200]</b>                                                                                                                                                                                                                                   | Value from which the event is to be activated.<br><b>Visible when selecting "Final value: Costs ...".</b>                                                                                                                     |
| Hours                                 | 0 ... 23<br><b>[0]</b>                                                                                                                                                                                                                                               | Set<br>- the time at which the event is to be activated.<br>- the interval at which the event is to be activated.<br><b>If "time" or "interval" is selected</b>                                                               |
| Minutes                               | 0 ... 59<br><b>[0]</b>                                                                                                                                                                                                                                               |                                                                                                                                                                                                                               |
| Day                                   | <ul style="list-style-type: none"> <li>▪ <b>every day</b></li> <li>▪ Monday</li> <li>▪ Tuesday</li> <li>▪ Wednesday</li> <li>▪ Thursday</li> <li>▪ Friday</li> <li>▪ Saturday</li> <li>▪ Sunday</li> <li>▪ every working day</li> <li>▪ every weekend day</li> </ul> | Setting on which day(s) the event is to be activated.<br><b>Visible when "Time" is selected.</b>                                                                                                                              |
| Object „Event A“ /<br>“Event B” sends | <ul style="list-style-type: none"> <li>▪ <b>OFF</b></li> <li>▪ ON</li> </ul>                                                                                                                                                                                         | Value to be sent when the condition for activating the event is fulfilled.                                                                                                                                                    |
| All values of intermediate meter      | <ul style="list-style-type: none"> <li>▪ <b>do not send</b></li> <li>▪ send</li> </ul>                                                                                                                                                                               | Settings for which additional actions are to be carried out when the condition for activating the event is fulfilled.<br><br><b>The number of possible actions depends on the selection "Activate event X with".</b>          |
| Costs of intermediate meter           | <ul style="list-style-type: none"> <li>▪ <b>do not send</b></li> <li>▪ send</li> </ul>                                                                                                                                                                               |                                                                                                                                                                                                                               |
| Reset of intermediate meter           | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>▪ active</li> </ul>                                                                                                                                                                              |                                                                                                                                                                                                                               |
| All values of main meter              | <ul style="list-style-type: none"> <li>▪ <b>do not send</b></li> <li>▪ send</li> </ul>                                                                                                                                                                               |                                                                                                                                                                                                                               |
| Costs of main meter                   | <ul style="list-style-type: none"> <li>▪ <b>do not send</b></li> <li>▪ send</li> </ul>                                                                                                                                                                               |                                                                                                                                                                                                                               |
| Reset of main meter                   | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>▪ active</li> </ul>                                                                                                                                                                              |                                                                                                                                                                                                                               |

**Table 22: Settings – Consumption L1 ... L3: Energy and cost meter**

#### Main meter / Intermediate meter

The main meter always works with the datapoint type 13.013 (kWh). For the intermediate meter, the datapoint type can be set with the "**Object selection**" (Wh or kWh).

The setting "**Send meter reading by change**" can be used to set at which change the meter sends its actual meter reading. If the setting is "not active", the meter does not send a value, no matter how big the change is.

The setting "**Send meter reading cyclically every ...**" can be used to set the intervals at which the meter sends its actual measured value. The cyclical sending function can be activated or deactivated independently of the setting "Send meter reading by change". Values are also sent if the meter has not recorded a change. If both parameters are deactivated, no value is ever sent.

#### Cost meter

The settings for sending the cost reading correspond to the settings as for the main and intermediate meter.

#### Event A / Event B

Two different events can be triggered if certain conditions are met. This is done via 1-bit objects.

- **final value: intermediate/main meter**  
Event is activated with a fixed value.
- **final value: costs intermediate/main meter**  
Event is activated when a certain cost level is reached.
- **time**  
Event is executed recurrently at a certain time. In addition to hours and minutes, it is also possible to set whether the event is to be activated on certain days.
- **interval**  
Event is activated recurrently at a defined interval (in hours and minutes).  
**Important:** The starting point and subsequent cyclical transmission repetition is always after reprogramming or when the bus voltage returns.

In addition to sending the object (Event A or Event B), other actions can be performed. These can be activated individually as required.

The associated communication objects are (Name in each case is "Consumption L1"):

| Number | Name/Object function                        | Length | Usage                                                            |
|--------|---------------------------------------------|--------|------------------------------------------------------------------|
| 62     | Intermediate meter – Active energy          | 4 Byte | Sending the meter reading.<br>DPT depending on parameter setting |
| 63     | Intermediate meter – Costs in Cent - Output | 4 Byte | Sending the actual costs                                         |
| 64     | Intermediate meter – Meter reading Day      | 4 Byte | Sending the meter reading                                        |
| 65     | Intermediate meter – Meter reading Night    | 4 Byte | Sending the meter reading                                        |
| 66     | Intermediate meter – Reset                  | 1 Bit  | Resetting the intermediate meter                                 |
| 67     | Main meter – Active energy                  | 4 Byte | Sending the meter reading.                                       |
| 68     | Main meter – Costs in Cent - Output         | 4 Byte | Sending the actual costs                                         |
| 69     | Main meter – Meter reading Day              | 4 Byte | Sending the meter reading                                        |
| 70     | Main meter – Meter reading Night            | 4 Byte | Sending the meter reading                                        |
| 71     | Main meter – Reset                          | 1 Bit  | Resetting the main meter                                         |
| 72     | Meter – Event A                             | 1 Bit  | Sending the value of Event A                                     |
| 73     | Meter – Event B                             | 1 Bit  | Sending the value of Event B                                     |
| + 25   | next channel                                |        |                                                                  |

**Table 23: Communication objects – Consumption L1 ... L3: Energy and cost meter**

## 4.5 Generation L1 ... L3

The chapter is described using the example of "Generation L1".  
"Generation L2" and "Generation L3" behave accordingly.

### 4.5.1 Power measurement

The following settings are available:

|                                   |                                                                                                                                           |
|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Active power                      | <input type="radio"/> not active <input checked="" type="radio"/> active                                                                  |
| Object selection                  | <input checked="" type="radio"/> 4 Byte floating value in W (DPT 14.056)<br><input type="radio"/> 2 Byte floating value in kW (DPT 9.024) |
| Send value by change              | 10% ▼                                                                                                                                     |
| Send cyclically every ...         | 10 min ▼                                                                                                                                  |
| <hr/>                             |                                                                                                                                           |
| Monitoring of load exceedance     | <input type="radio"/> not active <input checked="" type="radio"/> active                                                                  |
| Value for load exceedance         | 100 ▲▼ W                                                                                                                                  |
| Hysteresis                        | 10 ▲▼ %                                                                                                                                   |
| Value when exceeded               | value "1" ▼                                                                                                                               |
| Value on withdrawal of exceedance | value "0" ▼                                                                                                                               |
| Minimum time of exceedance        | 0 ▲▼ s                                                                                                                                    |
| Send cyclically every ...         | not active ▼                                                                                                                              |
| <hr/>                             |                                                                                                                                           |
| Monitoring of load undercut       | <input type="radio"/> not active <input checked="" type="radio"/> active                                                                  |
| Value for load undercut           | 5 ▲▼ W                                                                                                                                    |
| Hysteresis                        | 10 ▲▼ %                                                                                                                                   |
| Value when undercut               | value "1" ▼                                                                                                                               |
| Value on withdrawal of undercut   | value "0" ▼                                                                                                                               |
| Minimum time of undercutting      | 0 ▲▼ s                                                                                                                                    |
| Send cyclically every ...         | not active ▼                                                                                                                              |

Figure 13: Settings – Generation L1 ... L3: Power measurement

The table shows the possible settings:

| ETS-Text                          | Dynamic range<br>[Default value]                                                                                                                  | Comment                                                                                 |
|-----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| Active power                      | <ul style="list-style-type: none"> <li>not active</li> <li><b>active</b></li> </ul>                                                               | Activation of the menu for active power.                                                |
| Object selection                  | <ul style="list-style-type: none"> <li><b>4 Byte floating value in W (DPT 14.056)</b></li> <li>2 Byte floating value in kW (DPT 9.024)</li> </ul> | Setting of the datapoint type for the active power.                                     |
| Send value by change              | not active, 5 – 75 %<br>[10 %]                                                                                                                    | Setting whether and at which change the value is sent.                                  |
| Send cyclically every ...         | not active, 1 min – 24 h<br>[10 min]                                                                                                              | Setting whether and at what interval the value is to be sent cyclically.                |
| Monitoring of load exceedance     |                                                                                                                                                   |                                                                                         |
| Monitoring of load exceedance     | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                               | Activation of the function.                                                             |
| Value for load exceedance         | 0 ... 4600 W<br>[100 W]                                                                                                                           | Setting range for the threshold.<br><b>For EZ-0320.01</b>                               |
| Value for load exceedance         | 0 ... 15000 W<br>[100 W]                                                                                                                          | Setting range for the threshold.<br><b>For EZ-0363.01</b>                               |
| Hysteresis                        | 10 ... 100 %<br>[10 %]                                                                                                                            | Setting range for the hysteresis.                                                       |
| Value when exceeded               | <ul style="list-style-type: none"> <li>not active</li> <li><b>value „1“</b></li> <li>value „0“</li> </ul>                                         | Value to be sent when the switching threshold is exceeded.                              |
| Value on withdrawal of exceedance | <ul style="list-style-type: none"> <li>not active</li> <li>value „1“</li> <li><b>value „0“</b></li> </ul>                                         | Value that is to be sent if the value falls below the exceedance in the following.      |
| Minimum time of exceedance        | 0 ... 30000 s<br>[0 s]                                                                                                                            | Setting of the minimum time by which the value (exceedance) must be passed.             |
| Send cyclically every ...         | <b>not active</b><br>1 min – 24 h                                                                                                                 | Setting whether and at what interval the actual values are to be sent cyclically.       |
| Monitoring of load undercut       |                                                                                                                                                   |                                                                                         |
| Monitoring of load undercut       | <ul style="list-style-type: none"> <li><b>not active</b></li> <li>active</li> </ul>                                                               | Activation of the function.                                                             |
| Value for load undercut           | 1 ... 4600 W<br>[5 W]                                                                                                                             | Setting range for the threshold.<br><b>For EZ-0320.01 and EZ-0363.01</b>                |
| Hysteresis                        | 10 ... 100 %<br>[10 %]                                                                                                                            | Setting range for the hysteresis.                                                       |
| Value when undercut               | <ul style="list-style-type: none"> <li>not active</li> <li><b>value „1“</b></li> <li>value „0“</li> </ul>                                         | Value to be sent when the switching threshold is undercut.                              |
| Value on withdrawal of undercut   | <ul style="list-style-type: none"> <li>not active</li> <li>value „1“</li> <li><b>value „0“</b></li> </ul>                                         | Value to be sent if the undercut is subsequently exceeded.                              |
| Minimum time of undercutting      | 0 ... 30000 s<br>[0 s]                                                                                                                            | Setting of the time by which the value must at least fall below the value for undercut. |
| Send cyclically every ...         | <b>not active</b><br>1 min – 24 h                                                                                                                 | Setting whether and at what interval the actual values are to be sent cyclically.       |

**Table 24: Settings – Generation L1 ... L3: Power measurement**

### Active power

The **"Object selection"** determines whether the values are to be output in "W" or "KW". With **"Send value by change"** it can be set at which change (in %) the corresponding value is to be sent on the bus. **"Send cyclically"** determines the constant intervals at which the current value is to be sent.

### Monitoring of load exceedance

The **"Value for load exceedance"** describes the value above which the selected action **"Value when exceeded"** is to be carried out.

With the **"Hysteresis"**, the switch-off threshold can be shifted. This threshold is calculated with a hysteresis of 10% for a load exceedance value of 100 W as follows:

Switch-on point = 100 W; reset when the load falls below 90 W (switch-on value minus hysteresis).

The **"Minimum time of exceedance"** indicates how long an exceedance must be measured before the action is triggered. For example, a minimum time of 10 s for a load exceedance value of 100 W means that a value above 100 W must be measured for 10 s before the exceedance action is triggered. The minimum time for exceedance works together with the hysteresis. So if an exceedance is measured, the power must fall below the set value minus hysteresis to stop the dwell time.

The **"Value on withdrawal of exceedance"** triggers a defined action, which is carried out when a load exceedance has fallen below again.

**Important:** After reset/reprogramming, the value for the switching threshold must be exceeded again in order to send the "Value on withdrawal of exceedance"!

### Monitoring of load undercurt

The **"Value for load undercurt"** describes the value below which the selected action **"Value when undercurt"** is to be carried out.

The **"Hysteresis"** can be used to shift the switch-off threshold. This threshold is calculated with a hysteresis of 10% for a load undercurt value of 100 W as follows:

Switch-on point = 100 W; reset when 110 W is exceeded (switch-on value plus hysteresis).

The **"Minimum time of undercutting"** indicates how long an undercurt must be measured before the action is triggered. For example, a minimum time of 10 s for a load undercurt value of 100 W means that a value below 100 W must be measured for 10 s before the undercurt action is triggered. The minimum time for undercurt works together with the hysteresis. So if an undercurt is measured, the power must rise above the set value plus hysteresis to stop the dwell time.

The **"Value on withdrawal of undercurt"** triggers a defined action, which is executed when a load undercurt has been exceeded again.

**Important:** After reset/reprogramming, the value for undercurt must be undercurt again in order to send the "Value on withdrawal of undercurt"!

The following table shows the available communication objects:

| Number | Name/Object function            | Length           | Usage                                                                       |
|--------|---------------------------------|------------------|-----------------------------------------------------------------------------|
| 125    | Generation L1 – Active power    | 2 Byte<br>4 Byte | Output of the measured active power.<br>DPT according to "Object selection" |
| 131    | Generation L1 – Load undercurt  | 1 Bit            | Reporting a load undercurt                                                  |
| 132    | Generation L1 – Load exceedance | 1 Bit            | Reporting a load exceedance                                                 |

**Table 25: Communication objects – Generation L1 ... L3: Power measurement**

### 4.5.2 Current measurement

The following settings are available for this menu:

|                                   |                                                                          |
|-----------------------------------|--------------------------------------------------------------------------|
| Current measurement               | <input type="radio"/> not active <input checked="" type="radio"/> active |
| Object selection                  | Value in mA (DPT 7.012) ▼                                                |
| Send value by change              | not active ▼                                                             |
| Send cyclically every ...         | 10 min ▼                                                                 |
| <hr/>                             |                                                                          |
| Monitoring of current exceedance  | <input type="radio"/> not active <input checked="" type="radio"/> active |
| Value for current exceedance      | 300 ▲▼ mA                                                                |
| Hysteresis                        | 10 ▲▼ %                                                                  |
| Value when exceeded               | value "1" ▼                                                              |
| Value on withdrawal of exceedance | value "0" ▼                                                              |
| Minimum time of exceedance        | 0 ▲▼ s                                                                   |
| Send cyclically every ...         | not active ▼                                                             |
| <hr/>                             |                                                                          |
| Monitoring of current undercut    | <input type="radio"/> not active <input checked="" type="radio"/> active |
| Value for current undercut        | 100 ▲▼ mA                                                                |
| Hysteresis                        | 10 ▲▼ %                                                                  |
| Value when undercut               | value "1" ▼                                                              |
| Value on withdrawal of undercut   | value "0" ▼                                                              |
| Minimum time of undercutting      | 0 ▲▼ s                                                                   |
| Send cyclically every ...         | not active ▼                                                             |

Figure 14: Settings – Generation L1 ... L3: Current measurement

The table shows the possible settings:

| ETS-Text            | Dynamic range<br>[Default value]                                                                                                                                     | Comment                                                 |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------|
| Current measurement | <ul style="list-style-type: none"> <li>not active</li> <li><b>active</b></li> </ul>                                                                                  | Activation of the menu for the current measurement.     |
| Object selection    | <ul style="list-style-type: none"> <li><b>Value in mA (DPT 7.012)</b></li> <li>Floating value in mA (DPT 9.021)</li> <li>Floating value in A (DPT 14.019)</li> </ul> | Setting the datapoint type for the current measurement. |

|                                         |                                                                                                                 |                                                                                         |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| Send value by change                    | <b>not active</b><br>5 – 75 %                                                                                   | Setting whether and at which change the value is sent.                                  |
| Send cyclically every ...               | not active, 1 min – 24 h<br><b>[10 min]</b>                                                                     | Setting whether and at what interval the value is to be sent cyclically.                |
| <b>Monitoring of current exceedance</b> |                                                                                                                 |                                                                                         |
| Monitoring of current exceedance        | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                         | Activation of the function.                                                             |
| Value for current exceedance            | 3 ... 20000 mA<br><b>[300 mA]</b>                                                                               | Setting range of the threshold.<br><b>For EZ-0320.01</b>                                |
| Value for current exceedance            | 3 ... 63000 mA<br><b>[300 mA]</b>                                                                               | Setting range of the threshold.<br><b>For EZ-0363.01</b>                                |
| Hysteresis                              | 10 ... 100 %<br><b>[10 %]</b>                                                                                   | Setting range for the hysteresis.                                                       |
| Value when exceeded                     | <ul style="list-style-type: none"> <li>• not active</li> <li>• <b>value „1“</b></li> <li>• value „0“</li> </ul> | Value to be sent when the switching threshold is exceeded.                              |
| Value on withdrawal of exceedance       | <ul style="list-style-type: none"> <li>• not active</li> <li>• value „1“</li> <li>• <b>value „0“</b></li> </ul> | Value that is to be sent if the value falls below the exceedance in the following.      |
| Minimum time of exceedance              | 0 ... 30000 s<br><b>[0 s]</b>                                                                                   | Setting of the minimum time by which the value for exceedance must be overshoot.        |
| Send cyclically every ...               | <b>not active</b><br>1 min – 24 h                                                                               | Setting whether and at what interval the actual values are to be sent cyclically.       |
| <b>Monitoring of current undercut</b>   |                                                                                                                 |                                                                                         |
| Monitoring of current undercut          | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                         | Activation of the function.                                                             |
| Value for current undercut              | 3 ... 20000 mA<br><b>[100 mA]</b>                                                                               | Setting range of the threshold.<br><b>For EZ-0320.01</b>                                |
| Value for current undercut              | 3 ... 63000 mA<br><b>[100 mA]</b>                                                                               | Setting range of the threshold.<br><b>For EZ-0363.01</b>                                |
| Hysteresis                              | 10 ... 100 %<br><b>[10 %]</b>                                                                                   | Setting range for the hysteresis.                                                       |
| Value when undercut                     | <ul style="list-style-type: none"> <li>• not active</li> <li>• <b>value „1“</b></li> <li>• value „0“</li> </ul> | Value to be sent when the switching threshold is undercut.                              |
| Value on withdrawal of undercut         | <ul style="list-style-type: none"> <li>• not active</li> <li>• value „1“</li> <li>• <b>value „0“</b></li> </ul> | Value to be sent if the undercut is subsequently exceeded.                              |
| Minimum time of undercutting            | 0 ... 30000 s<br><b>[0 s]</b>                                                                                   | Setting of the time by which the value must at least fall below the value for undercut. |
| Send cyclically every ...               | <b>not active</b><br>1 min – 24 h                                                                               | Setting whether and at what interval the actual values are to be sent cyclically.       |

**Table 26: Settings – Generation L1 ... L3: Current measurement**

### Current measurement

The "**Object selection**" determines whether the values are to be output in "A" or "mA". With "**Send value by change**" it can be set at which change (in %) the corresponding value is to be sent on the bus. "**Send cyclically**" determines the constant intervals at which the current value is to be sent.

### Monitoring of current exceedance

The "**Value for current exceedance**" describes the value above which the selected action "**Value when exceeded**" is to be carried out.

With the "**Hysteresis**", the switch-off threshold can be shifted. This threshold is calculated with a hysteresis of 10% for a load exceedance value of 100 mA as follows:

Switch-on point = 100 mA; reset when the load falls below 90 mA (switch-on value minus hysteresis).

The "**Minimum time of exceedance**" indicates how long an exceedance must be measured before the action is triggered. For example, a minimum time of 10 s for a current exceedance value of 100 mA means that a value above 100 mA must be measured for 10 s before the exceedance action is triggered. The minimum time for exceedance works together with the hysteresis. So if an exceedance is measured, the current must fall below the set value minus hysteresis to stop the dwell time.

The "**Value on withdrawal of exceedance**" triggers a defined action, which is carried out when a current exceedance has fallen below again.

**Important:** After reset/reprogramming, the value for the switching threshold must be exceeded again in order to send the "Value on withdrawal of exceedance"!

### Monitoring of current undercut

The "**Value for current undercut**" describes the value below which the selected action "**Value when undercut**" is to be carried out.

The "**Hysteresis**" can be used to shift the switch-off threshold. This threshold is calculated with a hysteresis of 10% for a current undercut value of 100 mA as follows:

Switch-on point = 100 mA; reset when 110 mA is exceeded (switch-on value plus hysteresis).

The "**Minimum time of undercutting**" indicates how long undercutting must be measured before the action is triggered. For example, a minimum time of 10 s for a current undercut value of 100 mA means that a value below 100 mA must be measured for 10 s before the undercut action is triggered. The minimum time for undercut works together with the hysteresis. So if an undercut is measured, the current must rise above the set value plus hysteresis to stop the dwell time.

The "**Value on withdrawal of undercutting**" triggers a defined action, which is carried out when a current undercut has fallen below again.

**Important:** After reset/reprogramming, the value for the switching threshold must be exceeded again in order to send the "Value on withdrawal of exceedance"!

The following table shows the available communication objects:

| Number | Name/Object function                                     | Length           | Usage                                                                        |
|--------|----------------------------------------------------------|------------------|------------------------------------------------------------------------------|
| 126    | Generation L1 –<br>Current value (mA), Current value (A) | 2 Byte<br>4 Byte | Output of the measured current value.<br>DPT according to "Object selection" |
| 133    | Generation L1 – Current undercut                         | 1 Bit            | Reporting a current undercut                                                 |
| 134    | Generation L1 – Current exceedance                       | 1 Bit            | Reporting a current exceedance                                               |

**Table 27: Communication objects – Generation L1 ... L3: Current measurement**

### 4.5.3 Energy and yield meter

**Important:**

To use the yield meter, the parameter "Cost meter" in "General settings" must be activated!

The following settings are available:

|                                         |                                                                                                              |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------|
| Main and intermediate meter             | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Main meter                              |                                                                                                              |
| Send meter reading by change            | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send meter reading every ...            | 1 kWh                                                                                                        |
| Send meter reading cyclically every ... | 30 min                                                                                                       |
| Yield meter                             |                                                                                                              |
| Send by change                          | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send yield every ...                    | 100 €                                                                                                        |
| Send cyclically every ...               | not active                                                                                                   |
| Intermediate meter                      |                                                                                                              |
|                                         | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Object selection                        | <input checked="" type="radio"/> Value in Wh (DPT 13.010)<br><input type="radio"/> Value in kWh (DPT 13.013) |
| Send meter reading by change            | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send meter reading every ...            | 10 Wh                                                                                                        |
| Send meter reading cyclically every ... | 30 min                                                                                                       |
| Yield meter                             |                                                                                                              |
| Send by change                          | <input type="radio"/> not active <input checked="" type="radio"/> active                                     |
| Send yield every ...                    | 10 €                                                                                                         |
| Send cyclically every ...               | not active                                                                                                   |
| Activate Event A with                   | not active                                                                                                   |
| Activate Event B with                   | not active                                                                                                   |

Figure 15: Settings – Generation L1 ... L3: Energy and yield meter

The table shows the possible settings:

| ETS-Text                                                                            | Dynamic range<br>[Default value]                                                                                                                                                                                                                                                  | Comment                                                                                                |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|
| Main and intermediate meter                                                         | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                                                                                                                                                                                           | Activation of the meters.<br><b>If "not active", no parameters appear in the following!</b>            |
| Main meter (is automatically active after activating "Main and intermediate meter") |                                                                                                                                                                                                                                                                                   |                                                                                                        |
| Send meter reading by change                                                        | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                                                                                                                                                                                           | Setting whether the meter reading should be sent when changed.                                         |
| Send meter reading every ...                                                        | 1 – 500 kWh<br>[1 kWh]                                                                                                                                                                                                                                                            | Setting for which change the meter reading is to be sent.                                              |
| Send meter reading cyclically every ...                                             | not active, 1 min – 24 h<br>[30 min]                                                                                                                                                                                                                                              | Setting whether and at what interval the meter reading is to be sent cyclically.                       |
| Intermediate meter                                                                  |                                                                                                                                                                                                                                                                                   |                                                                                                        |
| Intermediate meter                                                                  | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                                                                                                                                                                                           | Activation of the intermediate meter.                                                                  |
| Object selection                                                                    | <ul style="list-style-type: none"> <li>• <b>Value in Wh (DPT 13.010)</b></li> <li>• Value in kWh (DPT 13.013)</li> </ul>                                                                                                                                                          | Selection of the datapoint type for the intermediate meter.                                            |
| Send meter reading by change                                                        | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                                                                                                                                                                                           | Setting whether the meter reading is to be sent when changed.                                          |
| Send meter reading every ...                                                        | 10 – 50000 Wh<br>[10 Wh]                                                                                                                                                                                                                                                          | Setting at which change the meter reading is to be sent.<br><b>With object selection „DPT 13.010“</b>  |
| Send meter reading every ...                                                        | 1 – 500 kWh<br>[1 kWh]                                                                                                                                                                                                                                                            | Setting at which change the meter reading is to be sent.<br><b>With object selection „DPT 13.013“</b>  |
| Send meter reading cyclically every ...                                             | <b>not active</b><br>1 min – 24 h                                                                                                                                                                                                                                                 | Setting whether and at what interval the meter reading is to be sent cyclically.                       |
| Yield meter (Settings are the same for main and intermediate meter)                 |                                                                                                                                                                                                                                                                                   |                                                                                                        |
| Yield meter                                                                         | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                                                                                                                                                                                           | Activation of the yield meter.<br><b>Only visible if "Cost meter" is active in "General settings"!</b> |
| Send by change                                                                      | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• active</li> </ul>                                                                                                                                                                                           | Setting whether the yield should be sent when it is changed.                                           |
| Send yield every ...                                                                | 1 ... 255 €<br>[10 €]                                                                                                                                                                                                                                                             | Setting for which change the yield is to be sent.                                                      |
| Send cyclically every ...                                                           | <b>not active</b> ,<br>1 min – 24 h                                                                                                                                                                                                                                               | Setting whether and at what interval the yield is to be sent cyclically.                               |
| Event A / Event B                                                                   |                                                                                                                                                                                                                                                                                   |                                                                                                        |
| Activate Event A/B with                                                             | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>• final value: intermediate meter</li> <li>• final value: main meter</li> <li>• final value: costs intermediate meter</li> <li>• final value: costs main meter</li> <li>• time</li> <li>• interval</li> </ul> | Determination of the action with which an event is to be activated.                                    |

|                                       |                                                                                                                                                                                                                                                                      |                                                                                                                                                                                                                               |
|---------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Final value                           | 1 ... 4294967295 kWh/Wh<br><b>[200]</b>                                                                                                                                                                                                                              | Value from which the event is to be activated.<br><b>Visible when "Final value ..." is selected.</b><br><b>DPT for main meter is "kWh".</b><br><b>DPT for intermediate meter depends on the "Object selection" parameter.</b> |
| Final value                           | 1 ... 4294967295 €<br><b>[200]</b>                                                                                                                                                                                                                                   | Value from which the event is to be activated.<br><b>Visible when selecting "Final value: Costs ...".</b>                                                                                                                     |
| Hours                                 | 0 ... 23<br><b>[0]</b>                                                                                                                                                                                                                                               | Set<br>- the time at which the event is to be activated.<br>- the interval at which the event is to be activated.<br><b>If "time" or "interval" is selected</b>                                                               |
| Minutes                               | 0 ... 59<br><b>[0]</b>                                                                                                                                                                                                                                               |                                                                                                                                                                                                                               |
| Day                                   | <ul style="list-style-type: none"> <li>▪ <b>every day</b></li> <li>▪ Monday</li> <li>▪ Tuesday</li> <li>▪ Wednesday</li> <li>▪ Thursday</li> <li>▪ Friday</li> <li>▪ Saturday</li> <li>▪ Sunday</li> <li>▪ every working day</li> <li>▪ every weekend day</li> </ul> | Setting on which day(s) the event is to be activated.<br><b>Visible when "Time" is selected.</b>                                                                                                                              |
| Object „Event A“ /<br>“Event B” sends | <ul style="list-style-type: none"> <li>▪ <b>OFF</b></li> <li>▪ ON</li> </ul>                                                                                                                                                                                         | Value to be sent when the condition for activating the event is fulfilled.                                                                                                                                                    |
| All values of intermediate meter      | <ul style="list-style-type: none"> <li>▪ <b>do not send</b></li> <li>▪ send</li> </ul>                                                                                                                                                                               | Settings for which additional actions are to be carried out when the condition for activating the event is fulfilled.<br><br><b>The number of possible actions depends on the selection "Activate event X with".</b>          |
| Costs of intermediate meter           | <ul style="list-style-type: none"> <li>▪ <b>do not send</b></li> <li>▪ send</li> </ul>                                                                                                                                                                               |                                                                                                                                                                                                                               |
| Reset of intermediate meter           | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>▪ active</li> </ul>                                                                                                                                                                              |                                                                                                                                                                                                                               |
| All values of main meter              | <ul style="list-style-type: none"> <li>▪ <b>do not send</b></li> <li>▪ send</li> </ul>                                                                                                                                                                               |                                                                                                                                                                                                                               |
| Costs of main meter                   | <ul style="list-style-type: none"> <li>▪ <b>do not send</b></li> <li>▪ send</li> </ul>                                                                                                                                                                               |                                                                                                                                                                                                                               |
| Reset of main meter                   | <ul style="list-style-type: none"> <li>• <b>not active</b></li> <li>▪ active</li> </ul>                                                                                                                                                                              |                                                                                                                                                                                                                               |

**Table 28: Settings – Generation L1 ... L3: Energy and yield meter**

#### Main meter / Intermediate meter

The main meter always works with the datapoint type 13.013 (kWh). For the intermediate meter, the datapoint type can be set with the **"Object selection"** (Wh or kWh).

The setting **"Send meter reading by change"** can be used to set at which change the meter sends its actual meter reading. If the setting is "not active", the meter does not send a value, no matter how big the change is.

The setting "**Send meter reading cyclically every ...**" can be used to set the intervals at which the meter sends its actual measured value. The cyclical sending function can be activated or deactivated independently of the setting "Send meter reading by change". Values are also sent if the meter has not recorded a change. If both parameters are deactivated, no value is ever sent.

#### Yield meter

The settings for sending the yield are the same as for the main and intermediate meters.

#### Event A / Event B

Two different events can be triggered if certain conditions are met. This is done via 1-bit objects.

- **final value: intermediate/main meter**  
Event is activated with a fixed value.
  - **final value: costs intermediate/main meter**  
Event is activated when a certain cost level is reached.
  - **time**  
Event is executed recurrently at a certain time. In addition to hours and minutes, it is also possible to set whether the event is to be activated on certain days.
  - **interval**  
Event is activated recurrently at a defined interval (in hours and minutes).
- Important:** The starting point and subsequent cyclical transmission repetition is always after reprogramming or when the bus voltage returns.

In addition to sending the object (Event A or Event B), other actions can be performed. These can be activated individually as required (see table above).

The associated communication objects are (Name in each case is "Generation L1"):

| Number | Name/Object function                      | Length | Usage                                                            |
|--------|-------------------------------------------|--------|------------------------------------------------------------------|
| 137    | Intermediate meter – Active energy        | 4 Byte | Sending the meter reading.<br>DPT depending on parameter setting |
| 138    | Intermediate meter – Actual yield in Cent | 4 Byte | Sending the actual yield                                         |
| 139    | Intermediate meter – Meter reading Day    | 4 Byte | Sending the meter reading                                        |
| 140    | Intermediate meter – Meter reading Night  | 4 Byte | Sending the meter reading                                        |
| 141    | Intermediate meter – Reset                | 1 Bit  | Resetting the intermediate meter                                 |
| 142    | Main meter – Active energy                | 4 Byte | Sending the meter reading.                                       |
| 143    | Main meter – Actual yield in Cent         | 4 Byte | Sending the actual yield                                         |
| 144    | Main meter – Meter reading Day            | 4 Byte | Sending the meter reading                                        |
| 145    | Main meter – Meter reading Night          | 4 Byte | Sending the meter reading                                        |
| 146    | Main meter – Reset                        | 1 Bit  | Resetting the main meter                                         |
| 147    | Meter – Event A                           | 1 Bit  | Sending the value of Event A                                     |
| 148    | Meter – Event B                           | 1 Bit  | Sending the value of Event B                                     |
| + 25   | next channel                              |        |                                                                  |

**Table 29: Communication objects – Generation L1 ... L3: Energy and yield meter**

## 5 Index

### 5.1 Register of illustrations

|                                                                          |    |
|--------------------------------------------------------------------------|----|
| Figure 1: Exemplary circuit diagram EZ-0320.01 .....                     | 5  |
| Figure 2: Exemplary circuit diagram EZ-0363.01 .....                     | 5  |
| Figure 3: Structure & Handling .....                                     | 6  |
| Figure 4: General settings .....                                         | 13 |
| Figure 5: Settings – Total consumption: Power measurement .....          | 18 |
| Figure 6: Settings – Total consumption: Energy and cost meter .....      | 22 |
| Figure 7: Settings – Total generated: Power measurement .....            | 26 |
| Figure 8: Settings – Total generated: Energy and yield meter .....       | 30 |
| Figure 9: Settings – Consumption L1 ... L3: Power measurement .....      | 34 |
| Figure 10: Settings – Consumption L1 ... L3: Current measurement .....   | 38 |
| Figure 11: Settings – Consumption L1 ... L3: Voltage measurement .....   | 41 |
| Figure 12: Settings – Consumption L1 ... L3: Energy and cost meter ..... | 44 |
| Figure 13: Settings – Generation L1 ... L3: Power measurement .....      | 48 |
| Figure 14: Settings – Generation L1 ... L3: Current measurement .....    | 51 |
| Figure 15: Settings – Generation L1 ... L3: Energy and yield meter ..... | 54 |

## 5.2 List of tables

|                                                                                      |    |
|--------------------------------------------------------------------------------------|----|
| Table 1: Communication objects – Central objects .....                               | 7  |
| Table 2: Communication objects – Total consumption.....                              | 8  |
| Table 3: Communication objects – Total generated .....                               | 10 |
| Table 4: Communication objects – Consumption L1 ... L3.....                          | 11 |
| Table 5: Communication objects – Generation L1 ... L3 .....                          | 12 |
| Table 6: General settings.....                                                       | 15 |
| Table 7: Communication objects – General settings .....                              | 17 |
| Table 8: Settings – Total consumption: Power measurement .....                       | 20 |
| Table 9: Communication objects – Total consumption: Power measurement.....           | 21 |
| Table 10: Settings – Total consumption: Energy and cost meter .....                  | 24 |
| Table 11: Communication objects – Total consumption: Energy and cost meter .....     | 25 |
| Table 12: Settings – Total generated: Power measurement .....                        | 28 |
| Table 13: Communication objects – Total generated: Power measurement .....           | 29 |
| Table 14: Settings – Total generated: Energy and yield meter .....                   | 32 |
| Table 15: Communication objects – Total generated: Energy and yield meter.....       | 33 |
| Table 16: Settings – Consumption L1 ... L3: Power measurement .....                  | 36 |
| Table 17: Communication objects – Consumption L1 ... L3: Power measurement .....     | 37 |
| Table 18: Settings – Consumption L1 ... L3: Current measurement .....                | 39 |
| Table 19: Communication objects – Consumption L1 ... L3: Current measurement .....   | 40 |
| Table 20: Settings – Consumption L1 ... L3: Voltage measurement .....                | 42 |
| Table 21: Communication objects – Consumption L1 ... L3: Voltage measurement .....   | 43 |
| Table 22: Settings – Consumption L1 ... L3: Energy and cost meter .....              | 46 |
| Table 23: Communication objects – Consumption L1 ... L3: Energy and cost meter ..... | 47 |
| Table 24: Settings – Generation L1 ... L3: Power measurement.....                    | 49 |
| Table 25: Communication objects – Generation L1 ... L3: Power measurement.....       | 50 |
| Table 26: Settings – Generation L1 ... L3: Current measurement.....                  | 52 |
| Table 27: Communication objects – Generation L1 ... L3: Current measurement.....     | 53 |
| Table 28: Settings – Generation L1 ... L3: Energy and yield meter .....              | 56 |
| Table 29: Communication objects – Generation L1 ... L3: Energy and yield meter ..... | 57 |

## 6 Appendix

### 6.1 Statutory requirements

The devices described above must not be used in conjunction with devices which directly or indirectly serve human, health, or life-safety purposes. Furthermore, the devices described must not be used if their use may cause danger to people, animals, or property.

Do not leave the packaging material carelessly lying around. Plastic foils/ bags etc. can become a dangerous toy for children.

### 6.2 Disposal

Do not dispose of the old devices in the household waste. The device contains electrical components that must be disposed of as electronic waste. The housing is made of recyclable plastic.

### 6.3 Assembly



**Danger to life from electric current!**

The device may only be installed and connected by qualified electricians. Observe the country-specific regulations and the applicable KNX guidelines

The units are approved for operation in the EU and bear the CE mark. Use in the USA and Canada is not permitted!

Before starting work on the unit, always disconnect it from the power supply via the upstream fuses. After installation, all live terminals and connections must be completely closed by the control panel cover so that they cannot be touched. It must not be possible to open the control panel cover without tools!

### 6.4 History

V1.0 First Version of Technical Manual

DB V1.0

08/2022