

Tenda

User Guide

GearUP Router Game Booster



Contents

Overview	1
Configure GearUP	2
2.1 Via a Mobile Browser	2
2.2 Via the Tenda WiFi App	8
2.3 Via a PC Browser	10
2.4 Via the GearUP Router App	11

1 Overview

There are two main ways to configure GearUP on your router:

- **Via a mobile browser:** Visit **tendawifi.com** to log in to the router's web UI, then enable and configure GearUP.
- **Via the Tenda WiFi App:** Use the **Tenda WiFi** App to manage your router, then enable and configure GearUP.

You can also use the following methods for specific functions:

- **Via a PC browser:** Visit **tendawifi.com** to log in to the router's web UI, then enable or disable GearUP. However, specific game boosting settings cannot be configured through the PC management page.
- **Via the GearUP Router App:** Bind your router and configure specific game boosting after GearUP has been enabled. The GearUP Router App cannot independently enable or disable GearUP.

After enabling GearUP on your router, log in to your GearUP account and bind your router. Then select the gaming device, game, and server to start boosting.

2

Configure GearUP

2.1 Via a Mobile Browser

Step 1 Launch a web browser from a mobile device that is connected to your network.

Step 2 Enter **tendawifi.com**.

A login window displays.


Step 3 Enter the login password.

The password is case-sensitive.

Step 4 Go to **More > Game Booster**.




If **Game Booster** is unavailable, check whether your router model supports GearUP and update the firmware to the latest version.

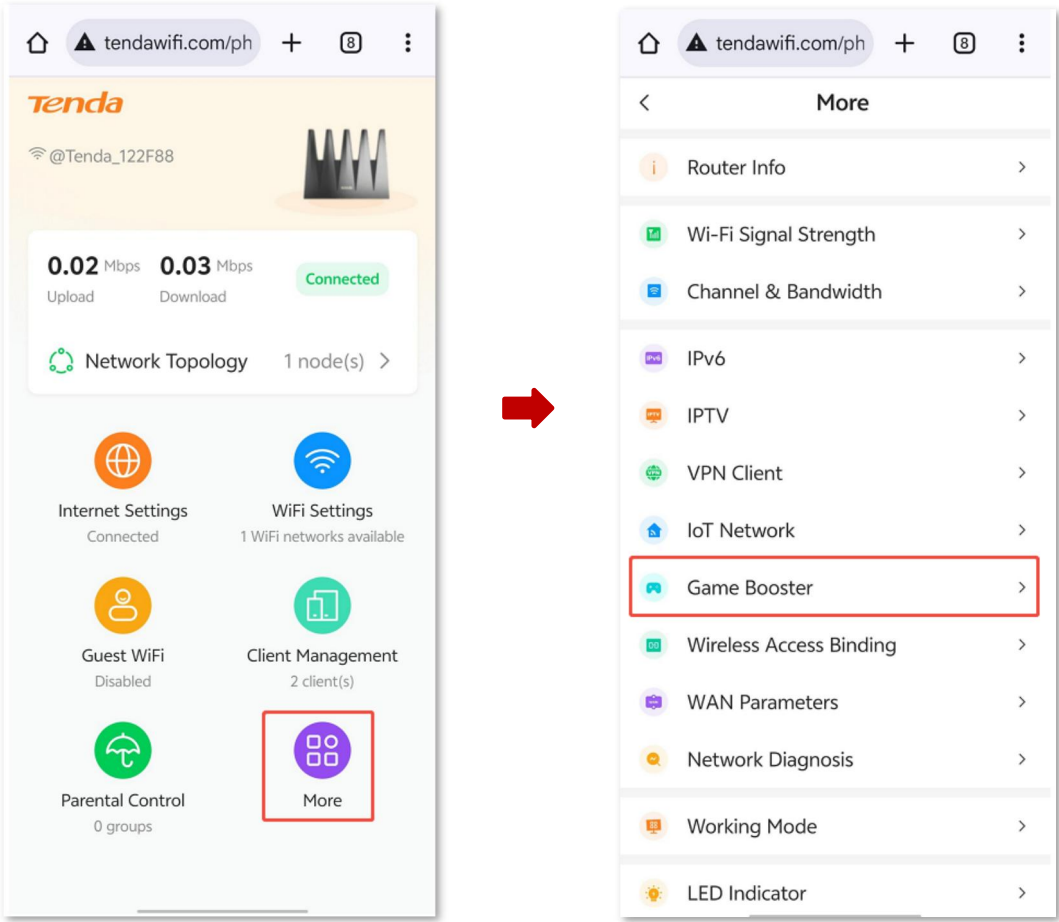


Step 5 Enable the **GearUP Router Game Booster**.

After enabling, tap the device list below to jump to the game boosting configuration page.

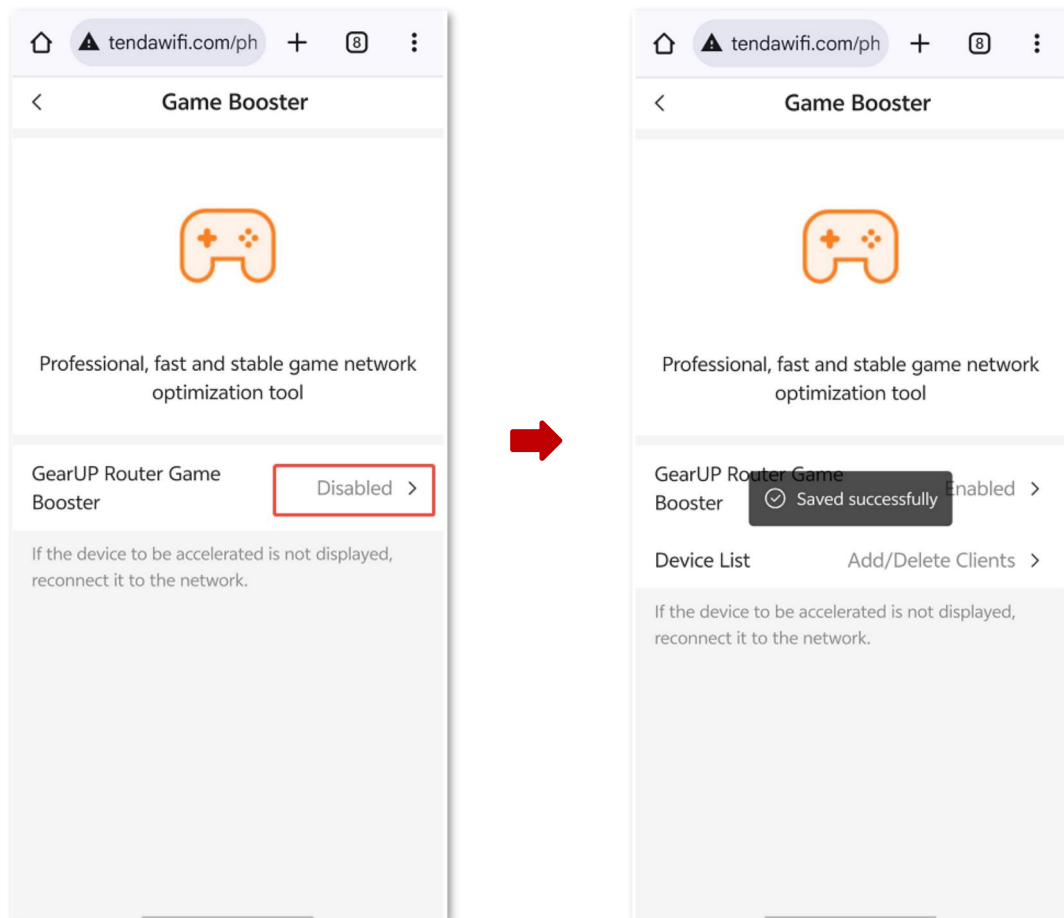

Step 6 Select one method to log in to your GearUP account.

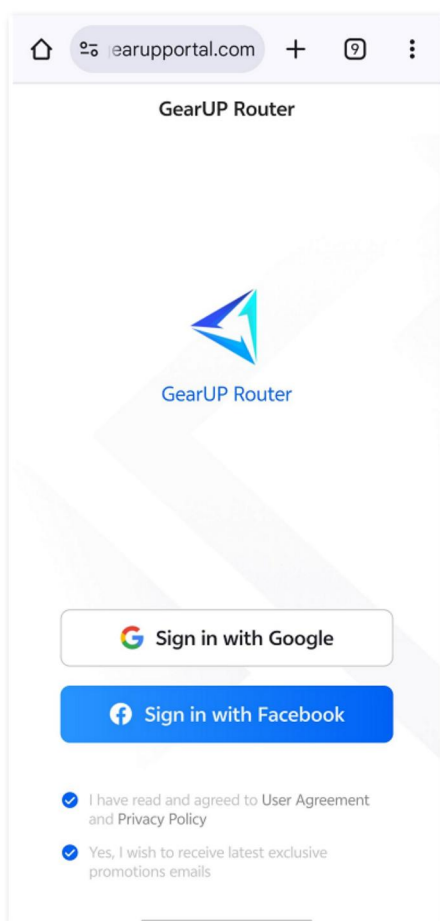


After logging in, your router will be bound automatically, and the list of gaming devices will be displayed.

Step 7 Connect supported gaming devices, such as phones, PCs, PS, Xbox, and Switch, to the router's Wi-Fi or a LAN port.




If a device is not displayed, reconnect it and wait about 2 minutes.

Step 8 Select the device you want to boost and tap **Select Game**.

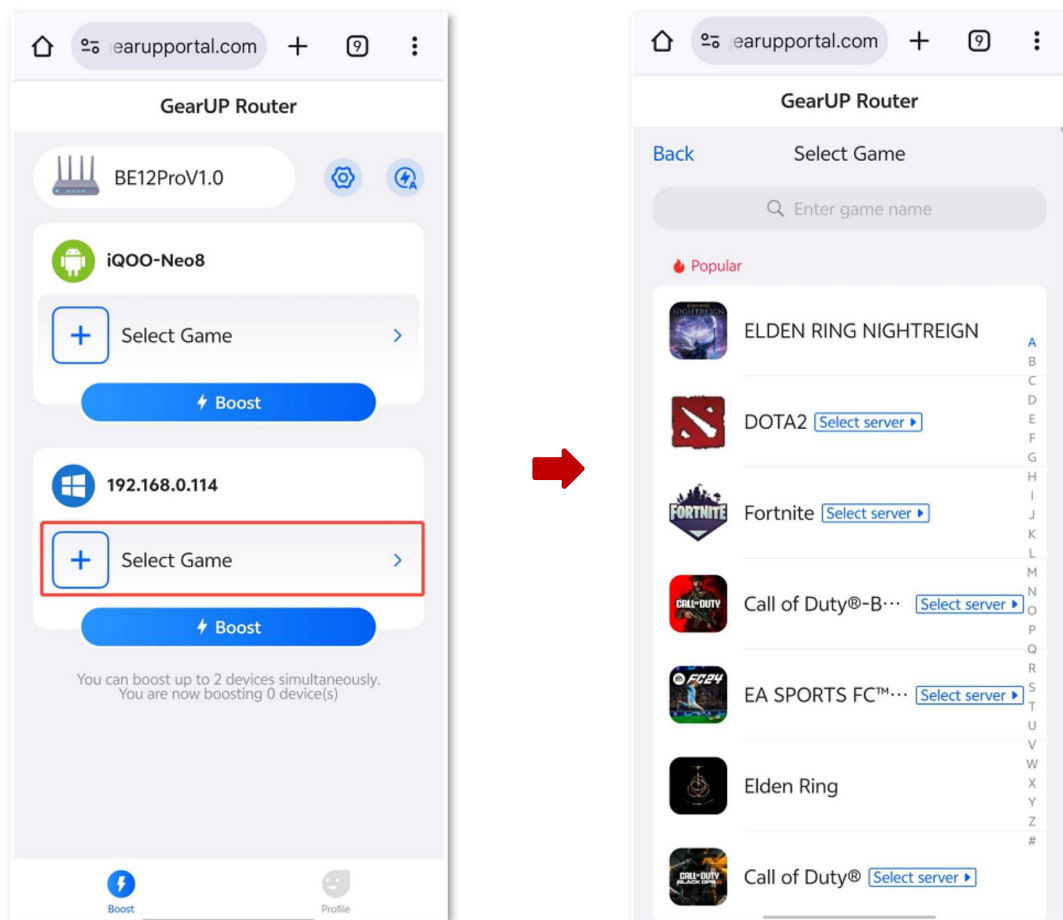

Step 9 Select the game you want to boost, then select a boosting server if required.

Step 10 Tap **Boost** to start boosting. Tap **Stop** when you want to stop boosting.

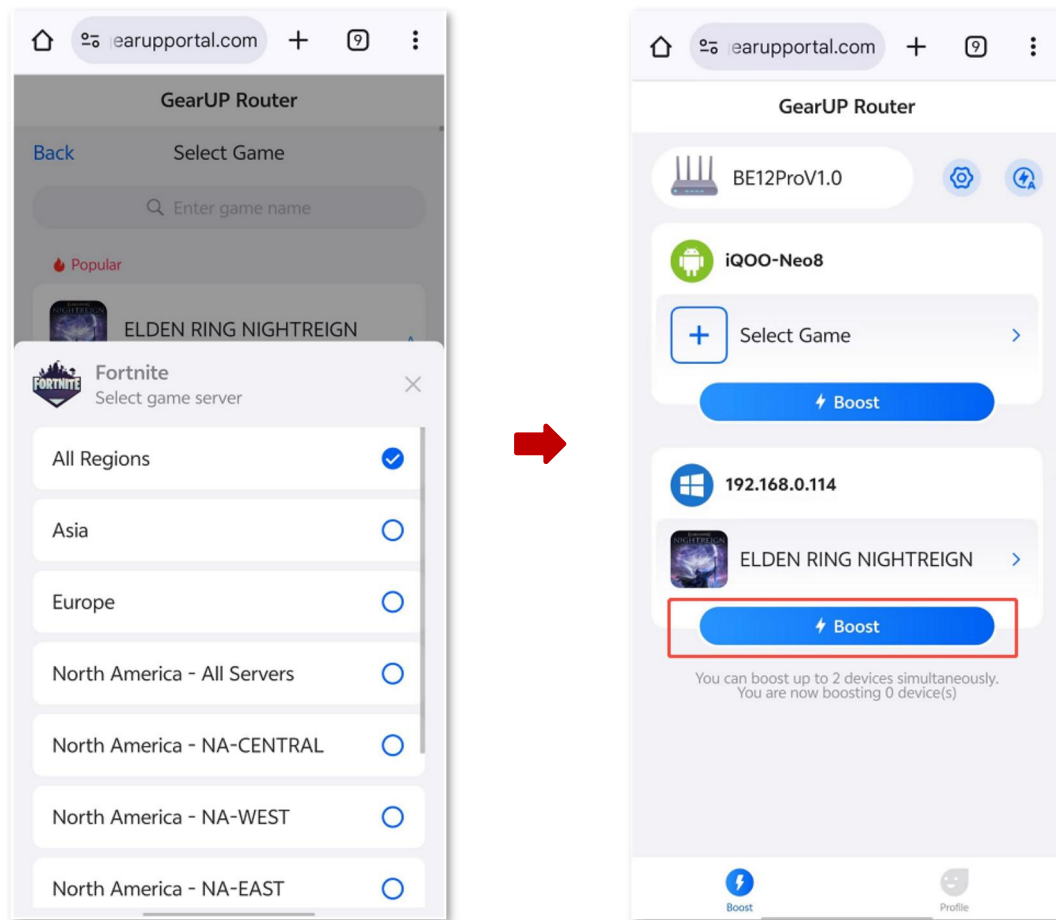


---End


2.2 Via the Tenda WiFi App

Step 1 Run the **Tenda WiFi App**, then tap your router on homepage.

Step 2 Go to **More Functions > Game Booster**.

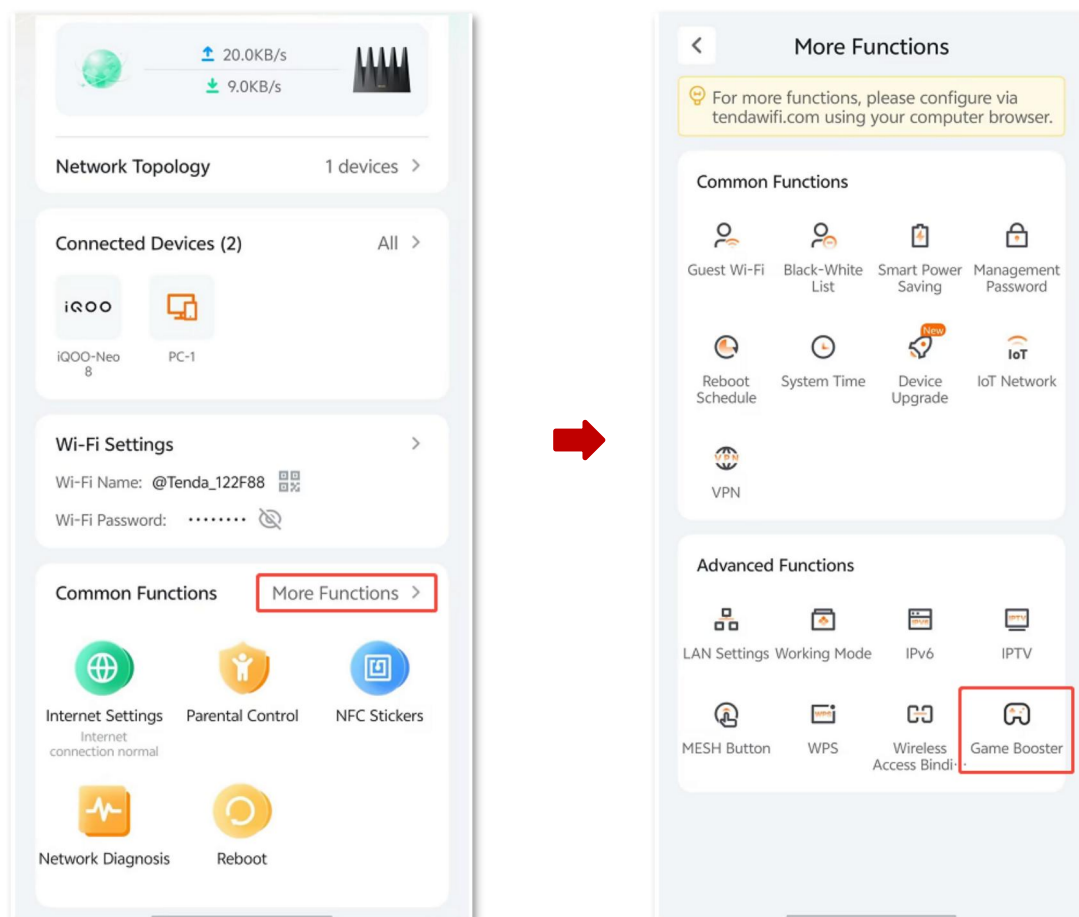

Step 3 Toggle the switch to enable or disable GearUP.

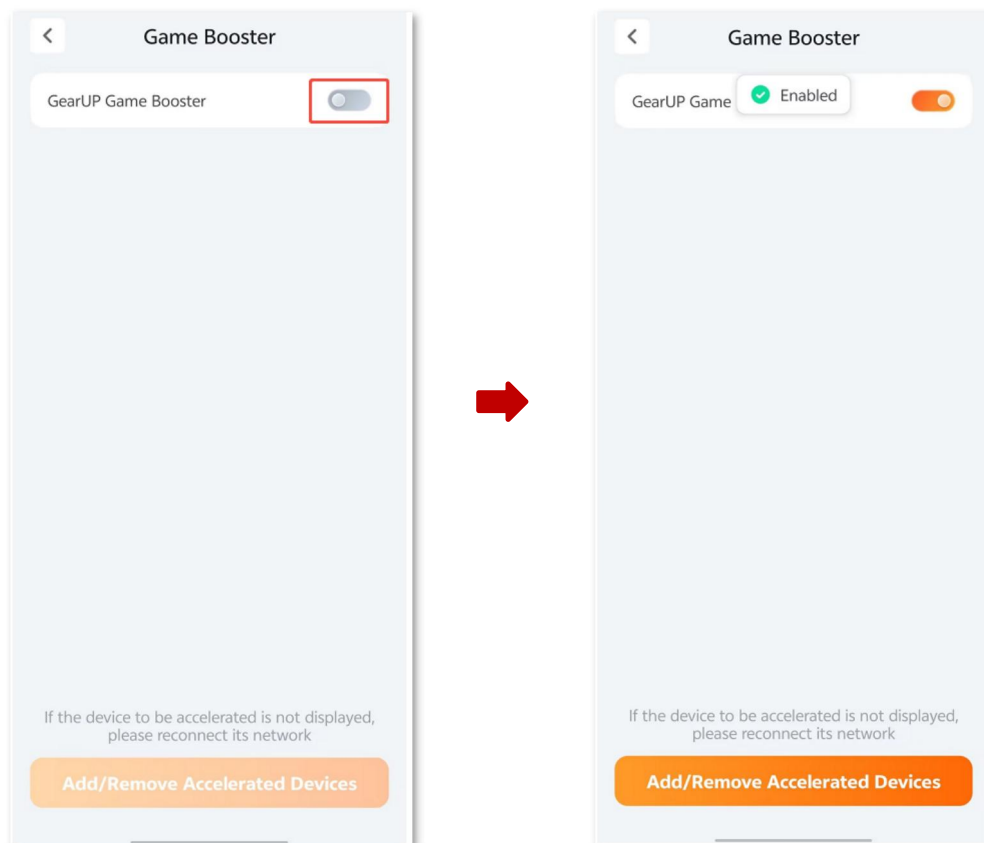

Step 4 Tap **Add/Remove Boosted Devices** to open the device page, then sign in and configure game boosting.

Step 5 For subsequent configuration, refer to **Steps 6-9** in [Configuring GearUP via a Mobile Browser](#).

---End

2.3 Via a PC Browser

Step 1 Launch a web browser from a computer that is connected to your network.

Step 2 Enter **tendawifi.com**.

A login window displays.

Step 3 Enter the login password.


The password is case-sensitive.

Step 4 Go to **More > Game Booster**.



If **Game Booster** is unavailable, check whether your router model supports GearUP and update the firmware to the latest version.


Step 5 Toggle the switch to enable or disable **GearUP Router Game Booster**.

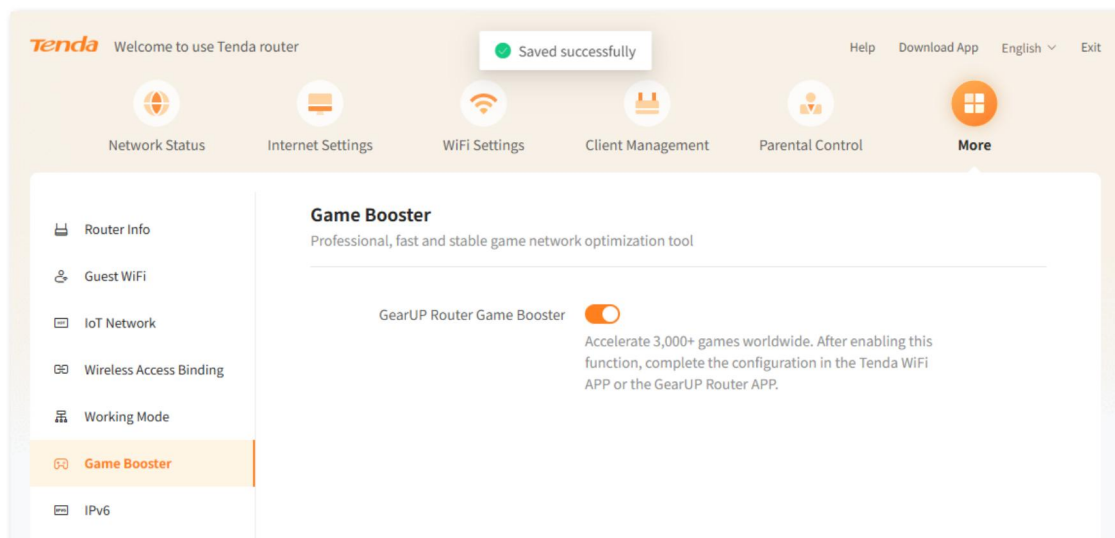

---End

2.4 Via the GearUP Router App

GearUP must be enabled on the router before configuring game boosting with the GearUP Router App. Otherwise, the App will indicate that the router model is not supported.

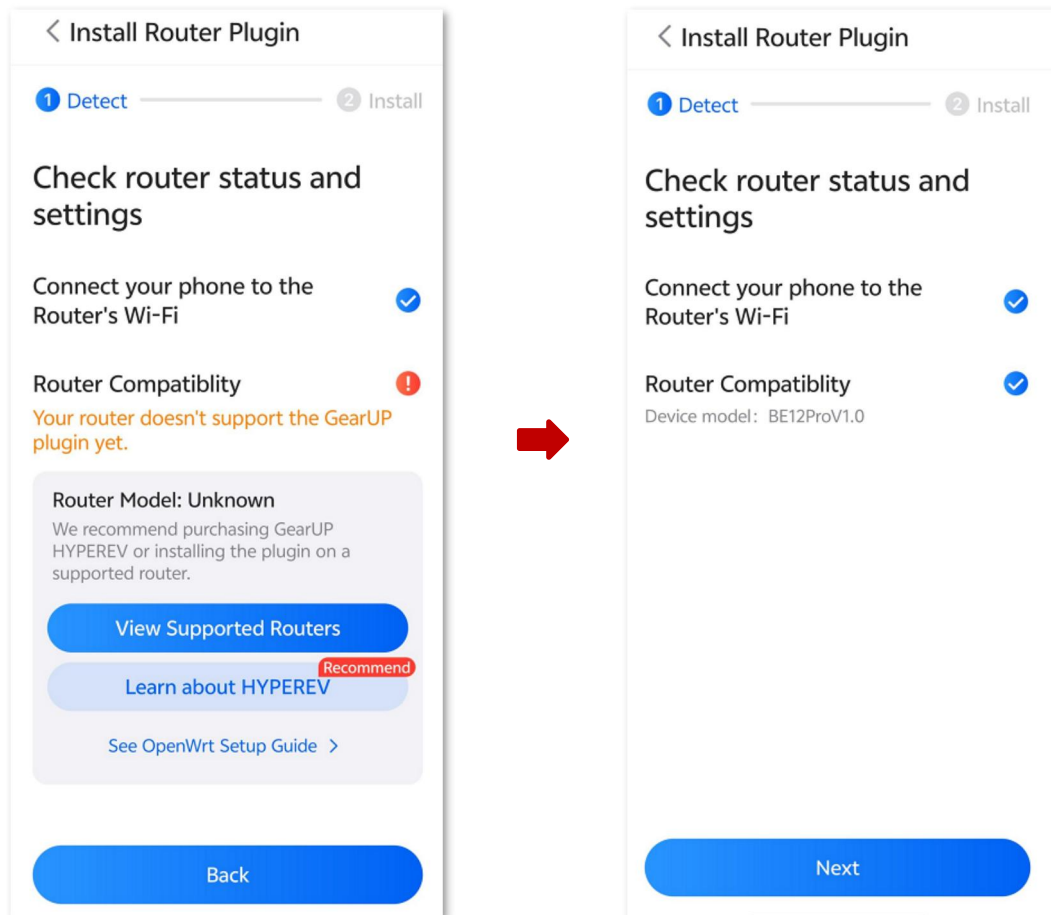

Once the router is bound, you can select the gaming device, game, and server on the device list page to start boosting.

