

HP A3600 v2 Switch Series

Installation Guide

Part number: 5998-2346

Document version: 6W100-20110909



Legal and notice information

© Copyright 2011 Hewlett-Packard Development Company, L.P.

No part of this documentation may be reproduced or transmitted in any form or by any means without prior written consent of Hewlett-Packard Development Company, L.P.

The information contained herein is subject to change without notice.

HEWLETT-PACKARD COMPANY MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Contents

Product overview	1
A3600-24 v2 EI Switch panel views	1
A3600-24 v2 SI Switch panel views	2
A3600-48 v2 EI Switch panel views	3
A3600-48 v2 SI Switch panel views	4
A3600-24-PoE+ v2 EI Switch/A3600-24-PoE+ v2 SI Switch panel views	5
A3600-48-PoE+ v2 EI Switch/A3600-48-PoE+ v2 SI Switch panel views	6
A3600-24-SFP v2 EI Switch panel views	7
Preparing for installation	8
Safety recommendations	8
Examining the installation site	8
Temperature/humidity	8
Cleanness	9
EMI	9
Cooling requirements	10
Laser safety	10
Installation tools	10
Installing the switch	11
Installing the switch in a 19-inch rack	11
Mounting bracket kit	12
Attaching the mounting brackets to the chassis	12
Rack-mounting an A3600 v2 switch	13
Mounting the switch on a workbench	13
Grounding the switch	14
Grounding cable	14
Grounding the switch with a grounding strip	15
Grounding the switch by using the AC power cord	16
Grounding the switch with a grounding conductor buried in the earth ground	17
Connecting the power cord	18
Connecting an AC power cord	18
Connecting a DC power cord	19
Verifying the installation	20
Accessing the switch for the first time	21
Setting up the configuration environment	21
Connecting the console cable	21
Console cable	21
Connection procedure	21
Setting terminal parameters	22
Powering on the switch	25
Checking before power-on	25

Powering on the switch	25
Changing the startup mode	27
Setting up an IRF fabric	30
IRF fabric setup flowchart	30
Planning IRF fabric setup	31
Planning IRF fabric size and the installation site	31
Identifying the master switch and planning IRF member IDs	31
Planning IRF topology and connections	32
Identifying physical IRF ports on the member switches	33
Planning the cabling scheme	33
Configuring basic IRF settings	35
Connecting the physical IRF ports	35
Accessing the IRF fabric to verify the configuration	36
Maintenance and troubleshooting	38
Password loss	38
Console login password loss	38
Boot ROM password loss	38
Power system failure	38
Fan failure	40
Configuration terminal problems	40
Appendix A Technical specifications	42
Physical specifications	42
Chassis dimensions and weights	42
Ports	42
Environmental specifications	43
Power specifications	43
AC-input power specifications	43
DC-input power specifications	44
RPS DC-input power specifications	45
Appendix B Ports and LEDs	46
Ports	46
Console port	46
10/100Base-TX Ethernet port	46
1000Base-T Ethernet port	46
100Base-X SFP port	47
1000Base-X SFP port	47
Combo interface	49
LEDs	49
System status LED	49
DC power LED	50
Port mode LED	50
Seven-segment LED	50
10/100Base-TX Ethernet port LED	52
1000Base-T Ethernet port LED	53

100Base-X SFP port LED	53
1000Base-X SFP port LED	53
Index	55

Product overview

The HP A3600 v2 Switch Series includes the models in [Table 1](#).

Table 1 Models in the HP A3600 v2 Switch Series

Sub-series	Product code	HP description	RMN
A3600 v2 EI	JG299A	A3600-24 v2 EI Switch	BJNGA-AD0009
	JG300A	A3600-48 v2 EI Switch	BJNGA-AD0010
	JG301A	A3600-24-PoE+ v2 EI Switch	BJNGA-AD0011
	JG302A	A3600-48-PoE+ v2 EI Switch	BJNGA-AD0012
	JG303A	A3600-24-SFP v2 EI Switch	BJNGA-AD0013
A3600 v2 SI	JG304A	A3600-24 v2 SI Switch	BJNGA-AD0014
	JG305A	A3600-48 v2 SI Switch	BJNGA-AD0015
	JG306A	A3600-24-PoE+ v2 SI Switch	BJNGA-AD0011
	JG307A	A3600-48-PoE+ v2 SI Switch	BJNGA-AD0012




IMPORTANT:

For regulatory identification purposes, every A3600 switch is assigned a regulatory model number (RMN). These regulatory numbers should not be confused with the marketing name HP A3600, or product codes.


A3600-24 v2 EI Switch panel views

Figure 1 A3600-24 v2 EI front panel

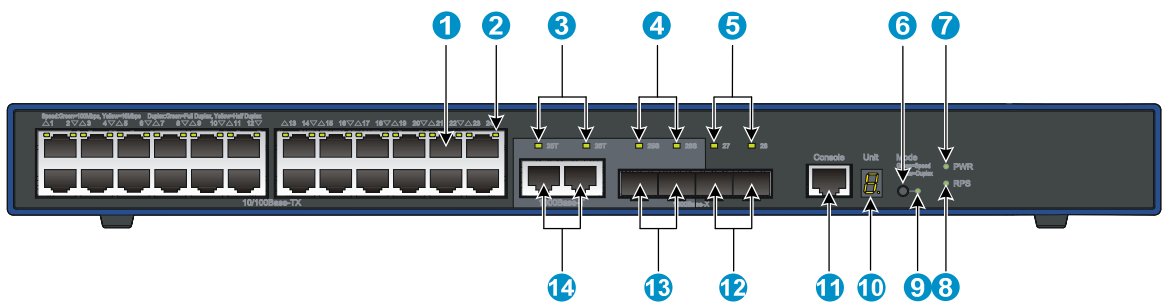

(1) 10/100Base-TX auto-sensing Ethernet port	(2) 10/100Base-TX Ethernet port LED
(3) 1000Base-T Ethernet combo port LED	(4) 1000Base-X SFP combo port LED
(5) 1000Base-X SFP port LED	(6) Port LED mode switching button
(7) System status LED (PWR)	(8) DC power LED (RPS)
(9) Port mode LED	(10) Seven-segment LED
(11) Console port	(12) 1000Base-X SFP port
(13) 1000Base-X SFP combo port	(14) 1000Base-T Ethernet combo port

Figure 2 A3600-24 v2 EI rear panel

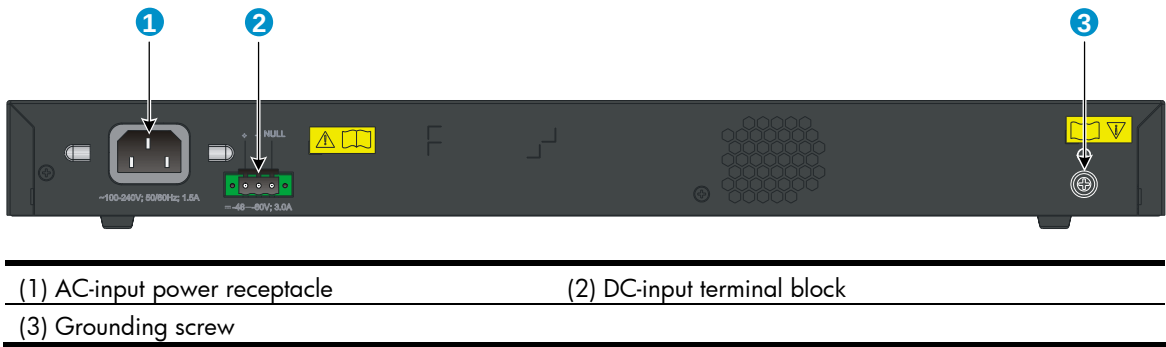

A3600-24 v2 SI Switch panel views

Figure 3 A3600-24 v2 SI front panel

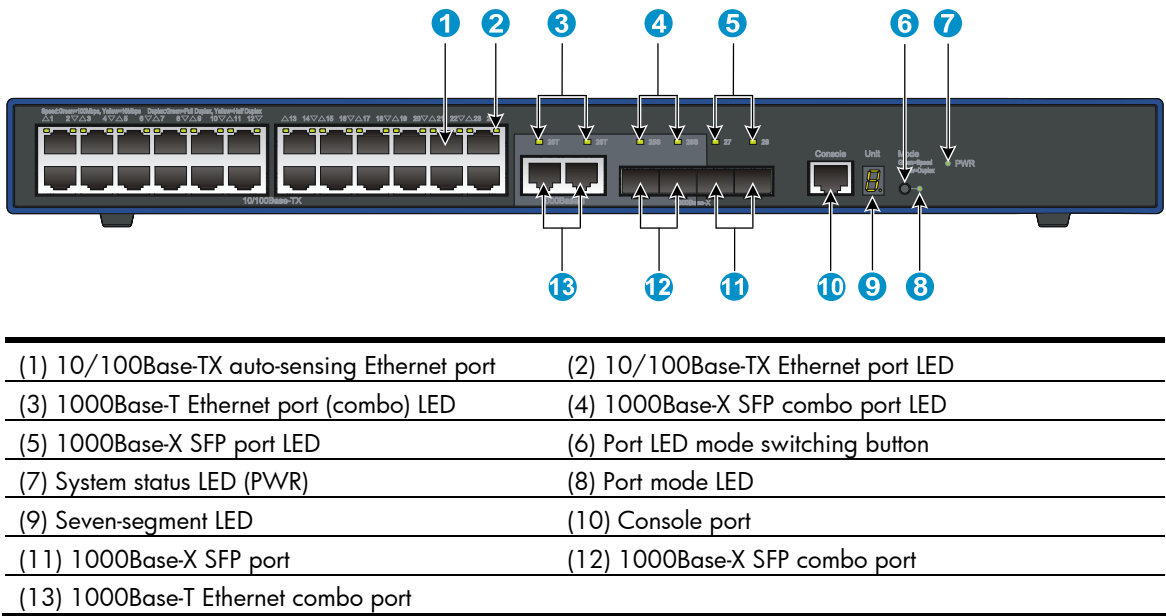


Figure 4 A3600-24 v2 SI rear panel



A3600-48 v2 EI Switch panel views

Figure 5 A3600-48 v2 EI front panel



(1) 10/100Base-TX auto-sensing Ethernet port	(2) 10/100Base-TX Ethernet port LED
(3) 1000Base-X SFP combo port	(4) 1000Base-X SFP combo port LED
(5) 1000Base-X SFP port	(6) 1000Base-X SFP port LED
(7) Seven-segment LED	(8) System status LED (PWR)
(9) DC power module status LED (RPS)	(10) Port mode LED (Mode)
(11) Port LED mode switching button	(12) Console port
(13) 1000Base-T Ethernet port LED	(14) 1000Base-T Ethernet port

Figure 6 A3600-48 v2 EI rear panel



(1) AC-input power receptacle	(2) DC-input terminal block
(3) Grounding screw	

A3600-48 v2 SI Switch panel views

Figure 7 A3600-48 v2 SI front panel



(1) 10/100Base-TX auto-sensing Ethernet port	(2) 10/100Base-TX Ethernet port LED
(3) 1000Base-X SFP combo port	(4) 1000Base-X SFP combo port LED
(5) 1000Base-X SFP port	(6) 1000Base-X SFP port LED
(7) Seven-segment LED	(8) System status LED (PWR)
(9) Port mode LED (Mode)	(10) Port LED mode switching button
(11) Console port	(12) 1000Base-T Ethernet port LED
(13) 1000Base-T Ethernet port	


Figure 8 A3600-48 v2 SI rear panel



(1) AC-input power receptacle	(2) Grounding screw
-------------------------------	---------------------


A3600-24-PoE+ v2 EI Switch/A3600-24-PoE+ v2 SI Switch panel views

Figure 9 A3600-24-PoE+ v2 EI Switch/A3600-24-PoE+ v2 SI front panel

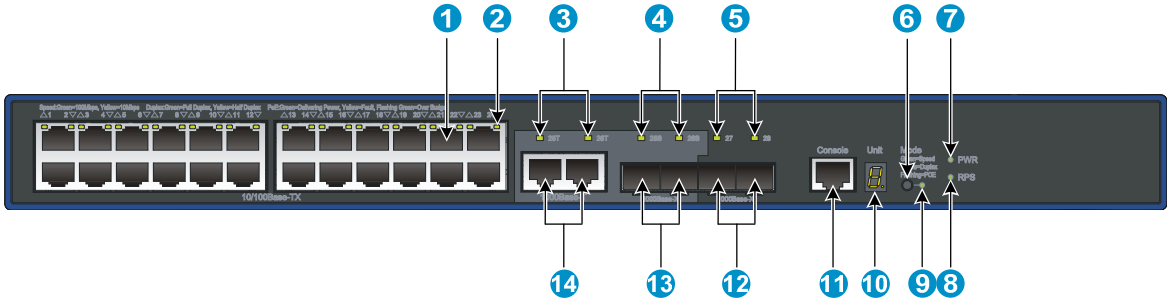

(1) 10/100Base-TX auto-sensing Ethernet port	(2) 10/100Base-TX Ethernet port LED
(3) 1000Base-T Ethernet combo port LED	(4) 1000Base-X SFP combo port LED
(5) 1000Base-X SFP port LED	(6) Port LED mode switching button
(7) System status LED (PWR)	(8) DC power module status LED (RPS)
(9) Port mode LED	(10) Seven-segment LED
(11) Console port	(12) 1000Base-X SFP port
(13) 1000Base-X SFP combo port	(14) 1000Base-T Ethernet combo port

Figure 10 A3600-24-PoE+ v2 EI Switch/A3600-24-PoE+ v2 SI rear panel

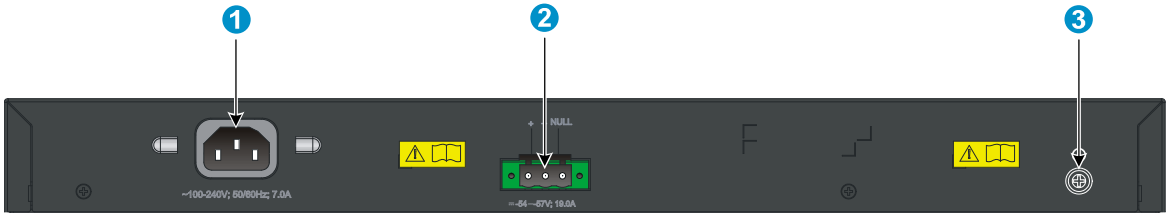

(1) AC-input power receptacle	(2) DC-input terminal block
(3) Grounding screw	


A3600-48-PoE+ v2 EI Switch/A3600-48-PoE+ v2 SI Switch panel views

Figure 11 A3600-48-PoE+ v2 EI Switch/A3600-48-PoE+ v2 SI front panel



(1) 10/100Base-TX auto-sensing Ethernet port	(2) 10/100Base-TX Ethernet port LED
(3) 1000Base-X SFP combo port	(4) 1000Base-X SFP combo port LED
(5) 1000Base-X SFP port	(6) 1000Base-X SFP port LED
(7) Seven-segment LED	(8) System status LED (PWR)
(9) DC power module status LED (RPS)	(10) Port mode LED (Mode)
(11) Port LED mode switching button	(12) Console port
(13) 1000Base-T Ethernet port LED	(14) 1000Base-T Ethernet port


Figure 12 A3600-48-PoE+ v2 EI Switch/A3600-48-PoE+ v2 SI rear panel

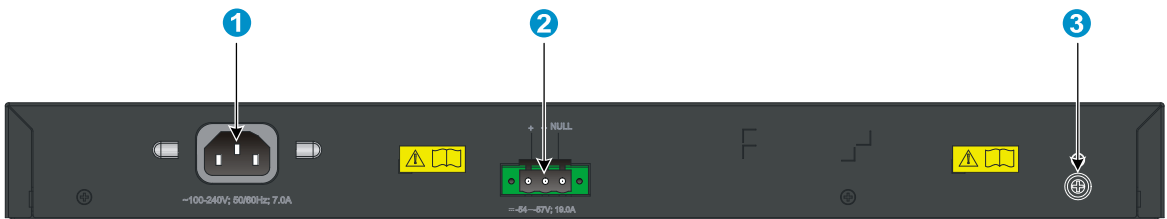

(1) AC-input power receptacle	(2) DC-input terminal block
(3) Grounding screw	

A3600-24-SFP v2 EI Switch panel views

Figure 13 A3600-24-SFP v2 EI front panel

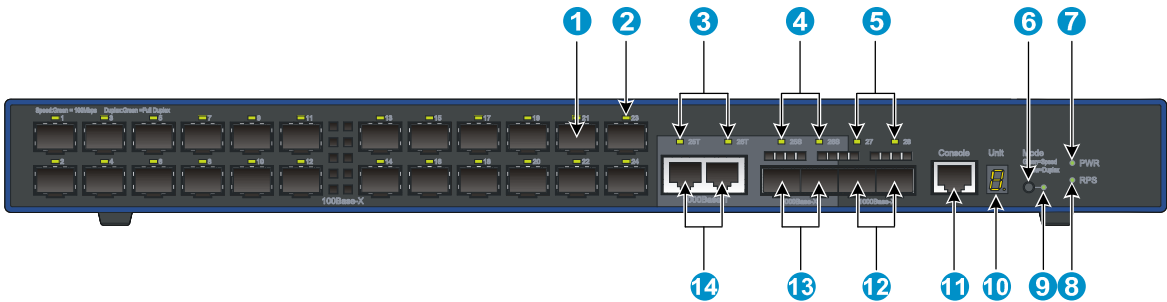

(1) 100Base-X SFP port	(2) 100Base-X SFP port LED
(3) 1000Base-T Ethernet combo port LED	(4) 1000Base-X SFP combo port LED
(5) 1000Base-X SFP port LED	(6) Port LED mode switching button
(7) System status LED (PWR)	(8) DC power LED (RPS)
(9) Port mode LED	(10) Seven-segment LED
(11) Console port	(12) 1000Base-X SFP port
(13) 1000Base-X SFP combo port	(14) 1000Base-T Ethernet combo port

Figure 14 A3600-24-SFP v2 EI rear panel



(1) AC-input power receptacle	(2) DC-input terminal block
(3) Grounding screw	

Preparing for installation

Safety recommendations

To avoid any equipment damage or bodily injury caused by improper use, read the following safety recommendations before installation. Note that the recommendations do not cover every possible hazardous condition.

- Before cleaning the switch, unplug all power cords from the switch. Do not clean the switch with wet cloth or liquid.
- Do not place the switch near water or in a damp environment. Prevent water or moisture from entering the switch chassis.
- Do not place the switch on an unstable case or desk. The switch might be severely damaged in case of a fall.
- Ensure proper ventilation of the equipment room and keep the air inlet and outlet vents of the switch free of obstruction.
- Connect the yellow-green protection grounding cable before power-on.
- Make sure that the operating voltage is in the required range.
- To avoid electrical shocks, do not open the chassis while the switch is operating or when the switch is just powered off.
- When replacing transceiver modules, wear an ESD-preventive wrist strap to avoid damaging the units.

Examining the installation site

The HP A3600 v2 Switch Series must be used indoors. You can mount the switch in a rack or on a workbench, but make sure:

- Adequate clearance is reserved at the air inlet and exhaust vents for ventilation.
- The rack or workbench has a good ventilation system.
- The rack is sturdy enough to support the switch and its accessories.
- The rack or workbench is well earthed.

To ensure normal operation and long service life of your switch, install it in an environment that meets the requirements described in the following subsections.

Temperature/humidity

Maintain appropriate temperature and humidity in the equipment room.

- Lasting high relative humidity can cause poor insulation, electricity creepage, mechanical property change of materials, and metal corrosion.

- Lasting low relative humidity can cause washer contraction and ESD and bring problems including loose captive screws and circuit failure.
- High temperature can accelerate the aging of insulation materials and significantly lower the reliability and lifespan of the switch.

For the temperature and humidity requirements of different switch models, see “[Environmental specifications](#)”.

Cleanness

Dust buildup on the chassis may result in electrostatic adsorption, which causes poor contact of metal components and contact points, especially when indoor relative humidity is low. In the worst case, electrostatic adsorption can cause communication failure.

Table 2 Dust concentration limit in the equipment room

Substance	Concentration limit (particles/m ³)
Dust	$\leq 3 \times 10^4$ (no visible dust on the tabletop over three days)
NOTE:	
Dust diameter $\geq 5 \mu\text{m}$	

The equipment room must also meet strict limits on salts, acids, and sulfides to eliminate corrosion and premature aging of components, as shown in [Table 3](#).

Table 3 Harmful gas limits in the equipment room

Gas	Maximum concentration (mg/m ³)
SO ₂	0.2
H ₂ S	0.006
NH ₃	0.05
Cl ₂	0.01

EMI


All electromagnetic interference (EMI) sources, from outside or inside of the switch and application system, adversely affect the switch in a conduction pattern of capacitance coupling, inductance coupling, electromagnetic wave radiation, or common impedance (including the grounding system) coupling. To prevent EMI, take the following actions:

- If AC power is used, use a single-phase three-wire power receptacle with protection earth (PE) to filter interference from the power grid.
- Keep the switch far away from radio transmitting stations, radar stations, and high-frequency devices.
- Use electromagnetic shielding, for example, shielded interface cables, when necessary.
- Route interface cables only indoors to prevent signal ports from getting damaged by overvoltage or overcurrent caused by lightning strikes.

Cooling requirements

The built-in fans in the A3600 v2 switches blow air from the left to the right of the chassis for heat dissipation, as shown in Figure 15.

Figure 15 Airflow through the A3600 v2 switches

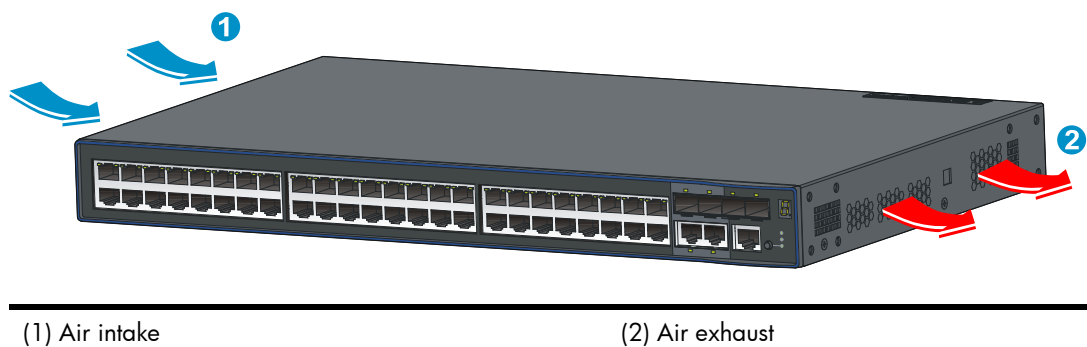

For adequate heat dissipation, plan the installation site according to the airflow of your switch, and adhere to the following requirements:

- Leave a clearance of at least 10 cm (3.94 in) around the air intake and exhaust vents.
- Consider the heat dissipation of the installation site when determining air-conditioning requirements to ensure that cool air can enter the switch.
- Make sure the hot air generated by equipment at the bottom of the rack is not drawn in the intake of the equipment above.
- The installation site has a good cooling system.

Laser safety

The A3600 v2 switches are Class 1 laser devices.



CAUTION:

Do not stare into any fiber port when the switch has power. The laser light emitted from the optical fiber may hurt your eyes.

Installation tools

- Flat-blade screwdriver
- Phillips screwdriver
- ESD-preventive wrist strap

All these installation tools are user supplied.


Installing the switch



WARNING!

Keep the tamper-proof seal on a mounting screw on the chassis cover intact, and if you want to open the chassis, contact your local HP agent for permission. Otherwise, HP shall not be liable for any consequence caused thereby.

Figure 16 Hardware installation flow

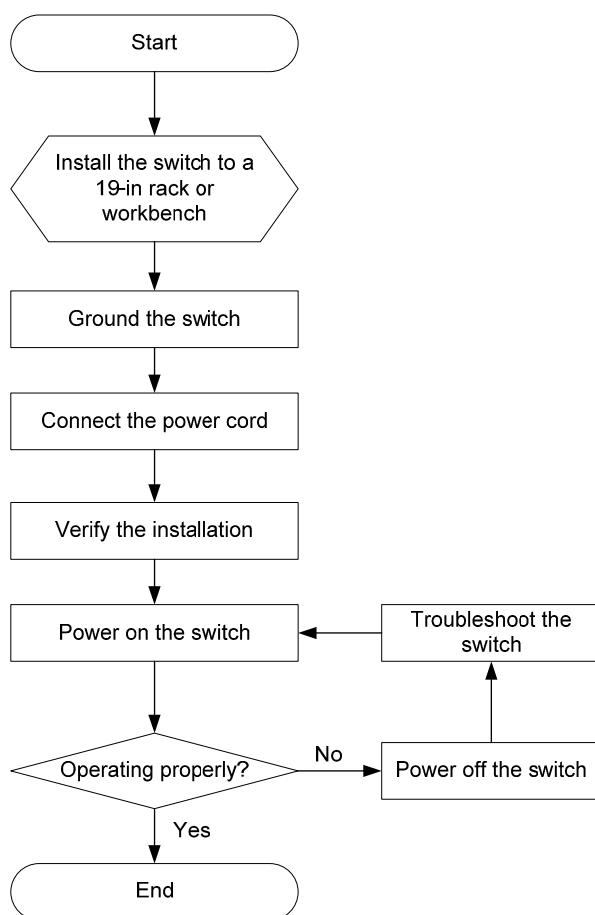

Installing the switch in a 19-inch rack

The A3600 v2 switch is available with one pair of mounting brackets, as shown in [Figure 17](#).

Mounting bracket kit

Figure 17 Mounting bracket kit



Attaching the mounting brackets to the chassis

The A3600 v2 switch provides one front mounting position and one rear mounting position. You can install the mounting brackets as needed.

1. Wear an ESD-preventive wrist strap, and make sure that the wrist strap makes good skin contact and is well grounded.
2. Align one mounting bracket with the screw holes in the front-mounting position (Figure 18) or the rear-mounting position (Figure 19)..
3. Use M4 screws (supplied with the switch) to fix the mounting bracket to the switch chassis.
4. Repeat the proceeding steps to attach the other mounting bracket to the chassis.

Figure 18 1U mounting bracket front mounting position


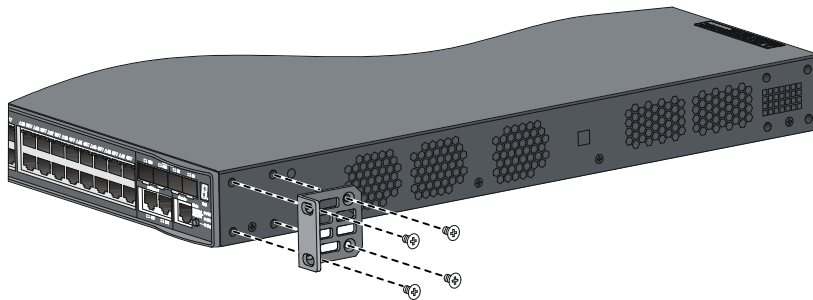


Figure 19 1U mounting bracket rear mounting position

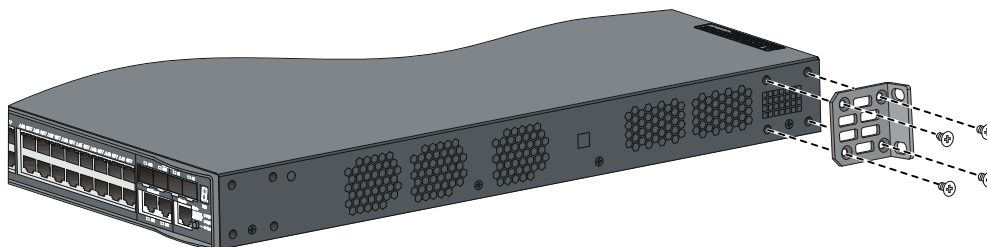


Rack-mounting an A3600 v2 switch

This installation task requires two persons. To mount the switch in a rack:

1. Wear an ESD-preventive wrist strap and make sure it makes good skin contact and is well grounded.
2. Check that the mounting brackets have been securely attached to the switch chassis.
3. Install cage nuts (user-supplied) in the mounting holes in the rack posts.
4. One person holds the switch chassis and aligns the mounting brackets with the mounting holes in the rack posts, and the other person fixes the mounting brackets with anti-rust screws (user-supplied) to the rack.
5. Check that the switch chassis is horizontal and tighten the screws.

Figure 20 Mount an A3600 v2 switch in a rack

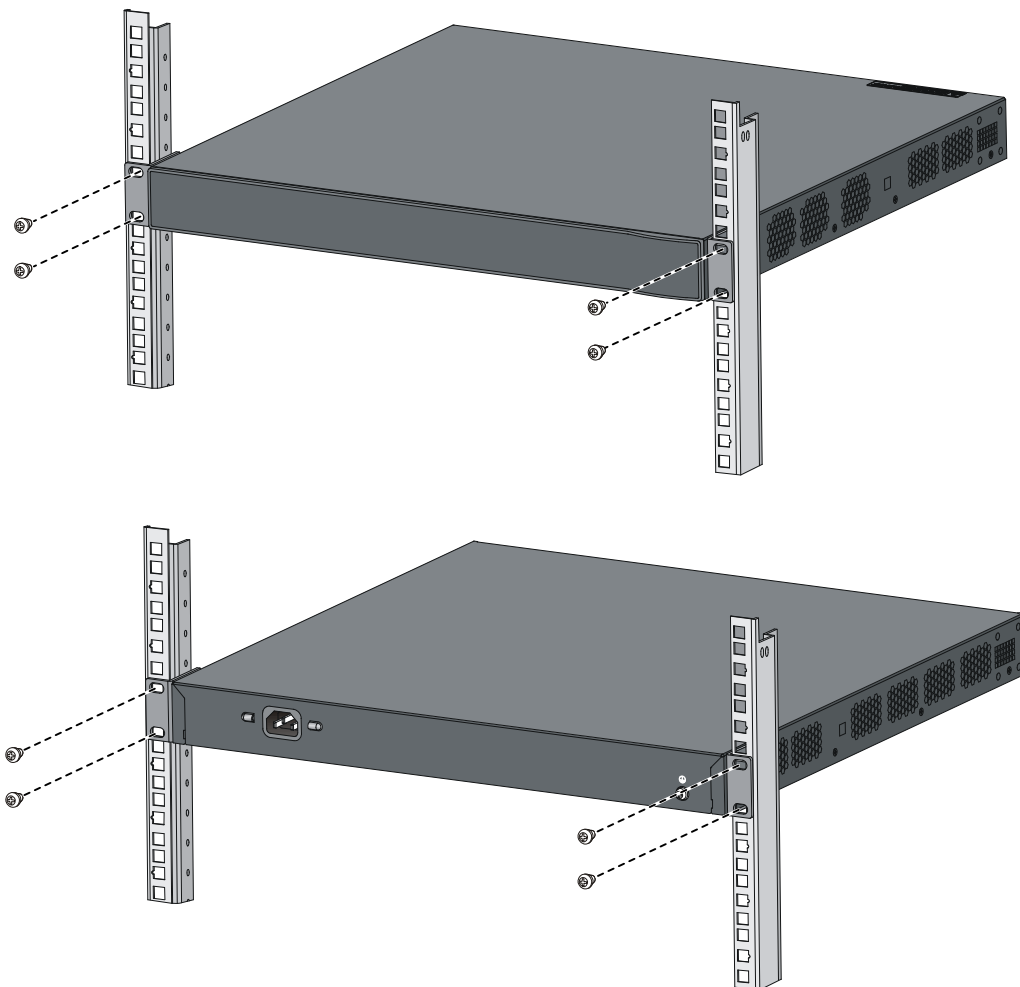

Mounting the switch on a workbench

If a standard 19-inch rack is not available, you can place an A3600 v2 switch on a clean, flat workbench, as follows:

1. Check that the workbench is sturdy and well grounded.

2. Place the switch with bottom up, and clean the round holes in the chassis bottom with dry cloth.
3. Attach the rubber feet to the four round holes in the chassis bottom.
4. Place the switch with upside up on the workbench.

⚠ **IMPORTANT:**

- Ensure good ventilation and 10 cm (3.9 in) of clearance around the chassis for heat dissipation.
 - Avoid placing heavy objects on the switch.
-

Grounding the switch

⚠ **WARNING!**

Correctly connecting the switch grounding cable is crucial to lightning protection and EMI protection.

NOTE:

The power and grounding terminals in this section are for illustration only.

The power input end of the switch has a noise filter, whose central ground is directly connected to the chassis to form the chassis ground (commonly known as PGND). You must securely connect this chassis ground to the earth so the faradism and leakage electricity can be safely released to the earth to minimize EMI susceptibility of the switch.


You can ground the switch in one of the following ways, depending on the grounding conditions available at the installation site:

- Grounding the switch with a grounding strip
- Grounding the switch by using the AC power cord
- Grounding the switch with a grounding conductor buried in the earth ground

Grounding cable

The A3600 v2 Switch Series is provided with a yellow-green grounding cable. One end of the cable has an OT terminal, and the other end is naked and soldered, as shown in [Figure 21](#).

Figure 21 Grounding cable

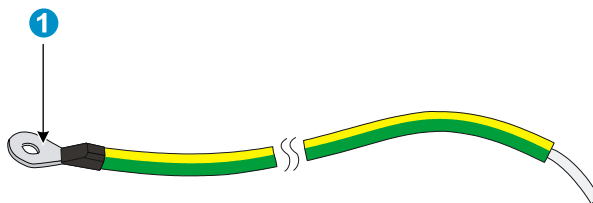

(1) OT terminal of the grounding cable

Grounding the switch with a grounding strip

When a grounding strip is available at the installation site, connect the grounding cable to the grounding strip.

⚠ CAUTION:


- The supplied grounding cable of the A3600 v2 Switch Series does not have an auxiliary OT terminal.
- Connect the grounding cable to the earthing system in the equipment room. Do not connect it to a fire main or lightning rod.

Connecting the grounding cable to the switch

Follow these steps to connect the grounding cable:

1. Remove the grounding screw on the rear panel of the switch chassis.
2. Attach the grounding screw to the OT terminal of the grounding cable.
3. Use a screwdriver to fasten the grounding screw into the grounding screw hole.

Figure 22 Connect the grounding cable to the grounding hole of switch

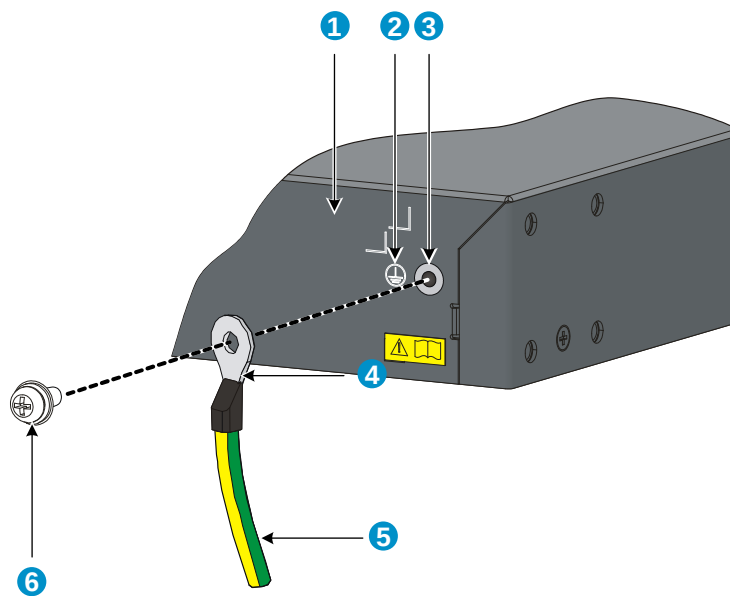

(1) Chassis rear panel	(2) Grounding sign
(3) Grounding hole	(4) OT terminal
(5) Grounding cable	(6) Grounding screw

Connecting the grounding cable to a grounding strip

Follow these steps to connect the grounding cable to a grounding strip:

1. Remove the hex nut from the grounding strip.
2. Cut the grounding cable to a proper length according to the distance between the switch and the grounding strip.
3. Make the connector on the grounding cable:

- If you have an OT terminal, follow callout A in [Figure 23](#) to make the connector: Peel 5 mm (0.20 in) of insulation sheath by using a wire stripper, and then insert the naked metal part through the insulation covering into the end of the OT terminal. Secure the metal part of the cable to the OT terminal with a crimper, and then cover it with the insulation covering. Then heat the insulation covering with a blower to make it completely cover the metal part.
 - If you do not have an OT terminal, follow callout B in [Figure 23](#) to make the connector: Peel the insulation sheath by an appropriate length by using a wire stripper, and then bend the naked metal part.
4. Connect the made connector to the grounding post of the grounding strip, and then fasten it with a hex nut, as shown in [Figure 24](#).

Figure 23 Make the grounding cable connector


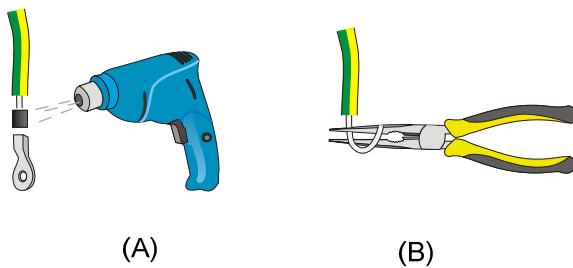


Figure 24 Connect the grounding cable to a grounding strip

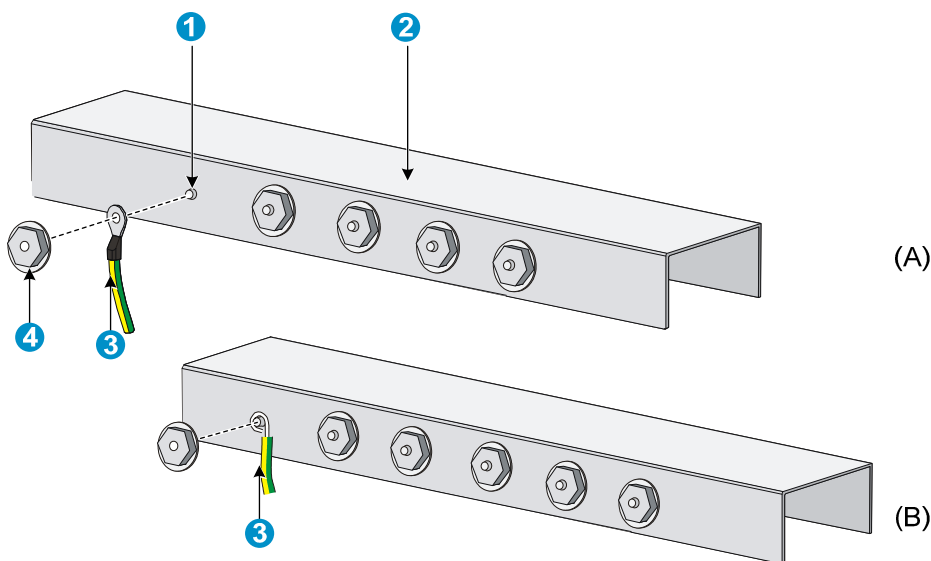

(1) Grounding post	(2) Grounding strip
(3) Grounding cable	(4) Hex nut

Grounding the switch by using the AC power cord

If the installation site has no grounding strips, you can ground an AC-powered switch through the protective earth (PE) wire of the power cord, but must make sure:


- The power cord has a PE terminal.

- The ground contact in the power outlet is securely connected to the ground in the power distribution room or on the AC transformer side.
- The power cord is securely connected to the power outlet.

NOTE:

If the ground contact in the power outlet is not connected to the ground, report the problem and reconstruct the grounding system.

Figure 25 Ground through the PE wire of the AC power supply

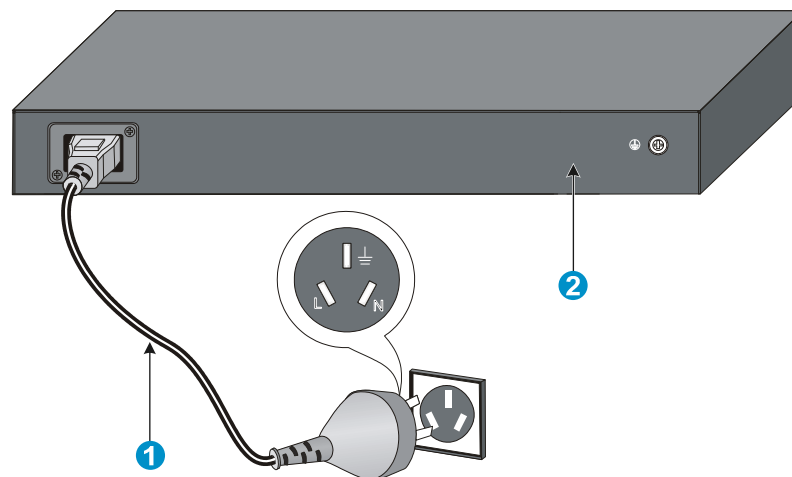

(1) Three-wire AC power cable

(2) Chassis rear panel

Grounding the switch with a grounding conductor buried in the earth ground

If the installation site has no grounding strips, but earth ground is available, hammer a 0.5 m (1.64 ft) or longer angle iron or steel tube into the earth ground to serve as a grounding conductor.

The dimensions of the angle iron must be at least 50 × 50 × 5 mm (1.97 × 1.97 × 0.20 in). The steel tube must be zinc-coated and its wall thickness must be at least 3.5 mm (0.14 in).

Weld the yellow-green grounding cable to the angel iron or steel tube and treat the joint for corrosion protection.

Figure 26 Ground the switch by burying the grounding conductor into the earth ground



(1) Grounding screw	(2) Grounding cable	(3) Earth
(4) Joint	(5) Grounding conductor	(6) Cassis rear panel

Connecting the power cord



CAUTION:


Before powering on the switch, you must connect the power cord and make sure the switch is well grounded.

Connecting an AC power cord

Follow these steps to connect an AC power cord:

1. Wear an ESD-preventive wrist strap, and make sure the wrist strap makes good skin contact and is well grounded.
2. Insert the plug of the AC power cord into the AC power receptacle (see [Figure 27](#)).
3. Connect the other end of the AC power cord to the AC power source.
4. Check the power LED (PWR) on the front panel. If the LED is on, the power cord is properly connected.

Figure 27 Connect the AC power cord

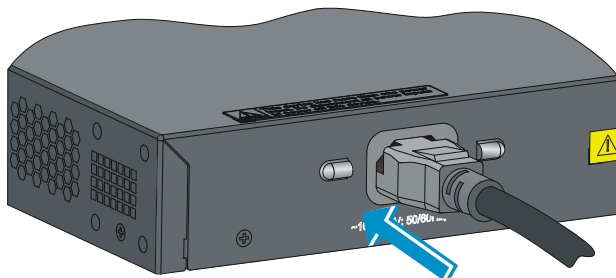

Connecting a DC power cord

NOTE:

- The A3600-24 v2 SI Switch and A3600-48 v2 SI Switch do not support DC power supply.
 - No DC power cord is supplied with the A3600 v2 Switch Series.
-

The A3600 v2 Switch Series provides DC power input.


- Non PoE switches (A3600-24 v2 EI Switch, A3600-48 v2 EI Switch, and A3600-24-SFP v2 EI Switch) can be powered by the –48VDC power supply in the equipment room.
- PoE switches (A3600-24-PoE+ v2 EI Switch, A3600-24-PoE+ v2 SI Switch, A3600-48-PoE+ v2 EI Switch, and A3600-48-PoE+ v2 SI Switch) can be powered by an RPS power source.

The procedures for connecting a –48 VDC power source in the equipment room and an RPS power source are similar.

Follow these steps to connect a DC power cord:

1. Wear an ESD-preventive wrist strap and make sure it makes good skin contact and is well grounded.
2. Keep the upside of the DC plug on top and plug it in the DC receptacle (see callout 1 in [Figure 28](#)). (If you plug it upside down, the insertion is not smooth because of the specific structure design of the DC receptacle and the DC plug.)
3. Use a flat-blade screwdriver to fix the two screws on the DC plug to secure the plug to the DC receptacle (see callout 2 in [Figure 28](#)).
4. Connect the other end of the DC power cord to the –48 VDC power source in the equipment room or the RPS power source.
5. Check the power LED (PWR) on the front panel. If the LED is on, the power cord is properly connected. If you also connect an AC power cord to the switch, check the RPS LED to confirm the RPS input status.

Figure 28 Connect a DC power cord to the switch

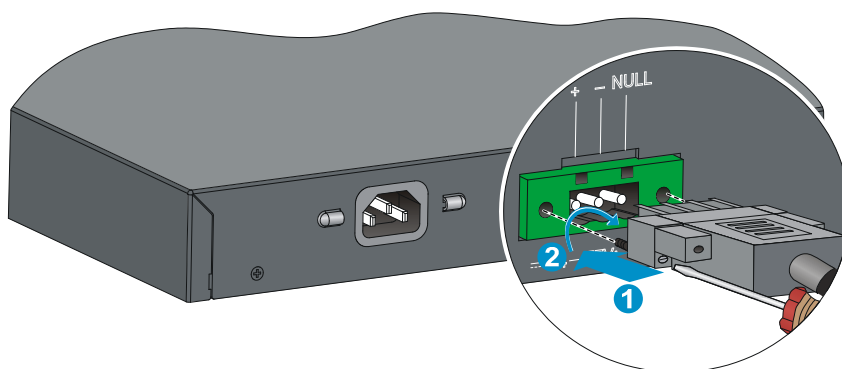

CAUTION:

Pay attention to the positive (+) and negative (-) marks on the power cord to avoid connection mistakes.

Verifying the installation

After you complete the installation, verify that:


- There is enough space for heat dissipation around the switch, and the rack or workbench is stable.
- The grounding cable is securely connected.
- The correct power source is used.
- The power cords are properly connected.
- All the interface cables are cabled indoors. If any cable is routed outdoors, verify that the socket strip with lightning protection and lightning arresters for network ports have been properly connected.

Accessing the switch for the first time

Setting up the configuration environment

The first time you access the switch you must use a console cable to connect a console terminal, for example, a PC, to the console port on the switch.

Figure 29 Connect the console port to a terminal

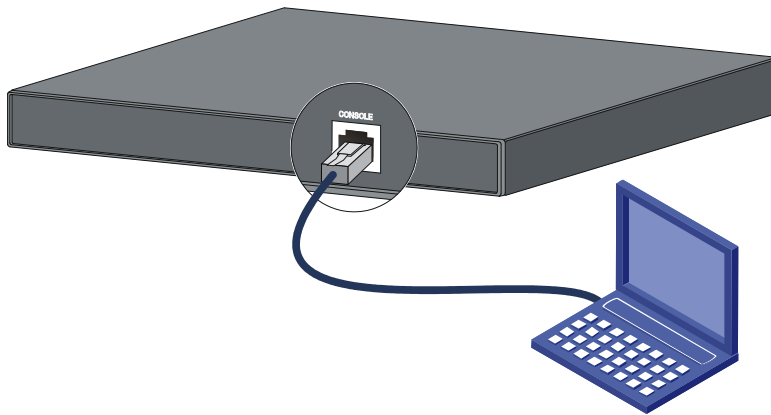


Connecting the console cable

Console cable

A console cable is an 8-core shielded cable, with a crimped RJ-45 connector at one end for connecting to the console port of the switch, and a DB-9 female connector at the other end for connecting to the serial port on the console terminal.

Figure 30 Console cable

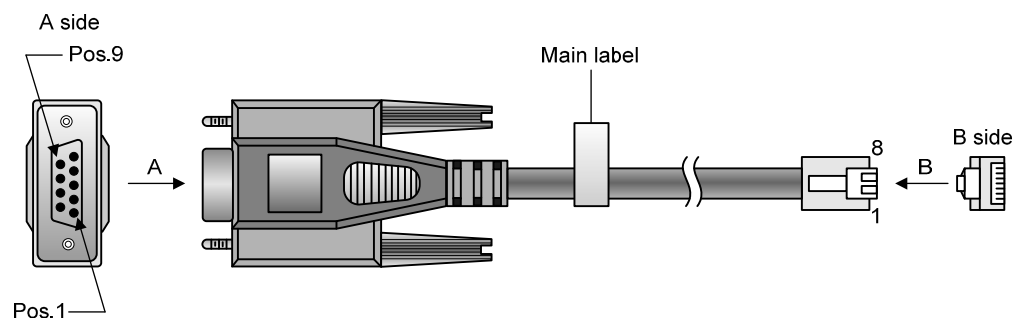

Connection procedure

To connect a terminal, for example, a PC, to the switch:

1. Plug the DB-9 female connector of the console cable to the serial port of the PC.

2. Connect the RJ-45 connector to the console port of the switch.

⚠ WARNING!

- Identify the mark on the console port to ensure that you are connecting to the correct port.
- The serial ports on PCs do not support hot swapping. If the switch has been powered on, connect the console cable to the PC before connecting to the switch, and when you disconnect the cable, first disconnect from the switch.

Setting terminal parameters

To configure and manage the switch, you must run a terminal emulator program on the console terminal.


The following are the required terminal settings:

- Bits per second—9,600
- Data bits—8
- Parity—None
- Stop bits—1
- Flow control—None
- Emulation—VT100

To set terminal parameters, for example, on a Windows XP HyperTerminal:

1. Select **Start > All Programs > Accessories > Communications > HyperTerminal**.
The **Connection Description** dialog box appears.
2. Enter the name of the new connection in the **Name** field and click **OK**.

Figure 31 Connection description

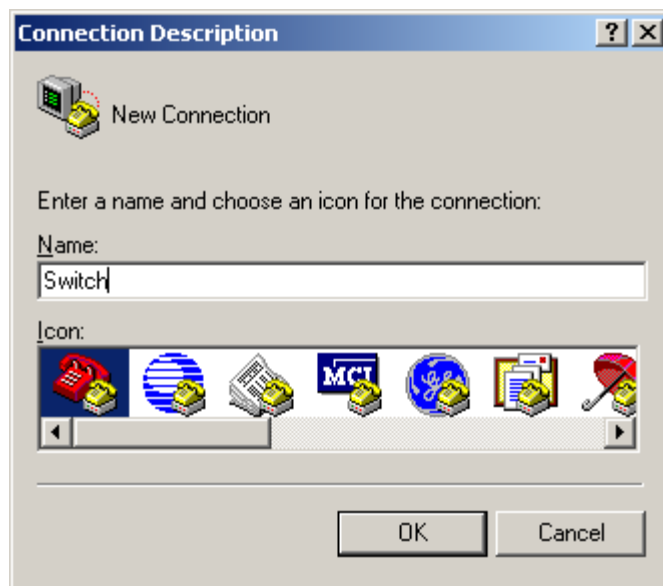


3. Select the serial port to be used from the **Connect using** list, and click **OK**.

Figure 32 Set the serial port used by the HyperTerminal connection




4. Set **Bits per second** to **9600**, **Data bits** to **8**, **Parity** to **None**, **Stop bits** to **1**, and **Flow control** to **None**, and click **OK**.

Figure 33 Set the serial port parameters

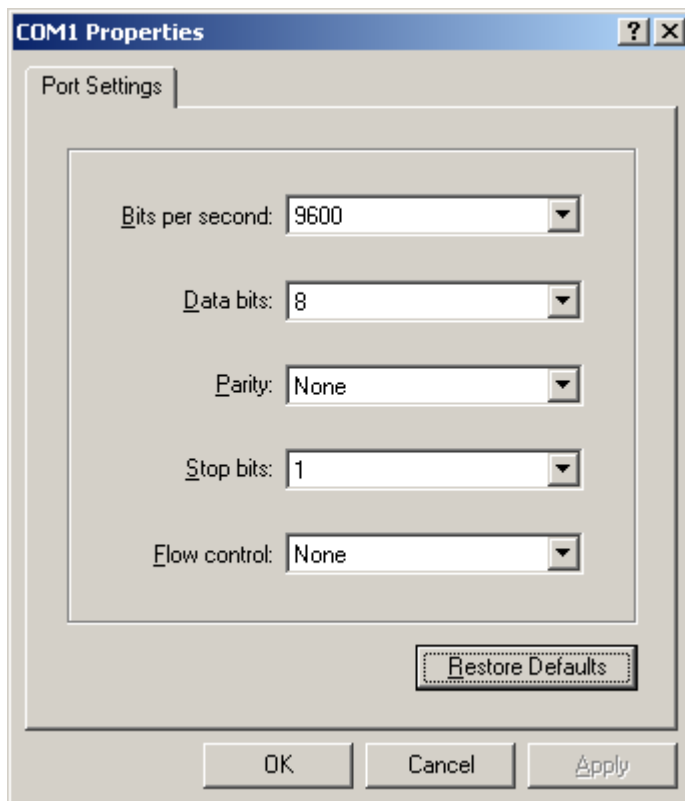


5. Select **File > Properties** in the HyperTerminal window.

Figure 34 HyperTerminal window

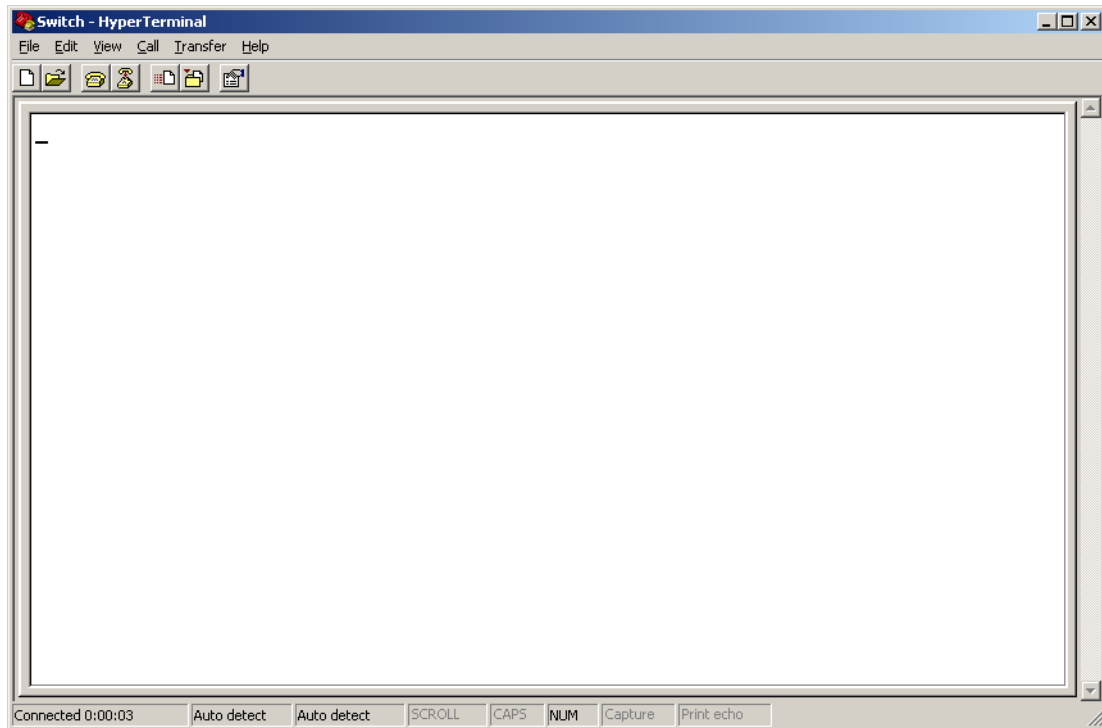

6. On the **Settings** tab, set the emulation to **VT100** and click **OK**.

Figure 35 Set terminal emulation in Switch Properties dialog box

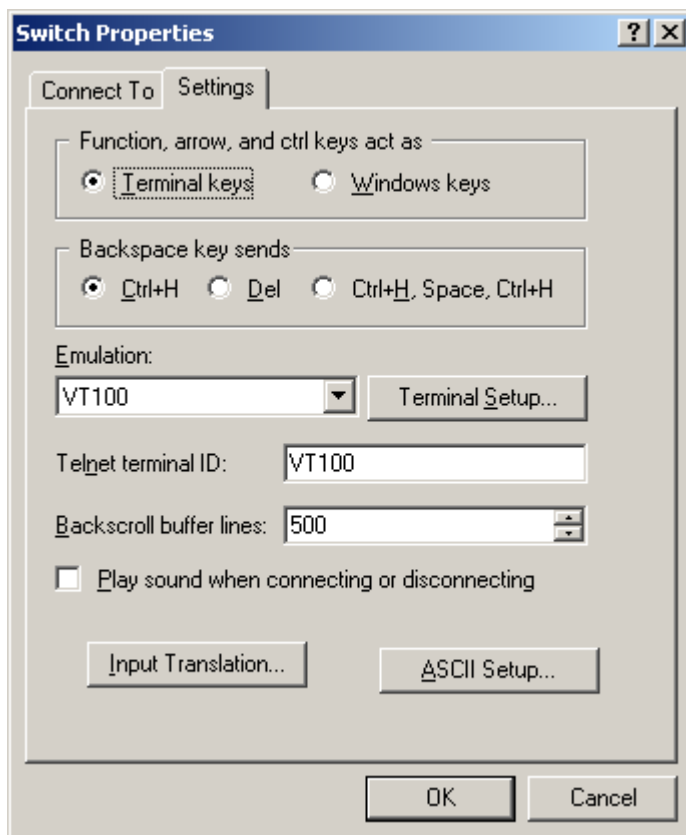

Powering on the switch

Checking before power-on

Before powering on the switch, verify that:

- The power cord is properly connected.
- The power supply voltage meets the requirement of the switch.
- The console cable is properly connected; the terminal or PC used for configuration has been started; and the configuration parameters have been set.

Powering on the switch

The A3600 v2 switches have the same Boot ROM display style. This document uses the Boot ROM output on an A3600-48-PoE+ v2 EI switch as an example:

Starting.....

```
*****
*
*          HP A3600-48-PoE+ v2 EI Switch  BOOTROM, Version 105
*
*****
```

Copyright (c) 2010-2011 Hewlett-Packard Development Company, L.P.

```
Creation Date       : Jan 13 2011, 16:39:15
CPU Clock Speed     : 600MHz
Memory Size         : 256MB
Flash Size          : 128MB
CPLD Version        : 001
PCB Version         : Ver.B
Mac Address         : 000fe2100000
```

Press Ctrl-B to enter Extended Boot menu...0

Press **Ctrl + B** at the prompt within one second to access the Boot menu, or wait for the system to automatically start up.

NOTE:

- The system has two startup modes: normal startup and fast startup. The normal startup mode requires a little longer time than the fast startup mode because of more self-test operations.
 - By default, the system starts up in fast mode and the waiting time is one second. If you set the startup mode to normal, the waiting time is five seconds. The following section describes the setting of the startup mode.
-

- If you press **Ctrl + B** within one second, the system displays the following information:

Please input BootRom password:

Enter the Boot ROM password (the initial password is null). Then the system displays the Boot ROM menu.

BOOT MENU

1. Download application file to flash
2. Select application file to boot
3. Display all files in flash
4. Delete file from flash
5. Modify BootRom password
6. Enter BootRom upgrade menu
7. Skip current system configuration
8. Set BootRom password recovery
9. Set switch startup mode
0. Reboot

Enter your choice(0-9):

Table 4 Description on the fields

Item	Description
1. Download application file to flash	Download a software package file to the Flash memory.
2. Select application file to boot	Select the software package file to boot.
3. Display all files in flash	Display all files in the Flash memory
4. Delete file from flash	Delete files from the Flash memory
5. Modify BootRom password	Modify the Boot ROM password
6. Enter BootRom upgrade menu	Access the Boot ROM update menu.
7. Skip current system configuration	Start the switch with the factory default configuration. This is a one-time operation and does not take effect at the next reboot. You use this option when you forget the console login password.
8. Set BootRom password recovery	Disable or enable the Boot ROM password recovery function. By default, Boot ROM recovery is enabled. You can disable this function to protect system security.
9. Set switch startup mode	Set the startup mode of the switch to normal (full) mode or fast mode, as described in " Changing the startup mode. "
0. Reboot	Restart the switch

- If you perform no operation or press a key other than **Ctrl + B** within one second, once the remaining waiting time becomes zero, the system begins to automatically start up and the following information is displayed:

```
Starting to get the main application file--flash:/A3600_v2.app!.....
.....
.....
....
The main application file is self-decompressing.....
.....
.....
.....
.....
.....
```

```

.....
.....
.....
.....
.....
.....
.....Done!
System is starting...
Startup configuration file does not exist.
It will take a long time to get configuration file, please wait...
Retrieving configuration file failed!
User interface aux0 is available.

```

Press ENTER to get started.

Press **Enter** at the prompt, and you can configure the switch when the prompt <HP> appears.

NOTE:

When the switch boots for the first time, it automatically obtains the configuration file through the DHCP server. If it fails to obtain the configuration file, it boots with the default configuration.

Changing the startup mode

By default, the system starts up in fast boot mode. To change the boot mode to **normal**, press **Ctrl + B** within one second to enter the Boot ROM menu:

```

BOOT MENU

1. Download application file to flash
2. Select application file to boot
3. Display all files in flash
4. Delete file from flash
5. Modify BootRom password
6. Enter BootRom upgrade menu
7. Skip current system configuration
8. Set BootRom password recovery
9. Set switch startup mode
0. Reboot

```

Enter your choice(0-9):

Enter **9**. The system prompts you to change the startup mode:

The current mode is fast startup mode!

Are you sure you want to change it to full startup mode? Yes or No(Y/N)

Enter **Y**. The system displays the following information:

Setting startup mode...done!

BOOT MENU

1. Download application file to flash
2. Select application file to boot
3. Display all files in flash
4. Delete file from flash
5. Modify BootRom password
6. Enter BootRom upgrade menu
7. Skip current system configuration
8. Set BootRom password recovery
9. Set switch startup mode
0. Reboot

Enter your choice(0-9):

Enter **0**. The system reboots in normal startup mode and displays the following information:
Starting.....

```
*****
*
*          HP A3600-48-PoE+ v2 EI Switch  BOOTROM, Version 105
*
*****
```

Copyright (c) 2010-2011 Hewlett-Packard Development Company, L.P.

```
Creation Date       : Jan 13 2011, 16:39:15
CPU Clock Speed     : 600MHz
Memory Size         : 256MB
Flash Size          : 128MB
CPLD Version        : 001
PCB Version         : Ver.B
Mac Address         : 000fe2100000
```

Press Ctrl-B to enter Extended Boot menu...0

In normal startup mode, the waiting time is five seconds. If you press **Ctrl + B** within five seconds, the Boot ROM menu is displayed. If you perform no operation or press a key other than **Ctrl + B** within five seconds, the system begins to automatically start up and the following information is displayed:

Starting to get the main application file--flash:/A3600_v2.app!.....

```
.....
.....
....
```

The main application file is self-decompressing.....

```
.....
.....
.....
.....
.....
.....
.....
```

```
.....
.....
.....
.....
.....
.....Done!
System is starting...
    Board checking.....LSJ252TPA
    SDRAM fast selftest.....OK!
    Flash fast selftest.....OK!
    CPLD selftest.....OK!
    Switch chip selftest.....OK!
    PHY selftest.....OK!
    Please check leds.....FINISHED!
User interface aux0 is available.
```

Press ENTER to get started.

Press **Enter** at the prompt, and you can configure the switch when the prompt <HP> appears.

NOTE:

For more information about the configuration commands and command line interface, see the *HP A3600 v2 Switch Series Configuration Guides* and the *HP A3600 v2 Switch Series Command References*.

Setting up an IRF fabric


You can use HP Intelligent Resilient Framework (IRF) technology to connect and virtualize A3600 v2 switches into a virtual switch called an “IRF fabric” or “IRF virtual device” for flattened network topology, and high availability, scalability, and manageability.

This chapter includes these sections:

- [IRF fabric setup flowchart](#)
- [Planning IRF fabric setup](#)
- [Configuring basic IRF settings](#)
- [Connecting the physical IRF ports](#)
- [Accessing the IRF fabric to verify the configuration](#)

IRF fabric setup flowchart

Figure 36 IRF fabric setup flowchart

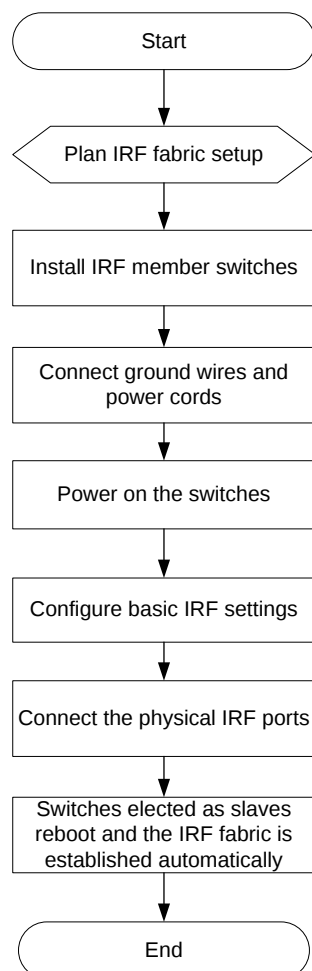

Follow these steps to set up an IRF fabric:

Step	Description
1. Plan IRF fabric setup	Plan the installation site and IRF fabric setup parameters. Complete the following tasks: • Planning IRF fabric size and the installation site • Identifying the master switch and planning IRF member IDs • Planning IRF topology and connections • Identifying physical IRF ports on the member switches • Planning the cabling scheme
2. Install IRF member switches	See "Installing the switch in a 19-inch rack" or "Mounting the switch on a workbench."
3. Connect ground wires and power cords	See "Grounding the switch" and "Connecting the power cord."
4. Power on the switches	N/A
5. Configure basic IRF settings	For more information about IRF, see the <i>HP A3600 v2 Switch Series IRF Configuration Guide</i> .
6. Connect the physical IRF ports	Connect physical IRF ports on switches. Use Ethernet cables, SFP transceiver modules, and fibers to connect ports over a long distance, or use SFP IRF modules to connect ports over a short distance. All switches except the master switch automatically reboot, and the IRF fabric is established.

Planning IRF fabric setup

Planning IRF fabric size and the installation site

Choose A3600 v2 switch models and identify the number of required IRF member switches, depending on the user density and upstream bandwidth requirements. The switching capacity of an IRF fabric equals the total switching capacities of all member switches.

Plan the installation site depending on your network solution, as follows:

- Place all IRF member switches in one rack for centralized high-density access.
- Distribute the IRF member switches in different racks for dispersed access.

NOTE:

An IRF fabric can have up to nine A3600 v2 switches. As your business grows, you can plug an A3600 v2 switch into an IRF fabric to increase the switching capacity without any topology change or replacement.

Identifying the master switch and planning IRF member IDs

Determine which switch you want to use as the master for managing all member switches in the IRF fabric. An IRF fabric has only one master switch. You configure and manage all member switches in the IRF fabric at the command line interface of the master switch.

NOTE:

IRF member switches will automatically elect a master. You can affect the election result by assigning a high member priority to the intended master switch. For more information about master election, see the *HP A3600 v2 Switch Series IRF Configuration Guide*.

Prepare an IRF member ID assignment scheme. An IRF fabric uses member IDs to uniquely identify and manage its members, and you must assign each IRF member switch a unique member ID.

Planning IRF topology and connections

You can create an IRF fabric in daisy chain topology, or more reliably, ring topology. In ring topology, the failure of one IRF link does not cause the IRF fabric to split as in daisy chain topology. Rather, the IRF fabric changes to a daisy chain topology without interrupting network services.

You connect the IRF member switches through IRF ports. An IRF port is a logical interface for the internal connection between IRF member switches. Each IRF member switch has two IRF ports: IRF-port 1 and IRF-port 2. An IRF port is activated when you bind a physical port to it.

When connecting IRF member switches, you must connect the physical ports of IRF-port1 on one switch to the physical ports of IRF-port2 on its neighbor switch.

The A3600 v2 switches can provide IRF connections through the GE Ethernet ports and GE SFP ports, and you can bind several GE ports to an IRF port for increased bandwidth and availability.

NOTE:

- [Figure 37](#) and [Figure 38](#) show the topologies for an IRF fabric made up of three A3600-48 v2 SI Switch.
 - The IRF port connections in the two figures are for illustration only, and more connection methods are available.
-

Figure 37 IRF fabric in daisy chain topology


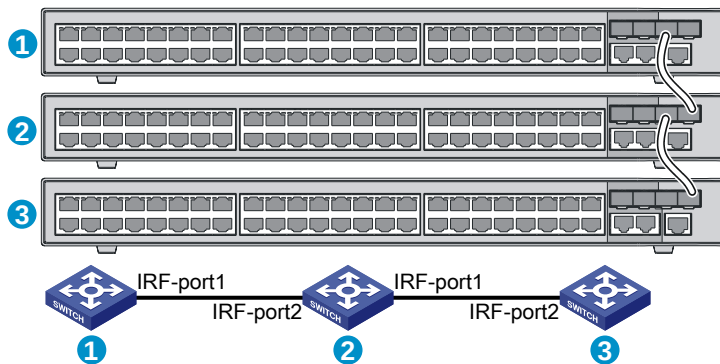


Figure 38 IRF fabric in ring topology

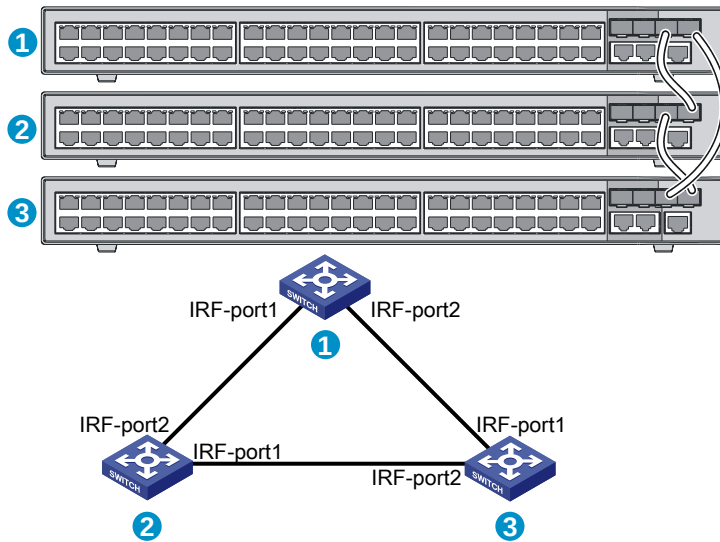

Identifying physical IRF ports on the member switches

Identify the physical IRF ports on the member switches according to your topology and connection scheme.

When using a combo interface for IRF connection, configure the fiber or copper port of the combo interface as active. For how to configure the combo interface state, see the *HP A3600 v2 Switch Series Layer 2—LAN Switching Configuration Guide*.

Planning the cabling scheme

Use GE Ethernet twisted pairs, SFP IRF modules or SFP transceiver modules, and fibers to connect the IRF member switches. If the IRF member switches are far away from one another, choose GE Ethernet twisted pairs or the SFP transceiver modules with optical fibers. If the IRF member switches are all in one rack, choose SFP IRF modules.

Table 12 lists the SFP transceiver modules and SFP IRF modules available for IRF connections.

The following subsections describe several IRF connection schemes and use SFP IRF modules or SFP transceiver modules with optical cables for example. All these schemes use a ring topology.

Connecting the IRF member switches in one rack

NOTE:

This example uses nine switches.

You can connect the IRF member switches in one rack (see Figure 39), and Figure 40 shows the IRF fabric topology.

Figure 39 Connect the IRF member switches in one rack


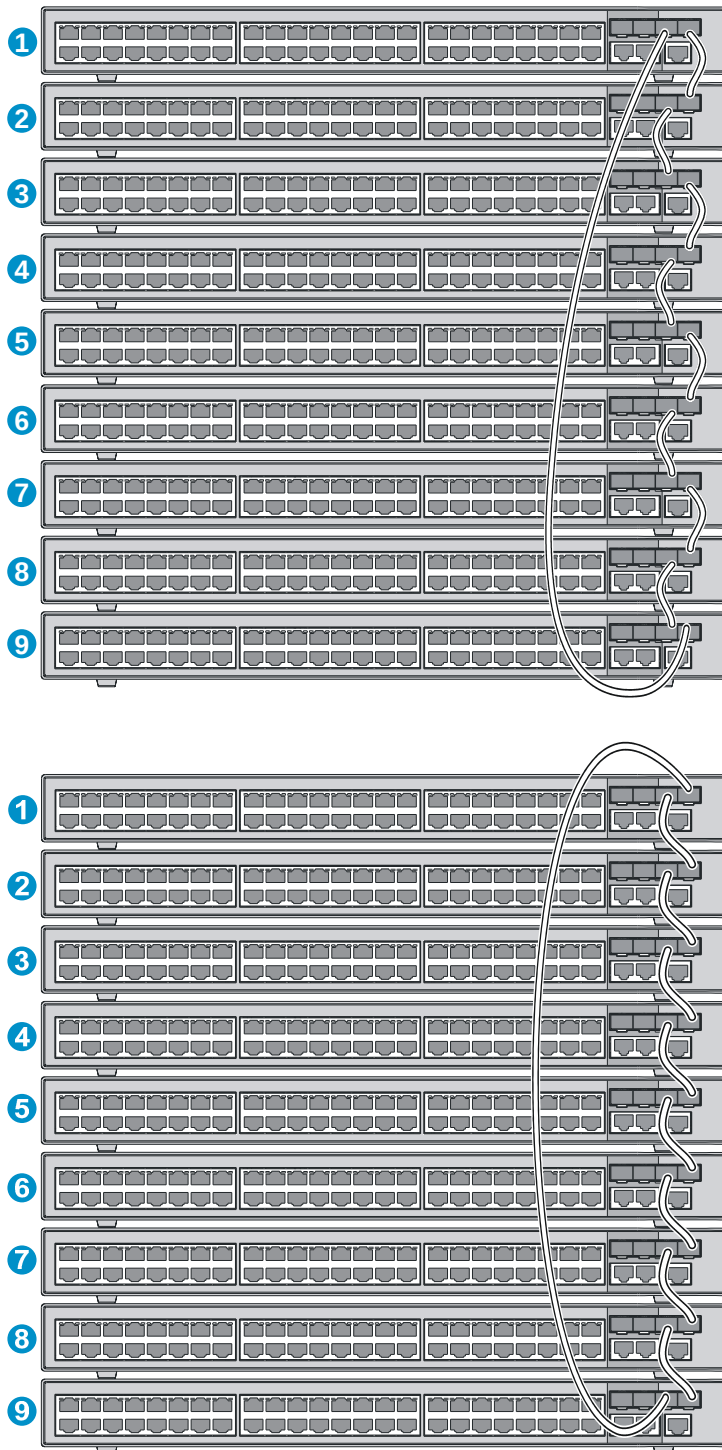


Figure 40 IRF fabric topology

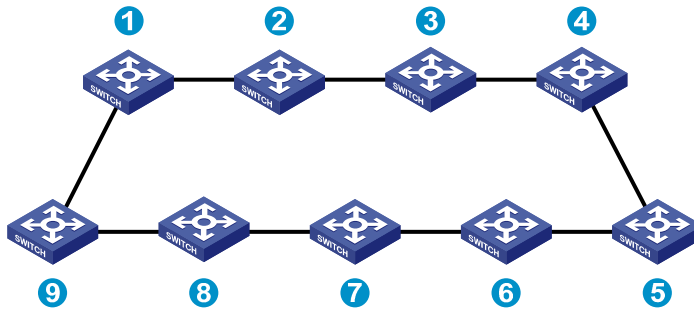


Connecting the IRF member switches in different racks

NOTE:

This example uses nine switches.

You can install IRF member switches in different racks side by side. Figure 41 shows an example for connecting nine IRF member switches in different racks, and Figure 40 shows the IRF fabric topology.

Figure 41 Connect the IRF member switches in different racks

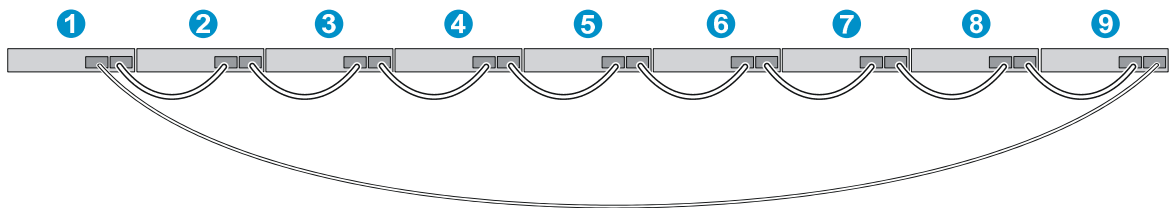

Configuring basic IRF settings

After you install the IRF member switches, power on the switches, and log in to each IRF member switch (see the *HP A3600 v2 Switch Series Fundamentals Configuration Guide*) to configure their member IDs, member priorities, and IRF port bindings.

Follow these guidelines when you configure the switches:

- Assign the master switch higher member priority than any other switch.
- Bind physical ports to IRF port 1 on one switch and to IRF port 2 on the other switch. You perform IRF port binding before or after connecting IRF physical ports depending on the software release.
- Execute the **display irf configuration** command to verify the basic IRF settings.

For more information about configuring basic IRF settings, see the *HP A3600 v2 Switch Series IRF Configuration Guide*.

Connecting the physical IRF ports

Connect IRF member switches with GE Ethernet cables, SFP IRF modules or SFP transceiver modules, and fibers as planned.

NOTE:

Wear an ESD-preventive wrist strap when you connect SFP IRF modules or SFP transceiver modules and fibers. For how to connect them, see the *SFP/SFP+/XFP Transceiver Modules Installation Guide*.

Accessing the IRF fabric to verify the configuration

When you are finished configuring basic IRF settings and connecting IRF ports, follow these steps to verify the basic functionality of the IRF fabric:

1. Log in to the IRF fabric through the console port of any member switch.
2. Create a Layer 3 interface, assign it an IP address, and make sure that the IRF fabric and the remote network management station can reach each other.
3. Use Telnet, web or SNMP to access the IRF fabric from the network management station. (See the *HP A3600 v2 Switch Series Fundamentals Configuration Guide*.)
4. Check that you can manage all member switches as if they were one node.
5. Display the running status of the IRF fabric by using the commands in [Table 5](#).

Table 5 Display and maintain IRF configuration and running status

To do ...	Use the command...
Display information about the IRF fabric	display irf
Display all members' configurations that take effect after switch reboots	display irf configuration
Display topology information about the IRF fabric	display irf topology

NOTE:

To avoid IP address collision and network problems, configure at least one multi-active detection (MAD) mechanism to detect the presence of multiple identical IRF fabrics and handle collisions. For more information about MAD detection, see the *HP A3600 v2 Switch Series IRF Configuration Guide*.

Maintenance and troubleshooting

Password loss

Console login password loss

If you forget the console login password, enter the Boot ROM menu:

BOOT MENU

1. Download application file to flash
2. Select application file to boot
3. Display all files in flash
4. Delete file from flash
5. Modify BootRom password
6. Enter BootRom upgrade menu
7. Skip current system configuration
8. Set BootRom password recovery
9. Set switch startup mode
0. Reboot

Enter your choice(0-9):

Enter **7** and restart the switch. The switch reboots with empty configuration, and you can log in through the console port without entering the password to check the configuration file for the user password.

Boot ROM password loss

Contact your sales agent for help.

Power system failure

The A3600 v2 Switch Series (except the A3600-24 v2 SI Switch and A3600-48 v2 SI Switch) provides two fixed power inputs. You can use both of the power inputs for redundancy or one power input, as needed.

- The A3600-24 v2 SI Switch and A3600-48 v2 SI Switch support only AC power supply.
- Other models support AC power supply, DC power supply, or both.

The switch uses the system status LED (PWR) on the front panel and the DC power status LED (RPS) to show how the power system of the switch is operating.

Table 6 A3600 v2 Switch Series power status LED description

LED	LED mark	Status	Description
System status LED	PWR	Off	The switch has been powered off.
DC power status LED	RPS	Steady yellow	The DC input is normal, and the AC power receptacle has an input error or is not connected.
		Off	No DC power input

AC or RPS input

If your switch is AC powered or DC powered, look at the system status LED to identify a power failure. If the system status LED is off, a power supply failure has occurred. Check the following items:

- The power cord is well connected to the switch, and the AC or DC receptacle on the switch and the AC or DC power receptacle are normal.
- The external AC power supply system, -48 VDC power source in the equipment room, or RPS power supply system are operating properly.
- The operating temperature of the switch is normal, and the power module has good ventilation (over-temperature can cause a power module to stop working and enter the protection state).

Concurrent AC and RPS inputs

If your switch adopts both AC and DC power supplies, check the status of each input by referring to the PWR LED and RPS LED. If the switch is concurrently powered by an AC and a DC power supply, look at the system status LED and DC status LED to identify an AC or DC input failure.

1. The system LED is off, the AC power supply and the DC power supply both have an input failure.

Check the following items:

- The power cord is correctly connected, the AC or DC power receptacle of the switch is operational, and the power socket is normal.
 - The external AC/-48 VDC/RPS power supply system is operating properly.
 - The switch is well connected to the external power system.
 - The operating temperature of the switch is normal, and the power module has good ventilation (over-temperature can cause the power module to stop working and enter the protection state).
2. The system status LED is on but the RPS status LED is steady yellow, an AC input failure has occurred.

Check the following items:

- The AC power cord is well connected to the switch, and the AC receptacle on the switch and the AC power receptacle are normal.
 - The AC external power supply system is normal.
3. If the system status LED is on but the RPS status LED is off, an RPS input failure has occurred.

Check the following items:

- The power cord is correctly connected, the DC power receptacle of the switch is operational, and the power socket is normal.

- The external –48 VDC/RPS power supply system is operating properly.
- The switch is well connected to the external power supply.

NOTE:

If the problem persists, contact the HP technical support for help.

Fan failure

You can look at the system status LED and the seven-segment LED of an A3600 v2 switch to identify a fan failure. If both LEDs are behaving as described in [Table 7](#), a fan failure occurs.

Table 7 LED behaviors for fan failure

LED	Mark	State
System status LED	PWR	Steady red
Seven-segment LED	Unit	The LED displays F for fan failure. 

The A3600 v2 Switch Series uses fixed fans. If a fixed fan failure occurs, you cannot solve the problem yourself. Contact your sales agent or service engineer.

NOTE:

To ensure the normal operation of the switch, contact the local sales agent or service engineer as soon as possible when a fixed fan failure occurs.

Configuration terminal problems

If the configuration environment setup is correct, the configuration terminal displays booting information when the switch is powered on. If the setup is incorrect, the configuration terminal would display nothing or garbled text.

No terminal display

If the configuration terminal displays nothing when the switch is powered on, check that:

- The power supply is normal.
- The console cable is properly connected.
- The console cable has no problem and the terminal settings are correct.

Garbled terminal display

If terminal display is garbled, check that the following settings are configured for the terminal, for example, HyperTerminal:

- Baud rate—9,600
- Data bits—8
- Parity—none

- Stop bits—1
- Flow control—none
- Emulation—VT100

Appendix A Technical specifications

Physical specifications

Chassis dimensions and weights

Chassis	Dimensions (H × W × D)	Weight
A3600-24 v2 EI Switch	43.6 × 440 × 260 mm (1.72 × 17.32 × 10.24 in)	< 5 kg (11.02 lb)
A3600-48 v2 EI Switch	43.6 × 440 × 260 mm (1.72 × 17.32 × 10.24 in)	< 5 kg (11.02 lb)
A3600-24-SFP v2 EI Switch	43.6 × 440 × 260 mm (1.72 × 17.32 × 10.24 in)	< 5 kg (11.02 lb)
A3600-24-PoE+ v2 EI Switch	43.6 × 440 × 420 mm (1.72 × 17.32 × 16.54 in)	< 10 kg (22.05 lb)
A3600-48-PoE+ v2 EI Switch	43.6 × 440 × 420 mm (1.72 × 17.32 × 16.54 in)	< 10 kg (22.05 lb)
A3600-24 v2 SI Switch	43.6 × 440 × 260 mm (1.72 × 17.32 × 10.24 in)	< 5 kg (11.02 lb)
A3600-48 v2 SI Switch	43.6 × 440 × 260 mm (1.72 × 17.32 × 10.24 in)	< 5 kg (11.02 lb)
A3600-24-PoE+ v2 SI Switch	43.6 × 440 × 420 mm (1.72 × 17.32 × 16.54 in)	< 10 kg (22.05 lb)
A3600-48-PoE+ v2 SI Switch	43.6 × 440 × 420 mm (1.72 × 17.32 × 16.54 in)	< 10 kg (22.05 lb)

Ports

Item	A3600-24 v2 EI Switch	A3600-48 v2 EI Switch	A3600-24-SFP v2 EI Switch	A3600-24 v2 SI Switch	A3600-48 v2 SI Switch	A3600-24-PoE+ v2 EI Switch/ A3600-24-PoE+ v2 SI Switch	A3600-48-PoE+ v2 EI Switch/ A3600-48-PoE+ v2 SI Switch
Console ports	1, front panel	1, front panel	1, front panel	1, front panel	1, front panel	1, front panel	1, front panel
10/100Base-TX Ethernet ports	24	48	N/A	24	48	24, PoE	48, PoE
1000Base-T Ethernet ports	2	2	2	2	2	2	2

Item	A3600-2 4 v2 EI Switch	A3600-4 8 v2 EI Switch	A3600-2 4-SFP v2 EI Switch	A3600-2 4 v2 SI Switch	A3600-4 8 v2 SI Switch	A3600-2 4-PoE+ v2 EI Switch/ A3600-2 4-PoE+ v2 SI Switch	A3600-4 8-PoE+ v2 EI Switch/ A3600-4 8-PoE+ v2 SI Switch
100Base-X SFP ports	N/A	N/A	24	N/A	N/A	N/A	N/A
1000Base-X SFP ports	4, including 2 combo fiber ports paired with two 1000Bas e-T Ethernet ports	4, including 2 combo fiber ports paired with two 1000Base- T Ethernet ports	4, including 2 combo fiber ports paired with two 1000Base -T Ethernet ports	4, including 2 combo fiber ports paired with two 1000Base -T Ethernet ports	4, including 2 combo fiber ports paired with two 1000Base -T Ethernet ports	4, including 2 combo fiber ports paired with two 1000Base -T Ethernet ports	4, including 2 combo fiber ports paired with two 1000Base -T Ethernet ports

Environmental specifications

Chassis	Operating temperature	Relative humidity	Fire resistance compliance
All chassis	0°C to 50°C (32°F to 122°F)	5% to 95%, noncondensing	UL60950-1, EN60950-1, IEC60950-1, GB4943

Power specifications

AC-input power specifications

Chassis	AC-input voltage	Min power consumption	Max power consumption
A3600-24 v2 EI Switch	Rated voltage: 100 VAC to 240 VAC, 50 or 60 Hz Max voltage: 90 VAC to 264 VAC, 47 or 63 Hz	22 W	31 W
A3600-48 v2 EI Switch	Rated voltage: 100 VAC to 240 VAC, 50 or 60 Hz Max voltage: 90 VAC to 264 VAC, 47 or 63 Hz	32 W	43 W
A3600-24-SFP v2 EI Switch	Rated voltage: 100 VAC to 240 VAC, 50 or 60 Hz Max voltage: 90 VAC to 264 VAC, 47 or 63 Hz	26 W	60 W

Chassis	AC-input voltage	Min power consumption	Max power consumption
A3600-24-PoE+ v2 EI Switch	Rated voltage: 100 VAC to 240 VAC, 50 or 60 Hz Max voltage: 90 VAC to 264 VAC, 47 or 63 Hz	33 W	465 W (370 W for PoE output)
A3600-48-PoE+ v2 EI Switch	Rated voltage: 100 VAC to 240 VAC, 50 or 60 Hz Max voltage: 90 VAC to 264 VAC, 47 or 63 Hz	44 W	440 W (320 W for PoE output)
A3600-24 v2 SI Switch	Rated voltage: 100 VAC to 240 VAC, 50 or 60 Hz Max voltage: 90 VAC to 264 VAC, 47 or 63 Hz	17 W	26 W
A3600-48 v2 SI Switch	Rated voltage: 100 VAC to 240 VAC, 50 or 60 Hz Max voltage: 90 VAC to 264 VAC, 47 or 63 Hz	30 W	41 W
A3600-24-PoE+ v2 SI Switch	Rated voltage: 100 VAC to 240 VAC, 50 or 60 Hz Max voltage: 90 VAC to 264 VAC, 47 or 63 Hz	33 W	465 W (370 W for PoE output)
A3600-48-PoE+ v2 SI Switch	Rated voltage: 100 VAC to 240 VAC, 50 or 60 Hz Max voltage: 90 VAC to 264 VAC, 47 or 63 Hz	44 W	440 W (320 W for PoE output)

DC-input power specifications

Chassis	DC-input rated voltage	Min power consumption	Max power consumption
A3600-24 v2 EI Switch	Rated voltage: –48 VDC to –60 VDC Max voltage: –36 VDC to –72 VDC	22 W	31 W
A3600-48 v2 EI Switch	Rated voltage: –48 VDC to –60 VDC Max voltage: –36 VDC to –72 VDC	32 W	43 W
A3600-24-SFP v2 EI Switch	Rated voltage: –48 VDC to –60 VDC Max voltage: –36 VDC to –72 VDC	26 W	60 W

RPS DC-input power specifications

Chassis	DC-input rated voltage	Min power consumption	Max power consumption
A3600-24-PoE+ v2 EI Switch	–54 VDC to –57 VDC	33 W	795 W (720 W for PoE output)
A3600-48-PoE+ v2 EI Switch	–54 VDC to –57 VDC	44 W	820 W (720 W for PoE output)
A3600-24-PoE+ v2 SI Switch	–54 VDC to –57 VDC	33 W	795 W (720 W for PoE output)
A3600-48-PoE+ v2 SI Switch	–54 VDC to –57 VDC	44 W	820 W (720 W for PoE output)

Appendix B Ports and LEDs

Ports

Console port

Every A3600 v2 switch provides one console port on the front panel.

Table 8 Console port specifications

Item	Specification
Connector type	RJ-45
Compliant standard	EIA/TIA-232
Transmission baud rate	9600 bps (default) to 115200 bps
Services	• Provides connection to an ASCII terminal. • Provides connection to the serial port of a local or remote (through a pair of modems) PC running terminal emulation program.

10/100Base-TX Ethernet port

Table 9 10/100Base-TX Ethernet port specifications

Item	Specification
Connector type	RJ-45
Interface attributes	• 10 Mbps, half duplex/full duplex • 100Mbps, half duplex/full duplex • MDI/MDI-X, auto-sensing
Max transmission distance	100 m (328.1 ft)
Transmission medium	Category-5 (or above) twisted pair cable
Standards	IEEE 802.3u

1000Base-T Ethernet port

Table 10 1000Base-T Ethernet port specifications

Item	Specification
Connector type	RJ-45

Item	Specification
Interface attributes	1000Mbps, full duplex - MDI/MDI-X, auto-sensing
Max transmission distance	100 m (328.1 ft)
Transmission medium	Category-5 (or above) twisted pair cable
Standards	IEEE 802.3u

100Base-X SFP port

The A3600-24-SFP v2 EI Switch provides 24 100Base-X SFP ports, and you can install the 100 Mbps SFP transceiver modules in [Table 11](#) in the ports.

Table 11 100 Mbps SFP transceiver modules available for the A3600 v2 Switch Series

Product code	Module description	Central wavelength (in nm)	Fiber diameter (in μm)	Max transmission distance
JD102B	HP X110 100M SFP LC FX transceiver	1310	62.5/125	2 km (1.24 miles)
JD120B	HP X110 100M SFP LC LX transceiver	1310	9/125	15 km (9.32 miles)
JD090A	HP X110 100M SFP LC LH40 transceiver	1310	9/125	40 km (24.86 miles)
JD091A	HP X110 100M SFP LC LH80 transceiver	1550	9/125	80 km (49.71 miles)
JD100A	HP X115 100M SFP LC BX 10-U transceiver	TX: 1310 RX: 1550	9/125	15 km (9.32 miles)
JD101A	HP X115 100M SFP LC BX 10-D transceiver	TX: 1550 RX: 1310	9/125	15 km (9.32 miles)

IMPORTANT:

You must use the HP X115 100M SFP LC BX 10-U transceiver (JD100A) and the HP X115 100M SFP LC BX 10-D transceiver (JD101A) in pairs.

1000Base-X SFP port

Every A3600 v2 switch has four 1000Base-X SFP ports, including two combo ports paired with two 1000Base-T Ethernet ports, on the front panel. [Table 12](#) lists the 1000Base-X SFP transceiver modules available for the A3600 v2 Switch Series.

Table 12 1000Base-X SFP transceiver modules available for the A3600 v2 Switch Series

Product Code	Module description	Central wavelength (in nm)	Cable/fiber diameter (in μm)	Multimode fiber modal bandwidth (MHz $\times$ km)	Max transmission distance
JD118B	HP X120 1G SFP LC SX transceiver	850	50/125	500	550 m (1804.46 ft)
				400	500 m (1640.42 ft)
			62.5/125	200	275 m (902.23 ft)
				160	220 m (721.78 ft)
JD119B	HP X120 1G SFP LC LX transceiver	1310	9/125	N/A	10 km (6.21 miles)
JD061A	HP X125 1G SFP LC LH40 1310nm transceiver	1310	9/125	N/A	40 km (24.86 miles)
JD062A	HP X120 1G SFP LC LH40 1550nm transceiver	1550	9/125	N/A	40 km (24.86 miles)
JD063B	HP X125 1G SFP LC LH70 Transceiver	1550	9/125	N/A	70 km (43.50 miles)
JD098B	HP X120 1G SFP LC BX 10-U transceiver	TX: 1310 RX: 1490	9/125	N/A	10 km (6.21 miles)
JD099B	HP X120 1G SFP LC BX 10-D transceiver	TX: 1490 RX: 1310	9/125	N/A	10 km (6.21 miles)
JD324A	HP A3600 Switch SFP Stacking Kit	N/A	UTP/STP	N/A	1.5 m (4.92 ft.)
JD089B	HP X120 1G SFP RJ45 T Transceiver	N/A	Category-5 twisted pair	N/A	100 m (328.08 ft)

! IMPORTANT:

You must use the HP X120 1G SFP LC BX 10-U transceiver (JD098B) and the HP X120 1G SFP LC BX 10-D transceiver (JD099B) in pairs.

NOTE:


- To guarantee the functionality of the SFP ports, always use HP SFP transceiver modules on the HP A3600 v2 Switch Series.
- The SFP transceiver modules available for this switch series are subject to change over time. For the most up-to-date list of SFP transceiver modules, consult your HP sales representative or technical support engineer.
- For the SFP transceiver module specifications, see the *HP A-Series Switches Transceiver Modules User Guide*.
- For how to install or remove an SFP module, see the *SFP/SFP+/XFP Transceiver Modules Installation Guide*.

Combo interface

A combo interface has one fiber SFP port and one 1000Base-T copper Ethernet port. These two ports share one port number and cannot work simultaneously. When you activate one port, the other port automatically shuts down.

On the front panel of an A3600 v2 switch, the copper combo ports are marked in the *port number + T* format, and the fiber SFP combo ports are marked in the *port number + S* format. Figure 42 uses the A3600-48 v2 SI Switch front panel as an example.

Figure 42 Identify the combo ports on the A3600-48 v2 SI Switch front panel

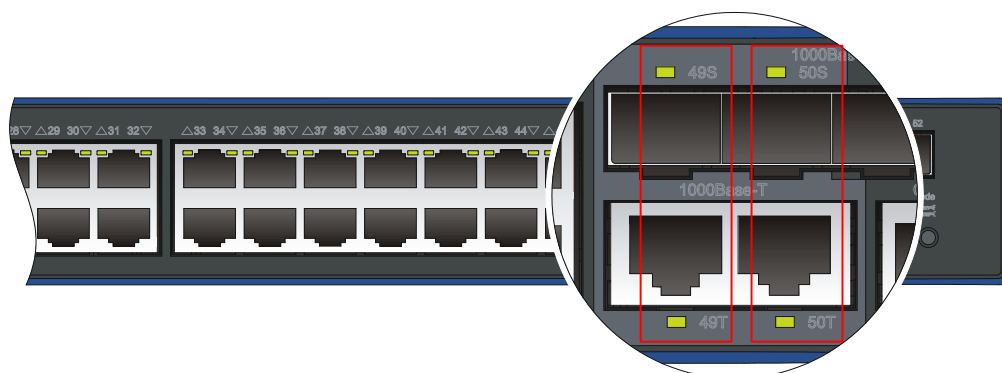

LEDs

Table 13 LEDs at a glance

LED	Availability
System status LED	Entire series
DC power LED	PoE-capable A3600 v2 SI switches (model suffix PWR-SI), A3600 v2 EI switches
Port mode LED	Entire series
Seven-segment LED	Entire series
10/100Base-TX Ethernet port LED	Entire series
1000Base-T Ethernet port LED	Entire series
100Base-X SFP port LED	A3600-24-SFP v2 EI Switch
1000Base-X SFP port LED	Entire series

System status LED

The system status LED shows the operating status of the switch.

Table 14 System status LED description

LED	Status	Description
PWR	Steady green	The switch is operating properly.
	Flashing green (1 Hz)	The switch is performing power-on self test (POST).
	Steady red	POST has failed.
	Flashing yellow (1 Hz)	Some ports have failed to pass POST.
	Off	The switch is powered off.

DC power LED

NOTE:

This LED is not available on the A3600-24 v2 SI Switch and A3600-48 v2 SI Switch switches.

The DC power LED shows the DC power and AC power supplying status.

Table 15 DC power LED description

LED	Status	Description
RPS	Steady green	Both DC power input and AC power input are normal.
	Steady yellow	DC power input is normal but AC power input is experiencing a problem or disconnected from the power source.
	Off	The DC input is not connected.

Port mode LED

The port mode LED indicates the type of information that the port LEDs are showing.

You can use the port LED mode switching button to change the type of displayed port information.



Table 16 Port mode LED description

LED	Status	Description
Mode	Steady green	The port LEDs are showing port rates.
	Flashing green (1 Hz) (available only for PoE switches)	The port LEDs are showing the status of PoE power supply on the ports.
	Steady yellow	The port LEDs are showing duplex modes.

Seven-segment LED

The seven-segment LED, together with the system status LED, shows detailed system operating information (see [Table 17](#)).

Table 17 Seven-segment LED description (I)

LED	Status		Description
	System status LED (SYS)	Seven-segment (Unit) LED	
Unit	Flashing green	The LED displays numbers one by one. 	POST is running, and the LED displays the ongoing test item ID.
	Flashing red	The LED displays flashing numbers. 	POST has failed, and the LED flashes the ID of the failed test item.
	Flashing green	A bar rotates clockwise around the LED. 	Software is loading.
	Steady red	The LED displays a flashing F character. 	The switch is experiencing a fan failure.
	Steady red	The LED displays a flashing t character. 	The switch is in an over-temperature condition.
		The LED displays a capital C character. 	The switch is the command switch in a cluster.
	Steady green	The LED displays an S character. 	The switch is a member switch in a cluster.
		The LED displays a lowercase c character. 	The switch is a candidate switch for a cluster.
		The LED displays a number. 	The member ID of the switch.

On the A3600-24-PoE+ v2 EI Switch, A3600-48-PoE+ v2 EI Switch, A3600-24-PoE+ v2 SI Switch or A3600-48-PoE+ v2 SI Switch, the seven-segment LED can also show the total PoE output power as a percentage of the maximum PoE output power that the switch can supply (see [Table 18](#)).

Table 18 Seven-segment LED description (II)

LED	Status			Description
	Port mode LED	System status LED	Seven-segment (Unit) LED	
Unit	Flashing green (1 Hz) (PoE mode)	Steady green	The LED displays different signs. 	For example, the  sign indicates that the switch is outputting 0 to 20% of the maximum PoE output power.

10/100Base-TX Ethernet port LED

Each 10/100Base-TX auto-sensing Ethernet port has a status LED to show port operating status and activities. The port mode LED shows the type of port status information (for example, port rate or duplex mode) that the port status LEDs are showing. You can use the port status LED mode switching button to change the type of displayed port information.

Table 19 10/100Base-TX auto-sensing Ethernet port LED description

Status		Description
Port mode LED	Port status LED	
Steady green (rate mode)	Steady green	The port is operating at 100 Mbps. The port status LED fast flashes when the port is sending or receiving data.
	Steady yellow	The port is operating at 10 Mbps. The port status LED fast flashes when the port is sending or receiving data.
	Flashing yellow (3 Hz)	POST has failed on the port.
	Off	No link is present on the port.
Flashing green (1 Hz) (PoE mode, available only for PoE switches)	Steady green	PoE power supply is normal.
	Flashing green (1 Hz)	The device attached to the port requires power higher than the maximum or currently available PoE output power on the port.
	Steady yellow	The port is not outputting power because it is connected to a non-PD device. The port is experiencing a PoE failure.
	Flashing yellow (3 Hz)	POST has failed on the port.
	Off	The port is not supplying PoE power.
Steady yellow (duplex mode)	Steady green	The port is operating in full duplex mode. The port status LED fast flashes when the port is sending or receiving data.
	Steady yellow	The port is operating in half duplex mode. The port status LED fast flashes when the port is sending or receiving data.
	Flashing yellow (3 Hz)	POST has failed on the port.
	Off	No link is present on the port.

1000Base-T Ethernet port LED

The 1000Base-T Ethernet ports are PoE incapable and work only at 1000 Mbps in full duplex mode. Their port LEDs are irrelevant to the port mode LED.

Table 20 1000Base-T Ethernet port LED description

Port status LED	Description
Steady green	The port is operating at 1000 Mbps in full duplex mode. The port LED fast flashes when the port is sending or receiving data.
Flashing yellow (3 Hz)	POST has failed on the port.
Off	No link is present on the port.

100Base-X SFP port LED

Each 100Base-X SFP port has a status LED to show port operating status and activities. The port mode LED shows the type of port status information (for example, port rate or duplex mode) that the port status LEDs are showing. You can use the port status LED mode switching button to change the type of displayed port information.

Table 21 100Base-X SFP port LED description

Status		Description
Port mode LED	Port status LED	
Steady green (rate mode)	Steady green	The port is operating at 100 Mbps. The port status LED fast flashes when the port is sending or receiving data.
	Flashing yellow (3 Hz)	POST has failed on the port.
	Off	No link is present on the port.
Steady yellow (duplex mode)	Steady green	The port is operating in full duplex mode. The port status LED fast flashes when the port is sending or receiving data.
	Flashing yellow (3 Hz)	POST has failed on the port.
	Off	No link is present on the port.

1000Base-X SFP port LED

Each 1000Base-X SFP port has a status LED to show port operating status and activities. The port mode LED shows the type of port status information (for example, port rate or duplex mode) that the port status LEDs are showing. You can use the port status LED mode switching button to change the type of displayed port information.

Table 22 1000Base-X SFP port LED description

Status		Description
Port mode LED	Port status LED	
Steady green (rate mode)	Steady green	The port is operating at 1000 Mbps. The port status LED fast flashes when the port is sending or receiving data.
	Flashing yellow (3 Hz)	POST has failed on the port.
	Off	No link is present on the port.
Steady yellow (duplex mode)	Steady green	The port is operating in full duplex mode. The port status LED fast flashes when the port is sending or receiving data.
	Flashing yellow (3 Hz)	POST has failed on the port.
	Off	No link is present on the port.

Index

[A](#) [C](#) [E](#) [F](#) [G](#) [I](#) [L](#) [M](#) [P](#) [S](#) [V](#)

A

- A3600-24 v2 EI Switch panel views, [1](#)
- A3600-24 v2 SI Switch panel views, [2](#)
- A3600-24-PoE+ v2 EI Switch/A3600-24-PoE+ v2 SI Switch panel views, [5](#)
- A3600-24-SFP v2 EI Switch panel views, [7](#)
- A3600-48 v2 EI Switch panel views, [3](#)
- A3600-48 v2 SI Switch panel views, [4](#)
- A3600-48-PoE+ v2 EI Switch/A3600-48-PoE+ v2 SI Switch panel views, [6](#)
- Accessing the IRF fabric to verify the configuration, [36](#)

C

- Configuration terminal problems, [40](#)
- Configuring basic IRF settings, [35](#)
- Connecting the console cable, [21](#)
- Connecting the physical IRF ports, [35](#)
- Connecting the power cord, [18](#)

E

- Environmental specifications, [43](#)
- Examining the installation site, [8](#)

F

- Fan failure, [40](#)

G

- Grounding the switch, [14](#)

I

- Installation tools, [10](#)
- Installing the switch in a 19-inch rack, [11](#)
- IRF fabric setup flowchart, [30](#)

L

- LEDs, [49](#)

M

- Mounting the switch on a workbench, [13](#)

P

- Password loss, [38](#)
- Physical specifications, [42](#)
- Planning IRF fabric setup, [31](#)
- Ports, [46](#)
- Power specifications, [43](#)
- Power system failure, [38](#)
- Powering on the switch, [25](#)

S

- Safety recommendations, [8](#)
- Setting terminal parameters, [22](#)
- Setting up the configuration environment, [21](#)

V

- Verifying the installation, [20](#)